



Count on it.

Form No. 3366-332 Rev A

Parts Catalog

9 hp Log Splitter

Model No. 22606—Serial No. 310000001 and Up

Model No. 22606THD—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Reservoir Assembly 4

Engine Assembly 5

Splitter Frame Assembly 6

Wedge Assembly 7


Tongue Assembly 8

Jack Assembly No. 120-1421 9

Frame Assembly 10


Lighting Assembly 11

Decal Assembly 12

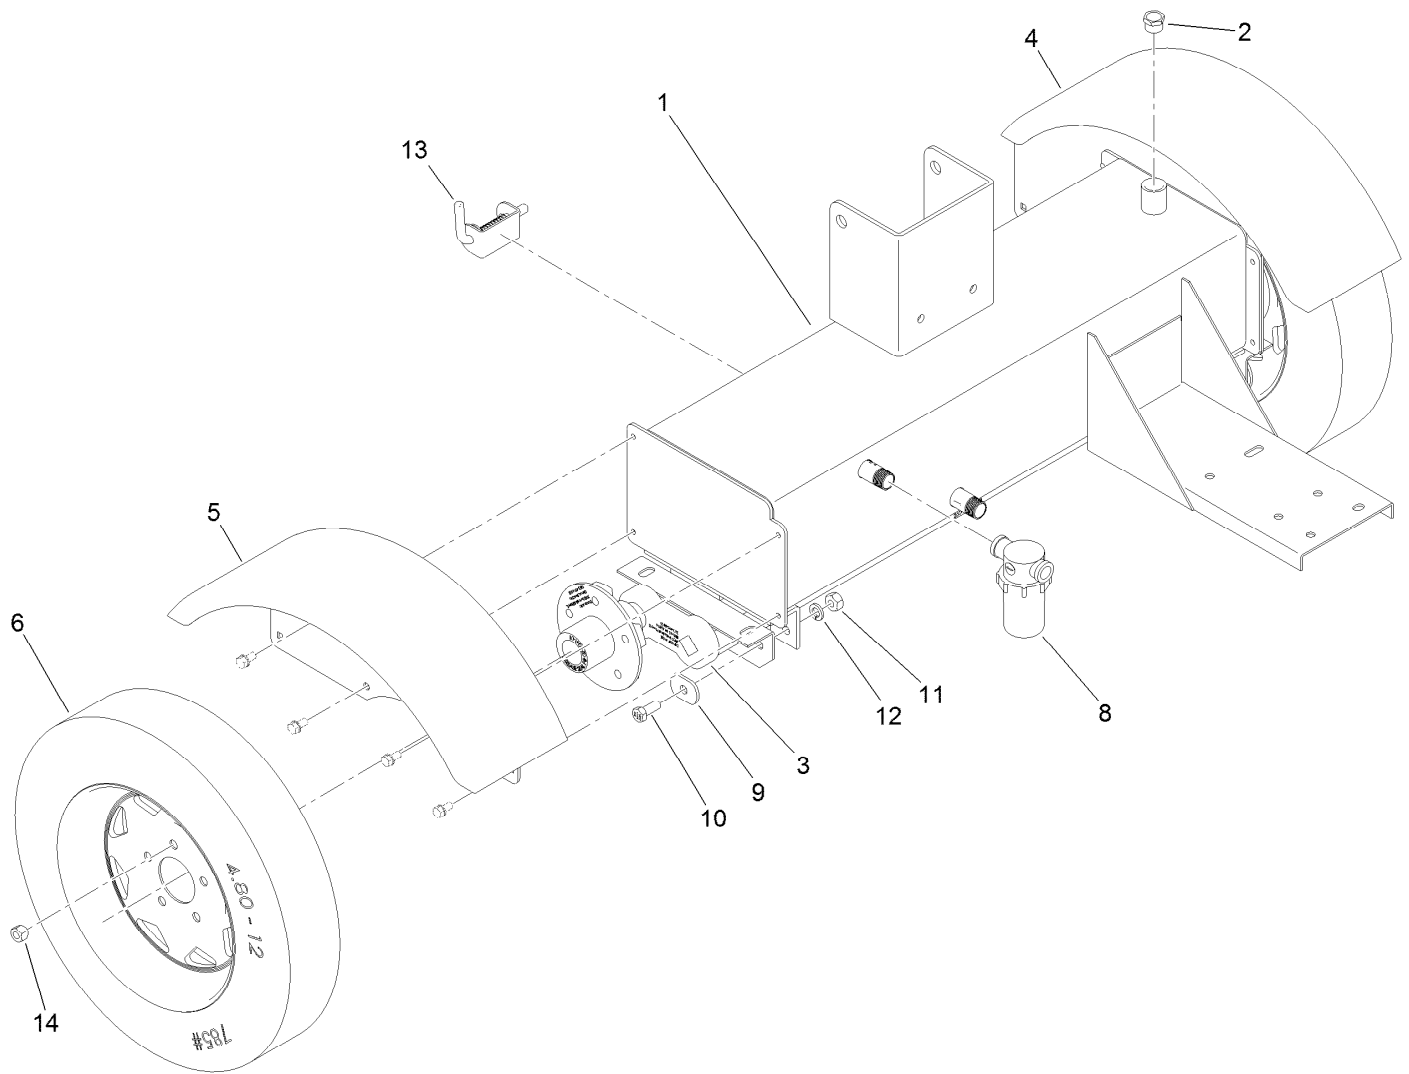


Reservoir Assembly

Ref.	Part Number	Qty.	Description
1	W000034	1	Reservoir ASM
2	120-1412	1	Cap-Breather
3	PP000043	1	Axle-Torflex
4	120-1844	1	Fender-LH
5	120-1845	1	Fender-RH
6	PP000080	2	Tire
8	120-1414	1	Filter-HYD
9	107-7543	4	Washer-Hardened
10	3235-19	4	Capscrew
11	108-3745	4	Nut-HF, Whiz
12	3253-7	4	Washer-Lock
13	120-1427	1	Pin-Latching
14	242-50	10	Nut-Lug

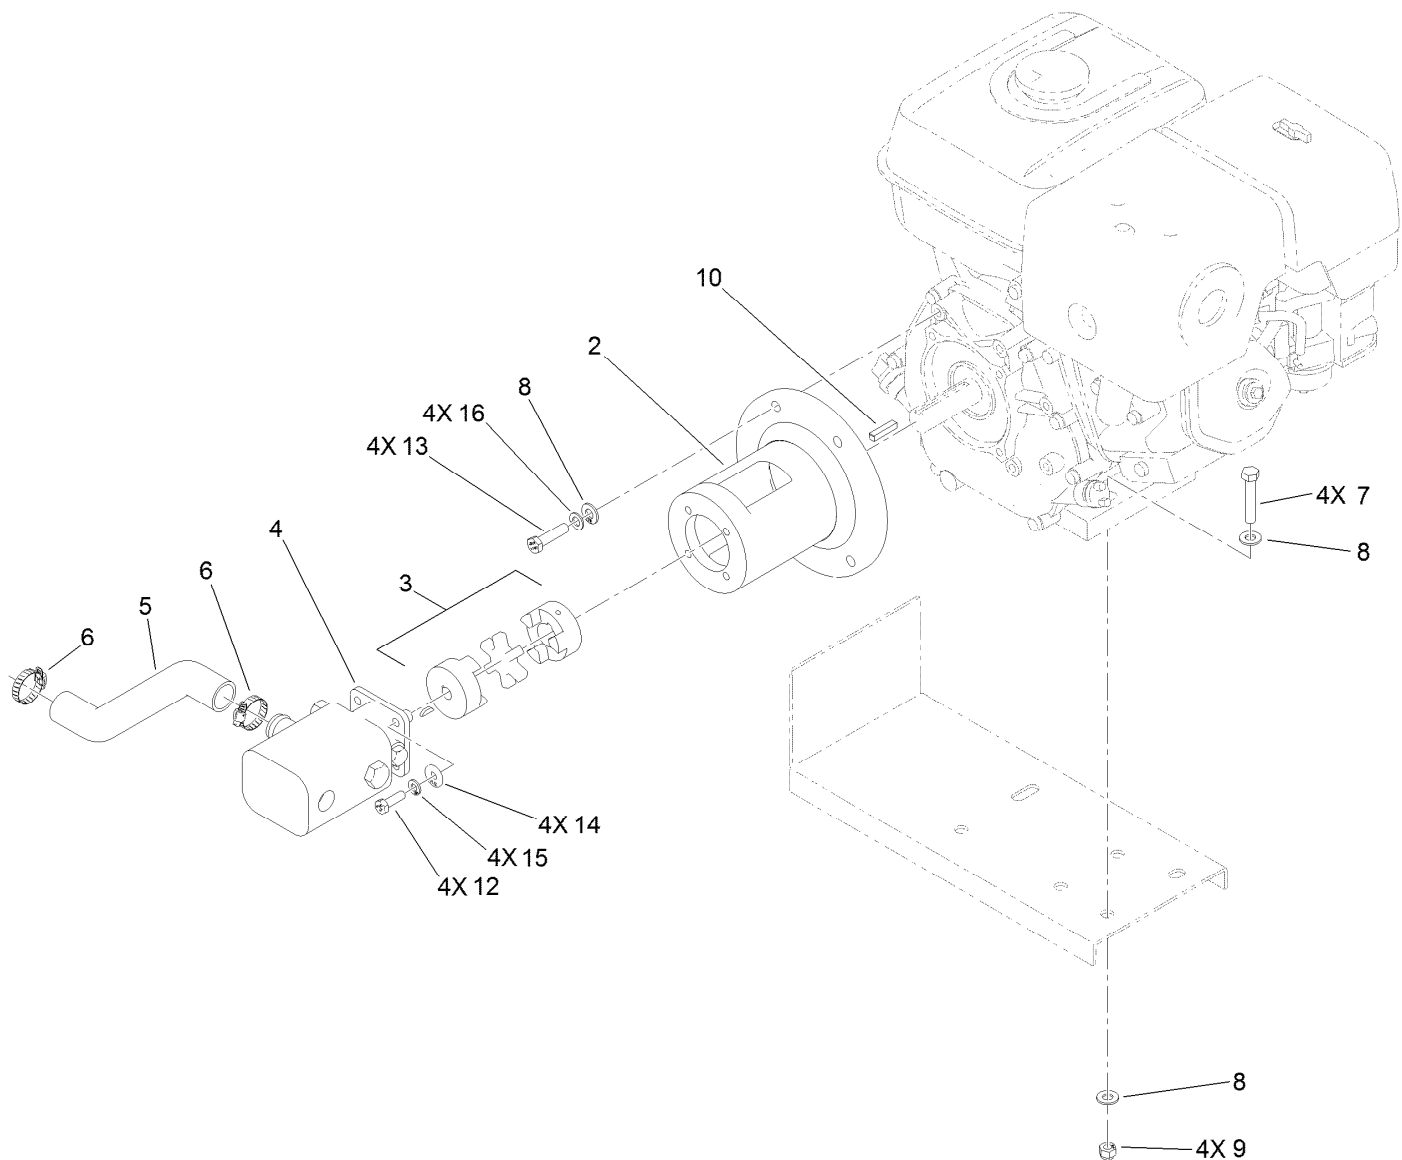


Engine Assembly

Ref.	Part Number	Qty.	Description
2	PP000014	1	Housing-Mount, Pump
3	120-1413	1	Flex Coupler ASM
4	120-1205	1	Pump-HYD
5	120-1417	1	Hose-Suction
6	2412-111	2	Clamp
7	323-10	4	Screw-HH
8	3256-24	12	Washer-Flat
9	3296-39	4	Nut-Lock, NI
10	13-2840	1	Key-Square
12	322-5	4	Screw-HH
13	3211-41	4	Screw-HH
14	3256-3	4	Washer-Flat
15	1-805005	4	Washer-Lock
16	3253-21	4	Washer-Lock

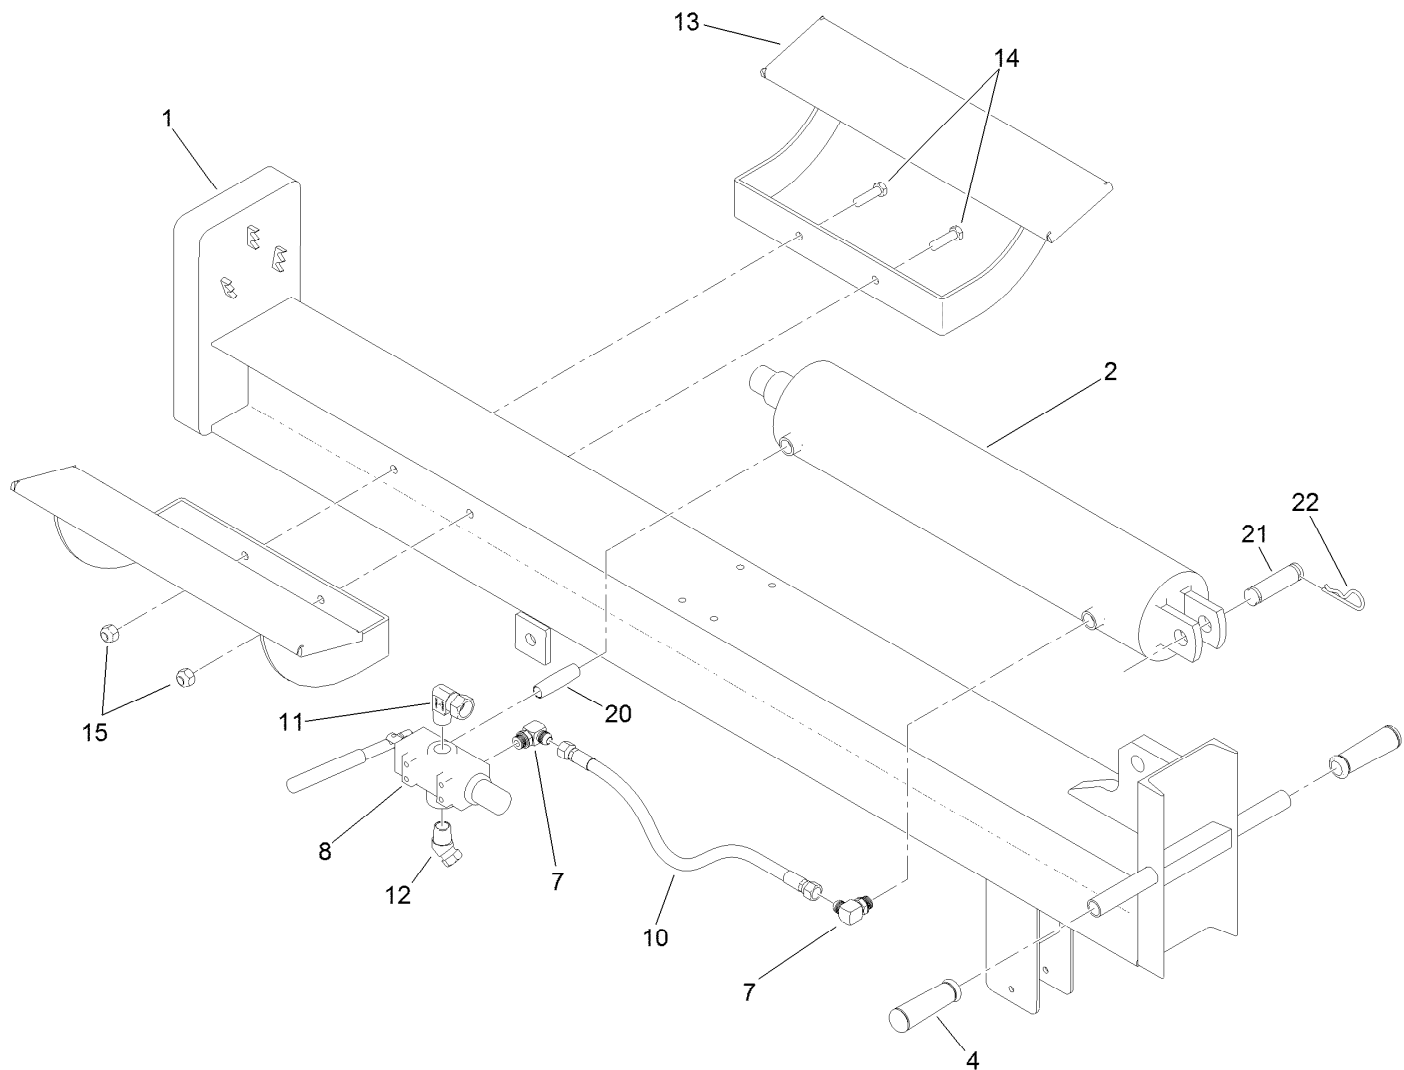


Splitter Frame Assembly

Ref.	Part Number	Qty.	Description
1	W000002	1	Splitter Beam ASM
2	120-1200	1	HYD Cylinder ASM
4	40001600055	2	Grip-Handle
7	120-1419	2	Fitting-HYD
8	PP000025	1	HYD Valve ASM
10	120-1424	1	HYD Tube ASM
11	120-1426	1	Fitting-HYD, 90DEG
12	120-1763	1	Fitting-HYD, 45DEG
13	W000005	2	Plate-Catch
14	325-5	2	Screw-HH
15	99-5107	2	Nut-Lock
20	PRX-66434	1	Fitting-HYD
21	PP000030	1	Pin-Pivot
22	3290-256	2	Pin-Hair

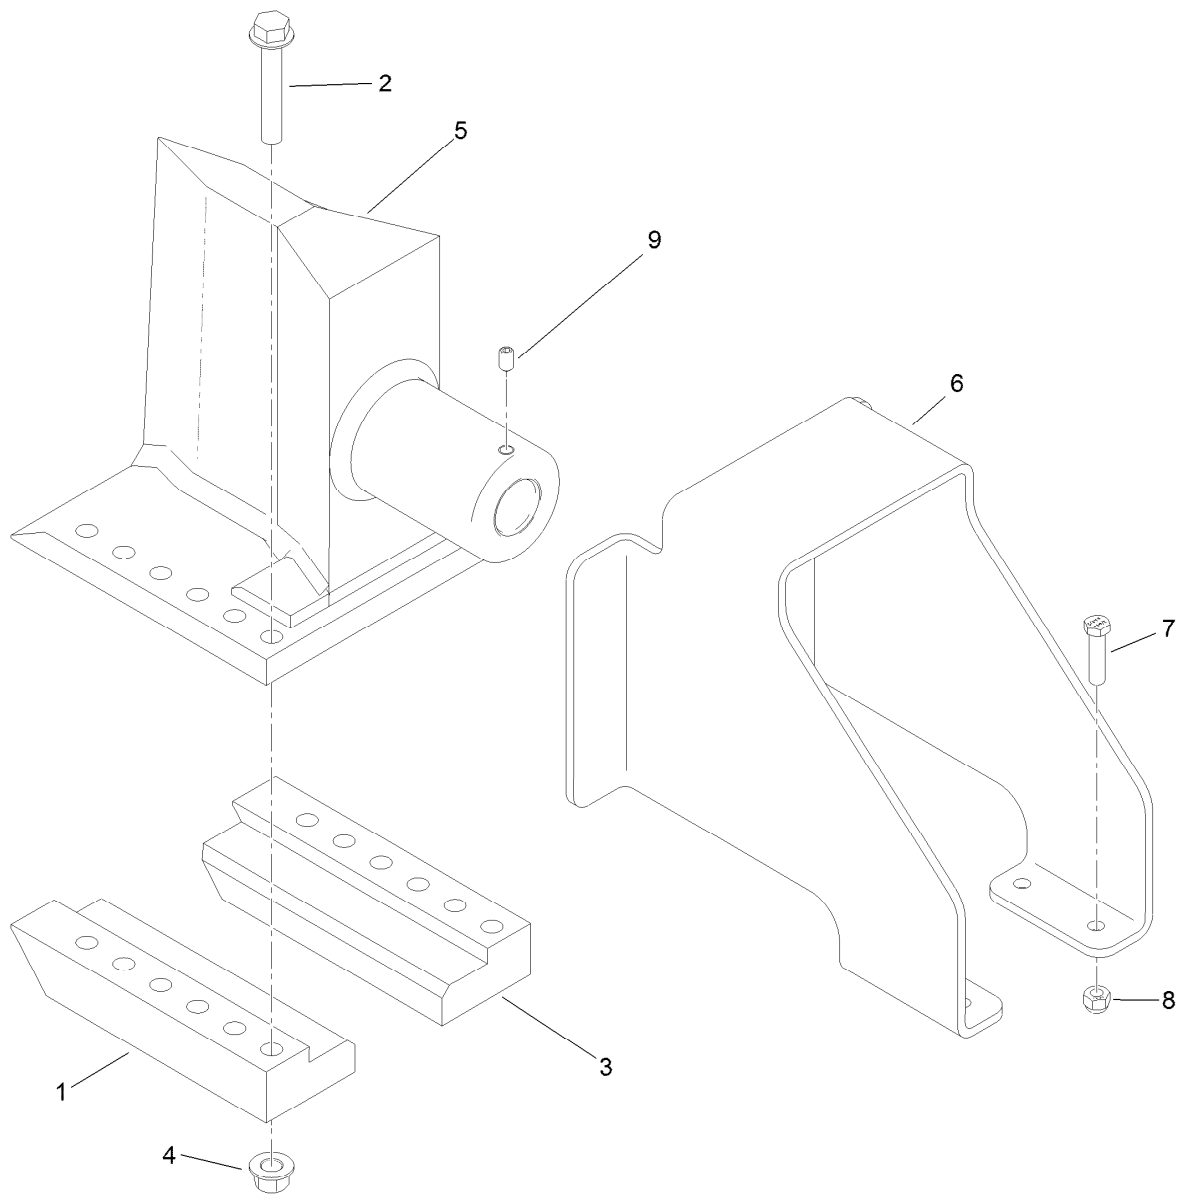


Wedge Assembly

Ref.	Part Number	Qty.	Description
1	120-1804-03	1	Bar-Slide, LH
2	3234-40	12	Screw-HF
3	120-1809-03	1	Bar-Slide, RH
4	99-5107	12	Nut-Lock
5	120-1441-03	1	Splitter Wedge ASM
6	119-5121-03	1	Plate-Dislodger
7	323-8	4	Screw-HH
8	3296-39	4	Nut-Lock, NI
9	3247-4	1	Screw-Set

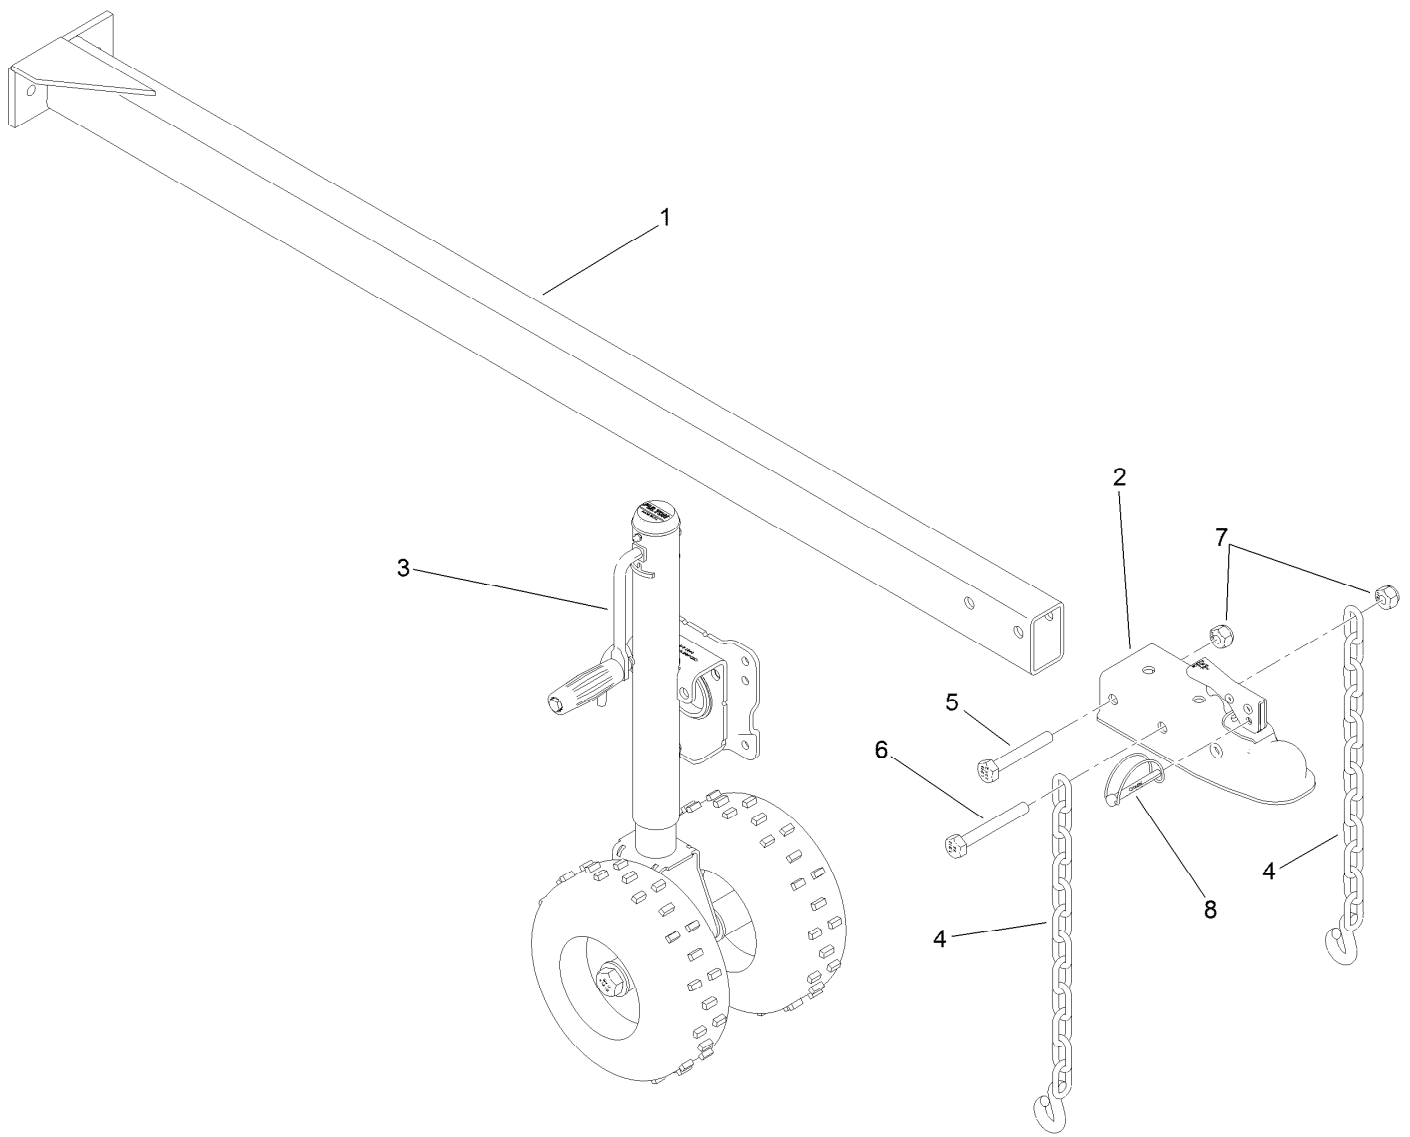


Tongue Assembly

Ref.	Part Number	Qty.	Description
1	W000004	1	Tongue ASM
2	117-8371	1	Receiver-Hitch, Ball
3	120-1421	1	Jack ASM
4	PP000035	2	Chain-Safety
5	325-14	1	Screw-HH
6	325-17	1	Screw-HH
7	99-5107	2	Nut-Lock
8	PP000198	1	Pin-Locking

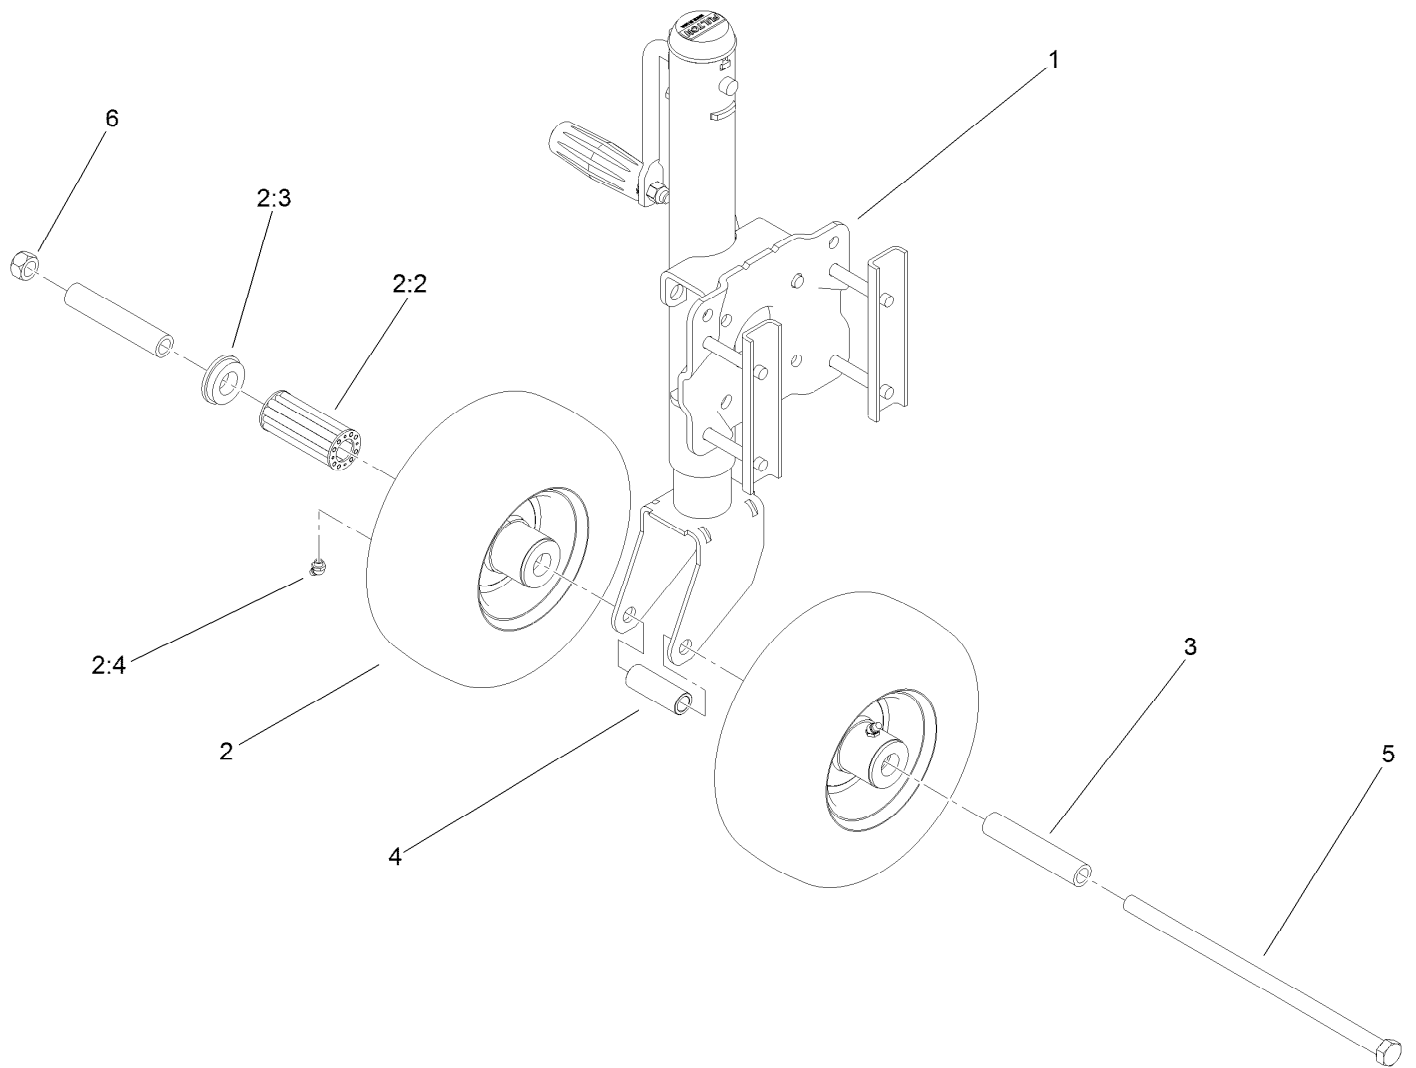


Jack Assembly No. 120-1421

Ref.	Part Number	Qty.	Description
1	120-1208	1	Jack-Trailer
2	110-5024	2	Wheel And Tire ASM
2:2	112-7066	1	Bearing-Roller
2:3	1-513810	2	Bushing
2:4	302-61	1	Fitting-Grease
3	100-6453	2	Bushing-Spanner
4	109-6653	1	Spacer
5	120-1827	1	Screw-HH
6	32153-5	1	Nut-Hex

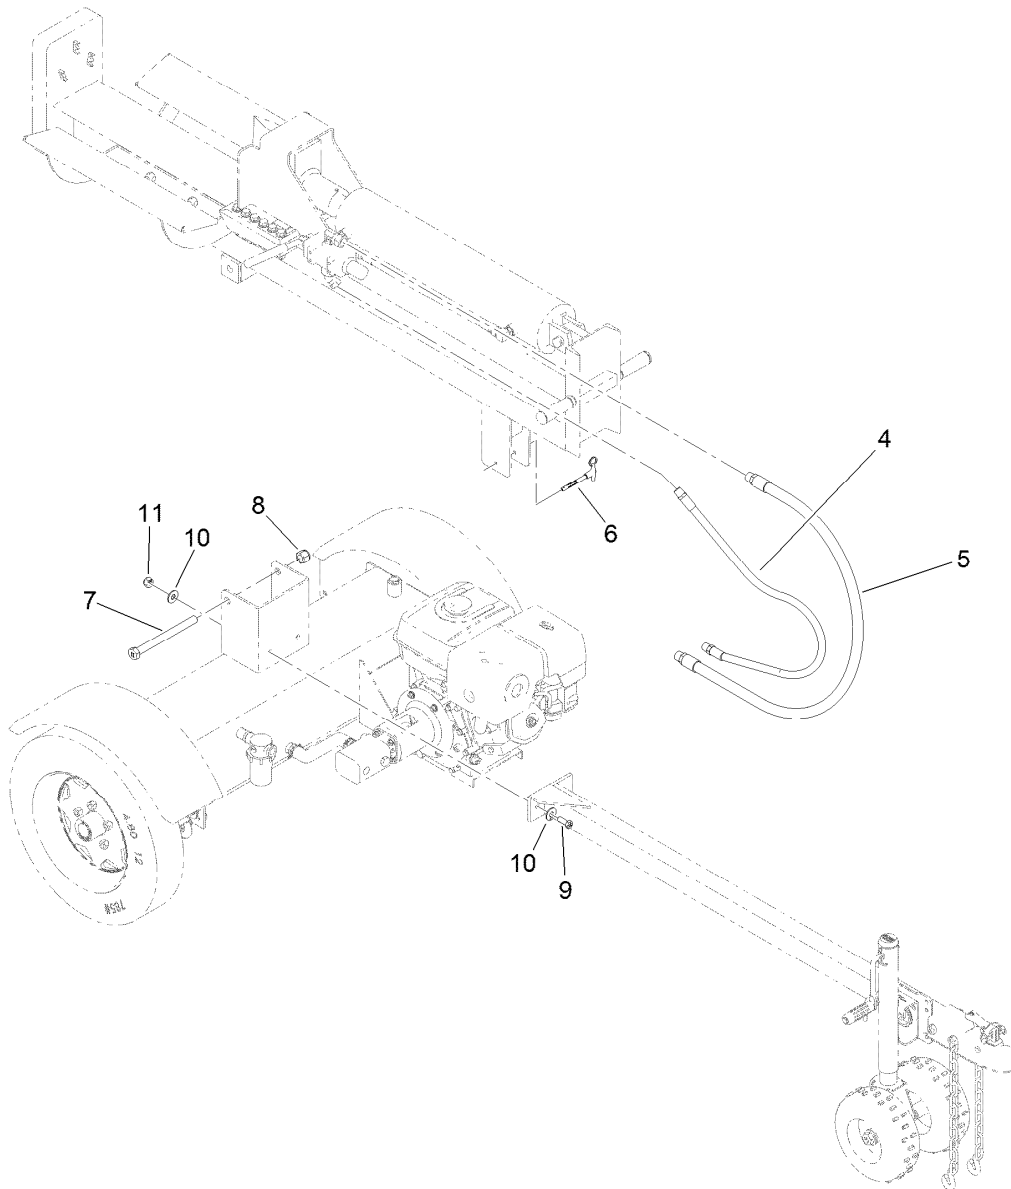


Frame Assembly

Ref.	Part Number	Qty.	Description
4	120-1416	1	HYD Hose ASM
5	120-1220	1	HYD Hose ASM
6	PP000033	1	Pin
7	120-1796	1	Bolt-HH
8	3296-51	1	Nut-Lock, NI
9	325-5	2	Screw-HH
10	3256-26	4	Washer-Flat
11	99-5107	2	Nut-Lock

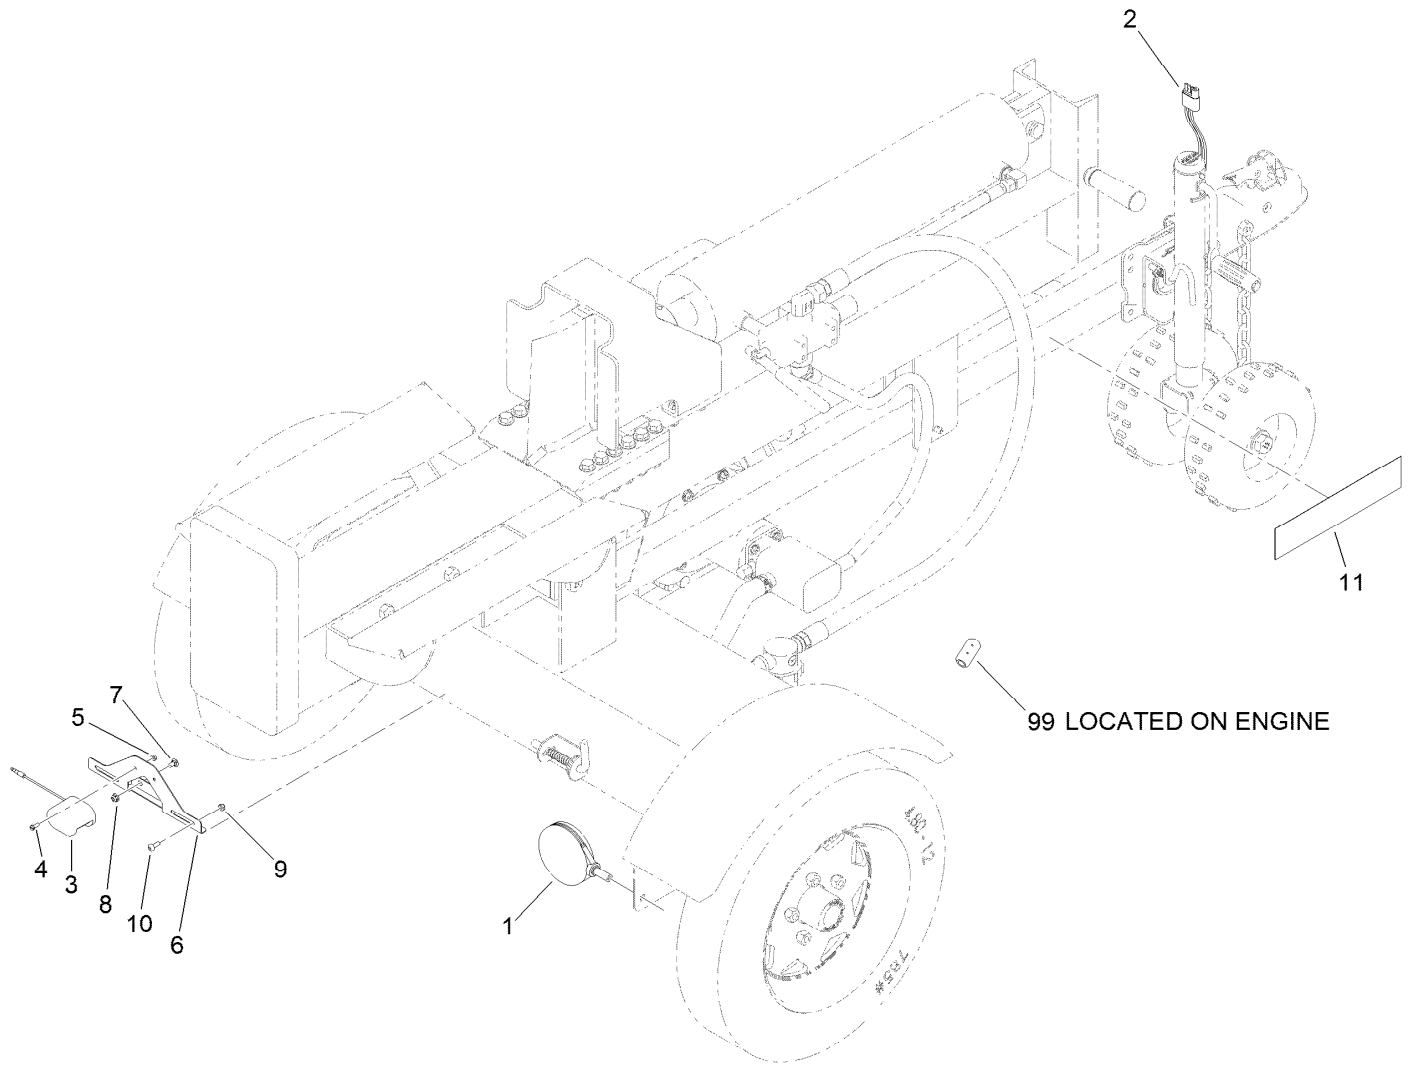

Lighting Assembly

Ref.	Part Number	Qty.	Description
1	M313-2	2	Light-Tail
2	B5425Y	1	Harness-Trailer
3	119-3041	1	Lamp-License
4	32105-8	2	Screw-SHH
5	3296-12	2	Nut-Lock, NI
6	119-6072-03	1	Bracket-Plate, License
7	3229-10	2	Screw-CARR
8	104-7201	2	Nut-HF
9	33023-00	2	Nut-Lock
10	60-3260	2	Screw-PPH
11	120-1828	1	Decal-Vin/Tire
99	112-1540	1	Ferrite-Snap On

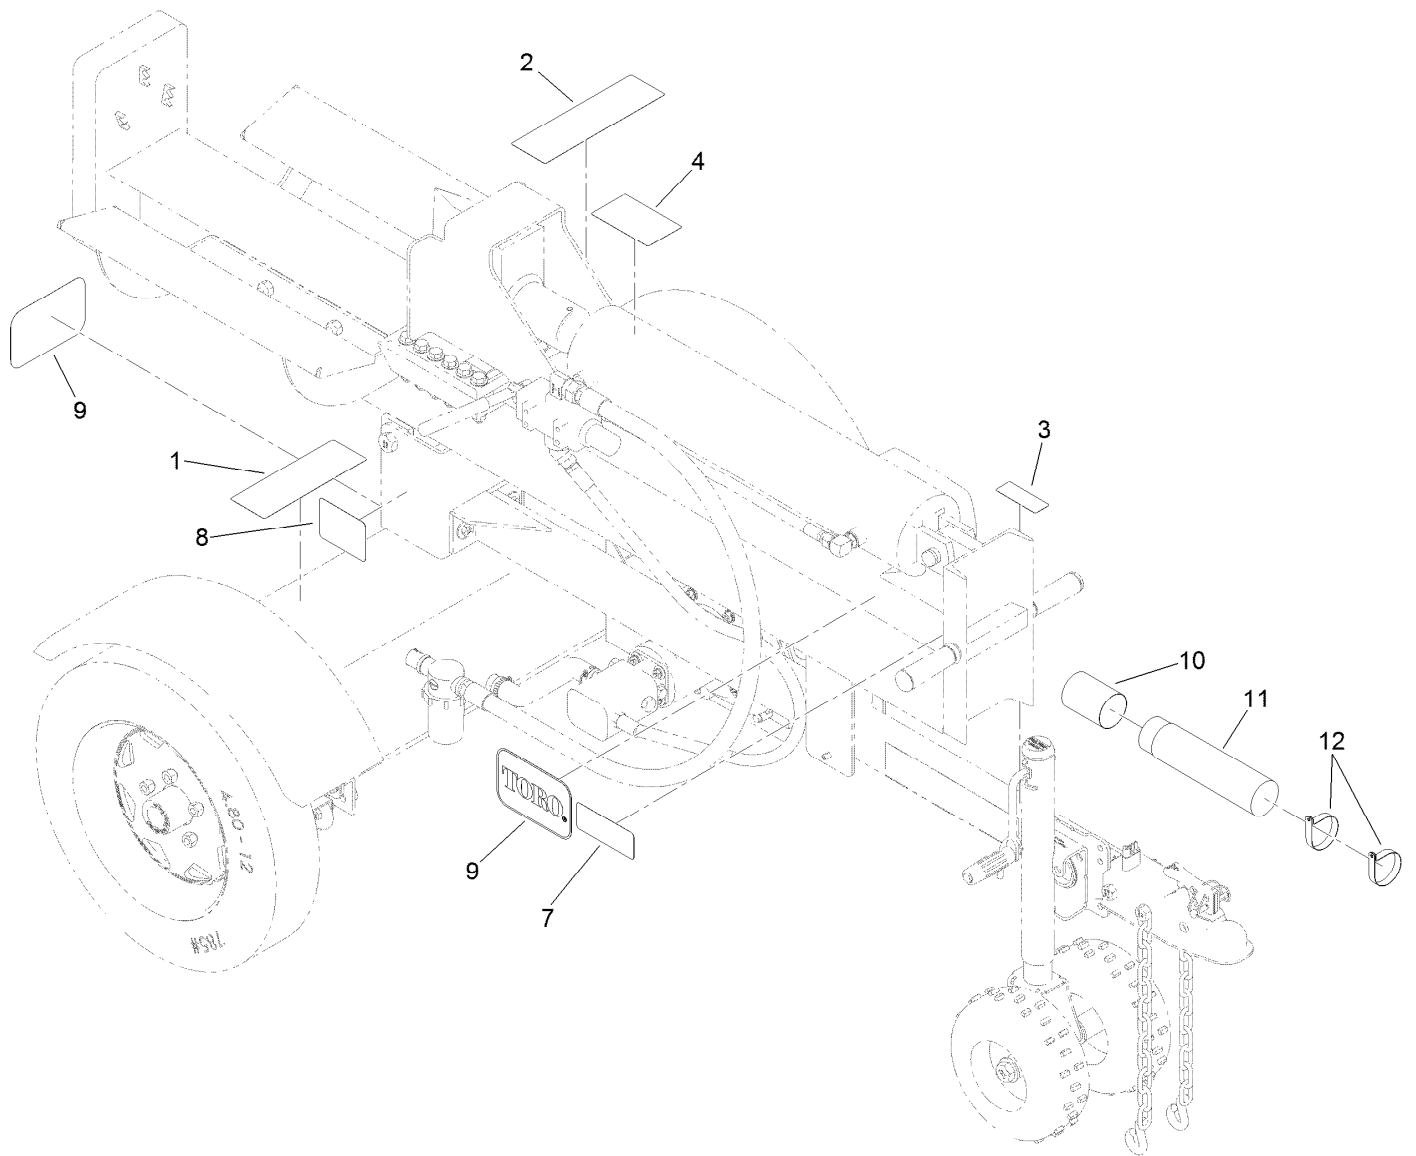

Decal Assembly

Ref.	Part Number	Qty.	Description
1	119-4694	1	Decal-Caution
2	119-4695	1	Decal-Warning
3	119-4696	1	Decal-Caution
4	119-4697	1	Decal-Caution
7	120-1818	2	Decal
8	119-4728	2	Decal-Ton
9	62-5550	3	Decal
10	104-7048	1	Cap-Housing
11	104-7050	1	Tube-Manual
12	2412-120	2	R-Clamp

Notes:

Notes:

Notes:



Count on it.