

Count on it.

Parts Catalog

Foam Marker Kit

Multi-Pro® 1200, 1250 and 5000 Series Turf Sprayers and Workman® 200 Spray Systems Model No. 41236—Serial No. 311000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required **ASM:** assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise
DEG: degrees

DPA: Dual Point Adjustment **ECM:** electronic control module

EXT: external
FH: flat head
GA: gauge
HD: heavy-duty
HF: hex flange
HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread

forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head HSFH: hex socket flat head HSH: hex socket head HWH: hex washer head

HWHTF: hex washer head thread

forming

HYD: hydraulic
LH: left hand
LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head **PPH:** phillips pan head

PPHTF: phillips pan head thread

forming

PRH: phillips round head PTH: phillips truss head PTO: power-take-off RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush
SFH: slotted fillister head
SHH: slotted hex head

SHWH: slotted hex washer head


SPH: slotted pan head **SQH**: square head

SRH: slotted round head

STD: standard
TAP: self tapping
TTH: torx truss head


Contents

Compressor Assembly				 	 4								
Tank Components and	Mountir	na Hardy	are										- 1

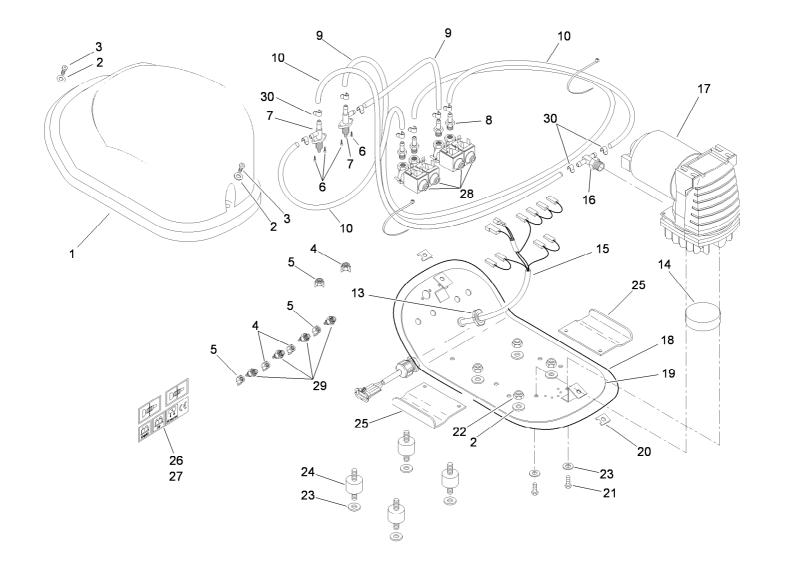


Compressor Assembly

Ref.	Part Number	Qty.	Description	Re	f.	Part Number	Qty.	Description
1	114-9500	1	Cover-Compressor	17	7	114-9520	1	Compressor
2	114-9501	10	Washer	18	3	114-9521	1	Sealer
3	114-9502	2	Screw	19)	114-9522	1	Plate-Compressor Mount
4	114-9503	3	Nut-Wing, Plastic	20)	114-9523	2	Clip
5	114-9504	3	Nut-Wing	21		114-9524	4	Screw
6	114-9505	4	Screw-Machine	22	2	114-9525	4	Nut-Lock
7	119-9423	2	Manifold-3 Way	23	3	114-9526	4	Washer
8	119-9428	4	Connector-Tubing	24	Ļ	114-9527	4	Shock Absorber
9	119-9426	2	Tube-Blue	25	5	114-9528	2	Hook-Compressor Cover
10	119-9425	3	Tube-White	26	3	114-9529	1	Decal-Air/Liquid Color Code
13	114-9516	1	Nut-Harness Holder	27	7	114-9530	1	Decal-Ce
14	114-9517	1	Filter-Sponge	28	3	114-9531	4	Valve-Solenoid
15	114-9518	1	Harness-Wire	29)	119-9424	4	Connector-Tubing
16	119-9422	1	Connector-T	30)	119-9427	10	Clamp-Tube

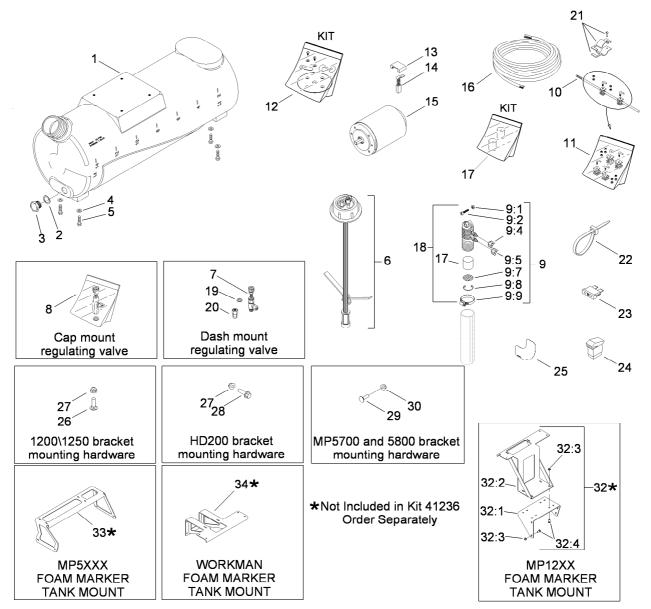

Tank Components and Mounting Hardware

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	114-9535	1	Tank	15	114-9552	1	Motor-Compressor
2	114-9538	1	Seal	16	114-9553	1	Tube ASM
3	114-9539	1	Plug-Drain	17	114-9554	1	Mixer Sponge Kit
4	114-9532	4	Washer	18	114-9570	1	Mixer-Foam ASM
5	114-9533	4	Screw	19	114-9572	1	Washer-Plastic
6	114-9537	1	Cap ASM	20	114-9571	1	Nut-Valve
7	114-9536	1	Regulator-Flow	21	40999	4	Clamp Assy
8	114-9568	1	Regulator-Flow, Cap Mount	22	3290-378	12	Tie-Cable
9	114-9541	1	Nozzle-Foam ASM	23	109355	1	Fuse-Blade, 15 Amp
9:1	114-9542	1	Nut	24	95-8999	2	Switch
9:2	114-9543	1	Screw	25	112-7890	1	Decal-Foam Control
9:4	114-9503	1	Nut-Wing, Plastic	26	3231-25	4	Screw-CARR
9:5	114-9504	1	Nut-Wing	27	104-8301	4	Nut-Flange, NI
9:7	114-9546	1	Screen-Stainless Steel	28	3234-24	4	Screw-HHF
9:8	114-9547	1	Ring-Snap, Stainless Steel	29	3230-3	4	Screw-CARR
9:9	114-9548	1	Clamp-Hose	30	104-8300	4	Nut-Flange, NI
10	114-9556	2	Rod	32	119-9366	1	Foam Marker Bracket ASM
11	114-9555	1	Rod Mount Kit	32:1	119-9362	1	Bracket-Foam Marker
12	114-9549	1	Diaphragm Kit	32:2	112-7816	1	Foam Mixer Bracket ASM
13	114-9550	1	Cover-Motor Brush	32:3	104-8301	9	Nut-Flange, NI
14	114-9551	1	Brush-Motor	32:4	3231-22	9	Screw-CARR

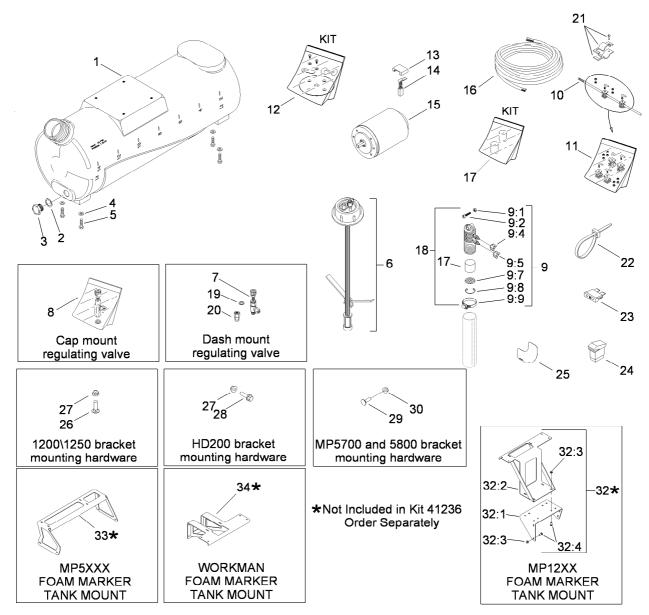

Tank Components and Mounting Hardware (continued)

Ref.	Part Number	Qty.	Description
33	112-7812	1	Mount-Foam Marker Tank
34	112-7866	1	Foam Marker Bracket ASM



