



Count on it.

Parts Catalog

Road Certification and Light Kit

EU - No Cab

Model No. 30512

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Headlight Mount Assembly 4

Steering Column Cover and Switch Assembly..... 5

Horn Assembly 6

Rear Tail Light Assembly..... 7


Worklight Assembly 8

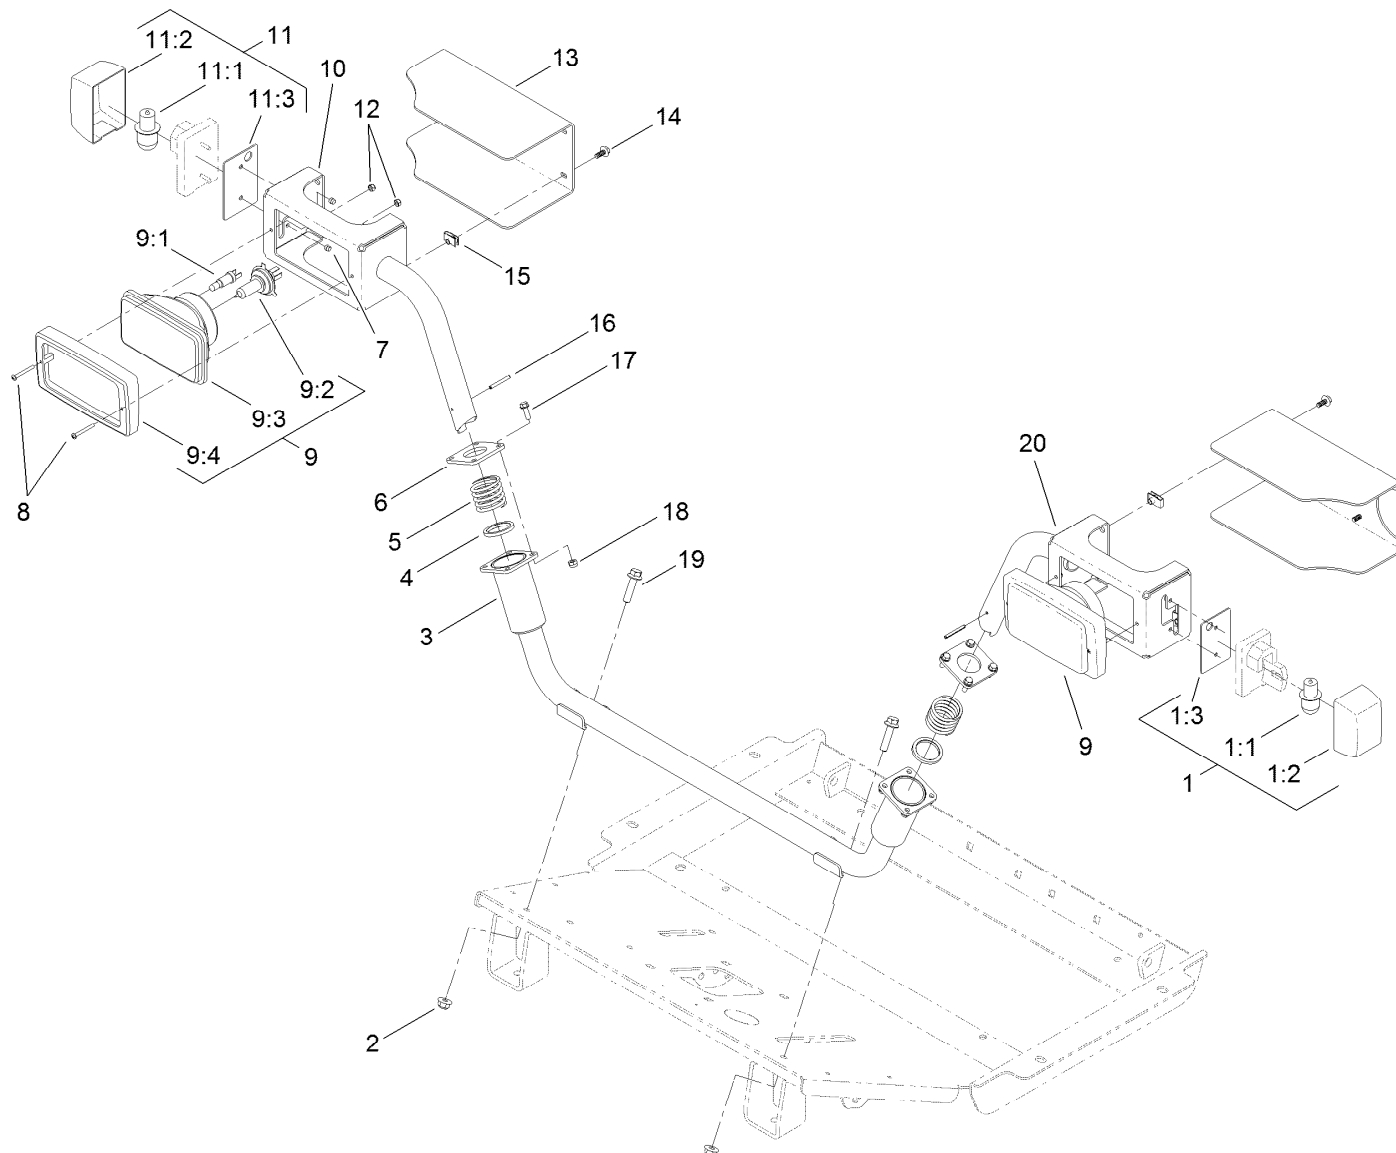

Headlight Mount Assembly

Ref.	Part Number	Qty.	Description
1	119-8094	1	Signal-Turn, LH
1:1	120-7552	1	Bulb-P21W 12V
1:2	120-7559	1	Lens-Transparent
1:3	120-7551	1	Gasket-Light
2	104-8301	2	Nut-Flange, NI
3	119-9863-03	1	Headlight Mount ASM
4	119-9866	2	Washer-Stop
5	92-9726	2	Spring-Compression
6	119-9873-03	2	Flange-Retainer
7	46-0430	4	Nut-Lock
8	363-3205	4	Screw-Phph
9	119-8092	2	Headlight
9:1	120-7562	1	Bulb-T8/4 12V
9:2	120-7563	1	Bulb-H4 12V 60/55W
9:3	120-7560	1	Optical Group ASM


Ref.	Part Number	Qty.	Description
9:4	120-7561	1	Frame
10	119-9868-03	1	RH Headlight Mount ASM
11	119-8099	1	Signal-Turn, RH
11:1	120-7552	1	Bulb-P21W 12V
11:2	120-7550	1	Lens-Transparent
11:3	120-7551	1	Gasket-Light
12	3296-1	4	Nut-Lock
13	119-9874-03	2	Shield-Headlight
14	99-6810	8	Screw-HH
15	107069	8	Clip
16	32121-35	2	Pin-Roll
17	32105-15	8	Screw
18	3296-73	8	Nut-Lock, NI
19	114-4681	2	Screw-HHF
20	119-9867-03	1	LH Headlight Mount ASM

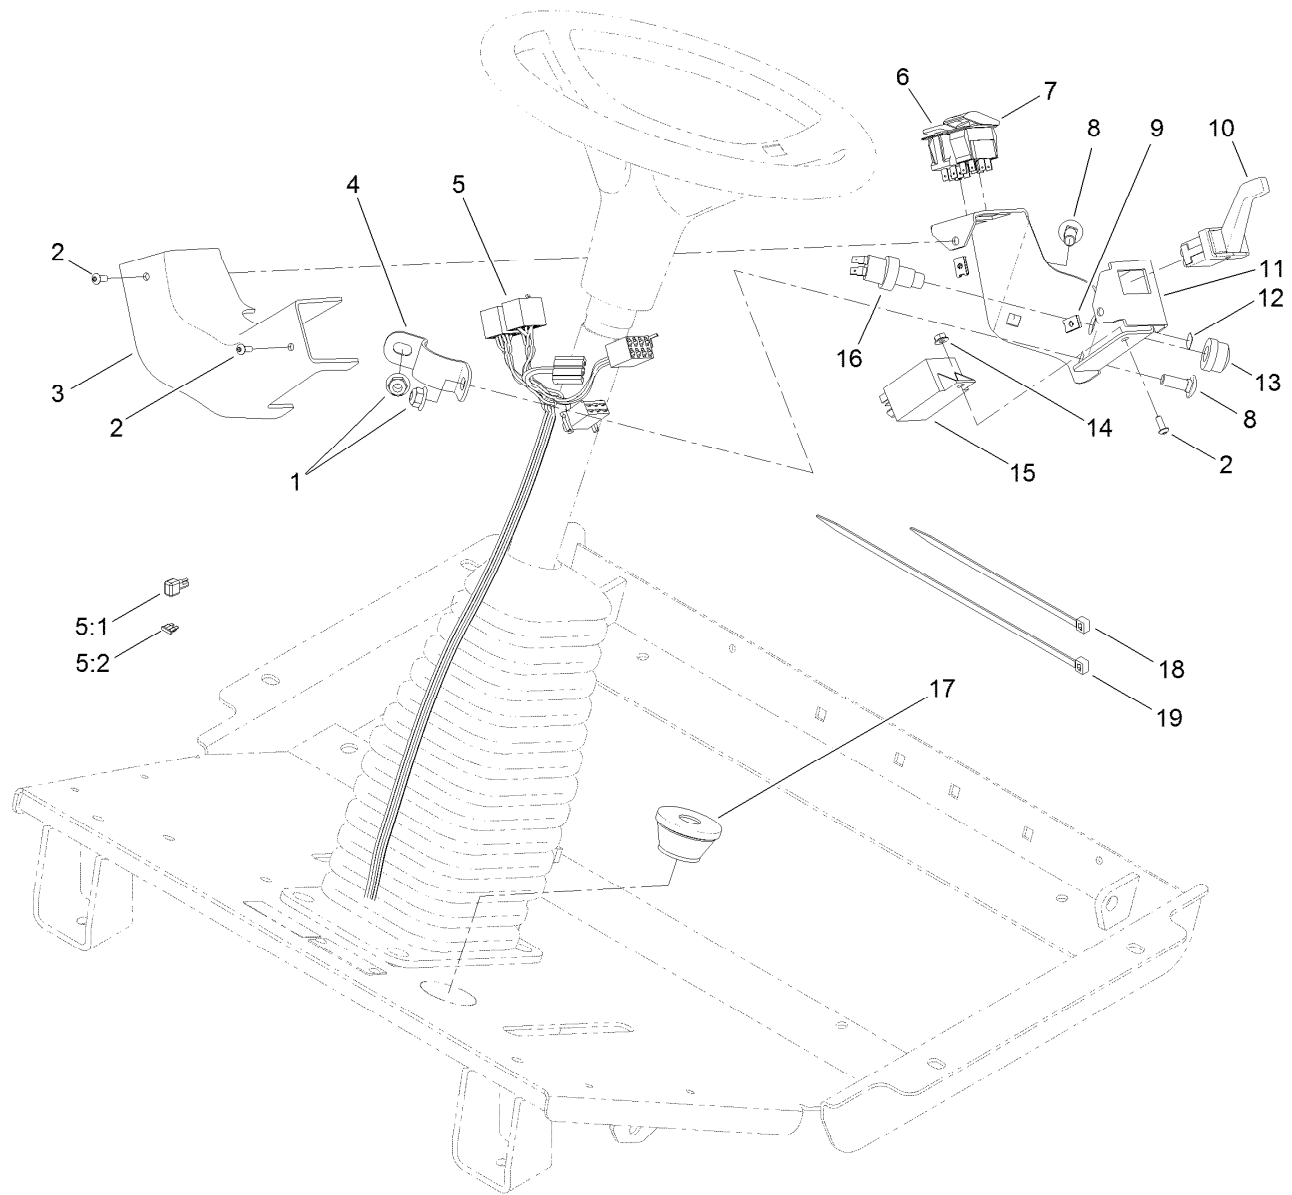

Steering Column Cover and Switch Assembly


Ref.	Part Number	Qty.	Description
1	104-8301	2	Nut-Flange, NI
2	115-9830	3	Screw-HSBH
3	120-6655	1	Cover-Column
4	120-0336	1	Mount-Bracket, Column
5	120-0312	1	Harness-Wire, Light Kit
5:1	100-4918	2	Diode
5:2	99-6124	1	Fuse-Blade, 40 Amp
6	120-0334	1	Switch-Rocker, On-Off-On
7	119-7769	1	Switch-Rocker, On-None-On
8	3231-22	2	Screw-CARR

Ref.	Part Number	Qty.	Description
9	701493	2	Nut-Speed
10	120-3953	1	Switch-Paddle, On-Off-On
11	120-0363-03	1	Bracket-Column
12	104-6957	1	Decal-Horn
13	112-3313	1	Cap And Nut ASM
14	32128-17	1	Nut-Lock, Flange
15	119-9880	1	Module-Flasher
16	112-3324	1	Switch-Horn
17	32180-033	1	Grommet
18	3290-378	14	Tie-Cable
19	3290-379	2	Tie-Cable

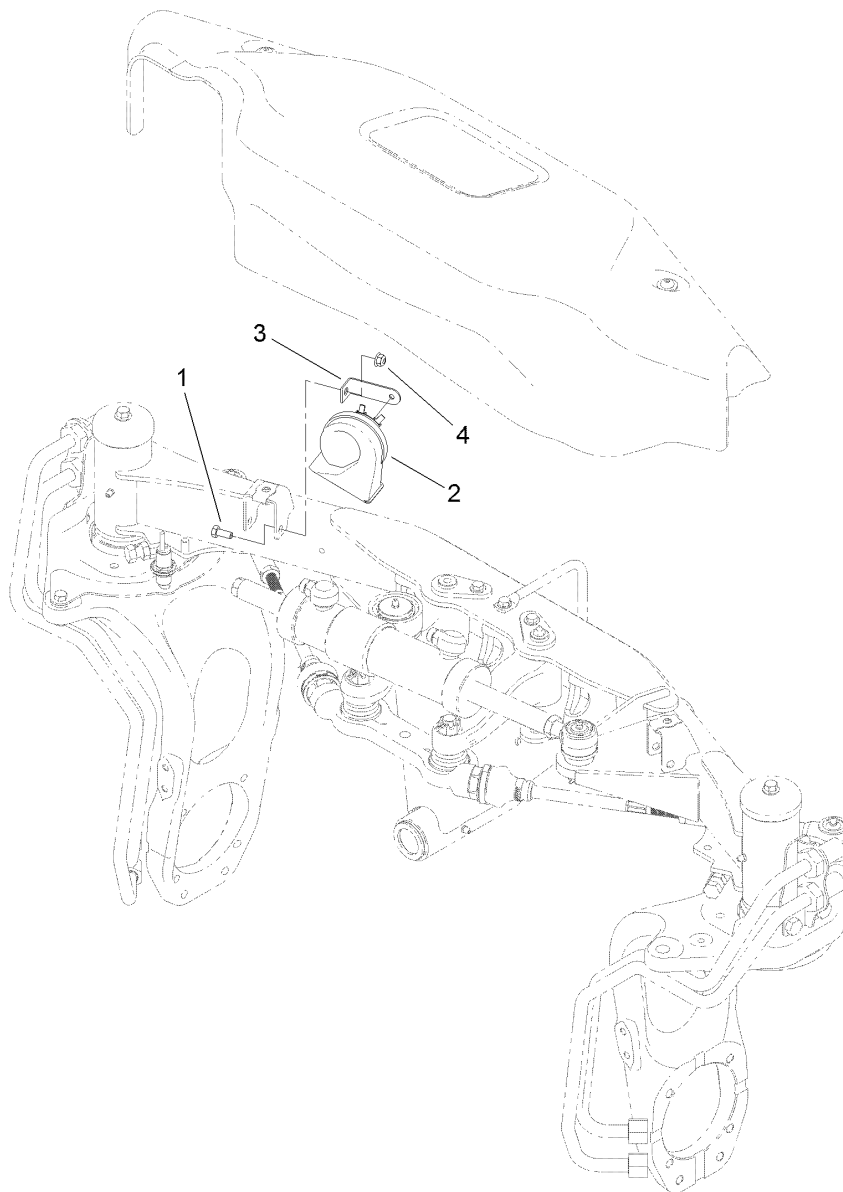

Horn Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	322-3	1	Screw-HH
2	116749	1	Horn
3	120-0319	1	Bracket-Horn
4	104-8300	1	Nut-Flange, NI

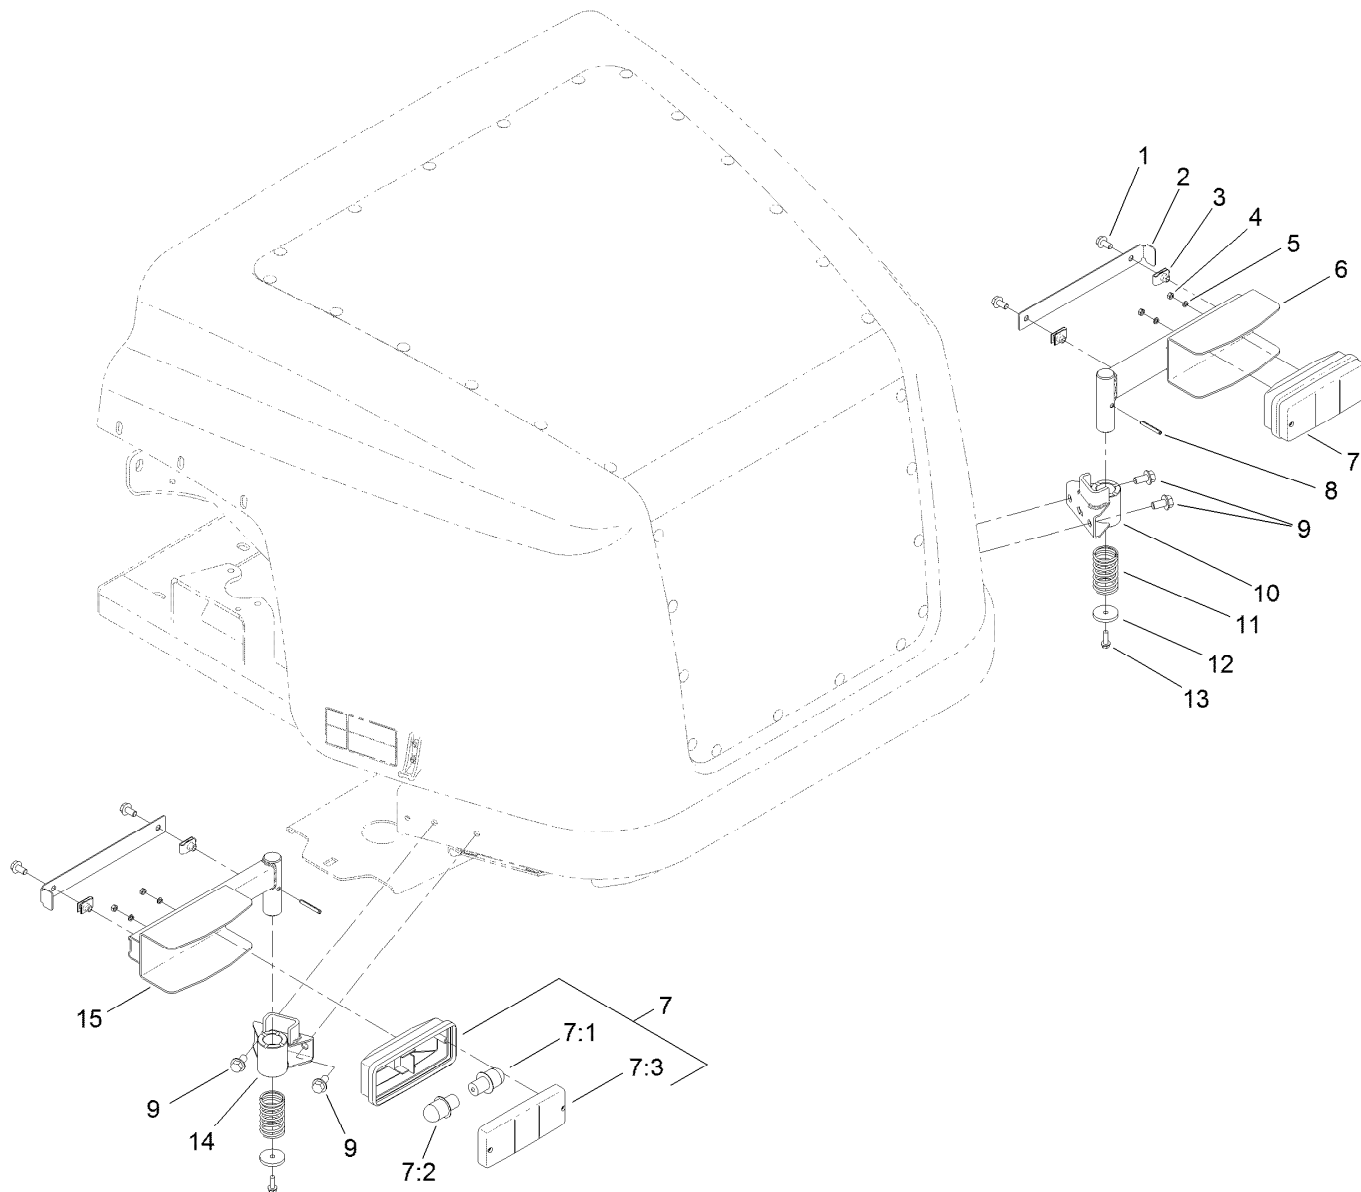

Rear Tail Light Assembly

Ref.	Part Number	Qty.	Description
1	3234-7	4	Screw-HHF
2	119-9881-03	2	Cover-Bracket, Rear
3	94-2413	4	U-Nut
4	48-7880	4	Nut-Hex
5	48-8000	4	Washer-Lock
6	119-9856-03	1	Bracket-Lamp, RH Rear
7	119-8093	2	Lamp-Rear
7:1	120-7552	1	Bulb-P21W 12V
7:2	120-6657	1	Bulb-P21/5W

Ref.	Part Number	Qty.	Description
7:3	120-6656	1	Lens
8	32121-34	2	Pin-Roll
9	110-9380	4	Screw-HWH
10	119-9851-03	1	Bracket-Pivot, RH
11	104-9412	2	Spring-Compression
12	119-9875	2	Washer
13	32105-15	2	Screw
14	119-9850-03	1	Bracket-Pivot, LH
15	119-9855-03	1	Bracket-Lamp, LH Rear

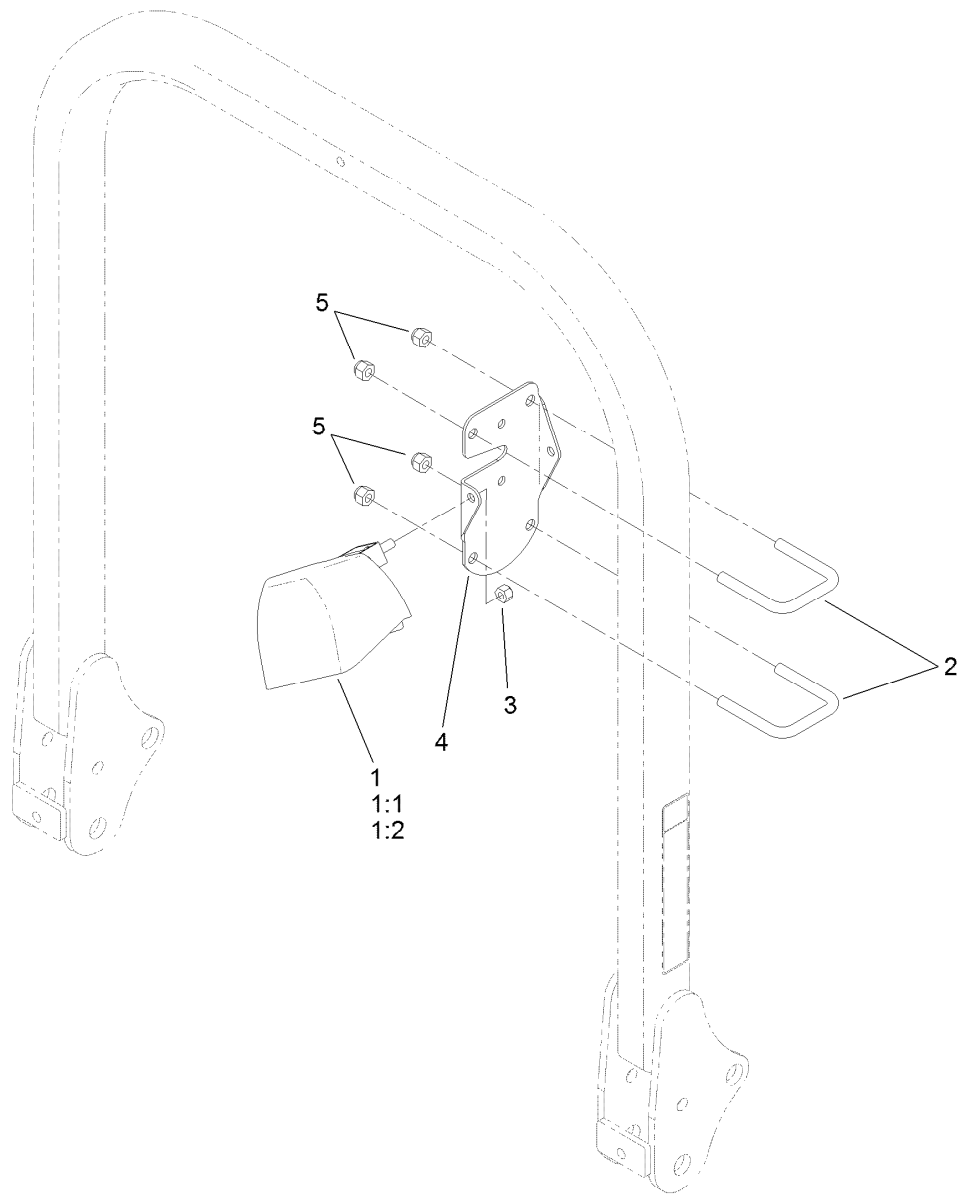

Worklight Assembly

Ref.	Part Number	Qty.	Description
1	93-3914	1	Worklight
1:1	95-0909	1	Lamp-12 Volt ●
1:2	92-2893	1	Lens-Clear ●
2	110-6405	2	U-Bolt
3	3296-29	1	Nut-Lock, NI
4	110-6402-03	1	Bracket-Light
5	3296-39	4	Nut-Lock, NI

● Not illustrated

Notes:

Notes:

Notes:



Count on it.