



**Count on it.**

Form No. 3365-266 Rev C

# Parts Catalog

## 1800 Power Curve® Snowthrower

Model No. 38381—Serial No. 311000001 and Up

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquid Propane

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


# Contents

Frame Assembly..... 4

Drive Assembly..... 5


Chute Assembly..... 6

Handle Assembly..... 7

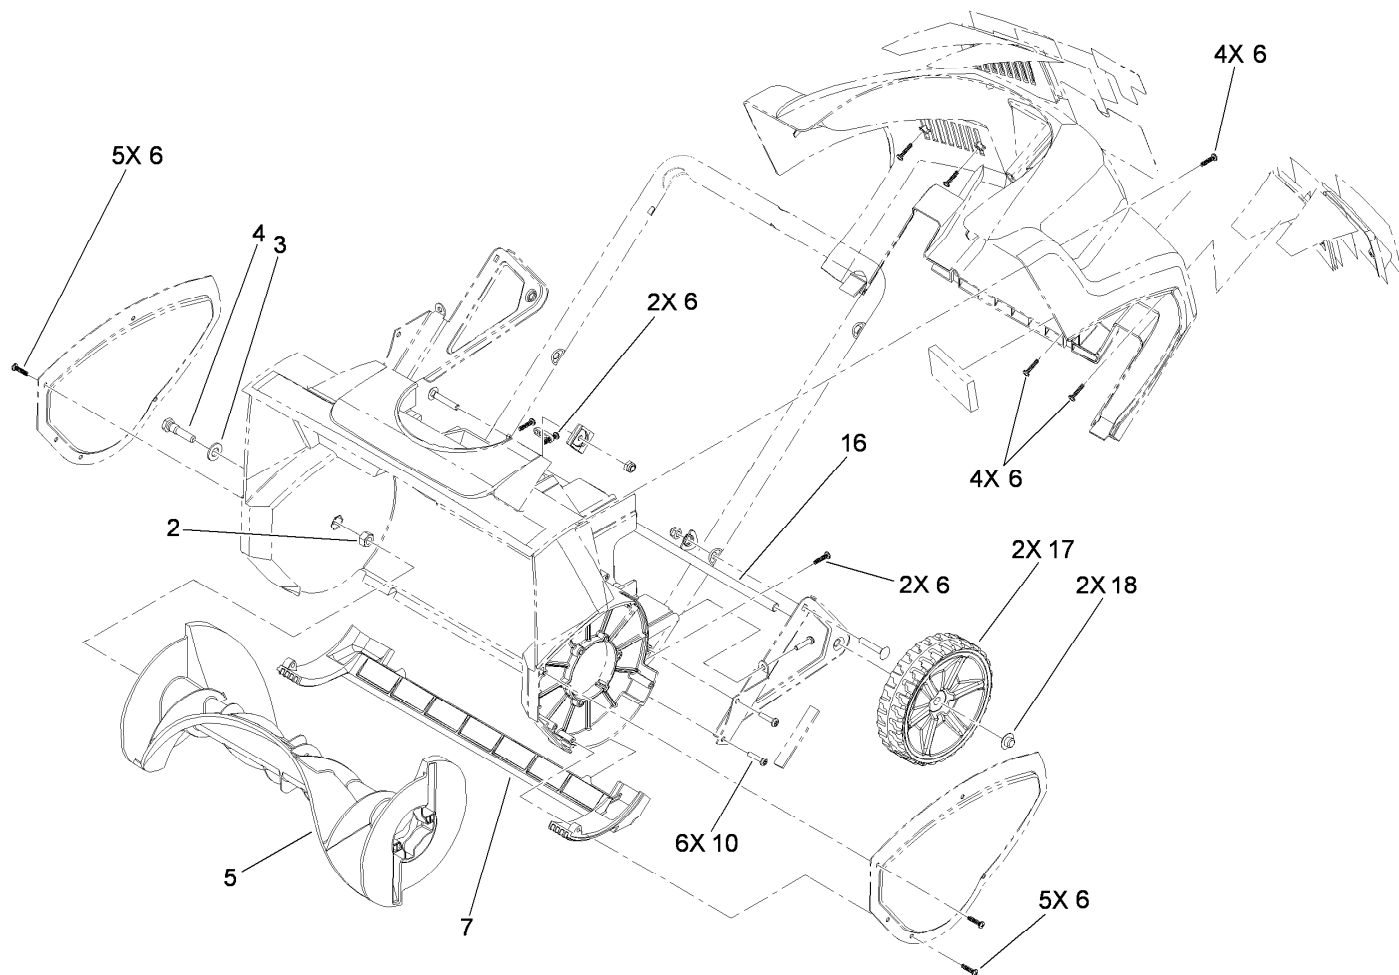


## Frame Assembly

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 2    | 32153-11    | 1    | Nut-Lock         |
| 3    | 3256-80     | 1    | Washer-Flat      |
| 4    | 38-8211     | 1    | Pin-Rotor        |
| 5    | 117-8775    | 1    | Rotor ASM        |
| 6    | 94-4496     | 22   | Screw-PPH        |
| 7    | 117-2840    | 1    | Scraper          |
| 10   | 32144-36    | 6    | Screw-PPH        |
| 16   | 114-9208-03 | 1    | Axle-Wheel       |
| 17   | 117-2306    | 2    | Wheel ASM        |
| 18   | 3290-320    | 2    | Retainer-Push On |

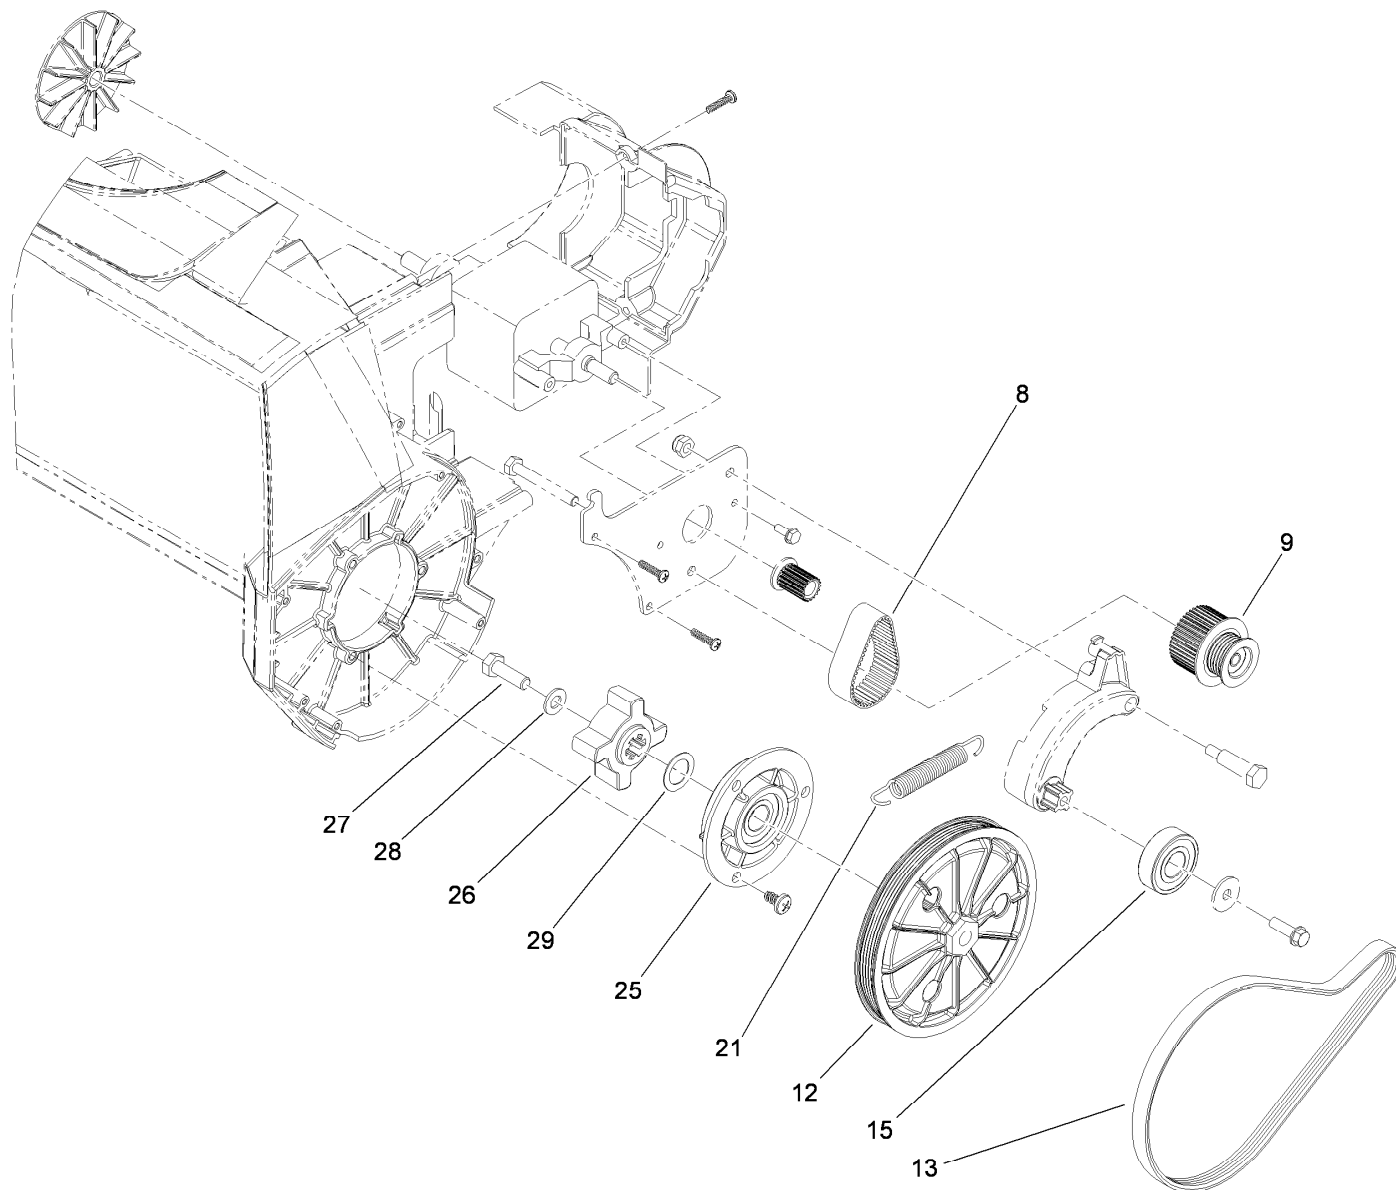


## Drive Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 8    | 73-0160     | 1    | Belt-Pulley, Idler/Driver |
| 9    | 117-8770    | 1    | Idler Pulley ASM          |
| 12   | 117-8763    | 1    | Pulley ASM                |
| 13   | 115-1192    | 1    | Belt-Drive                |
| 15   | 117-8783    | 1    | Bearing-Ball              |
| 21   | 117-2804    | 1    | Spring-Idler              |
| 25   | 117-2887    | 1    | Pillow Block ASM          |
| 26   | 117-8762    | 1    | Coupler-Pulley            |
| 27   | 117-2888    | 1    | Screw-HH                  |
| 28   | 27-9560     | 1    | Spacer                    |
| 29   | 7-4650      | 1    | Washer                    |

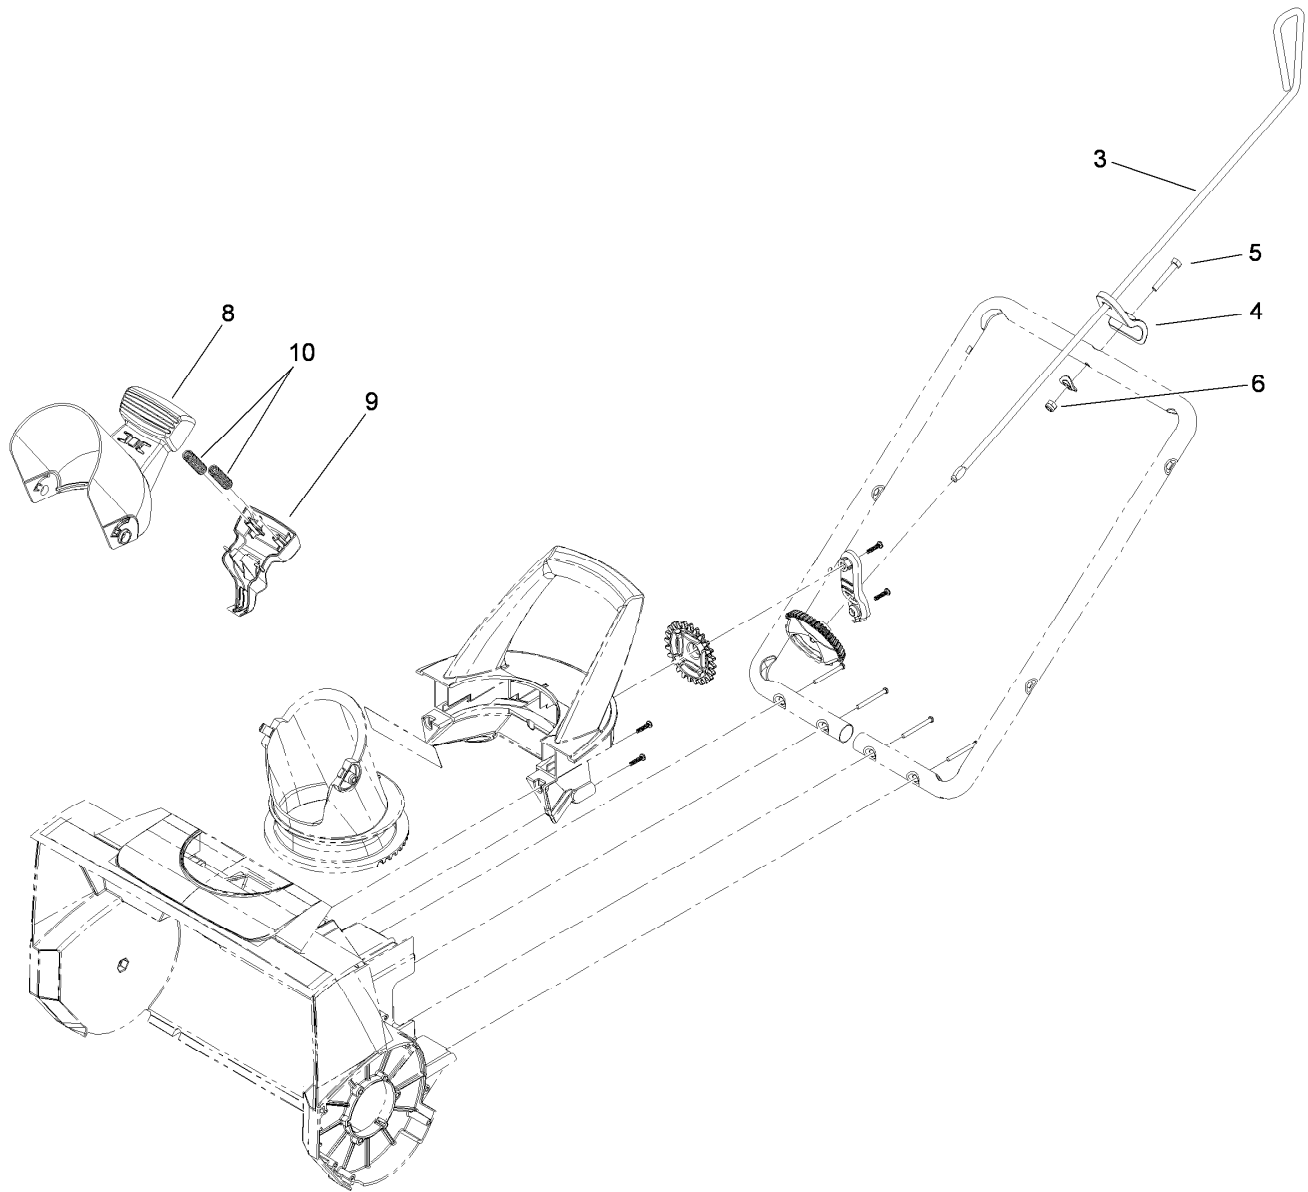

## Chute Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 3    | 114-9240-03 | 1    | Rod-Control, Chute  |
| 4    | 114-9241    | 1    | Guide-Rod, Chute    |
| 5    | 321-51      | 1    | Screw-HH            |
| 6    | 3296-73     | 1    | Nut-Lock, NI        |
| 8    | 114-9038    | 1    | Chute Deflector ASM |
| 9    | 117-2314    | 1    | Trigger-Deflector   |
| 10   | 110-9360    | 2    | Spring-Compression  |

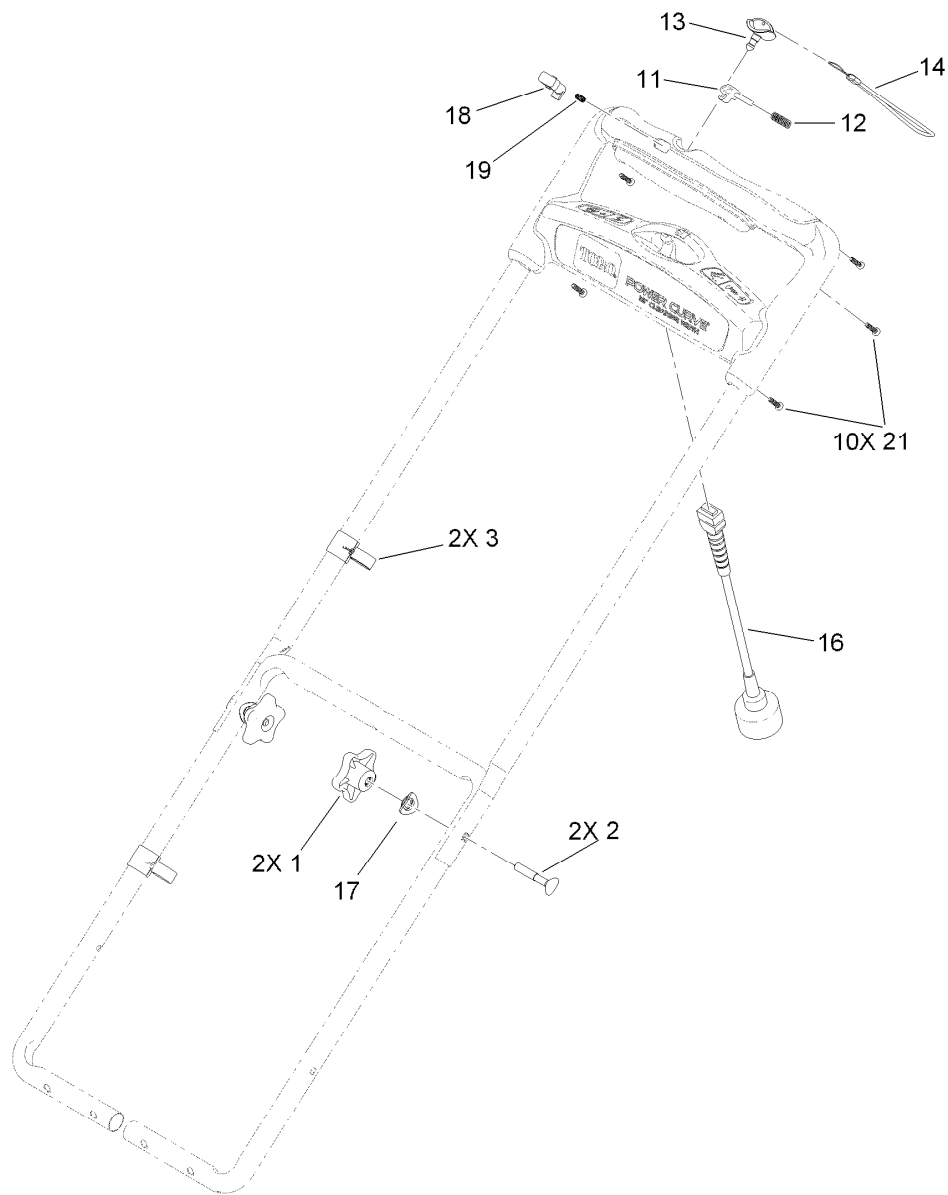

## Handle Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 117-5976    | 2    | Knob-Handle, Locking       |
| 2    | 112-8876    | 2    | Screw-Handle               |
| 3    | 114-7988    | 2    | Guide-Cable                |
| 11   | 117-8754    | 1    | Lockout-Bar, Control       |
| 12   | 117-8753    | 1    | Spring-Lockout             |
| 13   | 117-8751    | 1    | Key                        |
| 14   | 117-2878    | 1    | Cord-Key                   |
| 16   | 117-8752    | 1    | Wire ASM                   |
| 17   | 107-3844    | 2    | Washer                     |
| 18   | 114-9029    | 1    | Button-Safety              |
| 19   | 106-9778    | 1    | Spring-Compression, Safety |
| 21   | 114-9041    | 10   | Screw                      |



**Count on it.**