



Count on it.

Parts Catalog

Commercial Walk-Behind Mower 15 HP Pistol Grip Gear Drive with 44in Side Discharge Cutting Unit

Model No. 30437—Serial No. 240000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Engine Installation Assembly	4
Fuel Tank Assembly	5
Lower Control Assembly	6
Transmission Drive Assembly	7
Wheel Drive and Brake Assembly	8
Upper Handle Assembly	9
Control Panel Assembly	10
Carrier Frame Assembly	11
Spindle, Pulley and Belt Assembly	12
Spindle Assembly No. 106-0784	13
Spindle Assembly No. 106-0786	14
Deck Assembly	15
Drive Belt and Tensioner Assembly	16
Cylinder and Crankcase Assembly Kawasaki FH430V-AS28	17
Piston and Crankshaft Assembly Kawasaki FH430V-AS28	18
Valve and Camshaft Assembly Kawasaki FH430V-AS28	19
Lubrication Equipment Assembly Kawasaki FH430V-AS28	20
Cooling Equipment Assembly Kawasaki FH430V-AS28	21
Electrical Equipment Assembly Kawasaki FH430V-AS28	22
Control Equipment Assembly Kawasaki FH430V-AS28	23
Carburetor Assembly Kawasaki FH430V-AS28	24
Air Filter and Muffler Assembly Kawasaki FH430V-AS28	25
Fuel Valve Assembly Kawasaki FH430V-AS28	26
Starter Assembly Kawasaki FH430V-AS28	27
Decal Assembly Kawasaki FH430V-AS28	28
Attachments and Accessories	29

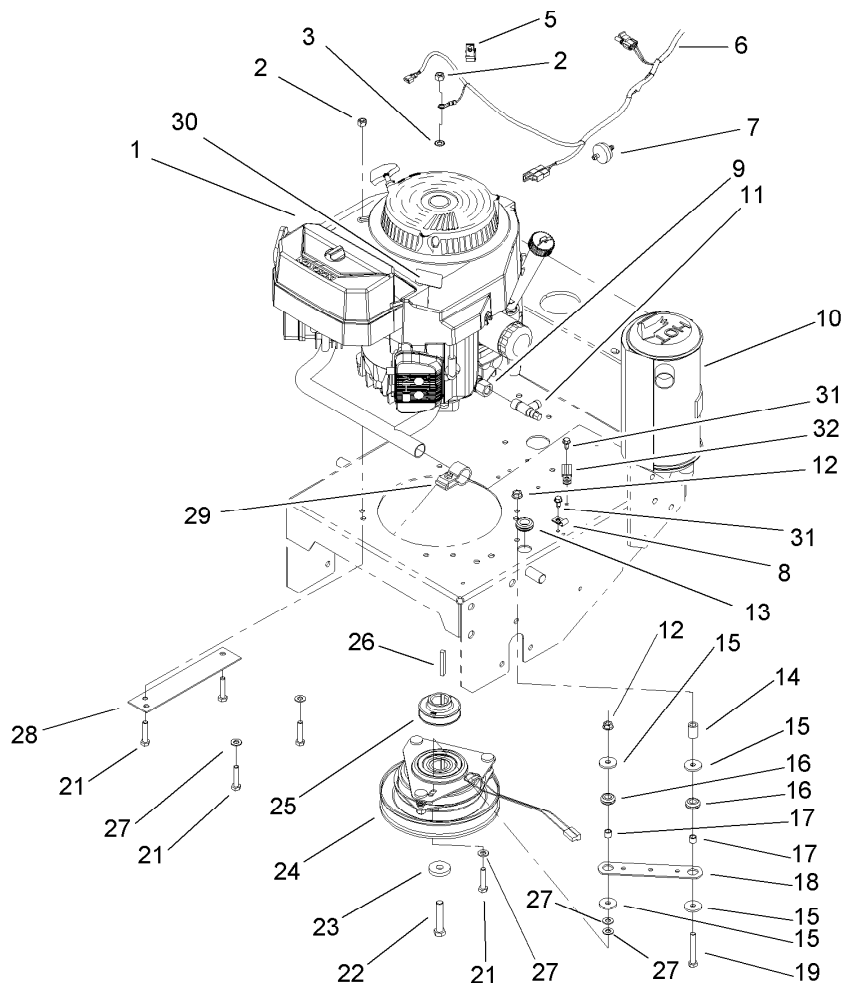


Engine Installation Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, FH430V-As28 ■
2	3296-29	4	Nut-Lock, NI
3	3255-8	1	Washer-Lock
5	2412-87	1	Clamp-Cable
6	104-9825	1	Harness-Wire
7	56-6360	1	Filter-Fuel
8	2412-72	1	Clip-Closed, Insulated
9	103-1966	1	Adapter
10	100-6467	1	Muffler
11	103-1965	1	Valve-Drain, Oil
12	32128-20	2	Nut-HF
13	237-124	1	Grommet
14	104-6373	1	Tube-Retainer
15	1-613235	4	Washer
16	1-633630	2	Grommet-Brake

Ref.	Part Number	Qty.	Description
17	1-633545	2	Spacer
18	1-633543-03	1	Strap-Clutch, Brake
19	322-11	1	Screw-HH
21	322-7	5	Screw-HH
22	3212-9	1	Screw-HH
23	112843	1	Washer
24	105-2635	1	Clutch / Brake ASM
25	105-0827	1	Pulley-Drive
26	608006	1	Key-Square
27	3256-23	5	Washer-Flat
28	94-5847-01	1	Cover-Pulley
29	103-5465	1	Clamp-Muffler
30	106-0699	1	Decal-Warning
31	12-3270	2	Screw
32	2412-134	1	Clamp-R
99	103-1964	1	Hose-Drain, Oil ●


● Not illustrated

■ Not serviced separately

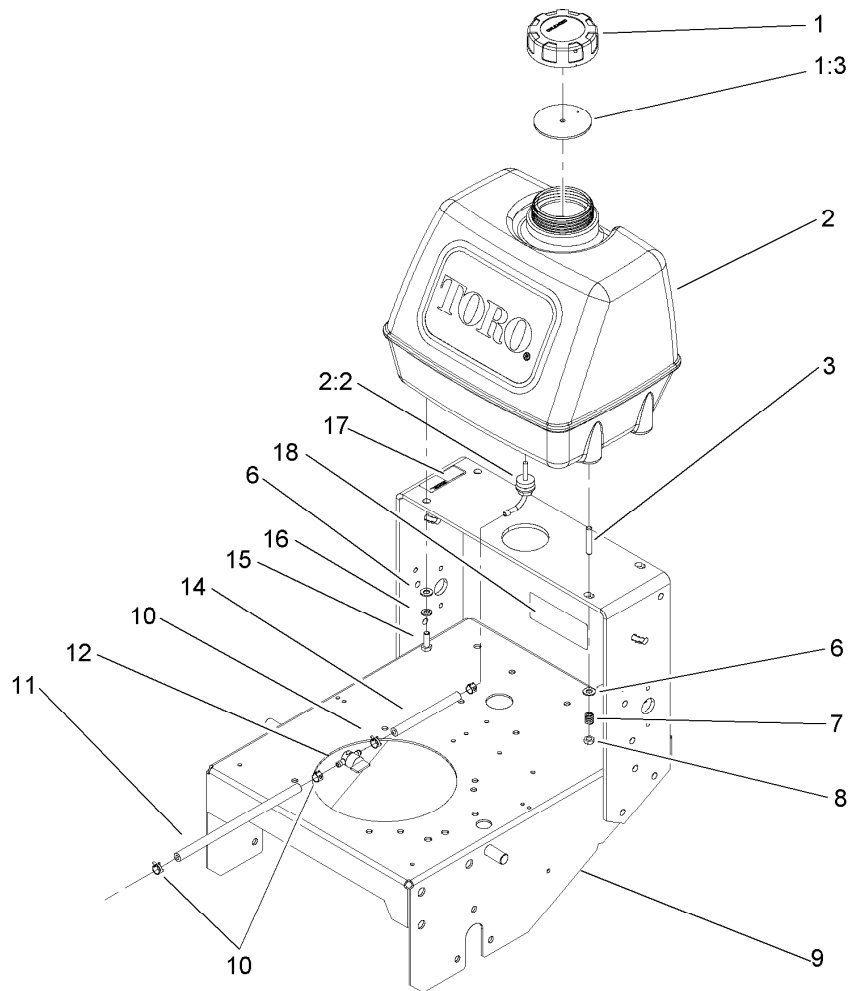

Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	106-0546-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	47-2982	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	47-2980	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	95-2814	1	Decal-Shut Off, Fuel
18	98-0776	1	Decal-Caution

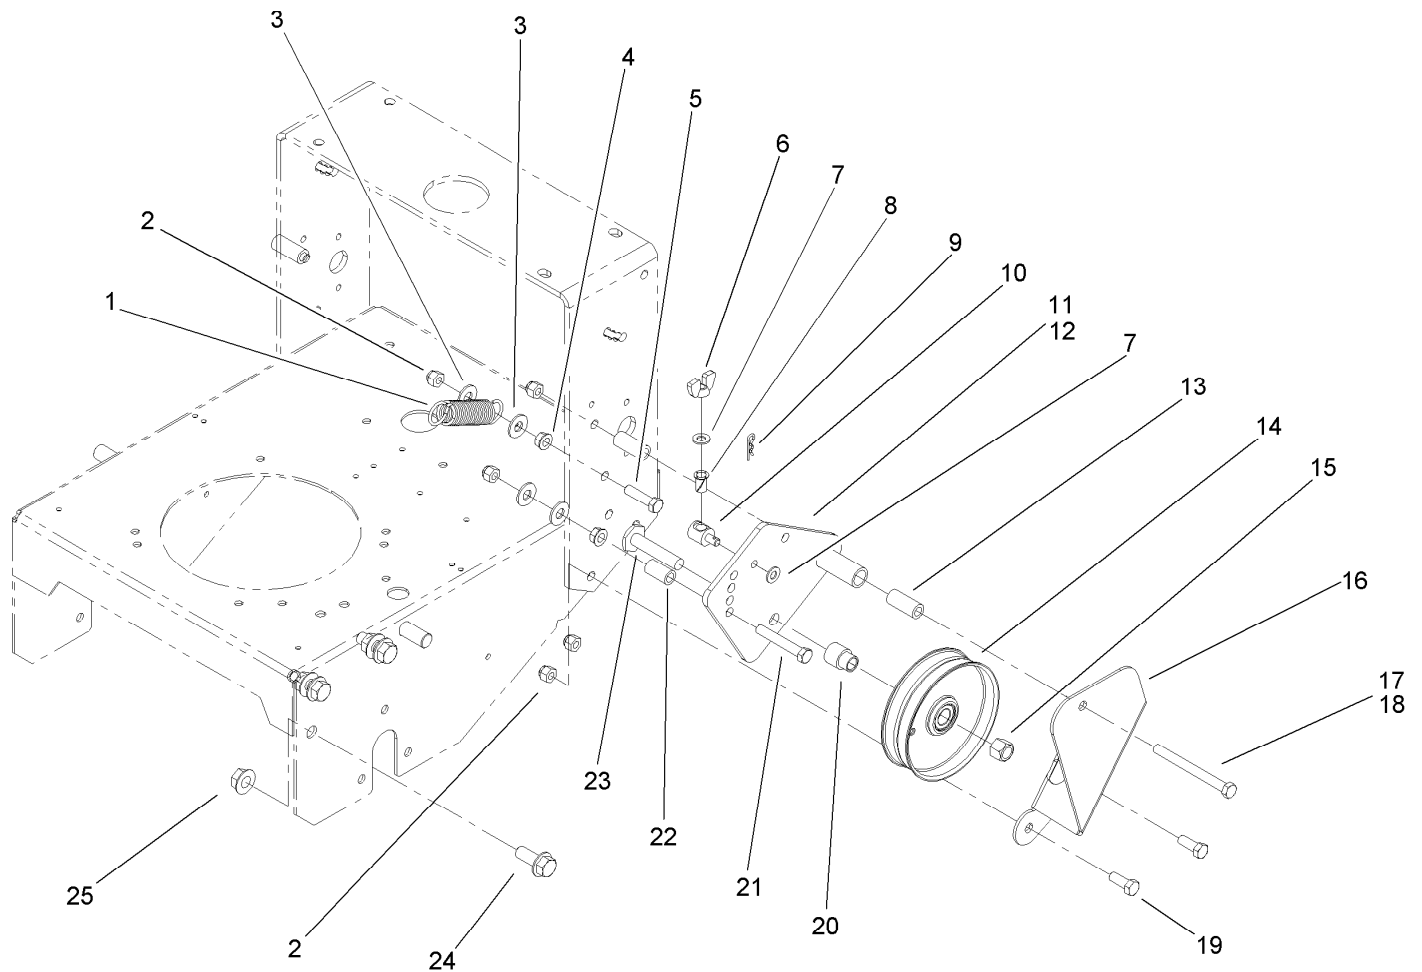

Lower Control Assembly


Ref.	Part Number	Qty.	Description
1	1-603402	2	Spring-Extension
2	3296-39	10	Nut-Lock, NI
3	3256-4	8	Washer-Flat
4	32128-40	4	Nut-Flange
5	323-8	2	Screw-HH
6	32103-25	2	Nut-Wing
7	3256-23	4	Washer-Flat
8	52-2890	2	Bushing-Nylon
9	3290-307	2	Pin-Hair
10	68-9690	2	Fitting-Rod
11	107-4092-01	1	LH Idler Bracket ASM
12	107-4093-01	1	RH Idler Bracket ASM
13	74-0040	4	Spacer-Pivot, Idler

Ref.	Part Number	Qty.	Description
14	95-2800	2	Pulley-Idler
15	3296-23	2	Nut-Lock, NI
16	67-6380-01	1	Bracket-Support, LH
17	67-6370-01	1	Bracket-Support, RH
18	323-16	2	Screw-HH
19	323-6	4	Screw-HH
20	95-2801	2	Spacer-Pulley
21	323-12	2	Screw-HH
22	106-0564	2	Spacer
23	51-4450	2	Screw-Leveler
24	3234-32	6	Screw-HHF
25	32128-23	6	Nut-HF

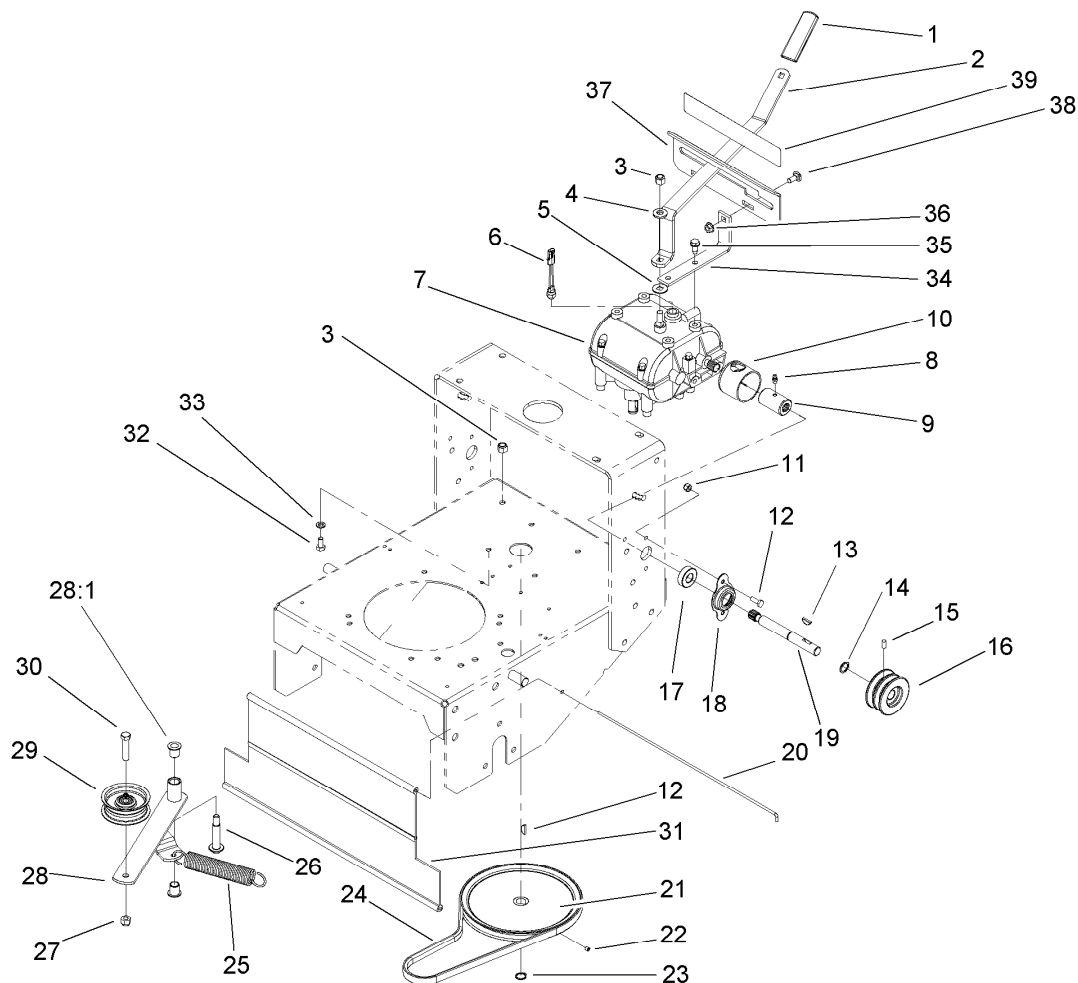

Transmission Drive Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	47-1970	1	Grip	21	105-5646	1	Pulley-Driven
2	98-3274-03	1	Lever-Shift	22	3245-1	1	Screw-Set, HSH
3	3296-6	2	Nut-Lock	23	32120-64	1	Ring-Snap, External
4	98-5975	1	Washer-Belleville	24	105-5668	1	V-Belt
5	1-323379	1	Washer	25	68-2190	1	Spring
6	72-4320	1	Switch-Ball	26	27-6230	1	Bolt-Wheel
7	1-323500	1	Transmission	27	3296-39	1	Nut-Lock, NI
8	302-5	2	Fitting-Grease	28	16-7509	1	Lever-Idler
9	1-323680	2	Coupler	28:1	256-155	2	Bushing-Flange
10	51-4220	2	Guard-Coupler	29	62-4540	1	Pulley
11	3296-42	4	Nut-Lock, NI	30	323-9	1	Screw-HH
12	321-4	4	Screw-HH	31	95-1526	1	Shield-Trailing
13	3257-5	3	Key-Woodruff	32	322-2	4	Screw-HH
14	32151-62	2	Ring-Retaining	33	3253-4	4	Washer-Lock
15	3245-9	2	Screw-Set	34	1-323389-03	2	Bracket-Plate, Shift
16	105-2698	2	Pulley-Transmission	35	9264964	4	Screw-HWH, Thread Cut
17	1-323252	2	Bearing-Shaft	36	32128-20	2	Nut-HF
18	1-323254	2	Flange-Output	37	1-323387-03	1	Plate-Shift
19	104-1102	2	Shaft-Output	38	3230-1	2	Bolt-CARR
20	95-1529	1	Rod-Shield	39	98-3256	1	Decal-Speed, Ground

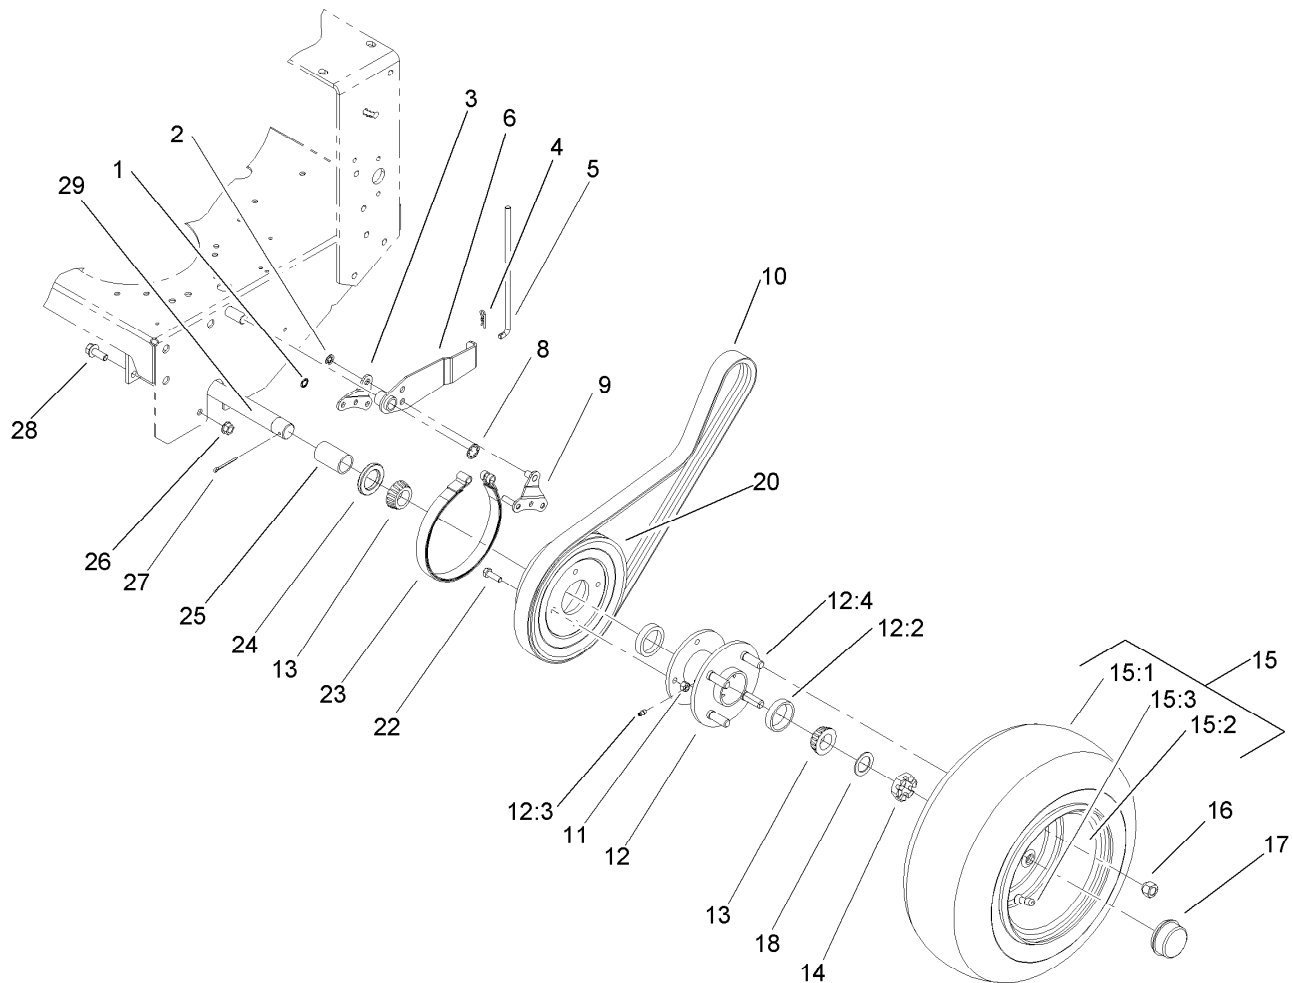

Wheel Drive and Brake Assembly

Ref.	Part Number	Qty.	Description
1	32151-56	2	Ring-Retaining, External
2	32151-72	4	Ring-Retaining
3	106-8792	2	Plate-Link, Brake
4	3290-307	2	Pin-Hair
5	51-4580	2	Rod-Brake
6	106-8779-01	2	Brake Arm ASM
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	51-4290	2	V-Belt
11	3296-29	8	Nut-Lock, NI
12	1-413333	2	Hub/Wheel ASM
12:2	254-72	2	Bearing-Cup, Tapered
12:3	302-19	1	Fitting-Grease
12:4	1-633926	4	Stud-Wheel
13	254-94	4	Bearing-Cone, Tapered
14	1-809082	2	Nut-SHH


Ref.	Part Number	Qty.	Description
15	106-0892	2	Wheel And Tire ASM
15:1	104-6322	1	Tire
15:2	106-0893	1	Wheel
15:3	232-27	1	Stem-Valve
16	242-50	8	Nut-Lug
17	241-119	2	Cap-Dust
18	1-523157	2	Washer-Spacer
20	106-5544	2	Pulley-Wheel
22	322-5	8	Screw-HH
23	1-323262	2	Band-Brake
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	32128-21	6	Nut-HF
27	1-806800	2	Pin-Cotter
28	3234-11	6	Screw-HHF
29	104-1196-01	1	Axle ASM

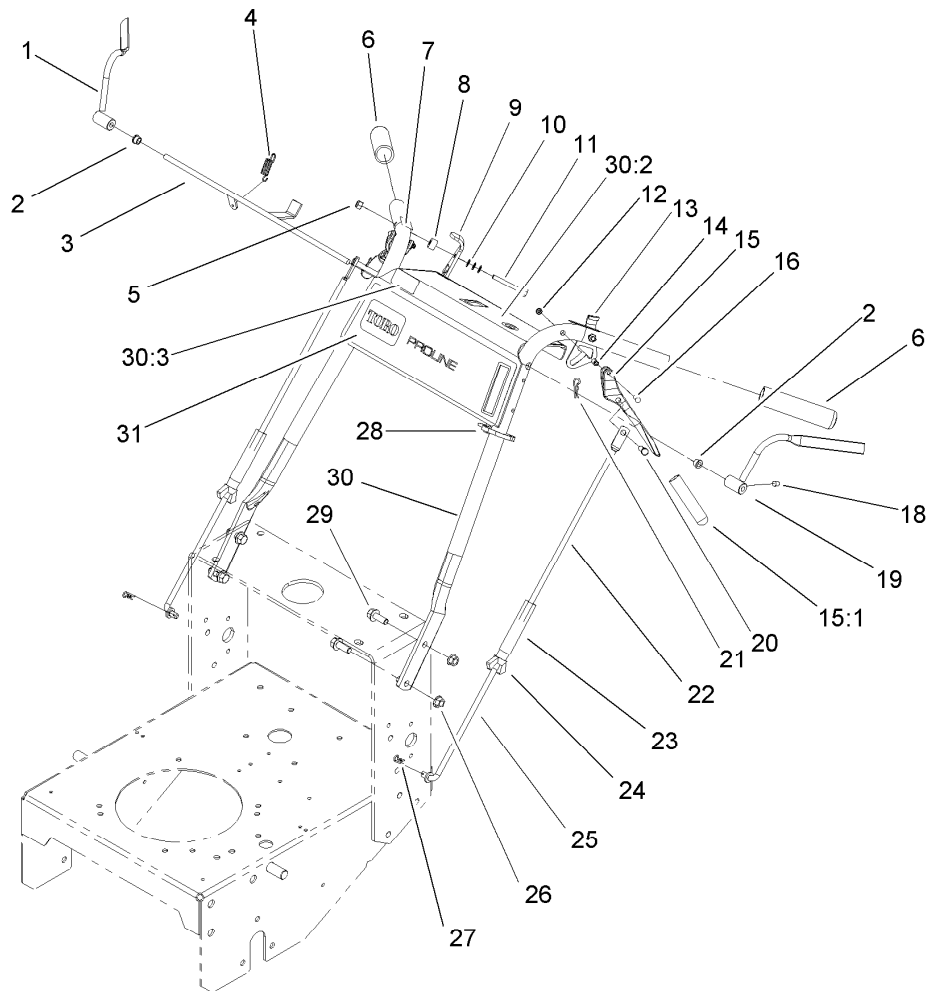

Upper Handle Assembly


Ref.	Part Number	Qty.	Description
1	106-5486	1	RH Operator Presence Control Lever ASM
2	1-303365	2	Bushing-Nylon
3	104-9803	1	Rod ASM
4	1-303363	1	Spring-Extension
5	3296-42	2	Nut-Lock, NI
6	104-9838	2	Grip-Foam
7	105-4111	2	Decal-Lock, Neutral
8	1-323549	2	Spacer
9	106-5521	1	Latch-Thumb, RH
10	1-303435	6	Washer-Spring
11	321-18	2	Screw-HH
12	1-803001	2	Nut
13	106-5520	1	Latch-Thumb, LH
14	1-806340	2	Pin-Roll
15	1-302006	2	Drive Lever ASM
15:1	1-303021	1	Grip-Lever, Drive
16	1-808250	2	Pin-Lever, Drive

Ref.	Part Number	Qty.	Description
18	1-803322	2	Screw-Set
19	106-5485	1	LH Operator Presence Control Lever ASM
20	1-808286	2	Pin-Clevis
21	1-806003	2	Pin-Cotter, Hair
22	106-0613	2	Linkage-Drive Wheel
23	95-1504	2	Turnbuckle
24	32103-3	2	Nut-Wing
25	95-1506	2	Rod-Control, Lower
26	32128-21	4	Nut-HF
27	3290-307	2	Pin-Hair
28	3290-378	1	Tie-Cable
29	3234-11	4	Screw-HHF
30	105-3174	1	Gear/Pg Handle ASM
30:2	106-5514	1	Decal-Control Panel
30:3	98-4387	1	Decal-Protection, Ear
31	106-5501	1	Decal-Control, Throttle

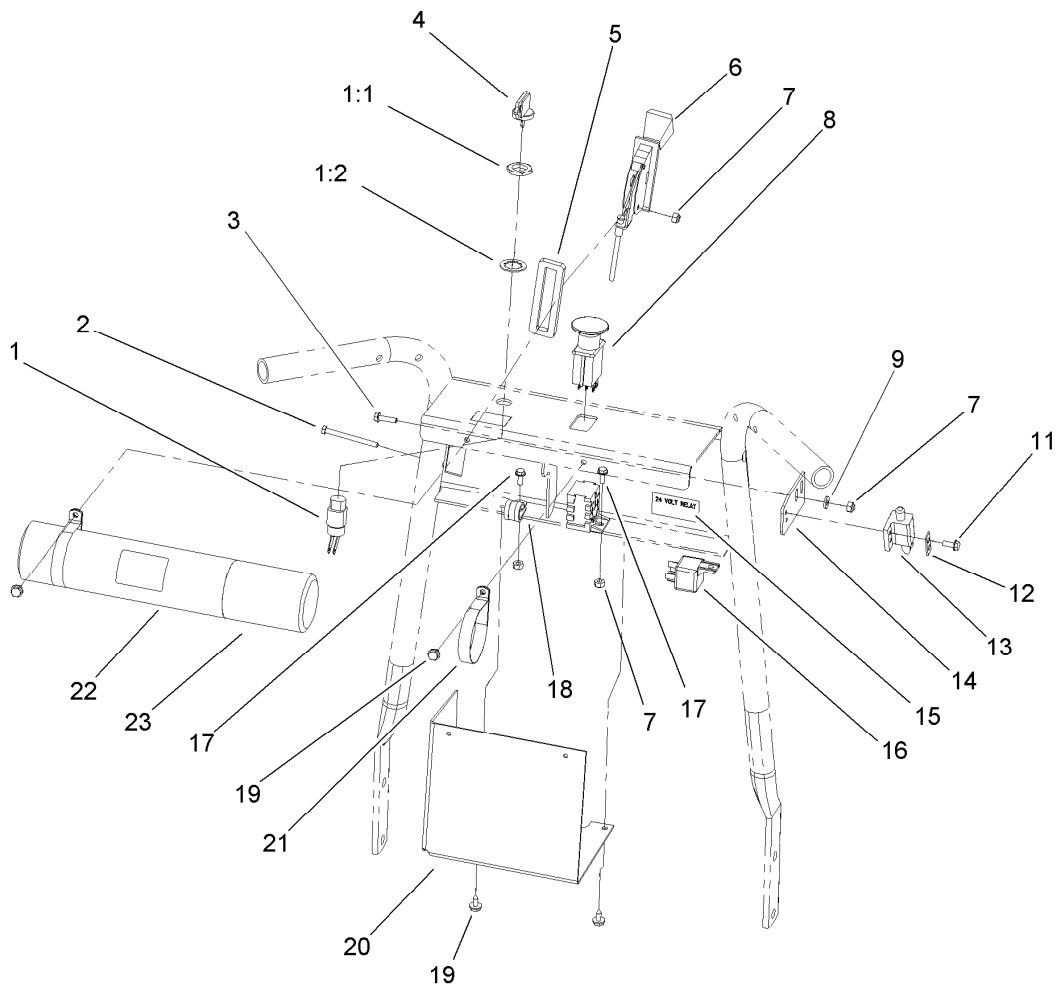

Control Panel Assembly


Ref.	Part Number	Qty.	Description
1	29-5560	1	Switch-On / Off
1:1	218-461	1	Nut-HH
1:2	3254-5	1	Washer-Tooth, Internal
2	32105-14	2	Screw-SHH
3	32105-13	2	Screw-HWH
4	63-8360	1	Key-Ignition
5	106-5487	1	Gasket-Throttle
6	107-4072	1	Cable-Throttle
7	3296-2	6	Nut-Lock, NI
8	95-7489	1	Switch-PTO
9	3256-14	2	Washer-Flat
11	32144-1	2	Screw-Taptite
12	82-4570	1	Plate-Switch
13	95-1653	1	Switch-Pole, Single
14	105-4137-03	1	Plate-Mounting, Switch
15	105-4146	1	Decal-Relay, 24 Volt
16	105-4145	1	Relay
17	3290-321	2	Screw-HWH
18	2412-134	1	Clamp-R
19	32104-76	4	Screw
20	105-4112-03	1	Bracket-Cover
21	2412-120	2	R-Clamp
22	104-7050	1	Tube-Manual
23	104-7048	1	Cap-Housing

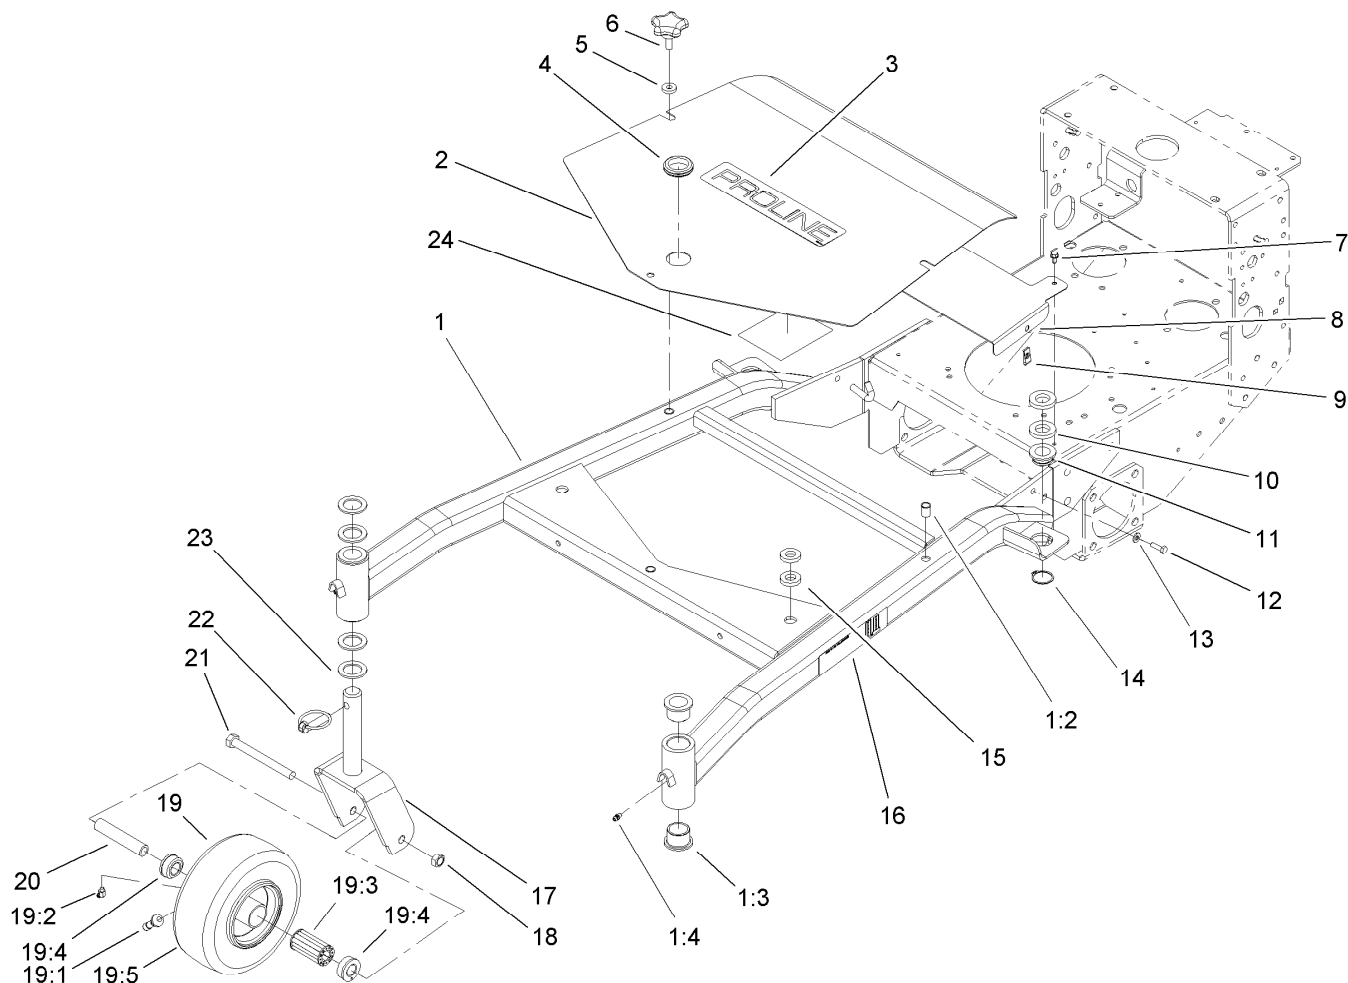

Carrier Frame Assembly

Ref.	Part Number	Qty.	Description
1	106-0707	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	106-0537-01	1	Cover
3	106-0719	1	Decal
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	106-0887	3	Knob
7	12-3270	2	Screw
8	105-9389-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0635	2	Decal-HOC


Ref.	Part Number	Qty.	Description
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Hex
19	100-6451	2	Caster Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45 DEG
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5503	1	Decal-Service, Hydro (Tbar)
24	106-5505	1	Decal-Service, Gear (Tbar)
24	106-5511	1	Decal-Service, Gear (Pistol Grip)
24	106-5513	1	Decal-Service, Hydro (Pistol Grip)

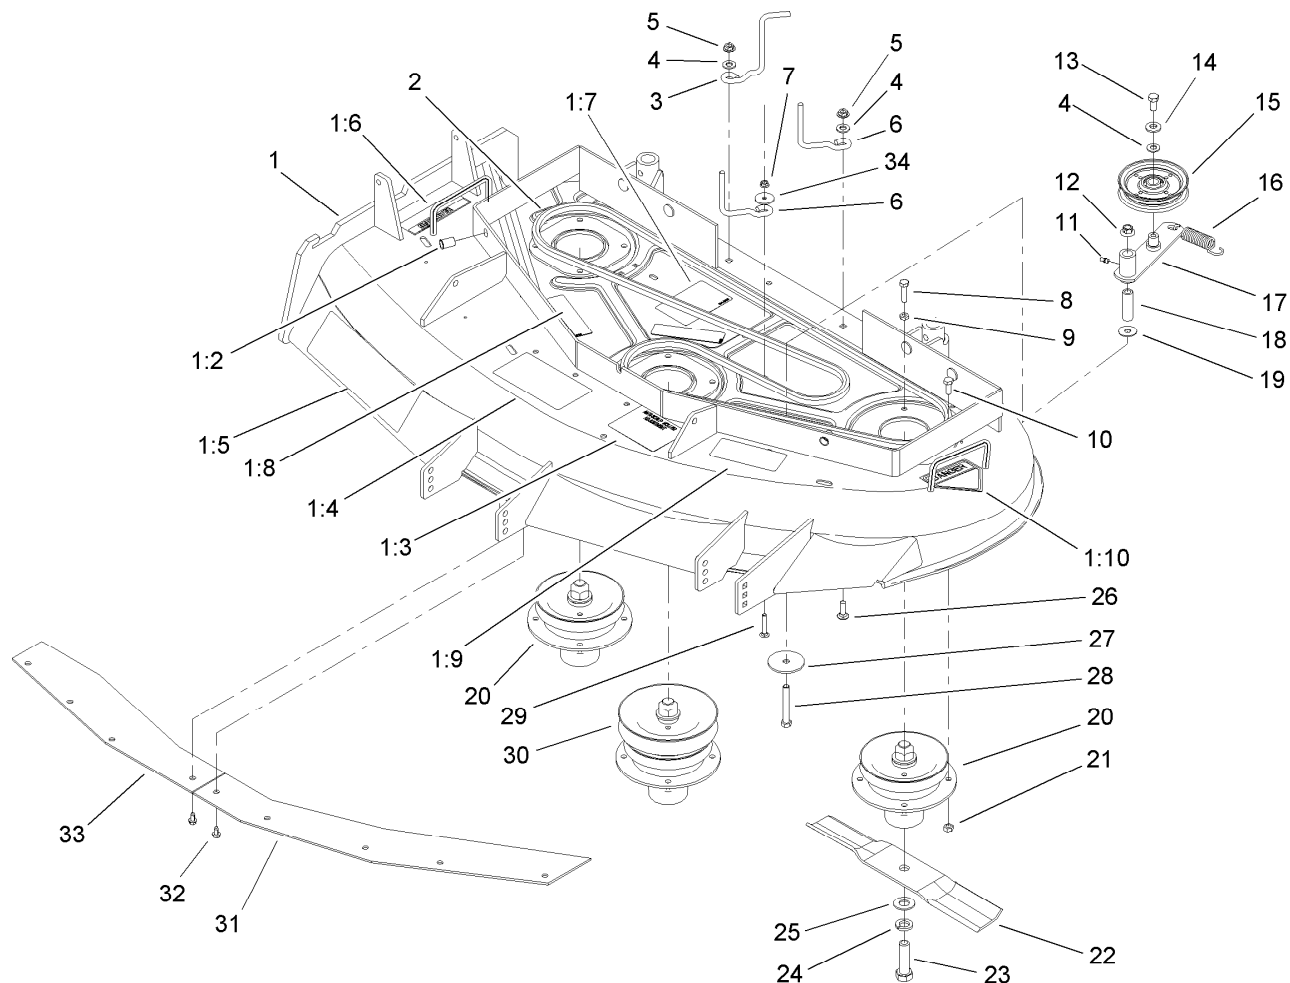

Spindle, Pulley and Belt Assembly


Ref.	Part Number	Qty.	Description
1	106-0617	1	Deck ASM
1:2	32148-10	2	Insert-Nut
1:3	106-5532	1	Decal-Anti Scalp
1:4	66-1340	1	Decal-Danger, Thrown Object
1:5	106-0704	1	Decal
1:6	104-8569	1	Decal-Warning
1:7	104-8186	1	Decal-Routing, Belt
1:8	67-5360	3	Decal-Danger
1:9	68-8340	1	Decal-Torque
1:10	43-8480	1	Decal-Danger
2	27-1160	1	V-Belt
3	106-5488	1	Guide-Belt
4	3256-24	3	Washer-Flat
5	32128-13	2	Nut-HHF
6	52-4780	2	Rod-Belt
7	32128-10	1	Nut-Lock, HHF
8	322-6	1	Screw-HH
9	3218-2	1	Nut-Jam
10	322-4	11	Screw-HH
11	302-19	1	Fitting-Grease
12	32128-19	1	Nut-HF

Ref.	Part Number	Qty.	Description
13	323-4	1	Screw-HH
14	98-5975	1	Washer-Belleville
15	65-5940	1	Pulley-Idler
16	54-2730	1	Spring-Extension
17	104-8110	1	Idler Arm ASM
18	104-8113	1	Tube-Idler
19	52-2860	1	Washer
20	106-0786	2	Spindle Housing ASM
21	32152-1	12	Nut-Lock, Cone
22	54-0010	3	Blade
23	51-4060	3	Screw-Blade
24	3253-8	3	Washer-Lock
25	3256-27	3	Washer-Flat
26	3230-2	2	Bolt-CARR
27	20-9530	1	Washer-End
28	323-13	1	Screw-HH
29	3229-4	1	Screw-CARR
30	106-0784	1	Spindle Housing ASM
31	100-3258-03	1	Plate-Blowout, LH
32	12-3270	9	Screw
33	100-3257-03	1	Plate-Blowout, RH
34	1-503033	1	Washer-Retainer, Pulley

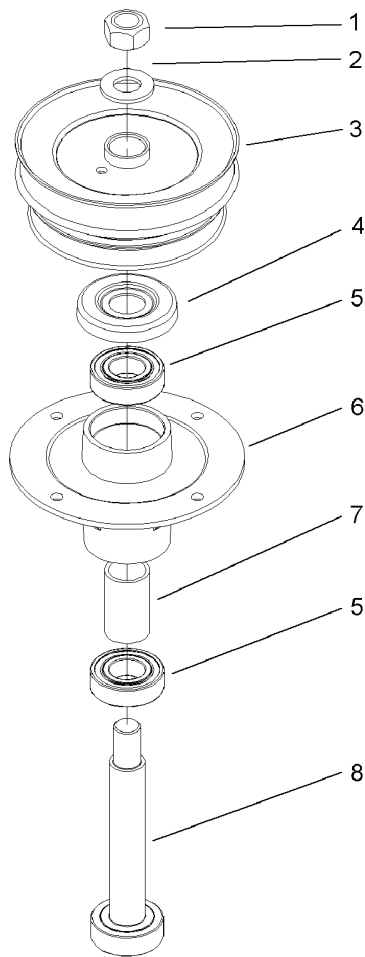


Spindle Assembly No. 106-0784

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1116	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing-Ball
6	106-0818	1	Housing-Spindle
7	106-0794	1	Spacer-Bearing
8	106-0780	1	Shaft-Spindle

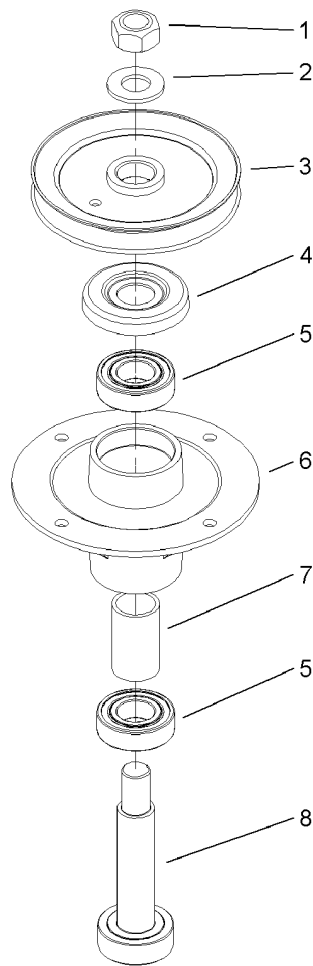

Spindle Assembly No. 106-0786


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing-Ball
6	106-0818	1	Housing-Spindle
7	106-0794	1	Spacer-Bearing
8	106-0779	1	Shaft-Spindle

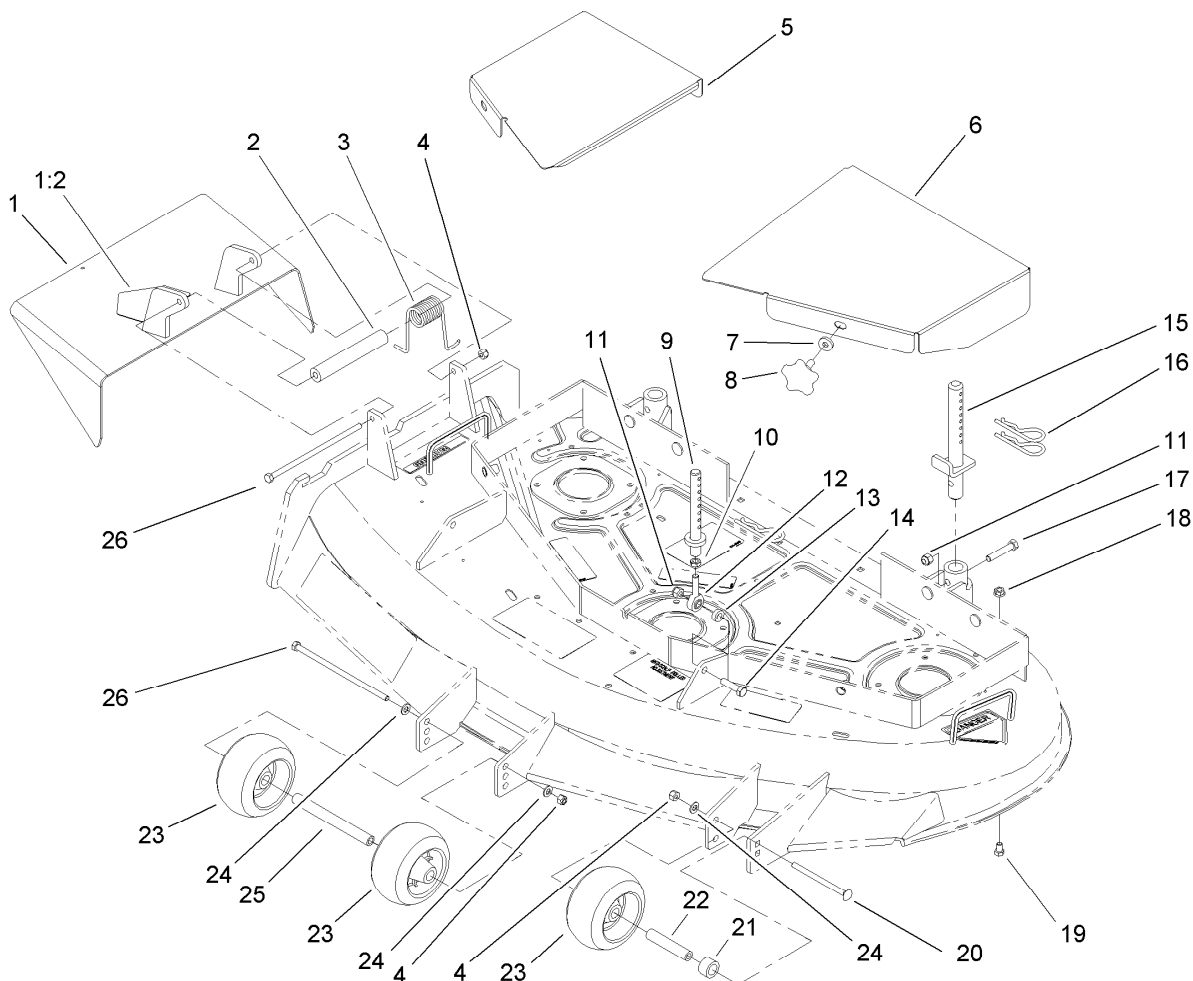

Deck Assembly


Ref.	Part Number	Qty.	Description
1	105-4625	1	Deflector ASM
1:2	93-1122	1	Decal-Danger
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	3	Nut-Lock, NI
5	106-3363-01	1	Cover-Belt, RH
6	106-3362-01	1	Cover-Belt, LH
7	106-0565	2	Washer-Rubber
8	106-0887	2	Knob
9	106-0684	2	Front Pin ASM
10	3220-3	2	Nut-HJ
11	3296-39	4	Nut-Lock, NI
12	1-613204	2	Balljoint
13	104-1156	2	Spacer

Ref.	Part Number	Qty.	Description
14	323-8	2	Screw-HH
15	106-3365	2	Rear Pin ASM
16	3290-256	6	Pin-Hair
17	323-10	2	Screw-HH
18	32128-20	4	Nut-HF
19	322-1	4	Screw-HH
20	3230-30	1	Screw-CARR
21	106-0563	1	Spacer-Wheel
22	106-0545	1	Bushing-Roller
23	68-2730	3	Wheel-Gage
24	3256-23	3	Washer-Flat
25	98-5967	1	Spacer-Wheel
26	322-50	2	Screw-HH

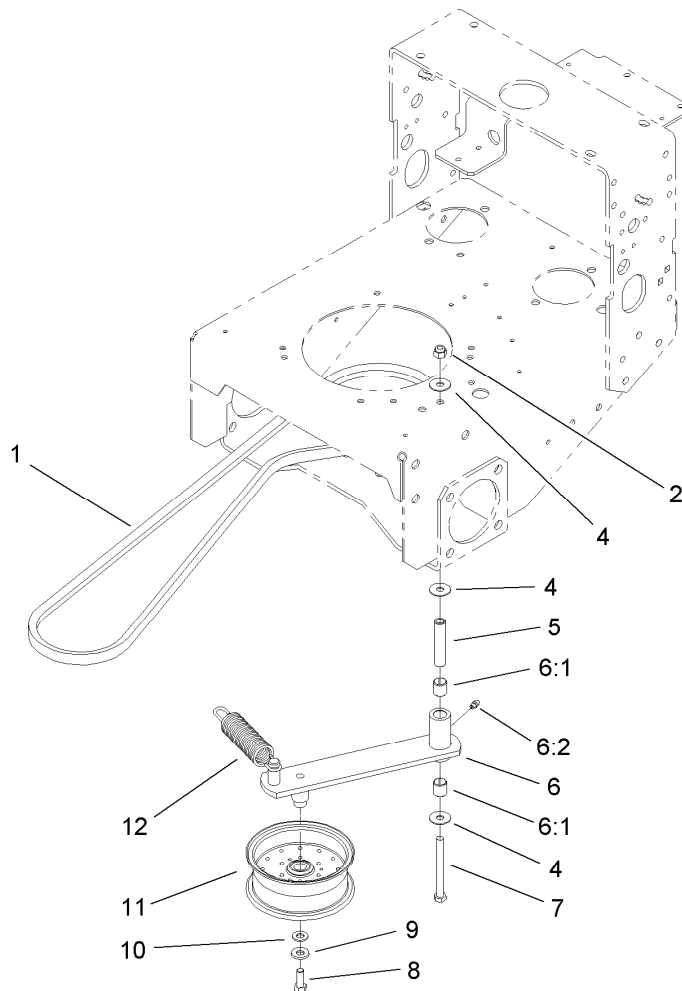

Drive Belt and Tensioner Assembly


Ref.	Part Number	Qty.	Description
1	104-8120	1	V-Belt, PTO
2	3296-39	1	Nut-Lock, NI
4	52-2860	3	Washer
5	104-6377	1	Tube-Idler
6	106-0734	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension

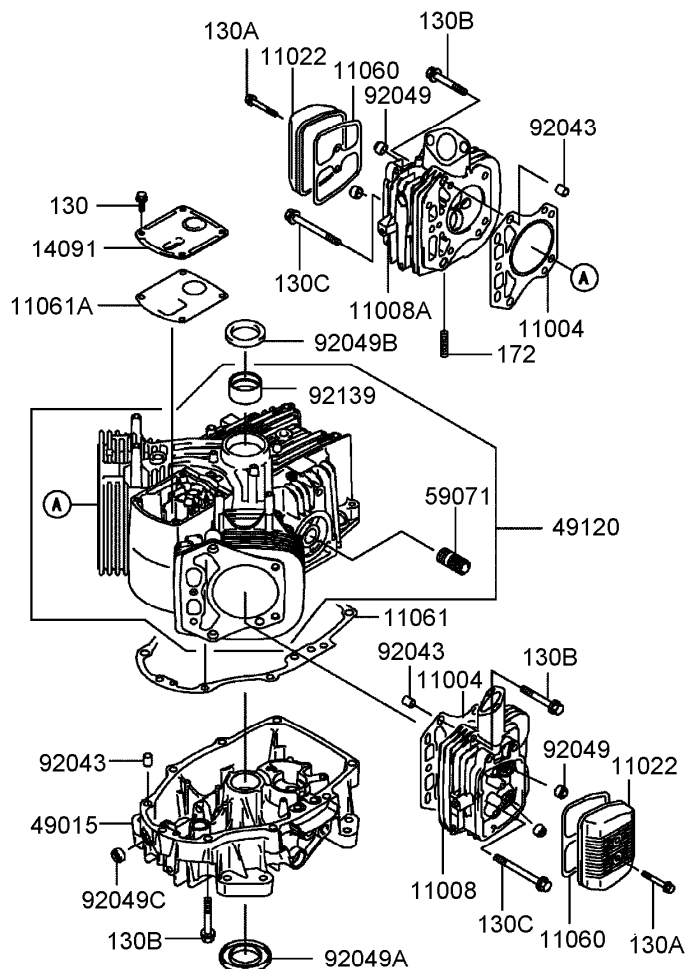

Cylinder and Crankcase Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
11004	11004-7008	2	Gasket-Head ●
11008	11008-7021	1	Head-Cylinder, No. 2 ●
11008A	11008-7022	1	Head-Cylinder, No. 1 ●
11022	11022-7003	2	Case-Rocker ●
11060	11060-7001	2	Gasket-Case, Rocker ●
11061	11061-7007	1	Gasket-Cover, Crankcase ●
11061A	11061-7008	1	Gasket-Breather ●
14091	14091-7007	1	Cover ●
49015	49015-7032	1	Cover-Crankcase ●
49120	49120-7015	1	Crankcase ●
59071	59071-2079	1	Joint ●
92043	92043-7001	6	Pin ●
92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2) ●
92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH) ●
92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH) ●
92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH) ●
92139	92139-7002	1	Bushing ●
130	130B0612	4	Bolt-Flanged (6X12) ●
130A	130B0640	4	Bolt-Flanged (6X40) ●
130B	130T0850	17	Bolt-Flanged (8X50) ●
130C	130T0875	2	Bolt-Flanged (8X75) ●
172	172G0818	4	Bolt-Stud (8X18) ●


● Obtain parts from www.kawpowerepc.com

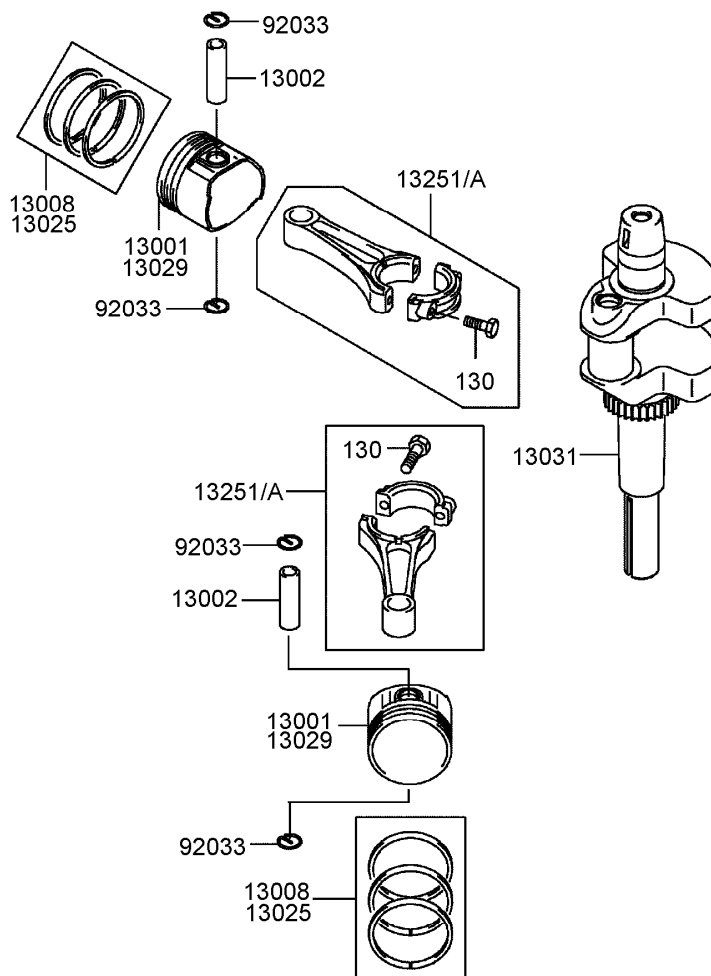

Piston and Crankshaft Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
13001	13001-7009	2	Piston-Engine ●
13002	13002-7001	2	Pin-Piston ●
13008	13008-7001	2	Piston Ring Set ●
13025	13025-7003	1	Piston Ring Set (L 0.50) ●
13029	13029-7005	1	Piston-Engine (L 0.50) ●
13031	13031-7033	1	Crankshaft ●
13251	13251-7007	2	Connecting Rod ASM ●
13251A	13251-7008	2	Connecting Rod ASM (0.50) ●
92033	92033-7005	4	Ring-Snap ●
130	130G0630	4	Bolt-Flanged (6X30) ●


● Obtain parts from www.kawpowerepc.com

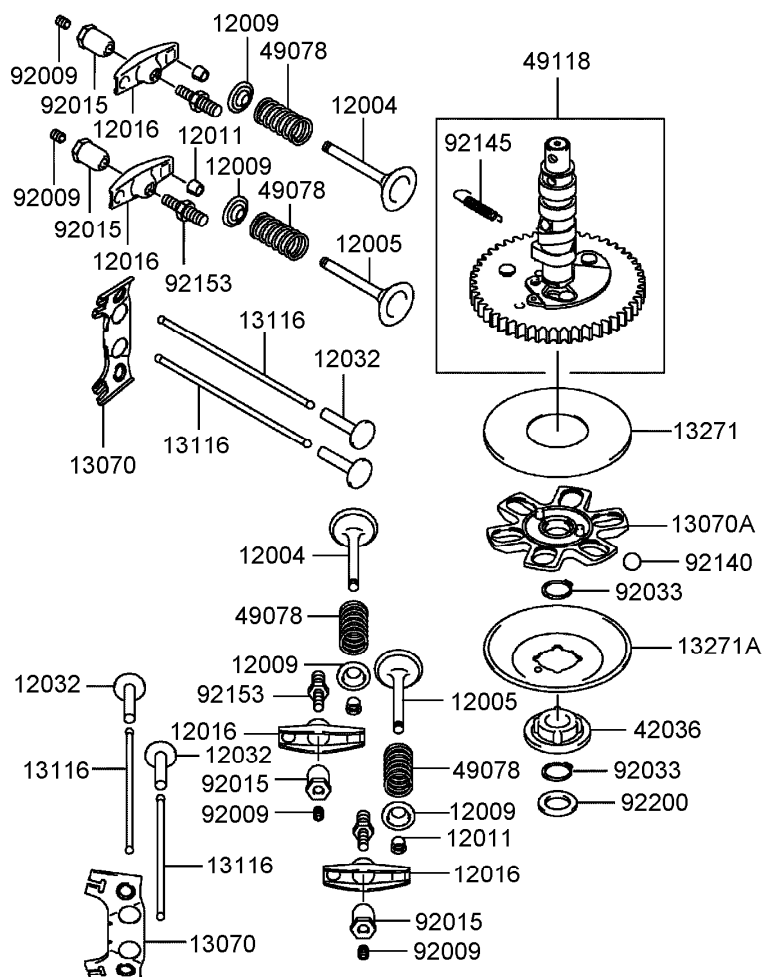

Valve and Camshaft Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
12004	12004-7003	2	Valve-Intake ●
12005	12005-7003	2	Valve-Exhaust ●
12009	12009-7001	4	Retainer-Spring, Valve ●
12011	12011-2056	8	Collet ●
12016	12016-7001	4	Arm-Rocker ●
12032	12032-7001	4	Tappet ●
13070	13070-7001	2	Guide ●
13070A	13070-7004	1	Guide ●
13116	13116-2057	4	Rod-Push ●
13271	13271-7007	1	Plate ●
13271A	13271-7021	1	Plate-Governor ●
42036	42036-7009	1	Sleeve ●
49078	49078-7001	4	Spring-Valve, Engine ●
49118	49118-7009	1	Camshaft ●
92009	92009-2341	4	Screw ●
92015	92015-2253	4	Nut ●
92033	92033-7001	2	Ring-Snap ●
92140	92140-7002	6	Ball ●
92145	92145-7001	1	Spring ●
92153	92153-7019	4	Bolt ●
92200	92200-7001	1	Washer ●


● Obtain parts from www.kawpowerepc.com

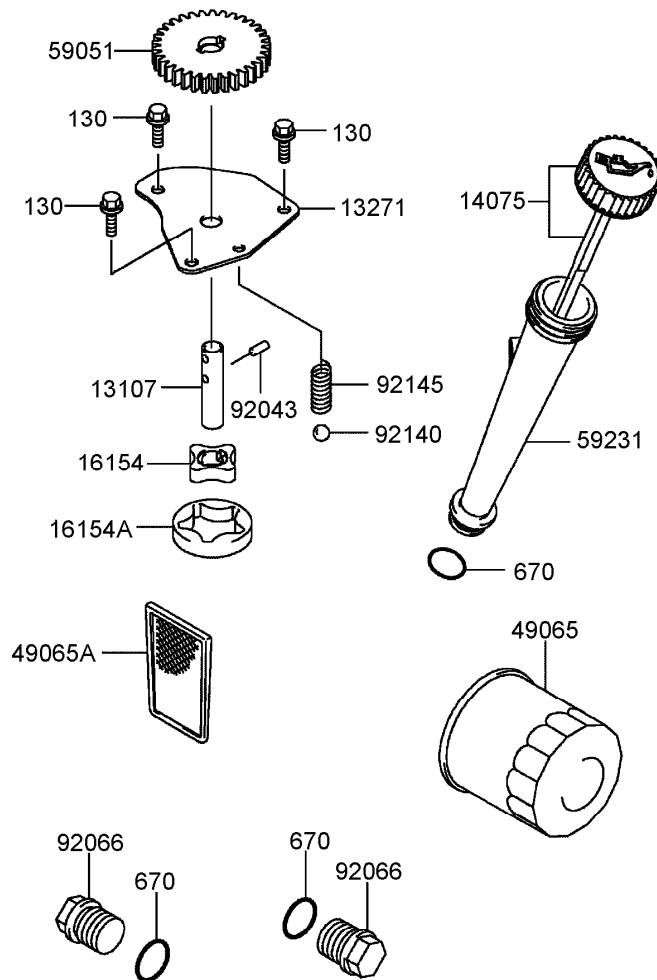

Lubrication Equipment Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
13107	13107-7009	1	Shaft ●
13271	13271-7017	1	Plate ●
14075	14075-7009	1	Cap ASM ●
16154	16154-2053	1	Rotor-Pump (In) ●
16154A	16154-2054	1	Rotor-Pump (Out) ●
49065	49065-2078	1	Filter-Oil ●
49065A	49065-7004	1	Filter-Oil ●
59051	59051-7011	1	Gear-Spur ●
59231	59231-7003	1	Filler ●
92043	92043-7003	2	Pin ●
92066	92066-7003	2	Plug ●
92140	92140-7003	1	Ball ●
92145	92145-7002	1	Spring ●
130	130B0612	3	Bolt-Flanged (6X12) ●
670	670D2016	3	O-Ring (16Mm) ●


● Obtain parts from www.kawpowerepc.com

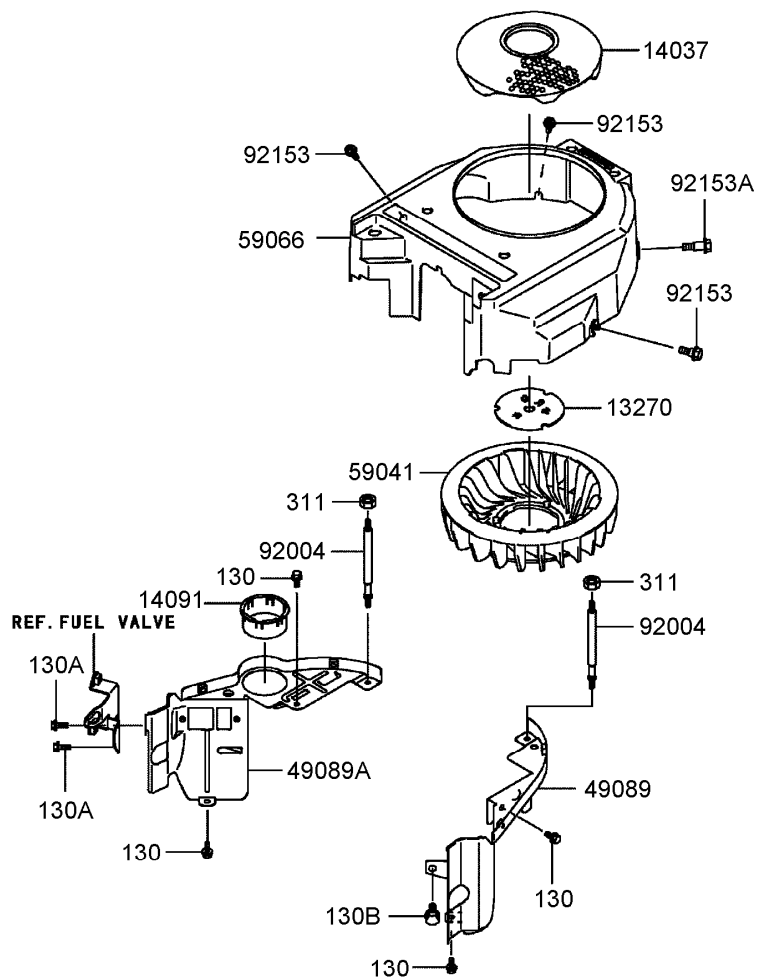

Cooling Equipment Assembly Kawasaki FH430V-AS28


Ref.	Part Number	Qty.	Description
13270	13270-7007	1	Plate ●
14037	14037-7021-9H	1	Screen ●
14091	14091-7009	1	Cover ●
49089	49089-7044	1	Shroud-Engine ●
49089A	49089-7045	1	Shroud-Engine ●
59041	59041-7010	1	Fan ●
59066	59066-7023	1	Housing-Fan ●
92004	92004-7007	2	Stud ●
92153	92153-7007	3	Bolt ●
92153A	92153-7008	1	Bolt ●
130	130B0612	4	Bolt-Flanged (6X12) ●
130A	130B0616	2	Bolt-Flanged (6X16) ●
130B	130B0816	1	Bolt-Flanged (8X16) ●
311	311F0600	2	Nut-Hex (6Mm) ●

● Obtain parts from www.kawpowerepc.com

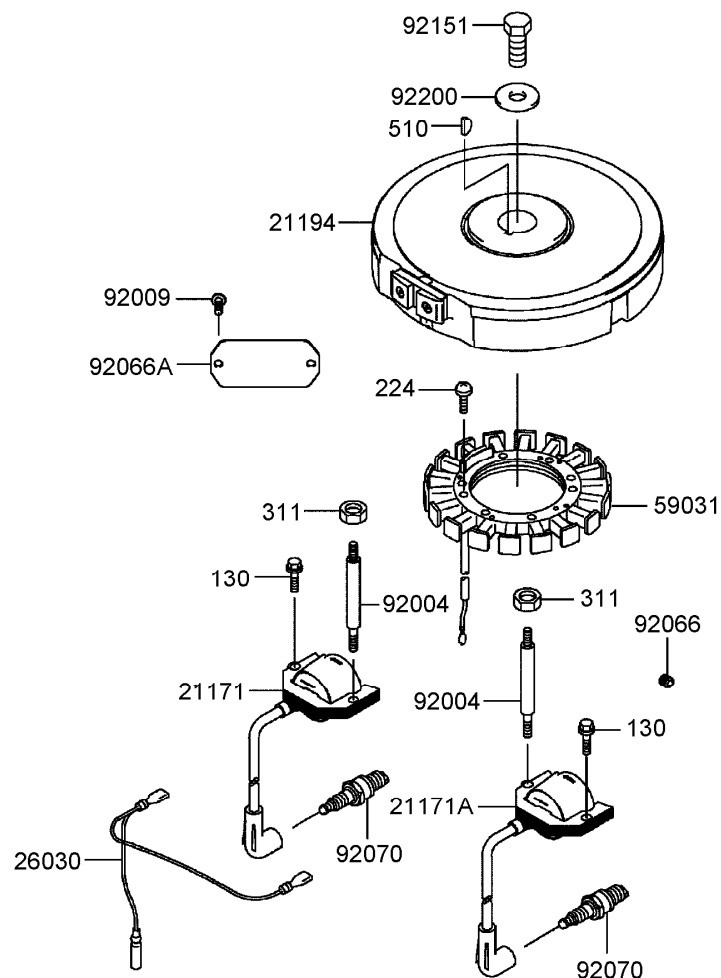

Electrical Equipment Assembly Kawasaki FH430V-AS28


Ref.	Part Number	Qty.	Description
21171	21171-7013	1	Ignition Coil ASM ●
21171A	21171-7014	1	Ignition Coil ASM ●
21194	21194-7012	1	Flywheel ●
26030	26030-7001	1	Harness ●
59031	59031-7002	1	Coil-Charging ●
92004	92004-7008	2	Stud ●
92009	92009-2308	2	Screw ●
92066	92066-7002	1	Plug ●
92066A	92066-7005	1	Plug ●
92070	92070-7003	2	Spark Plug (R C J 8 Y, Solid) ●
92151	92151-2097	1	Bolt (12X30) ●
92200	92200-7002	1	Washer ●
130	130B0620	2	Bolt-Flanged (6X20) ●
224	224B0520	4	Screw-Pan (5X20) ●
311	311F0600	2	Nut-Hex (6Mm) ●
510	510A5100	1	Key-Woodruff ●

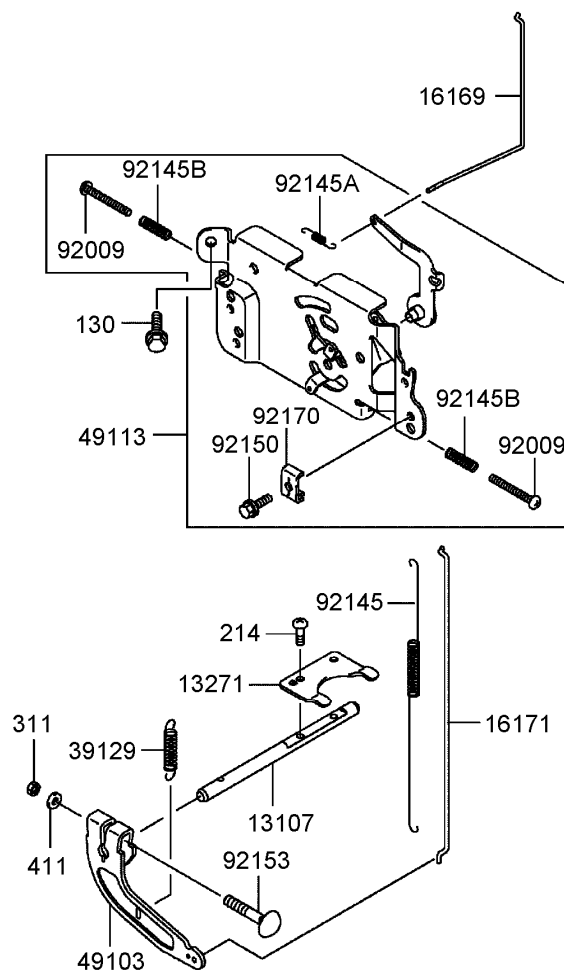

Control Euipment Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
13107	13107-7010	1	Shaft ●
13271	13271-7018	1	Plate ●
16169	16169-7012	1	Link-Choke ●
16171	16171-7007	1	Link ●
39129	39129-7003	1	Spring-Governor ●
49103	49103-7004	1	Arm-Governor ●
49113	49113-7027	1	Panel-Control ●
92009	92009-7007	2	Screw (4X35) ●
92145	92145-7003	1	Spring ●
92145A	92145-7004	1	Spring ●
92145B	92145-7005	2	Spring ●
92150	92150-2182	1	Bolt (5X18) ●
92153	92153-7005	1	Bolt (6X35) ●
92170	92170-7001	1	Clamp ●
130	130B0612	2	Bolt-Flanged (6X12) ●
214	214B0408	2	Screw-Pan (4X8) ●
311	311B0600	1	Nut-Hex (6Mm) ●
411	411B0600	1	Washer-Plain (6Mm) ●


● Obtain parts from www.kawpowerepc.com

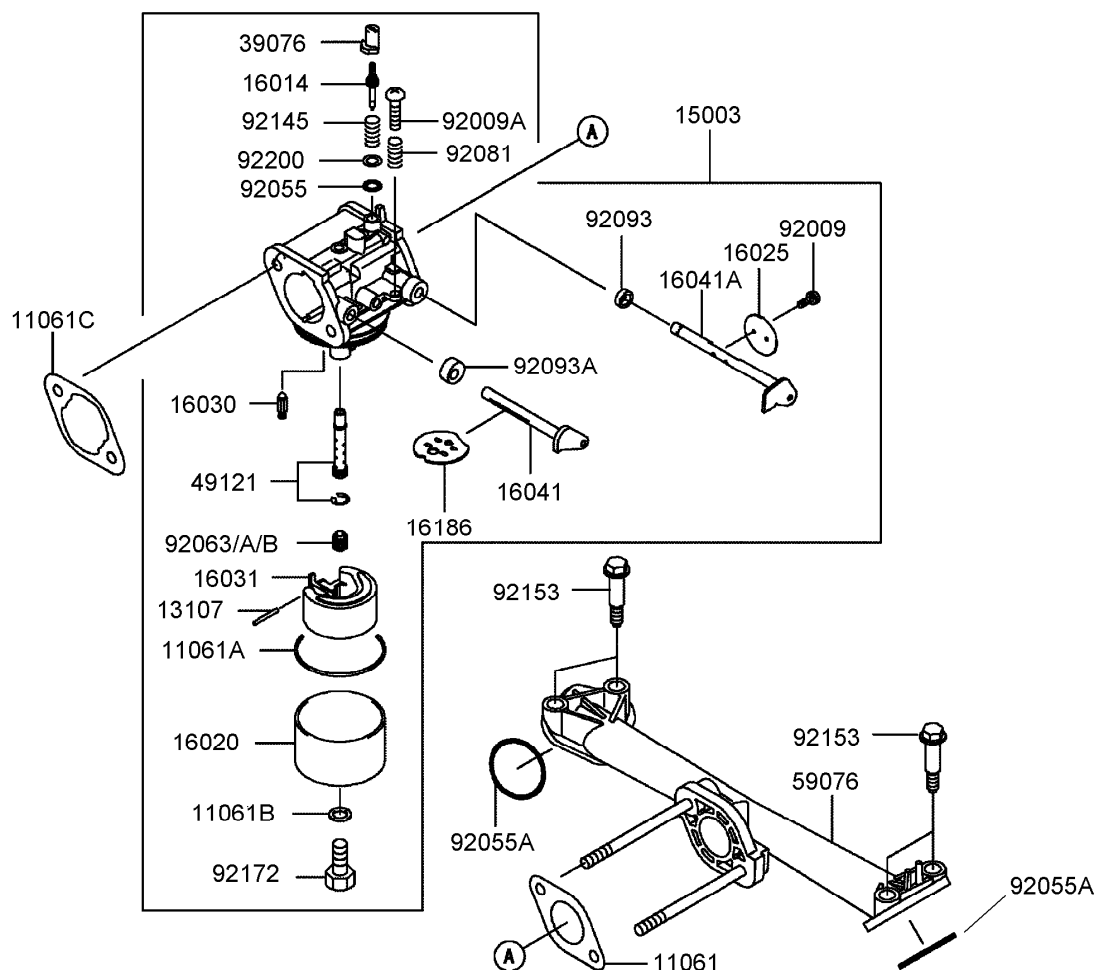

Carburetor Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
11061	11061-7004	1	Gasket-Insulator ●	59076	59076-7005	1	Manifold-Intake ●
11061A	11061-7009	1	Gasket-Chamber ●	92009	92009-2083	2	Screw ●
11061B	11061-7010	1	Gasket-Screw ●	92009A	92009-2349	1	Screw ●
11061C	11061-7018	1	Gasket-Cleaner, Air ●	92055	92055-2174	1	O-Ring ●
13107	13107-7018	1	Shaft ●	92055A	92055-7007	2	O-Ring (I D 31) ●
15003	15003-7061	1	Carburetor ASM ●	92063	92063-7026	1	Jet-Main, No. 88 ●
16014	16014-7002	1	Screw-Pilot, Air ●	92063A	92063-7028	1	Jet-Main, No. 85 (3280 Ft) ●
16020	16020-7003	1	Chamber-Float ●	92063B	92063-7029	1	Jet-Main, No.82 (6560 Ft) ●
16025	16025-7006	1	Valve-Throttle ●	92081	92081-2234	1	Spring ●
16030	16030-7003	1	Valve-Float ●	92093	92093-2100	1	Seal ●
16031	16031-7002	1	Float ●	92093A	92093-7003	1	Seal ●
16041	16041-7016	1	Shaft-Choke, Carburetor ●	92145	92145-7015	1	Spring ●
16041A	16041-7018	1	Shaft-Throttle, Carburetor ●	92153	92153-7009	4	Bolt ●
16186	16186-7002	1	Choke Valve ASM ●	92172	92172-7002	1	Screw ●
39076	39076-7001	1	Limiter ●	92200	92200-7014	1	Washer ●
49121	49121-7001	1	Nozzle-Main ●				

● Obtain parts from www.kawpowerepc.com

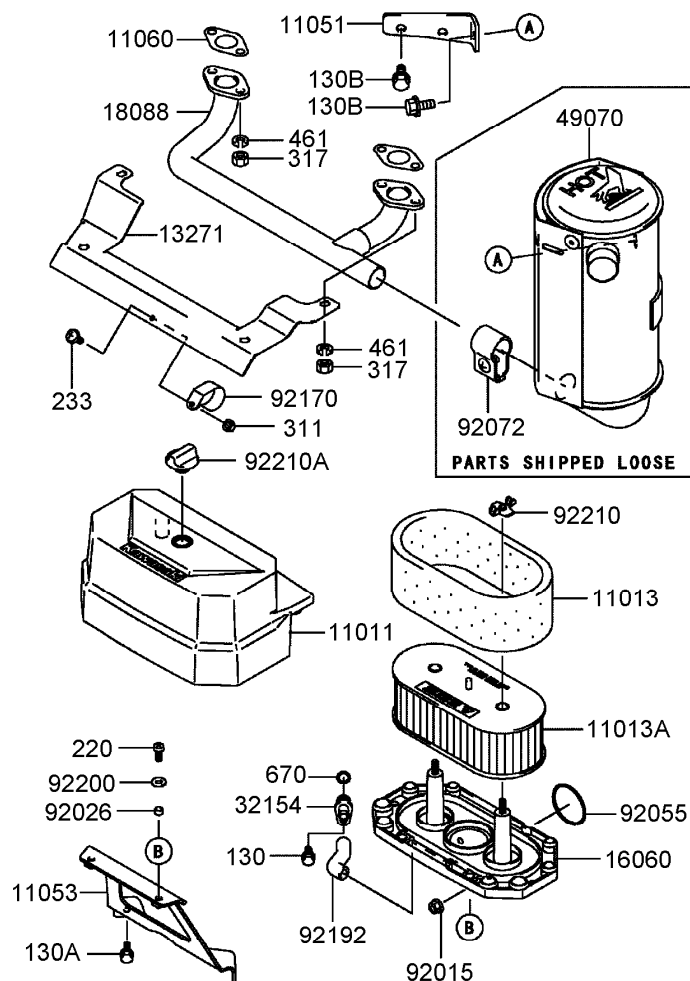


Air Filter and Muffler Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
11011	11011-7035	1	Case-Filter, Air ●
11013	11013-7025	1	Element-Filter, Air ●
11013A	11013-7031	1	Element-Filter, Air ●
11051	11051-7005-9H	1	Bracket ●
11053	11053-7022	1	Bracket ●
11060	11060-7021	2	Gasket-Muffler ●
13271	13271-7022	1	Plate ●
16060	16060-7016	1	Pipe-Intake ●
18088	18088-7001	1	Pipe-Exhaust ●
32154	32154-7006	1	Pipe ●
49070	49070-7015	1	Muffler ●
92015	92015-1193	2	Nut ●
92026	92026-7001	2	Spacer (6.2X7.9X5) ●
92055	92055-7015	1	O-Ring ●
92072	92072-7008	1	Band ●

Ref.	Part Number	Qty.	Description
92170	92170-7002	1	Clamp ●
92192	92192-7010	1	Tube ●
92200	92200-2070	2	Washer ●
92210	92210-7004	2	Nut (M6) ●
92210A	92210-7019	1	Nut ●
130	130B0610	1	Bolt-Flanged (6X10) ●
130A	130B0612	2	Bolt-Flanged (6X12) ●
130B	130B0816	2	Bolt-Flanged (8X16) ●
220	220B0614	2	Screw-Pan, Cross (6X14) ●
233	233B0416	1	Screw (4X16) ●
311	311B0400	1	Nut-Hex (4Mm) ●
317	317R0800	4	Nut-Hex, Small (8Mm) ●
461	461F0800	4	Washer-Spring (8Mm) ●
670	670B2010	1	O-Ring (10Mm) ●


● Obtain parts from www.kawpowerepc.com

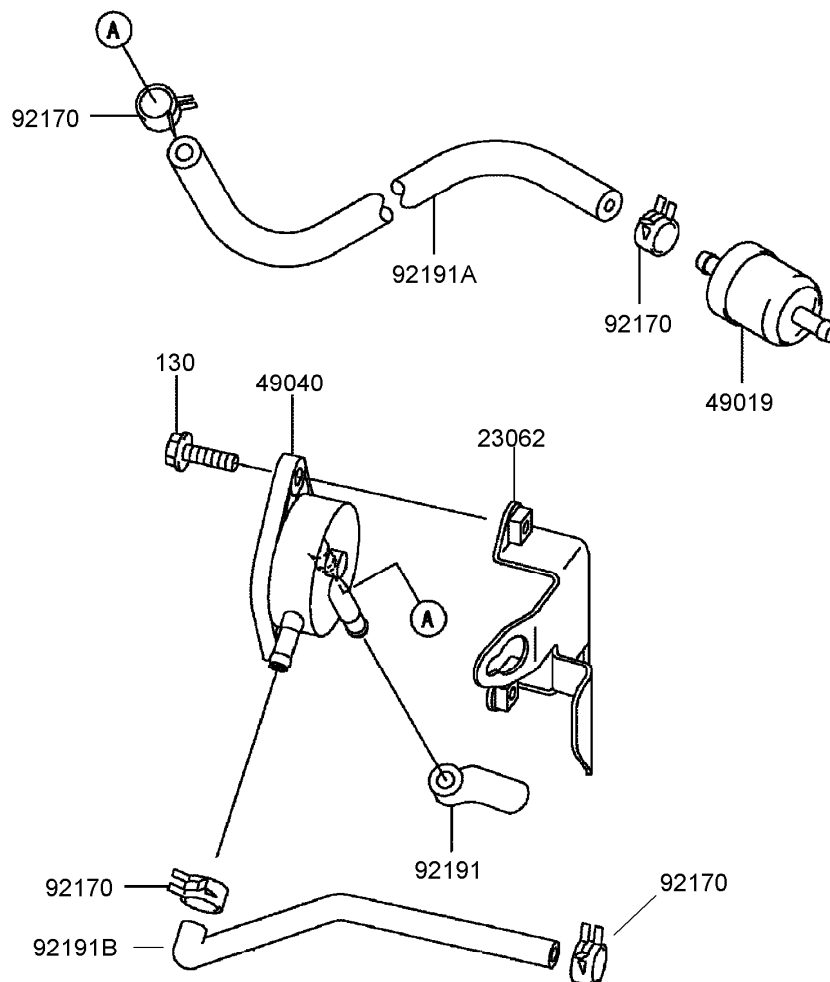

Fuel Valve Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
23062	23062-7004-9H	1	Bracket ●
49019	49019-7001	1	Filter-Fuel ●
49040	49040-7001	1	Pump-Fuel ●
92170	92170-2088	4	Clamp ●
92191	92191-7002	1	Tube ●
92191A	92191-7003	1	Tube (6.35X12.7X160) ●
92191B	92191-7004	1	Tube ●
130	130B0620	2	Bolt-Flanged (6X20) ●

● Obtain parts from www.kawpowerepc.com

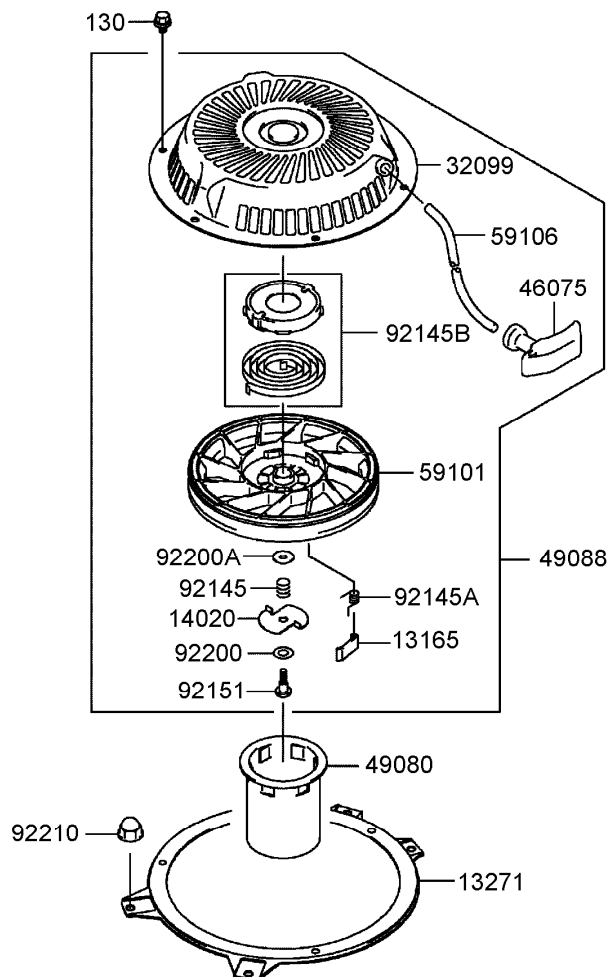

Starter Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
13165	13165-7001	2	Pawl-Starter, Recoil ●
13271	13271-7003-9H	1	Plate ●
14020	14020-7001	1	Retainer ●
32099	32099-7002	1	Case-Starter, Recoil ●
46075	46075-7001	1	Grip-Starter, Recoil ●
49080	49080-7001	1	Pulley-Starting ●
49088	49088-7013	1	Starter-Recoil ●
59101	59101-7001	1	Reel-Starter, Recoil ●
59106	59106-7001	1	Rope ●
92145	92145-7006	1	Spring ●
92145A	92145-7007	2	Spring ●
92145B	92145-7008	1	Spring ●
92151	92151-7008	1	Bolt ●
92200	92200-7004	1	Washer ●
92200A	92200-7005	1	Washer ●
92210	92210-0003	4	Nut ●
130	130B0608	3	Bolt-Flanged (6X8) ●

● Obtain parts from www.kawpowerepc.com



56033



56070



56080

56080A



Decal Assembly Kawasaki FH430V-AS28

Ref.	Part Number	Qty.	Description
56033	56033-7001	1	Label-Manual ●
56070	56070-7001	1	Label-Warning ●
56080	56080-2077	1	Label-Brand ●
56080A	56080-7024	1	Label-Brand ●

Attachments and Accessories

For 30437 Commercial Walk-Behind Mower 15 HP Pistol Grip Gear Drive with 44in Side Discharge Cutting Unit

Product Name	Model/Part
Atomic Blade	104-1300
Striping Kit	106-3370
Soft Bag (3 Bushel).....	30104
Steel Grass Catcher	30107
Tru Trak Sulky.....	30110
High Lift Blade	55-4940-03
Recycler Kit	59220
Recycler Kit (MS / ZRT)	59226
Recycler Blade	92-7952-03

Notes:

Notes:



Count on it.