



Count on it.

Parts Catalog

GrandStand® Mower

With 48in TURBO FORCE® Cutting Unit

Model No. 79548—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Frame Assembly.....	4
Wheel and Bearing Assembly No. 112-3810.....	6
Parking Brake Assembly.....	7
Decklift Assembly.....	8
Platform Assembly.....	10
Cushion Assembly No. 117-9770.....	11
Platform Assembly No. 117-9640.....	12
Ground Drive Assembly.....	13
Hydraulic Motor Assembly No. 114-0549.....	15
Hydraulic Pump Assembly No. 117-3597.....	16
Pump Idler Assembly.....	17
Control Assembly.....	18
Engine Assembly.....	20
Fuel Tank Assembly.....	21
Electrical Assembly.....	22
Carbon Canister Assembly.....	23
Deck Assembly.....	24
Deck Assembly No. 117-5764.....	25
Spring Idler Assembly No. 117-0445.....	26
Idler Adjust Assembly No. 117-0446.....	27
Spindle Assembly No. 117-6158.....	28
Deflector Assembly No. 114-1910.....	29
Attachments and Accessories.....	30

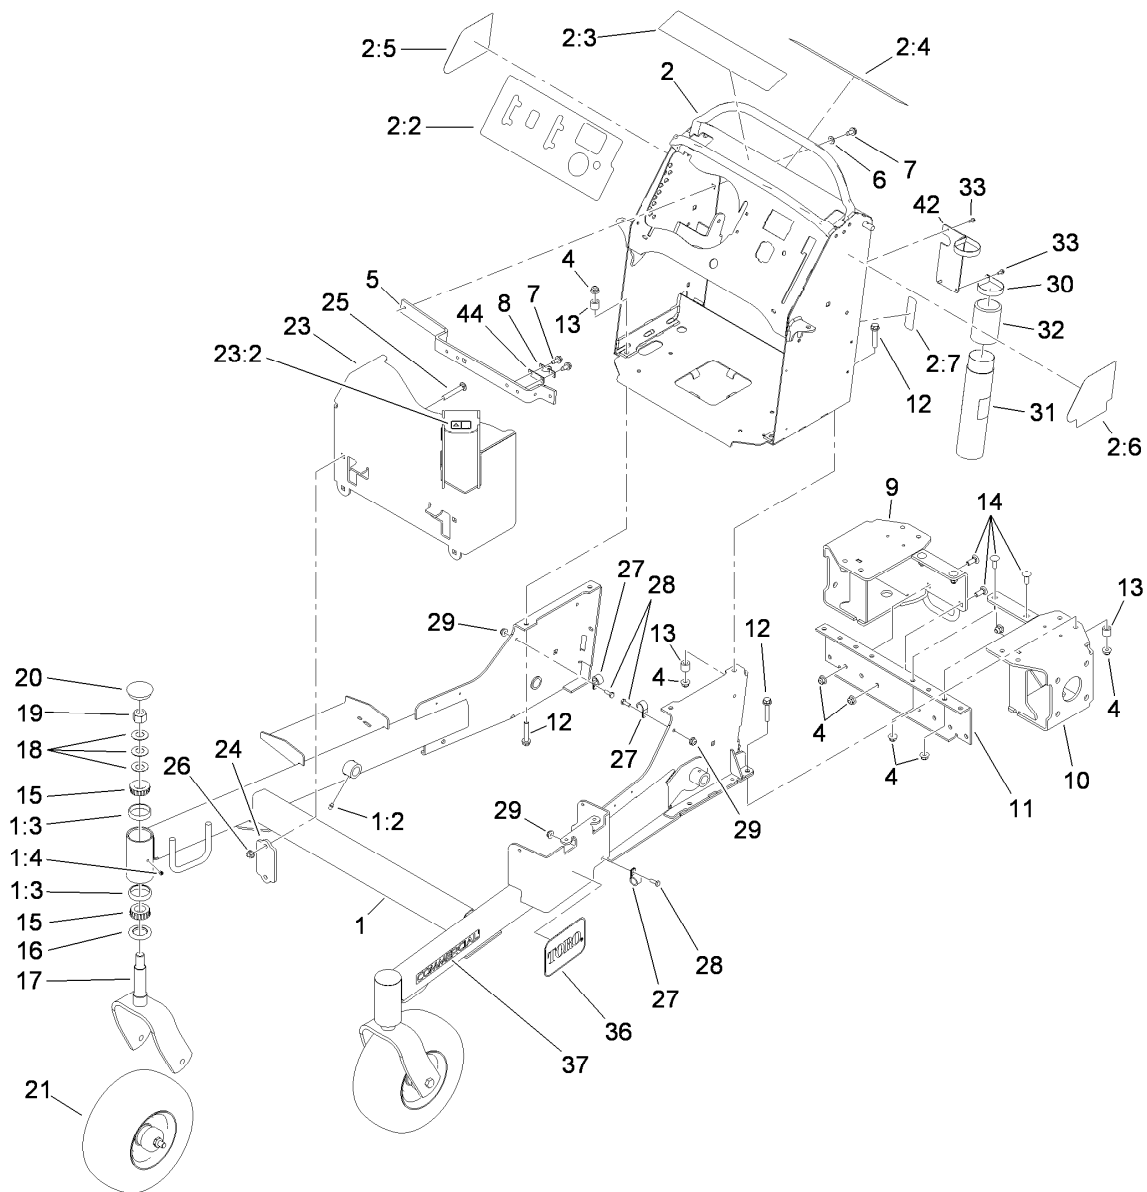

Frame Assembly

Ref.	Part Number	Qty.	Description
1	117-9690	1	Front Frame ASM
1:2	302-5	2	Fitting-Grease
1:3	1-543508	4	Cup-Bearing
1:4	1-811010	2	Plug
2	119-7246	1	Control Tower ASM
2:2	119-7245	1	Decal-Panel, Control
2:3	117-0454	1	Decal-Opc
2:4	117-3626	1	Decal-Warning
2:5	117-0456	1	Decal-HOC
2:6	117-0485	1	Decal-Aid, Service
2:7	116-3267	1	Decal-Fuse
4	104-8301	16	Nut-Flange, NI
5	114-1921-03	1	Bar-Cable
6	3256-23	2	Washer-Flat
7	32144-70	6	Screw-HWHTF
8	93-2279	2	Clamp-Cable
9	119-7222-01	1	RH Motor Mount ASM
10	119-7220-01	1	LH Motor Mount ASM
11	119-7224-01	1	Mount-Motor, Center
12	108-3742	8	Screw-HHF
13	98-8895	8	Spacer


Ref.	Part Number	Qty.	Description
14	3231-22	8	Screw-CARR
15	1-543509	4	Bearing-Roller, Tapered
16	1-543511	2	Seal-Grease
17	103-8618-01	2	Fork-Caster
18	1-633508	6	Washer-Bellville
19	3296-51	2	Nut-Lock, NI
20	103-4882	2	Cap-Grease
21	112-3810	2	Wheel And Bearing ASM
23	119-0230	1	Muffler Guard ASM
23:2	106-5517	1	Decal-Surface, Hot
24	119-7303-01	2	Bracket-Mounting, Guard
25	3231-31	4	Screw-CARR
26	32128-21	4	Nut-HF
27	2412-87	2	Clamp-Cable
28	321-4	3	Screw-HH
29	104-7201	3	Nut-HF
30	2412-120	2	R-Clamp
31	104-7050	1	Tube-Manual
32	104-7048	1	Cap-Housing
33	32144-1	4	Screw-Taptite
36	68-3640	1	Decal

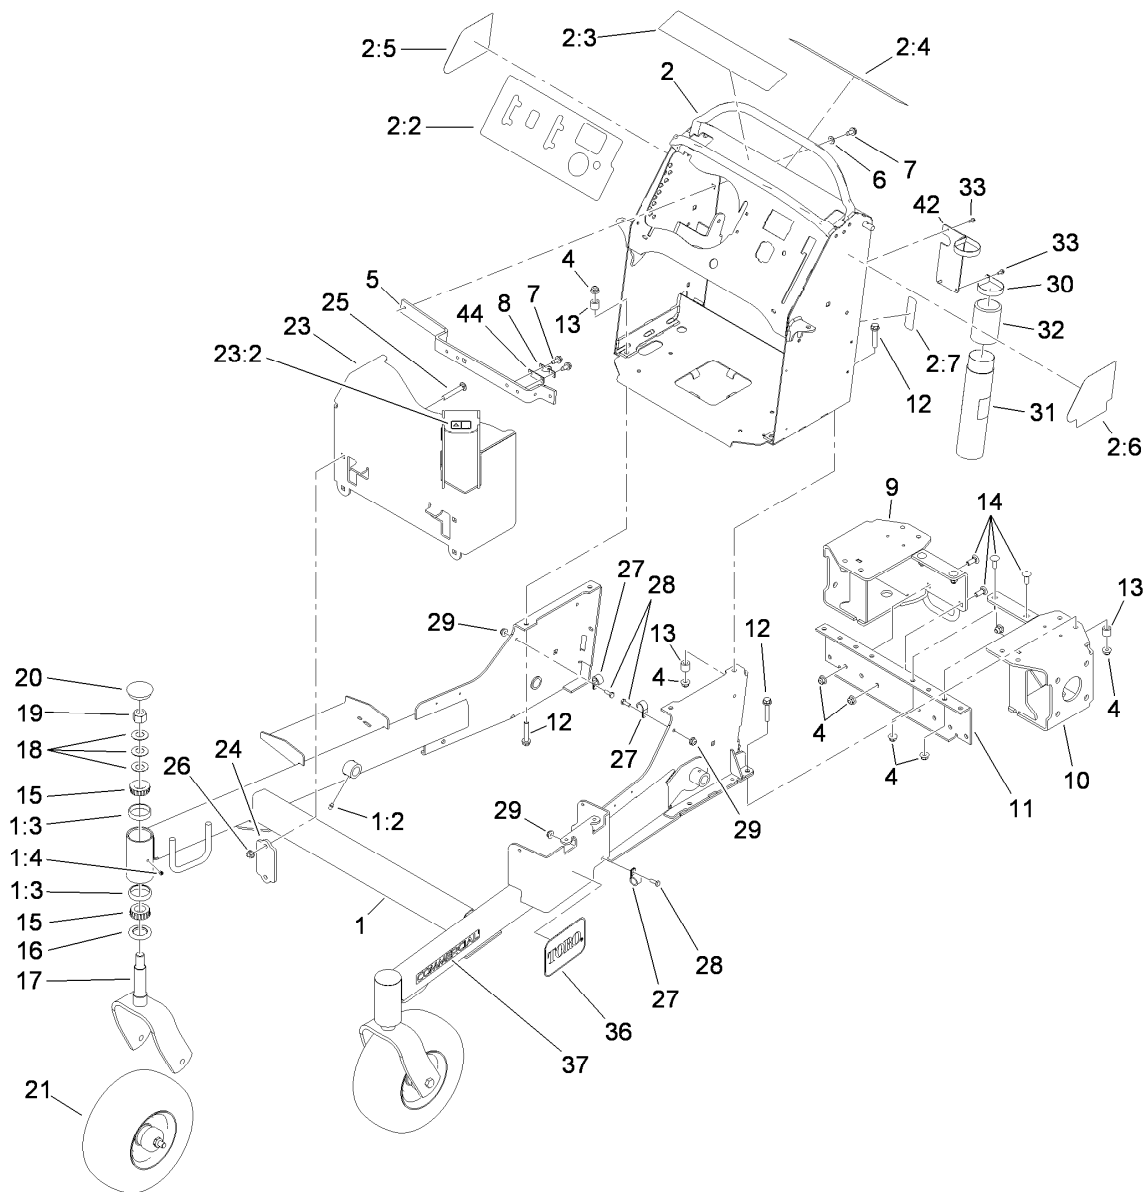

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
37	117-3591	2	Decal-Commercial


Ref.	Part Number	Qty.	Description
42	117-9745-01	1	Plate-Manual
44	119-2445	2	Shim-Cable

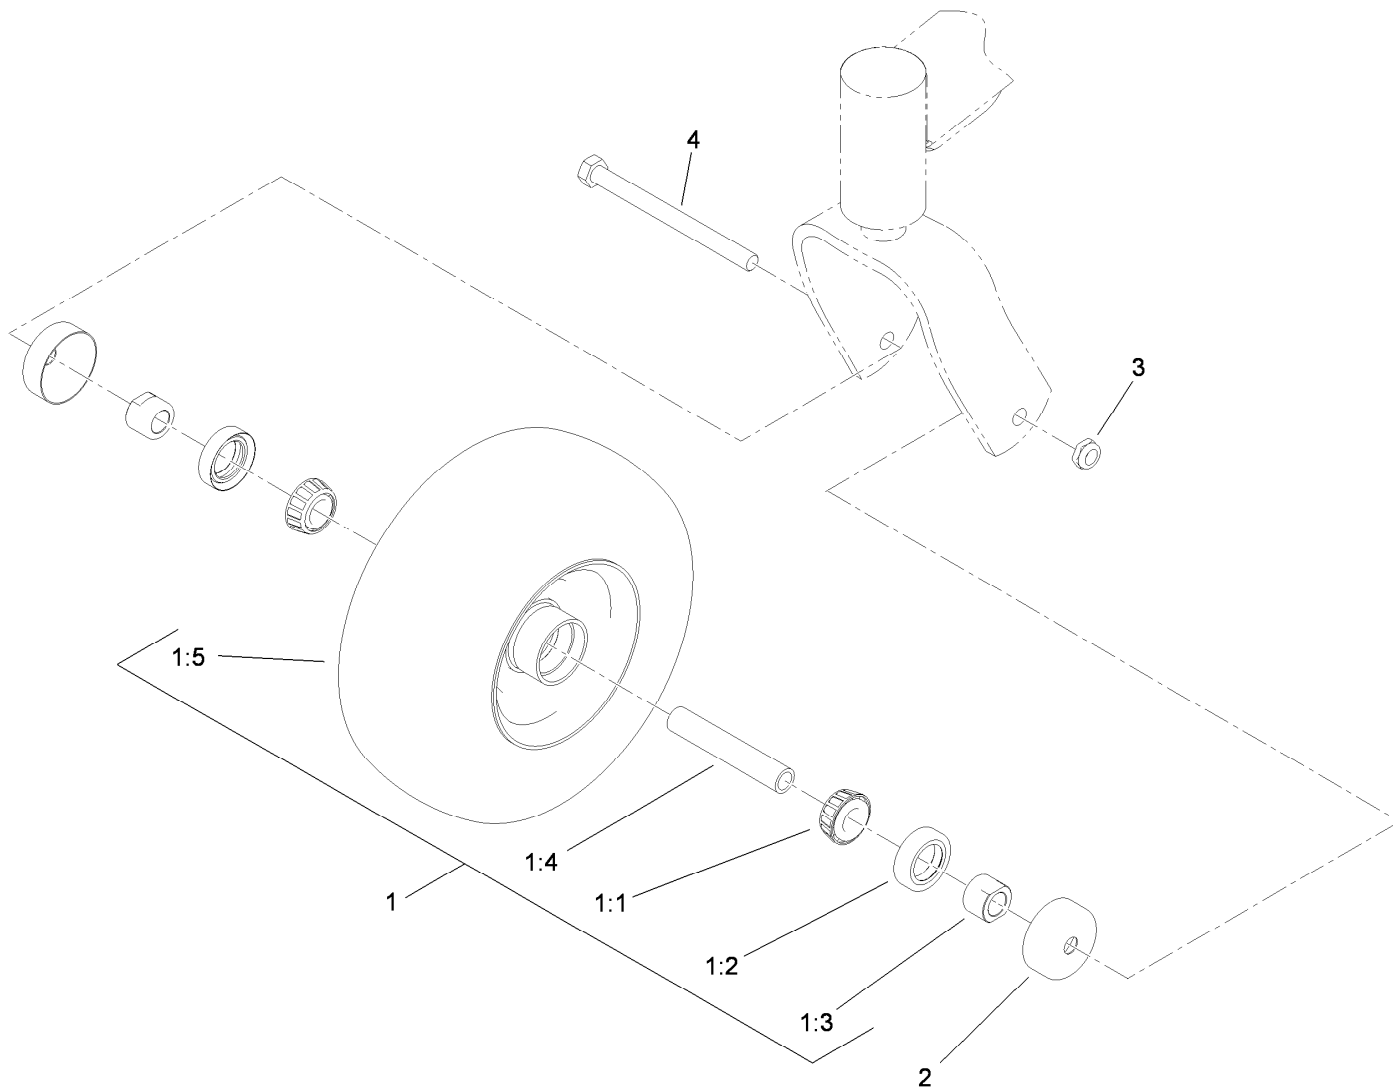

Wheel and Bearing Assembly No. 112-3810

Ref.	Part Number	Qty.	Description
1		1	Wheel And Bearing ASM ●
1:1	1-633585	2	Bearing-Cone, Taper
1:2	103-0063	2	Seal-Caster
1:3	103-3051	2	Spacer-Nut
1:4	103-3157	1	Axle-Caster
1:5	110-9965	1	Wheel And Tire ASM
2	103-2768	2	Guard-Seal
3	3296-45	1	Nut-Lock, NI
4	325-20	1	Screw-HH


● Not serviced separately

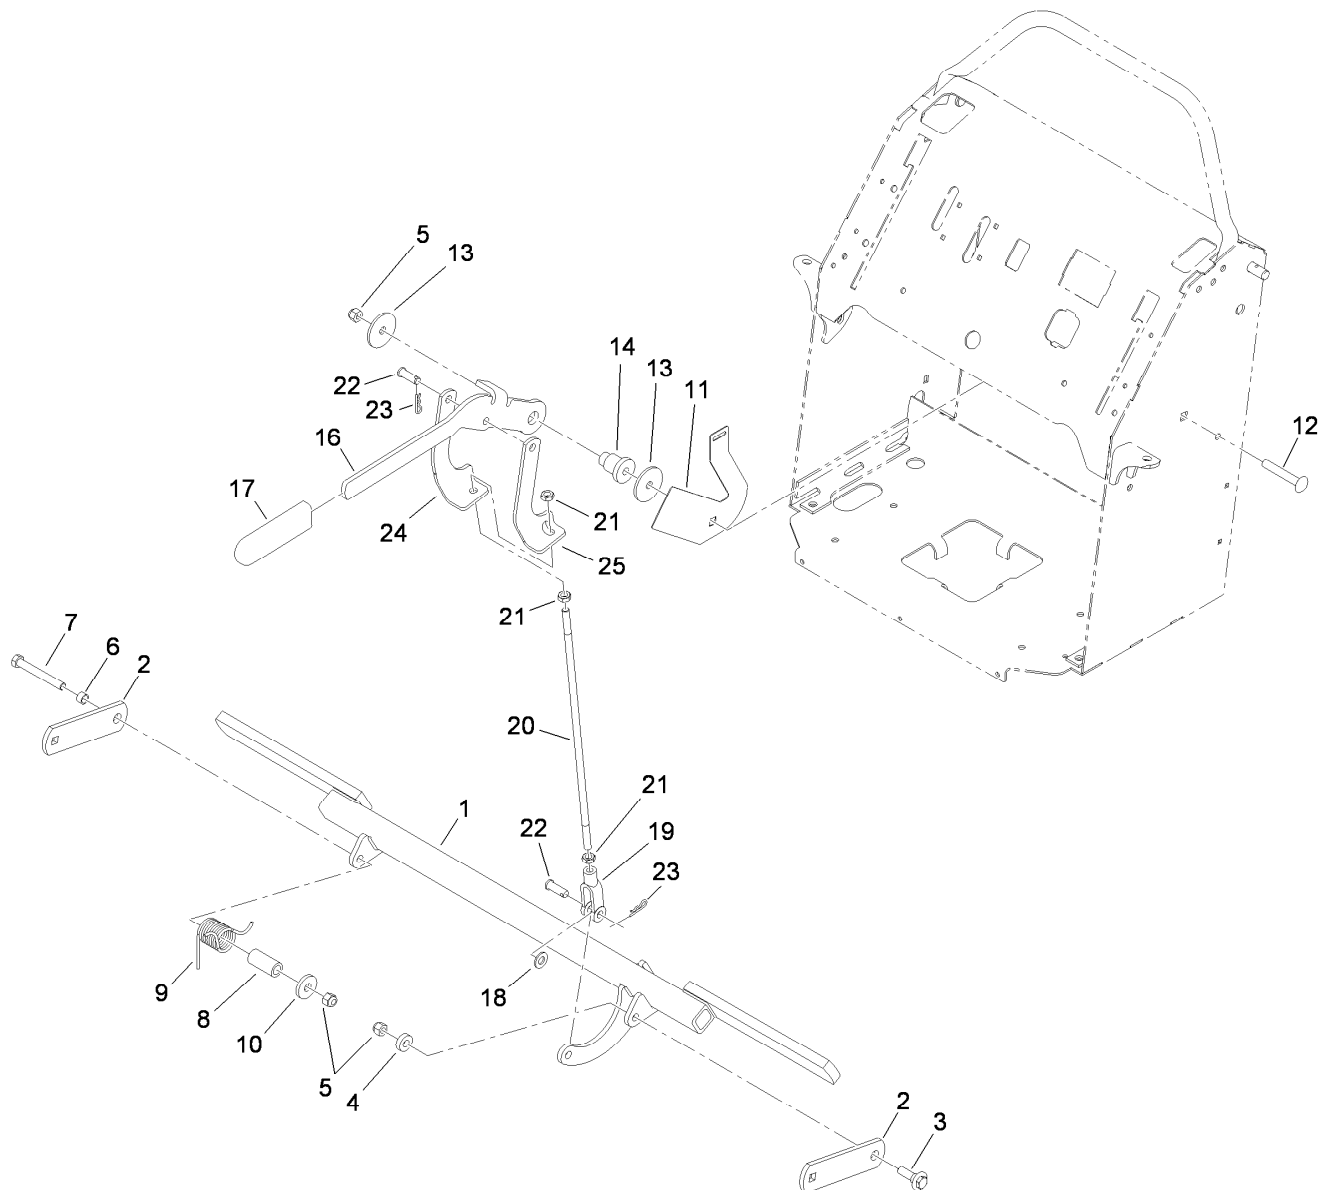

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	117-2660-03	1	Brake ASM
2	114-5186-01	2	Support-Brake
3	614672	1	Bolt-Shoulder
4	5-0652	1	Spacer
5	3296-39	3	Nut-Lock, NI
6	117-9684	1	Spacer
7	323-14	1	Screw-HH
8	117-9683	1	Spacer
9	117-9682	1	Spring-Torsion
10	1-373034	1	Washer
11	117-0452-03	1	Plate-Switch, Brake
12	3231-44	1	Screw-CARR


Ref.	Part Number	Qty.	Description
13	63-7400	2	Washer-Rebound
14	106-3214	1	Mount-Pulley
16	117-5759-03	1	Lever-Brake
17	1-633268	1	Grip-Lever
18	3256-24	1	Washer-Flat
19	1-633131	1	Yoke-Linkage, Brake
20	119-7244	1	Rod-Brake
21	3220-3	3	Nut-HJ
22	283-2	2	Pin-Clevis
23	3290-307	2	Pin-Hair
24	119-7242-03	1	Arm-Brake, Bottom
25	119-7243-03	1	Arm-Brake, Top

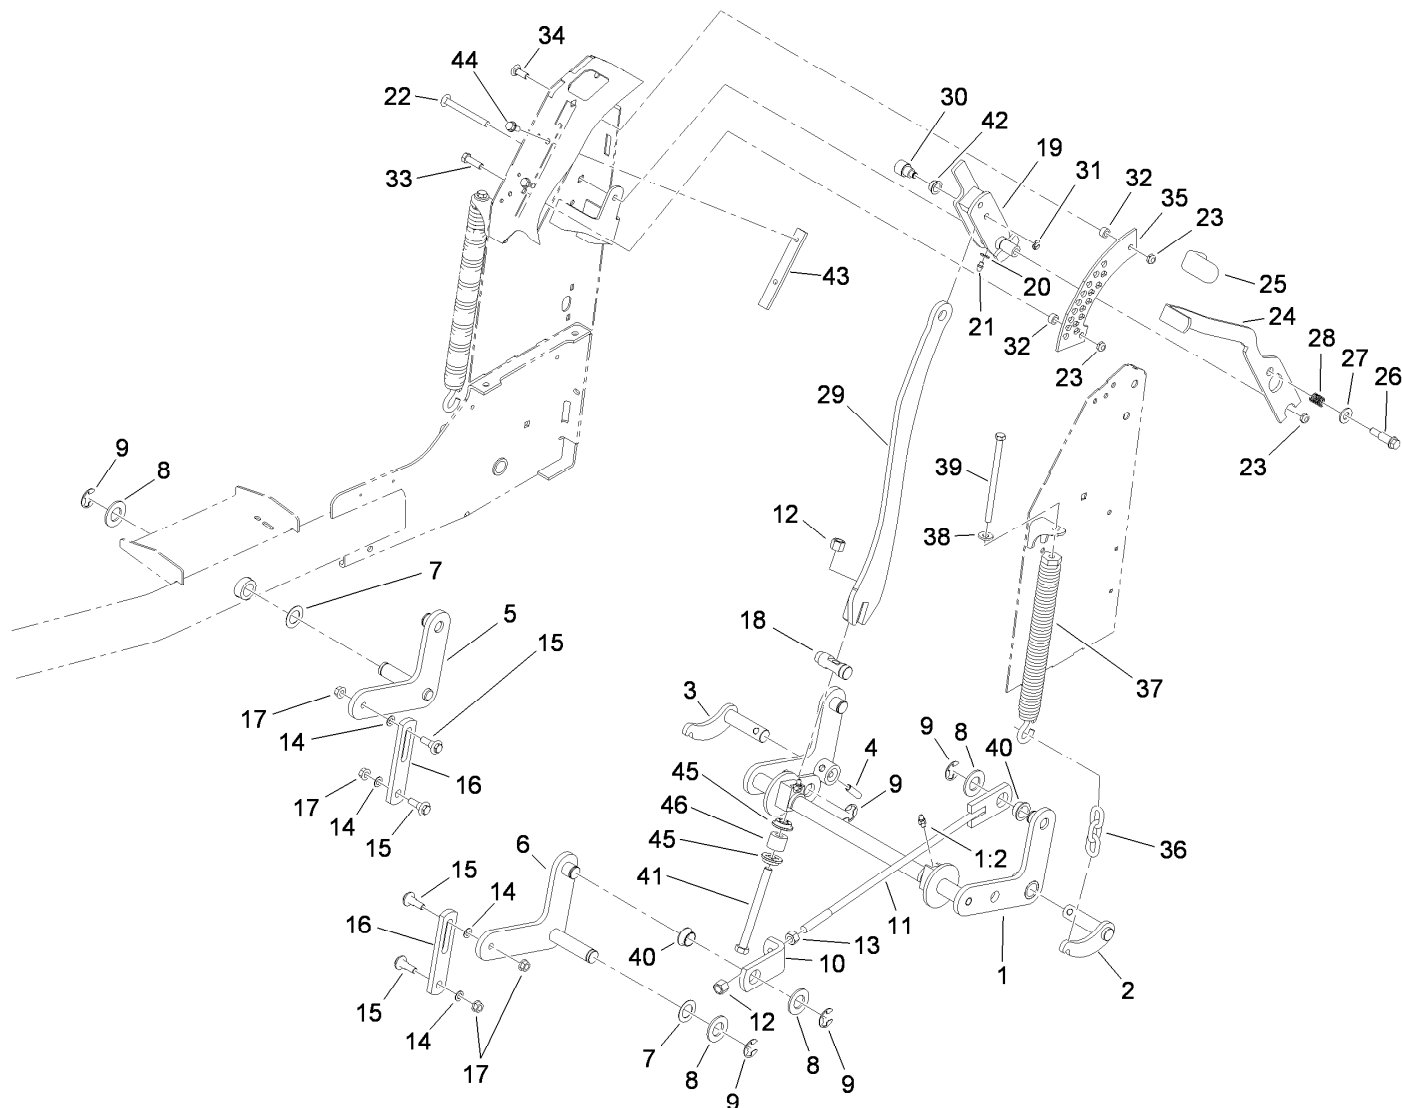

Decklift Assembly

Ref.	Part Number	Qty.	Description
1	116-3103	1	Rear Crossshaft ASM
1:2	302-11	2	Fitting-Lube, 45 DEG
2	116-3104-01	1	LH Pivot Shaft ASM
3	116-3105-01	1	RH Pivot Shaft ASM
4	116-3107	2	Pin-Spiral
5	117-0489-01	1	RH Lift ASM
6	117-0488-01	1	LH Lift ASM
7	110-6767	2	Washer-Thrust
8	3256-29	6	Washer-Flat
9	32151-103	7	Ring-Retaining, EXT
10	116-2901	2	Bracket-Lift Rod
11	116-2902	2	Lift Rod ASM
12	3296-23	3	Nut-Lock, NI
13	3217-9	2	Nut-HH
14	40-1940	4	Washer
15	109-9840	4	Screw-Shoulder, HHF
16	117-0519	2	Link-Lift
17	32128-21	4	Nut-HF
18	114-5274	1	Pin-HOC
19	114-3512	1	HOC Handle ASM
20	3256-22	1	Washer-Flat


Ref.	Part Number	Qty.	Description
21	302-5	1	Fitting-Grease
22	3231-24	1	Screw-CARR
23	3296-59	3	Nut-Lock, NI
24	114-1878-03	1	Lever-HOC
25	1-633268	1	Grip-Lever
26	66-0561	1	Screw-Shoulder
27	3256-26	1	Washer-Flat
28	65-9940	1	Spring
29	116-2939	1	Bar-Lift
30	116-3048	1	Hub-Pivot
31	32151-47	1	Ring-Retaining
32	111044	2	Spacer
33	323-7	1	Screw-HH
34	3231-22	1	Screw-CARR
35	114-5307	1	Bracket-HOC
36	103-9859	2	Chain-Decklift, Front
37	116-0886	2	Extension Spring ASM
38	98-5975	2	Washer-Belleville
39	323-58	2	Bolt-TAP, HH
40	116-2909	4	Bearing-Flange
41	325-22	1	Screw-HH

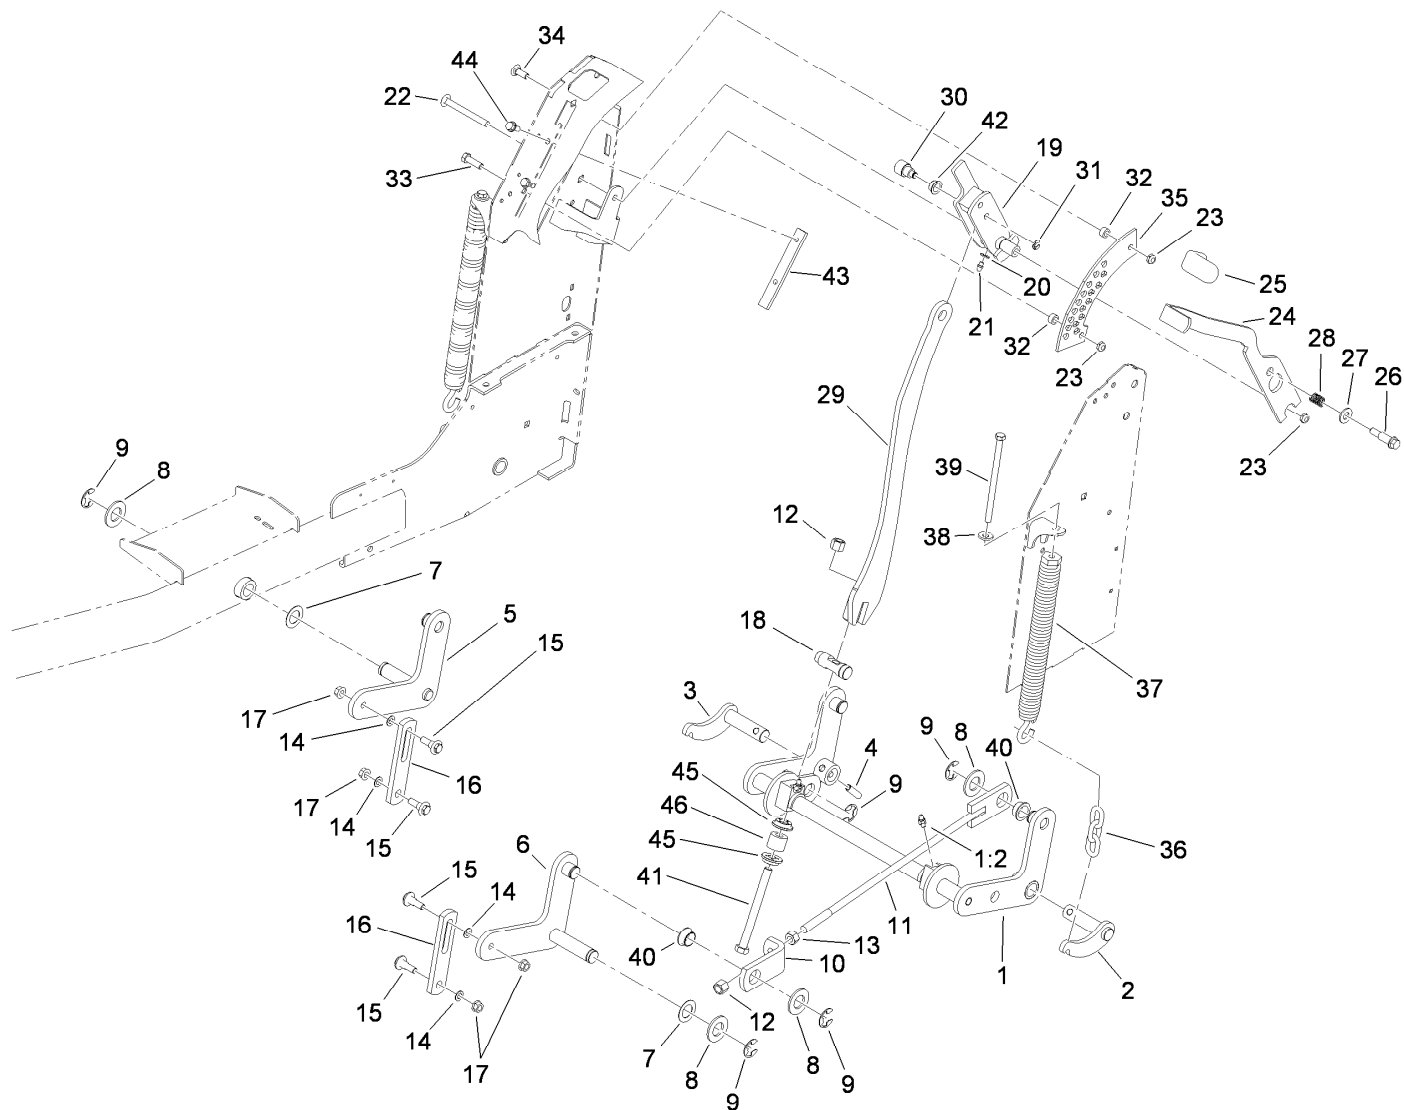

Decklift Assembly (continued)


Ref.	Part Number	Qty.	Description
42	116-3047	1	Bearing-Flange
43	116-3124	1	Skid-Handle, Lift
44	32144-11	2	Screw-HWHTF

Ref.	Part Number	Qty.	Description
45	116-3240	2	Seat-Spring
46	116-3241	1	Spring-Urethane

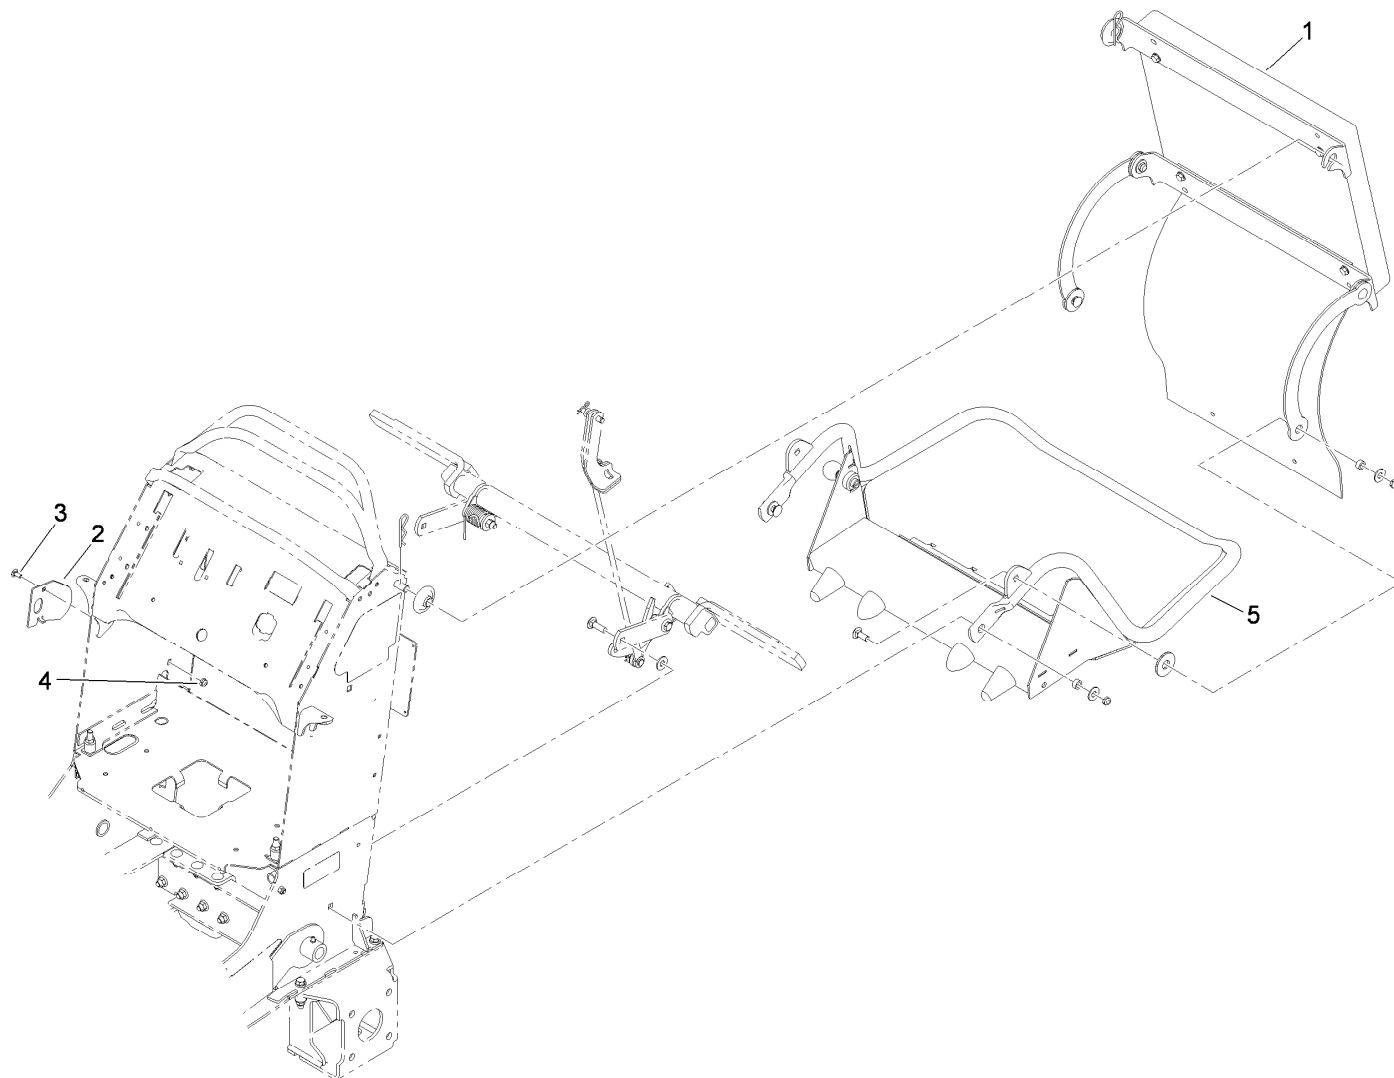


Platform Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-9770	1	Cushion ASM
2	119-7312	1	Plate-Striker
3	3229-11	1	Screw-CARR
4	104-7201	1	Nut-HF
5	117-9640	1	Platform ASM

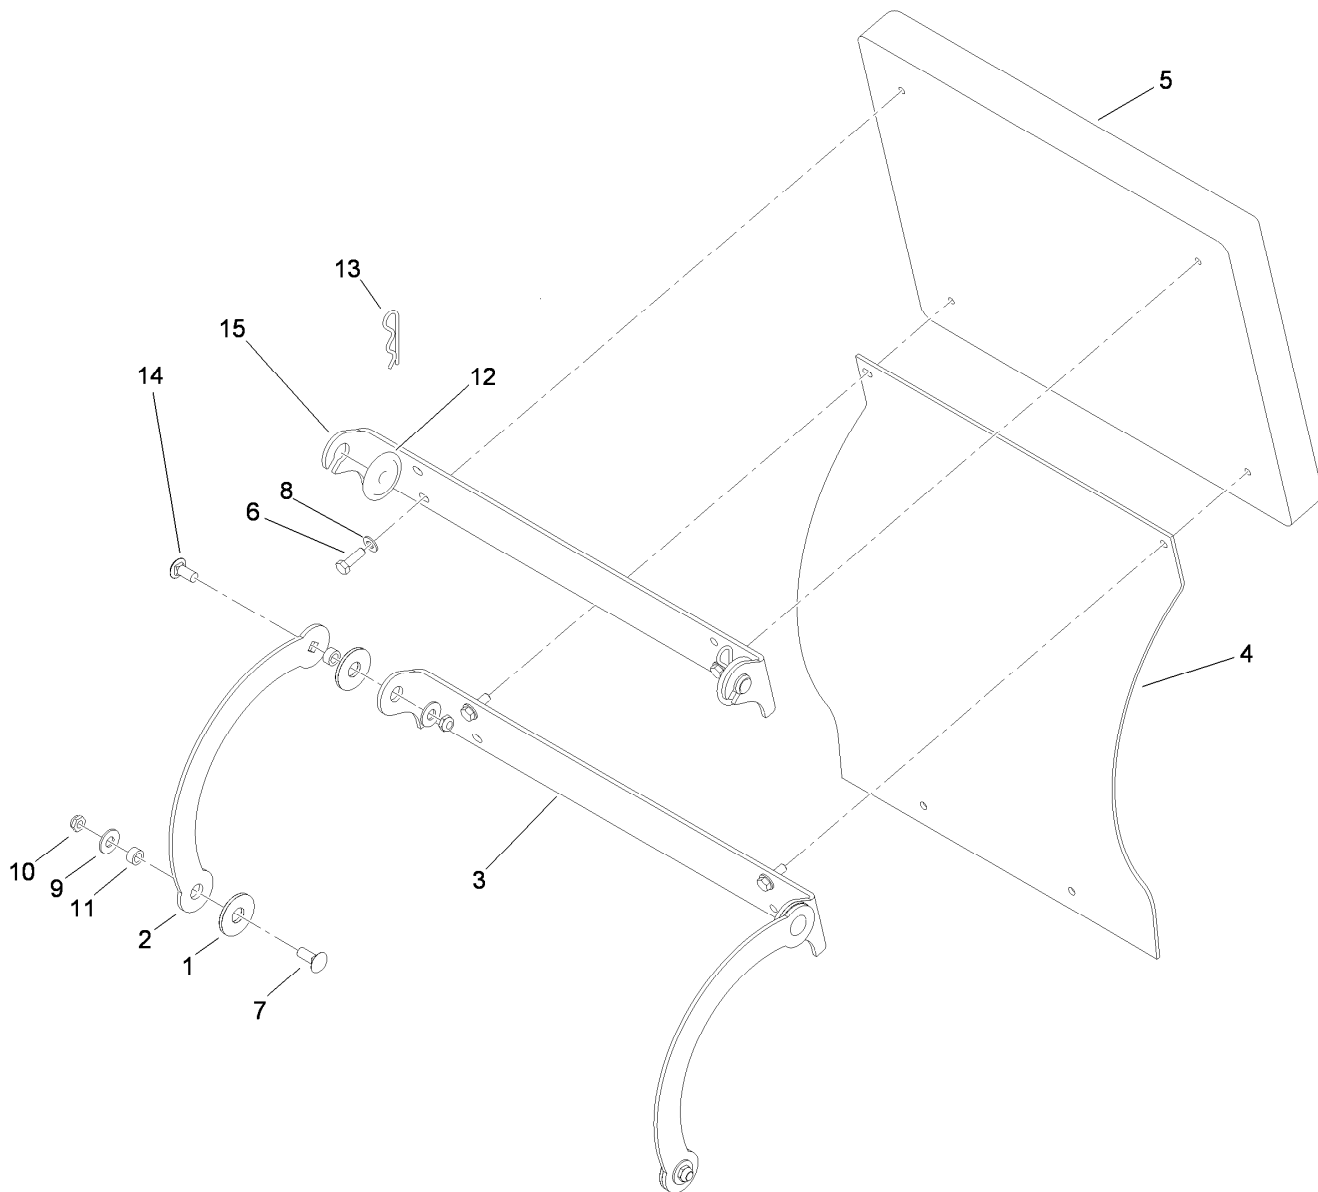


Cushion Assembly No. 117-9770

Ref.	Part Number	Qty.	Description
1	114-0463	4	Washer-Friction, Composite
2	114-1915-01	2	Link-Pad
3	116-2061-03	1	Hinge-Pad
4	114-1919	1	Shield-Rear
5	117-9739	1	Pad-Cushion
6	322-5	4	Screw-HH
7	3231-2	2	Screw-CARR
8	3256-23	4	Washer-Flat
9	3256-4	8	Washer-Flat
10	3296-59	4	Nut-Lock, NI
11	111044	4	Spacer
12	116-2886	2	Slide-Bushing
13	3290-355	2	Pin-Hair
14	3231-27	2	Screw-CARR
15	116-2757-03	1	Hinge-Pad

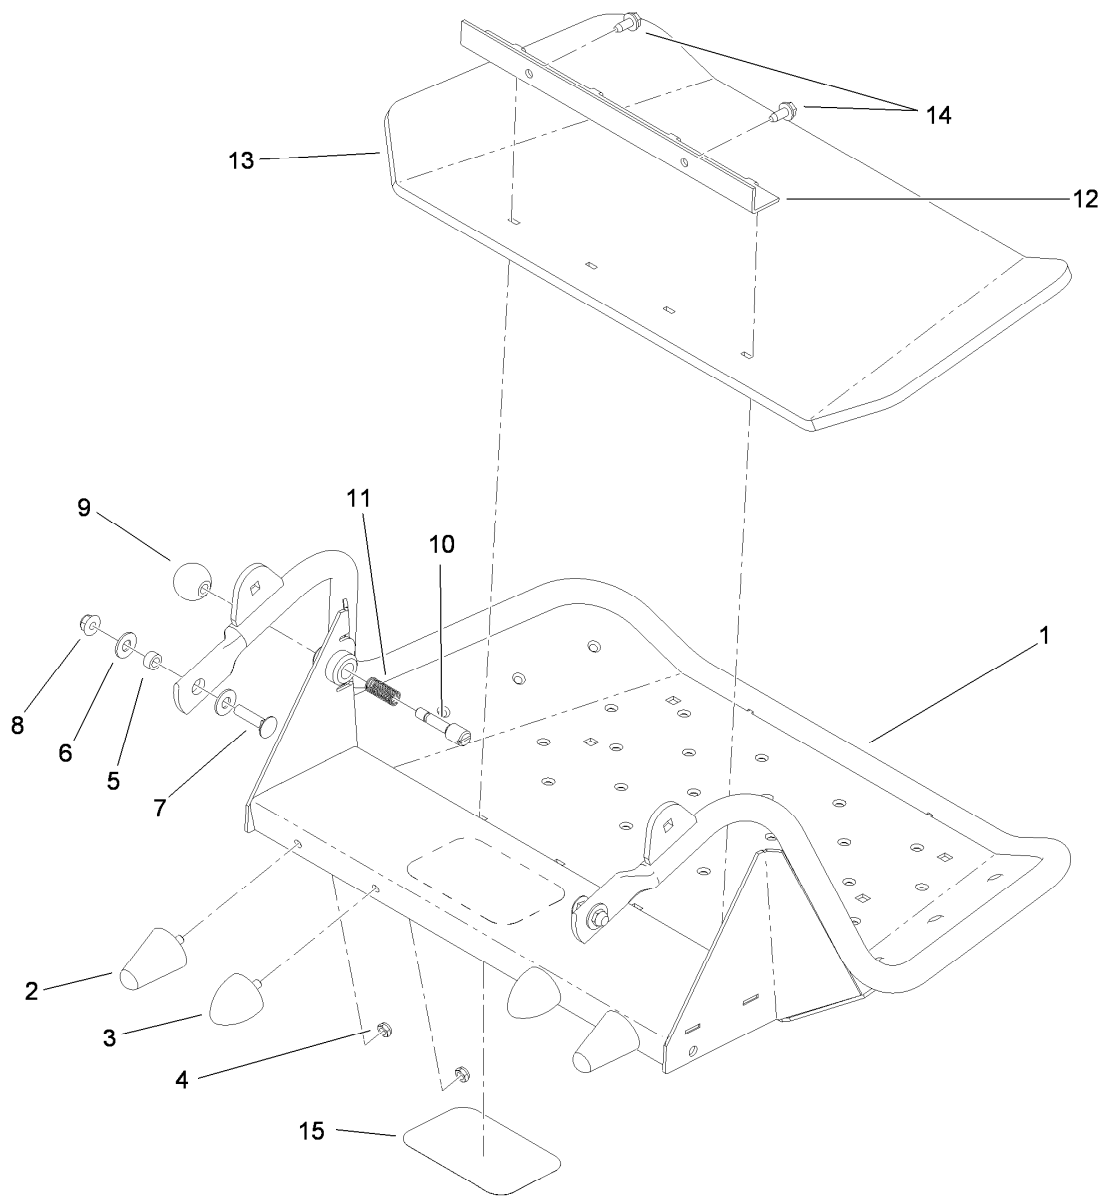

Platform Assembly No. 117-9640

Ref.	Part Number	Qty.	Description
1	117-9641-01	1	Platform ASM
2	114-1925	2	Bumper-Rubber
3	114-1926	2	Bumper-Rubber
4	3296-47	4	Nut-Lock, NI
5	111044	2	Spacer
6	3256-4	4	Washer-Flat
7	3231-4	2	Screw-CARR
8	104-8301	2	Nut-Flange, NI
9	1-603175	1	Knob-Ball
10	119-8650	1	Pin-Latch
11	114-5348	1	Spring
12	114-1920-03	1	Clamp-Shield
13	114-5349	1	Mat-Foot
14	32144-70	2	Screw-HWHTF
15	68-3640	1	Decal

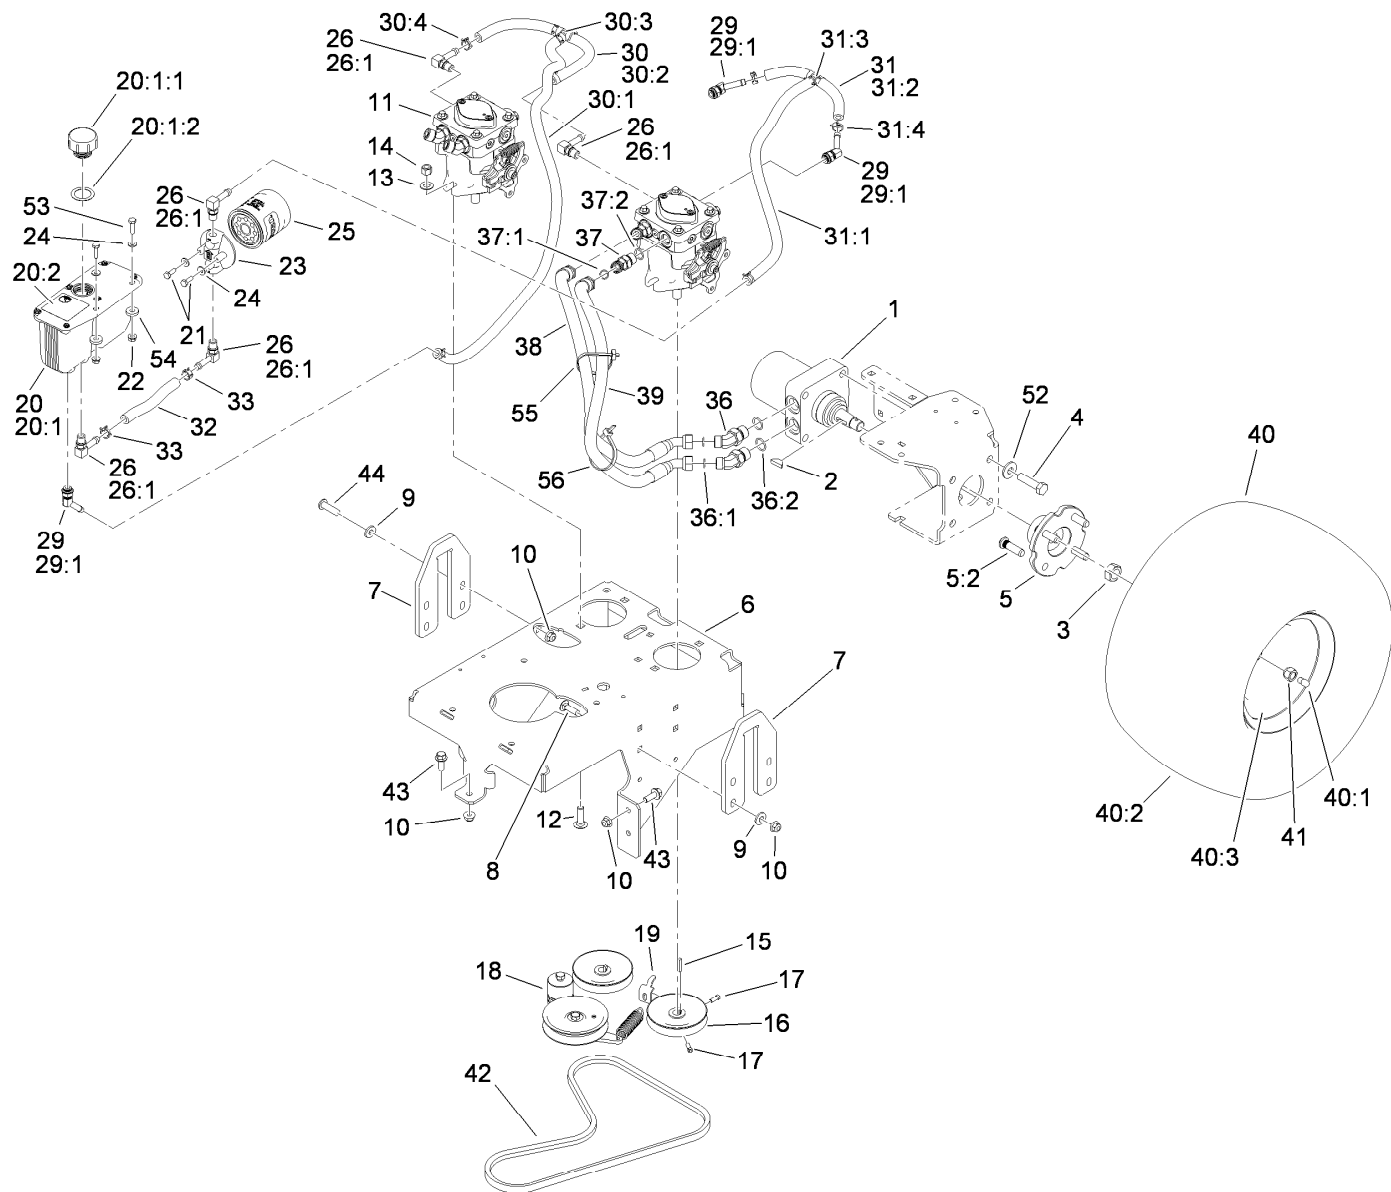


Ground Drive Assembly

Ref.	Part Number	Qty.	Description
1	114-0549	2	HYD Motor ASM
2	3257-8	2	Key-Woodruff
3	85-7310	2	Nut-Motor, Wheel
4	325-8	8	Screw-HH
5	105-0800	2	Wheel Hub ASM
5:2	10-6830	4	Stud-Type, Drive
6	116-2660-01	1	Base-Engine
7	119-8662	2	Plate-Lift
8	3231-25	7	Screw-CARR
9	98-5975	8	Washer-Belleville
10	104-8301	13	Nut-Flange, NI
11	117-3597	2	HYD Pump ASM
12	3232-3	4	Screw-CARR
13	3256-25	4	Washer-Flat
14	3296-48	4	Nut-Lock, NI
15	1-807272	2	Key
16	105-5648	2	Pulley-Pump
17	3241-5	4	Screw-Set
18		1	Pump Idler ASM ●

Ref.	Part Number	Qty.	Description
19	117-0447-01	1	Bracket-Anchor, Spring
20	107-8433	1	HYD Reservoir ASM
20:1		1	Reservoir-HYD ●
20:1:1	103-1948	1	Cap-Reservoir, HYD
20:1:2	103-1949	1	Gasket-Cap
20:2	115-4212	1	Decal-Warning
21	321-4	2	Screw-HH
22	32128-32	2	Nut-HHF
23	104-7836	1	Head-Filter
24	3256-22	4	Washer-Flat
25	114-3494	1	Element-Filter, 25 Micron
26	100-4887	5	Fitting-Barbed, 90 DEG
26:1	237-42	1	O-Ring
29	103-1807	3	Fitting-Barbed, 45 DEG
29:1	237-42	1	O-Ring
30	117-3570	1	Tank Hose ASM
30:1	117-0461	1	Hose-Hydraulic
30:2	117-0459	2	Hose-Hydraulic
30:3	1-603721	2	Fitting-Tee, Hose

● Not serviced separately

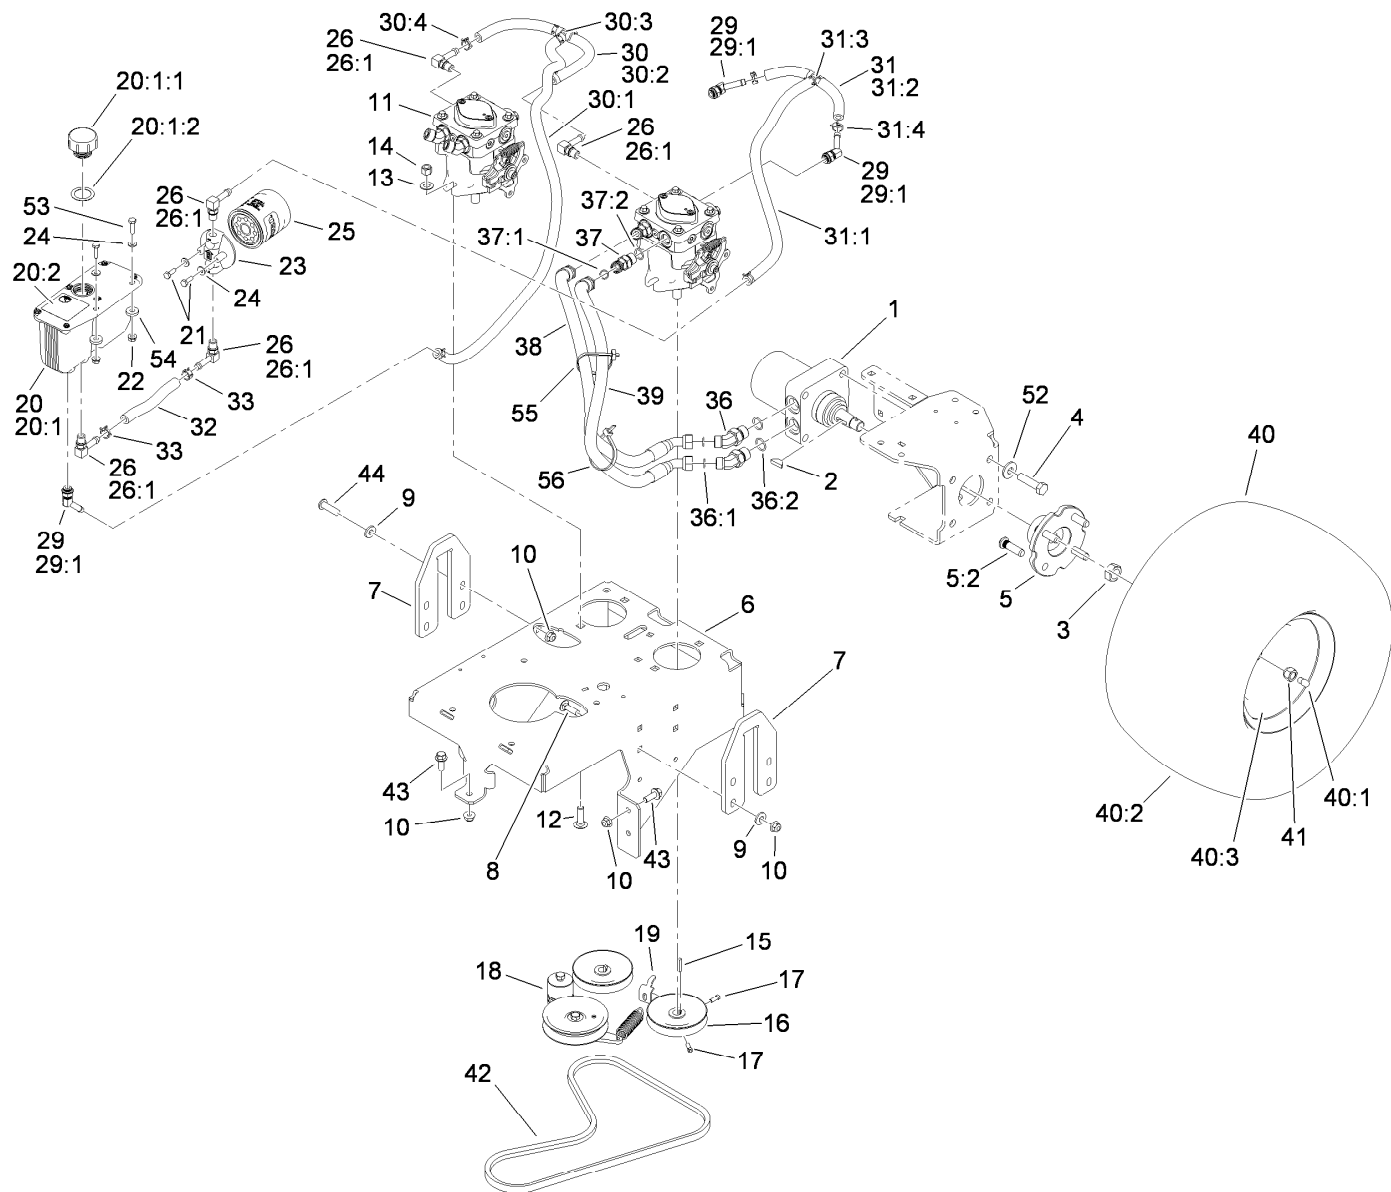


Ground Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
30:4	103-1988	6	Clamp-Hose
31	117-3569	1	Filter Hose ASM
31:1	117-0460	1	Hose-Hydraulic
31:2	117-0458	2	Hose-Hydraulic
31:3	1-603721	2	Fitting-Tee, Hose
31:4	103-1988	6	Clamp-Hose
32	117-0459	1	Hose-Hydraulic
33	103-1988	2	Clamp-Hose
36	340-89	4	Fitting-HYD, 45 DEG
36:1	237-30	1	O-Ring
36:2	237-80	1	O-Ring
37	340-101	4	Fitting-HYD, 45 DEG
37:1	237-30	1	O-Ring
37:2	237-79	1	O-Ring
38	117-0442	2	HYD Hose ASM

Ref.	Part Number	Qty.	Description
39	117-0449	2	HYD Hose ASM
40	117-0429	2	Wheel ASM
40:1	232-27	1	Stem-Valve
40:2	117-0428	1	Tire
40:3	106-8133	1	Rim-8 Inch
41	242-50	8	Nut-Lug
42	114567	1	Belt-V, Lower PTO
43	3234-42	5	Screw-HHF
44	3274-63	1	Screw-HSBH
52	1-513435	8	Washer-Spring
53	321-6	2	Screw-HH
54	104-7658	4	Spacer
55	1-643115	2	Tie-Plastic
56	103-2446	2	Tie-Plastic

● Not serviced separately

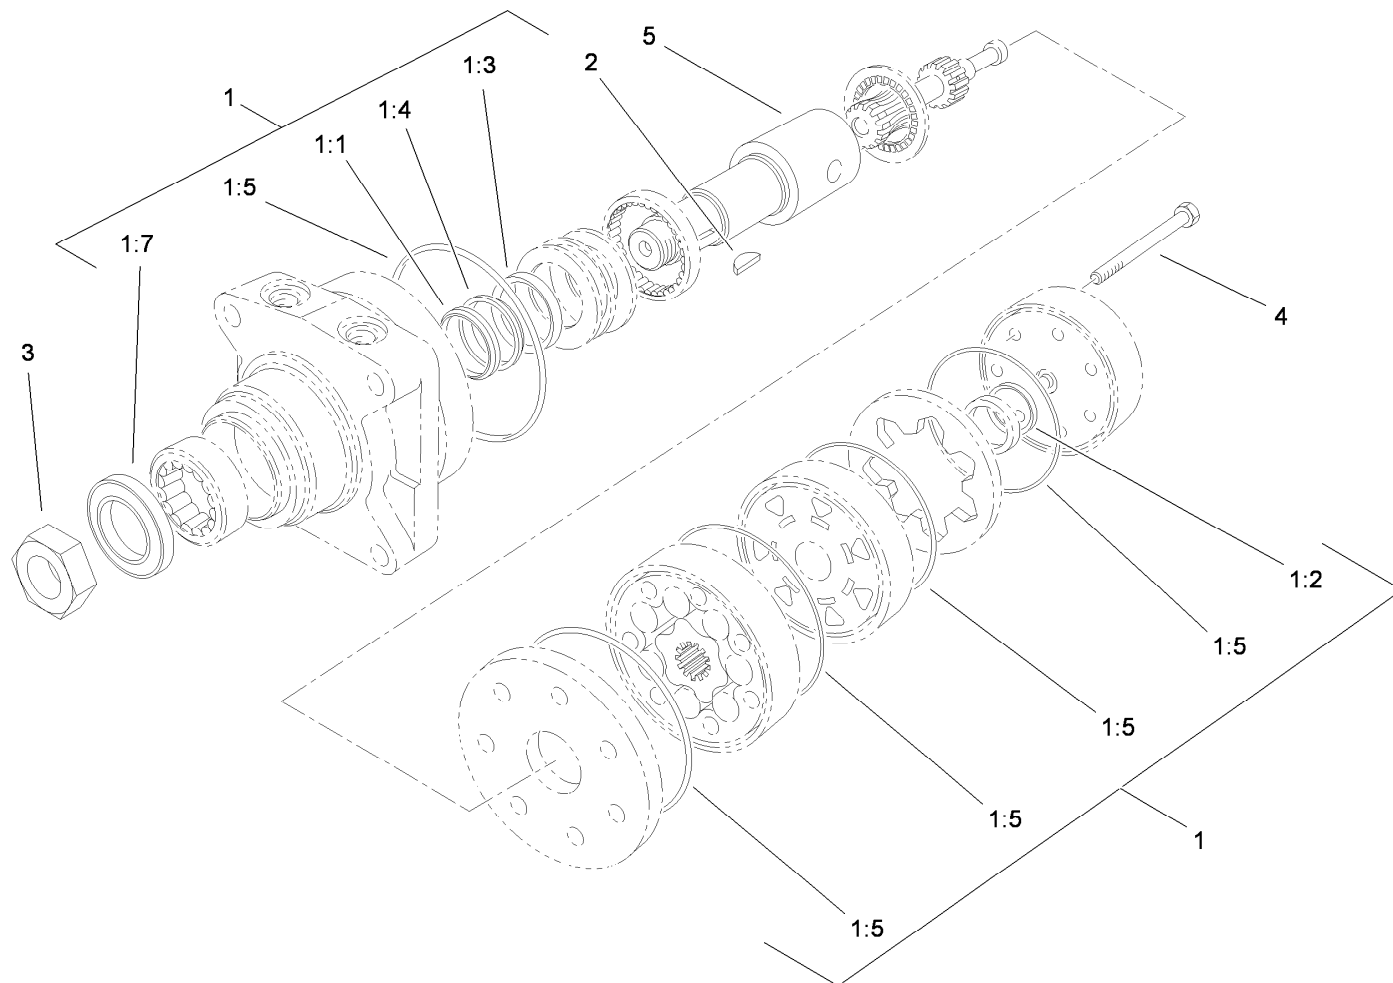


Hydraulic Motor Assembly No. 114-0549

Ref.	Part Number	Qty.	Description
1	1-000119	1	Seal Kit
1:1		1	Ring-Back Up ●
1:2		1	Seal-Commutator ●
1:3		1	Seal-Shaft (Viton) ●
1:4		1	Washer-Back Up, Steel ●
1:5		5	Ring-Seal (Viton) ●
1:7		1	Seal-Dirt And Water ●
2	3257-8	1	Key-Woodruff
3	85-7310	1	Nut-Motor, Wheel
4	106-5549	6	Bolt-Special
5	106-8764	1	Shaft-Coupling


● Not serviced separately

99- Seal Overhaul Kit

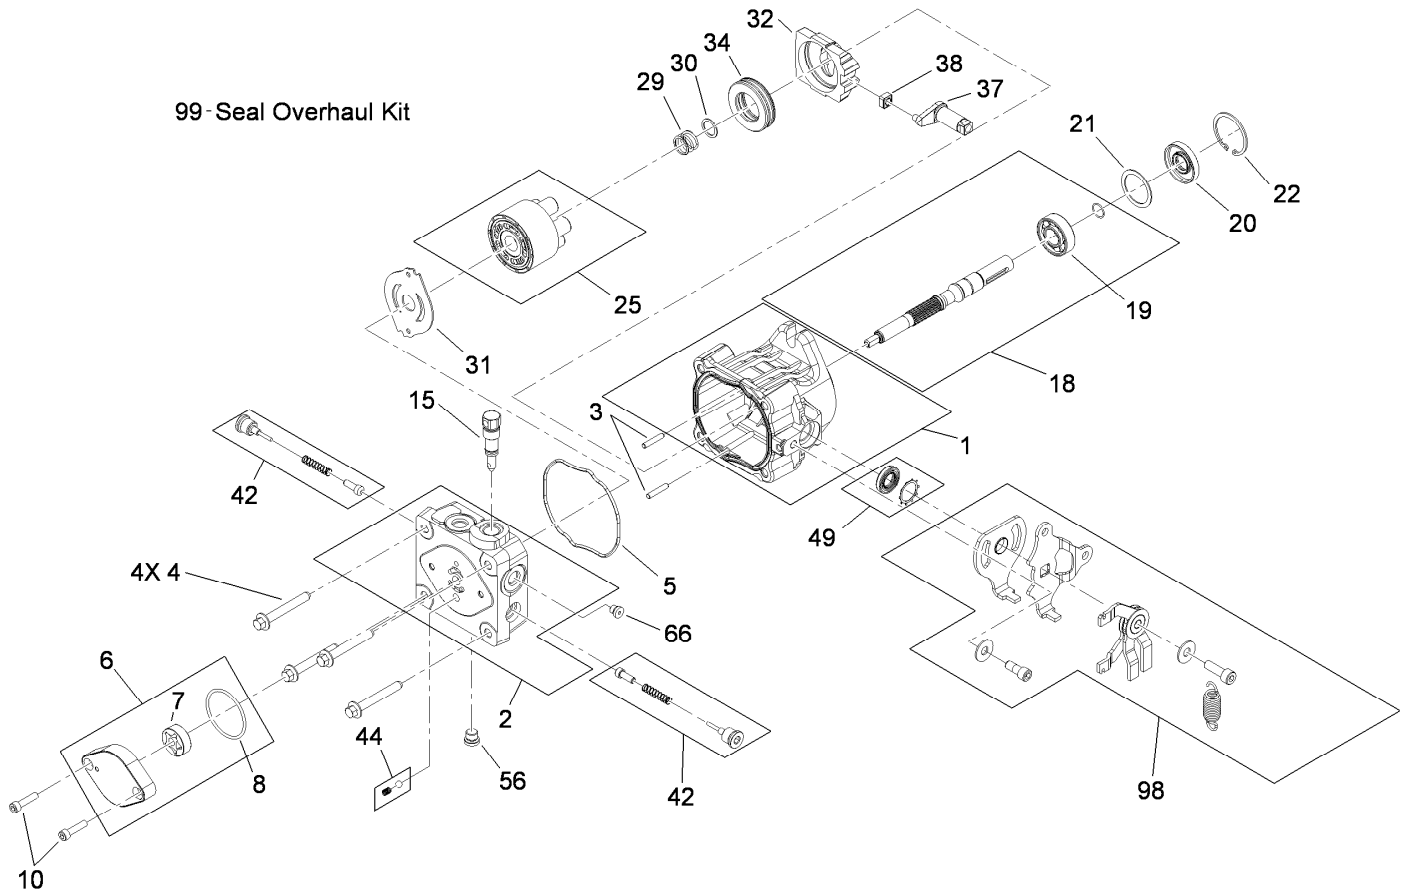


Hydraulic Pump Assembly No. 117-3597

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	115-4464	1	Housing Kit	29	94-1936	1	Spring-Block
2	106-8752	1	End Cap Kit (W/Poppets)	30	94-1937	1	Washer-Thrust, Block
3	106-8753	2	Pin-Headless, Straight	31	105-6185	1	Plate-Valve
4	106-8754	4	Bolt-HF	32	94-1907	1	Swashplate-Variable
5	106-8755	1	O-Ring	34	94-6922	1	Bearing-Thrust
6	106-8756	1	Charge Pump Kit	37	115-4458	1	Arm-Trunnion, Tapered Square
7	104-2122	1	Gerotor ASM	38	94-1910	1	Guide-Slot
8	106-8757	1	O-Ring	42	98-3252	2	Valve-Check (W/Poppet)
10	104-2111	2	Capscrew	44	106-8760	1	Charge Relief Valve Kit
15	106-8759	1	Bypass Valve Kit	49	114-8155	1	Trunnion Seal Kit
18	103-2664	1	Input Shaft Kit	56	106-8762	1	Plug-HSH
19	104-5311	1	Bearing-Ball	66	106-8763	1	Plug-HSH
20	104-5310	1	Seal-Lip	98	117-3629	1	Kit-Return
21	104-5308	1	Spacer	99	105-6184	1	Seal Overhaul Kit
22	104-5309	1	Ring-Retaining				
25	103-2666	1	Cylinder Block Kit				

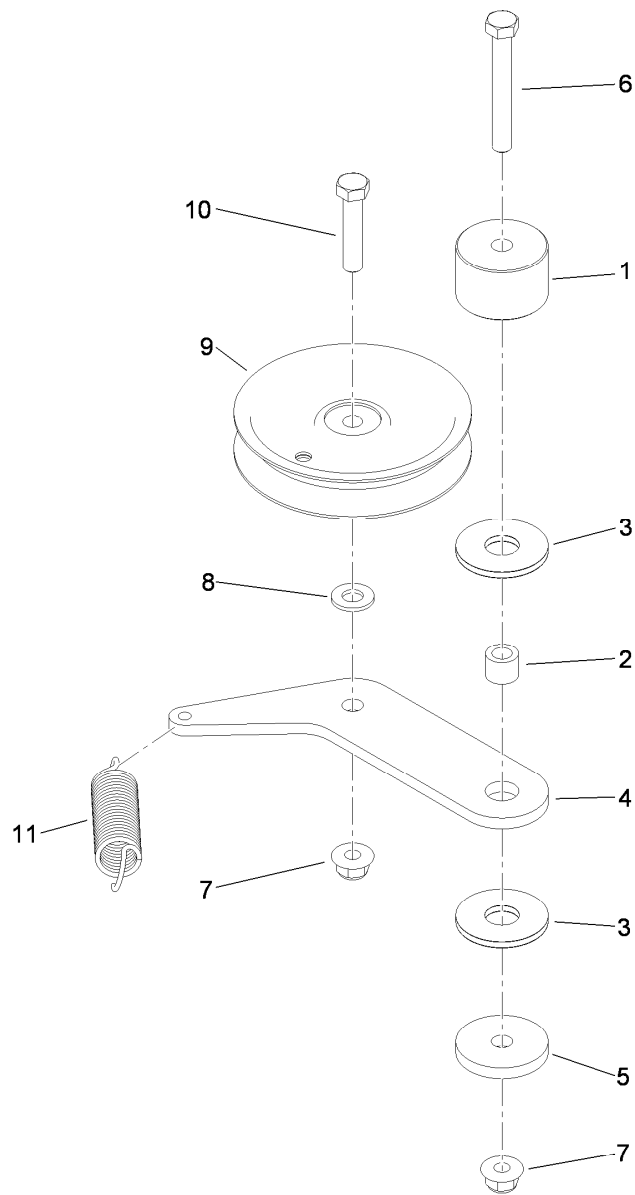

Pump Idler Assembly


Ref.	Part Number	Qty.	Description
1	117-3568	1	Hub-Idler
2	1-413088	1	Bushing-Lever, Lift
3	114-0463	2	Washer-Friction, Composite
4	117-9707	1	Plate-Idler
5	110-9981	1	Washer-Plain
6	323-13	1	Screw-HH
7	104-8301	2	Nut-Flange, NI
8	3256-24	1	Washer-Flat
9	93-1622	1	Pulley-Idler
10	323-9	1	Screw-HH
11	108-4056	1	Spring-Extension

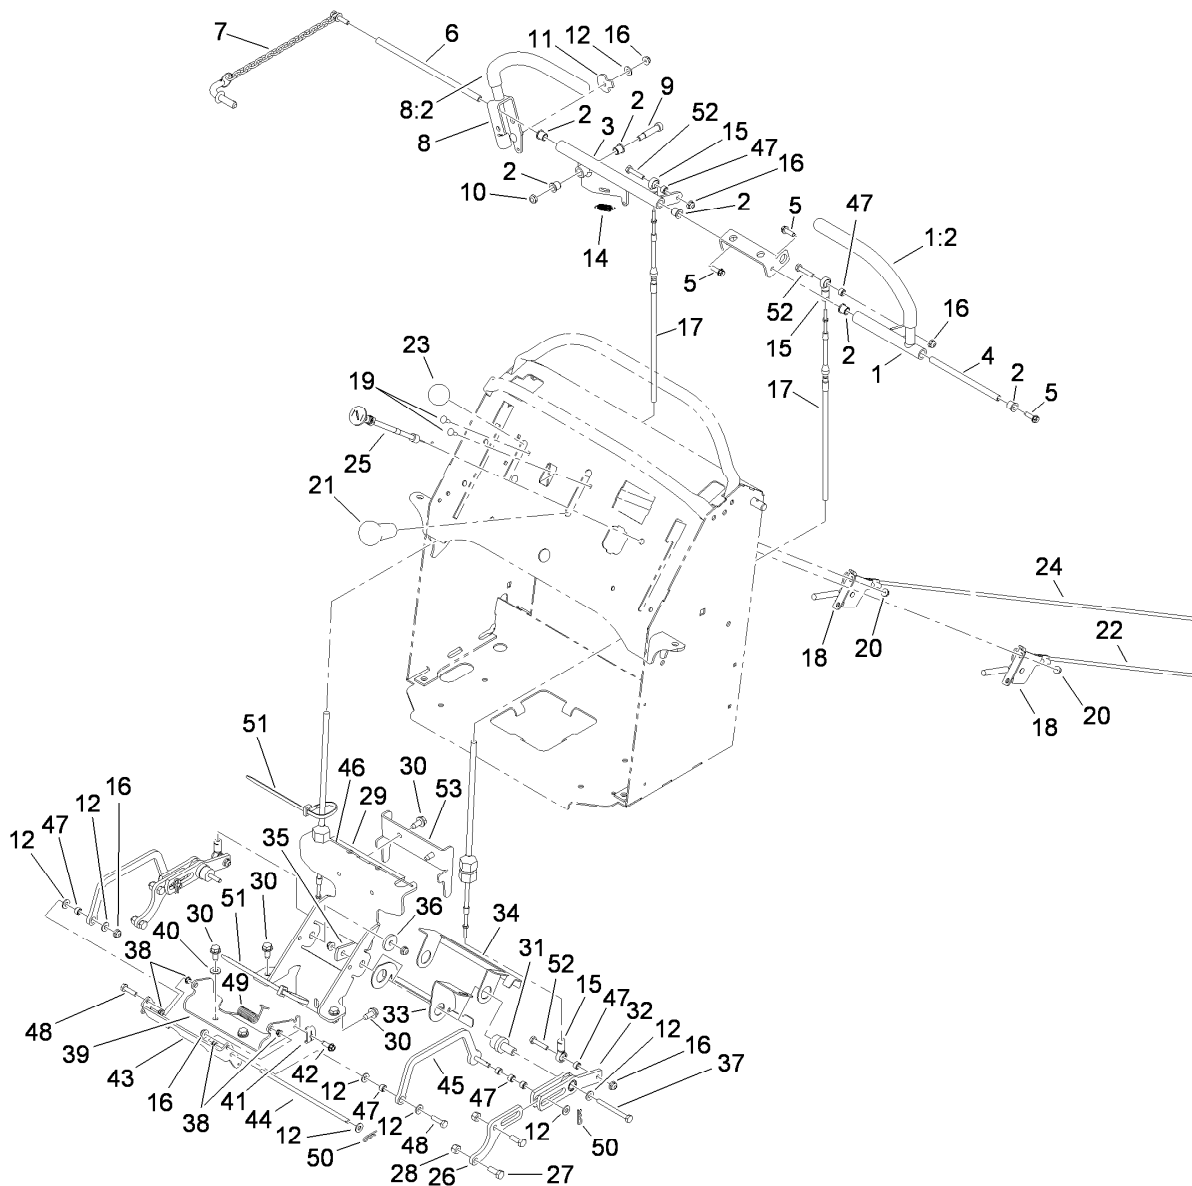

Control Assembly

Ref.	Part Number	Qty.	Description
1	119-7235	1	LH Lever ASM
1:2	119-0222	1	Grip
2	103-9928	6	Bearing
3	119-7236	1	Motion Control ASM
4	114-0260	1	Shaft-Pivot
5	80-0700	3	Screw-HH, Torx
6	114-1904	1	Shaft-Pivot, Motion Control
7	114-0409	1	HOC Pin ASM
8	119-1887	1	RH Motion Lever ASM
8:2	119-0222	1	Grip
9	114-0239	1	Screw-HSH
10	3296-47	1	Nut-Lock, NI
11	114-0268	1	Cam-Lever
12	3256-22	11	Washer-Flat
14	114-0249	1	Spring-Extension
15	117-6222	4	Rod End-Ball Joint
16	104-7201	9	Nut-HF
17	117-0474	2	Cable-Control, Traction
18	110-5547	2	Control Lever ASM
19	1-807533	4	Bolt-CARR
20	3290-148	4	Nut-HF


Ref.	Part Number	Qty.	Description
21	99-7981	1	Knob-Grip, Soft
22	117-9706	1	Cable-Speed
23	1-603175	1	Knob-Ball
24	119-6654	1	Cable-Throttle
25	119-6655	1	Control-Choke, Push/Pull
26	114-3547	2	Arm-Control
27	322-4	4	Screw-HH
28	3296-29	4	Nut-Lock, NI
29	119-2380-01	1	Mount-Linkage, Drive
30	32144-70	7	Screw-HWHTF
31	119-2381	2	Hub-Shoulder
32	119-2409	2	Control Fork ASM
33	114-1993	1	Lever-Switch
34	119-2414	1	Lever-Switch
35	114-5155-03	1	Arm-Switch, Stop
36	65-8270	1	Washer
37	321-14	2	Screw-HH
38	119-2404	4	Bushing-Flange, Split
39	117-2681	1	Bracket-Shifter
40	3256-23	2	Washer-Flat
41	106-7297	1	Clamp-Cable

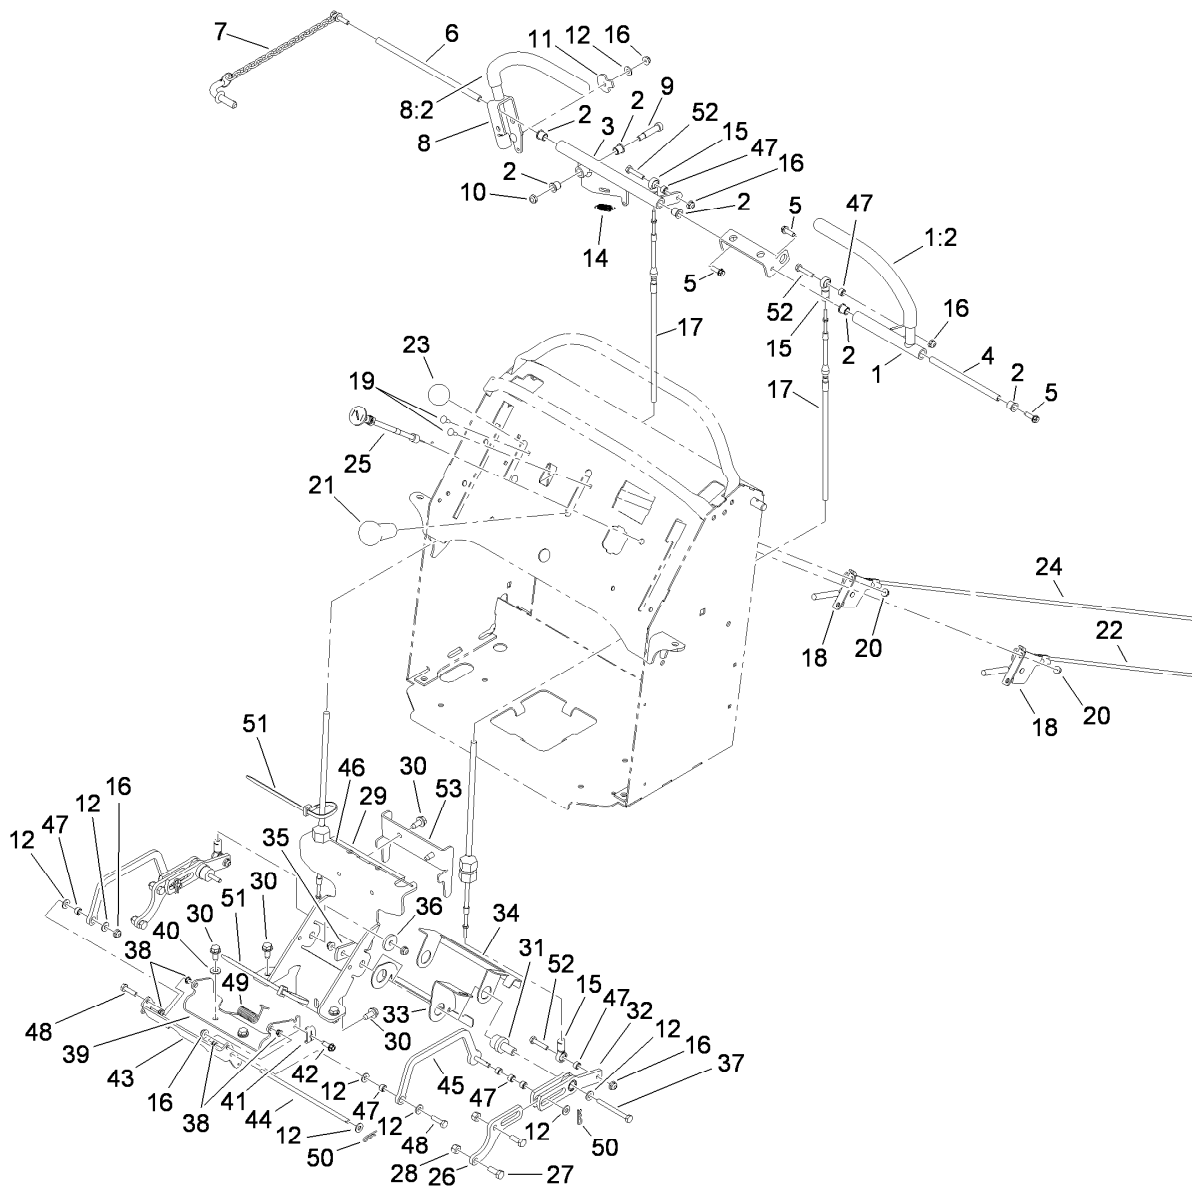

Control Assembly (continued)

Ref.	Part Number	Qty.	Description
42	49-2040	1	Screw-HWHTF
43	117-2680	1	Arm-Dual, Shifter
44	114-1978	1	Pin-Hinge
45	119-2402	2	Speed Control Linkage ASM
46	114-0433	1	Clip-Spring
47	119-2408	12	Bushing-Roller

Ref.	Part Number	Qty.	Description
48	321-6	2	Screw-HH
49	106-2584	1	Spring-Torsion
50	3290-307	6	Pin-Hair
51	3290-378	2	Tie-Cable
52	321-8	4	Screw-HH
53	119-8764-01	1	Bracket-Protect, Cable

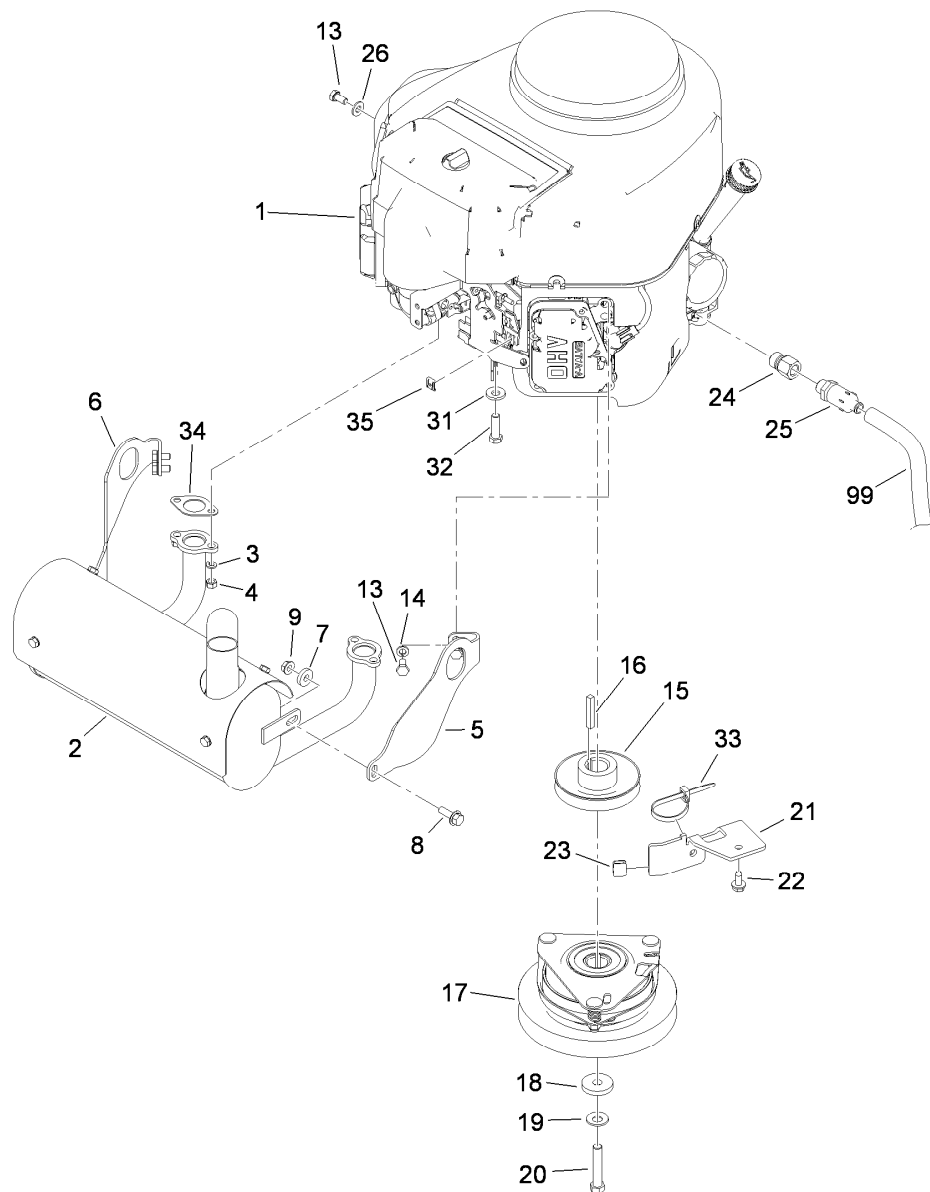


Engine Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs691V-As05 ●■
2	116-2352	1	Muffler
3	114-3550	4	Washer-Lock, Spring
4	114-3549	4	Nut
5	116-2353	1	Bracket-Muffler Mount, LH
6	116-2354	1	Bracket-Muffler Mount, RH
7	104-7658	2	Spacer
8	3234-29	2	Screw-HHF
9	32128-25	2	Nut-HF
13	33114-016	5	Screw-HH
14	3253-4	4	Washer-Lock
15	112-7067	1	Pulley
16	608006	1	Key-Square
17	105-2635	1	Clutch / Brake ASM

Ref.	Part Number	Qty.	Description
18	107-4136	1	Washer
19	1-603610	1	Washer-Spring
20	3212-9	1	Screw-HH
21	117-9708-01	1	Bracket-Stop, PTO
22	32144-70	1	Screw-HWHTF
23	109-3765	1	Bumper
24	103-1966	1	Adapter
25	92-6877	1	Valve-Drain, Oil
26	33094-00	1	Washer-Plain
31	98-5975	4	Washer-Belleville
32	323-7	4	Screw-HH
33	3290-378	1	Tie-Cable
34	1-653313	2	Gasket-Exhaust
35	81-1690	1	Clamp-Cable
99	103-1964	1	Hose-Drain, Oil


● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

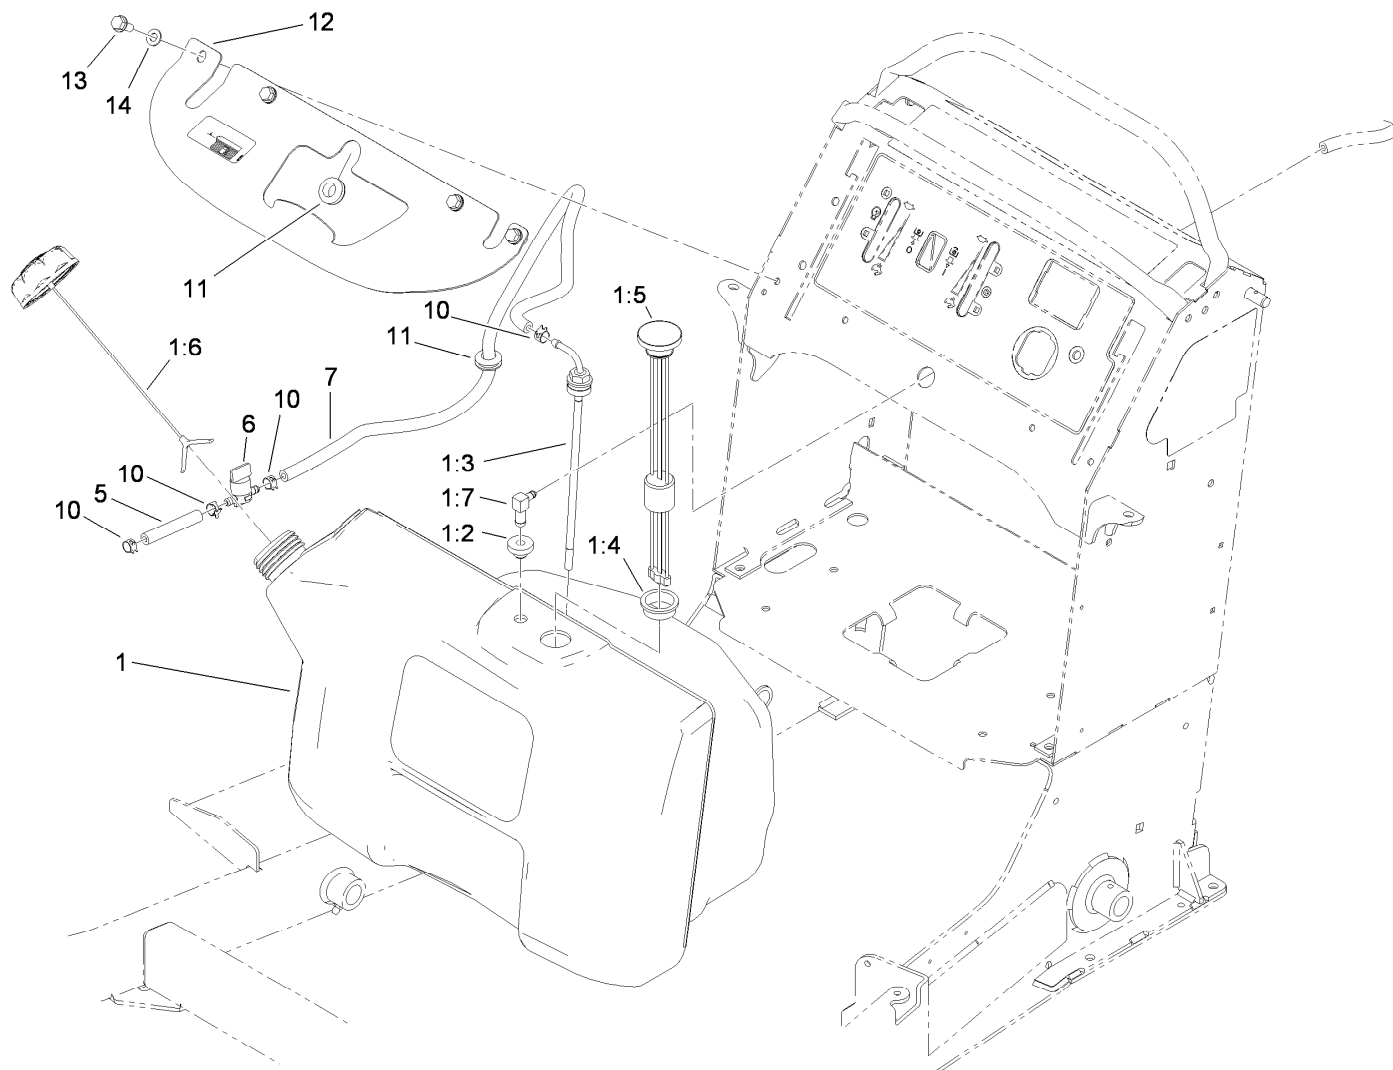

Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
1	119-8665	1	Tank ASM
1:2	46-6560	1	Bushing
1:3	116-3408	1	Fitting-Fuel, Bulkhead
1:4	95-8972	1	Grommet
1:5	117-9719	1	Gauge-Fuel
1:6	116-1704	1	Cap-Fuel, Ratcheting
1:7	1-643172	1	Elbow-90 DEG
5	114-3765	1	Hose-Fuel
6	1-603770	1	Valve-Fuel
7	109-3491	1	Hose-Fuel
10	2412-98	4	Clamp
11	112-7069	2	Grommet
12	116-3125	1	Bracket-Tank
13	32144-11	4	Screw-HWHTF
14	3256-70	4	Washer-Flat

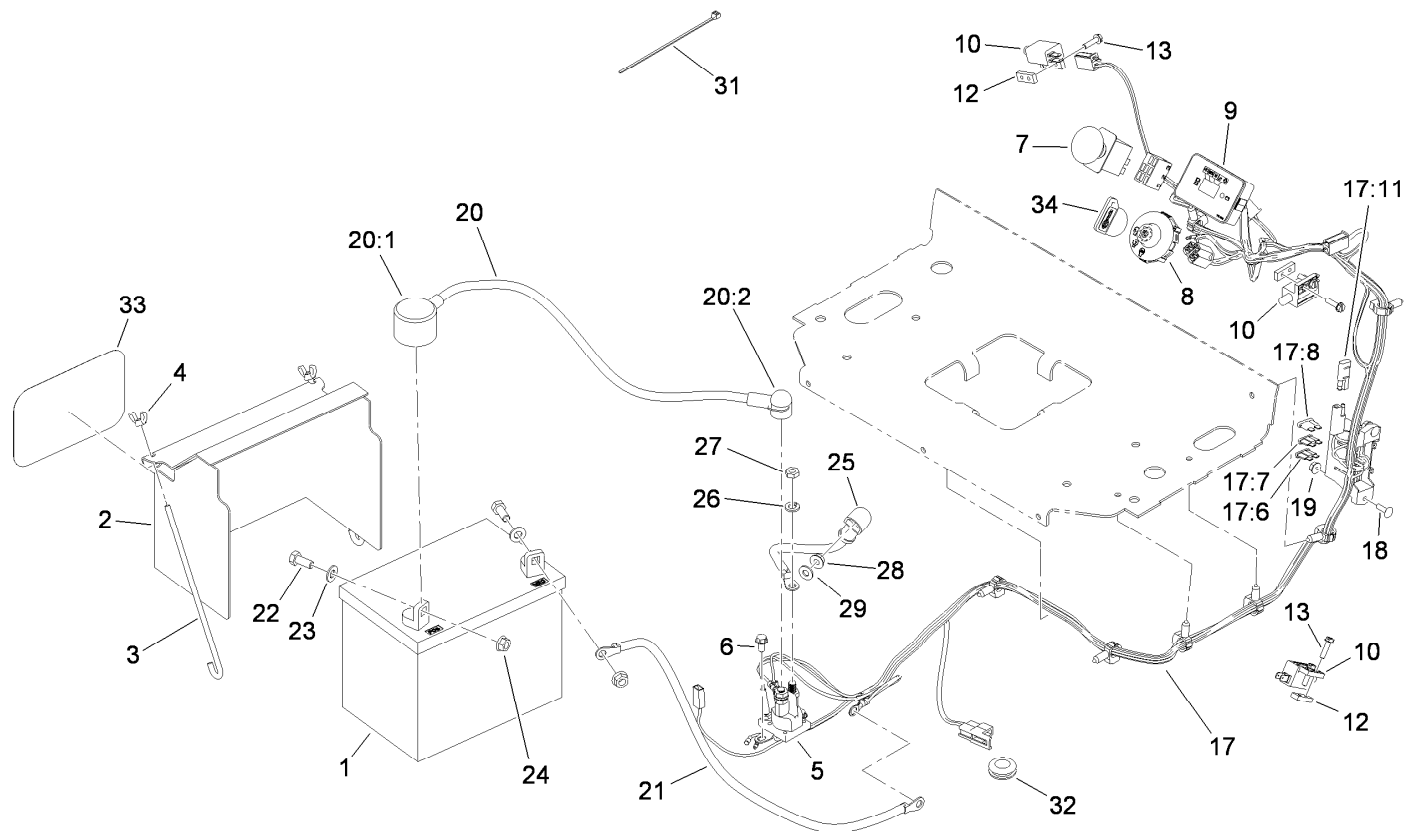

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	104-2491	1	Battery
2	117-0543-01	1	Cover-Battery
3	1-633651	2	Bolt-Holddown
4	1-543792	2	Wingnut
5	117-1197	1	Solenoid
6	32144-4	2	Screw-HWH
7	114-0279	1	Switch-PTO
8	110-6764	1	Switch-Ignition
9	115-4180	1	Module-Meter, Hour
10	1-513152	3	Switch-Closed, Normally
12	1-633181	3	Plate-Tapped
13	32105-13	6	Screw-HWH
17	116-2662	1	Harness-Wiring
17:6	109103	1	Fuse-Blade, 30 Amp
17:7	109102	1	Fuse-Blade, 25 Amp
17:8	218-578	1	Fuse-Blade, 10 Amp
17:11	116-0053	1	Cap-Plug
18	1-807533	2	Bolt-CARR


Ref.	Part Number	Qty.	Description
19	3290-148	2	Nut-HF
20	109-7653	1	Positive Battery Cable ASM
20:1	109-2407	1	Insulator-Battery
20:2	1-543393	1	Insulator-Solenoid
21	105-0836	1	Cable-Battery, Black
22	322-3	2	Screw-HH
23	3256-23	2	Washer-Flat
24	109-5715	2	Nut-HHF, Smooth
25	106-8268	1	Cable-Battery, Red
26	3253-4	2	Washer-Lock
27	3220-2	2	Nut-Jam
28	32128-33	1	Nut-HF
29	3256-22	1	Washer-Flat
31	1-303287	2	Tie-Cable
32	112-7069	1	Grommet
33	68-3640	1	Decal
34	63-8360	1	Key-Ignition

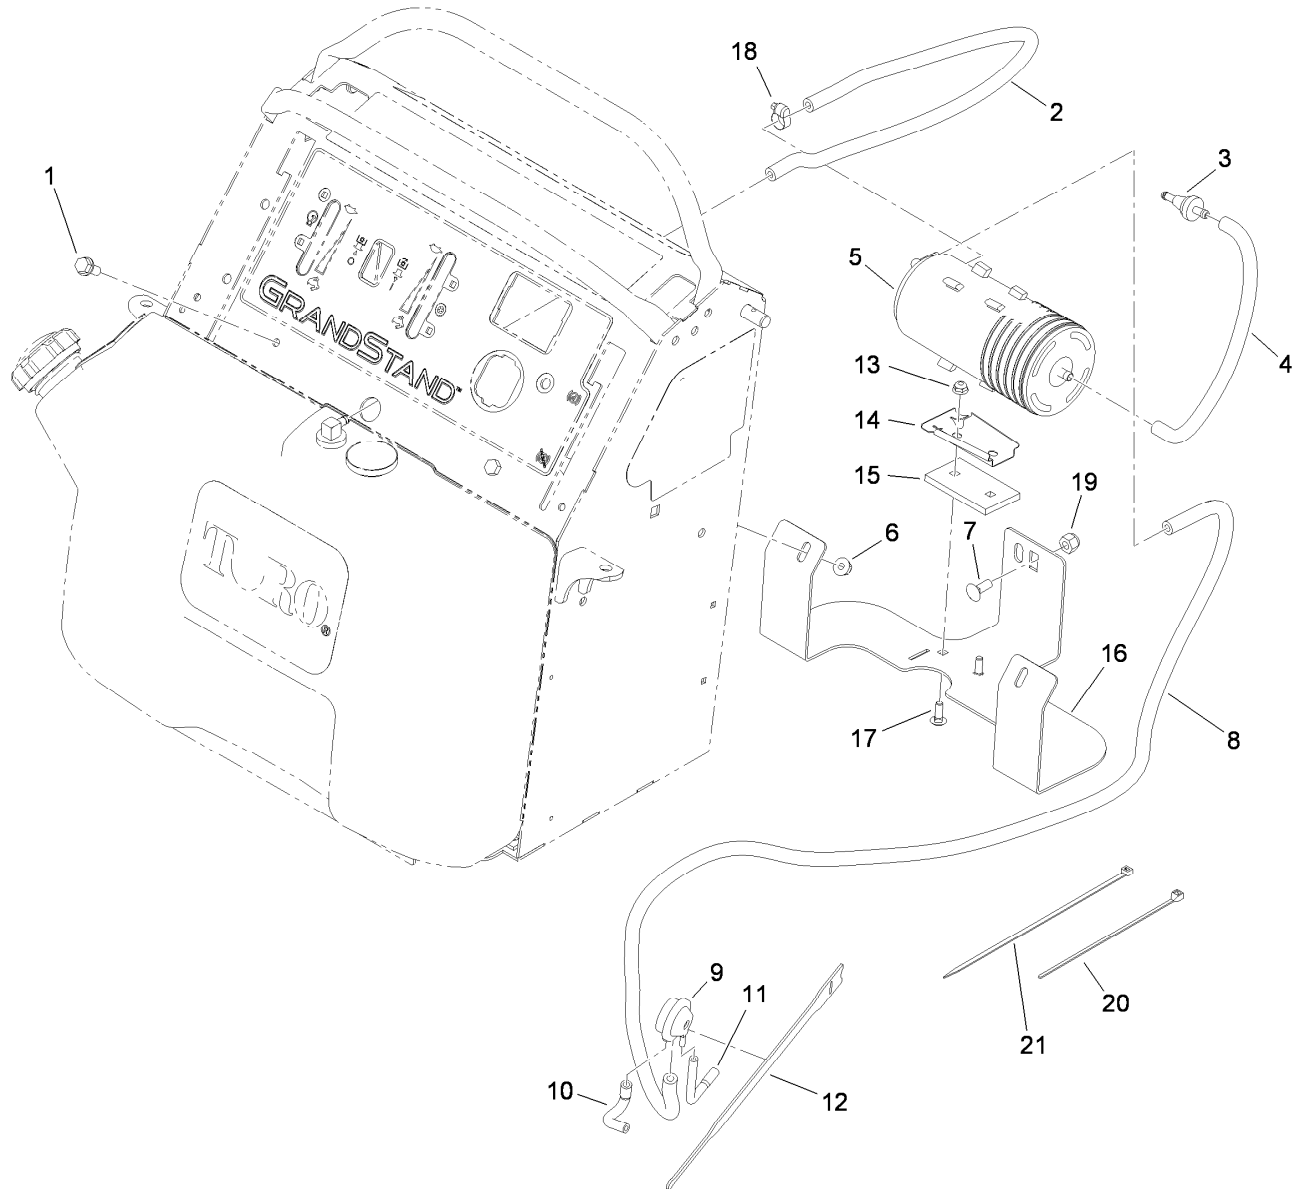

Carbon Canister Assembly

Ref.	Part Number	Qty.	Description
1	32144-11	2	Screw-HWHTF
2	110-7501	1	Hose-Fuel
3	71-9280	1	Filter-Fuel
4	114-3766	1	Hose-Fuel
5	117-1221	1	Canister-Carbon, 800Cc
6	104-8300	2	Nut-Flange, NI
7	3231-2	1	Screw-CARR
8	63-9720	1	Hose-Fuel
9	116-2232	1	Valve-Control, Vacuum
10	119-8502	1	Hose-Formed, Low Vacuum Port
11	119-8501	1	Hose-Formed, High Vacuum Port


Ref.	Part Number	Qty.	Description
12	116-2469	1	Strap-Velcro, Cable Tie
13	104-7201	2	Nut-HF
14	114-0292	1	Bracket-Canister, Carbon
15	119-7279-03	1	Plate-Canister, Carbon
16	119-7228-03	1	Tank-Support
17	3229-1	2	Screw-CARR
18	2412-108	1	Clamp-Worm
19	3296-39	1	Nut-Lock, NI
20	1-303287	4	Tie-Cable
21	3290-378	1	Tie-Cable

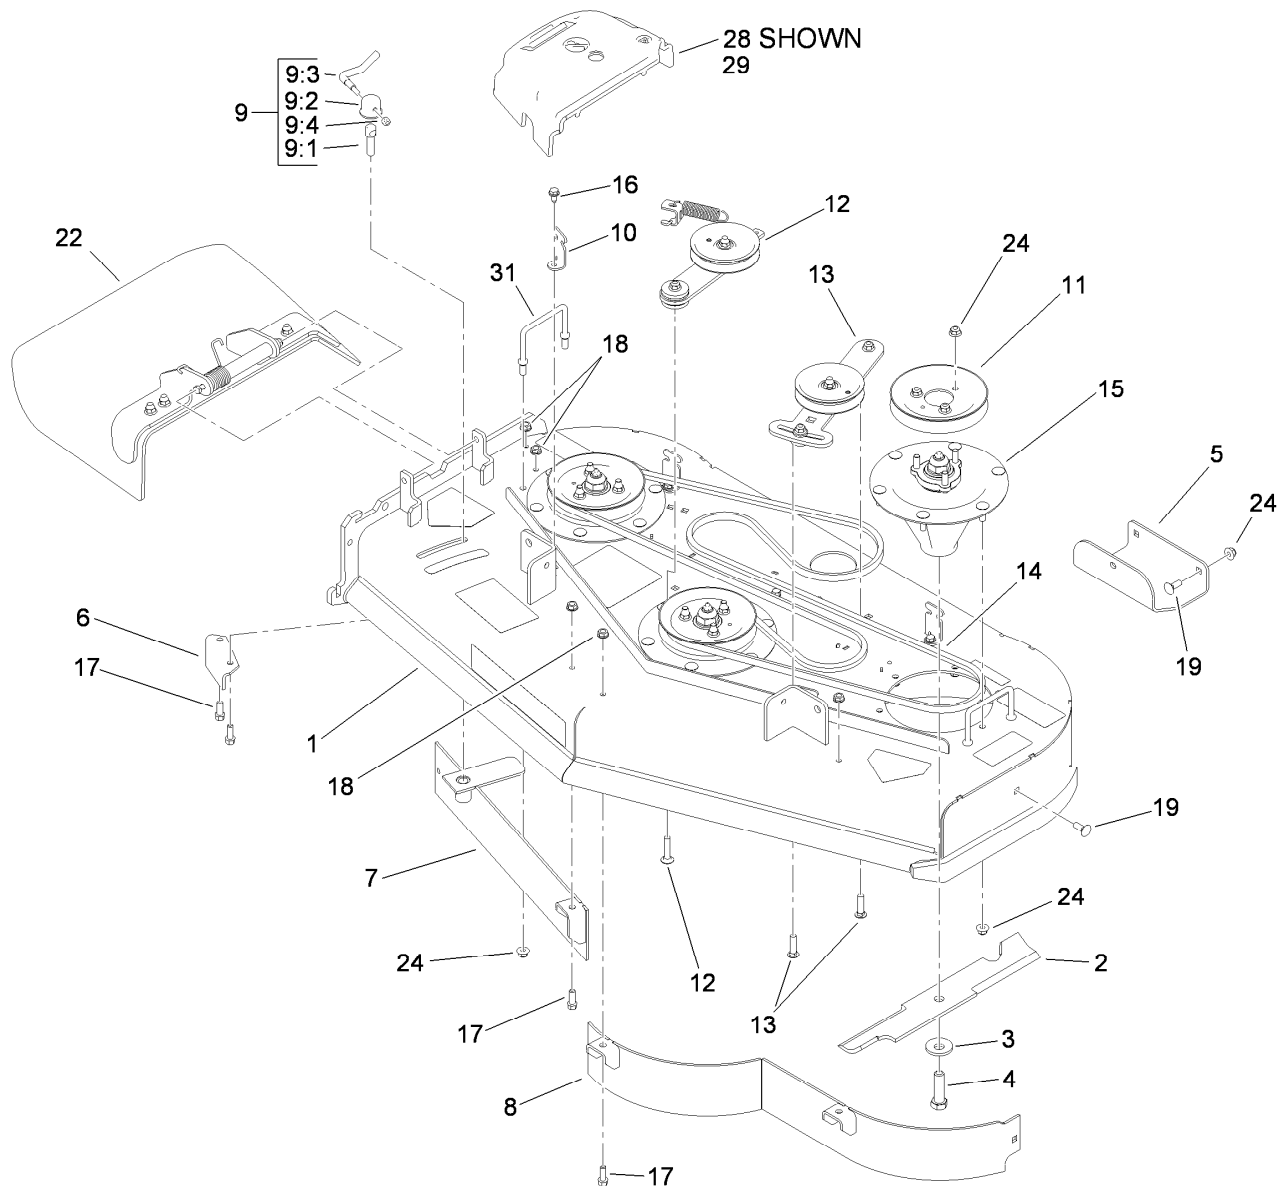

Deck Assembly


Ref.	Part Number	Qty.	Description
1	117-5764	1	Deck ASM
2	107-3192-03	3	Blade-16.5 Inch (High Flow)
3	103-0865	3	Washer-Blade Bolt, Heavy
4	51-4060	3	Screw-Blade
5	114-1908-01	1	Skid
6	107-8541-01	1	Baffle-Discharge
7	114-1870-01	1	Baffle ASM
8	117-0410-01	1	48 Inch Baffle ASM
9	107-1664	1	Lever ASM
9:1	106-3239	1	Screw-Lock
9:2	107-1644	1	Cap-Lock
9:3	106-3241	1	Lever-Lock
9:4	3296-29	1	Nut-Lock, NI
10	117-5758-03	4	Bracket-Cover

Ref.	Part Number	Qty.	Description
11	115-7440	3	Pulley
12	117-0445	1	Spring Idler ASM
13	117-0446	1	Idler Adjust ASM
14	114-0453	1	Belt-V
15	117-6158	3	Spindle ASM
16	32144-70	4	Screw-HWHTF
17	92-1624	5	Screw-HWH
18	3290-357	5	Nut-HHF, Whiz
19	3231-2	4	Screw-CARR
22	114-1910	1	Deflector ASM
24	104-8301	35	Nut-Flange, NI
28	109-6935	1	Cover-Belt, RH
29	109-6936	1	Cover-Belt, LH
31	109-6982	2	Wireform-Cover

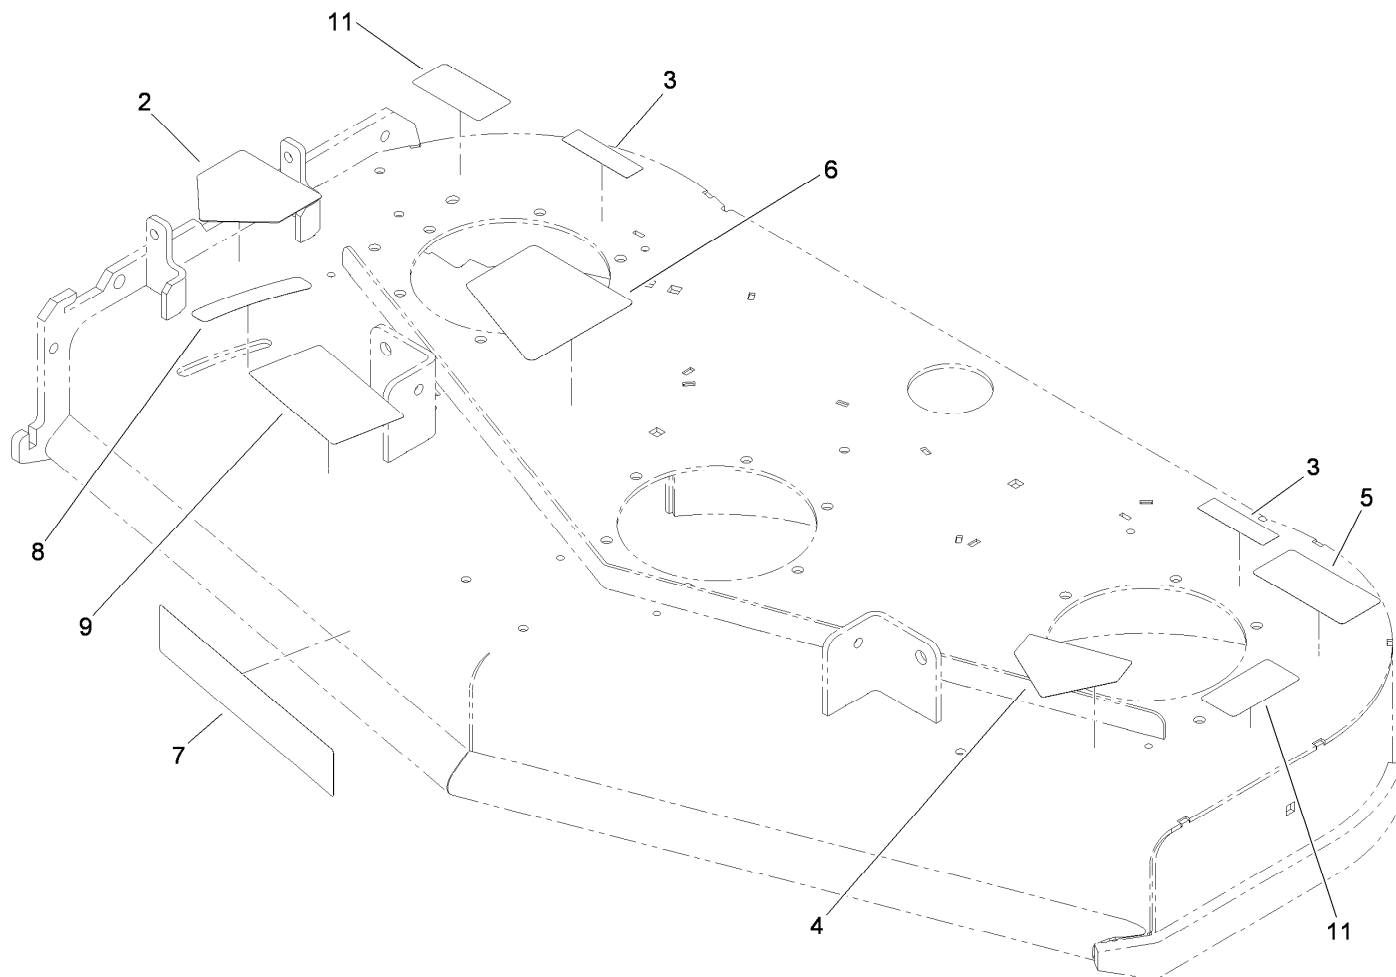


Deck Assembly No. 117-5764

Ref.	Part Number	Qty.	Description
2	54-9220	1	Decal-Danger
3	98-5954	2	Decal-Cover, Missing
4	1-403005	1	Decal-Danger
5	68-8340	1	Decal-Torque
6	117-0486	1	Decal-Tension, Belt
7	107-1690	1	Decal
8	110-2067	1	Decal-Setting, Baffle
9	110-2068	1	Decal-Adjustment, Baffle
11	116-3076	2	Decal-Rotating Parts

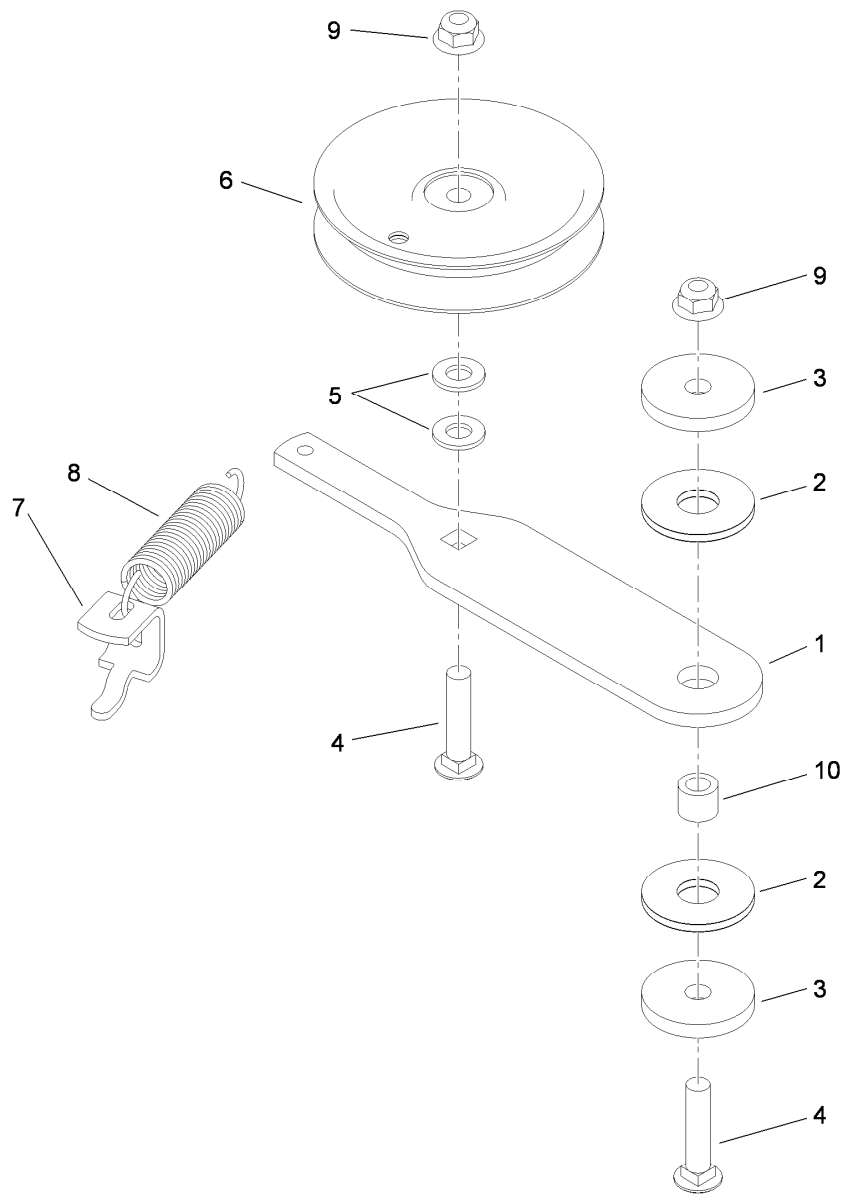


Spring Idler Assembly No. 117-0445

Ref.	Part Number	Qty.	Description
1	114-1992	1	Plate-Idler
2	114-0463	2	Washer-Friction, Composite
3	110-9981	2	Washer-Plain
4	3231-5	2	Screw-CARR
5	3256-24	2	Washer-Flat
6	93-1622	1	Pulley-Idler
7	117-0447-01	1	Bracket-Anchor, Spring
8	108-4056	1	Spring-Extension
9	104-8301	2	Nut-Flange, NI
10	1-413088	1	Bushing-Lever, Lift

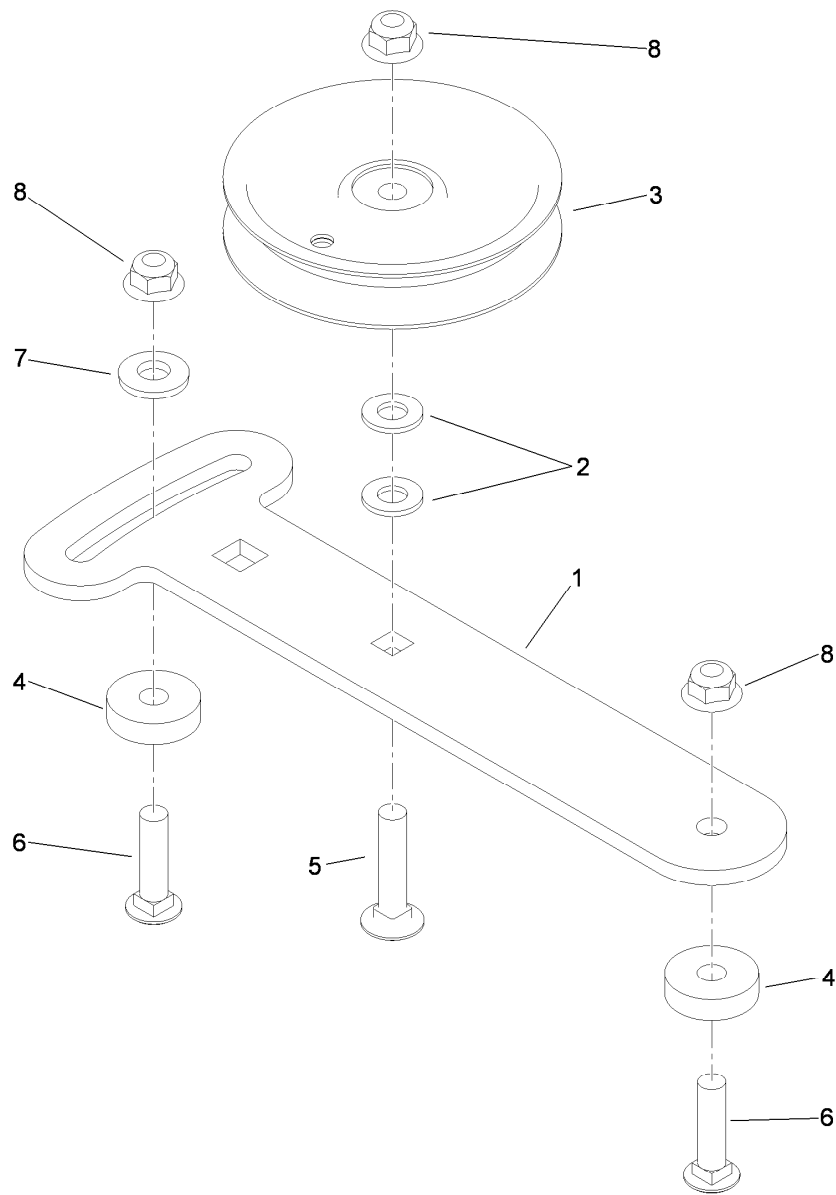

Idler Adjust Assembly No. 117-0446


Ref.	Part Number	Qty.	Description
1	114-1991	1	Plate-Idler
2	3256-24	2	Washer-Flat
3	93-1622	1	Pulley-Idler
4	105-7788	2	Spacer
5	3231-5	1	Screw-CARR
6	3231-4	2	Screw-CARR
7	98-5975	1	Washer-Belleville
8	104-8301	3	Nut-Flange, NI

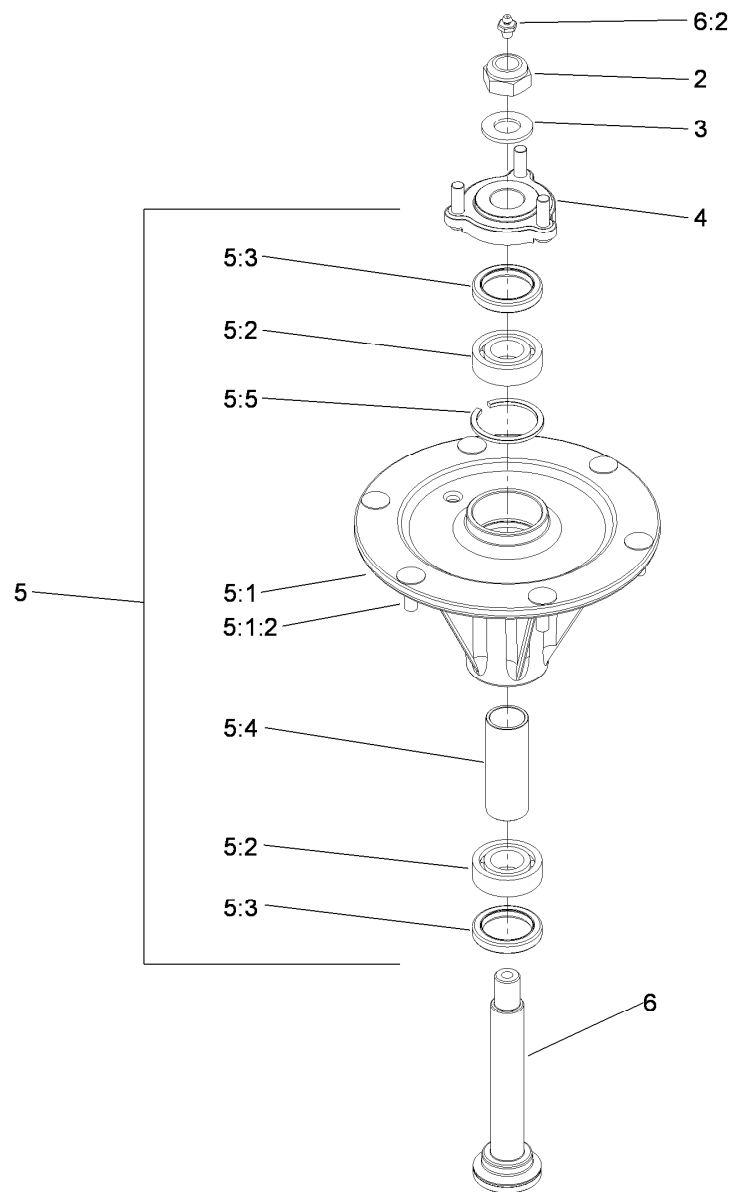

Spindle Assembly No. 117-6158

Ref.	Part Number	Qty.	Description
2	3296-67	1	Nut-Lock, NI
3	92-5836	1	Washer
4	117-6172	1	Spindle Hub ASM (W/Studs)
5		1	Spindle Housing And Ball Bearing ASM
5:1		1	Spindle Housing And Studs ASM ●
5:1:2	114-8195	6	Bolt-Ribbed Neck
5:2	76-7500	2	Bearing-Ball
5:3	253-133	2	Seal-Oil
5:4	117-6184	1	Spacer
5:5	114-8161	1	Ring-Snap
6	119-1851	1	Spindle Shaft And Zerk ASM
6:2	302-2	1	Fitting-Grease

● Not serviced separately

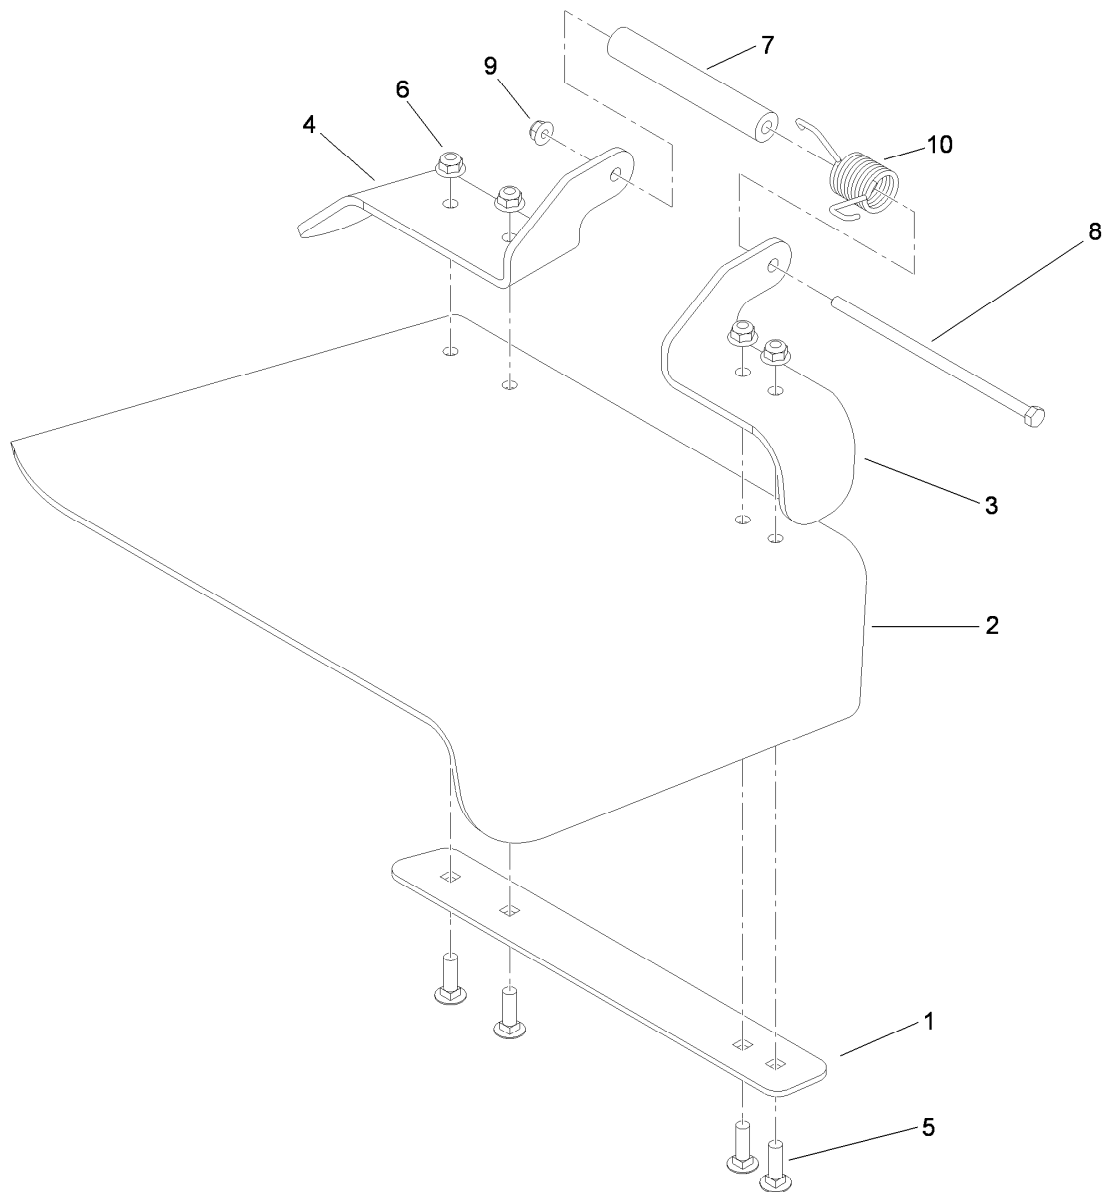

Deflector Assembly No. 114-1910

Ref.	Part Number	Qty.	Description
1	106-3248-03	1	Strap-Discharge
2	110-0759	1	Deflector-Rubber
3	108-7766-03	1	Bracket-Hinge, Front
4	108-7767-03	1	Bracket-Hinge, Rear
5	3231-25	4	Screw-CARR
6	104-8301	4	Nut-Flange, NI
7	105-4622	1	Spacer
8	322-50	1	Screw-HH
9	104-8300	1	Nut-Flange, NI
10	108-4052	1	Spring-Torsion

Attachments and Accessories

For 79548 GrandStand Mower With 48in TURBO FORCE Cutting Unit

Product Name	Model/Part
Standard High Lift Blade	107-3192-03
Blade-Low Flow, 16.5 inch	107-3193-03
Blade-Mid Flow, 16.5 inch	107-3194-03
Blade-Atomic, 16.5 inch	107-3195-03
Blade-Recycling, 16.5 inch	107-3196-03
Bagging Enhancement Kit	108-4091
Blade-Hi Flow, 16.5 inch (6 Pack)	110-0414
Blade-Lo Flow, 16.5 inch (6 Pack)	110-0415
Blade-Recycler, 16.5 inch (6 Pack)	110-0416
Blade-Atomic, 16.5 inch (6 Pack)	110-0417
Blade-Mid Flow, 16.5 inch (6 Pack)	110-0418
Weight-Cast	112-7059-01
Light Kit	114-3505
Striping Kit	114-3521
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Recycler Kit	117-0540
Weight Kit	117-3620
Chute Gate Kit With Bag	119-7292
Trash Bag ASM	119-7293
Soft Bag (3 Bushel)	30104

Notes:



Count on it.