



Count on it.

Form No. 3366-239 Rev B

Parts Catalog

2-Wheel Brake Kit

MH-400 Material Delivery Unit

Model No. 44942

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


2 Wheel Brake Assembly	4
RH Brake Assembly No. 120-0819	5
LH Brake Assembly No. 120-0818	6

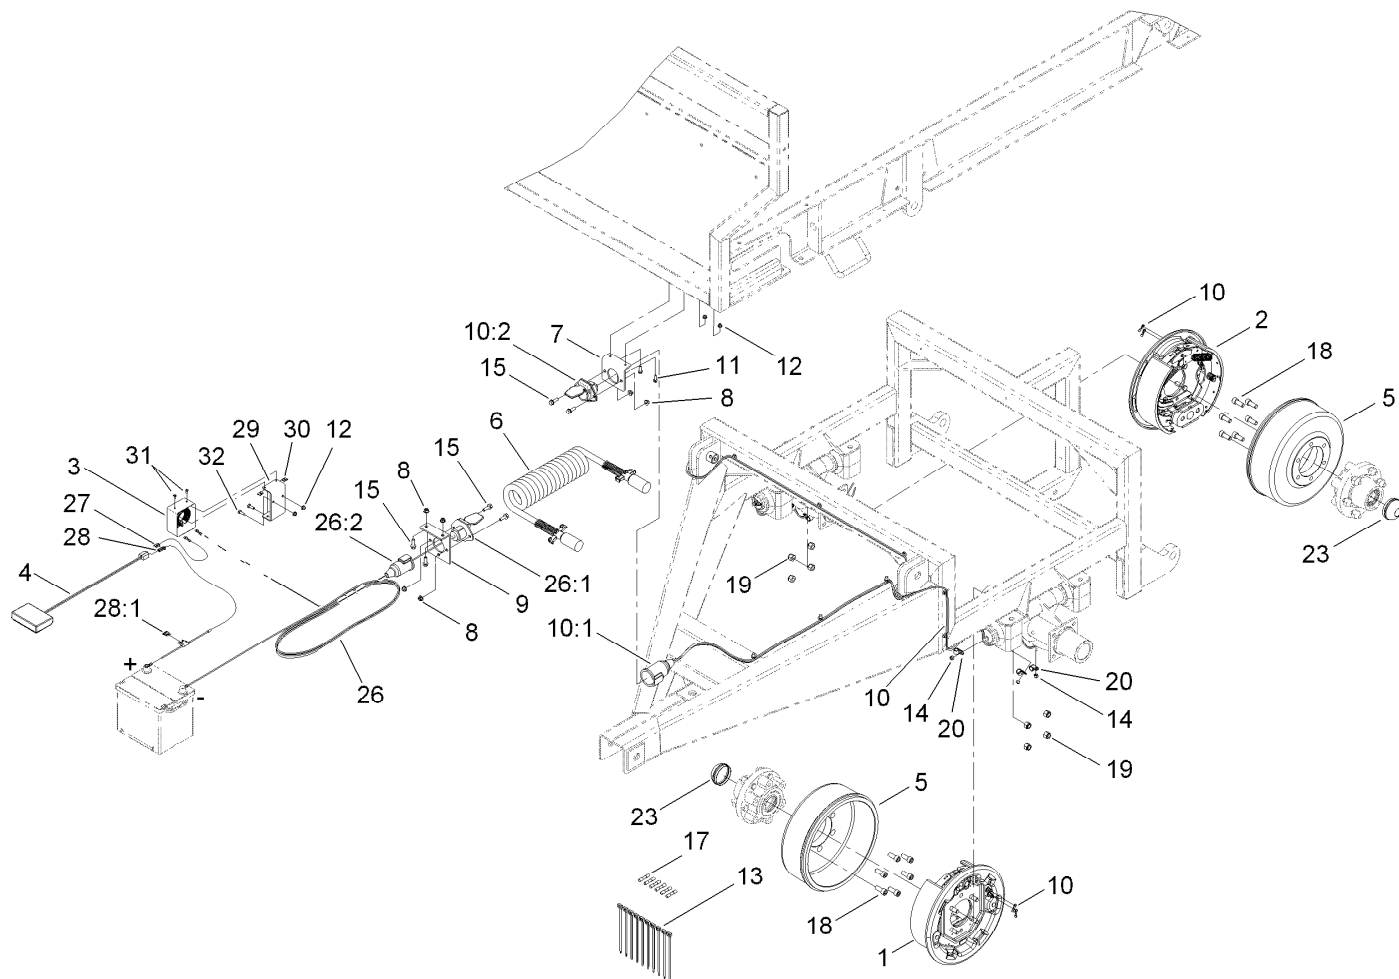

2 Wheel Brake Assembly


Ref.	Part Number	Qty.	Description
1	120-0819	1	RH Brake ASM
2	120-0818	1	LH Brake ASM
3	T54085020	1	Control-Load, Electric Brakes
4	T54085030	1	Control-Foot, Electric Brakes
5	119-6871	2	Drum-Brake
6	T58071132	1	Cable-Coil (Phillips) 12 Ft.
7	120-0892	1	Bracket-Connector
8	104-8300	6	Nut-Flange, NI
9	T36016080	1	Bracket-Tractor
10	120-0802	1	Harness-Wire, Electric Brakes
10:1	120-0876	1	Boot-Socket
10:2	32160-322	1	Connector-Trailer, 7M
11	115-5103	2	Screw-HHF
12	104-7201	4	Nut-HF
13	3290-378	10	Tie-Cable
14	3296-42	6	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
15	3234-29	6	Screw-HHF
17	32180-046	6	Splice-Heatshrink Covered
18	120-0940	12	Screw-HSH
19	3296-19	8	Nut-Hex
20	2412-73	6	Clamp-R
23	T54051026	2	Cap-Hub (5000/6000 Lb.)
26	120-0958	1	Harness-Wire, Brake (Trailer Battery)
26:1	32160-322	1	Connector-Trailer, 7M
26:2	120-0876	1	Boot-Socket
27	120-0959	1	Harness-Wire, Brake, Rheostat-Pedal
28	120-0960	1	Brake-Wire, Pedal (Battery)
28:1	218-578	1	Fuse-Blade, 10 Amp
29	120-0938	1	Bracket-Controller, Load
30	701493	2	Nut-Speed
31	3251-1	2	Screw-PPH
32	321-4	2	Screw-HH

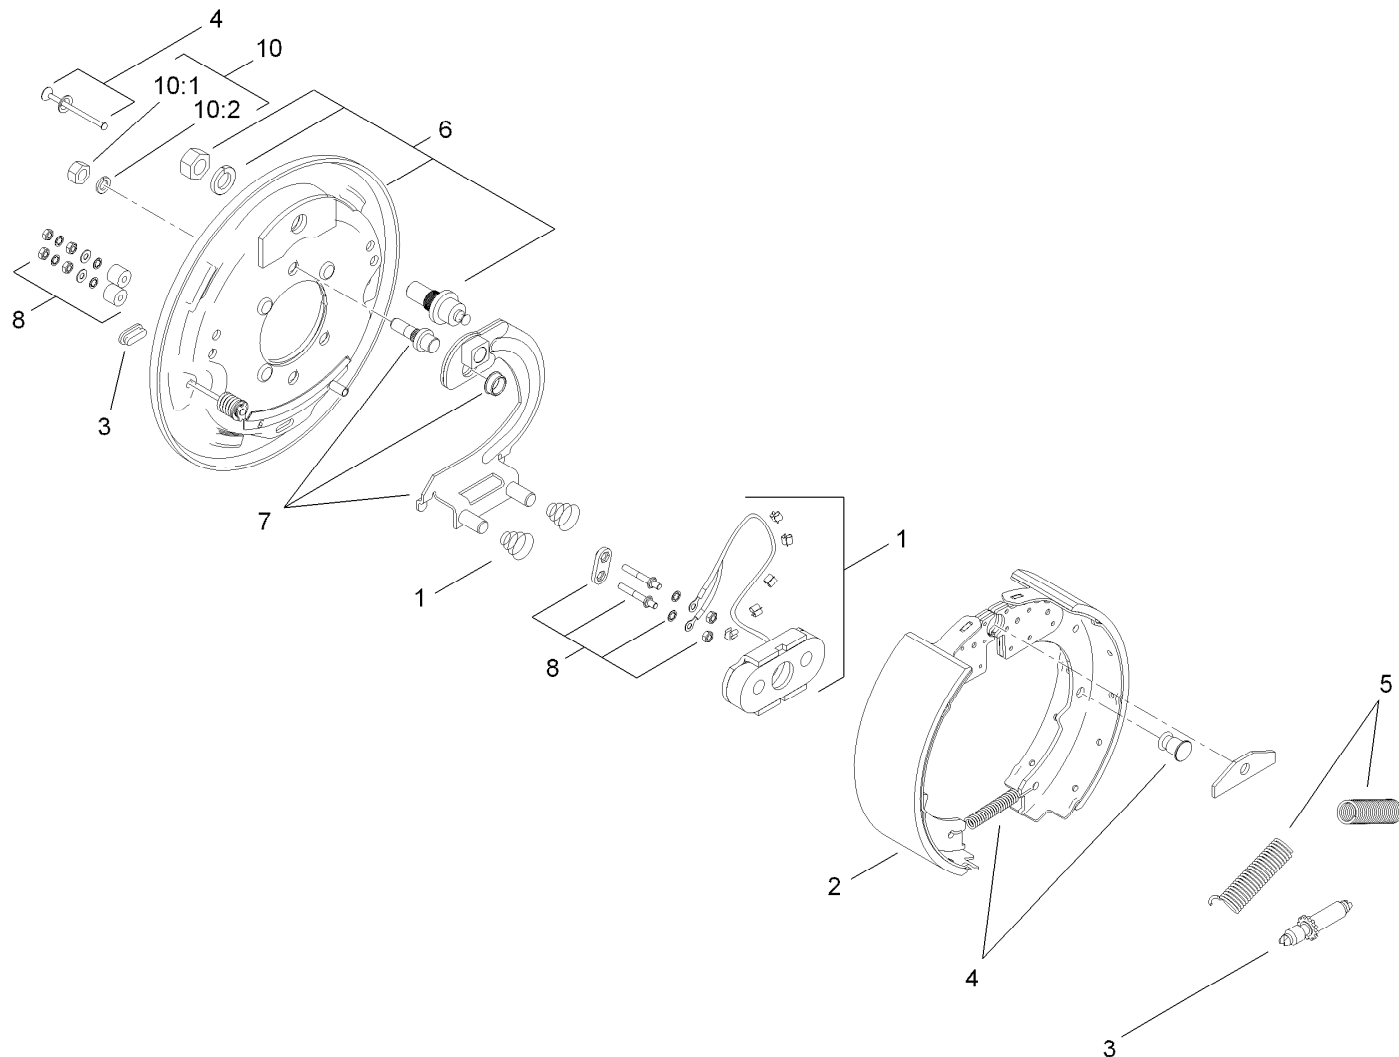

RH Brake Assembly No. 120-0819

Ref.	Part Number	Qty.	Description
1	120-0822	1	Magnet Kit
2	120-0823	1	Shoe And Lining Kit
3	120-0824	1	Adjuster Kit
4	120-0825	1	Hold Down Kit
5	120-0826	1	Shoe Return Spring Kit
6	120-0827	1	Backing Plate Kit
7	120-0828	1	RH Lever Arm Kit
8	120-0830	1	Terminal Assembly Kit
10	120-0832	1	Mounting Hardware Kit
10:1	3220-5	4	Nut-Jam
10:2	3253-7	4	Washer-Lock

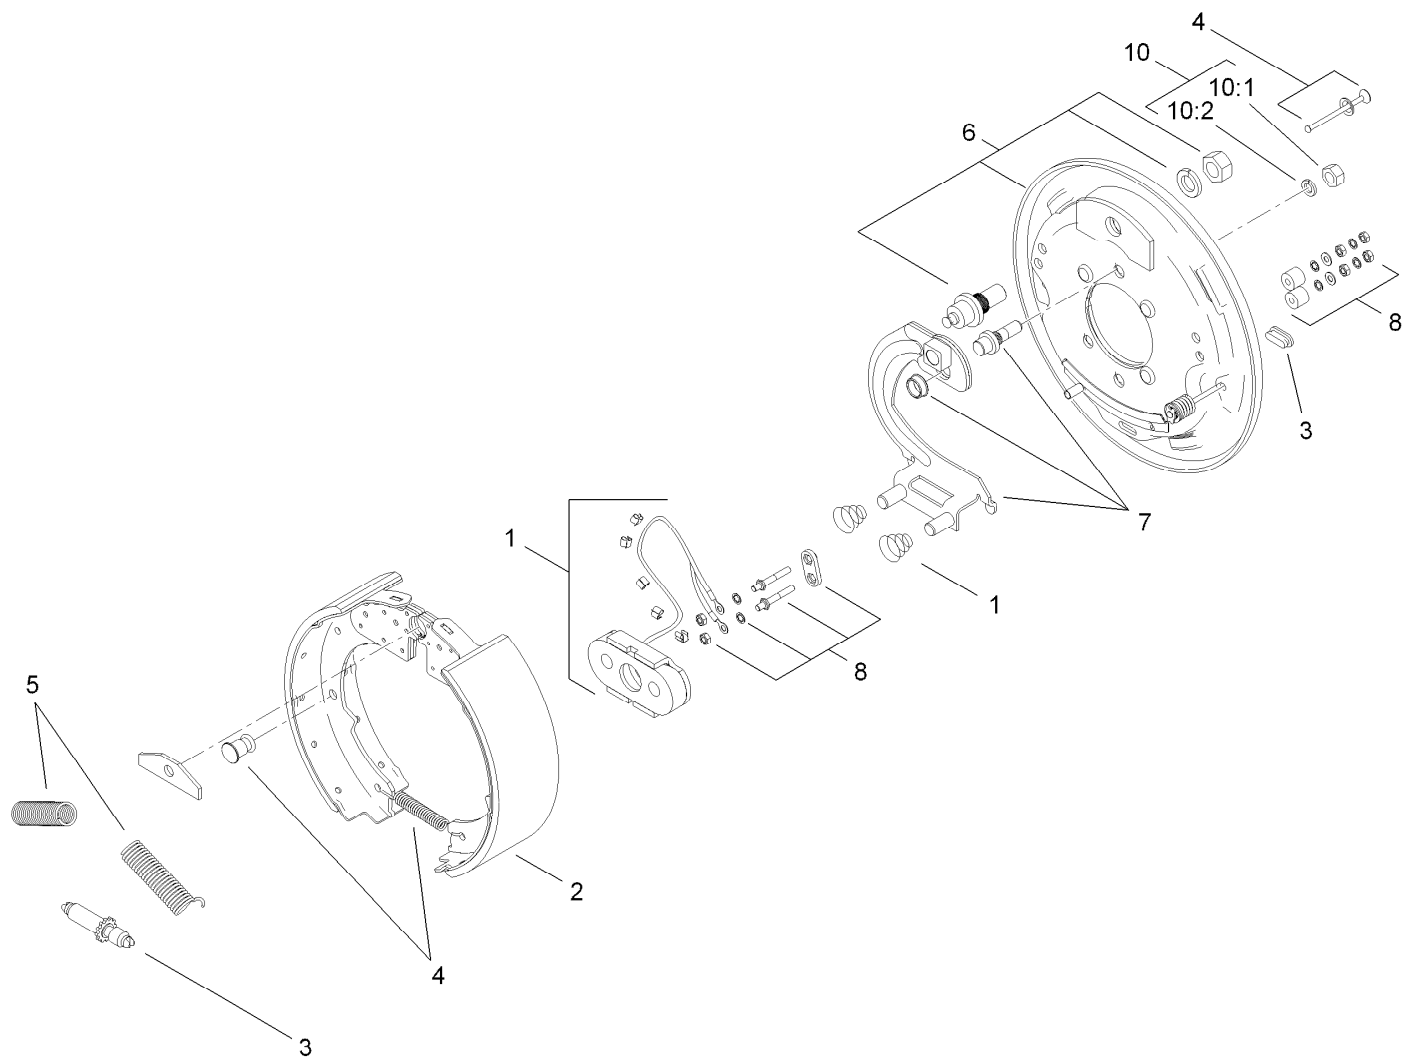

LH Brake Assembly No. 120-0818

Ref.	Part Number	Qty.	Description
1	120-0822	1	Magnet Kit
2	120-0823	1	Shoe And Lining Kit
3	120-0824	1	Adjuster Kit
4	120-0825	1	Hold Down Kit
5	120-0826	1	Shoe Return Spring Kit
6	120-0827	1	Backing Plate Kit
7	120-0829	1	LH Lever Arm Kit
8	120-0830	1	Terminal Assembly Kit
10	120-0832	1	Mounting Hardware Kit
10:1	3220-5	4	Nut-Jam
10:2	3253-7	4	Washer-Lock

Notes:



Count on it.