



Count on it.

Form No. 3367-840 Rev A

Parts Catalog

Electric Hose Reel Kit

**2005 and After Multi-Pro® 1200/1250 Turf
Sprayer**

Model No. 41135—Serial No. 311000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Hose Reel and Valve Box Assembly 4


Hose Reel Assembly No. 106-5083 5

Hose Reel Frame Assembly No. 104-8714 6

Spray Gun Assembly No. 100-6733 7

3 Way Valve and Pressure Gauge Assembly..... 8


3-Way Valve Assembly No. 104-9069..... 9

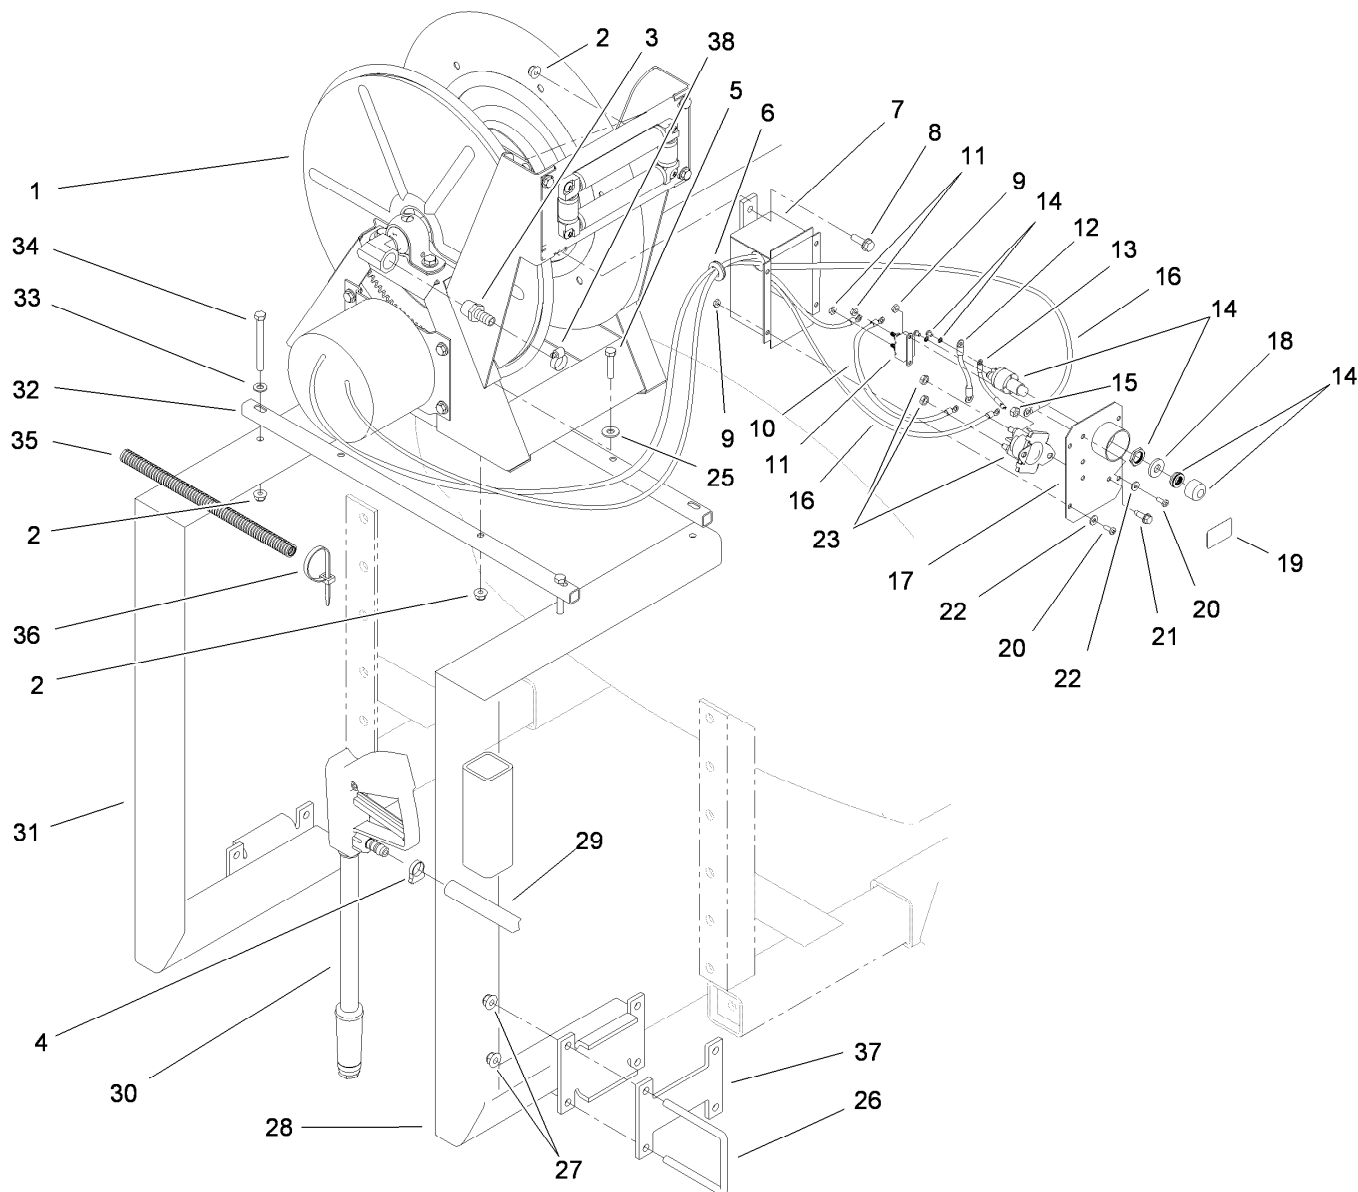

Hose Reel and Valve Box Assembly


Ref.	Part Number	Qty.	Description
1	106-5083	1	Hose Reel ASM
2	104-8300	9	Nut-Flange, NI
3	110-5065	1	Hosebarb
4	2412-36	1	Clamp-Hose
5	322-7	4	Screw-HH
6	100-3815	1	Grommet-Rubber
7	42397-03	1	Electrical Box ASM
8	3234-17	1	Screw-HHF
9	3219-14	6	Nut-Hex
10	42206	1	Harness-Wire (Solenoid To Breaker)
11	42201	1	Breaker-Circuit
12	42207	1	Harness-Wire (Solenoid To Switch)
13	42208	1	Harness-Wire (Switch To Solenoid)
14	42202	1	Switch-Momentary
15	3217-5	2	Nut-Hex
16	106-5078	1	Harness-Wire
17	95-2495-03	1	Electrical Box Cover ASM

Ref.	Part Number	Qty.	Description
18	105-0842	1	Spacer
19	107-8757	1	Decal-Reel, Hose
20	3250-31	6	Screw-PPH
21	321-4	2	Screw-HH
22	3256-14	6	Washer-Flat
23	111674	1	Solenoid-Starter
25	3256-3	4	Washer-Flat
26	100-7067	4	U-Bolt
27	104-8301	8	Nut-Flange, NI
28	108-3274-03	1	Mount Hose Reel, RH
29	107-8756	1	Hose Hose Reel ASM
30	100-6733	1	Sprayer-Handheld
31	108-3273-03	1	Mount-Hose Reel, LH
32	104-8723-03	2	Tube-Cross
33	3256-23	4	Washer-Flat
34	322-20	4	Screw-HH
35	106-5089	1	Conduit-12 Inch
36	3290-378	10	Tie-Cable
37	108-3272-03	2	Bracket-Spacer
38	2412-129	1	Clamp-Hose

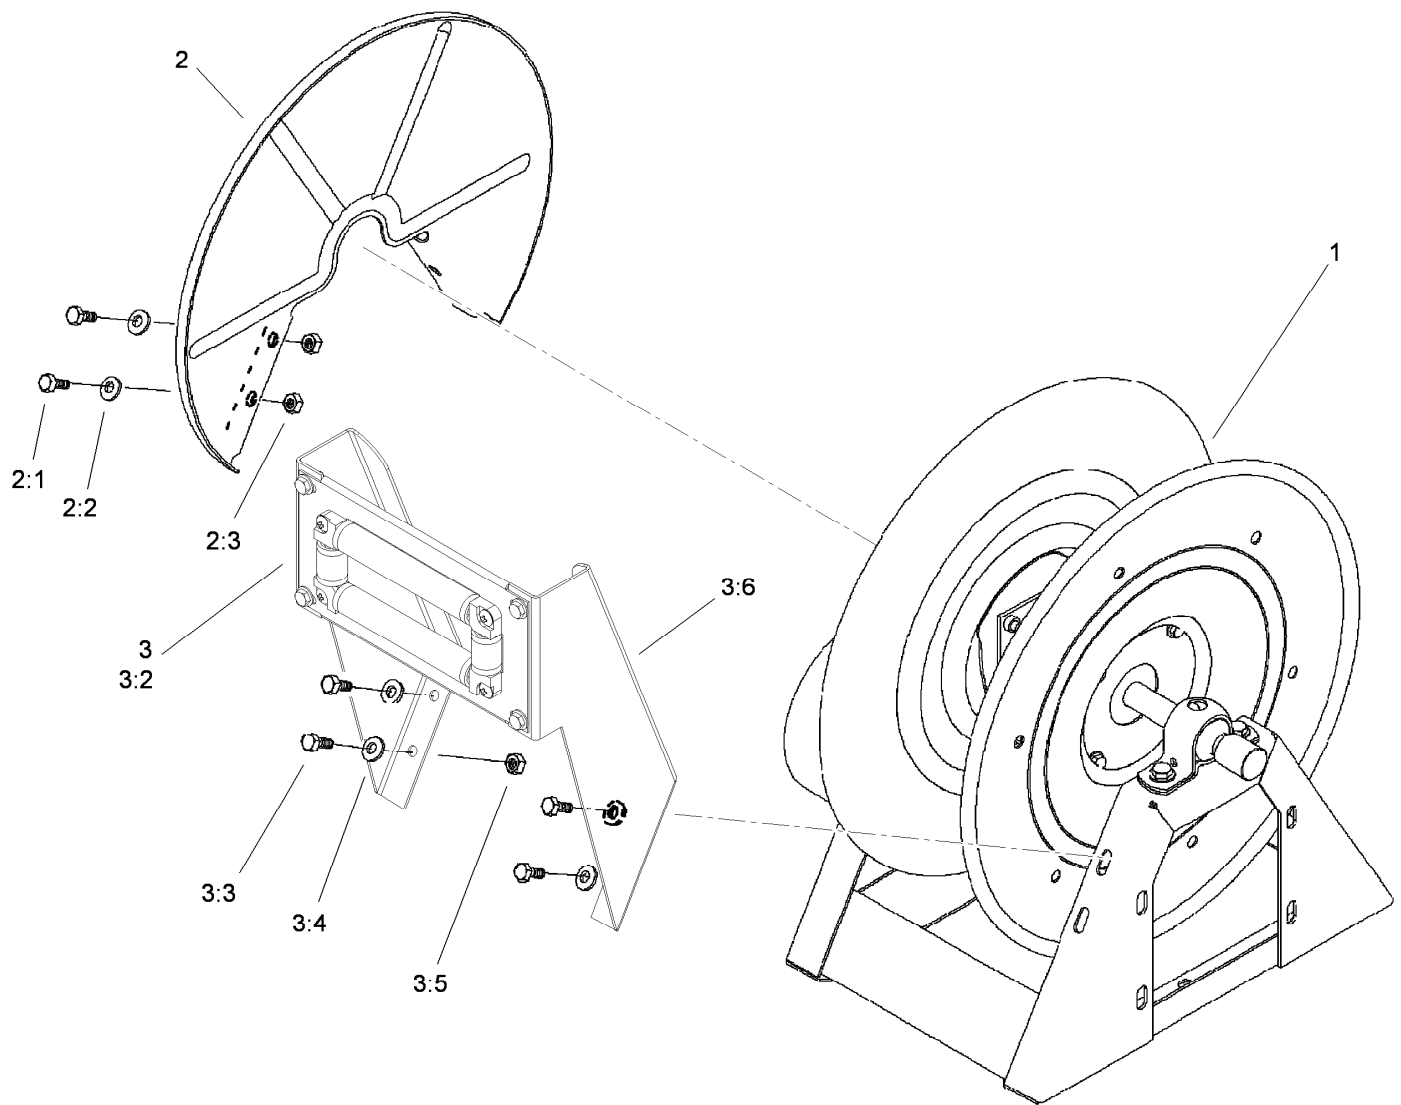

Hose Reel Assembly No. 106-5083


Ref.	Part Number	Qty.	Description
1	104-8714	1	Hose Reel Frame ASM
2	104-8715	1	Chainguard-Reel, Hose
2:1	322-5	4	Screw-HH
2:2	3256-23	4	Washer-Flat
2:3	3296-29	4	Nut-Lock, NI
3	104-8799	1	Guide-Reel, Hose
3:2	104-8820	1	Bracket-Roller Guide, Right
3:3	322-5	8	Screw-HH
3:4	3256-23	8	Washer-Flat
3:5	3296-29	8	Nut-Lock, NI
3:6	104-8821	1	Bracket-Roller Guide, Left

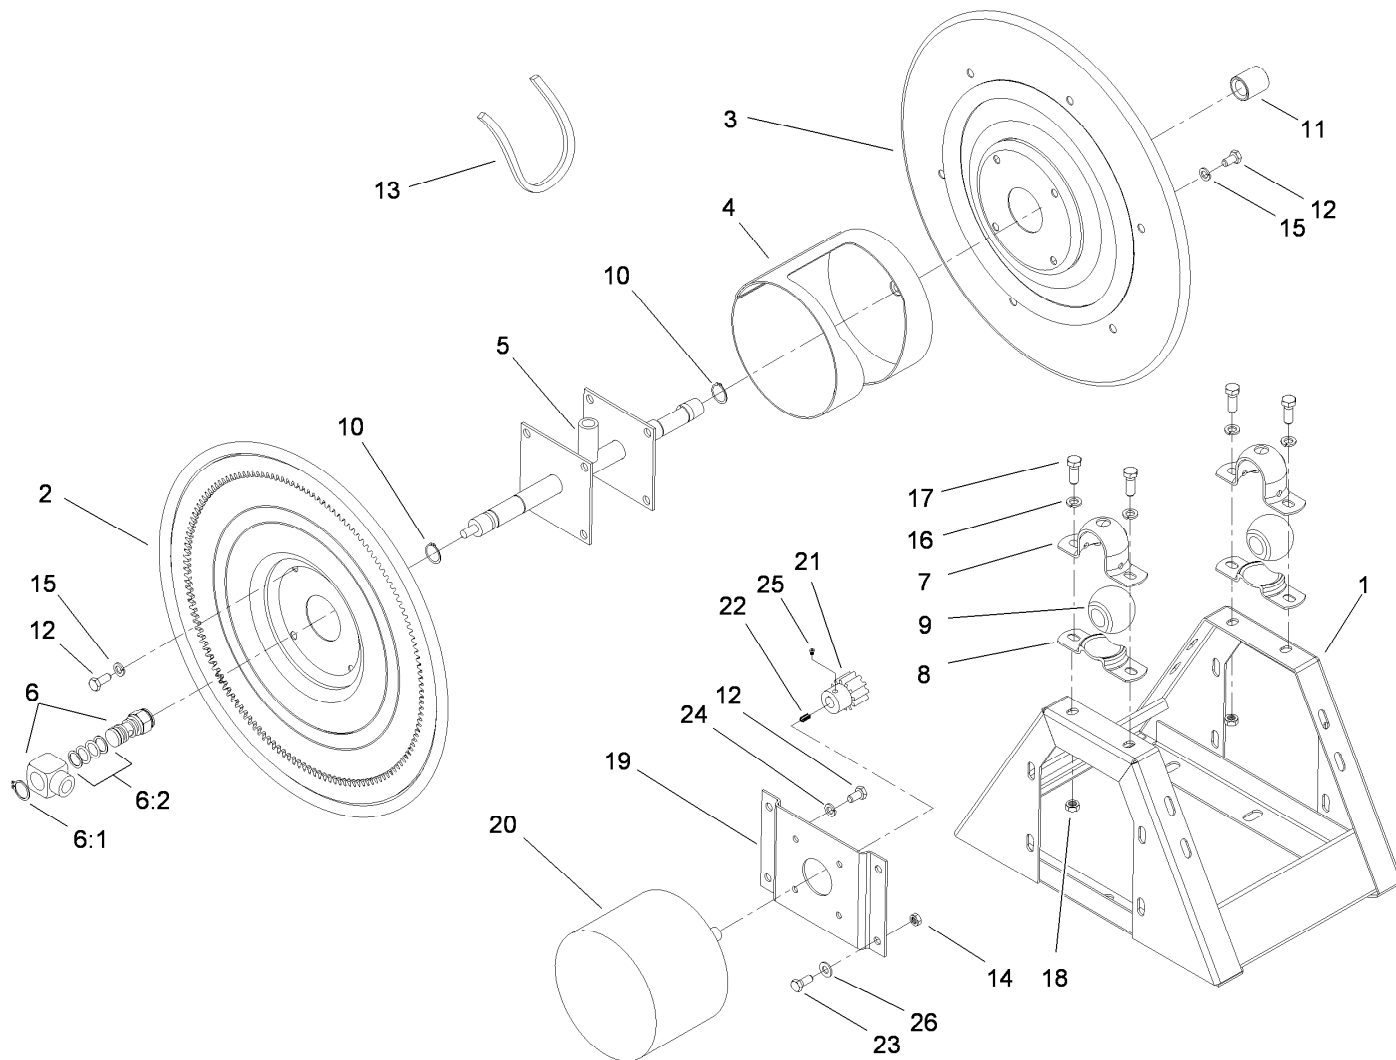

Hose Reel Frame Assembly No. 104-8714

Ref.	Part Number	Qty.	Description
1	104-8803	1	Hose Reel Frame ASM
2	104-8804	1	Disc And Gear ASM
3	104-8805	1	Disc-Crank, Side
4	104-8806	1	Drum-Center
5	104-8807	1	Axle ASM
6	104-8808	1	Swivel ASM
6:1	104-8812	1	Ring-Retainer
6:2	104-8864	1	Swivel Seal Kit
7	104-8809	2	Block-Pillow, Top
8	104-8810	2	Block-Pillow, Bottom
9	104-8811	2	Bearing
10	104-8812	2	Ring-Retainer
11	104-8813	1	Cap-Pipe
12	322-3	8	Screw-HH


Ref.	Part Number	Qty.	Description
13	104-8814	1	Trim-Edge, Drum
14	3296-29	4	Nut-Lock, NI
15	3256-23	8	Washer-Flat
16	3253-21	4	Washer-Lock
17	323-6	4	Screw-HH
18	32128-21	1	Nut-HF
19	104-8815	1	Bracket-12V Dc
20	104-8816	1	Motor-12V Dc
21	104-8817	1	Pinion
22	104-8818	4	Key
23	322-5	4	Screw-HH
24	3253-4	1	Washer-Lock
25	104-8819	4	Screw-Set
26	3256-23	4	Washer-Flat

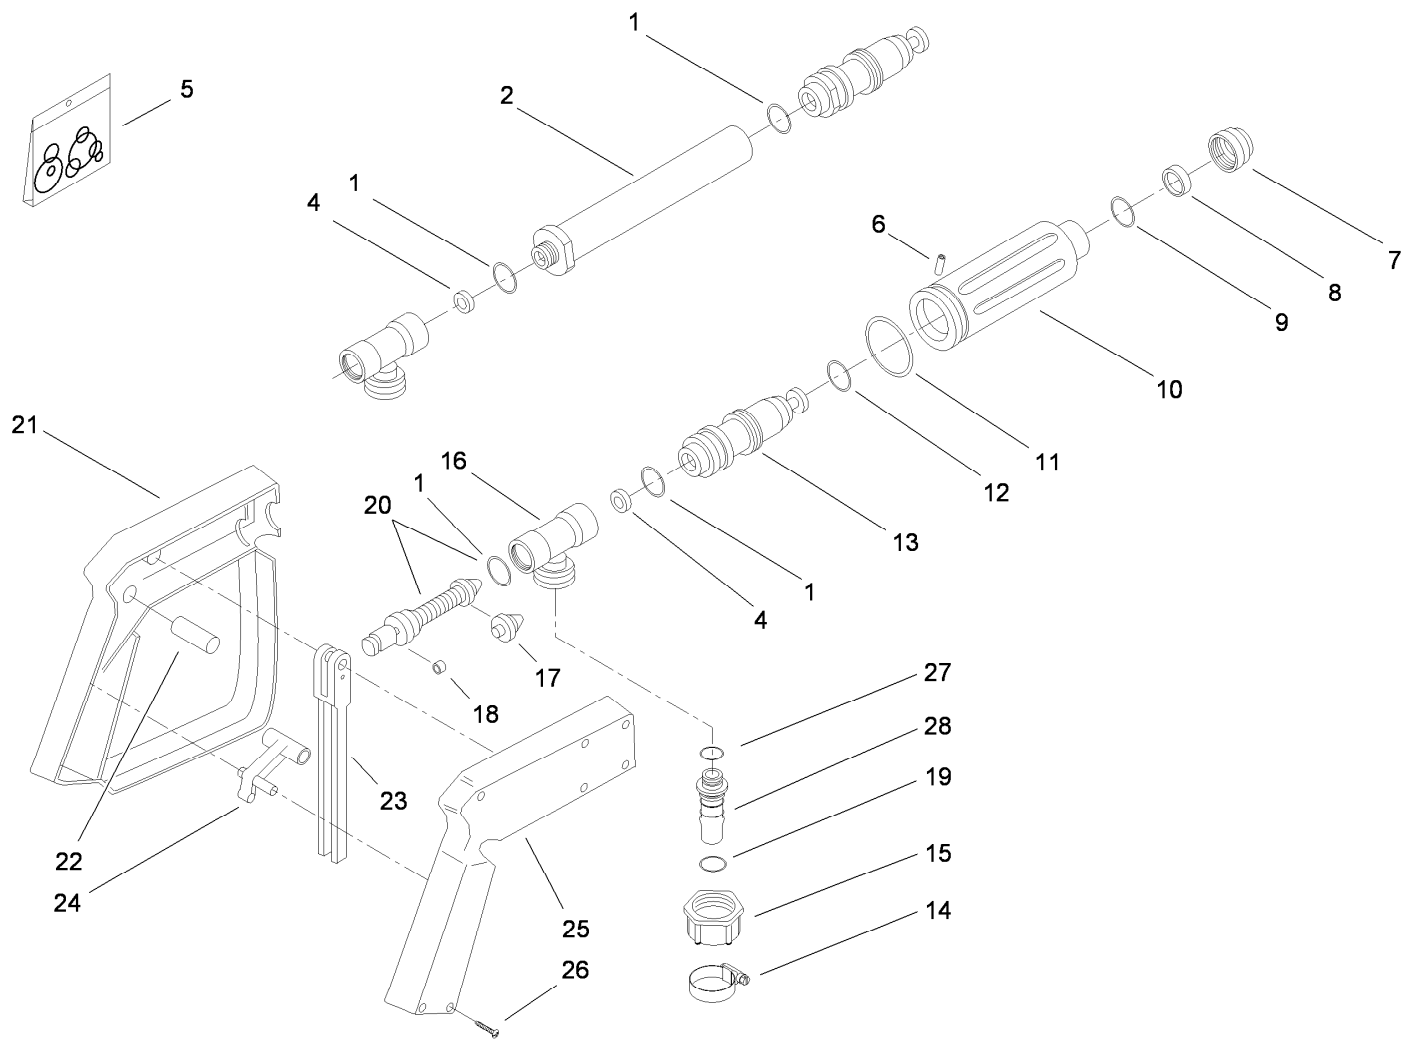

Spray Gun Assembly No. 100-6733

Ref.	Part Number	Qty.	Description
1	100-6649	3	O-Ring
2	99-0885	1	Extension-Lance
4	99-0884	1	Seal-Valve, On/Off
5	99-0779	1	Repair Kit
6	99-0887	1	Pin
7	99-0890	1	Housing-Nozzle
8	99-0889	1	Nozzle-Ceramic
9	100-6650	1	O-Ring
10	99-0886	1	Housing-Swirl
11	100-6646	1	O-Ring
12	100-6644	1	O-Ring
13	99-0780	1	Swirl
14	99-0772	1	Clamp-Hose
15	107-8734	1	Nut-Swivel


Ref.	Part Number	Qty.	Description
16	99-0883	1	Housing-Valve
17	104-8860	1	Cone
18	104-8861	1	Sleeve-Rubber
19	100-6647	1	O-Ring
20	99-0882	1	Valve ASM
21	99-0877	1	Handle-LH
22	99-0878	1	Stop-Trigger, Rubber
23	99-0880	1	Arm-Trigger
24	99-0879	1	Arm-Safety, Trigger
25	99-0881	1	Handle-RH
26	100-6666	1	Screw
27	100-6648	1	O-Ring
28	106-5093	1	Hosebarb-Brass

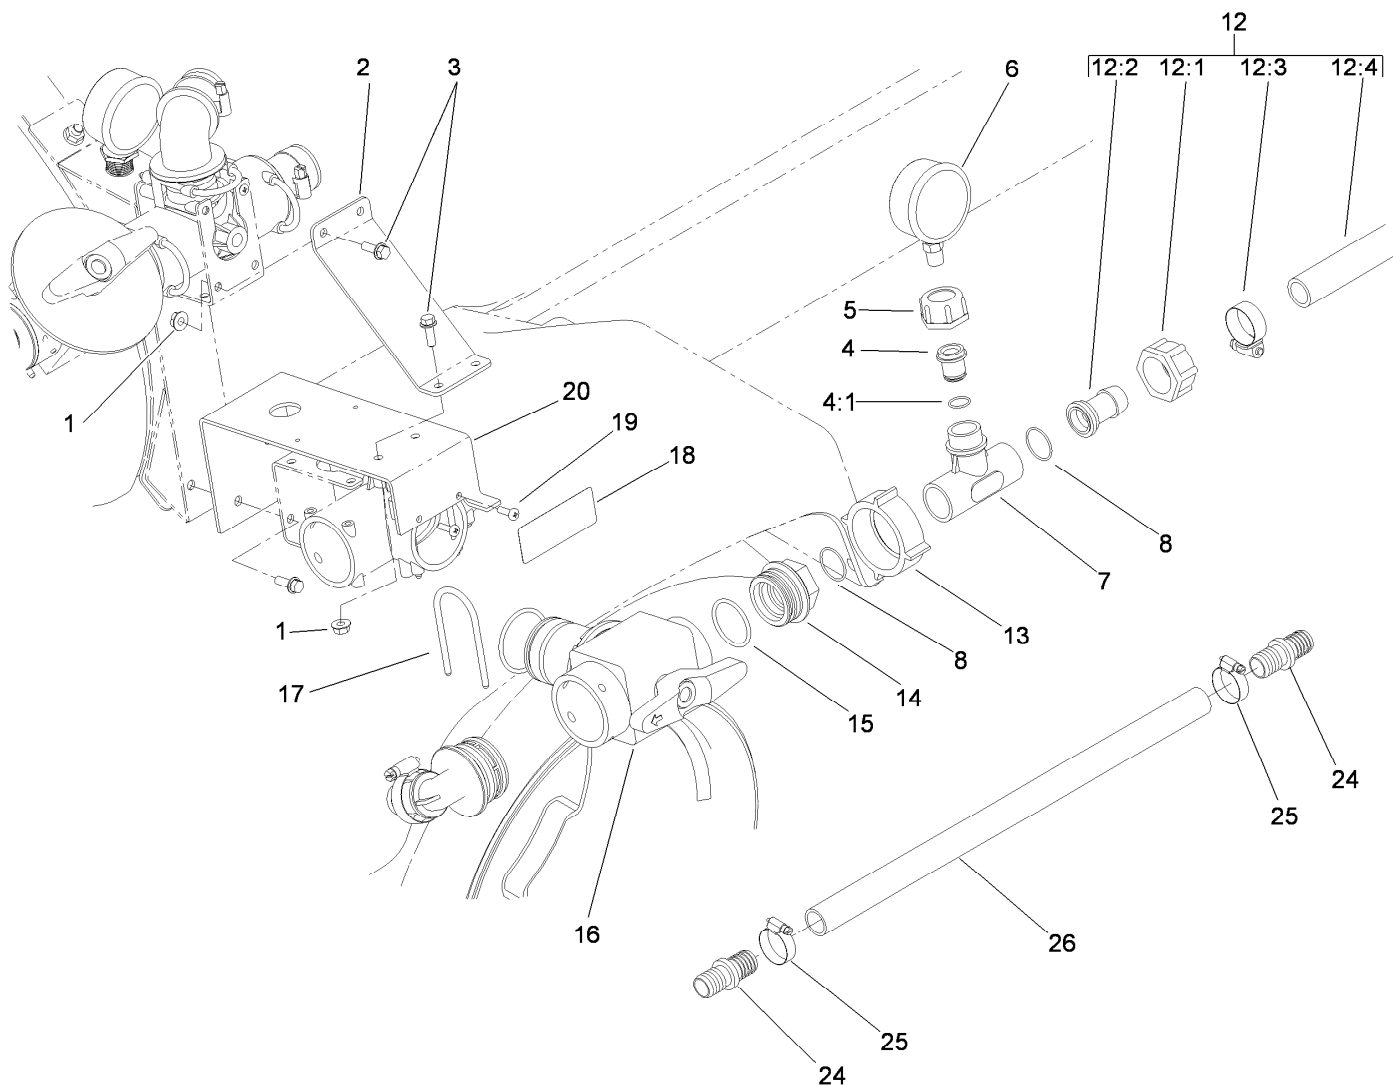

3 Way Valve and Pressure Gauge Assembly

Ref.	Part Number	Qty.	Description
1	32128-33	4	Nut-HF
2	104-8728-03	1	Bracket-Support
3	3234-4	4	Screw-HHF
4	106-5072	1	Reducer ASM
4:1	100-6645	1	O-Ring
5	99-0850	1	Nut
6	110-5080	1	Gauge-Pressure
7	100-8699	1	Tee
8	100-6655	2	Gasket
12	110-5068	1	Hose-ASM
12:1	99-0769	1	Nut
12:2	100-6719	1	Hosebarb
12:3	2412-129	1	Clamp-Hose

Ref.	Part Number	Qty.	Description
12:4	110-5064	1	Hose
13	100-8669	1	Nut
14	104-9067	1	Adapter-Valve
15	100-8671	1	O-Ring
16	104-9069	1	3-Way Valve ASM
17	100-8635	1	Fork
18	106-5081	1	Decal-Control, Spray
19	32144-32	2	Screw
20	104-8727-03	1	Bracket-Valve
24	119-9429	2	Fitting-Hose Mender
25	2412-3	4	Clamp-Hose
26	119-0445	1	Hose-Main Supply

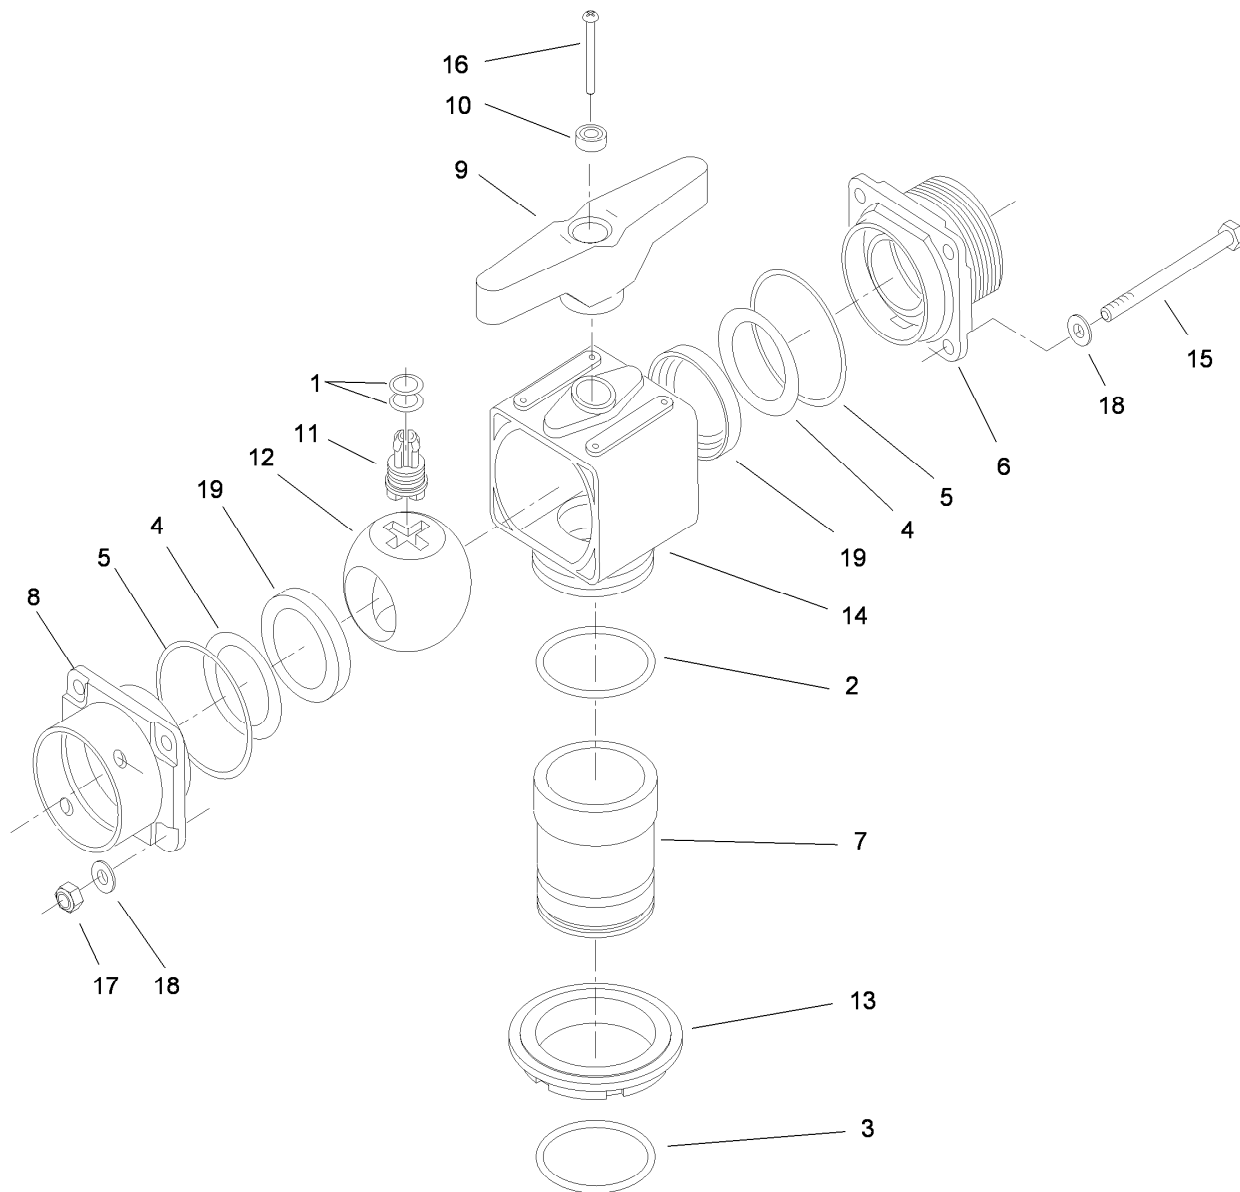

3-Way Valve Assembly No. 104-9069

Ref.	Part Number	Qty.	Description
1	100-6644	2	O-Ring
2	100-8671	1	O-Ring
3	100-8637	1	O-Ring
4	100-8694	2	O-Ring
5	106-5068	2	O-Ring
6	106-5069	1	Cover-End, 3-Way Valve
7	104-8858	1	Nipple
8	100-8687	1	Cover-End, 3-Way Valve
9	100-8683	1	Handle-Valve, 3-Way
10	100-8682	1	Button

Ref.	Part Number	Qty.	Description
11	100-8686	1	Spindle-Valve, 3-Way
12	106-5070	1	Ball-Valve, 3-Way
13	104-8857	1	Nut
14	106-1323	1	Housing
15	33113-080	4	Screw-HH
16	100-8688	1	Screw-Plastic
17	33023-00	4	Nut-Lock
18	100-8692	8	Washer
19	100-8695	2	Seat-Ball

Notes:

Notes:



Count on it.