



Count on it.

Parts Catalog

Greensmaster® 3050

2-Wheel Drive Traction Unit

Model No. 04351—Serial No. 290000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

 
STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Control Pedal Assembly	4
Traction Control Assembly	6
Front Wheel and Brake Assembly	7
Hydraulic Motor Assembly (CCW) No. 110-4015	8
Hydraulic Motor Assembly (CW) No. 110-4016	9
Steering Arm Assembly	10
Right Hand Pull Frame Assembly	11
Hydraulic Cylinder Assembly No. 106-9066	13
Left Hand Pull Frame Assembly	14
Rear Pull Frame Assembly	15
Hydraulic Cylinder Assembly No. 106-9064	16
Seat Assembly	17
Control Valve Installation Assembly	18
Control Valve Assembly No. 105-3800	20
Section 1 Assembly No. 105-3801	21
Section 2 Assembly No. 105-3802	22
Section 3 Assembly No. 105-3803	23
Section 4 Assembly No. 105-3804	24
Section 5 Assembly No. 93-1386	25
Engine Installation Assembly	26
Hydraulic Pump Installation Assembly	27
Gear Pump Assembly 107-2565	28
Frame Assembly	29
Rear Wheel Assembly	30
Control Panel Assembly	31
Hydraulic Reservoir Assembly	32
Fuel Tank Assembly	33
Reel Motor Installation Assembly	34
Hydraulic Motor Assembly No. 105-9770	35
Cylinder Assembly Briggs and Stratton 356447-0200-E1	36
Crankcase Assembly Briggs and Stratton 356447-0200-E1	37
Crankshaft Assembly Briggs and Stratton 356447-0200-E1	38
Cylinder Head Assembly Briggs and Stratton 356447-0200-E1	39
Oil Filter, Tube and Pump Assembly Briggs and Stratton 356447-0200-E1	40
Carburetor Assembly Briggs and Stratton 356447-0200-E1	41
Governor Assembly Briggs and Stratton 356447-0200-E1	42
Flywheel Assembly Briggs and Stratton 356447-0200-E1	43
Air Cleaner Assembly Briggs and Stratton 356447-0200-E1	44
Blower Housing Assembly Briggs and Stratton 356447-0200-E1	45
Starter Assembly Briggs and Stratton 356447-0200-E1	46
Engine Gasket Set Briggs and Stratton 356447-0200-E1	47
Valve Gasket Set and Carburetor Overhaul Kit Briggs and Stratton 356447-0200-E1	48
Seat Assembly	49
Attachments and Accessories	50

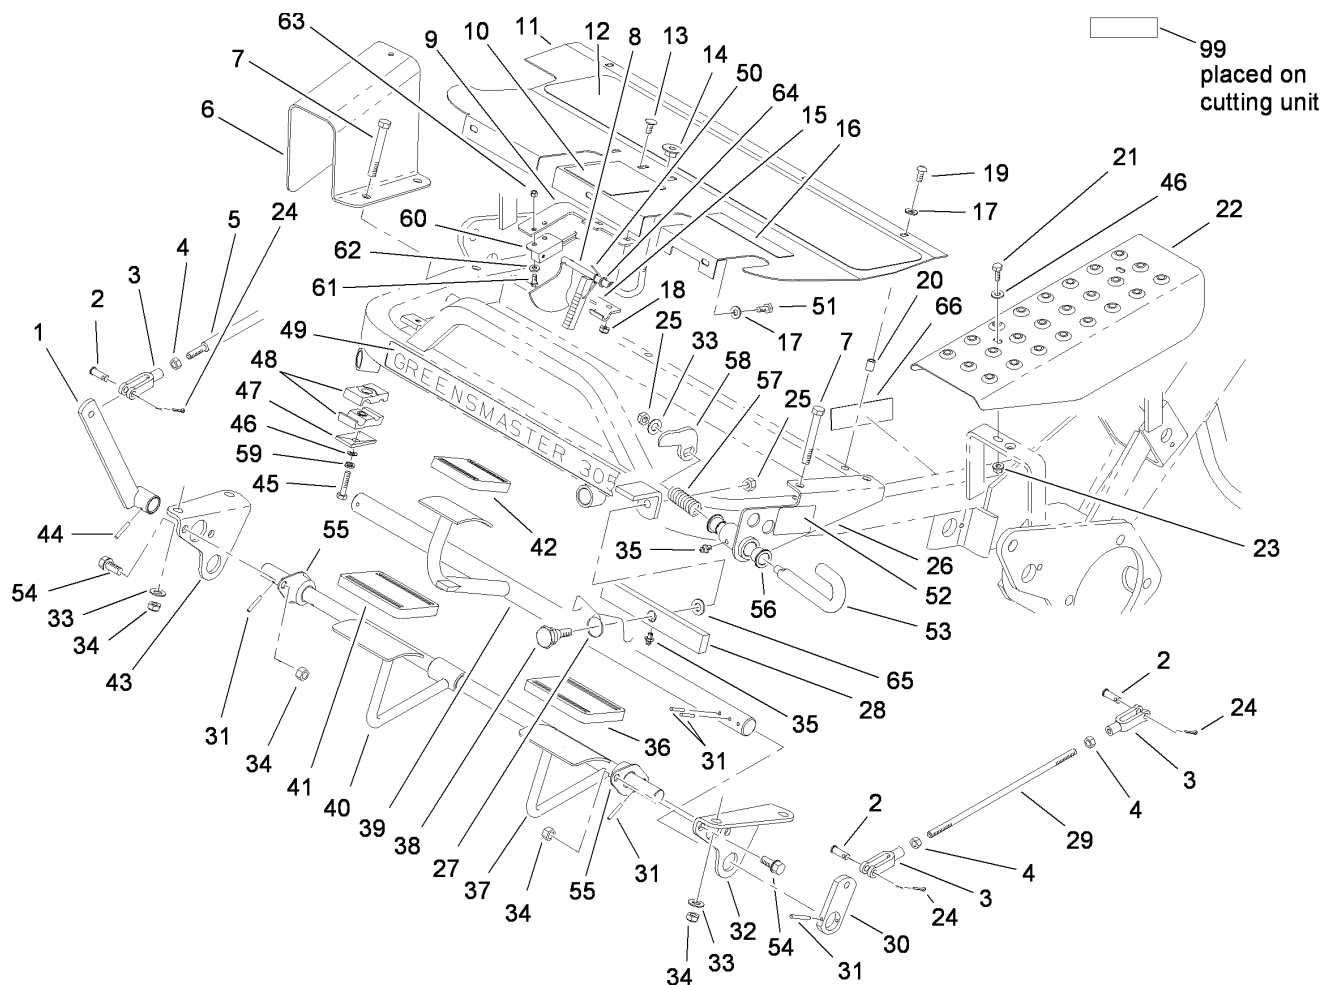

Control Pedal Assembly

Ref.	Part Number	Qty.	Description
1	49-6200-01	1	Lever-Cutting
2	283-61	5	Pin-Yoke
3	282-2	5	Yoke
4	3220-2	5	Nut-Jam
5	49-5430	1	Rod-Control
6	49-6110-01	1	Guard-Rod, Transmission
7	323-13	4	Screw-HH
8	100-9819	1	Latch ASM
9	100-9821	1	Plate-Switch, Reed
10	93-8062	1	Decal-Brake, Parking
11	83-0640-01	1	Plate-Footrest
12	49-6120	1	Pad-Footrest
13	3229-11	2	Screw-CARR
14	32141-111	1	Nut-Adjusting
15	95-1629	1	Hinge-Lower
16	93-8075	1	Decal-Mow/Lift
17	3256-1	7	Washer-Flat
18	3296-16	2	Nut-Lock, NI
19	3274-31	4	Screw-HSBH
20	32148-6	8	Insert-Nut
21	321-4	2	Screw-HH
22	83-0200-01	1	Plate-Cover, LH
23	32128-33	2	Nut-HF
24	3272-6	5	Pin-Cotter
25	3296-39	2	Nut-Lock, NI
26	93-9901-01	1	Bracket-Lockout, Mow
27	83-0080	1	Spring-Pivot, Lift
28	106-6396	1	Lift-Pivot


Ref.	Part Number	Qty.	Description
29	27-2270	2	Rod-Adjustment, Brake
30	112-9180	2	Strap-Shaft, Brake
31	32121-35	8	Pin-Roll
32	88-9640-01	1	Bracket-Lift Pivot, LH
33	3256-24	5	Washer-Flat
34	3296-59	8	Nut-Lock, NI
35	302-5	2	Fitting-Grease
36	93-7631	1	Pad-Foot, Lift
37	106-6395	1	Cutting Control Shaft ASM
38	83-2590	1	Bolt-Shoulder, Pivot
39	83-0160	1	Shaft-Brake
40	106-6394	1	Mow Pedal ASM
41	93-7630	1	Pad-Foot
42	93-7629	1	Pad-Foot, Brake
43	88-9630-01	1	Bracket-Lift Pivot, RH
44	32121-6	1	Pin-Roll, Slotted
45	321-11	1	Screw-HH
46	3256-22	3	Washer-Flat
47	69-9760	1	Coverplate
48	56-7970	2	Clamp-Tube
49	95-5997	1	Decal
50	10-8140	1	Spring-Latch, Brake
51	321-3	3	Screw-HH
52	93-9898	1	Decal-Lock
53	93-9903	1	Pin-Mow, Lockout
54	3234-1	4	Screw-HHF
55	27-2320	2	Bearing
56	3-1506	2	Bushing

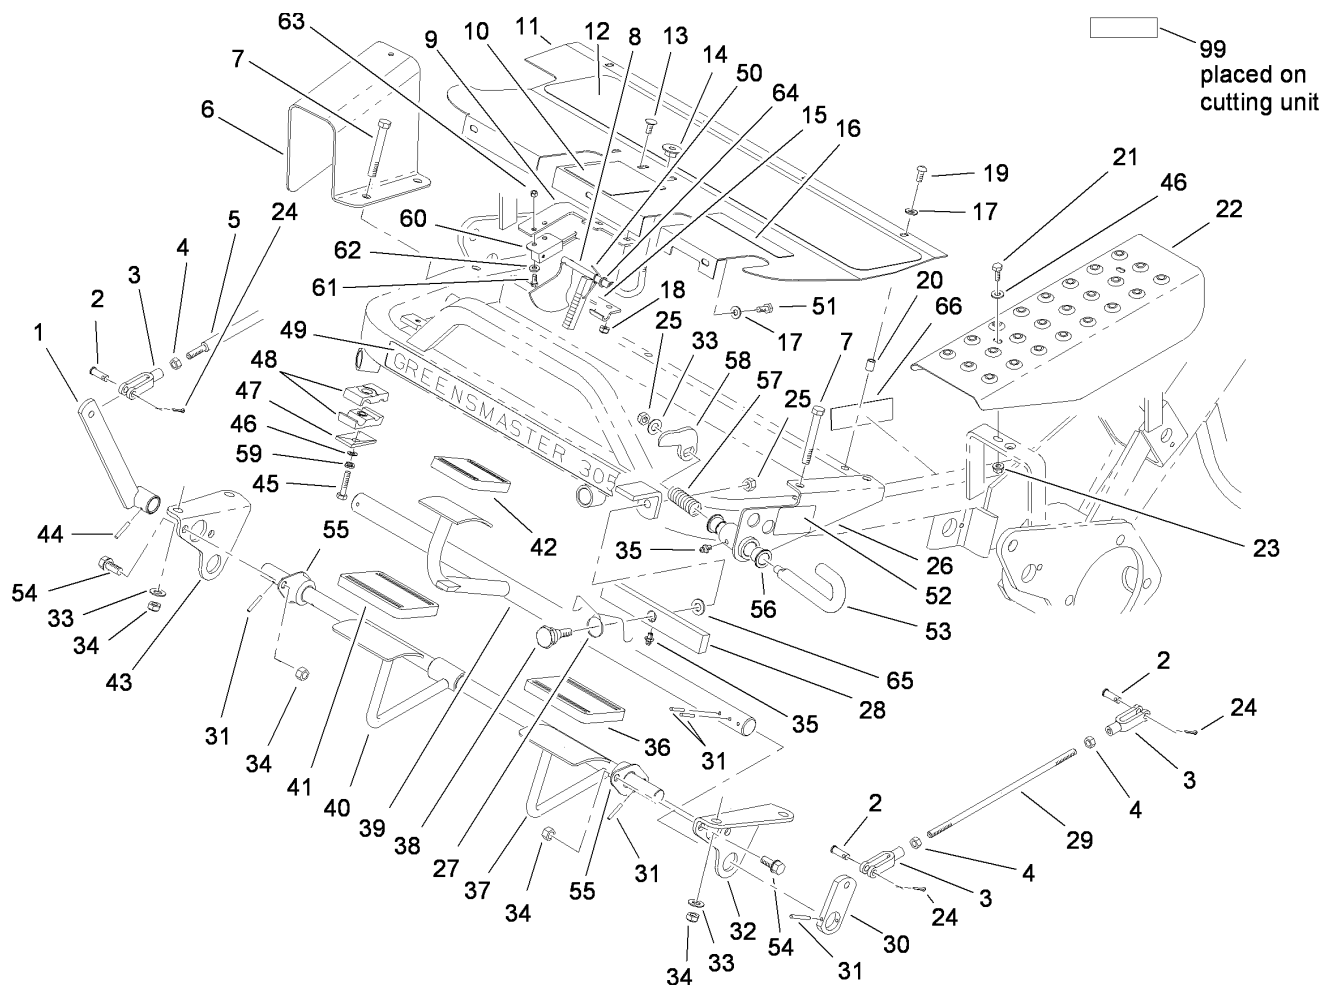 

Control Pedal Assembly (continued)

Ref.	Part Number	Qty.	Description
57	76-0410	1	Spring-Compression
58	93-9904	1	Arm-Mow, Lockout
59	3253-3	1	Washer-Lock
60	104-2057	1	Sensor
61	33113-016	2	Screw-HH
62	33093-00	2	Washer-Flat


Ref.	Part Number	Qty.	Description
63	33023-00	2	Nut-Lock
64	75-5470	2	Spacer-Bearing
65	80-7730	1	Spacer
66	115-3250	1	Decal-Regulatory
99	93-6691	3	Decal-Bolt, Eccentric

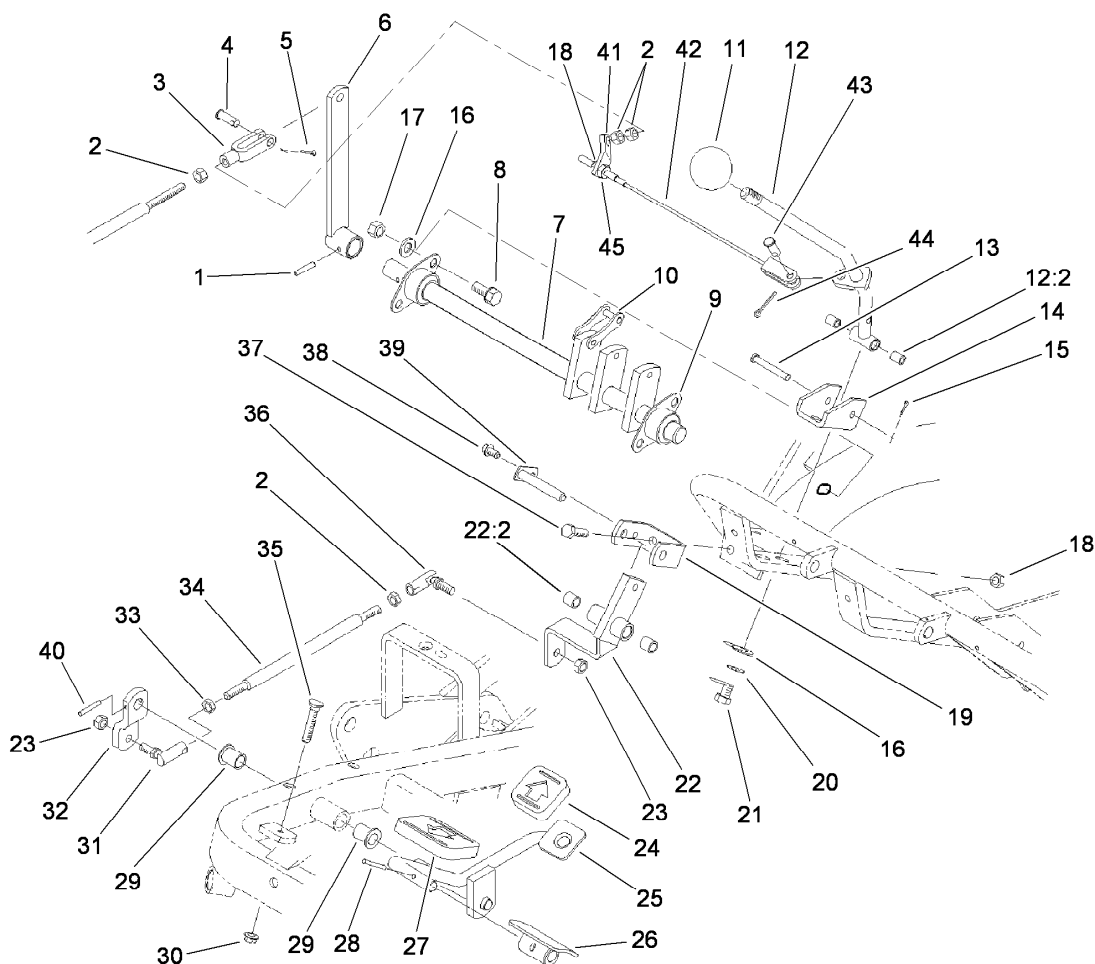 

Traction Control Assembly

Ref.	Part Number	Qty.	Description
1	32121-6	1	Pin-Roll, Slotted
2	3220-2	4	Nut-Jam
3	282-2	1	Yoke
4	283-61	1	Pin-Yoke
5	3272-6	1	Pin-Cotter
6	47-5320-01	1	Lever
7	44-0870	1	Cam Shaft ASM
8	3234-1	4	Screw-HHF
9	27-2320	2	Bearing
10	57-6220	5	Link-Connecting
11	233-48	1	Knob
12	93-9934	1	Traction Handle ASM
12:2	256-251	2	Bushing
13	283-57	1	Pin-Clevis
14	49-6220	1	Bracket-Arm, Control
15	3272-4	1	Pin-Cotter
16	3256-24	6	Washer-Flat
17	3296-59	4	Nut-Lock, NI
18	3296-29	3	Nut-Lock, NI
19	49-6250	1	Bracket-Pivot
20	3254-6	2	Washer-Lock, Internal
21	3211-2	2	Screw-HH
22	49-6260	1	Pivot ASM
22:2	256-2	2	Bushing

Ref.	Part Number	Qty.	Description
23	3296-4	2	Nut-Lock
24	74-9110	1	Pad-Pedal, Reverse
25	83-0540-01	1	Traction Pedal ASM
26	49-6440-03	1	Pedal-Forward
27	74-9100	1	Pad-Pedal, Forward
28	32121-45	1	Pin-Spring
29	256-155	2	Bushing-Flange
30	32128-20	1	Nut-HF
31	2411-42	1	Joint-Ball, LH
32	83-0630	1	Arm-Pivot, Traction
33	3220-20	1	Nut-Jam
34	83-0580	1	Rod-Control, Traction
35	17-9420	1	Screw-Handle
36	2411-43	1	Joint-Ball
37	322-5	2	Screw-HH
38	12-3270	1	Screw
39	49-6290	1	Pivot Shaft ASM
40	32121-51	1	Pin-Roll
41	93-9936	1	Bracket-Return, Traction
42	93-9937	1	Traction Cable ASM
43	283-62	1	Pin-Clevis
44	3272-10	1	Pin-Cotter
45	3217-6	1	Nut-Hex

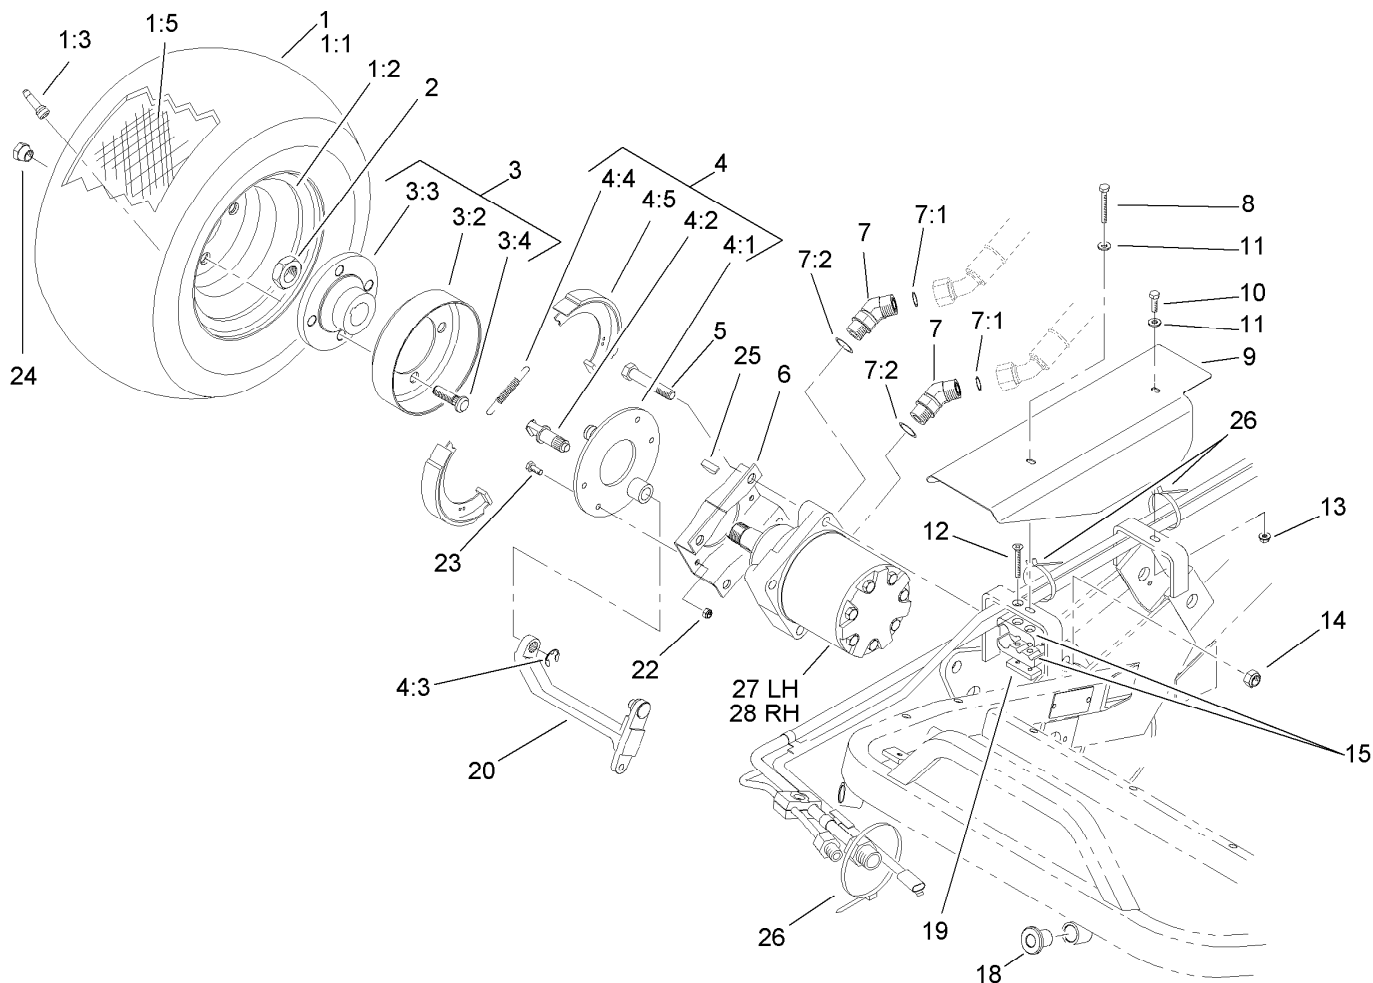 


Front Wheel and Brake Assembly

Ref.	Part Number	Qty.	Description
1		2	Wheel And Tire ASM ●
1:1	28-3680	1	Tire
1:2	217-60	1	Rim
1:3	232-27	1	Stem-Valve
1:5	232-37	1	Tube
2	26-3790	2	Nut-Lock
3	10-6821	2	Brake Drum ASM
3:2	10-6850	1	Drum-Brake
3:3	10-6870-03	1	Hub-Wheel
3:4	85-6540	4	Stud-Drive
4	104-7705	2	Brake ASM
4:1	70-9870	1	Plate-Backing
4:2	104-7707	1	Shaft-Cam, Brake
4:3	104-7706	1	E-Ring, Bowed
4:4	70-9880	2	Spring-Return
4:5	70-9840	2	Shoe-Brake
5	325-11	8	Screw-HH
6	84-2000-03	2	Bracket-Brake
7	340-14	4	Fitting-HYD, 45 DEG
7:1	237-65	1	O-Ring

Ref.	Part Number	Qty.	Description
7:2	237-80	1	O-Ring
8	321-11	1	Screw-HH
9	83-0190-01	1	Cover-RH
10	321-4	1	Screw-HH
11	3256-22	2	Washer-Flat
12	32108-100	1	Screw-FH
13	32128-33	1	Nut-HF
14	3296-23	8	Nut-Lock, NI
15	57-6140	2	Clamp-Tube, Half
18	83-1700	3	Bushing-Flange
19	83-1220	1	Plate-Clamp
20	93-2096	2	Lever-Brake
22	3296-42	8	Nut-Lock, NI
23	321-5	8	Screw-HH
24	242-50	8	Nut-Lug
25	3257-42	2	Key-Woodruff
26	3290-378	3	Tie-Cable
27	110-4015	1	HYD Motor ASM (CCW)
28	110-4016	1	HYD Motor ASM (CW)

 ● Not serviced separately

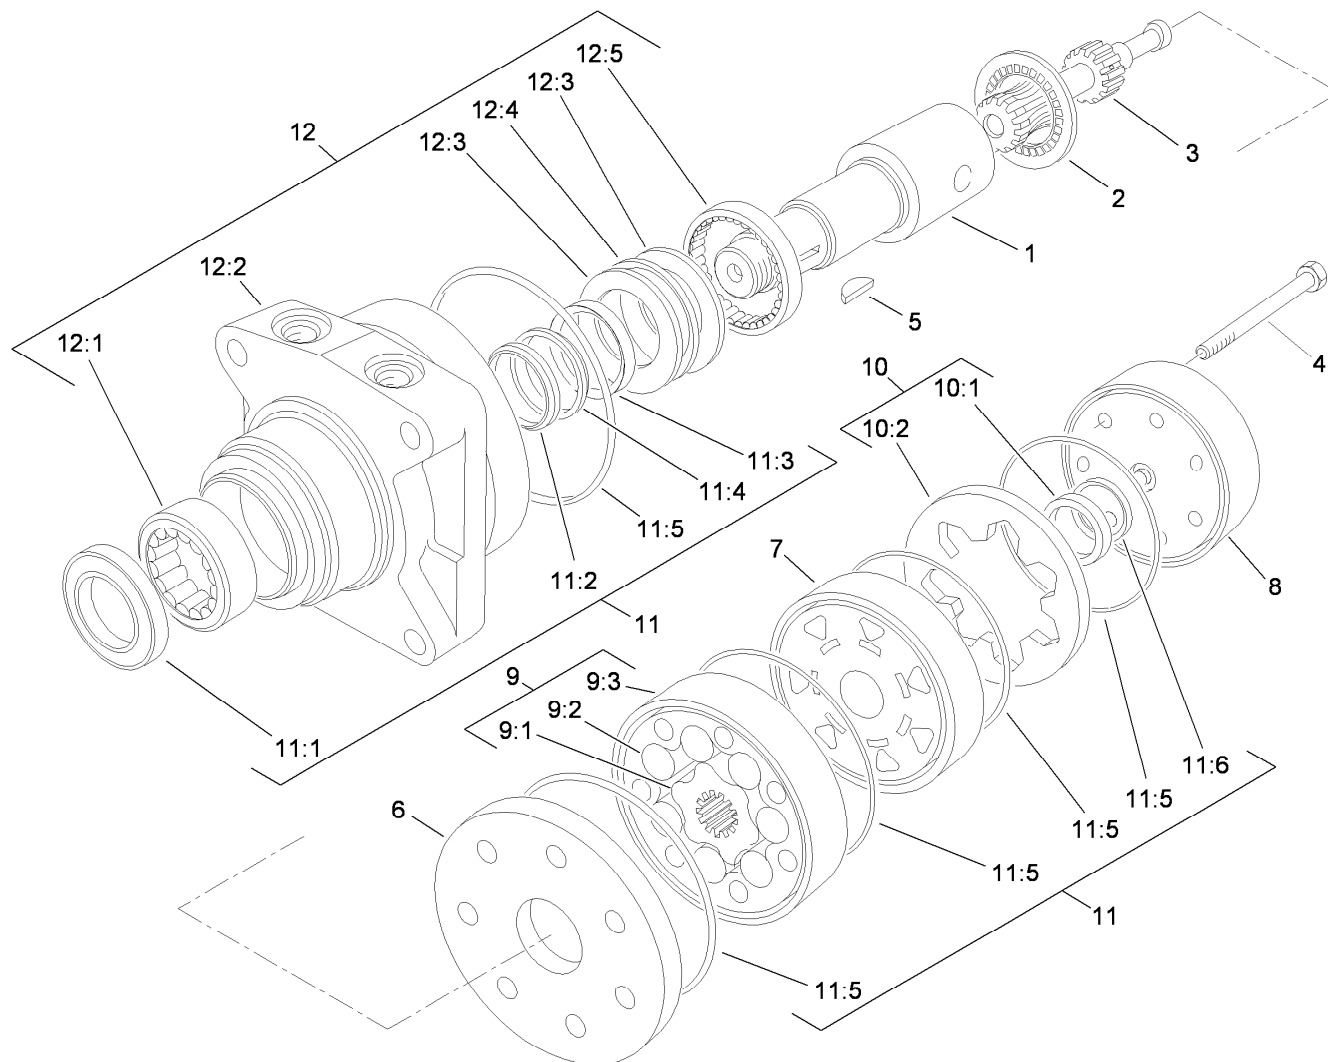


Hydraulic Motor Assembly (CCW) No. 110-4015

Ref.	Part Number	Qty.	Description
1	76-0860	1	Shaft-Coupling
2	76-0850	1	Bearing-Thrust
3	92-9761	1	Link-Drive
4	92-9762	7	Screw-HH
5	3257-42	1	Key-Woodruff
6	92-9754	1	Plate-Wear
7	76-0840	1	Manifold
8	76-0940	1	End Cover ASM
9	92-9763	1	Rotor Set
9:1		1	Rotor ●
9:2		1	Vane ●
9:3		1	Stator ●
10	76-0880	1	Commutator ASM
10:1		1	Commutator ●

Ref.	Part Number	Qty.	Description
10:2		1	Ring-Commutator ●
11	94-8178	1	Seal Kit
11:1		1	Seal-Dirt And Water ●
11:2		1	Backup-Ring ●
11:3		1	Seal-Shaft ●
11:4		1	Washer-Backup ●
11:5		5	Seal-Square, Ring (Inner) ●
11:6		1	Seal-Commutator ●
12	76-0810	1	Housing ASM
12:1		1	Bearing ●
12:2		1	Housing ●
12:3		2	Washer-Thrust ●
12:4		1	Bearing-Thrust ●
12:5		1	Bearing ●

 ● Not serviced separately

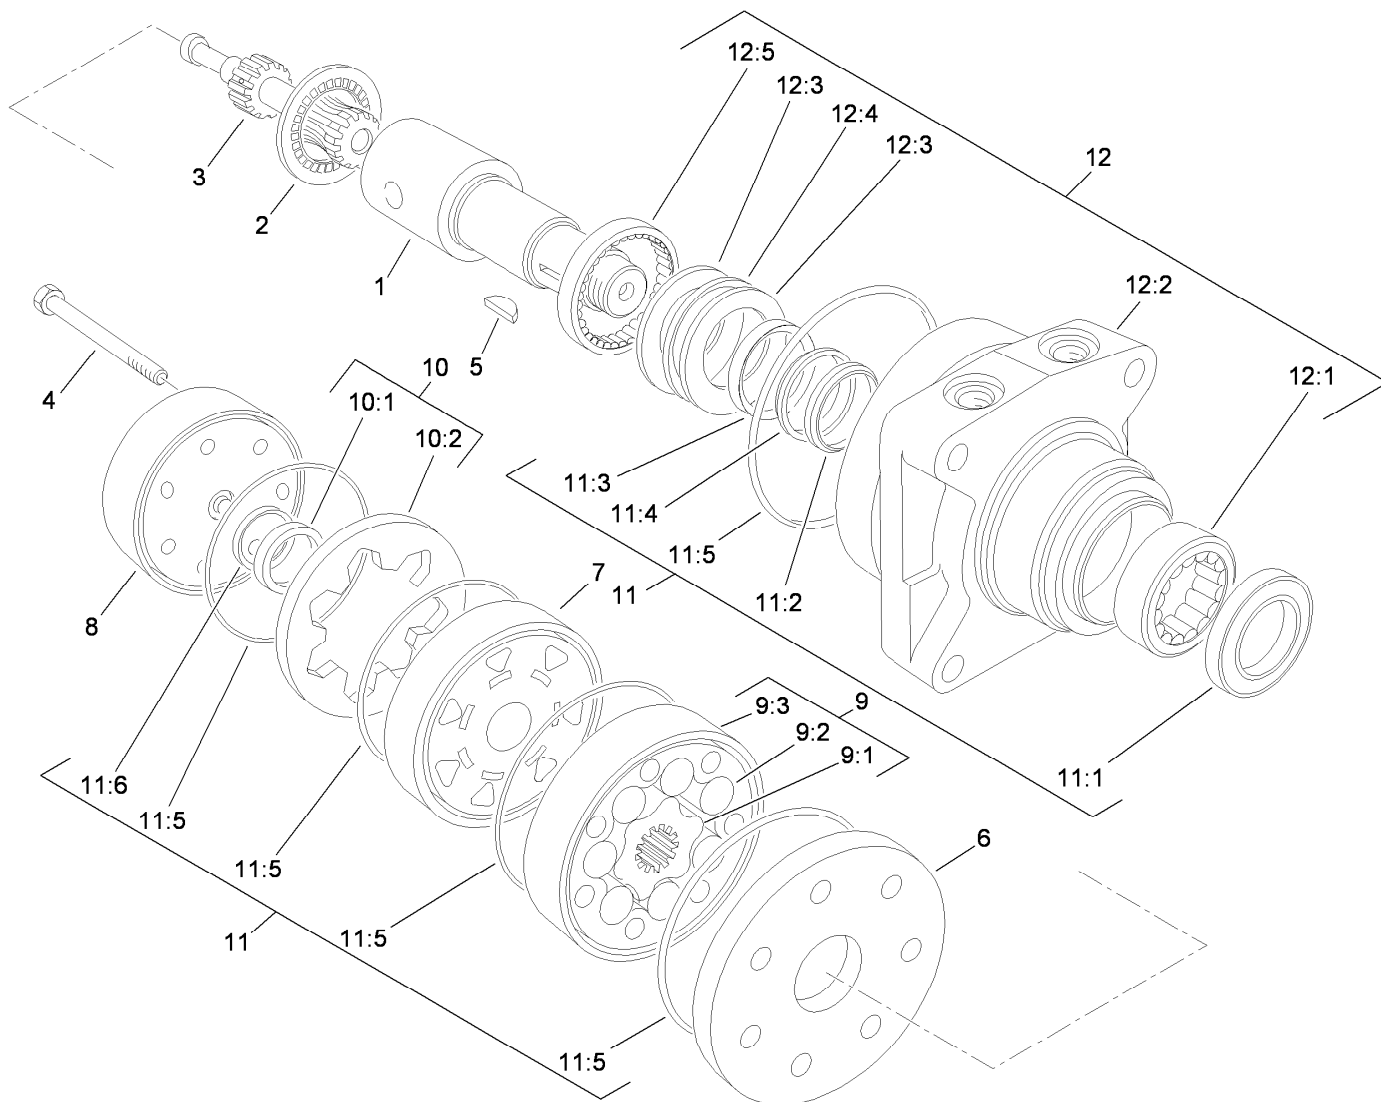


Hydraulic Motor Assembly (CW) No. 110-4016

Ref.	Part Number	Qty.	Description
1	76-0860	1	Shaft-Coupling
2	76-0850	1	Bearing-Thrust
3	92-9761	1	Link-Drive
4	92-9762	7	Screw-HH
5	3257-42	1	Key-Woodruff
6	92-9754	1	Plate-Wear
7	76-0840	1	Manifold
8	76-0940	1	End Cover ASM
9	92-9763	1	Rotor Set
9:1		1	Rotor ●
9:2		1	Vane ●
9:3		1	Stator ●
10	76-0880	1	Commutator ASM
10:1		1	Commutator ●

Ref.	Part Number	Qty.	Description
10:2		1	Ring-Commutator ●
11	94-8178	1	Seal Kit
11:1		1	Seal-Dirt And Water ●
11:2		1	Backup-Ring ●
11:3		1	Seal-Shaft ●
11:4		1	Washer-Backup ●
11:5		5	Seal-Square, Ring (Inner) ●
11:6		1	Seal-Commutator ●
12	76-0810	1	Housing ASM
12:1		1	Bearing ●
12:2		1	Housing ●
12:3		2	Washer-Thrust ●
12:4		1	Bearing-Thrust ●
12:5		1	Bearing ●

 
● Not serviced separately

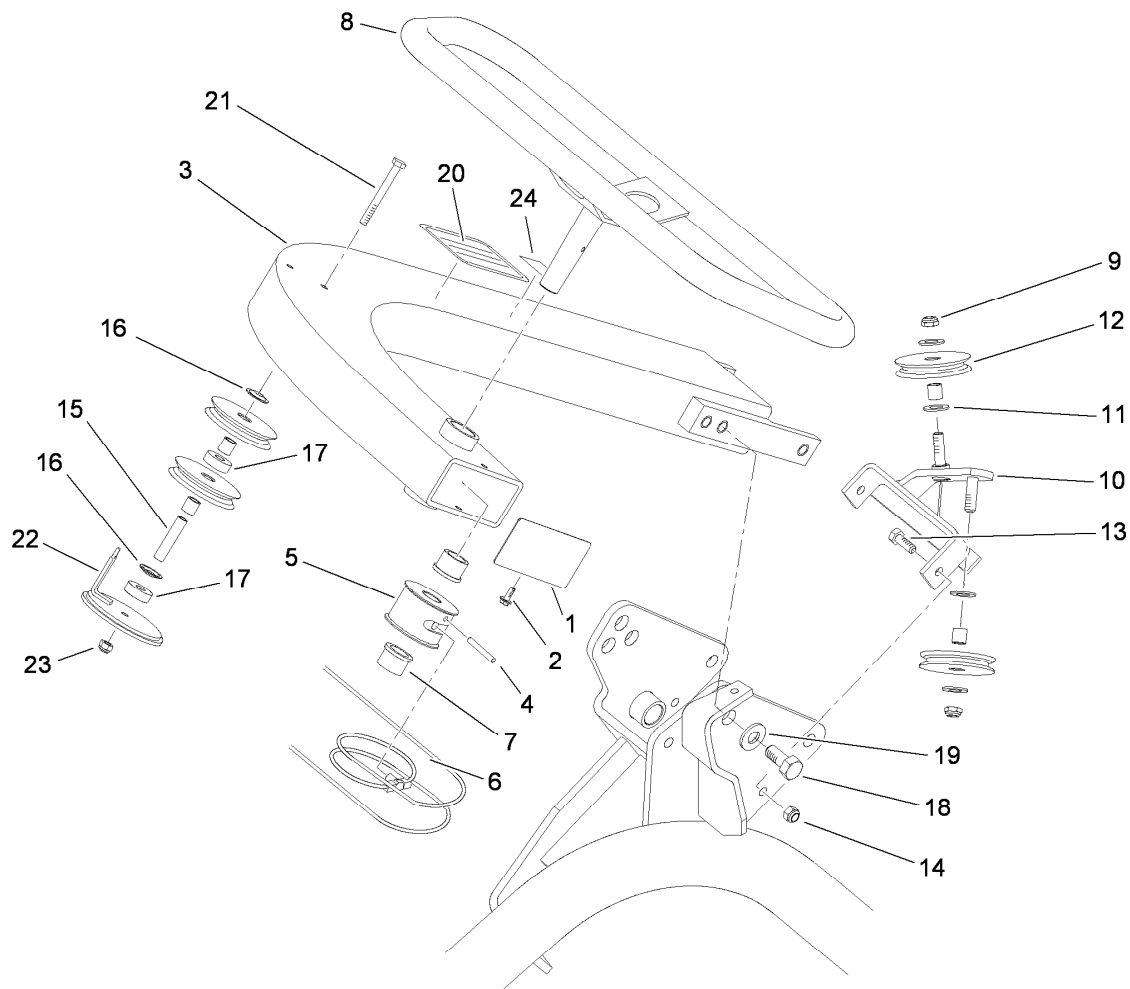

Steering Arm Assembly

Ref.	Part Number	Qty.	Description
1	95-7140-01	1	Tube Cap ASM
2	32104-76	2	Screw
3	95-2941-01	1	Steering Arm
4	32121-44	1	Pin-Roll
5	95-7149	1	Pulley-Steering, Front
6	95-5965	1	Cable-Steering
7	256-113	2	Bushing-Flange
8	49-5900	1	Steering Wheel ASM
9	3296-59	2	Nut-Lock, NI
10	95-2932	1	Bracket-Pulley
11	3256-4	4	Washer-Flat
12	5-2653	4	Pulley ASM
13	322-4	2	Screw-HH

Ref.	Part Number	Qty.	Description
14	3296-29	2	Nut-Lock, NI
15	10-7240	1	Sleeve-Pulley, Steering
16	3290-314	2	Tinnerman
17	71-5440	2	Spacer-Plastic
18	325-2	4	Screw-HH
19	3256-26	4	Washer-Flat
20	93-8063	1	Decal-Caution, Ce
20	104-2053	1	Decal-Warning
21	321-15	1	Screw-HH
22	95-5959-01	1	Pulley Support ASM
23	3296-16	1	Nut-Lock, NI
24	98-4387	1	Decal-Protection, Ear

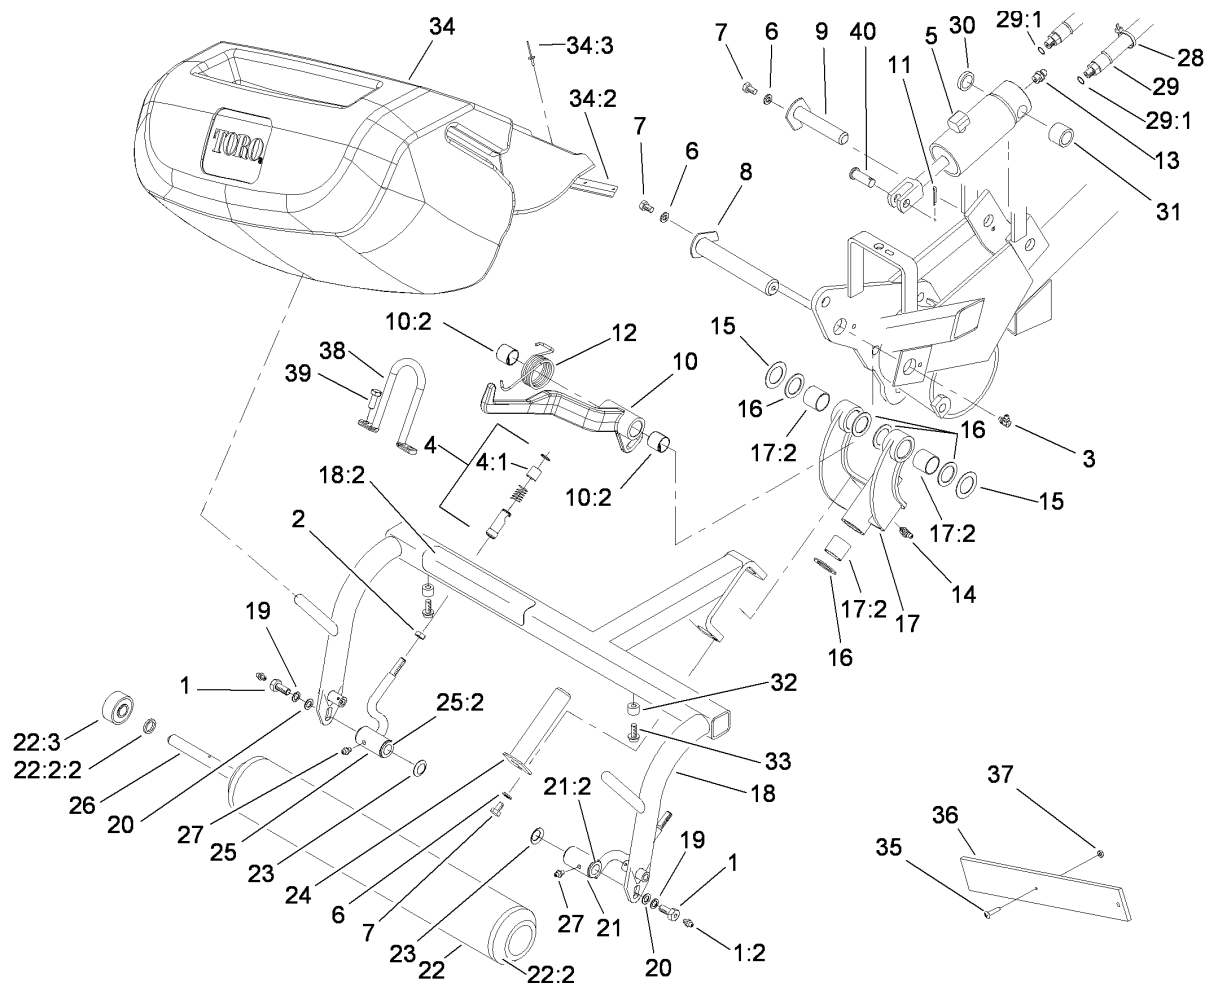 


Right Hand Pull Frame Assembly

Ref.	Part Number	Qty.	Description
1	11-0160	2	Roller Shaft Screw ASM
1:2	302-5	1	Fitting-Grease
2	3220-3	2	Nut-HJ
3	302-33	1	Fitting-Grease
4	99-1460	2	Ball Joint Receiver ASM
4:1	99-1461	1	Sleeve-Joint, Ball
5	106-9066	1	HYD Cylinder ASM
6	3256-23	3	Washer-Flat
7	322-1	3	Screw-HH
8	114-4683	1	Hinge Pin ASM
9	10-6060	1	Pin-Pivot
10	107-2599	1	RH Lift Arm ASM
10:2	3-0348	2	Bushing
11	3272-11	1	Pin-Cotter
12	110-3951	1	Spring-Torsion, RH
13	302-2	1	Fitting-Grease
14	302-60	1	Fitting-Grease
15	5-1226	2	Washer
16	10-8110	6	Washer-Thrust
17	10-7820	1	Pivot Hinge ASM
17:2	3-0348	4	Bushing
18	112-0282	1	RH Pull Frame ASM
18:2	93-6688	1	Decal-Danger
19	3253-21	2	Washer-Lock
20	3256-24	2	Washer-Flat
21	92-0586	1	Pull Arm ASM

Ref.	Part Number	Qty.	Description
21:2	3-1506	2	Bushing
22	99-4277	1	Roller ASM
22:2		2	Hub Yoke ASM ●
22:2:2	253-83	1	Seal-Oil
22:3	251-141	2	Bearing-Ball
23	3290-317	2	Washer-Spring
24	10-6090	1	Pin-Pivot
25	92-0585	1	Pull Arm ASM
25:2	3-1506	2	Bushing
26	21-8470	1	Shaft-Roller
27	302-5	2	Fitting-Grease
28	3290-378	1	Tie-Cable
29	92-9767	2	Hose
29:1	237-78	1	O-Ring
30	105-3828	1	Spacer
31	74-3730	1	Spacer-Spindle, Rear
32	94-4548	2	Bumper-Recessed
33	32104-95	2	Screw-HWH
34	108-8642	3	Grass Basket ASM
34:2	104-2607	1	Strip-Basket
34:3	3290-382	8	Rivet-Pop
35	32122-22	1	Screw-HH
36	65-8320	1	Bar-Gauge
37	3219-14	1	Nut-Hex
38	105-5740	1	Hook-Lift

 
● Not serviced separately

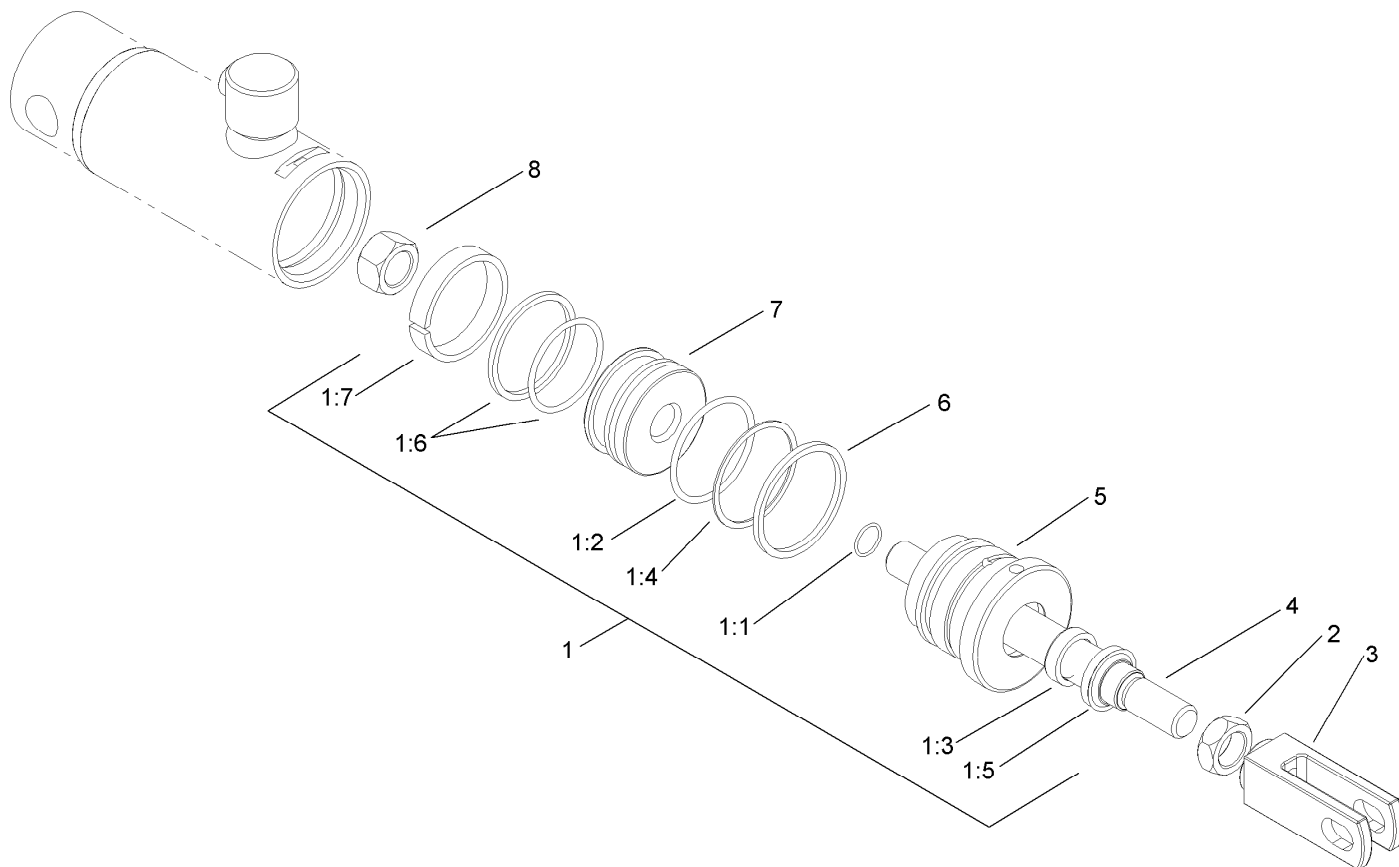

Hydraulic Cylinder Assembly No. 106-9066

Ref.	Part Number	Qty.	Description
1	107-2564	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	O-Ring ●
1:3		1	Seal ●
1:4		1	Back-Up ●
1:5		1	Wiper ●
1:6		1	Seal-W/Out Ring ●
1:7		1	Ring-Wear ●
2	3220-6	1	Nut-Jam
3	106-9065	1	Clevis-Cylinder
4		1	Rod ●
5		1	Head ●
6		1	Ring-Retaining ●
7		1	Piston ●
8		1	Locknut ●

 ● Not serviced separately

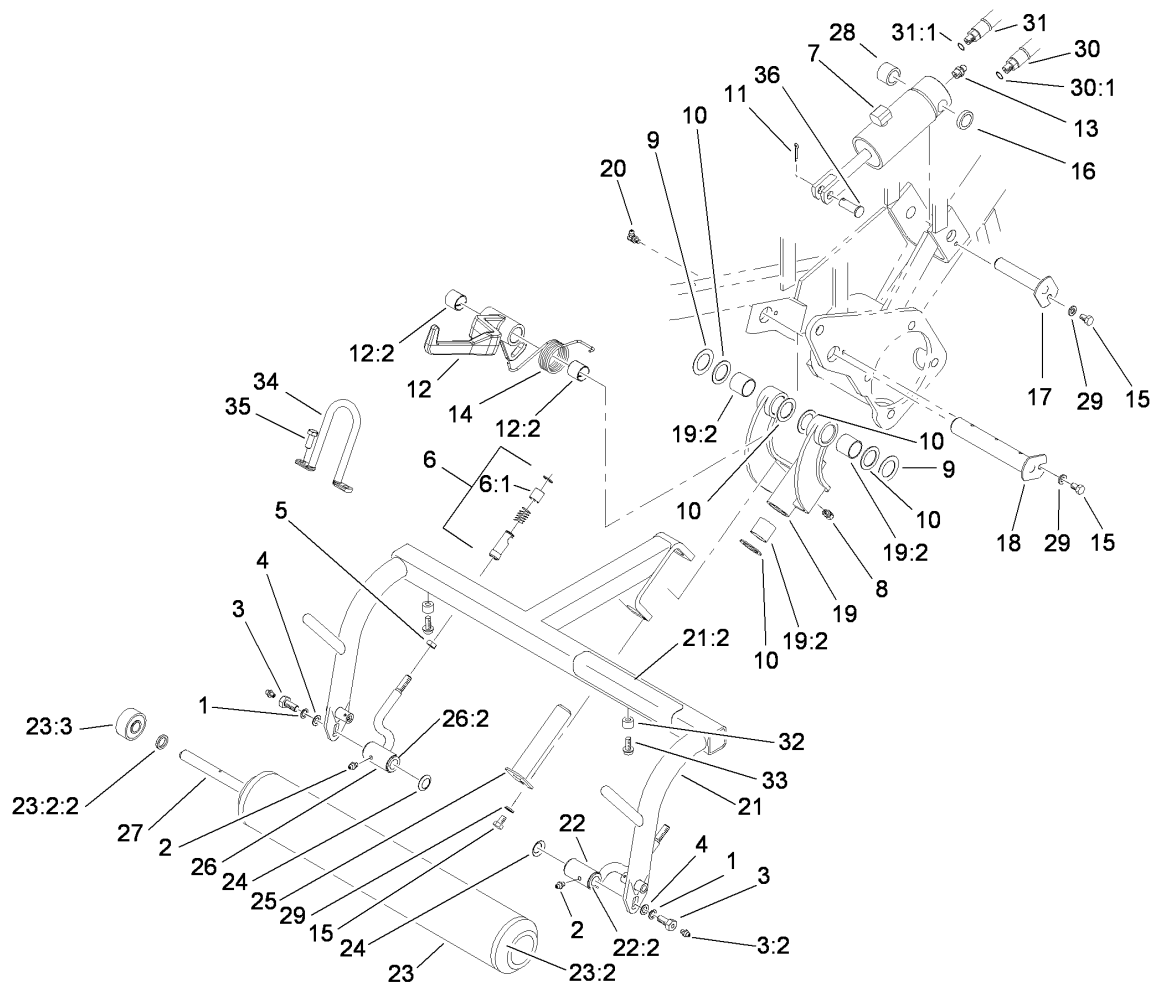


Left Hand Pull Frame Assembly

Ref.	Part Number	Qty.	Description
1	3253-21	2	Washer-Lock
2	302-5	2	Fitting-Grease
3	11-0160	2	Roller Shaft Screw ASM
3:2	302-5	1	Fitting-Grease
4	3256-24	2	Washer-Flat
5	3220-3	2	Nut-HJ
6	99-1460	2	Ball Joint Receiver ASM
6:1	99-1461	1	Sleeve-Joint, Ball
7	106-9066	1	HYD Cylinder ASM
8	302-60	1	Fitting-Grease
9	5-1226	2	Washer
10	10-8110	6	Washer-Thrust
11	3272-11	1	Pin-Cotter
12	107-2598	1	LH Lift Arm ASM
12:2	3-0348	2	Bushing
13	302-2	1	Fitting-Grease
14	110-3952	1	Spring-Torsion, LH
15	322-1	3	Screw-HH
16	105-3828	1	Spacer
17	10-6060	1	Pin-Pivot
18	114-4683	1	Hinge Pin ASM
19	10-7820	1	Pivot Hinge ASM
19:2	3-0348	4	Bushing
20	302-33	1	Fitting-Grease

Ref.	Part Number	Qty.	Description
21	112-0283	1	LH Pull Frame ASM
21:2	93-6688	1	Decal-Danger
22	92-0586	1	Pull Arm ASM
22:2	3-1506	2	Bushing
23	99-4277	1	Roller ASM
23:2		2	Hub Yoke ASM ●
23:2:2	253-83	1	Seal-Oil
23:3	251-141	2	Bearing-Ball
24	3290-317	2	Washer-Spring
25	10-6090	1	Pin-Pivot
26	92-0585	1	Pull Arm ASM
26:2	3-1506	2	Bushing
27	21-8470	1	Shaft-Roller
28	74-3730	1	Spacer-Spindle, Rear
29	3256-23	3	Washer-Flat
30	83-1690	1	Hose-HYD
30:1	237-78	1	O-Ring
31	63-3850	1	Hose ASM
31:1	237-78	1	O-Ring
32	94-4548	2	Bumper-Recessed
33	32104-95	2	Screw-HWH
34	105-5740	1	Hook-Lift
35	33115-025	2	Screw-HH
36	283-8	1	Pin-Clevis

 ● Not serviced separately

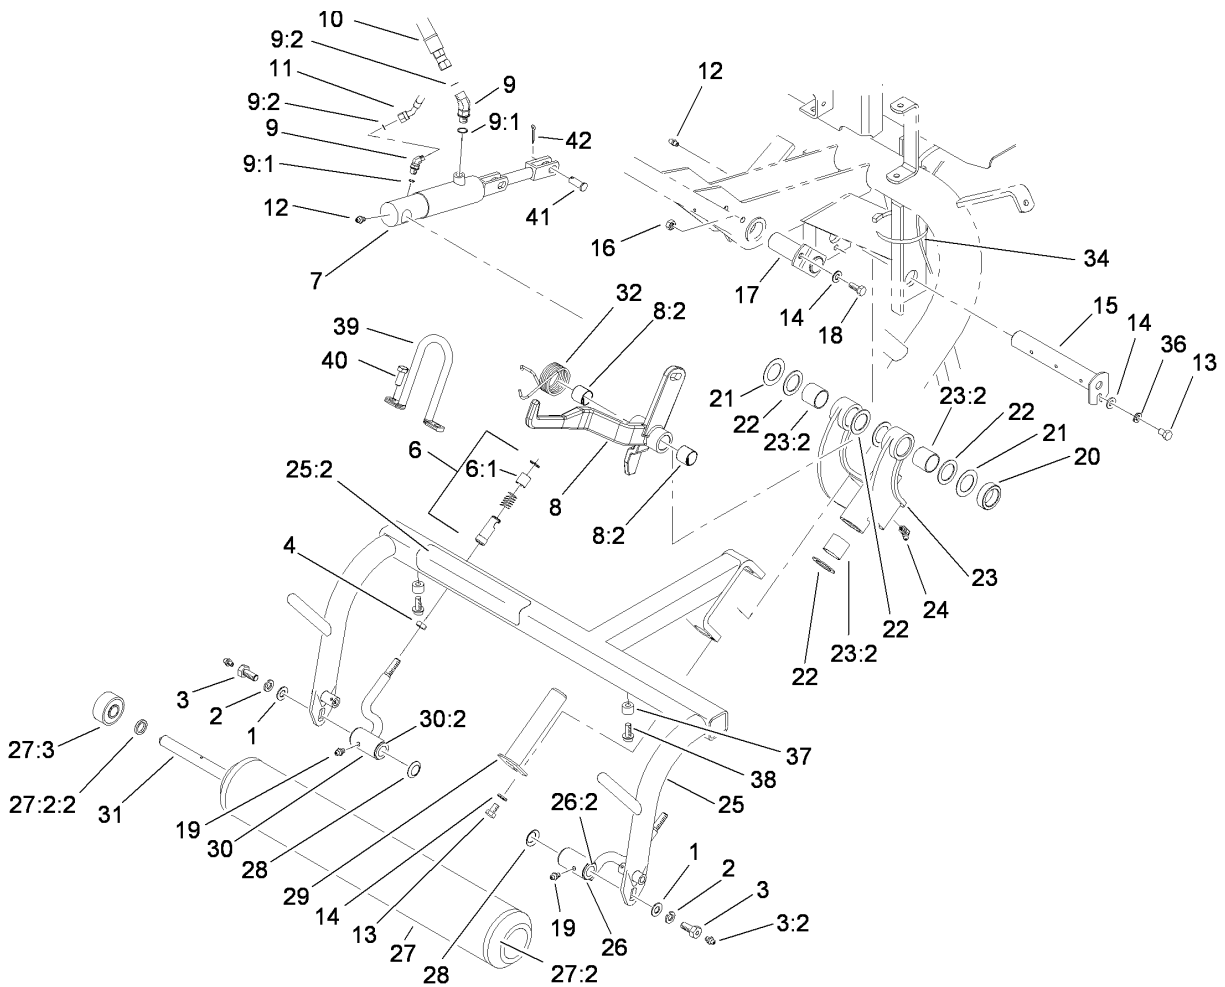


Rear Pull Frame Assembly

Ref.	Part Number	Qty.	Description
1	3256-24	2	Washer-Flat
2	3253-21	2	Washer-Lock
3	11-0160	2	Roller Shaft Screw ASM
3:2	302-5	1	Fitting-Grease
4	3220-3	2	Nut-HJ
6	99-1460	2	Ball Joint Receiver ASM
6:1	99-1461	1	Sleeve-Joint, Ball
7	106-9064	1	HYD Cylinder ASM
8	110-3955	1	Center Lift Arm ASM
8:2	3-0348	2	Bushing
9	340-103	2	Fitting-HYD, 45 DEG
9:1	237-78	1	O-Ring
9:2	237-21	1	O-Ring
10	83-1680	1	Hose-HYD
11	88-9700	1	Hose-HYD
12	302-2	2	Fitting-Grease
13	322-1	2	Screw-HH
14	3256-23	3	Washer-Flat
15	114-4685	1	Hinge Pin ASM
16	3296-29	1	Nut-Lock, NI
17	68-5560	1	Pin-Cylinder, Pivot
18	322-3	1	Screw-HH
19	302-5	2	Fitting-Grease
20	93-2384	1	Spacer-Carrier
21	5-1226	2	Washer
22	10-8110	6	Washer-Thrust

Ref.	Part Number	Qty.	Description
23	105-0452	1	Pivot Hinge ASM
23:2	3-0348	4	Bushing
24	302-60	1	Fitting-Grease
25	112-0284	1	Rear Pull Frame ASM
25:2	93-6688	1	Decal-Danger
26	92-0586	1	Pull Arm ASM
26:2	3-1506	2	Bushing
27	99-4277	1	Roller ASM
27:2		2	Hub Yoke ASM ●
27:2:2	253-83	1	Seal-Oil
27:3	251-141	2	Bearing-Ball
28	3290-317	2	Washer-Spring
29	10-6090	1	Pin-Pivot
30	92-0585	1	Pull Arm ASM
30:2	3-1506	2	Bushing
31	21-8470	1	Shaft-Roller
32	110-3953	1	Spring-Torsion, Center
34	3290-379	1	Tie-Cable
36	3253-4	1	Washer-Lock
37	94-4548	2	Bumper-Recessed
38	32104-95	2	Screw-HWH
39	105-5740	1	Hook-Lift
40	33115-025	2	Screw-HH
41	283-8	1	Pin-Clevis
42	3272-11	1	Pin-Cotter

 
● Not serviced separately

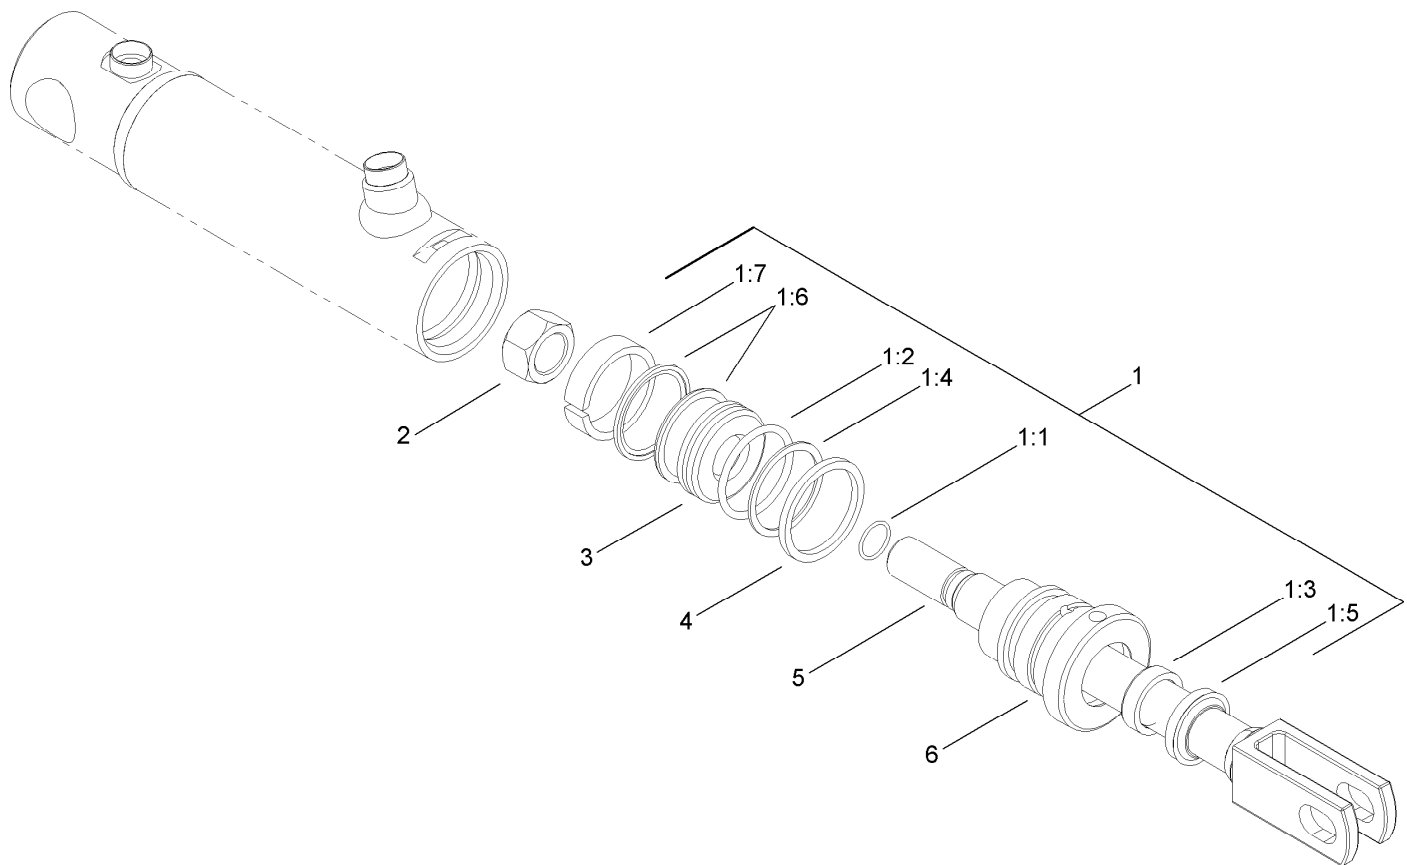

Hydraulic Cylinder Assembly No. 106-9064

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	107-2563	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	O-Ring ●
1:3		1	Seal ●
1:4		1	Back-Up ●
1:5		1	Wiper ●
1:6		1	Seal W/Loader ●
1:7		1	Wear Ring ●
2		1	Locknut ●
3		1	Piston ●
4		1	Ring-Retaining ●
5		1	Rod ASM ●
6		1	Head ●

 
● Not serviced separately

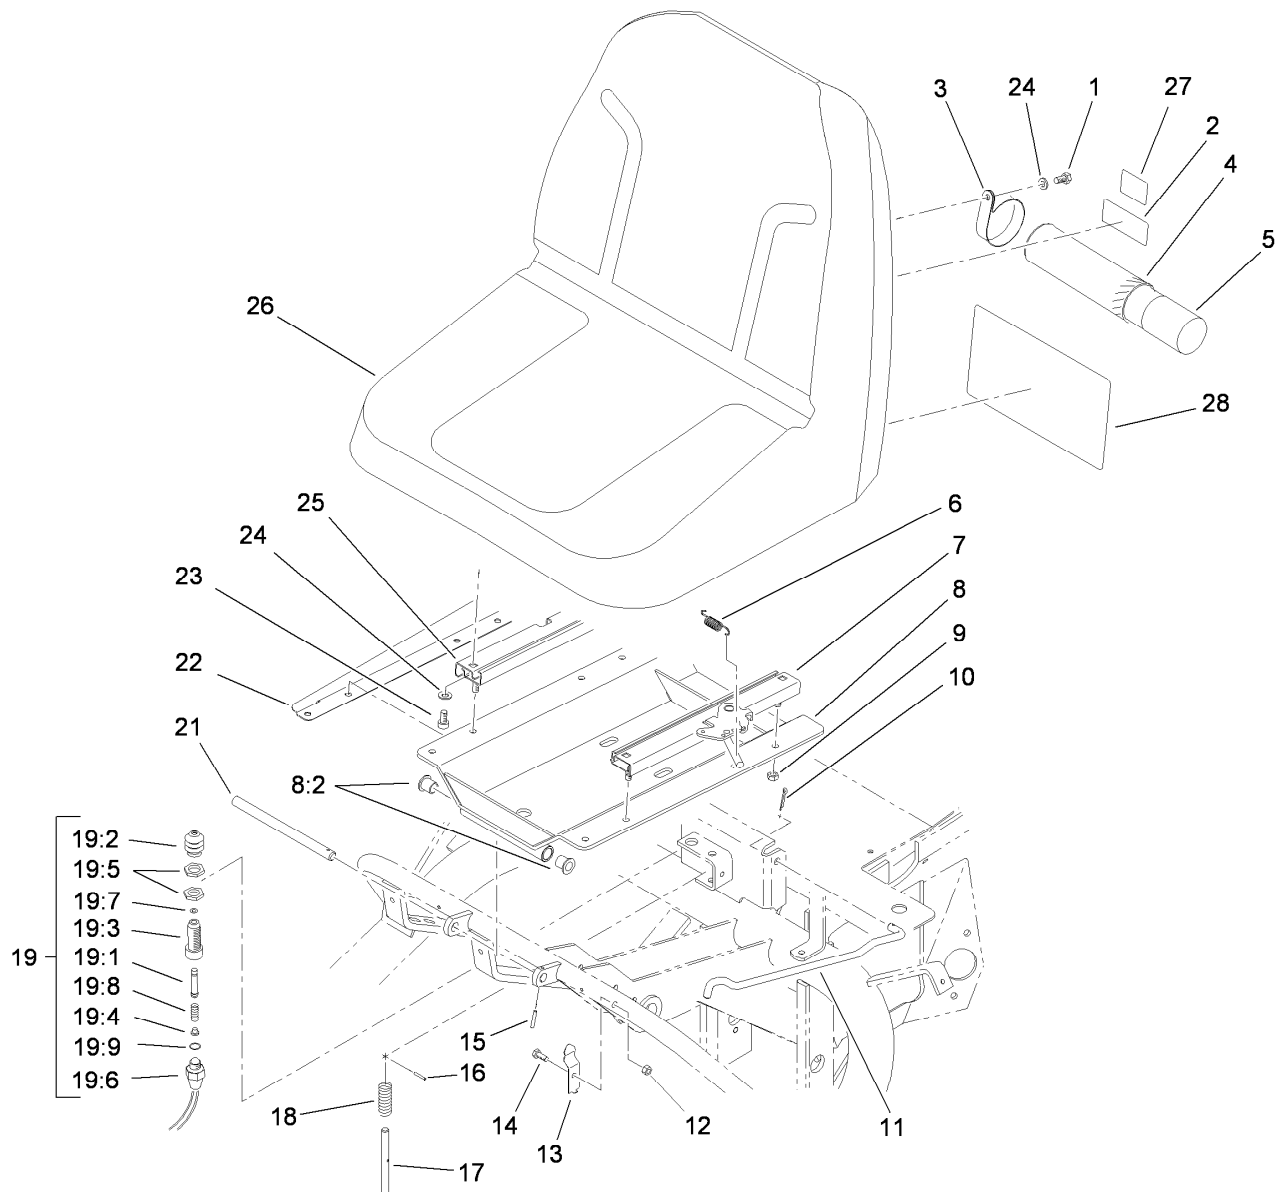

Seat Assembly

Ref.	Part Number	Qty.	Description
1	322-2	2	Screw-HH
2	117-2718	1	Decal-Arrester, Spark
3	2412-133	2	R-Clamp
4	104-7050	1	Tube-Manual
5	104-7048	1	Cap-Housing
6	115-5397	1	Spring-Extension
7	51-0790	1	Adjuster-Seat, LH
8	83-1270	1	Seat Support ASM
8:2	256-155	2	Bushing-Flange
9	3296-29	4	Nut-Lock, NI
10	3272-11	1	Pin-Cotter
11	68-5100	1	Rod-Seat, Prop
12	3296-16	1	Nut-Lock, NI
13	68-5310	1	Clip-Rod, Prop
14	321-3	1	Screw-HH
15	32121-45	1	Pin-Spring
16	3284-3	1	Pin-Grooved
17	51-0350	1	Pin-Spring, Seat
18	3-6685	1	Spring
19	43-9071	1	Limit Switch ASM
19:1	43-8860	1	Plunger-Switch


Ref.	Part Number	Qty.	Description
19:2	43-8870	1	Boot-Switch
19:3	43-8620	1	Pin-Guide, Switch
19:4	43-8610	1	Guide
19:5	218-461	2	Nut-HH
19:6	72-4320	1	Switch-Ball
19:7	237-7	1	O-Ring
19:8	43-8600	1	Spring-Compression
19:9	237-30	1	O-Ring
21	49-5880	1	Shaft-Support, Seat
22	83-1840-01	1	Cover-Valve, RH
23	3274-12	4	Screw-HSH
24	3256-23	6	Washer-Flat
25	51-0780	1	Slider-Seat
26	104-4620	1	Seat
27	93-6686	1	Decal-Oil, HYD
28	106-9071	1	Decal-Service
28	106-9072	1	Decal-Service, Spanish
28	106-9073	1	Decal-Service, French
28	106-9074	1	Decal-Service, German
28	106-9075	1	Decal-Service, Japanese

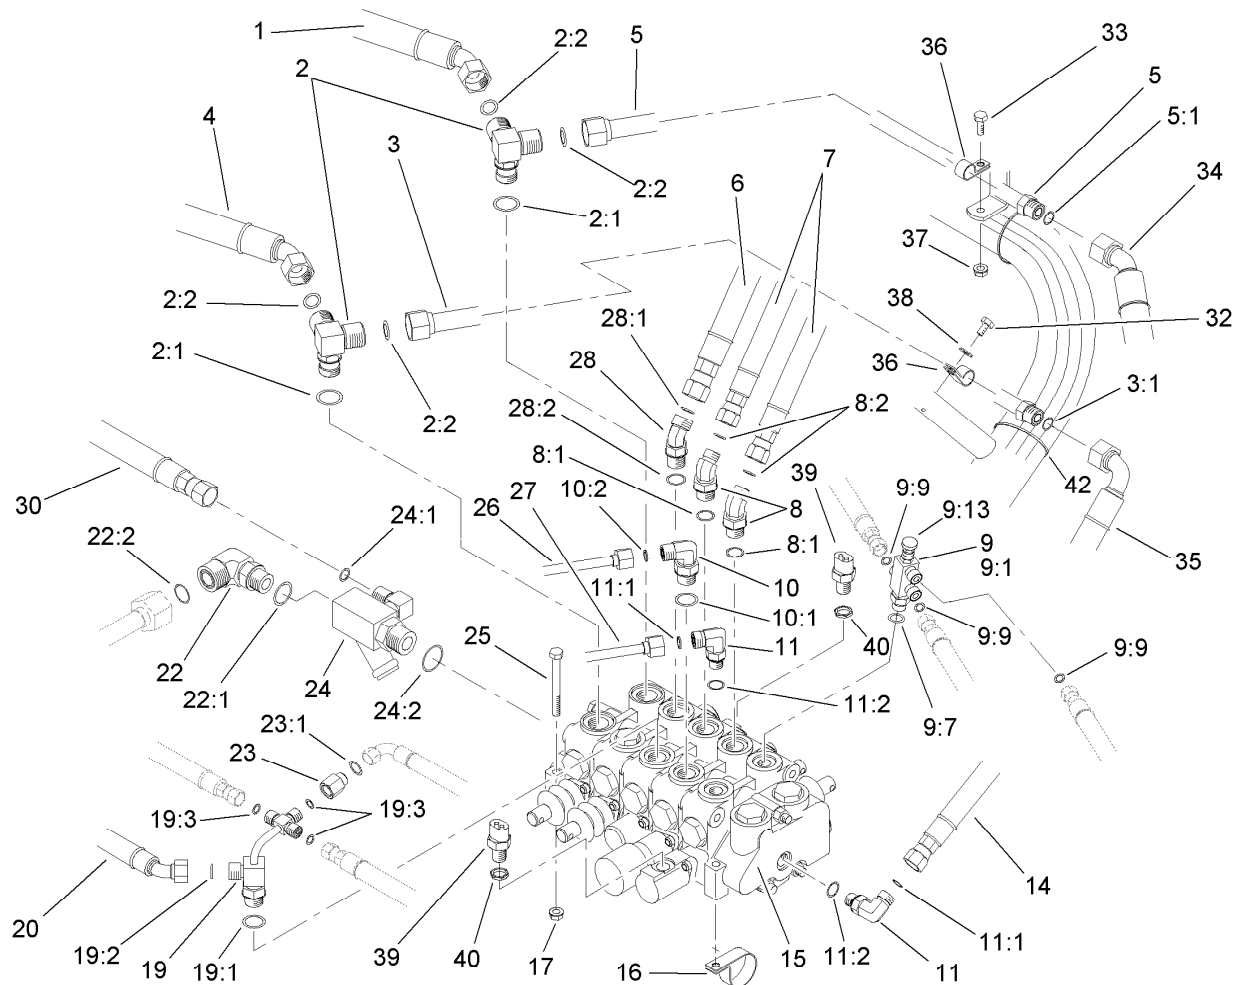 

Control Valve Installation Assembly

Ref.	Part Number	Qty.	Description
1	98-0647	1	Hose-HYD, Traction, RH (Lower)
2	63-4050	2	Fitting-HYD
2:1	237-80	1	O-Ring
2:2	237-65	2	O-Ring
3	70-7130	1	Line-Tube
3:1	237-65	2	O-Ring
4	112-0205	1	HYD Hose ASM
5	83-1200	1	Tube-Traction, LH (Lower)
5:1	237-65	1	O-Ring
6	107-9519	1	HYD Hose ASM
7	98-0649	2	Hose-HYD
8	340-138	2	Fitting-HYD, 45 DEG
8:1	237-79	1	O-Ring
8:2	237-22	1	O-Ring
9	115-5296	1	Needle Valve ASM
9:1	93-2555	1	Fitting-Body
9:7	237-42	1	O-Ring
9:9	237-21	3	O-Ring
9:13	115-5297	1	Kit-Service, Needle Valve
10	340-18	1	Fitting-HYD, 90 DEG
10:1	237-79	1	O-Ring
10:2	237-22	1	O-Ring
11	340-77	2	Fitting-HYD, 90 DEG
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
14	98-2150	1	Hose-HYD


Ref.	Part Number	Qty.	Description
15	105-3800	1	Control Valve ASM
16	304-61	1	Clamp-Hose
17	32128-20	3	Nut-HF
19	83-1670	1	Fitting ASM
19:1	237-79	1	O-Ring
19:2	237-22	1	O-Ring
19:3	237-21	3	O-Ring
20	95-5986	1	Hose-HYD
22	340-16	1	Fitting-HYD, 90 DEG
22:1	237-80	1	O-Ring
22:2	237-58	1	O-Ring
23	71-0990	1	Orifice
23:1	237-21	1	O-Ring
24	63-4080	1	Fitting-Manifold
24:1	237-81	1	O-Ring
24:2	237-30	1	O-Ring
25	322-14	3	Screw-HH
26	63-4030	1	Tube-HYD
27	63-4020	1	Tube-HYD
28	340-101	1	Fitting-HYD, 45 DEG
28:1	237-30	1	O-Ring
28:2	237-79	1	O-Ring
30	95-5987	1	Hose-HYD
32	12-3270	1	Screw
33	3234-4	1	Screw-HHF
34	98-0648	1	HYD Hose ASM
35	98-2153	1	HYD Hose ASM

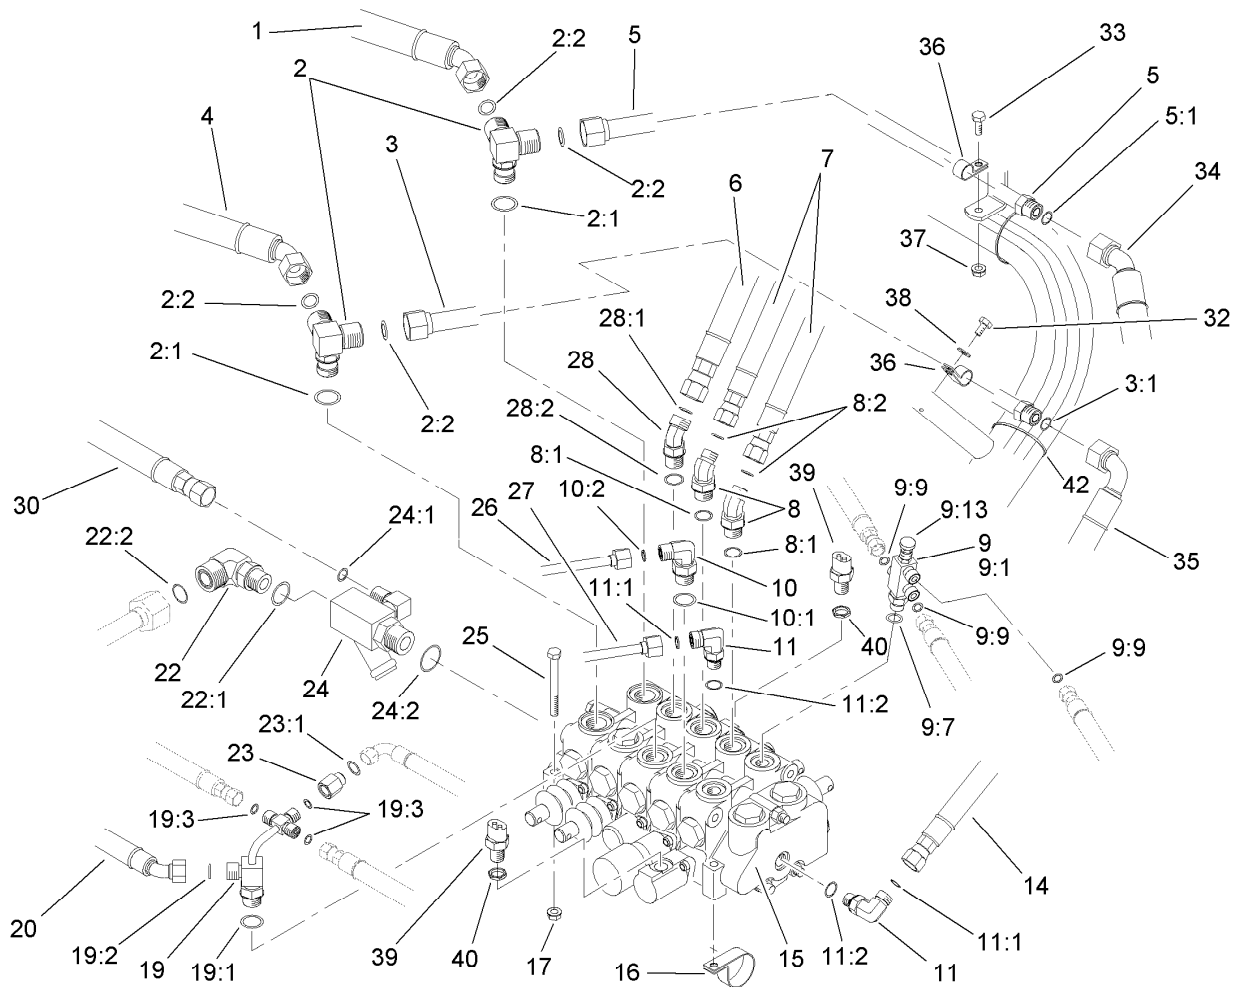 

Control Valve Installation Assembly (continued)

Ref.	Part Number	Qty.	Description
36	2412-41	2	Clamp
37	3296-16	1	Nut-Lock, NI
38	3256-22	1	Washer-Flat

Ref.	Part Number	Qty.	Description
39	83-1890	2	Switch-Ball
40	38-0410	2	Nut-Hex
42	3290-379	2	Tie-Cable

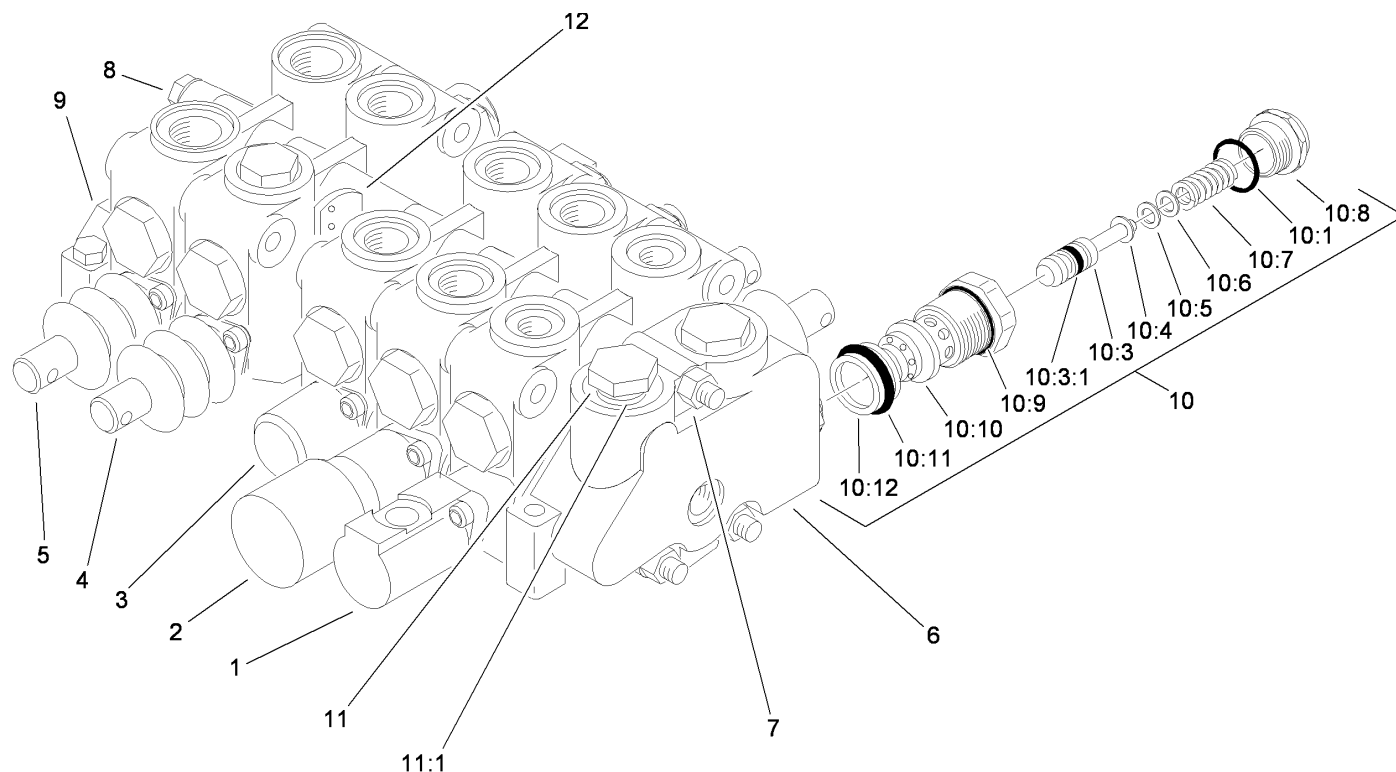 


Control Valve Assembly No. 105-3800

Ref.	Part Number	Qty.	Description
1	105-3801	1	Section 1 ASM
2	105-3802	1	Section 2 ASM
3	105-3803	1	Section 3 ASM
4	105-3804	1	Section 4 ASM
5	93-1386	1	Section 5 ASM
6	353-772	1	Cover-Left
7	3217-7	3	Nut-Hex
8	353-853	3	Bolt
9	353-668	1	Plate-Cover
10	353-766	1	Cart-Relief
10:1	237-54	1	O-Ring
10:3	353-531	1	Poppet And Ring ASM
10:3:1	353-392	1	Ring-Piston
10:4	353-328	1	Shim (.040)

Ref.	Part Number	Qty.	Description
10:5	353-329	1	Shim (.020)
10:6	353-330	1	Shim (.010)
10:7	353-855	1	Spring
10:8	353-334	1	Cap-Relief
10:9	353-331	1	O-Ring
10:10	353-760	1	Relief-Body
10:11	353-758	1	O-Ring
10:12	353-952	1	Seal-Back-Up
11	353-721	2	Plug
11:1	237-54	1	O-Ring
12	354-122	1	Disc-Seal
13	92-2545	1	Spool Set Kit ●
14	84-2190	1	Section Seal Kit ●

● Not illustrated

 ■ Not serviced separately

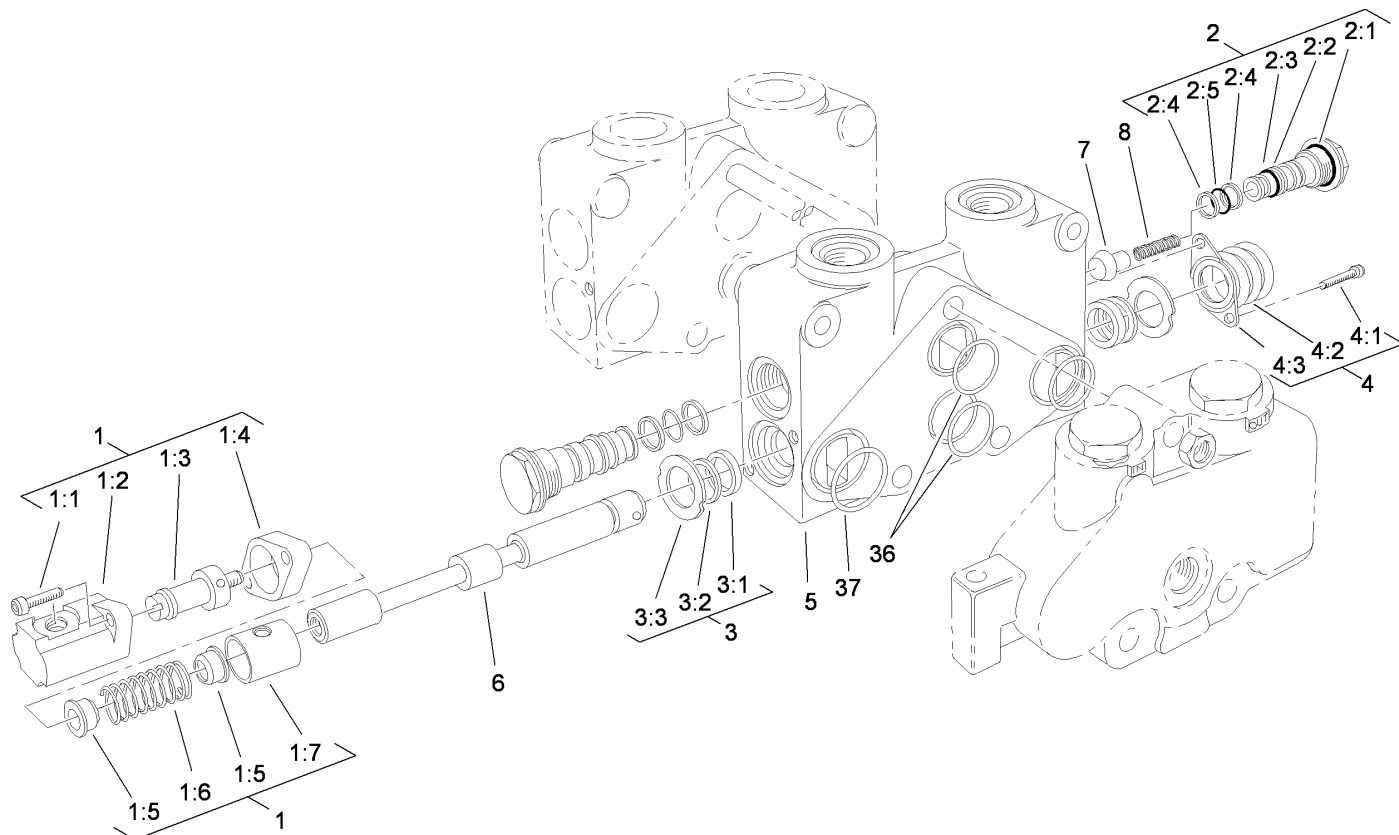


Section 1 Assembly No. 105-3801

Ref.	Part Number	Qty.	Description
1	105-3807	1	Positioner-Interlock
1:1	3274-70	2	Screw-HSH
1:2	353-727	1	Bonnet-Special
1:3	104-7739	1	Spud-V20
1:4	353-733	1	Spacer-Bonnet
1:5	353-417	2	Collar-Stop
1:6	104-7741	1	Spring
1:7	353-728	1	Sleeve
2	353-481	2	Lift Check ASM
2:1	237-54	1	O-Ring
2:2	353-306	1	Washer-Backup
2:3	353-305	1	O-Ring
2:4	353-303	2	Washer-Backup
2:5	353-302	1	O-Ring

Ref.	Part Number	Qty.	Description
3	92-2548	2	Spool Set Kit
3:1	353-957	1	Cup-Seal
3:2	92-2546	1	Wiper-Seal
3:3	92-2547	1	Seal-Retainer
4	93-3652	1	Boot-Dust
4:1	3274-52	2	Screw-HSH
4:2	353-575	1	Boot
4:3	93-3651	1	Retainer-Boot
5		1	Housing-V20C ●
6		1	Spool-V20C ●
7	353-301	1	Check-Lift, Poppet
8	353-304	1	Spring-Check, Lift
36		2	O-Ring ●
37		2	O-Ring ●

 ● Not serviced separately

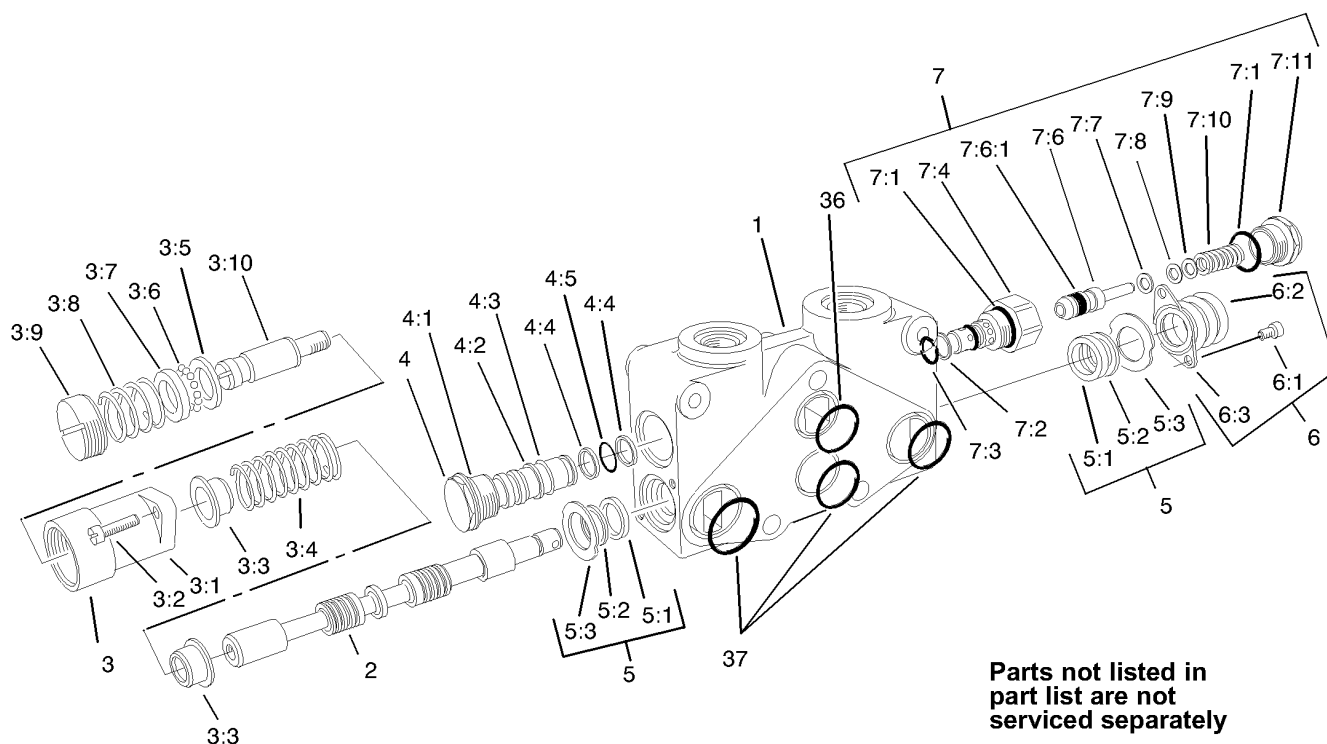


Section 2 Assembly No. 105-3802

Ref.	Part Number	Qty.	Description
1		1	Housing-V20T ●
2		1	Spool-V20 ●
3	105-3806	1	Positioner
3:1	99-8181	1	Bonnet-R
3:2	3274-15	2	Screw-HSH
3:3	353-417	2	Collar-Stop
3:4	104-7741	1	Spring
3:5	354-29	1	Plate-Thrust
3:6	52-5880	12	Ball-Detent
3:7	42-2680	1	Race-Ball
3:8	104-7727	1	Spring-Detent
3:9	353-763	1	Cap-Adjustment
3:10	353-762	1	Spud-Out
4	353-481	1	Lift Check ASM
4:1	237-54	1	O-Ring
4:2	353-306	1	Washer-Backup
4:3	353-305	1	O-Ring
4:4	353-303	2	Washer-Backup
4:5	353-302	1	O-Ring
5	92-2548	2	Spool Set Kit
5:1	353-957	1	Cup-Seal

Ref.	Part Number	Qty.	Description
5:2	92-2546	1	Wiper-Seal
5:3	92-2547	1	Seal-Retainer
6	93-3652	1	Boot-Dust
6:1	3274-52	2	Screw-HSH
6:2	353-575	1	Boot
6:3	93-3651	1	Retainer-Boot
7	353-642	1	Cartridge-Relief
7:1	237-54	2	O-Ring
7:2	353-306	1	Washer-Backup
7:3	353-305	1	O-Ring
7:4	353-851	1	Body-Relief
7:6	353-531	1	Poppet And Ring ASM
7:6:1	353-392	1	Ring-Piston
7:7	353-328	1	Shim (.040)
7:8	353-329	1	Shim (.020)
7:9	353-330	1	Shim (.010)
7:10	353-398	1	Spring
7:11	353-334	1	Cap-Relief
36		1	O-Ring ●
37		3	O-Ring ●

 ● Not serviced separately

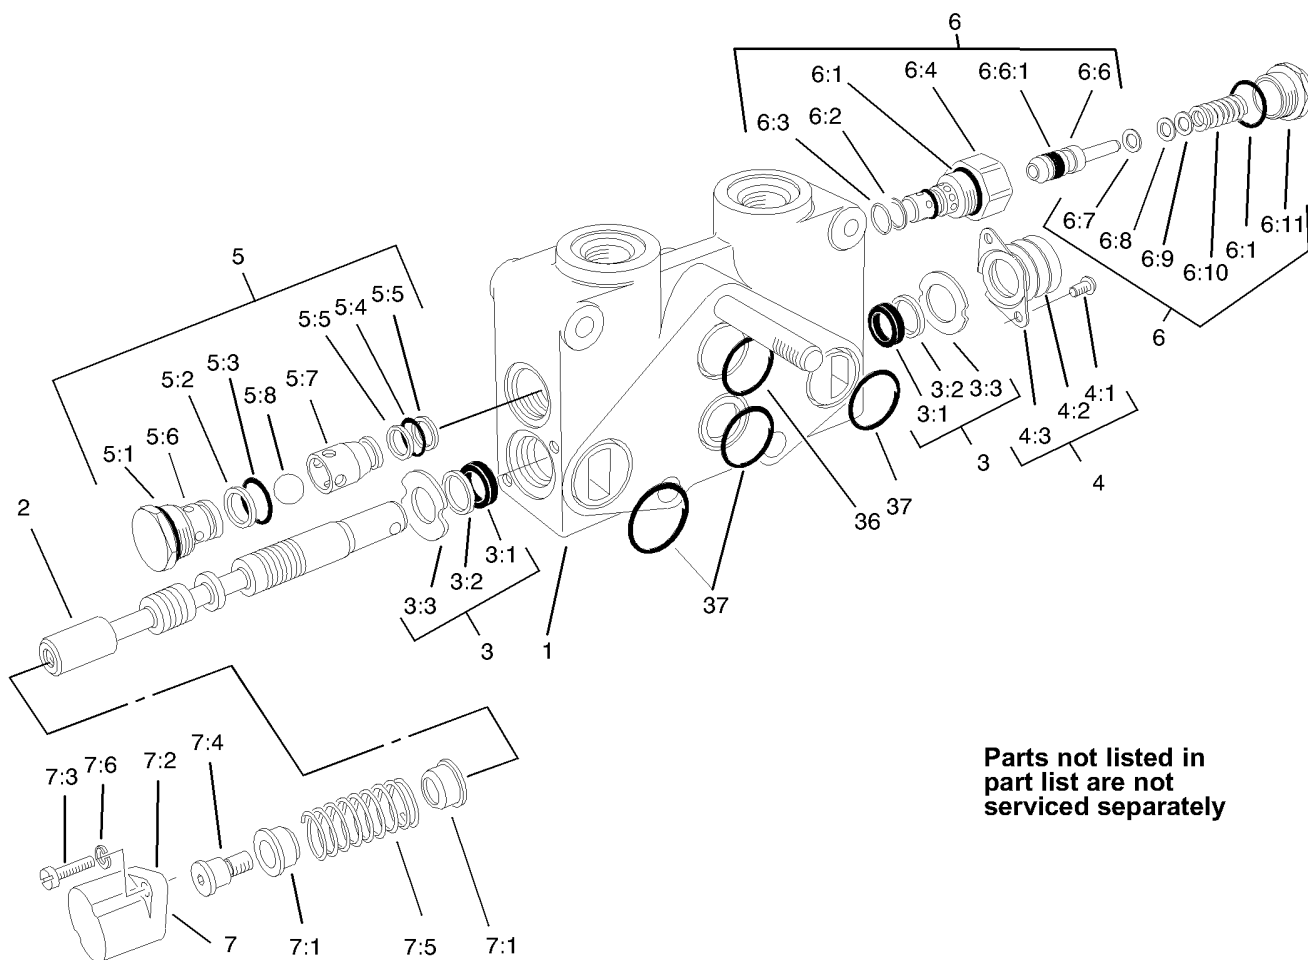


Section 3 Assembly No. 105-3803

Ref.	Part Number	Qty.	Description
1		1	Housing-V20T ●
2		1	Spool-V20 ●
3	92-2548	2	Spool Set Kit
3:1	353-957	1	Cup-Seal
3:2	92-2546	1	Wiper-Seal
3:3	92-2547	1	Seal-Retainer
4	93-3652	1	Boot-Dust
4:1	3274-52	2	Screw-HSH
4:2	353-575	1	Boot
4:3	93-3651	1	Retainer-Boot
5	354-129	1	Anticavitation Check ASM
5:1	237-54	1	O-Ring
5:2	353-306	1	Washer-Backup
5:3	353-305	1	O-Ring
5:4	353-302	1	O-Ring
5:5	353-303	2	Washer-Backup
5:6	353-483	1	Body-Check
5:7	353-484	1	Return-Ball, Check
5:8	353-737	1	Ball-Check
6	353-642	1	Cartridge-Relief

Ref.	Part Number	Qty.	Description
6:1	237-54	2	O-Ring
6:2	353-306	1	Washer-Backup
6:3	353-305	1	O-Ring
6:4	353-851	1	Body-Relief
6:6	353-531	1	Poppet And Ring ASM
6:6:1	353-392	1	Ring-Piston
6:7	353-328	1	Shim (.040)
6:8	353-329	1	Shim (.020)
6:9	353-330	1	Shim (.010)
6:10	353-398	1	Spring
6:11	353-334	1	Cap-Relief
7	105-3808	1	Positioner-Return, Spring
7:1	353-417	2	Collar-Stop
7:2	99-6895	1	Bonnet
7:3	52-5900	2	Screw
7:4	52-5860	1	Collar-Spool
7:5	104-7741	1	Spring
7:6	3253-3	2	Washer-Lock
36		1	O-Ring ●
37		3	O-Ring ●

 ● Not serviced separately

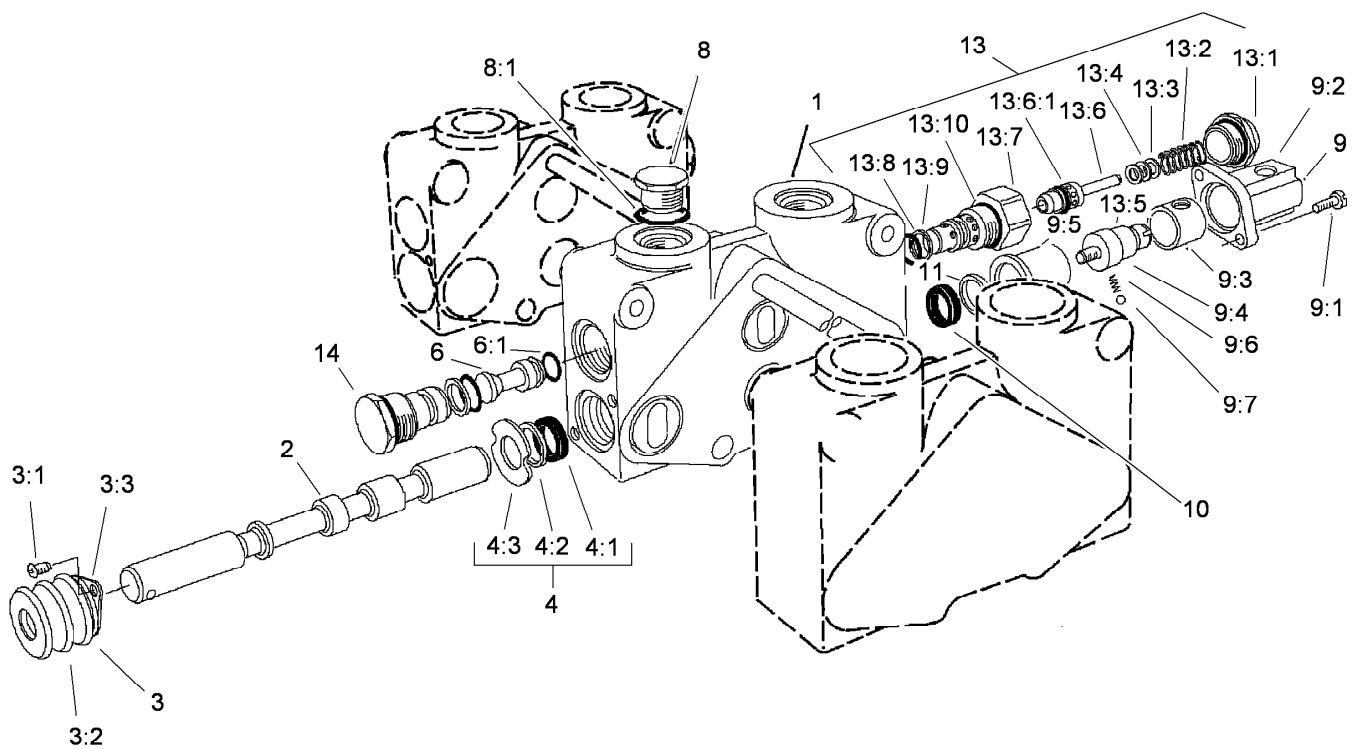


Section 4 Assembly No. 105-3804

Ref.	Part Number	Qty.	Description
1		1	Housing-V20P ●
2		1	Spool-V20 ●
3	93-3652	1	Boot-Dust
3:1	3274-52	2	Screw-HSH
3:2	353-575	1	Boot
3:3	93-3651	1	Retainer-Boot
4	92-2548	1	Spool Set Kit
4:1	353-957	1	Cup-Seal
4:2	92-2546	1	Wiper-Seal
4:3	92-2547	1	Seal-Retainer
6	353-844	1	Plug
6:1	353-850	1	O-Ring
8	353-550	1	Plug-HYD, HH
8:1	237-79	1	O-Ring
9	353-840	1	Switch Positioner Bonnet ASM
9:1	52-5900	2	Screw
9:2	353-847	1	Bonnet
9:3	353-849	1	Sleeve

Ref.	Part Number	Qty.	Description
9:4	353-846	1	Spud
9:5	353-845	1	Sleeve-Detent
9:6	353-730	1	Spring
9:7	353-731	2	Ball
10	353-957	1	Cup-Seal
11	353-958	1	Washer
13	354-140	1	Relief-Rcm
13:1	353-334	1	Cap-Relief
13:2	353-398	1	Spring
13:3	353-330	1	Shim (.010)
13:4	353-329	1	Shim (.020)
13:5	353-328	1	Shim (.040)
13:6	353-531	1	Poppet And Ring ASM
13:6:1	353-392	1	Ring-Piston
13:7	353-851	1	Body-Relief
13:8	353-305	1	O-Ring
13:9	353-306	1	Washer-Backup
13:10	237-54	2	O-Ring
14	353-953	1	Plug ASM

 ● Not serviced separately

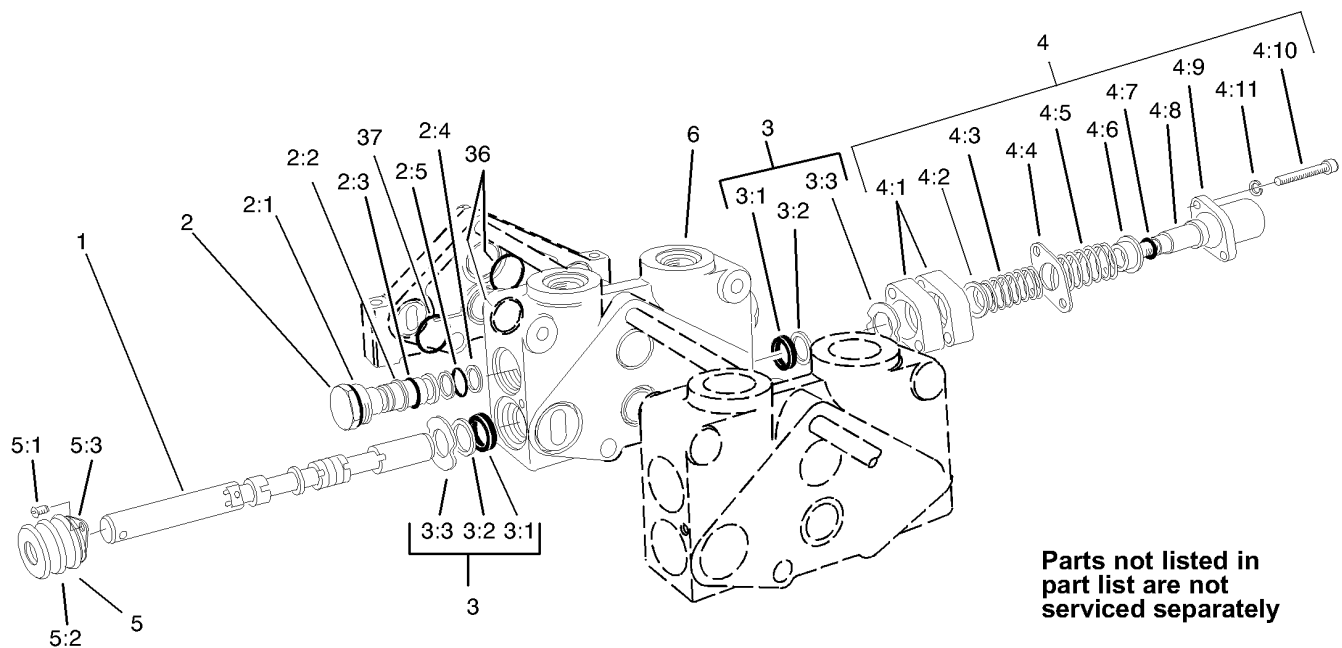


Section 5 Assembly No. 93-1386

Ref.	Part Number	Qty.	Description
1	94-5434	1	Spool
2	353-481	2	Lift Check ASM
2:1	237-54	1	O-Ring
2:2	353-306	1	Washer-Backup
2:3	353-305	1	O-Ring
2:4	353-303	2	Washer-Backup
2:5	353-302	1	O-Ring
3	92-2548	2	Spool Set Kit
3:1	353-957	1	Cup-Seal
3:2	92-2546	1	Wiper-Seal
3:3	92-2547	1	Seal-Retainer
4	353-833	1	Positioner ASM
4:1	353-733	2	Spacer-Bonnet
4:2	353-417	1	Collar-Stop
4:3	353-831	1	Spring

Ref.	Part Number	Qty.	Description
4:4	353-529	1	Plate-Retainer, Seal
4:5	92-3148	1	Spring-Traction
4:6	353-808	1	Collar-Spring
4:7	353-830	1	O-Ring
4:8	94-4248	1	Collar-Spool
4:9	99-6895	1	Bonnet
4:10	354-28	2	Screw-Hs
4:11	3253-4	2	Washer-Lock
5	93-3652	1	Boot-Dust
5:1	3274-52	2	Screw-HSH
5:2	353-575	1	Boot
5:3	93-3651	1	Retainer-Boot
6		1	Housing-V20P ●
36		1	O-Ring ●
37		3	O-Ring ●

 ● Not serviced separately

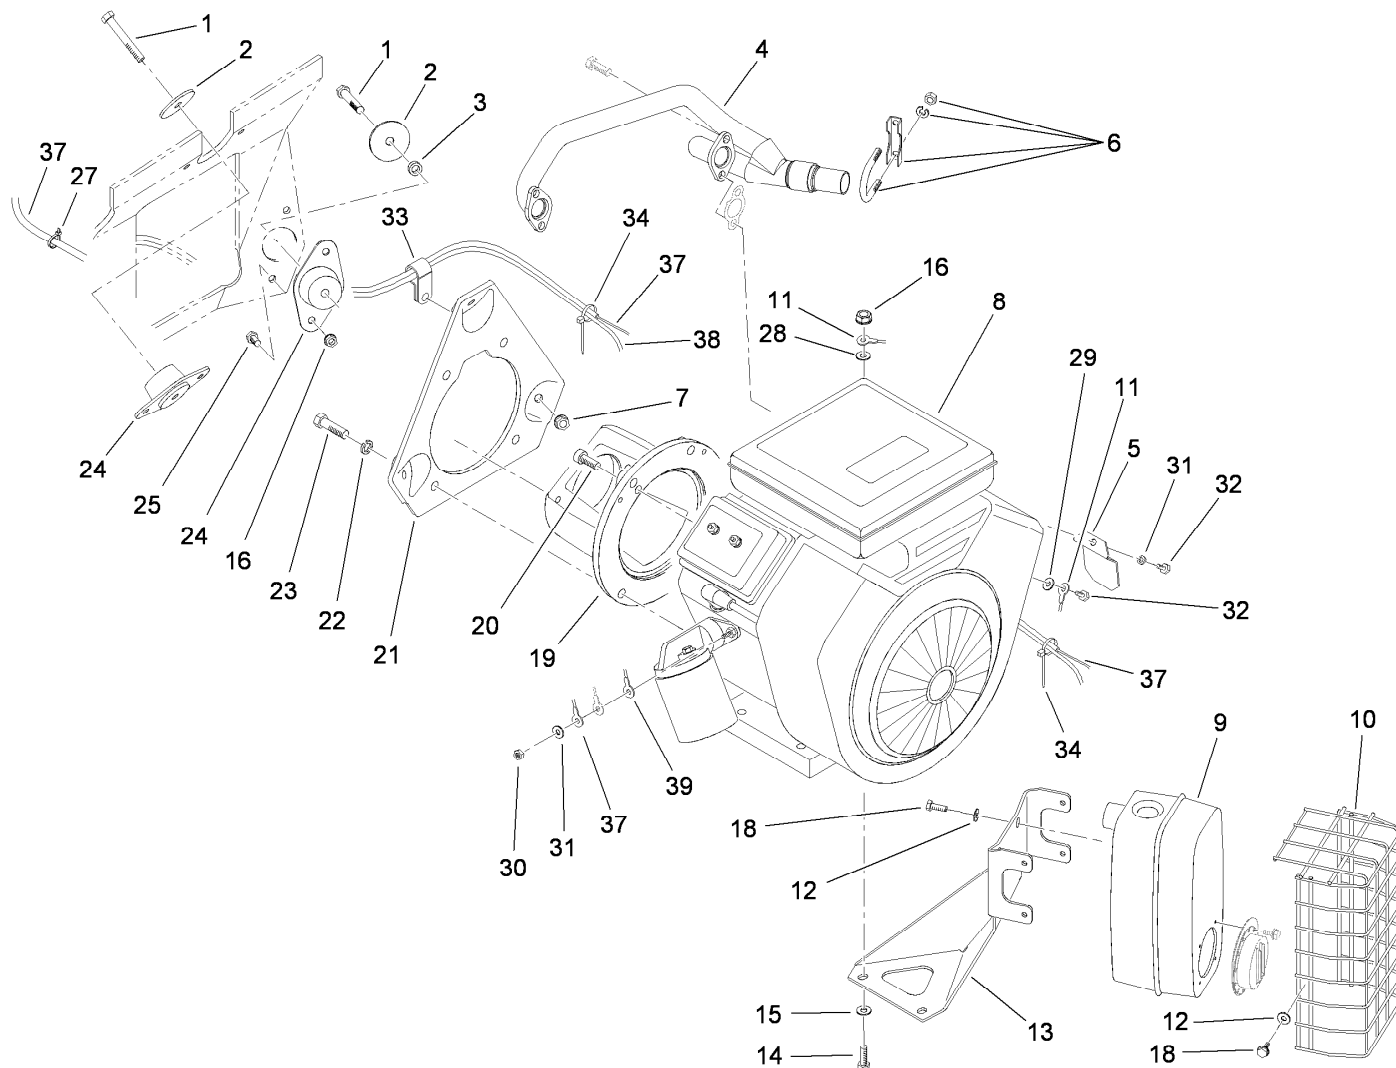


Engine Installation Assembly

Ref.	Part Number	Qty.	Description
1	323-12	3	Screw-HH
2	83-1040	3	Washer-Flat
3	83-1050	2	Spacer
4	108-6539	1	Manifold-Exhaust
5	83-2310	1	Shield-Regulator
6	2112-11	1	Muffler Clamp ASM
7	3290-357	3	Nut-HHF, Whiz
8	108-6499	1	Engine-Vanguard, Briggs And Stratton
9	98-0616	1	Muffler ASM
10	112-0220	1	Grille-Muffler
11	108-6486	1	Wire-Ground
12	3256-1	8	Washer-Flat
13	83-1630-03	1	Bracket-Support, Muffler
14	322-8	2	Screw-HH
15	3256-23	2	Washer-Flat
16	32128-20	8	Nut-HF
18	49-2040	8	Screw-HWHTF
19	83-1060-03	1	Adapter-Pump
20	3274-7	2	Screw-HSH


● Not illustrated

Ref.	Part Number	Qty.	Description
21	85-8120-03	1	Plate-Mount, Engine
22	3253-6	4	Washer-Lock
23	324-7	4	Screw-HH
24	83-1030	3	Mount-Engine
25	322-3	6	Screw-HH
27	3290-379	1	Tie-Cable
28	3255-8	1	Washer-Lock
29	3255-7	1	Washer-Lock/EXT
30	43-2830	1	Nut-Hex
31	3253-3	2	Washer-Lock
32	32144-10	2	Screw-HWH
33	2412-81	1	Clamp-R
34	3290-378	2	Tie-Cable
37	108-6493	1	Harness-Wire, Main
37:1	218-578	1	Fuse-Blade, 10 Amp ●
37:2	100-4918	2	Diode ●
37:3	106-2790	1	Link-Fusible ●
37:4	106-2791	1	Link-Fusible ●
38	98-2161	1	Cable-Battery, Positive
39	83-1150	1	Engine Ground Wire ASM

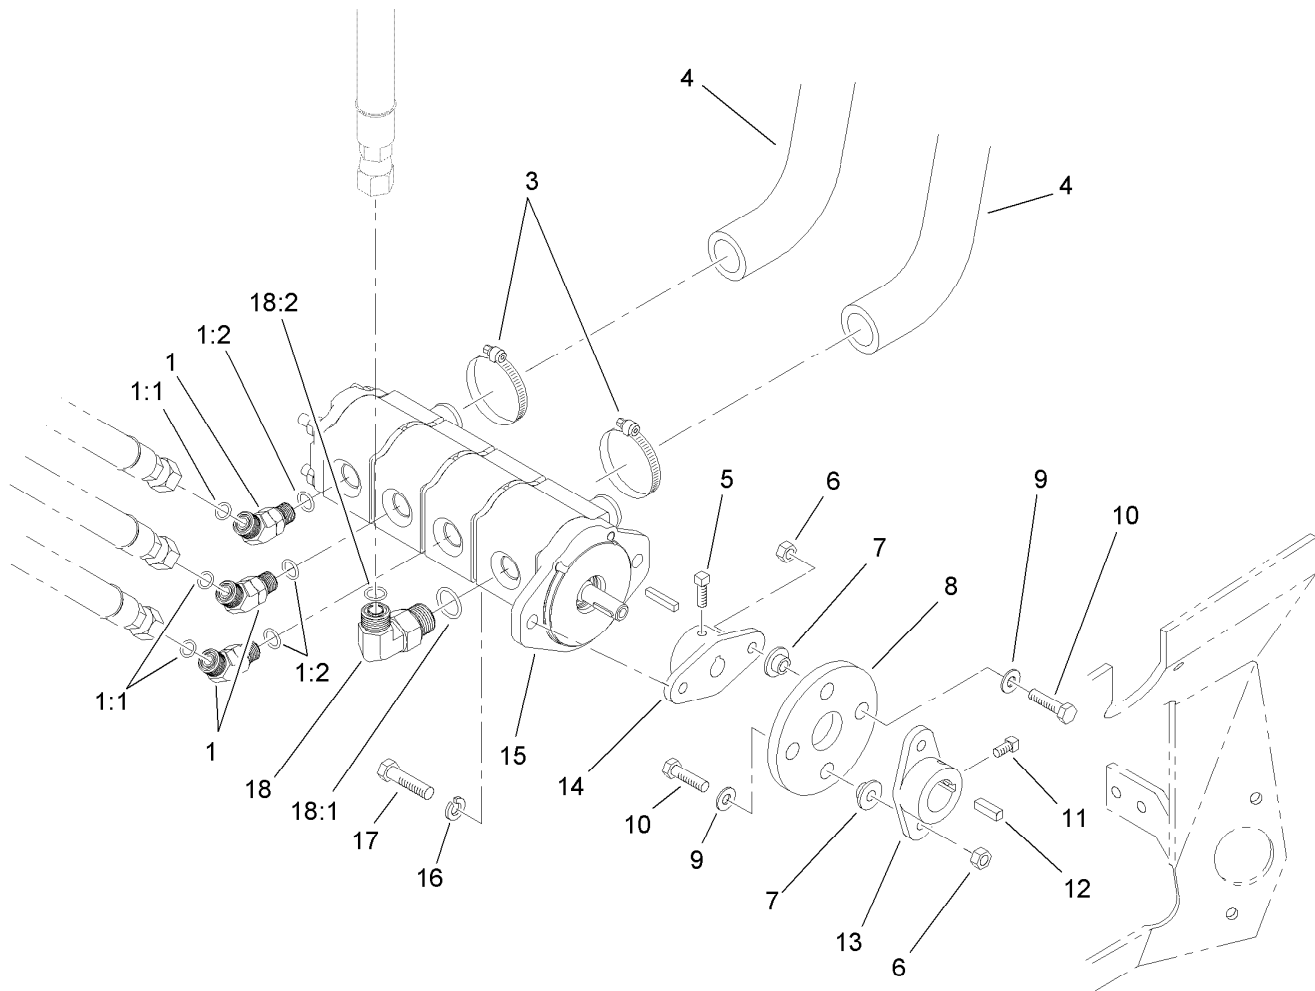 

Hydraulic Pump Installation Assembly


Ref.	Part Number	Qty.	Description
1	340-87	3	Fitting-HYD, 45 DEG
1:1	237-22	1	O-Ring
1:2	237-42	1	O-Ring
3	2412-34	2	Clamp-Hose
4	95-5966	2	Hose-Inlet, Pump
5	3241-6	2	Screw-SQH
6	3296-29	4	Nut-Lock, NI
7	27-6600	4	Spacer-Coupling
8	115-4523	1	Coupling-Rubber
9	3256-3	4	Washer-Flat
10	322-6	4	Screw-HH
11	3241-7	2	Screw-SQH
12	10-7070	1	Key-Square
13	110-5236	1	Hub-Engine
14	27-1970	1	Hub-Pump
15	107-2565	1	4 Section Gear Pump ASM
16	3253-21	2	Washer-Lock
17	323-7	2	Screw-HH
18	340-105	1	Fitting-HYD, 90 DEG
18:1	237-80	1	O-Ring
18:2	237-30	1	O-Ring

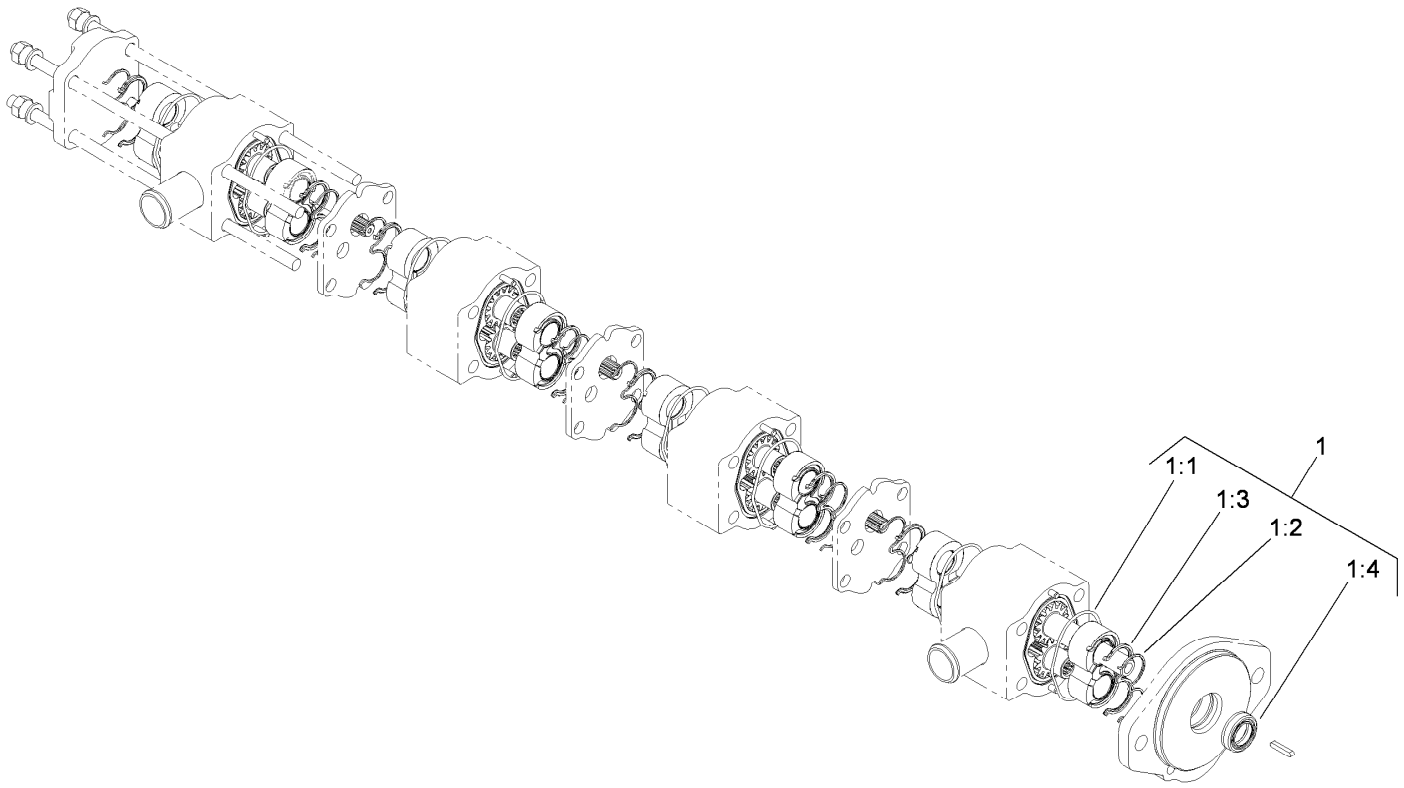 

Gear Pump Assembly 107-2565

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	107-2566	1	Seal Kit-4 Section
1:1		8	O-Ring ●
1:2		8	Seal-Back-Up ●
1:3		8	Seal-Channel ●
1:4		1	Seal-Lip ●

 ● Not serviced separately

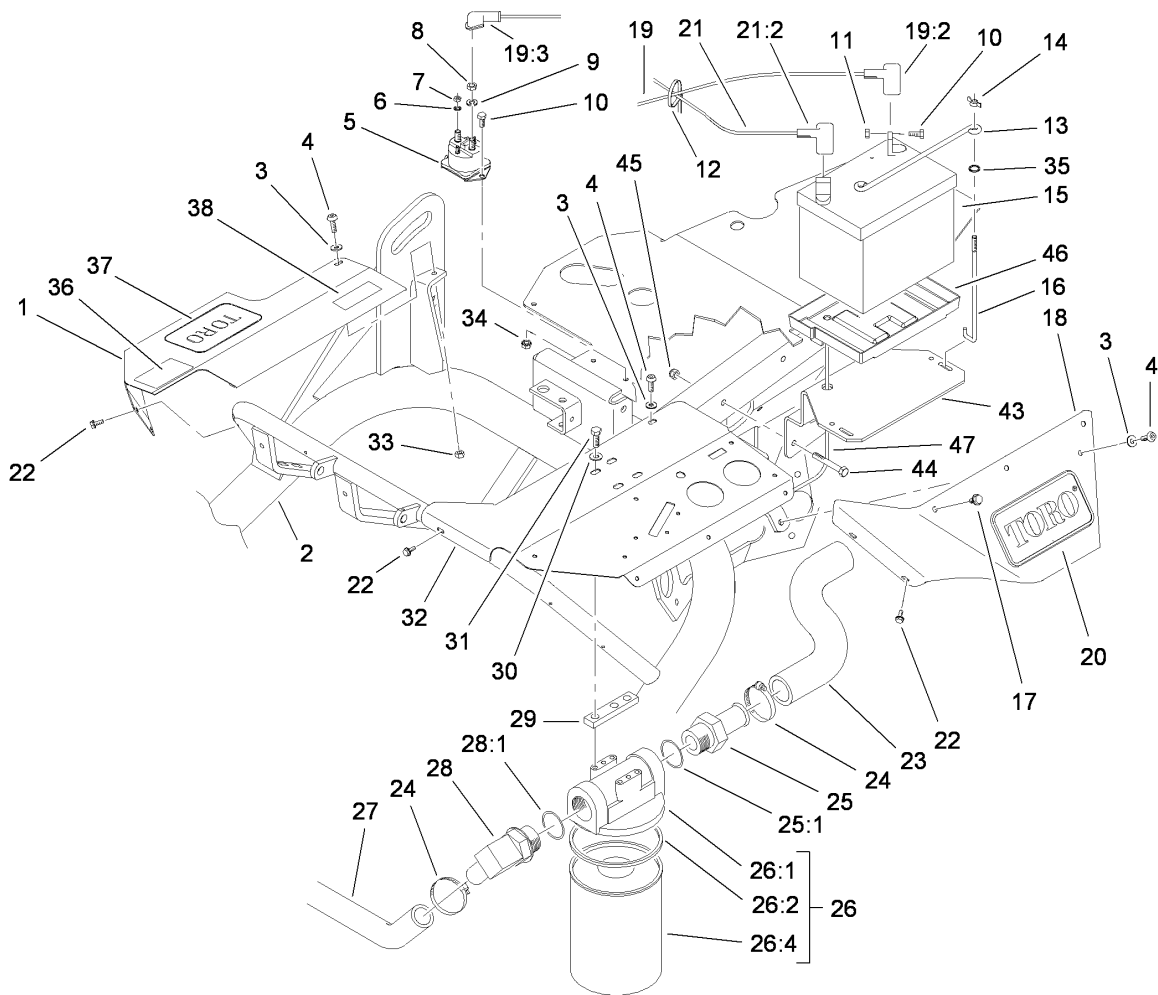


Frame Assembly

Ref.	Part Number	Qty.	Description
1	94-2694-01	1	Cover-RH
2	95-5981-01	1	Frame ASM
3	3256-22	3	Washer-Flat
4	3274-69	3	Screw-HSBH
5	28-4210	1	Solenoid
6	3254-1	2	Washer-Lock, Int
7	3219-14	2	Nut-Hex
8	3218-13	2	Nut-Jam, Brass
9	3253-4	2	Washer-Lock
10	321-3	4	Screw-HH
11	3217-5	2	Nut-Hex
12	3290-378	1	Tie-Cable
13	100-6434	1	Rod-Hold Down, Battery
14	32103-22	2	Nut-Wing
15	104-8162	1	Battery
16	100-6435	2	Post-Battery
17	46-8560	3	Screw-HHFTF
18	83-0840-01	1	Shield-Cover, Valve
19	95-7144	1	Positive Cable ASM
19:2	28-8080	1	Boot-Terminal
19:3	83-2430	1	Boot-Terminal
20	105-9751	1	Decal
21	98-0604	1	Negative Cable ASM
21:2	98-0603	1	Boot-Terminal
22	32104-116	5	Screw
23	95-7119	1	Hose-Line, Return

Ref.	Part Number	Qty.	Description
24	2412-34	3	Clamp-Hose
25	95-4356	1	Fitting
25:1	237-71	1	O-Ring
26		1	Filter And Head ASM ●
26:1	44-5560	1	Head-Filter, Oil
26:2	72-3850	1	Seal-Filter, Oil
26:4	74-3570	1	Filter
27	68-5880	1	Hose-HYD
28	353-564	1	Fitting-90 DEG
28:1	237-101	1	O-Ring
29	27-2380	2	Spacer
30	3256-23	4	Washer-Flat
31	322-4	4	Screw-HH
32	83-0830-01	1	Panel-Control, Upper
33	3296-16	1	Nut-Lock, NI
34	32149-2	2	Nut-Keps
35	237-143	2	O-Ring
36	93-8065	1	Decal-Traction
37	67-1300	1	Decal
38	114-8756	1	Decal-Emissions
43	104-2064-03	1	Battery Base ASM
44	322-11	2	Screw-HH
45	3296-29	2	Nut-Lock, NI
46	106948	1	Tray-Battery
47	98-0601	1	Tube-Drain, Battery

 ● Not serviced separately

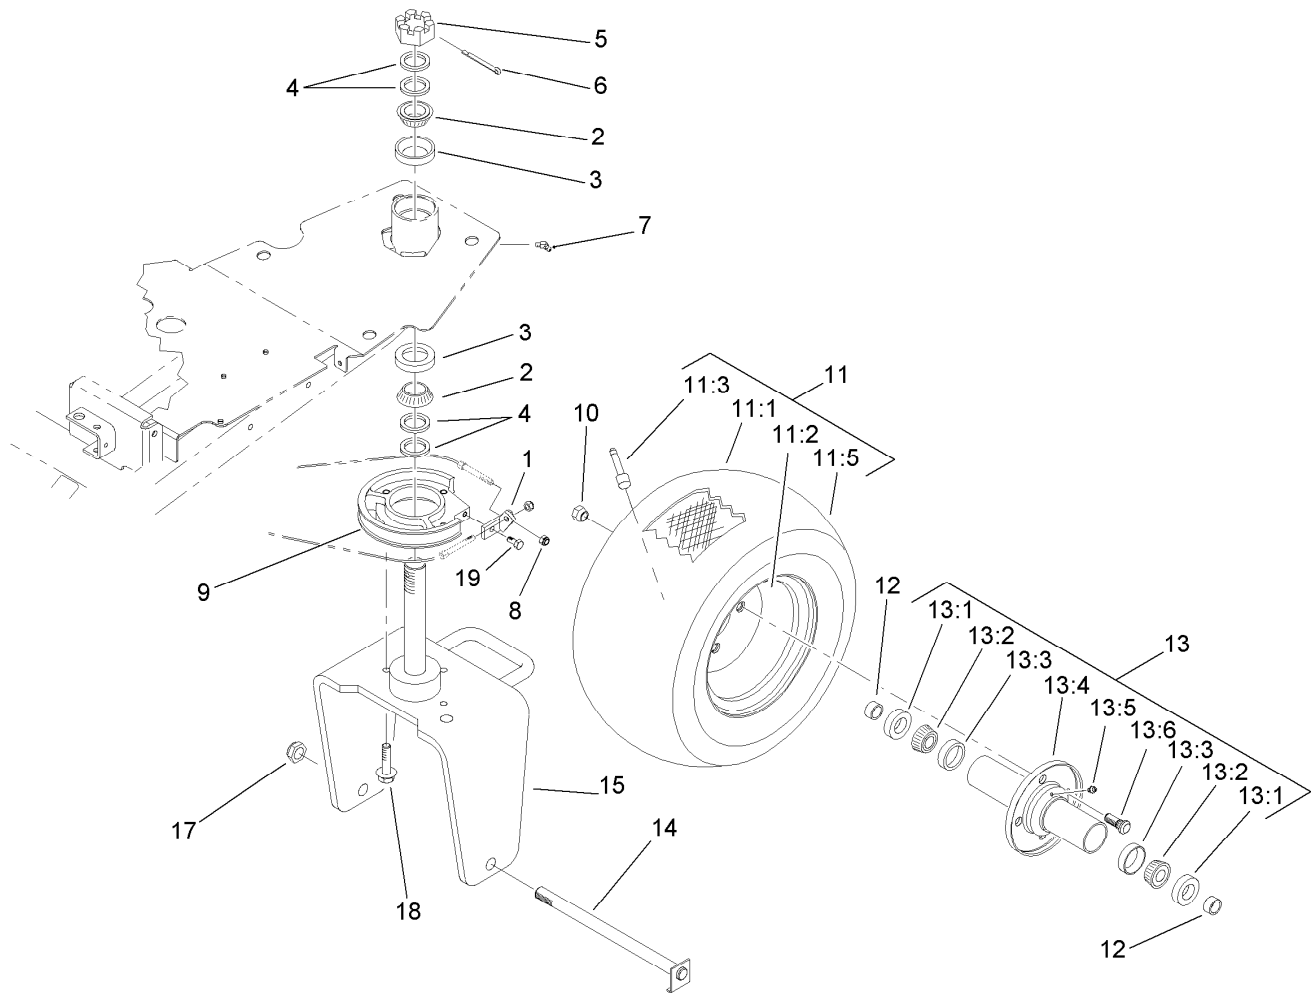


Rear Wheel Assembly

Ref.	Part Number	Qty.	Description
1	95-5956	1	Cable Anchor ASM
2	254-70	2	Bearing-Cone
3	254-61	2	Cup-Bearing
4	18-6320	4	Washer-Steering
5	32136-9	1	Nut-Hex, Slotted
6	3272-37	1	Pin-Cotter
7	302-11	1	Fitting-Lube, 45 DEG
8	3296-4	2	Nut-Lock
9	95-5955-01	1	Drum-Steering
10	242-50	4	Nut-Lug
11		1	Wheel And Tire ASM ●
11:1	28-3680	1	Tire
11:2	217-60	1	Rim
11:3	232-27	1	Stem-Valve


Ref.	Part Number	Qty.	Description
11:5	232-37	1	Tube
12	74-3730	2	Spacer-Spindle, Rear
13	72-9710	1	Hub-Tire
13:1	253-111	2	Seal-Oil
13:2	254-78	2	Bearing-Cone
13:3	254-79	2	Bearing-Roller, Cup
13:4	75-9440	1	Hub ASM
13:5	302-11	1	Fitting-Lube, 45 DEG
13:6	10-6830	4	Stud-Type, Drive
14	5-3934	1	Bolt-Caster
15	95-5952-01	1	Fork Castor ASM
17	3296-15	1	Nut-Lock, NI
18	3234-24	3	Screw-HHF
19	322-3	1	Screw-HH

 ● Not serviced separately

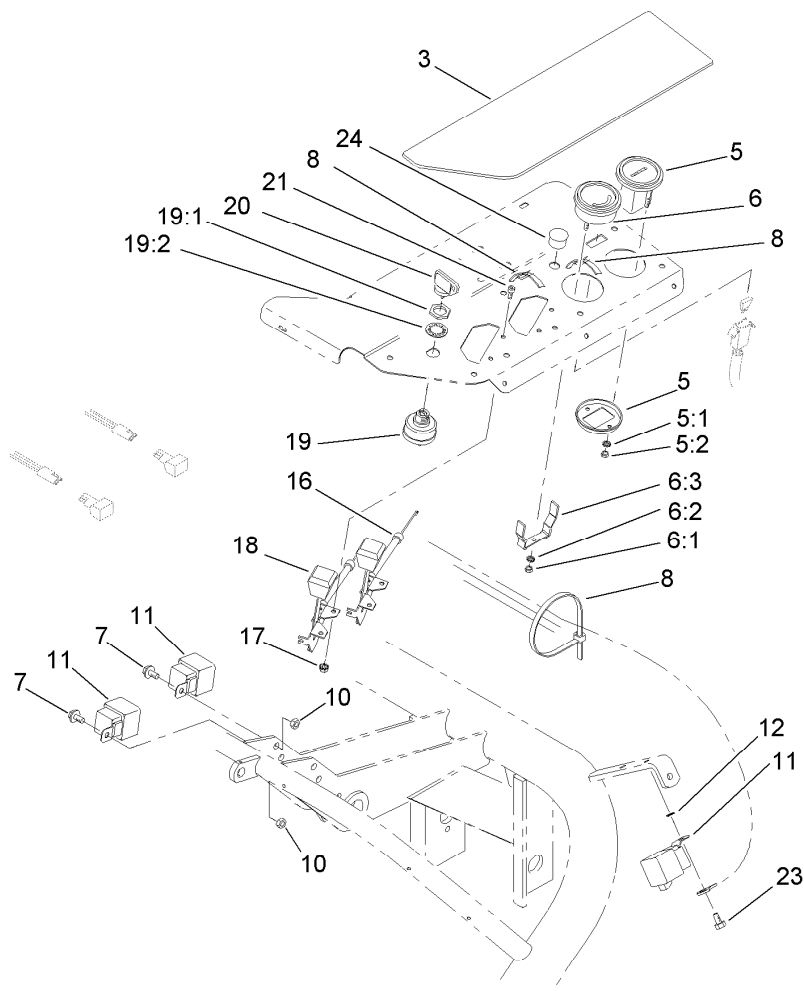


Control Panel Assembly

Ref.	Part Number	Qty.	Description
3	107-2554	1	Decal-Panel, Control
5	66-2950	1	Gauge-Hourmeter
5:1	3255-20	2	Washer-Lock
5:2	3217-25	2	Nut-Hex
6	98-2160	1	Voltmeter
6:1	3217-27	1	Nut-Hex
6:2	3255-25	1	Washer-Lock
6:3	78-0080	1	Clamp-Mounting
7	321-4	2	Screw-HH
8	3290-378	3	Tie-Cable
10	3296-16	2	Nut-Lock, NI
11	99-7430	3	Relay
12	3255-7	1	Washer-Lock/EXT
16	83-0040	1	Control-Choke
17	3296-12	4	Nut-Lock, NI
18	83-0030	1	Control-Throttle
19	104-2541	1	Switch ASM
19:1	218-461	1	Nut-HH
19:2	3254-5	1	Washer-Tooth, Internal
20	63-8360	2	Key-Ignition
21	3290-134	4	Screw
23	32104-95	1	Screw-HWH
24	2410-64	1	Plug-Button

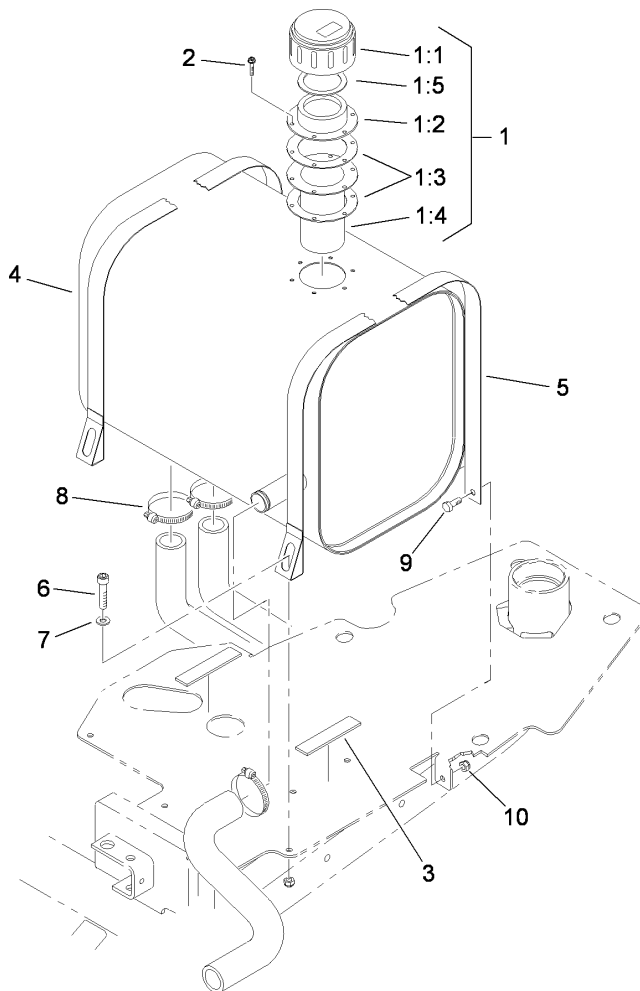 


Hydraulic Reservoir Assembly

Ref.	Part Number	Qty.	Description
1	62-2570	1	Filler Cap ASM
1:1	353-962	1	Cap ASM
1:2	353-961	1	Flange
1:3	353-963	2	Gasket
1:4	62-2610	1	Strainer-Cap, Filler
1:5	76-1720	1	Gasket-Cap, Filler
2	32144-34	6	Screw-HWHTF
3	95-5951	2	Strip-Seal
4	95-7118	1	Tank-Hydraulic
5	27-2400	2	Reservoir Strap ASM
6	3274-19	2	Screw-HSH
7	3256-22	2	Washer-Flat
8	2412-34	3	Clamp-Hose
9	321-3	2	Screw-HH
10	3296-16	4	Nut-Lock, NI

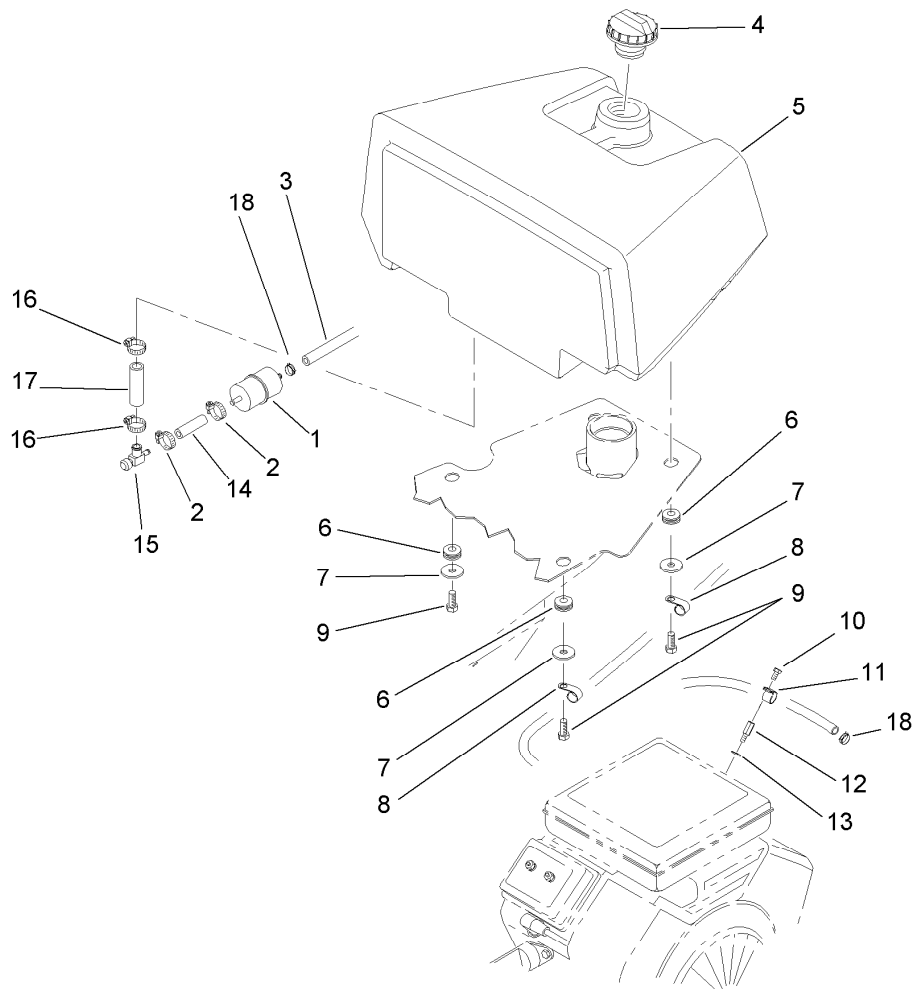 


Fuel Tank Assembly

Ref.	Part Number	Qty.	Description
1	94-2690	1	Filter-Fuel
2	2412-108	2	Clamp-Worm
3	109-0275	1	Hose-Fuel
4	115-5304	1	Cap-Fuel
5	105-8266	1	Tank-Fuel
6	240-11	4	Bushing-Flange
7	63-8410	4	Washer
8	2412-41	3	Clamp
9	323-6	4	Screw-HH
10	33113-012	1	Screw-HH
11	2412-94	1	Clamp
12	106-4616	1	Screw-Spacer
13	3256-63	1	Washer-Flat
14	109-0304	1	Hose-Fuel
15	83-1390	1	Valve-Shut-Off, Fuel
16	2412-36	2	Clamp-Hose
17	106-1128	1	Hose-Fuel
18	2412-98	2	Clamp

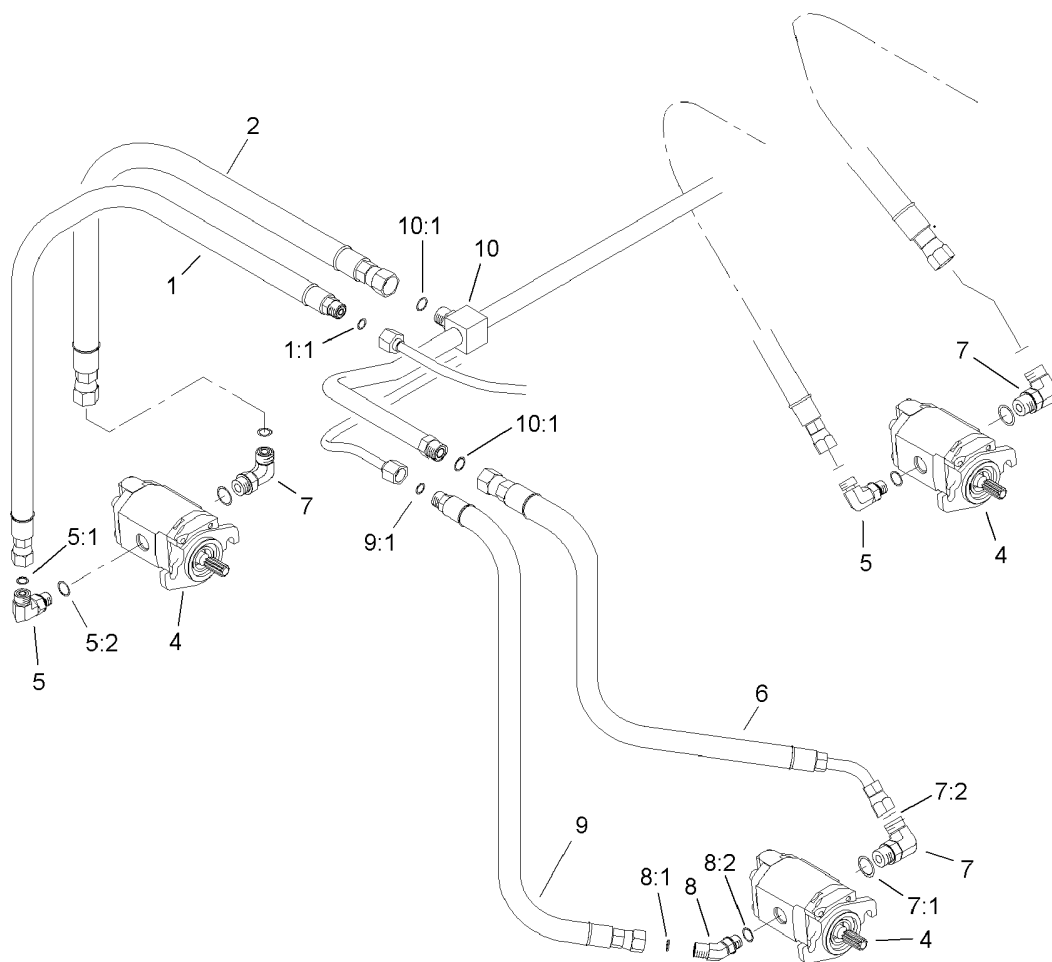 

Reel Motor Installation Assembly








Ref.	Part Number	Qty.	Description
1	95-5984	1	Hose-HYD
1:1	237-22	1	O-Ring
2	95-5985	1	Hose-HYD
4	105-9770	3	HYD Motor ASM
5	340-77	2	Fitting-HYD, 90 DEG
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	95-5989	1	Hose-HYD
7	340-98	3	Fitting-HYD, 90 DEG
7:1	237-79	1	O-Ring
7:2	237-30	1	O-Ring
8	340-87	1	Fitting-HYD, 45 DEG
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	95-5988	1	Hose-HYD
9:1	237-22	1	O-Ring
10	100-6431	1	Tube-Return
10:1	237-30	2	O-Ring

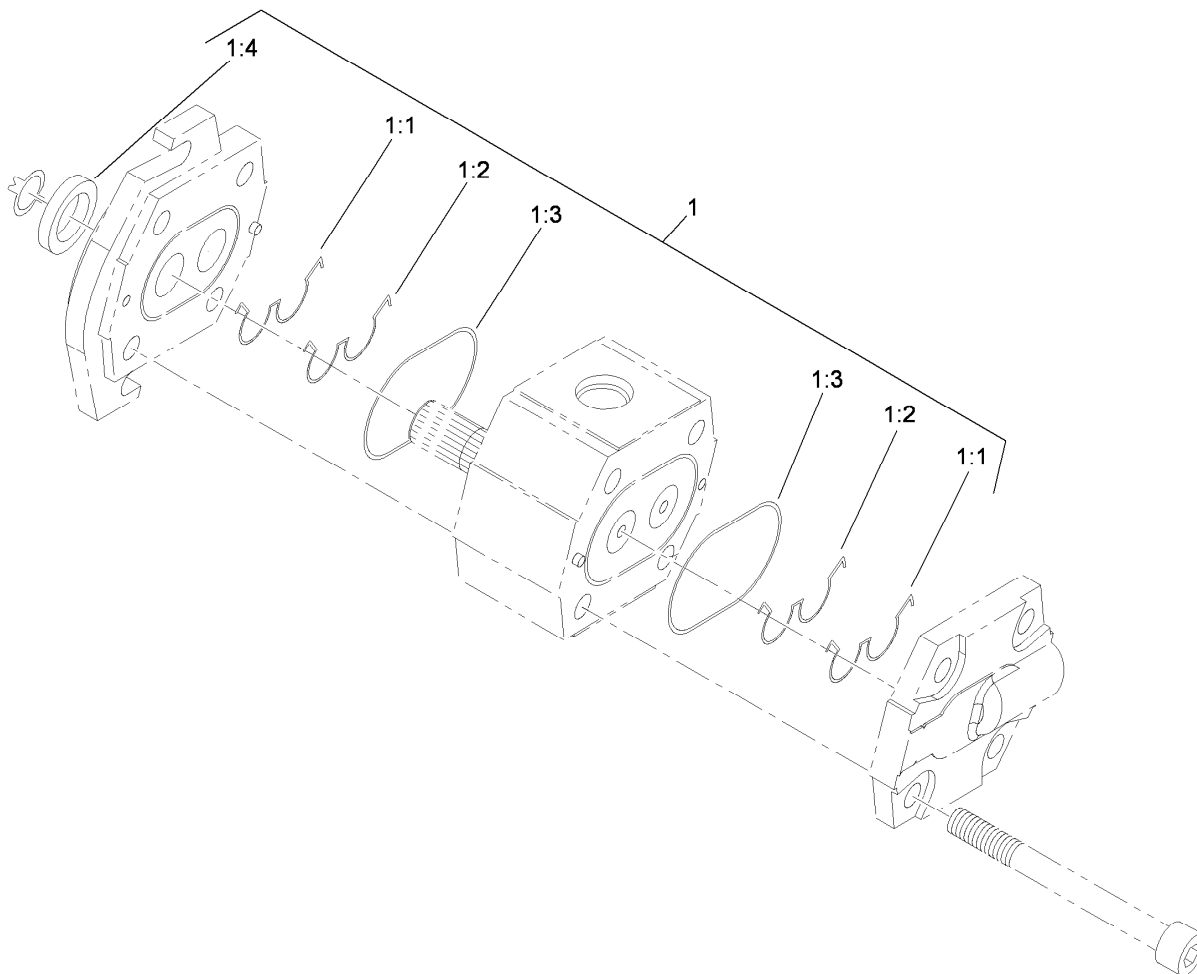 

Hydraulic Motor Assembly No. 105-9770

Ref.	Part Number	Qty.	Description
1	106-6362	1	Seal Kit
1:1		2	Seal-Extrusion, Anti ●
1:2		2	Seal-Pressure Loading ●
1:3		2	O-Ring ●
1:4		1	Seal-Shaft ●

       ● Not serviced separately

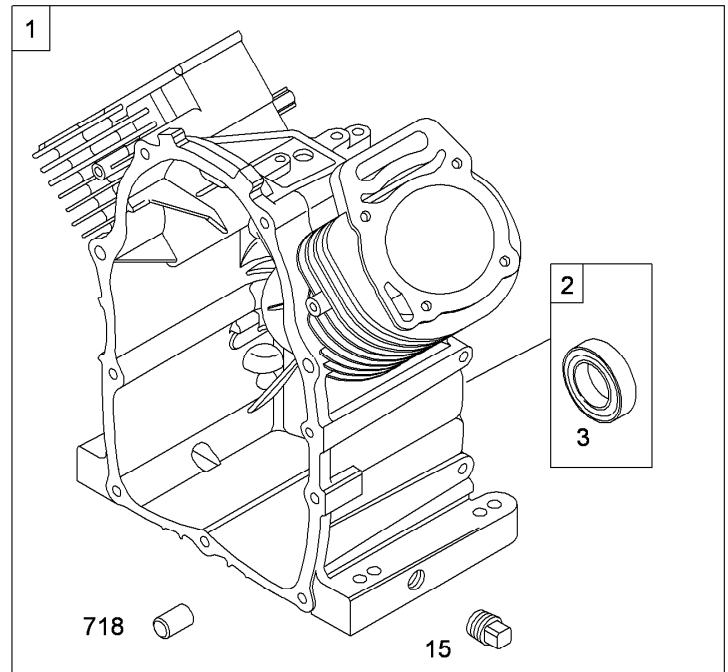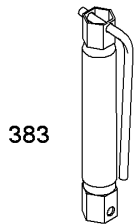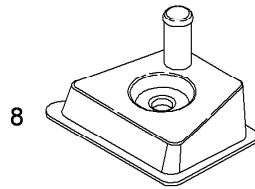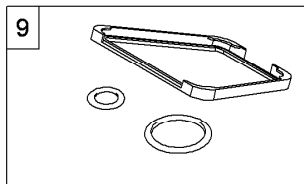

- 1019 Label Kit
- 1058 Operator Manual
- 1330 Repair Manual



Assemblies include all parts shown in frames

Cylinder Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
1	692544	1	Cylinder ASM ●
2	808534	1	Bushing-Seal Kit (Magneto Side) ●
3	805101	1	Seal-Oil (Magneto Side) ●■
8	808984	1	Breather ASM ●
9	809094	1	Gasket-Breather ●■
10	690751	1	Screw (Breather ASM) ●
15	690946	1	Plug-Drain, Oil ●
337	496018	1	Spark Plug ●
383	19374	1	Wrench-Spark Plug ●
572	690686	1	Baffle-Breather ●
635	692076	1	Boot-Spark Plug ●
718	806469	1	Pin-Locating ●
1019	808036	1	Label Kit ●
1058	276343	1	Operator Manual ●
1330	272144	1	Repair Manual ●

● Obtain parts from www.briggsandstratton.com

  ■ Included in Engine Gasket Set (Ref. No. 358)

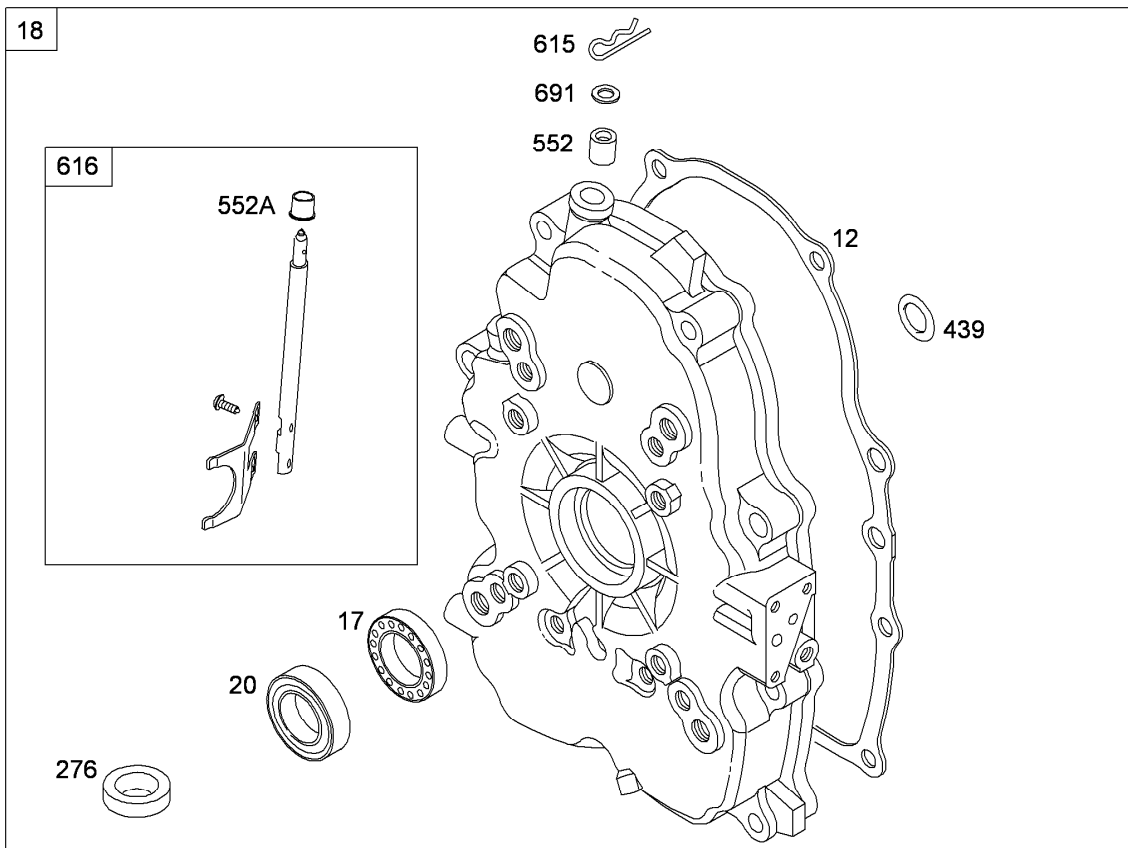







Assemblies include all parts shown in frames

Crankcase Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
12	691684	1	Gasket-Crankcase ●■
17	690752	1	Bearing-Ball ●
18	808847	1	Cover-Crankcase ●
20	805049	1	Seal-Oil (PTO Side) ●■
22	807362	1	Screw (Crankcase Cover) ●
276	690724	1	Washer-Sealing ●▲■
439	692154	1	Seal-O Ring (Crankcase Cover) ●■
552	690701	1	Bushing-Crank, Governor ●
552A	806686	1	Bushing-Crank, Governor ●
615	691550	1	Retainer-Shaft, Governor ●
616	806685	1	Crank-Governor ●
691	690680	1	Seal-Shaft, Governor ●■

● Obtain parts from www.briggsandstratton.com
▲ Included in Carburetor Overhaul Kit (Ref. No. 121)

      ■ Included in Engine Gasket Set (Ref. No. 358)


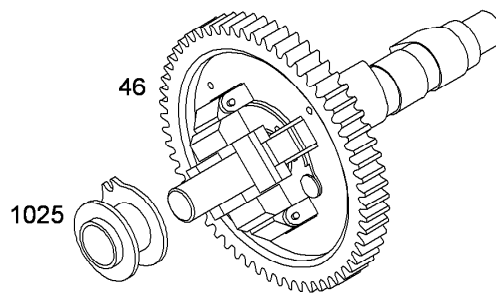
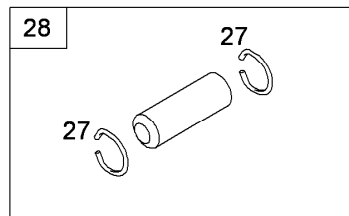
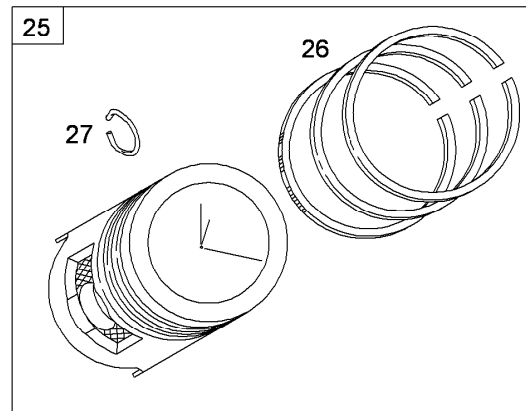
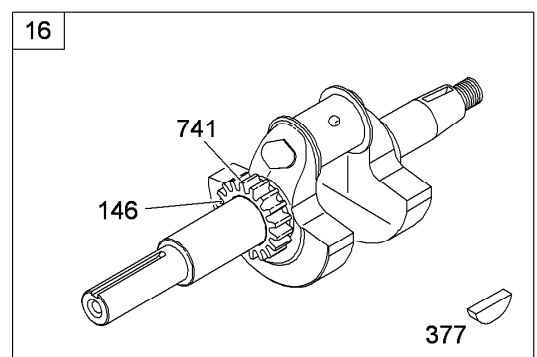
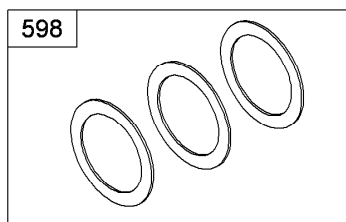
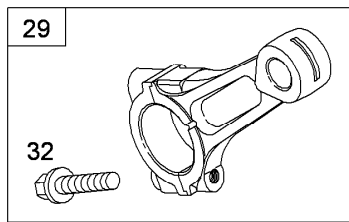


Assemblies include all parts shown in frames

Crankshaft Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
16	809842	1	Crankshaft ●
25	808326	1	Piston ASM (Standard) ●
25	808337	1	Piston ASM (.020 O.S.) ●
26	807889	1	Ring Set (Standard) ●
26	807995	1	Ring Set (.020 O.S.) ●
27	690683	1	Lock-Pin, Piston ●
28	807886	1	Pin-Piston ●
29	807900	1	Rod-Connecting (Standard) ●
29	807803	1	Rod-Connecting (.020 Undersize) ●
32	690698	1	Screw (Connecting Rod) ●
46	691557	1	Camshaft ●
146	691639	1	Key-Timing ●
357	691483	1	Key pulley , Drive ●
377	808095	1	Key-Woodruff ●
598	807625	1	Shim-Play, End ●
741	691530	1	Gear-Timing ●
1025	690689	1	Spool-Governor ●
1133	690342	1	Screw (Crankshaft) ●

       ● Obtain parts from www.briggsandstratton.com

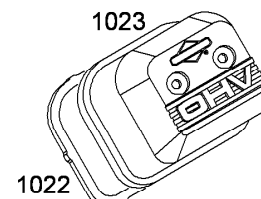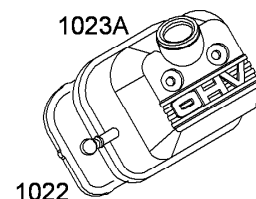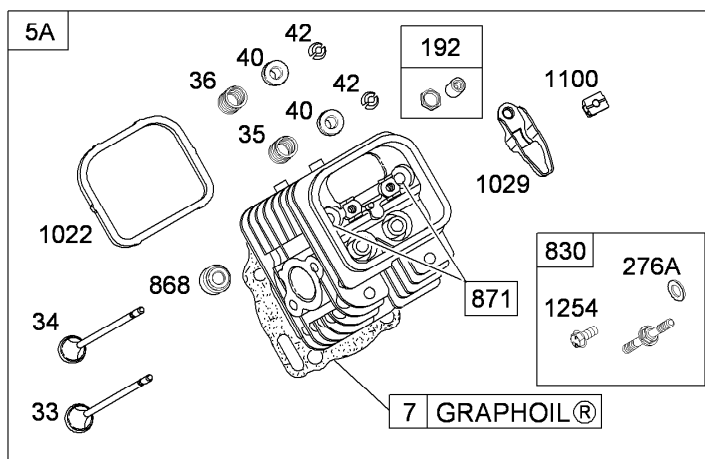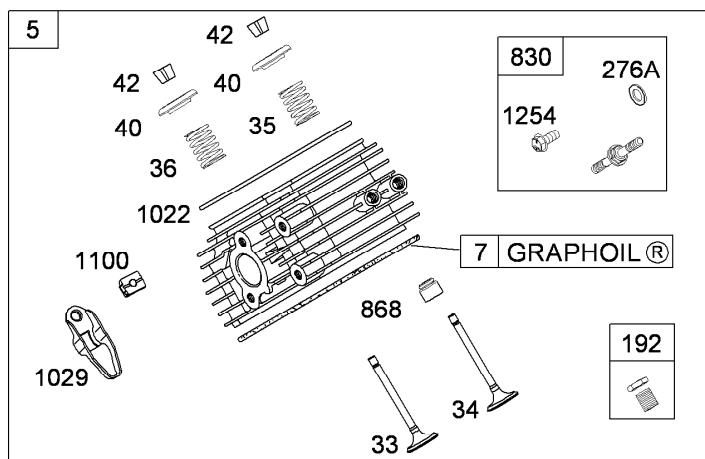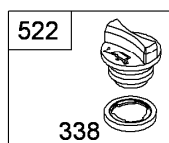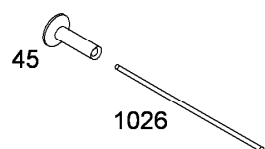

Assemblies include all parts shown in frames


Cylinder Head Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
5	809185	1	Cylinder Head (No. 1) ●
5A	809186	1	Cylinder Head (No. 2) ●
7	690888	1	Gasket-Head, Cylinder ●■▲
13	692059	1	Screw (Cylinder Head) ●
33	807681	1	Valve-Exhaust ●
34	807680	1	Valve-Intake ●
35	692084	1	Spring-Valve (Intake) ●
36	692084	1	Spring-Valve (Exhaust) ●
40	692058	1	Retainer-Valve ●
42	807683	1	Keeper-Valve ●
45	690977	1	Tappet-Valve ●
192	807623	1	Adjuster-Arm, Rocker ●
276A	807085	1	Washer-Sealing ●■▲
338	691312	1	Seal-O Ring (Dipstick Gasket) ●▲

Ref.	Part Number	Qty.	Description
522	491832	1	Plug-Fill, Dipstick ●
830	809157	1	Stud-Arm, Rocker ●
868	691963	1	Seal-Valve ●■▲
871	692057	1	Bushing-Guide, Valve ●
914	807120	1	Screw (Rocker Cover) ●
1022	806039	1	Gasket-Cover, Rocker ●■▲
1023	691494	1	Cover-Valve ●
1023A	690910	1	Cover-Valve (Cylinder 1) (With Fuel Pump) ●
1026	691836	1	Rod-Push (Intake) ●
1026	691758	1	Rod-Push (Exhaust) ●
1029	807323	1	Arm-Rocker ●
1100	690973	1	Pivot-Arm, Rocker ●
1254	807084	1	Screw (Rocker Arm Stud) ●

● Obtain parts from www.briggsandstratton.com
▲ Included in Valve Gasket Set (Ref. No. 1095)

 ■ Included in Engine Gasket Set (Ref. No. 358)

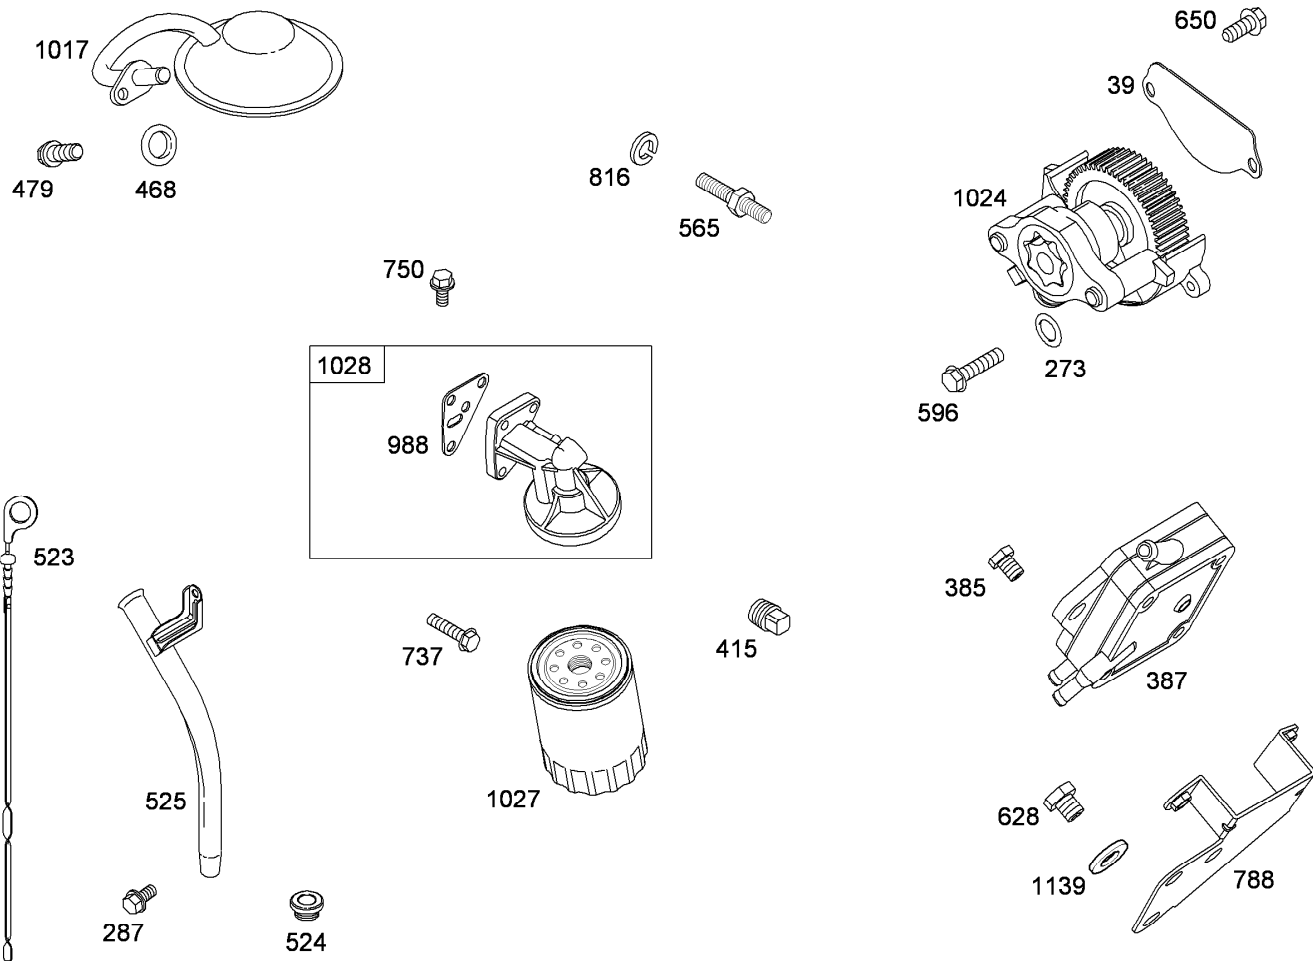

Assemblies include all parts shown in frames


Oil Filter, Tube and Pump Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
39	690745	1	Deflector-Oil ●
273	690681	1	Seal-O Ring (Oil Pump) ■●
287	692062	1	Screw (Dipstick Tube) ●
385	807084	1	Screw (Fuel Pump) ●
387	808969	1	Pump-Fuel ●
415	690283	1	Plug-Oil ●
468	690690	1	Seal-O Ring (Oil Pump Screen) ■●
479	807084	1	Screw (Oil Pump Screen) ●
523	693175	1	Dipstick ●
524	693172	1	Seal-Tube, Dipstick ■▲●
525	693174	1	Tube-Dipstick ●
565	690682	1	Stud (Oil Filter Adapter) ●
596	691492	1	Screw (Oil Pump) ●
628	692062	1	Screw (Fuel Pump Bracket) ●

Ref.	Part Number	Qty.	Description
650	841233	1	Screw (Oil Deflector) ●
737	690679	1	Screw (Oil Filter Adapter) ●
750	692539	1	Screw ●
788	691559	1	Bracket-Pump, Fuel ●
816	690706	1	Washer (Oil Filter Adapter) ●
988	692063	1	Gasket-Adapter, Oil Filter ■
1017	690900	1	Screen-Pump, Oil ●
1024	693185	1	Pump-Oil ●
1027	492932	1	Filter-Oil ●
1028	808235	1	Adapter-Filter, Oil ●
1139	806497	1	Washer (Fuel Pump Bracket) ●

● Obtain parts from www.briggsandstratton.com
▲ Included in Valve Gasket Set (Ref. No. 1095)

 ■ Included in Engine Gasket Set (Ref. No. 358)

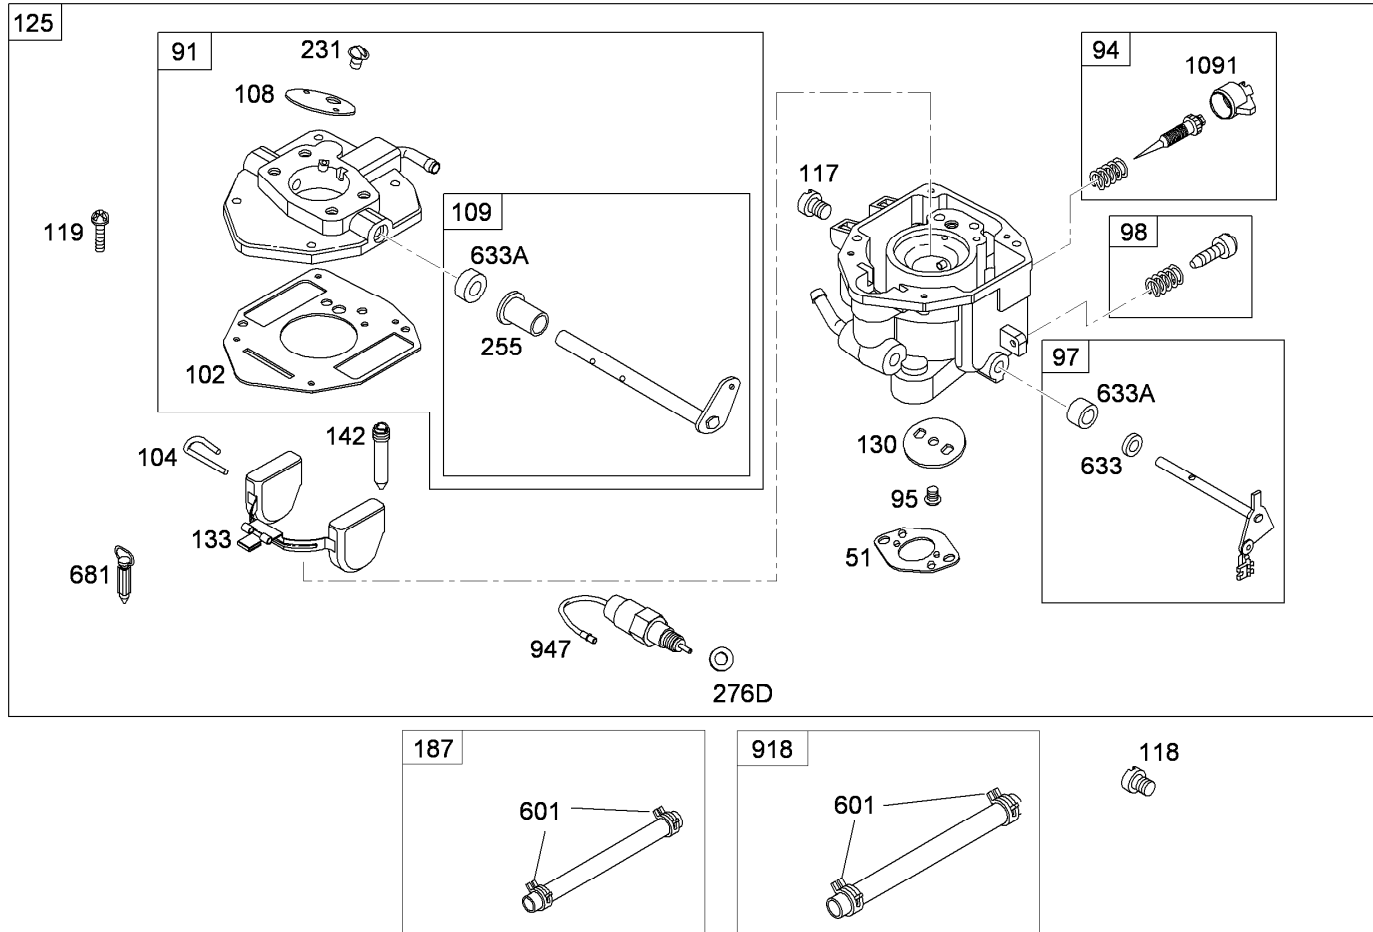


Assemblies include all parts shown in frames

Carburetor Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
51	691694	1	Gasket-Intake ●■	130	690726	1	Valve-Throttle ●
91	809208	1	Upper Carburetor Body ASM ●	133	806961	1	Float-Carburetor ●
94	808257	1	Idle Mixture Kit ●▲	142	690725	1	Nozzle-Carburetor ●▲
95	690718	1	Screw (Throttle Valve) ●	187	791766	1	Line-Fuel (Cut To Required Length) ●
97	807495	1	Shaft throttle ●	231	690718	1	Screw (Choke Valve) ●
98	808981	1	Idle Speed Kit ●	255	690721	1	Bushing-Shaft, Choke ●▲
102	692077	1	Gasket-Body, Carburetor ●▲	276D	806137	1	Washer-Sealing ●
104	690723	1	Pin-Hinge, Float ●▲	601	791850	1	Clamp-Hose ●
108	690719	1	Valve-Choke ●	633	806131	1	Seal-Shaft, Choke Throttle ●▲
109	809096	1	Shaft-Choke ●	633A	690722	1	Seal-Shaft, Choke Throttle ●▲
117	690862	1	Jet main (STD) ●▲	681	808798	1	Valve-Needle, Float ●▲
118	809442	1	Jet main (High Altitude) ●	918	393815	1	Line-Vacuum ●
119	690720	1	Screw (Upper To Lower Body) ●	947	692094	1	Solenoid-Fuel ●
125	809217	1	Carburetor ●	1091	691516	1	Cap-Limiter ●▲

● Obtain parts from www.briggsandstratton.com
▲ Included in Carburetor Overhaul Kit (Ref. No. 121)

 ■ Included in Engine Gasket Set (Ref. No. 358)





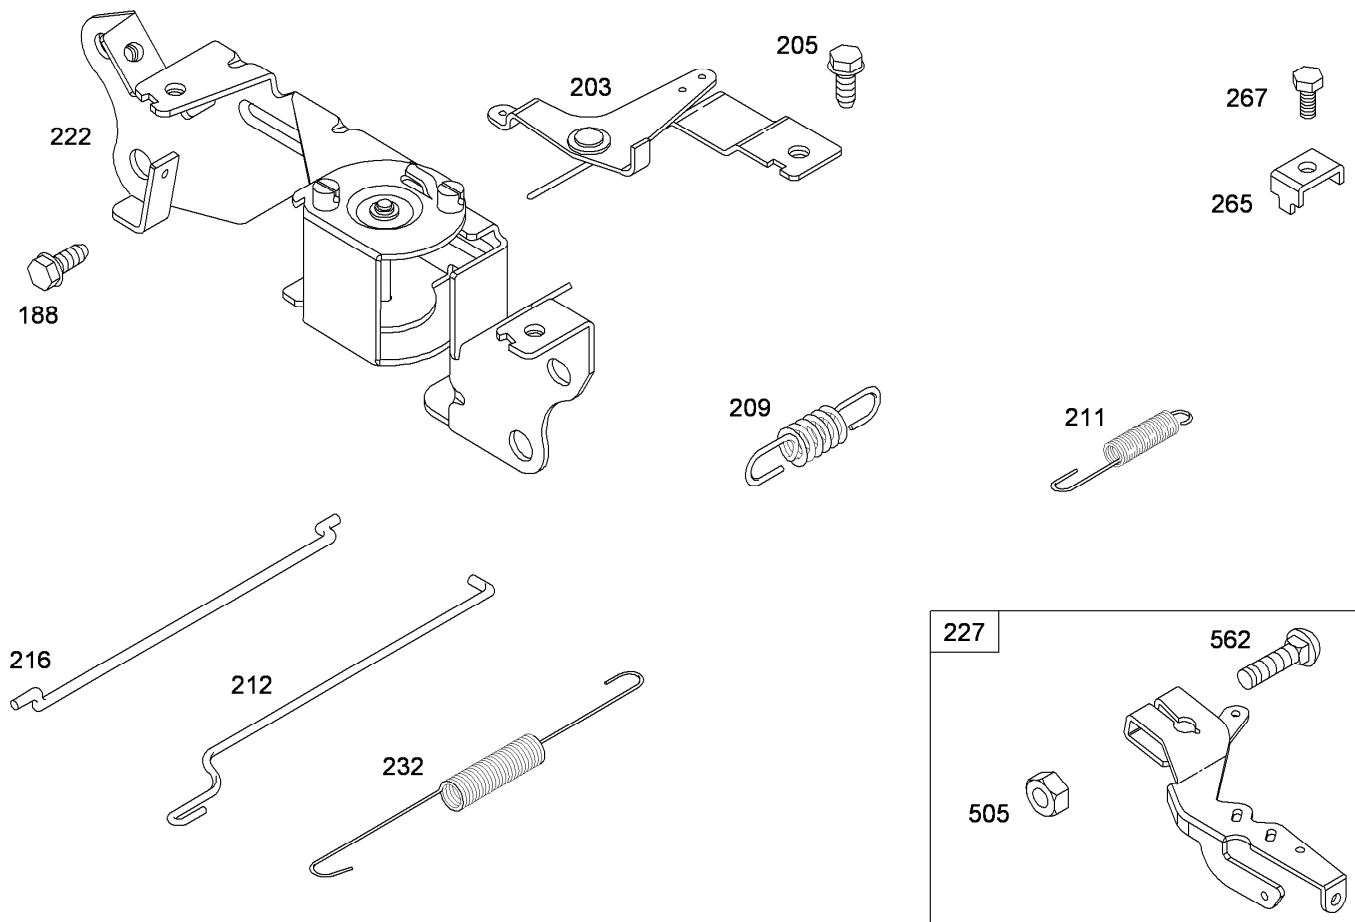


Assemblies include all parts shown in frames







Governor Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
188	692056	1	Screw (Control Bracket) ●
203	690923	1	Crank-Bell ●
205	692083	1	Screw (Bell Crank) ●
209	806872	1	Spring-Governor ●
211	806868	1	Spring-Idle, Governor ●
212	690712	1	Link-Throttle ●
216	690705	1	Link-Choke ●
222	808454	1	Bracket-Control ●
227	690236	1	Lever-Control, Governor ●
232	692073	1	Spring-Link, Governor ●
265	691024	1	Clamp-Casing ●
267	692083	1	Screw (Casing Clamp) ●
505	690238	1	Nut (Governor Control Lever) ●
562	690239	1	Bolt (Governor Control Lever) ●

     ● Obtain parts from www.briggsandstratton.com

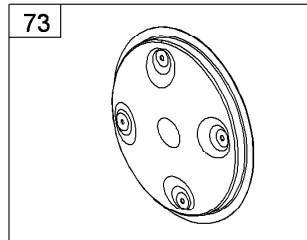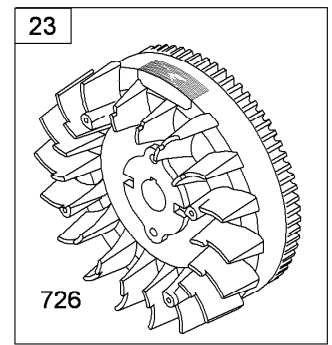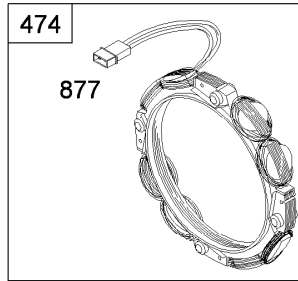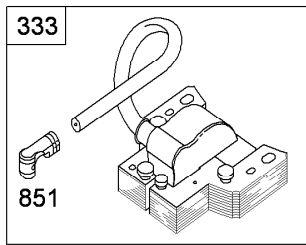

1005

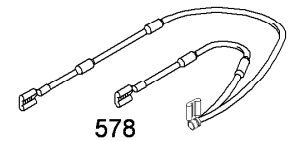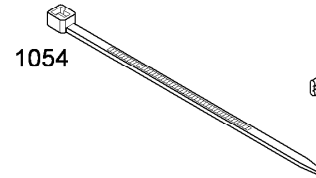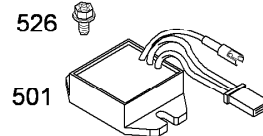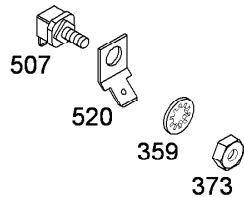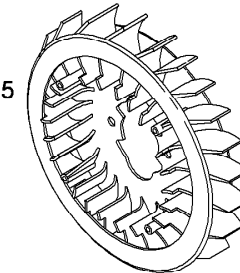      

Assemblies include all parts shown in frames


Flywheel Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
23	841050	1	Flywheel ■
73	841440	1	Screen rotating ■
74	841441	1	Screw (Rotating Screen) ■
332	690887	1	Nut (Flywheel) ■
333	492341	1	Armature-Magneto ■
334	692066	1	Screw (Magneto Armature) ■
359	691077	1	Washer (Ground Terminal) ■
363	19203	1	Puller-Flywheel ■
373	691612	1	Nut (Ground Terminal) ■
474	696458	1	Alternator ■
501	691185	1	Regulator ■
507	691972	1	Insulator ■
520	691084	1	Terminal-Ground ■

Ref.	Part Number	Qty.	Description
526	692067	1	Screw (Regulator) ■
529	690744	1	Grommet ■
578	692319	1	Wire ASM ■
726		1	Gear Ring ■ ●
729	690586	1	Clip-Wire ■
851	493880	1	Terminal-Spark Plug ■
877	399916	1	Connector-Wire, Alternator ■
934	691058	1	Screw (Fan Retainer) ■
1005	841439	1	Fan flywheel ■
1006	690452	1	Retainer-Fan ■
1044	692056	1	Screw (Flywheel) ■
1054	280275	1	Tie-Cable ■
1119	691552	1	Screw (Alternator) ■

● Not serviced separately

 ■ Obtain parts from www.briggsandstratton.com

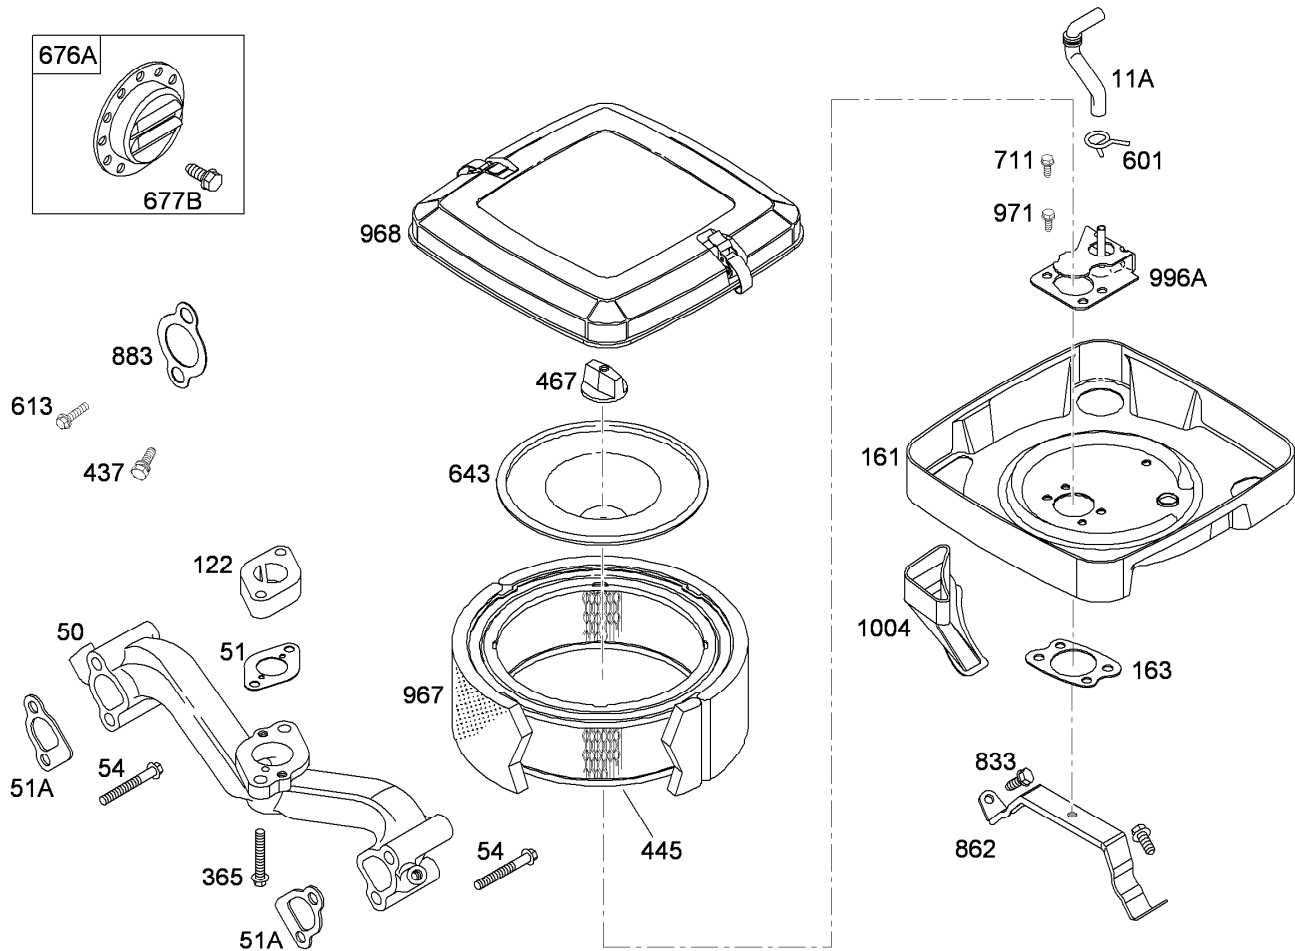

Assemblies include all parts shown in frames


Air Cleaner Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
11A	806083	1	Tube-Breather ●
50	690754	1	Manifold-Intake ●
51	691694	1	Gasket-Intake ●■
51A	692035	1	Gasket-Intake ●■▲
54	690676	1	Screw (Intake Manifold) ●
122	690691	1	Spacer-Carburetor ●
161	691561	1	Base-Cleaner, Air ●
163	692081	1	Gasket-Cleaner, Air ●■
365	690711	1	Screw (Carburetor) ●
437	691902	1	Screw (Exhaust Manifold) ●
445	394018	1	Filter-Air ●
467	691985	1	Knob-Cleaner, Air ●
601	691038	1	Clamp-Hose ●
613	691902	1	Screw (Muffler) ●
643	692079	1	Retainer-Filter, Air ●

Ref.	Part Number	Qty.	Description
676A	397630	1	Deflector-Exhaust ●
677B	690661	1	Screw (Exhaust Deflector) ●
883	691613	1	Gasket-Exhaust ●■▲
711	841233	1	Screw (Carburetor Shield) ●
833	841233	1	Screw (Stud Mounting Strap) ●
862	692153	1	Strap-Stud Mounting, Air Cleaner ●
967	272490	1	Filter-Air ●
968	699959	1	Cover cleaner, Air ●
971	807084	1	Screw (Air Cleaner Base To Carburetor) ●
996A	691577	1	Shield-Carburetor ●
1004	807121	1	Duct air ●

● Obtain parts from www.briggsandstratton.com
▲ Included in Valve Gasket Set (Ref. No. 1095)

 ■ Included in Engine Gasket Set (Ref. No. 358)

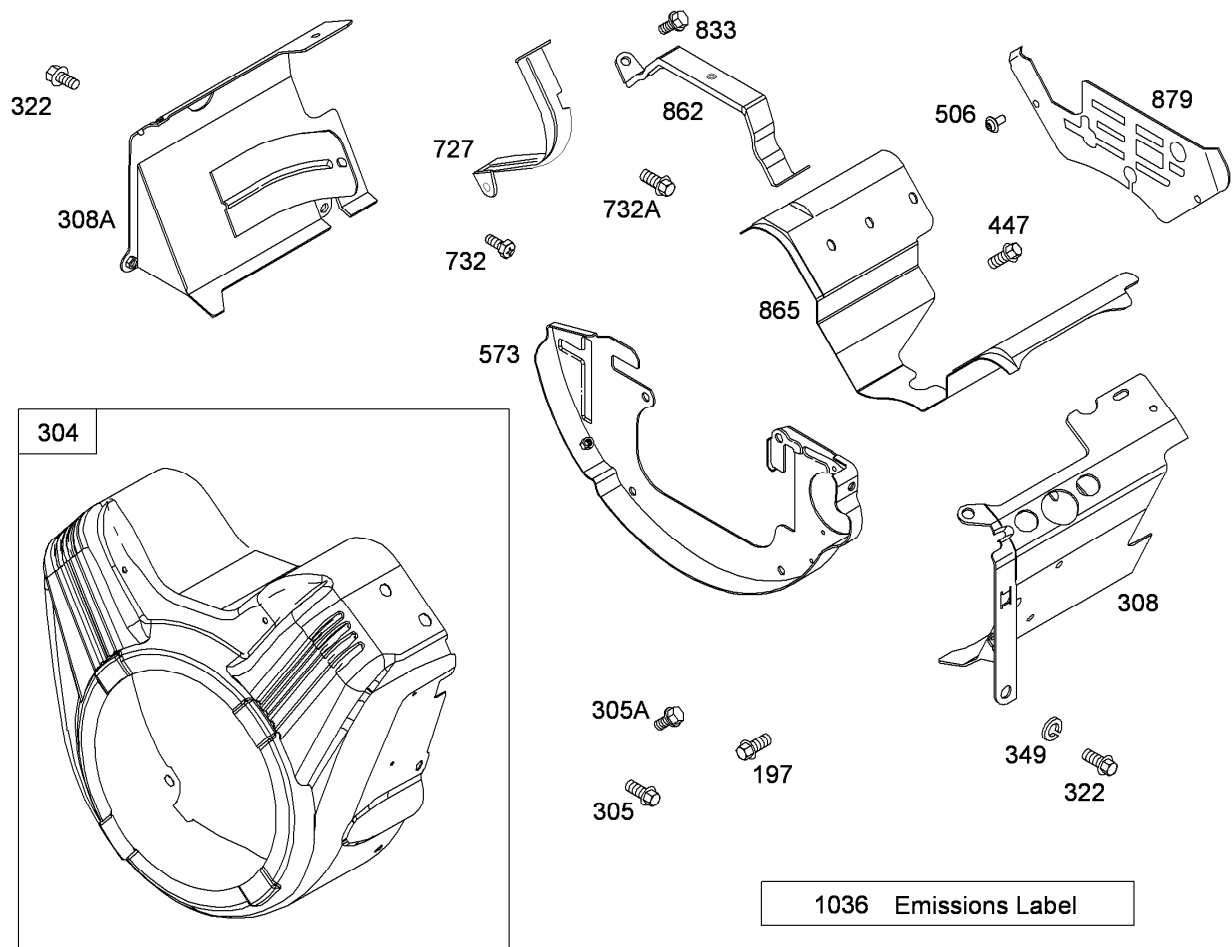


Assemblies include all parts shown in frames

Blower Housing Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
197	807163	1	Screw (Back Plate) ●
304	841397	1	Housing blower ●
305	841233	1	Screw (Blower Housing) ●
305A	692056	1	Screw (Blower Housing) ●
308	841232	1	Cover-Head, Cylinder ●
308A	841182	1	Cover-Head, Cylinder ●
322	841233	1	Screw (Cylinder Head Cover) ●
349	690238	1	Nut (Cylinder Head Cover) ●
447	841233	1	Screw (Air Guide Cover) ●
506	807120	1	Screw (Carburetor Cover) ●
573	841310	1	Plate back ●
727	841313	1	Cover drive, Starter ●
732	690688	1	Screw (Starter Drive Cover) ●
732A	841233	1	Screw (Starter Drive Cover) ●
833	841233	1	Screw (Air Cleaner Mountingstrap/Stud) ●
862	692153	1	Strap-Stud Mounting, Air Cleaner ●
865	807119	1	Cover-Guide, Air ●
879	807118	1	Cover carburetor ●
1036	842669	1	Label emission ●

 ● Obtain parts from www.briggsandstratton.com

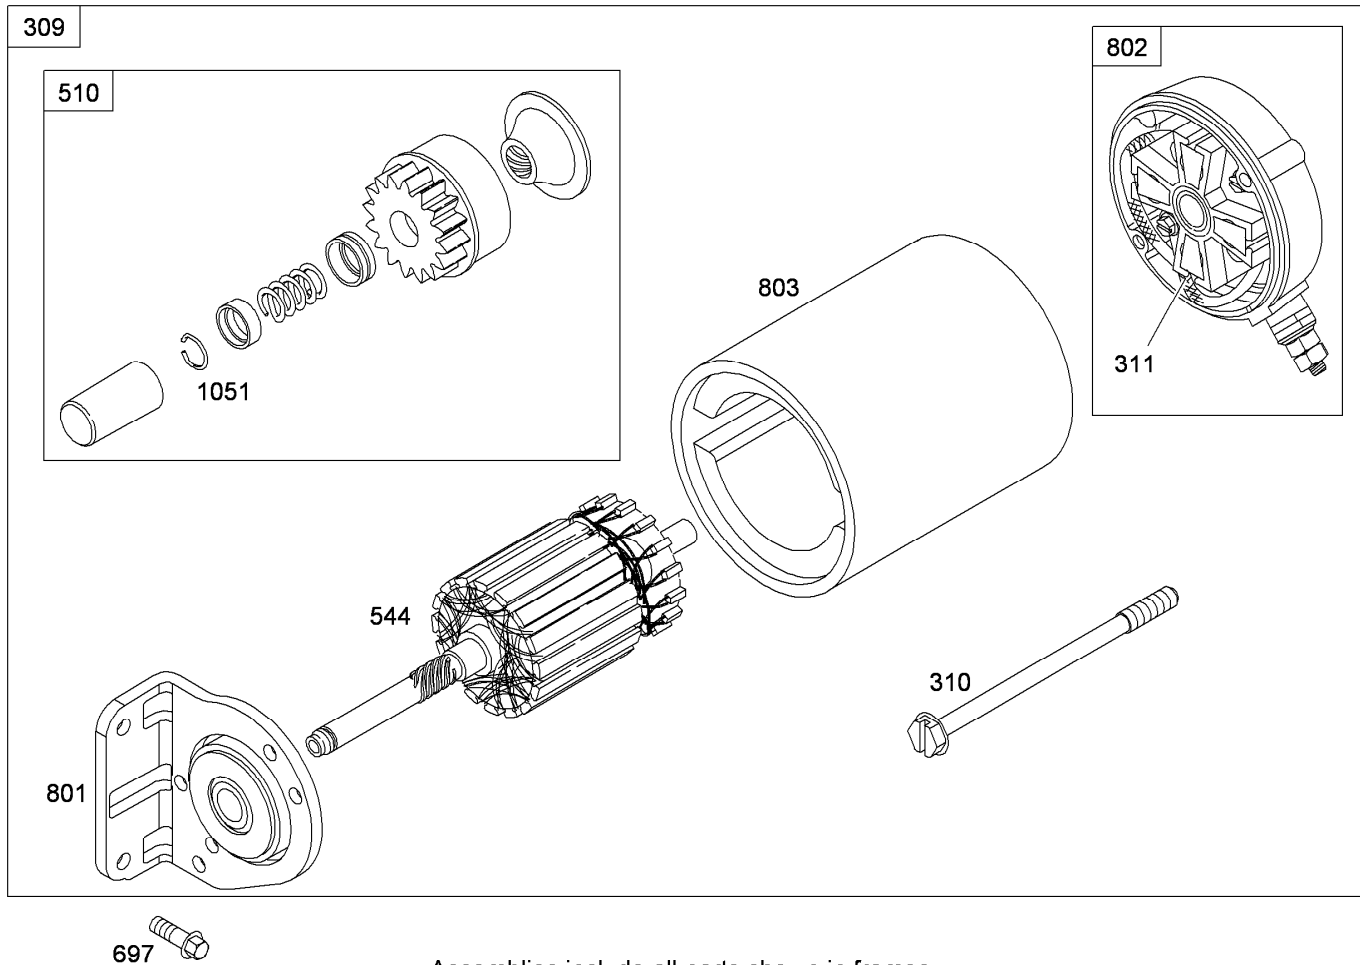


Assemblies include all parts shown in frames

Starter Assembly Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
309	691564	1	Motor-Starter ●
310	496880	1	Bolt-Thru (Starter Motor) ●
311	496887	1	Brush Set ●
510	496881	1	Drive-Starter ●
544	690855	1	Armature-Starter ●
697	692062	1	Screw (Drive Cap) ●
801	808778	1	Cap-Drive ●
802	496813	1	Cap-End ●
803	690854	1	Housing-Starter ●
1051	691124	1	Ring-Lock ●

● Obtain parts from www.briggsandstratton.com

 358 Engine Gasket Set

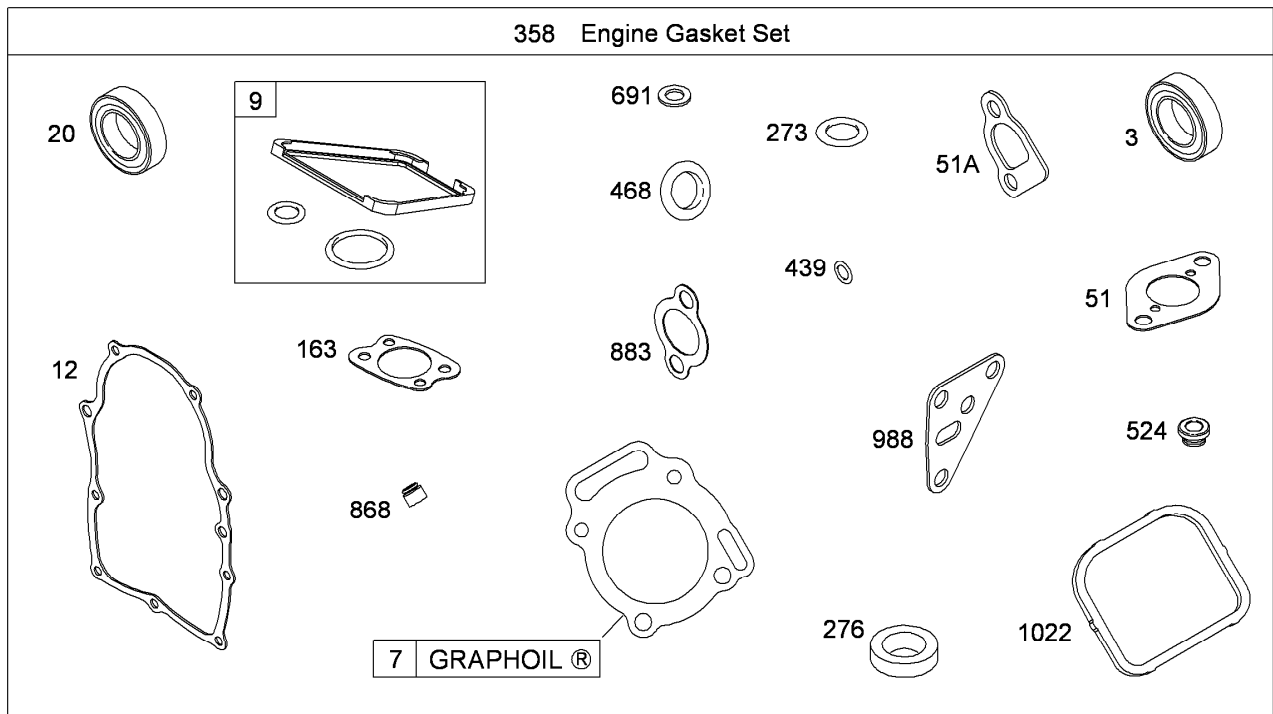



Assemblies include all parts shown in frames

Engine Gasket Set Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
3	805101	1	Seal-Oil (Magneto Side) ●■
7	690888	1	Gasket-Head, Cylinder ●■▲
9	809094	1	Gasket-Breather ●■
12	691684	1	Gasket-Crankcase ●■
20	805049	1	Seal-Oil (PTO Side) ●■
51	691694	1	Gasket-Intake ●■
51A	692035	1	Gasket-Intake ●■▲
163	692081	1	Gasket-Cleaner, Air ●■
273	690681	1	Seal-O Ring ●■
276	690724	1	Washer-Sealing ●◆■
358	841188	1	Engine Gasket Set ●
439	692154	1	Seal-O Ring (Crankcase Cover) ●■
468	690690	1	Seal-O Ring (Oil Pump Screen) ●■
524	693172	1	Seal-Tube, Dipstick ●■▲
691	690680	1	Seal-Shaft, Governor ●■
868	691963	1	Seal-Valve ●■▲
883	691613	1	Gasket-Exhaust ●■▲
988	692063	1	Gasket-Adapter, Oil Filter ●■
1022	806039	1	Gasket-Cover, Rocker ●■▲

● Obtain parts from www.briggsandstratton.com
▲ Included in Valve Gasket Set (Ref. No. 1095)

  ■ Included in Engine Gasket Set (Ref. No. 358)
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

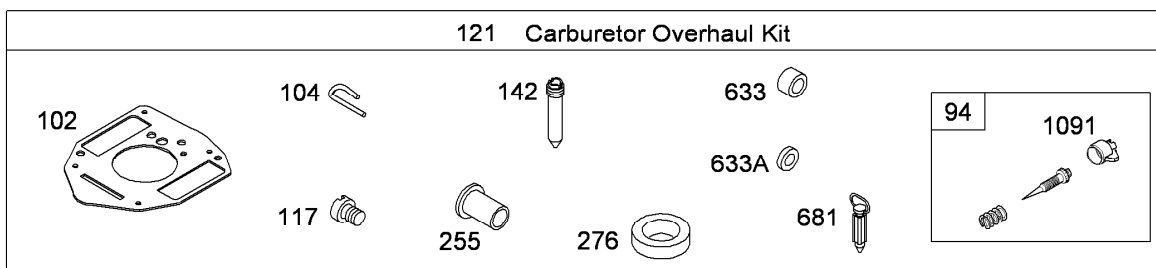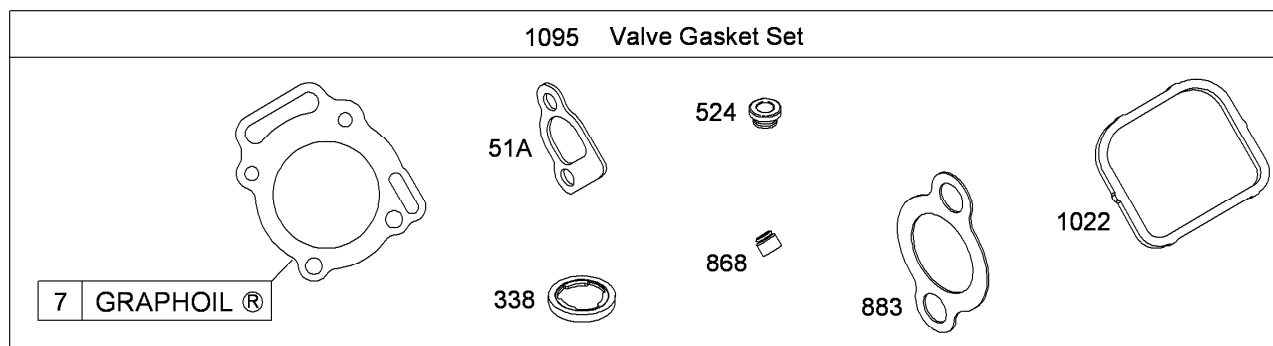


Assemblies include all parts shown in frames

Valve Gasket Set and Carburetor Overhaul Kit Briggs and Stratton 356447-0200-E1

Ref.	Part Number	Qty.	Description
7	690888	1	Gasket-Head, Cylinder ●■▲
51A	692035	1	Gasket-Intake ●■▲
94	808257	1	Idle Mixture Kit ●◆
102	692077	1	Gasket-Body, Carburetor ●◆
104	690723	1	Pin-Hinge, Float ●◆
117	690862	1	Jet main (STD) ●◆
121	809021	1	Carburetor Overhaul Kit ●
142	690725	1	Nozzle-Carburetor ●◆
255	690721	1	Bushing-Shaft, Choke ●◆
276	690724	1	Washer-Sealing ●◆■
338	691312	1	Seal-O Ring (Dipstick Gasket) ●▲
524	693172	1	Seal-Tube, Dipstick ●■▲
633	806131	1	Seal-Shaft, Choke Throttle ●◆
633A	690722	1	Seal-Shaft, Choke Throttle ●◆
681	808798	1	Valve-Needle, Float ●◆
868	691963	1	Seal-Valve ●■▲
883	691613	1	Gasket-Exhaust ●■▲
1022	806039	1	Gasket-Cover, Rocker ●■▲
1091	691516	1	Cap-Limiter ●◆
1095	841191	1	Valve Gasket Set ●

● Obtain parts from www.briggsandstratton.com
▲ Included in Valve Gasket Set (Ref. No. 1095)

 ■ Included in Engine Gasket Set (Ref. No. 358)
◆ Included in Carburetor Overhaul Kit (Ref. No. 121)

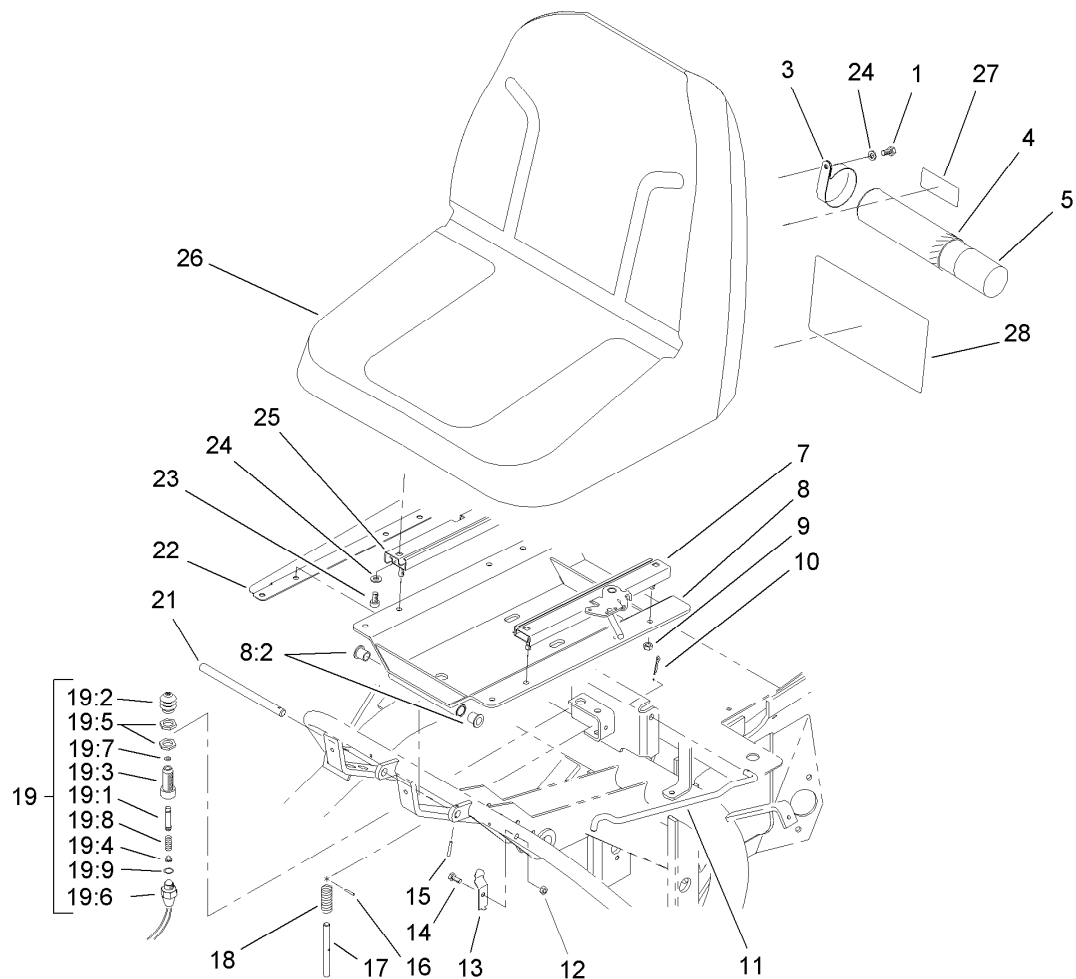

Seat Assembly

Ref.	Part Number	Qty.	Description
1	322-2	2	Screw-HH
3	2412-133	2	R-Clamp
4	104-7050	1	Tube-Manual
5	104-7048	1	Cap-Housing
7	51-0790	1	Adjuster-Seat, LH
8	83-1270	1	Seat Support ASM
8:2	256-155	2	Bushing-Flange
9	3296-29	4	Nut-Lock, NI
10	3272-11	1	Pin-Cotter
11	68-5100	1	Rod-Seat, Prop
12	3296-16	1	Nut-Lock, NI
13	68-5310	1	Clip-Rod, Prop
14	321-3	1	Screw-HH
15	32121-45	1	Pin-Spring
16	3284-3	1	Pin-Grooved
17	51-0350	1	Pin-Spring, Seat
18	3-6685	1	Spring
19	43-9071	1	Limit Switch ASM
19:1	43-8860	1	Plunger-Switch
19:2	43-8870	1	Boot-Switch

Ref.	Part Number	Qty.	Description
19:3	43-8620	1	Pin-Guide, Switch
19:4	43-8610	1	Guide
19:5	218-461	2	Nut-HH
19:6	72-4320	1	Switch-Ball
19:7	237-7	1	O-Ring
19:8	43-8600	1	Spring-Compression
19:9	237-30	1	O-Ring
21	49-5880	1	Shaft-Support, Seat
22	83-1840-01	1	Cover-Valve, RH
23	3274-12	4	Screw-HSH
24	3256-23	6	Washer-Flat
25	51-0780	1	Slider-Seat
26	104-4620	1	Seat
27	93-6686	1	Decal-Oil, HYD
28	106-9071	1	Decal-Service
28	106-9072	1	Decal-Service, Spanish
28	106-9073	1	Decal-Service, French
28	106-9074	1	Decal-Service, German
28	106-9075	1	Decal-Service, Japanese

Attachments and Accessories

For 04351 Greensmaster 3050 2-Wheel Drive Traction Unit

Product Name	Model/Part
Turf Evaluator	04399
Variable Traction Control Kit	04422
Spiker Kit	04494
Tri-Roller Kit.....	04495
Dethatching Reel ASM	04496
8-Blade DPA Reel Mower	04610
11-Blade DPA Reel Mower	04611
Light Kit.....	105-3848
Replacement Muffler Kit	114-4640
Traction Tire.....	231-127
Arm Rest Kit.....	30707
Backlapping Kit.....	92-9656

Notes:



Count on it.