



# Addendum to TimeCutter® SS 4200, SS 4235 and SS 4260 Riding Mowers

Model No. 74622—Serial No. 311000001 and Up

Model No. 74624—Serial No. 311000001 and Up

Model No. 74625—Serial No. 311000001 and Up

Model No. 74626—Serial No. 311000001 and Up

## Addendum

## Servicing the Cutting Blades on 42 Inch Mowers

The following procedures have been amended for use on all 42 inch mowers. These procedures supersede the corresponding ones within your *Operator's Manual*. Keep this document with the original *Operator's Manual*.

### Removing the Blades

Hold the blade end using a rag or thickly-padded glove. Remove the blade bolt, curved washer, blade stiffener and blade from the spindle shaft (Figure 1).

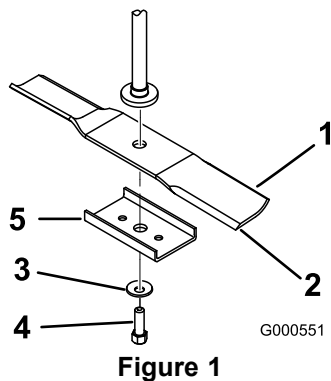


Figure 1

- |                       |                    |
|-----------------------|--------------------|
| 1. Sail area of blade | 4. Blade bolt      |
| 2. Blade              | 5. Blade stiffener |
| 3. Curved washer      |                    |

### Installing the Blades

1. Install the blade onto the spindle shaft (Figure 1).

**Important:** The curved part of the blade must be pointing upward toward the inside of the mower to ensure proper cutting.

2. Install the blade stiffener, curved washer (cupped side toward the blade) and the blade bolt (Figure 1).
3. Torque the blade bolt to 35-65 ft-lb (47-88 N-m).