



Count on it.

Parts Catalog

Sand Pro® 5020

Model No. 08886—Serial No. 240000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

 
STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame and Shroud Assembly	4
Steering Assembly	6
Fuel Tank and Battery Assembly	7
Front Wheel Assembly	8
Hydraulic Motor Assembly No. 98-0958	9
Rear Wheel and Lift Assembly	10
Hydraulic Cylinder Assembly No. 83-7000	12
Hydraulic Motor Assembly No. 97-3055	13
Hydraulic Motor Assembly No. 98-0959	14
Traction Pedal Assembly	15
Pump Control Lever Assembly	16
Engine Installation Assembly	17
Hydraulic Pump Installation Assembly	18
Variable Reversible Pump Installation Assembly No. 106-9249	19
Hydraulic Reservoir Assembly	21
Hydraulic Plumbing Assembly	22
Valve Assembly No. 43-1710-01	23
Seat and Brake Assembly	24
Air Cleaner and Control Panel Assembly	25
Air Cleaner Assembly No. 93-2190	26
Electrical Schematic	27
Cylinder Assembly Briggs and Stratton 350447-1116-E1	28
Piston and Crankshaft Assembly Briggs and Stratton 350447-1116-E1	29
Crankcase Assembly Briggs and Stratton 350447-1116-E1	30
Carburetor Assembly Briggs and Stratton 350447-1116-E1	31
Valve Cover and Exhaust Manifold Assembly Briggs and Stratton 350447-1116-E1	32
Governor Assembly Briggs and Stratton 350447-1116-E1	33
Ignition Component Assembly Briggs and Stratton 350447-1116-E1	34
Oil Pump and Oil Filter Assembly Briggs and Stratton 350447-1116-E1	35
Blower Housing Assembly Briggs and Stratton 350447-1116-E1	36
Fylwheel Assembly Briggs and Stratton 350447-1116-E1	37
Starter Assembly Briggs and Stratton 350447-1116-E1	38
Gasket Kit Briggs and Stratton 350447-1116-E1	39
Carburetor Overhaul Kit Briggs and Stratton 350447-1116-E1	40

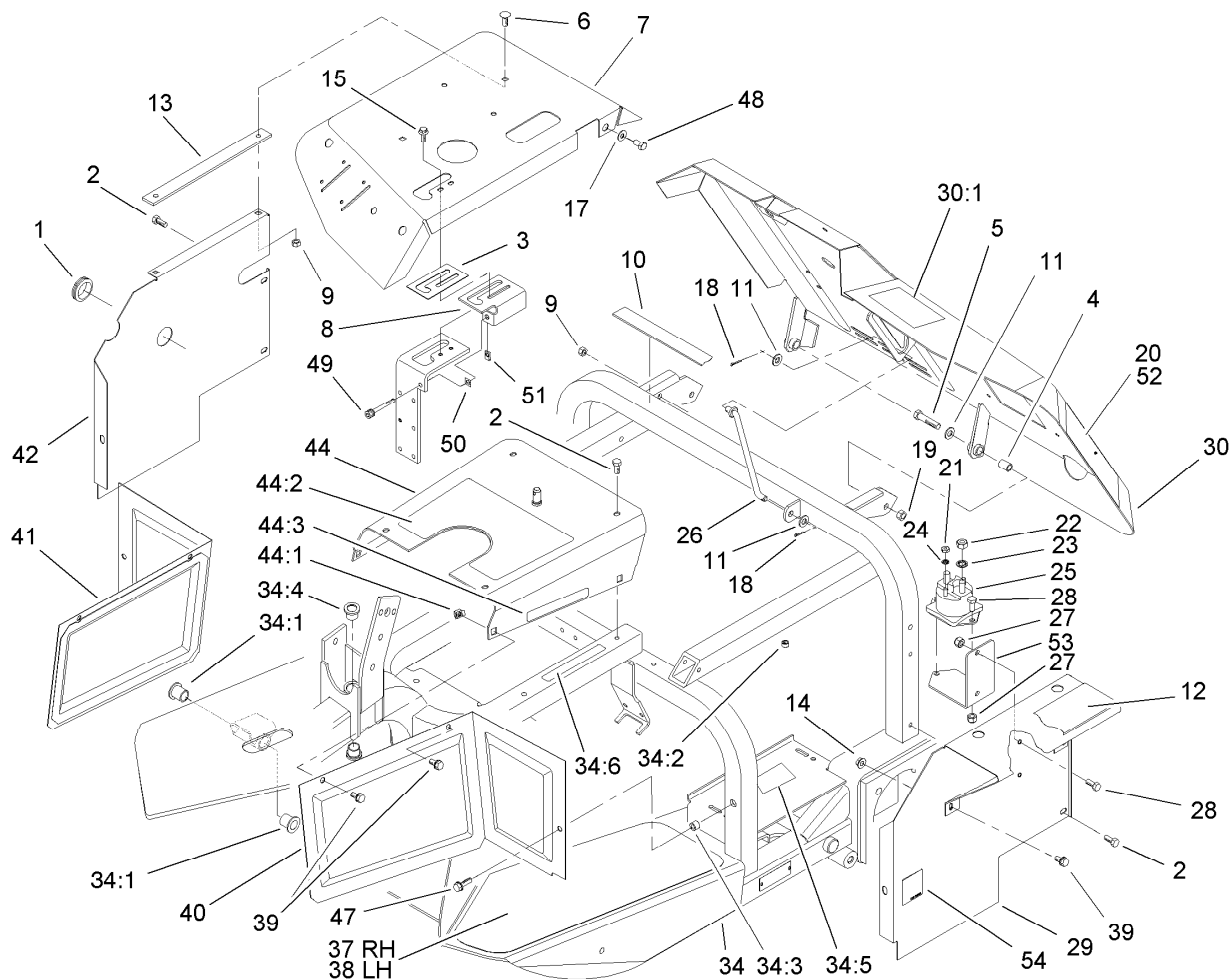


Frame and Shroud Assembly

Ref.	Part Number	Qty.	Description
1	240-3	1	Grommet-Rubber
2	32144-11	8	Screw-HWHTF
3	99-1629	1	Guide-Lever
4	85-0290	2	Spacer-Pivot, Seat
5	323-9	2	Screw-HH
6	3230-1	2	Bolt-CARR
7	107-2163-01	1	Fender-RH
8	98-8160	1	Plate-Latch, Lever
9	3296-29	3	Nut-Lock, NI
10	98-0980	1	Strip-Base, Seat
11	3256-24	4	Washer-Flat
12	98-0981	1	Pad-Base, Seat
13	98-0982	1	Strip-Fender
14	32128-20	1	Nut-HF
15	3234-4	2	Screw-HHF
17	3256-2	1	Washer-Flat
18	3272-4	2	Pin-Cotter
19	3296-39	2	Nut-Lock, NI
20	106-8105	2	Decal
21	3219-14	2	Nut-Hex
22	3218-13	2	Nut-Jam, Brass
23	3254-2	2	Washer-Lock, Internal
24	3254-1	2	Washer-Lock, Int
25	28-4210	1	Solenoid
26	98-0917	1	Rod-Prop
27	32128-33	4	Nut-HF

Ref.	Part Number	Qty.	Description
28	321-3	4	Screw-HH
29	98-0966-03	1	Panel-Rear, LH
30	98-8150	1	Seat Base ASM
30:1	93-9053	1	Decal-Warning
34	98-0962	1	Frame ASM
34:1	256-219	2	Bushing
34:2	32148-11	1	Insert-Threaded
34:3	32148-8	2	Insert-Threaded
34:4	65-8770	2	Bushing-Bellcrank
34:5	93-6668	1	Decal-Battery
34:6	93-9052	1	Decal-Danger
37	85-8780	1	Tread-Floor, RH
38	85-8790	1	Tread-Floor, LH ●
39	3234-7	5	Screw-HHF
40	85-9680-01	1	Panel-LH
41	85-8490-01	1	Panel-RH
42	98-0902-03	1	Panel-Rear, RH
44	98-0965	1	Top Panel ASM
44:1	3290-496	4	Nut-Retainer
44:2	93-9050	1	Decal-Instructions, Operating
44:3	93-9052	2	Decal-Danger
47	3234-29	2	Screw-HHF
48	322-2	1	Screw-HH
49	3274-56	1	Screw-HSH
50	32115-15	1	Pushnut-Retainer, Bolt

 ● Not illustrated

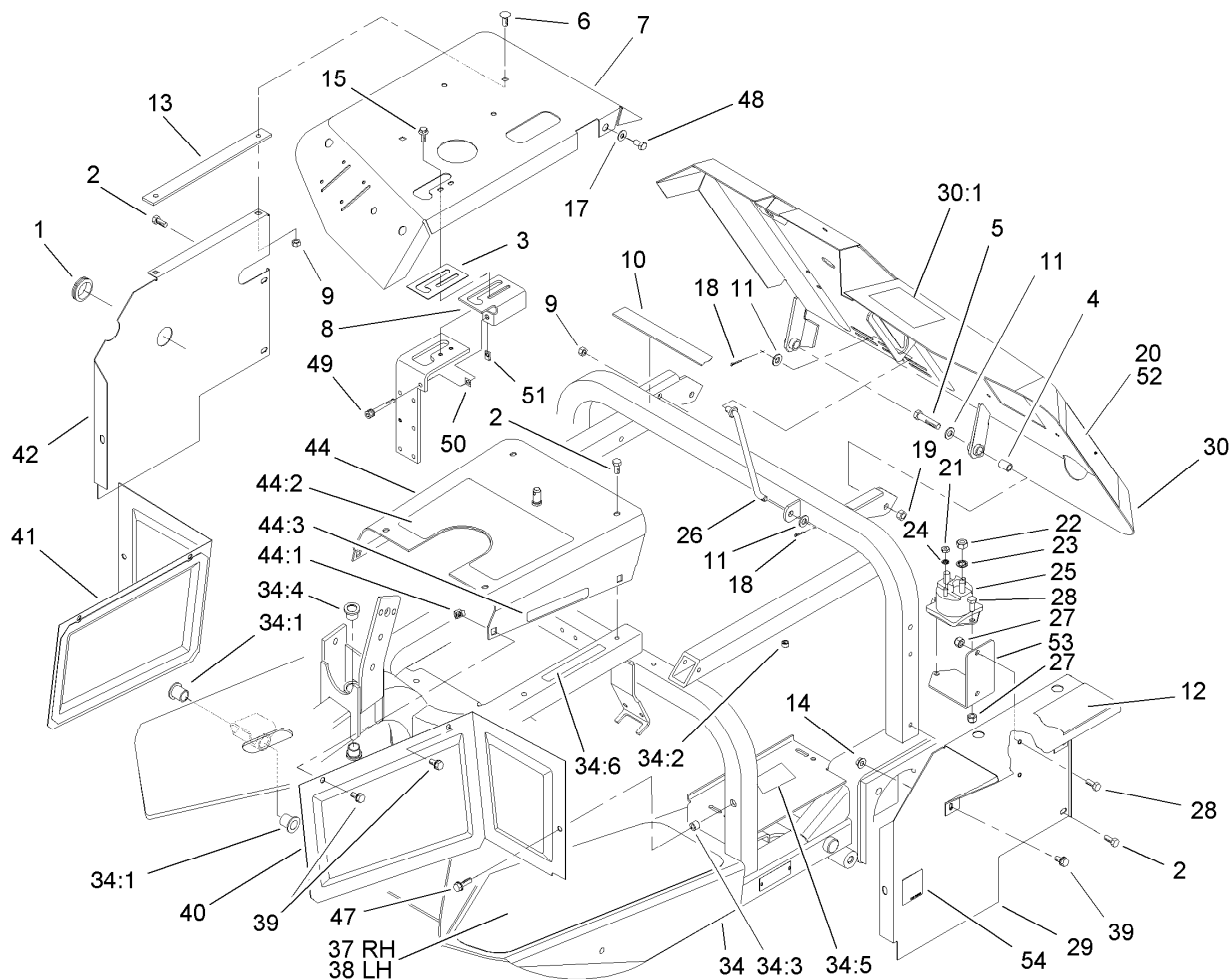


Frame and Shroud Assembly (continued)

Ref.	Part Number	Qty.	Description
51	3290-199	1	Nut-Speed
52	106-8106	2	Decal

Ref.	Part Number	Qty.	Description
53	105-7884-03	1	Bracket-Solenoid
54	105-2699	1	Decal-Noise

 ● Not illustrated

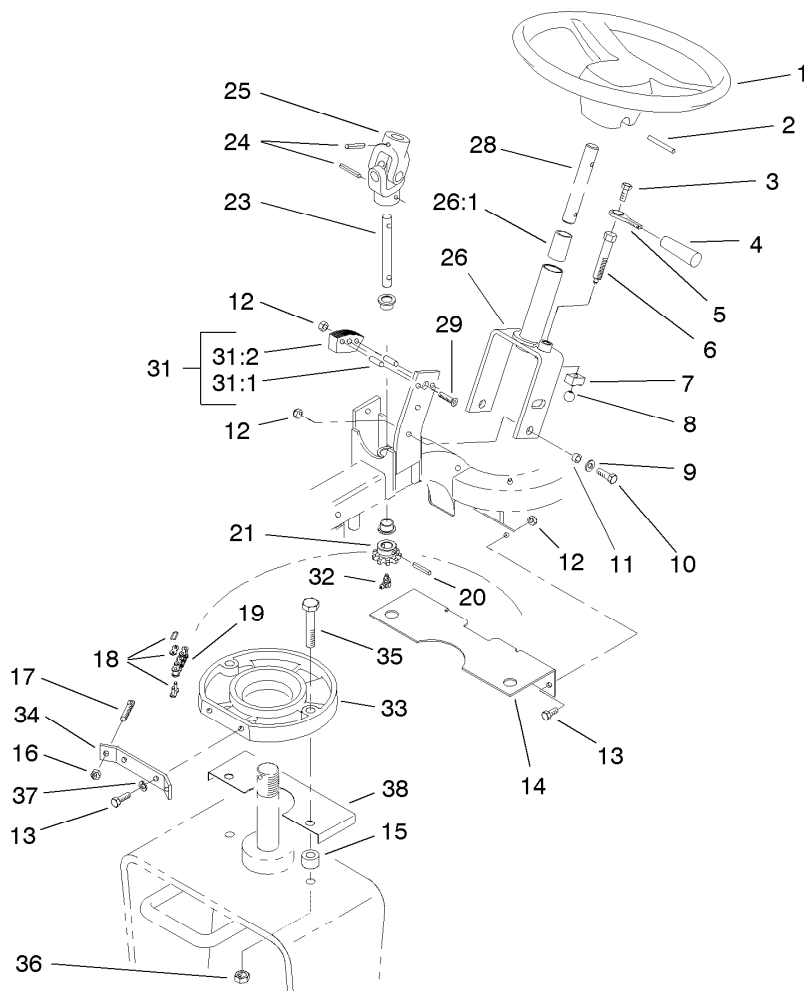


Steering Assembly

Ref.	Part Number	Qty.	Description
1	76-1420	1	Wheel-Steering
2	32121-111	1	Pin-Roll
3	322-43	1	Screw-HH
4	233-39	1	Knob-Control
5	88-8280	1	Lever-Adjustment, Steering
6	94-4514	1	Pin-Lock, Tilt
7	88-8530	1	Block-Lock, Upper
8	94-4513	1	Ring-Retaining
9	3256-23	3	Washer-Flat
10	322-5	3	Screw-HH
11	85-9120	3	Spacer-Pivot, Tilt
12	3296-29	6	Nut-Lock, NI
13	322-3	4	Screw-HH
14	98-0983-01	1	Bracket-Tank, Fuel
15	98-0978	2	Spacer
16	3296-4	2	Nut-Lock
17	18-6380	2	Pin-Adjustment, Steering
18	2710-11	2	Link-Chain
19	85-8030	1	Chain

Ref.	Part Number	Qty.	Description
20	98-0973	1	Pin-Grooved
21	85-9180	1	Sprocket-Steering
23	98-0928	1	Shaft-Steering, Lower
24	32121-15	2	Pin-Roll
25	85-9200	1	Knuckle-Steering
26	88-8290	1	Steering Bracket ASM
26:1	256-185	1	Bushing
28	85-9220	1	Shaft-Steering, Upper
29	3289-24	1	Screw-HSFH
31		1	Lock Block And Pin ASM ●
31:1	88-8510	2	Pin-Dowel
31:2	88-8520	1	Block-Lock, Lower
32	302-33	1	Fitting-Grease
33	98-0924-01	1	Guide-Chain
34	98-0925	1	Bracket-Chain
35	325-12	2	Screw-HH
36	3296-25	2	Nut-Lock, NI
37	3253-4	2	Washer-Lock
38	98-0929-01	1	Plate-Stay, Chain

 
● Not serviced separately

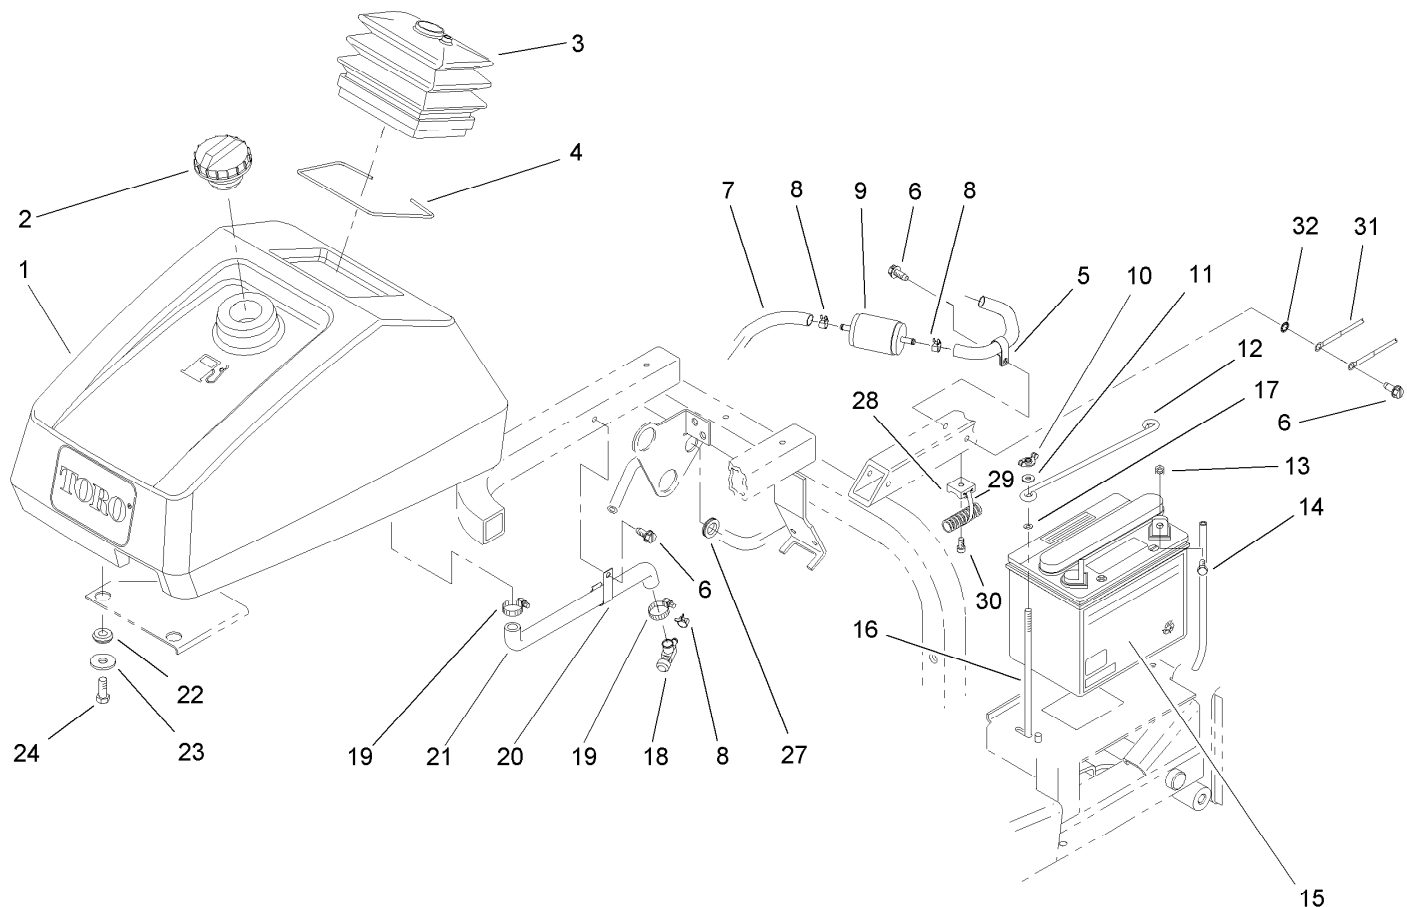

Fuel Tank and Battery Assembly

Ref.	Part Number	Qty.	Description
1	98-0927	1	Tank-Fuel
2	93-7170	1	Cap-Fuel
3	85-9010	1	Boot-Steering
4	85-8930	1	Retainer-Boot
5	2412-93	1	Clamp-R
6	32144-11	3	Screw-HWHTF
7	98-0976	1	Hose-Fuel
8	2412-98	3	Clamp
9	94-2690	1	Filter-Fuel
10	32103-12	2	Nut-Wing
11	3256-22	2	Washer-Flat
12	72-4790	1	Hold Down-Battery
13	3217-5	2	Nut-Hex
14	321-3	2	Screw-HH
15	104-8162	1	Battery

Ref.	Part Number	Qty.	Description
16	56-7720	2	Post-Battery
17	237-143	2	O-Ring
18	83-1390	1	Valve-Shut-Off, Fuel
19	2412-36	2	Clamp-Hose
20	2412-109	1	Clip-J
21	98-0995	1	Hose-Fuel
22	240-11	4	Bushing-Flange
23	63-8410	4	Washer
24	323-5	4	Screw-HH
27	237-124	1	Grommet
28	3290-509	1	Tie-Mount
29	3290-378	1	Tie-Cable
30	3274-31	1	Screw-HSBH
31	98-0999	1	Ground Wire ASM
32	3254-2	1	Washer-Lock, Internal

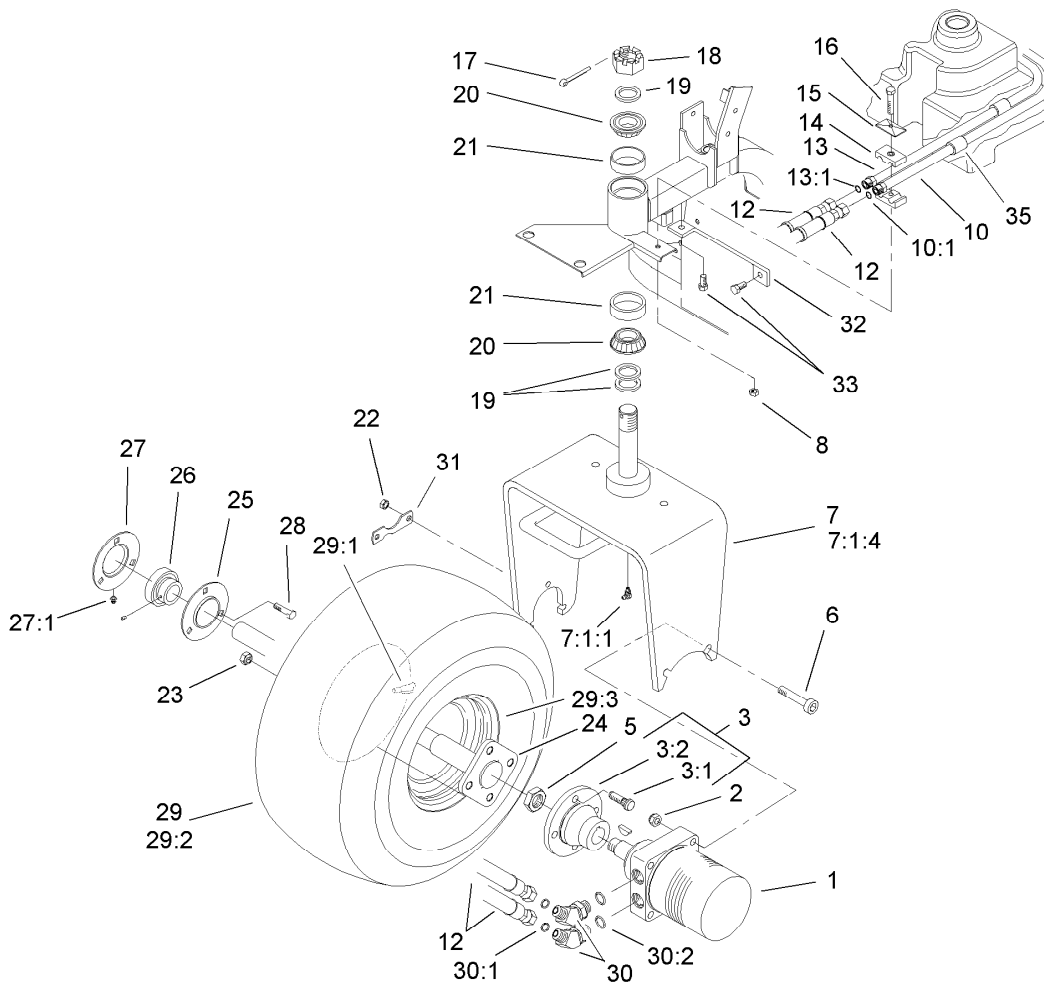 


Front Wheel Assembly

Ref.	Part Number	Qty.	Description
1	98-0958	1	Motor-HYD
2	3296-23	2	Nut-Lock, NI
3		1	Front Wheel Hub ASM ●
3:1	10-6830	4	Stud-Type, Drive
3:2	93-6838-03	1	Hub-Wheel
5	26-3790	1	Nut-Lock
6	3274-93	2	Screw-HSH
7		1	Fork ASM ●
7:1:1	302-33	1	Fitting-Grease
7:1:4	98-0950-01	1	Fork
8	3296-16	1	Nut-Lock, NI
10	98-0932	1	Tube-Front, LH
10:1	237-30	1	O-Ring
12	85-9640	2	Hose-HYD
13	98-0933	1	Tube-Front, RH
13:1	237-30	2	O-Ring
14	56-7976	2	Clamp-Tube
15	69-9760	1	Coverplate
16	321-10	1	Screw-HH
17	3272-37	1	Pin-Cotter
18	32136-9	1	Nut-Hex, Slotted
19	18-6320	3	Washer-Steering

Ref.	Part Number	Qty.	Description
20	254-70	2	Bearing-Cone
21	254-61	2	Cup-Bearing
22	3296-39	3	Nut-Lock, NI
23	242-50	4	Nut-Lug
24	92-8969	1	Spindle
25	85-8950	1	Flangette-Standard
26	251-352	1	Bearing
27	85-8940	1	Flangette-Relube
27:1	302-5	1	Fitting-Grease
28	323-29	3	Screw-HH
29		1	Wheel And Tire ASM ●
29:1	232-35	1	Valve Stem And Cap ASM
29:2	85-8290	1	Tire-2Ply, Knobby
29:3	94-6116	1	Wheel-Rear
30	340-89	2	Fitting-HYD, 45 DEG
30:1	237-30	1	O-Ring
30:2	237-80	1	O-Ring
31	88-8350	1	Tab-Bearing
32	98-0926-01	1	Strap
33	105-6245	2	Screw-Tapping
35	38-3400	2	Guard-Rubber

 ● Not serviced separately

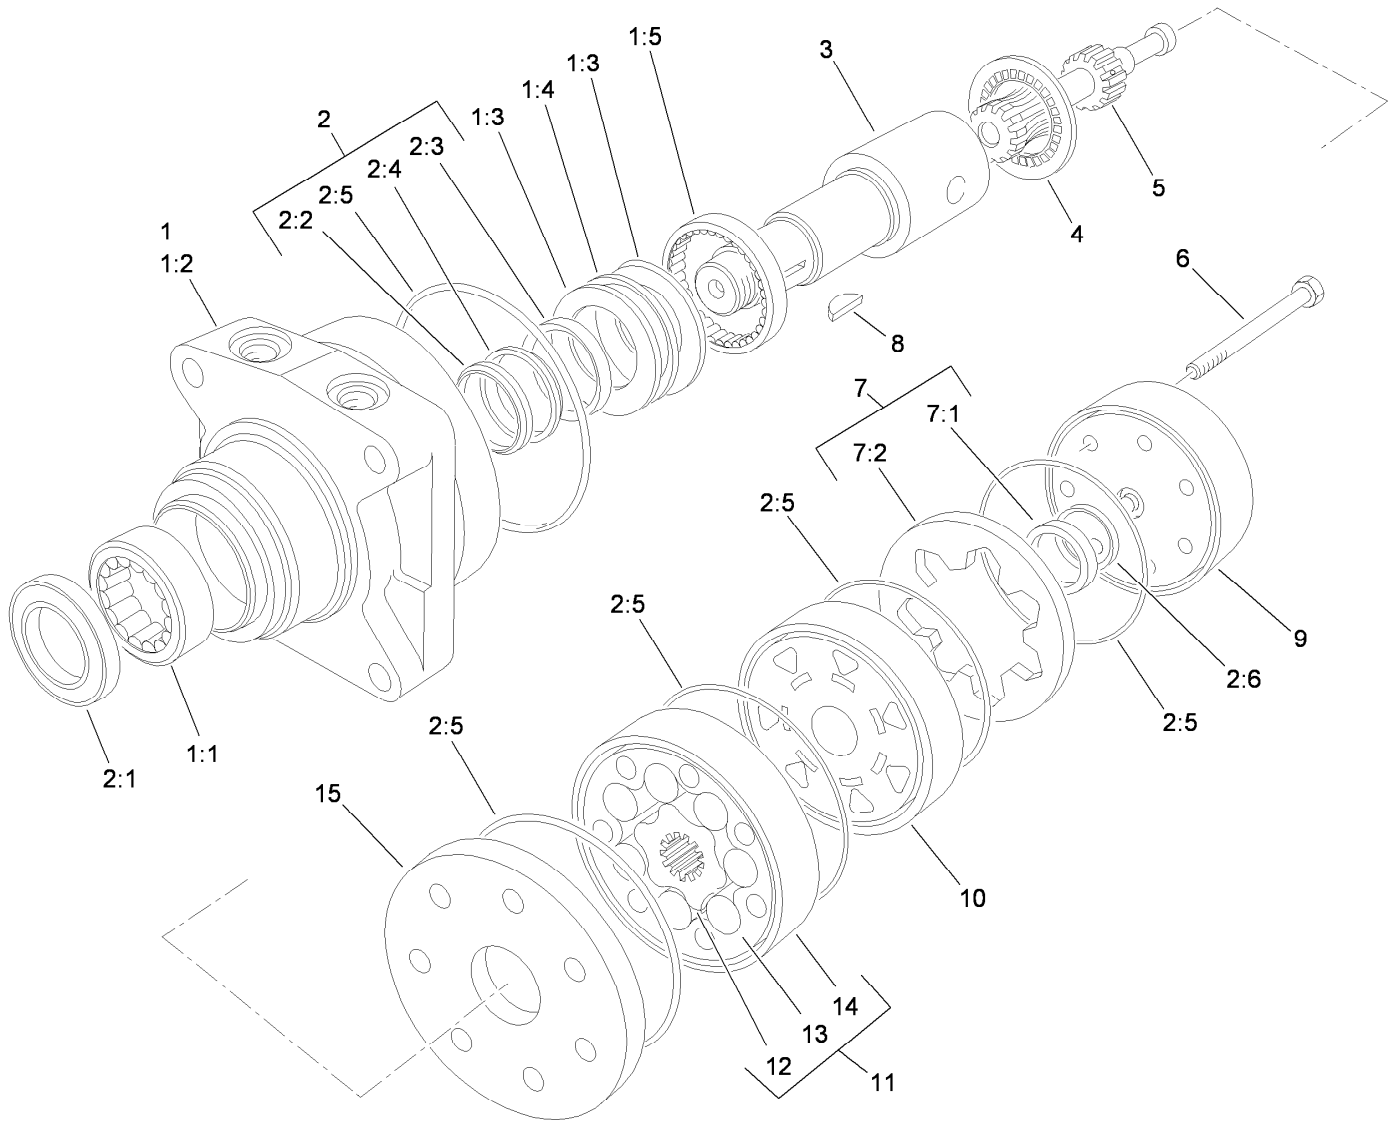


Hydraulic Motor Assembly No. 98-0958

Ref.	Part Number	Qty.	Description
1	76-0810	1	Housing ASM
1:1		1	Bearing ●
1:2		1	Housing ●
1:3		2	Washer-Thrust ●
1:4		1	Bearing-Thrust ●
1:5		1	Bearing ●
2	94-8178	1	Seal Kit
2:1		1	Seal-Dirt And Water ●
2:2		1	Backup-Ring ●
2:3		1	Seal-Shaft ●
2:4		1	Washer-Backup ●
2:5		5	Seal-Square, Ring (Inner) ●
2:6		1	Seal-Commutator ●
3	76-0860	1	Shaft-Coupling

Ref.	Part Number	Qty.	Description
4	76-0850	1	Bearing-Thrust
5		1	Link-Drive ●
6		7	Screw-HH ●
7	76-0880	1	Commutator ASM
7:1		1	Commutator ●
7:2		1	Ring-Commutator ●
8	3257-42	1	Key-Woodruff
9	76-0940	1	End Cover ASM
10		1	Manifold ●
11		1	Rotor Set ●
12		1	Rotor ●
13		7	Vane ●
14		1	Stator ●
15	76-0870	1	Plate-Wear

 ● Not serviced separately

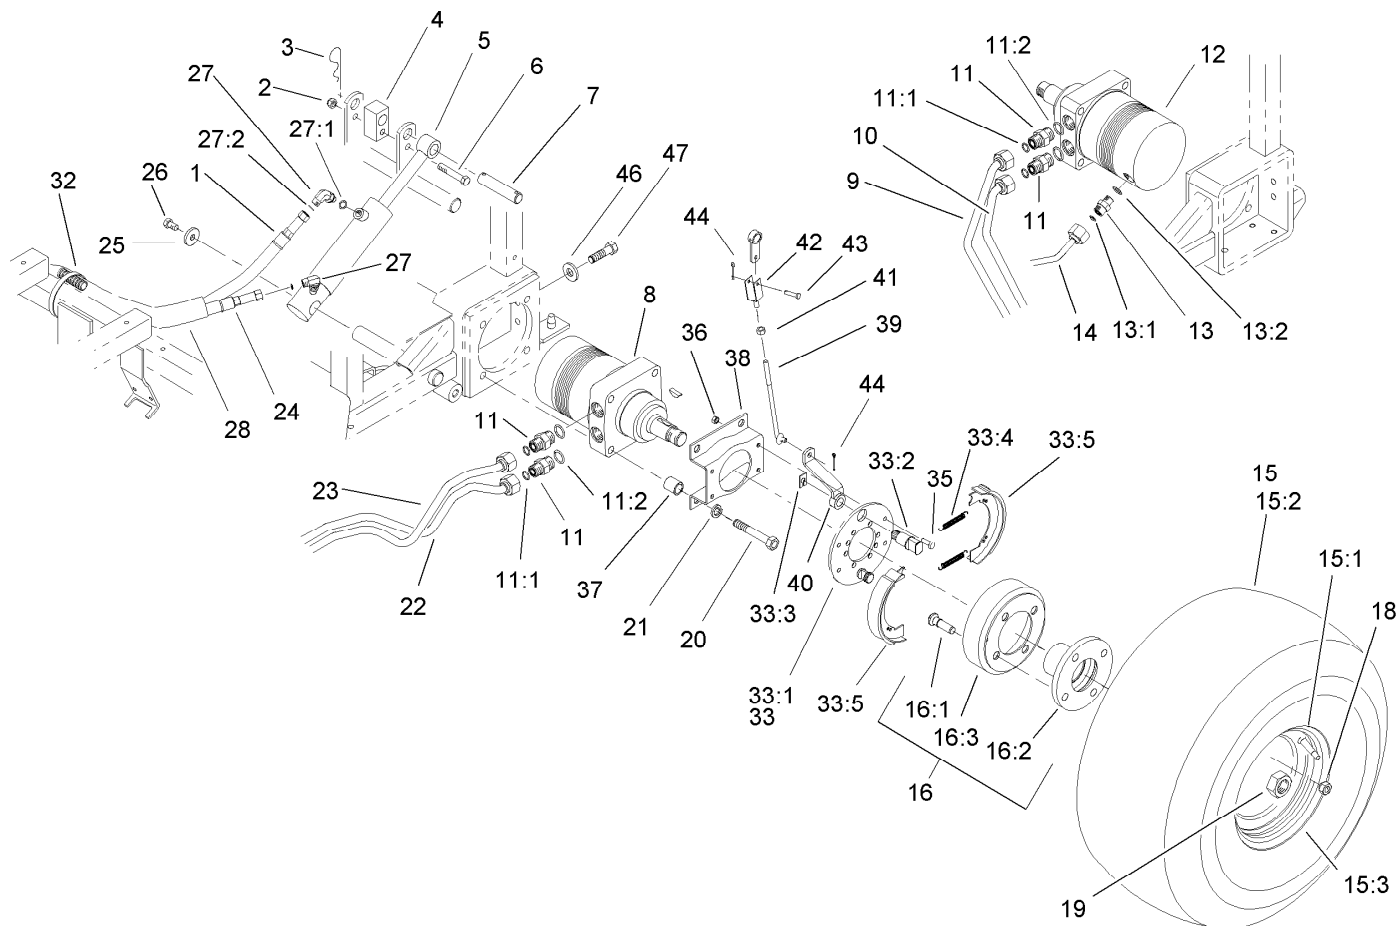


Rear Wheel and Lift Assembly

Ref.	Part Number	Qty.	Description
1	85-9570	1	Hose-HYD
2	3296-39	1	Nut-Lock, NI
3	3290-256	2	Pin-Hair
4	85-9160-03	1	Spacer-Pin, Lift
5	83-7000	1	HYD Cylinder ASM
6	323-11	1	Screw-HH
7	85-9170	1	Pin-Cylinder
8	97-3055	1	Motor-HYD
9	98-0934	1	Top RH Tube ASM
10	98-0935	1	Tube-Bottom Rear, RH
11	340-6	4	Fitting-HYD, Straight
11:1	237-30	1	O-Ring
11:2	237-80	1	O-Ring
12	98-0959	1	Motor-HYD
13	340-2	1	Fitting-HYD, Straight
13:1	237-22	1	O-Ring
13:2	237-42	1	O-Ring
14	98-0988	1	Tube-HYD
15		2	Wheel And Tire ASM ●
15:1	232-35	1	Valve Stem And Cap ASM
15:2	85-8290	1	Tire-2Ply, Knobby
15:3	94-6116	1	Wheel-Rear
16	17-8149	2	Wheel Hub ASM
16:1	85-6540	4	Stud-Drive
16:2	93-6838-03	1	Hub-Wheel
16:3	10-6850	1	Drum-Brake

Ref.	Part Number	Qty.	Description
18	242-50	8	Nut-Lug
19	26-3790	2	Nut-Lock
20	325-13	8	Screw-HH
21	3253-7	8	Washer-Lock
22	98-0937	1	Tube-Bottom, LH
23	98-0936	1	Tube-Rear Top, RH
24	85-9580	1	Hose-HYD
25	53-6380	1	Washer-Flat
26	323-34	1	Screw-HH
27	340-132	2	Fitting-HYD, 90 DEG
27:1	237-78	1	O-Ring
27:2	237-21	1	O-Ring
28	56-7981	1	Sleeve-Protective
32	3334-945	1	Tie-Cable
33	104-7705	2	Brake ASM
33:1	70-9870	1	Plate-Backing
33:2	104-7707	1	Shaft-Cam, Brake
33:3	104-7706	1	E-Ring, Bowed
33:4	70-9880	2	Spring-Return
33:5	70-9840	2	Shoe-Brake
35	321-4	8	Screw-HH
36	3296-42	8	Nut-Lock, NI
37	92-1715	8	Spacer
38	84-2000-03	2	Bracket-Brake
39	95-5824	2	Rod-Adjustment
40	93-6850	2	Lever-Brake

 ● Not serviced separately

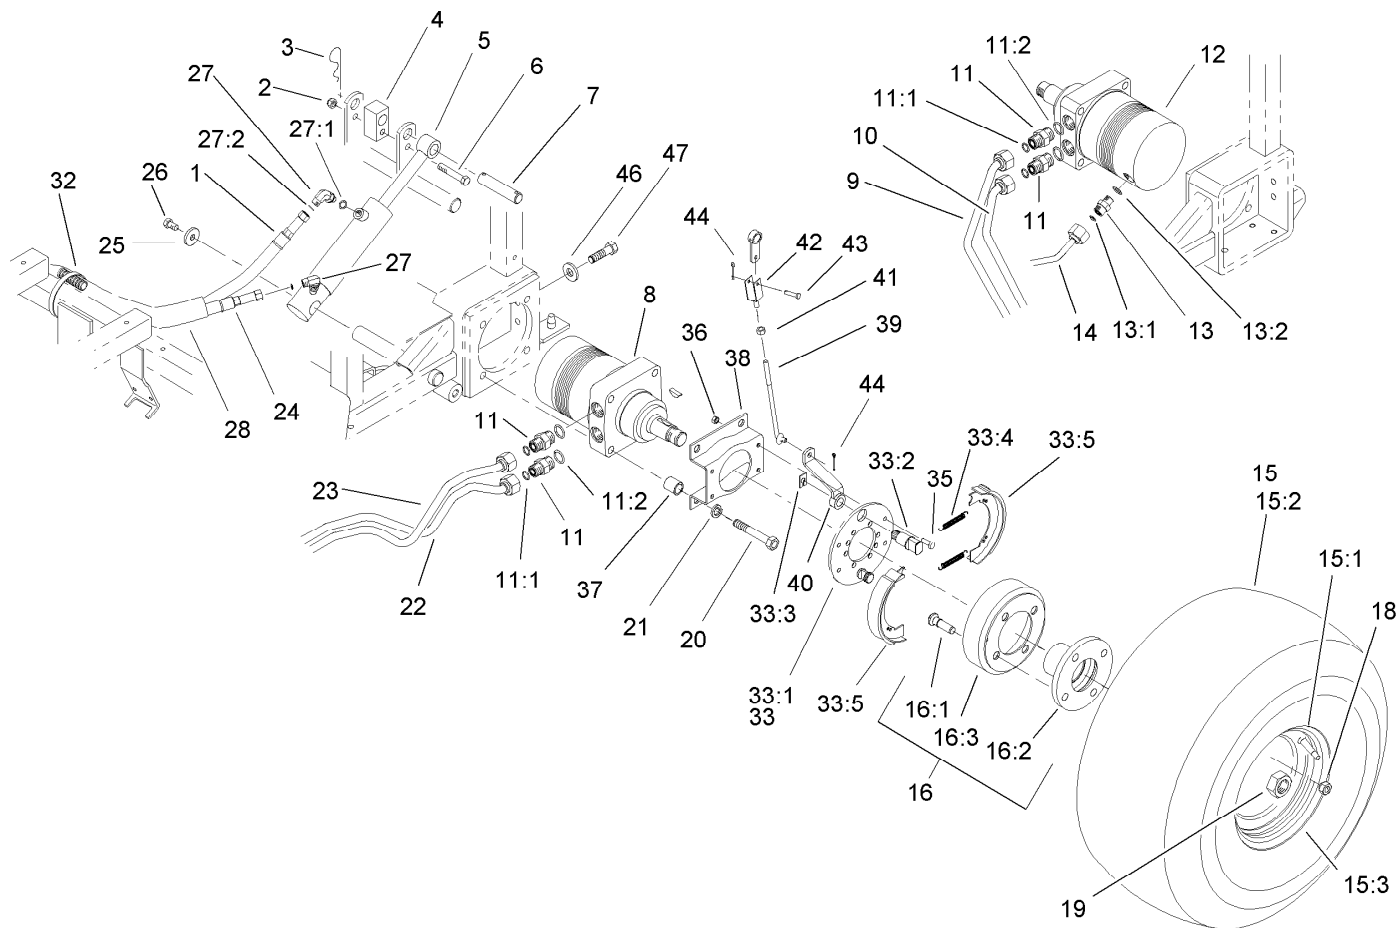


Rear Wheel and Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
41	3220-2	2	Nut-Jam
42	282-2	2	Yoke
43	283-26	2	Pin

Ref.	Part Number	Qty.	Description
44	3272-6	4	Pin-Cotter
46	3256-26	4	Washer-Flat
47	325-5	4	Screw-HH

 
● Not serviced separately

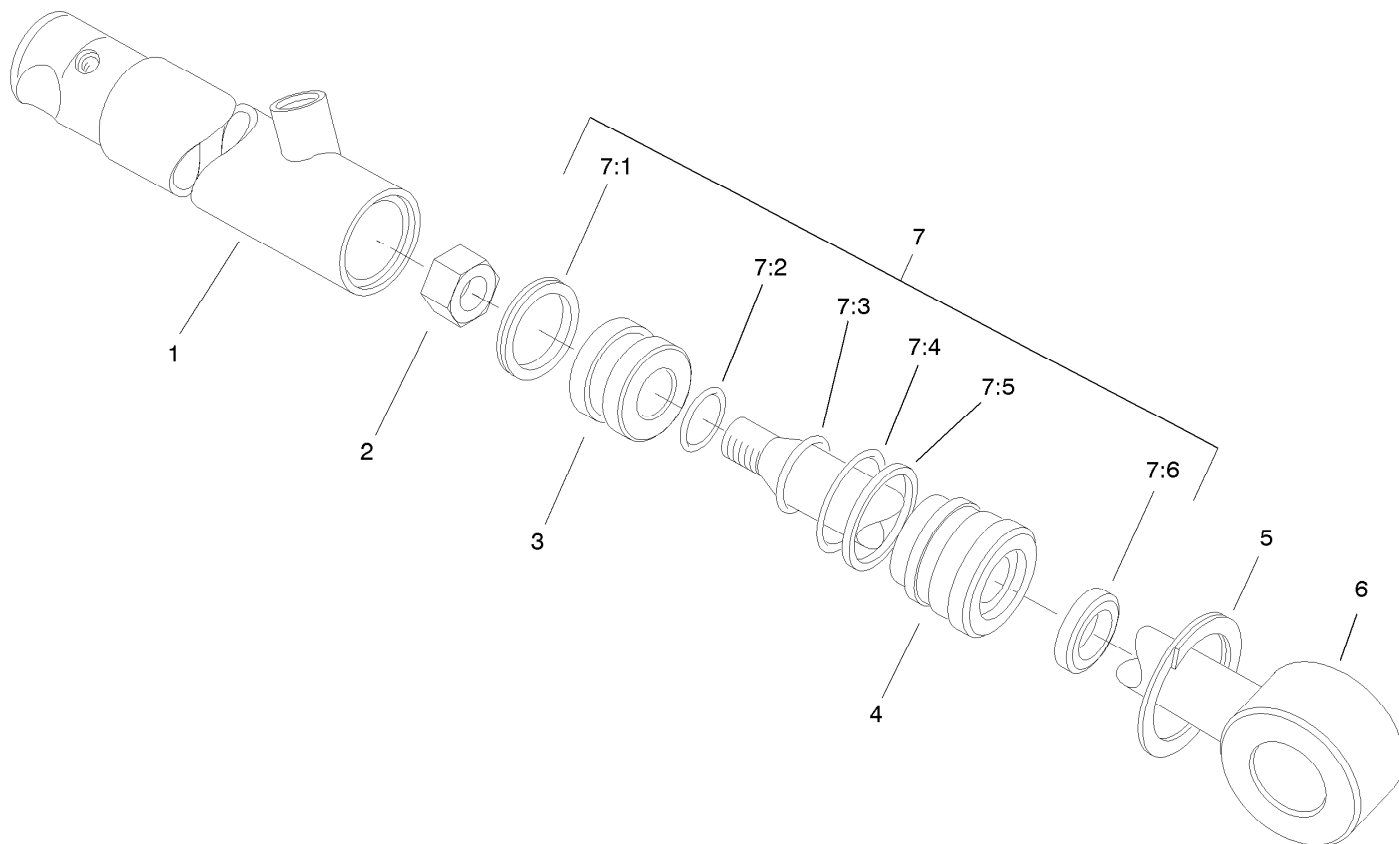

Hydraulic Cylinder Assembly No. 83-7000

Ref.	Part Number	Qty.	Description
1		1	Barrel ASM ●
2	32152-10	1	Locknut
3		1	Piston ●
4		1	Head ●
5	43-5220	1	Ring-Retaining
6		1	Shaft W/Clevis ●
7	86-5360	1	Seal Repair Kit
7:1		1	Uniring-Grooved ●
7:2		1	Seal-Dust ●
7:3		1	Seal-Dust ●
7:4		1	Seal-Dust ●
7:5		1	Back-Up ●
7:6		1	Seal-Dust ●

 ● Not serviced separately

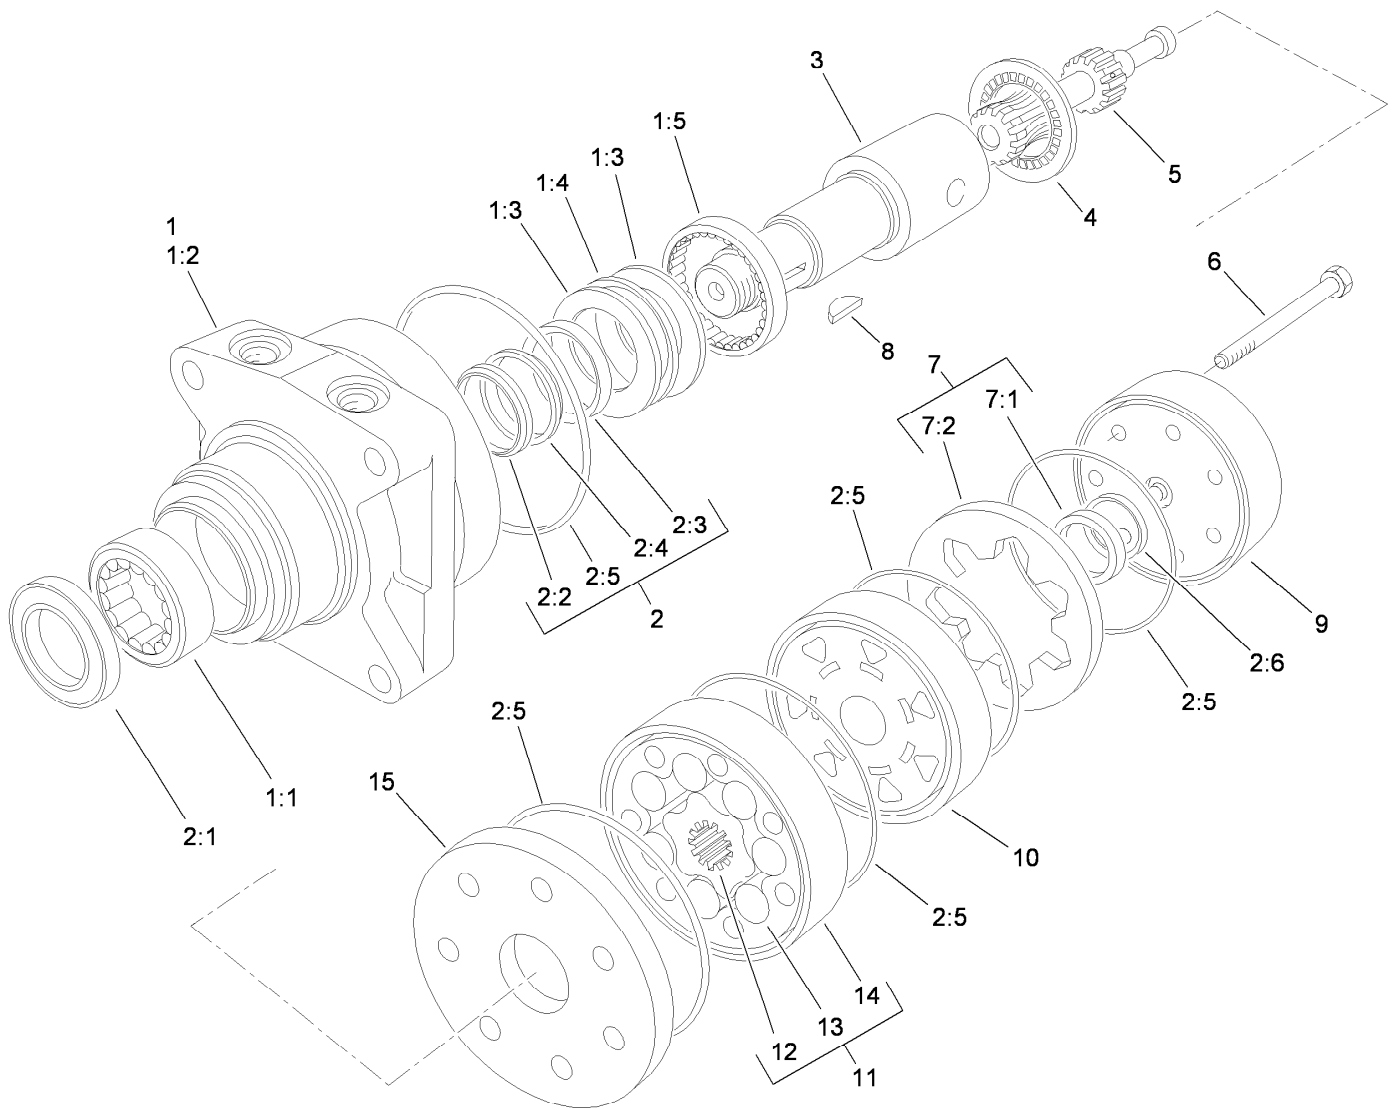


Hydraulic Motor Assembly No. 97-3055

Ref.	Part Number	Qty.	Description
1	76-0810	1	Housing ASM
1:1		1	Bearing ●
1:2		1	Housing ●
1:3		2	Washer-Thrust ●
1:4		1	Bearing-Thrust ●
1:5		1	Bearing ●
2	94-8178	1	Seal Kit
2:1		1	Seal-Dirt And Water ●
2:2		1	Backup-Ring ●
2:3		1	Seal-Shaft ●
2:4		1	Washer-Backup ●
2:5		5	Seal-Square, Ring (Inner) ●
2:6		1	Seal-Commutator ●
3	76-0860	1	Shaft-Coupling

Ref.	Part Number	Qty.	Description
4	76-0850	1	Bearing-Thrust
5		1	Link-Drive ●
6		7	Screw-HH ●
7	76-0880	1	Commutator ASM
7:1		1	Commutator ●
7:2		1	Ring-Commutator ●
8	3257-42	1	Key-Woodruff
9	76-0940	1	End Cover ASM
10	76-0840	1	Manifold
11		1	Rotor Set ●
12		1	Rotor ●
13		7	Vane ●
14		1	Stator ●
15	76-0870	1	Plate-Wear

 ● Not serviced separately

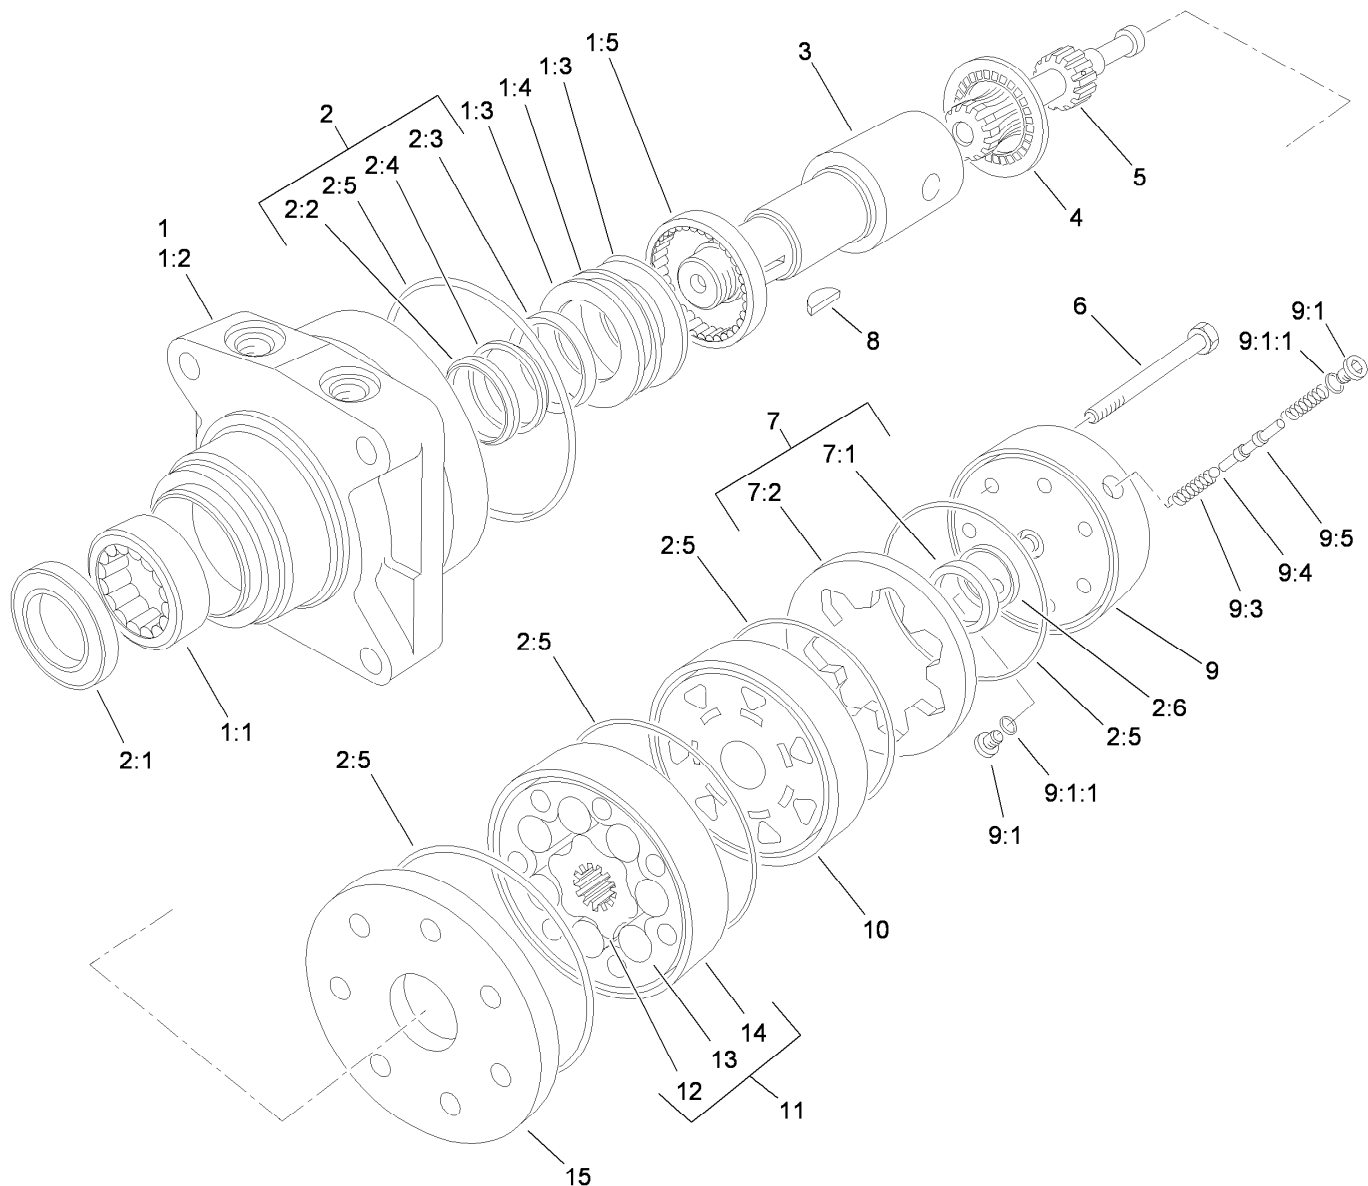


Hydraulic Motor Assembly No. 98-0959

Ref.	Part Number	Qty.	Description
1	76-0810	1	Housing ASM
1:1		1	Bearing ●
1:2		1	Housing ●
1:3		2	Washer-Thrust ●
1:4		1	Bearing-Thrust ●
1:5		1	Bearing ●
2	94-8178	1	Seal Kit
2:1		1	Seal-Dirt And Water ●
2:2		1	Backup-Ring ●
2:3		1	Seal-Shaft ●
2:4		1	Washer-Backup ●
2:5		5	Seal-Square, Ring (Inner) ●
2:6		1	Seal-Commutator ●
3	76-0860	1	Shaft-Coupling
4	76-0850	1	Bearing-Thrust
5		1	Link-Drive ●
6		7	Screw-HH ●


Ref.	Part Number	Qty.	Description
7	76-0880	1	Commutator ASM
7:1		1	Commutator ●
7:2		1	Ring-Commutator ●
8	3257-42	1	Key-Woodruff
9	76-0890	1	End Cover ASM
9:1	353-990	2	Plug
9:1:1	237-78	1	O-Ring
9:3		2	Spring ●
9:4		1	Ball ●
9:5		1	Valve-Shuttle ●
10		1	Manifold ●
11		1	Rotor Set ●
12		1	Rotor ●
13		7	Vane ●
14		1	Stator ●
15	76-0870	1	Plate-Wear

 ● Not serviced separately

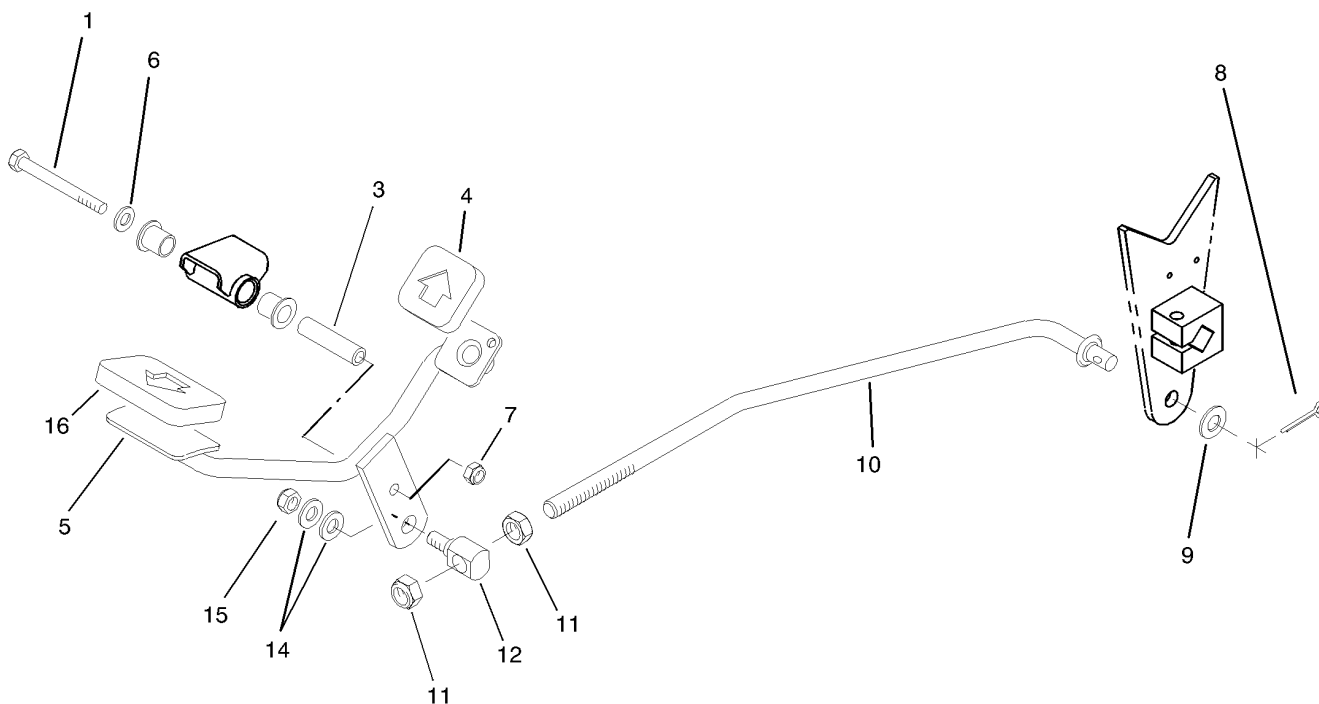


Traction Pedal Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	322-14	1	Screw-HH
3	85-8960	1	Spacer
4	74-9110	1	Pad-Pedal, Reverse
5	92-2343-01	1	Pedal ASM
6	3256-23	1	Washer-Flat
7	3296-29	1	Nut-Lock, NI
8	3272-16	1	Pin-Cotter
9	3256-26	1	Washer-Flat
10	85-8450	1	Rod-Traction
11	3218-5	2	Nut-Jam
12	92-2344	1	Trunnion
14	3256-24	2	Washer-Flat
15	3296-39	1	Nut-Lock, NI
16	74-9100	1	Pad-Pedal, Forward

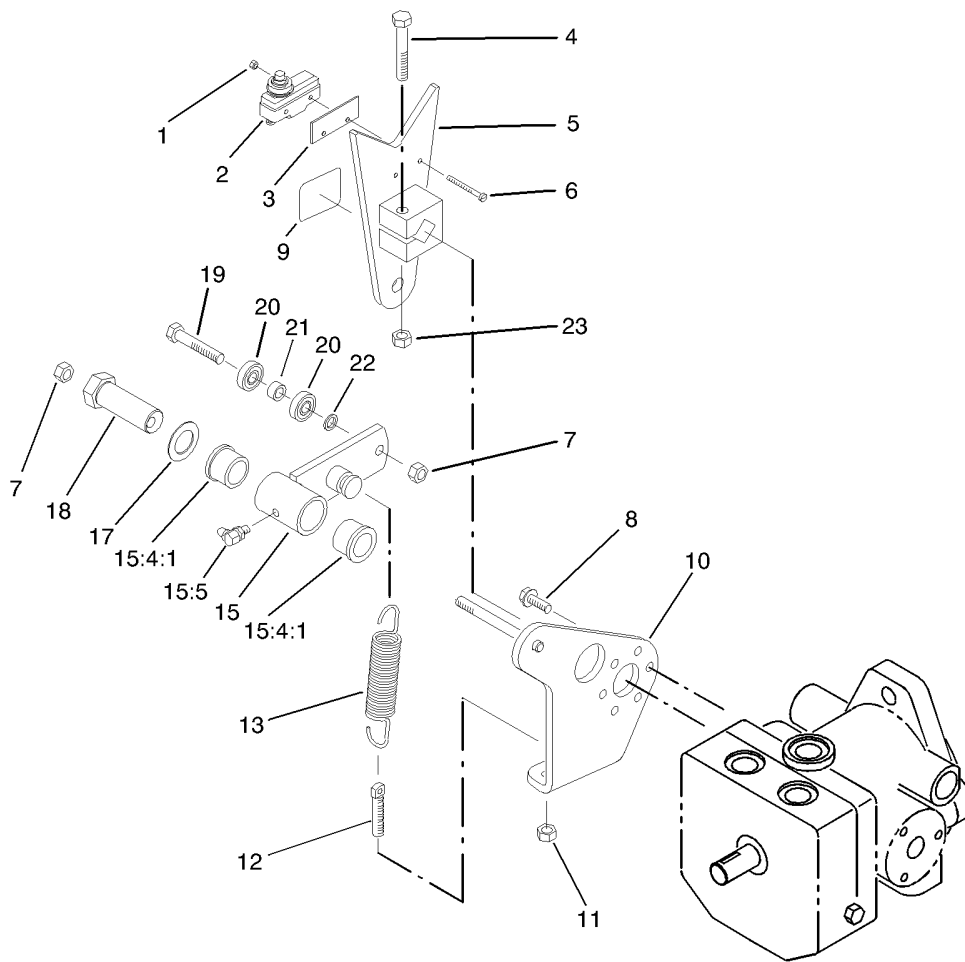 

Pump Control Lever Assembly


Ref.	Part Number	Qty.	Description
1	3296-9	2	Nut-Lock
2	29-6163	1	Switch-Micro
3	85-9150	1	Plate-Switch
4	323-10	1	Screw-HH
5	85-8300-03	1	Pump Lever ASM
6	32105-21	2	Screw-HH
7	3296-29	2	Nut-Lock, NI
8	49-2040	3	Screw-HWHTF
9	93-9051	1	Decal-Bolt, Eccentric
10	95-0553-03	1	Plate-Pump
11	3296-4	1	Nut-Lock
12	18-6380	1	Pin-Adjustment, Steering
13	85-9030	1	Spring-Extension
15	85-8460	1	Switch Arm ASM
15:4:1	256-113	2	Bushing-Flange
15:5	302-60	1	Fitting-Grease
17	3-6498	1	Washer-Thrust
18	76-8640	1	Stud-Traction
19	322-8	1	Screw-HH
20	251-307	2	Bearing-Ball
21	85-9120	1	Spacer-Pivot, Tilt
22	75-5470	1	Spacer-Bearing
23	3296-39	1	Nut-Lock, NI

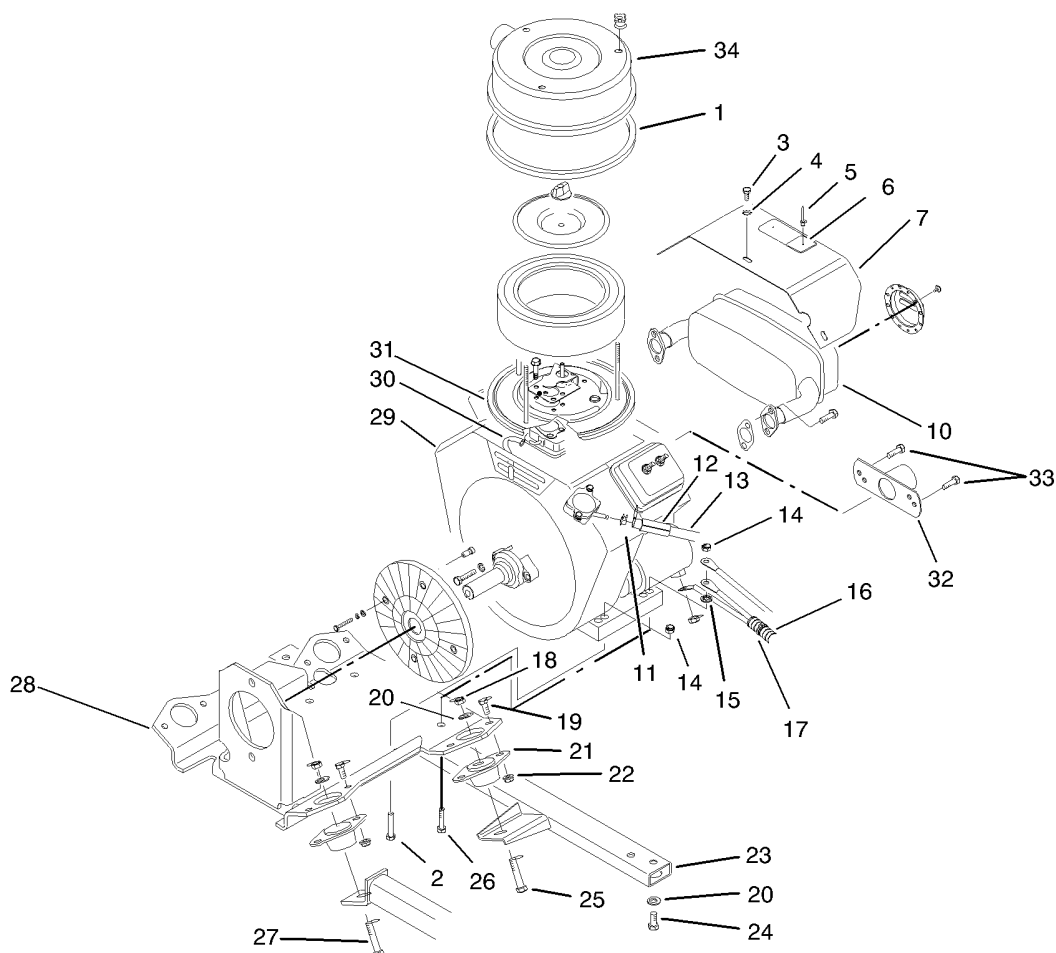 

Engine Installation Assembly

Ref.	Part Number	Qty.	Description
1	85-8360	1	Gasket-Ring
2	322-8	2	Screw-HH
3	33113-008	3	Screw-HH
4	3255-7	3	Washer-Lock/EXT
5	3269-32	2	Rivet-Pop
6	95-0645	1	Plate-Surface, Hot
7	95-5827-03	1	Shield-Muffler
10	98-0960	1	Muffler-Inlet, Dual
11	2412-98	1	Clamp
12	38-3400	1	Guard-Rubber
13	47-2964	1	Hose-Fuel
14	3296-29	4	Nut-Lock, NI
15	3254-2	1	Washer-Lock, Internal
16	94-4519	1	Tube-Convolute
17	3290-378	4	Tie-Cable
18	3296-39	4	Nut-Lock, NI
19	322-4	8	Screw-HH


Ref.	Part Number	Qty.	Description
20	3256-24	8	Washer-Flat
21	83-1031	4	Mount-Engine
22	3296-29	8	Nut-Lock, NI
23	85-8600-01	1	Support-Engine
24	323-5	4	Screw-HH
25	323-10	2	Screw-HH
26	322-10	2	Screw-HH
27	323-11	2	Screw-HH
28	85-8640-03	1	Base-Engine
29	98-0930	1	Engine-B & S, 350447-1116-E1
30	75-4705	1	Hose-Fuel
31	85-8430-03	1	Base-Cleaner, Air
32	95-0632-03	1	Cover ASM
33	3210-2	2	Screw-HH
34	98-0953-03	1	Cover-Cleaner, Air

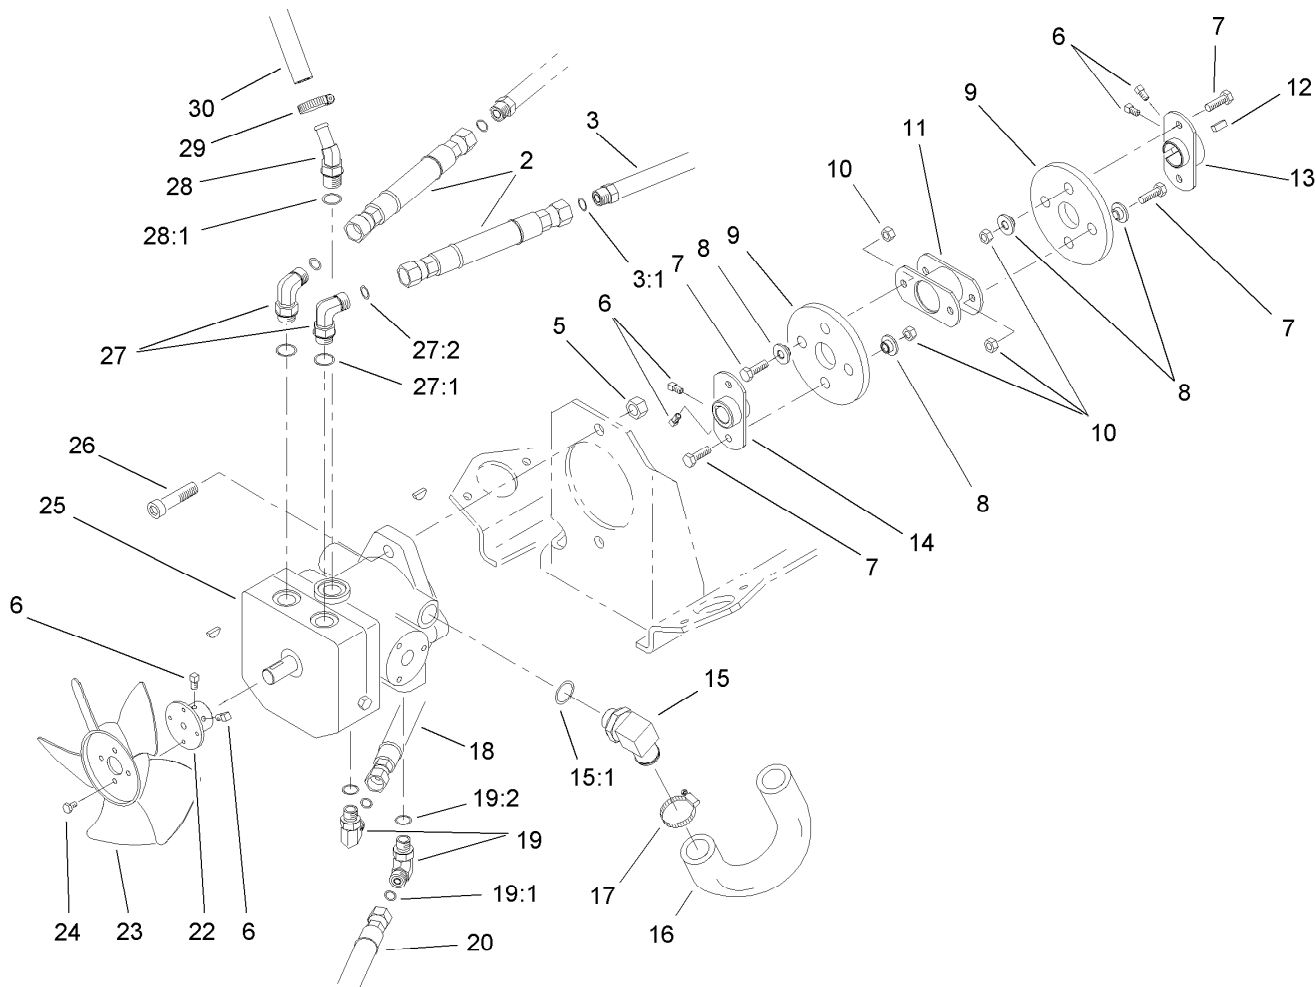 

Hydraulic Pump Installation Assembly

Ref.	Part Number	Qty.	Description
2	85-9610	2	Hose-HYD
3	98-0938	1	Pump Reserve Tube ASM
3:1	237-30	1	O-Ring
5	3296-23	2	Nut-Lock, NI
6	3241-5	6	Screw-Set
7	322-4	8	Screw-HH
8	27-6600	8	Spacer-Coupling
9	80-8650	2	Coupling-Drive
10	3296-29	8	Nut-Lock, NI
11	85-8770	1	Coupling
12	85-9020	1	Key-Square
13	85-8730	1	Hub-Engine
14	85-8700	1	Hub-Pump
15	87-8170	1	Fitting
15:1	237-80	1	O-Ring
16	98-0969	1	Hose-Inlet, Pump
17	2412-129	1	Clamp-Hose

Ref.	Part Number	Qty.	Description
18	98-0989	1	Hose-HYD
19	340-77	2	Fitting-HYD, 90 DEG
19:1	237-22	1	O-Ring
19:2	237-42	1	O-Ring
20	85-9590	1	Hose-HYD
22	85-8670	1	Hub-Fan
23	85-9560	1	Fan
24	104-2065	4	Screw-HWH
25	106-9249	1	Pump-Reversible, Variable
26	3274-5	2	Screw-HSH
27	340-98	2	Fitting-HYD, 90 DEG
27:1	237-79	1	O-Ring
27:2	237-30	1	O-Ring
28	354-126	1	Fitting-HYD, 45 DEG
28:1	237-79	1	O-Ring
29	2412-36	1	Clamp-Hose
30	85-9450	1	Hose-Return

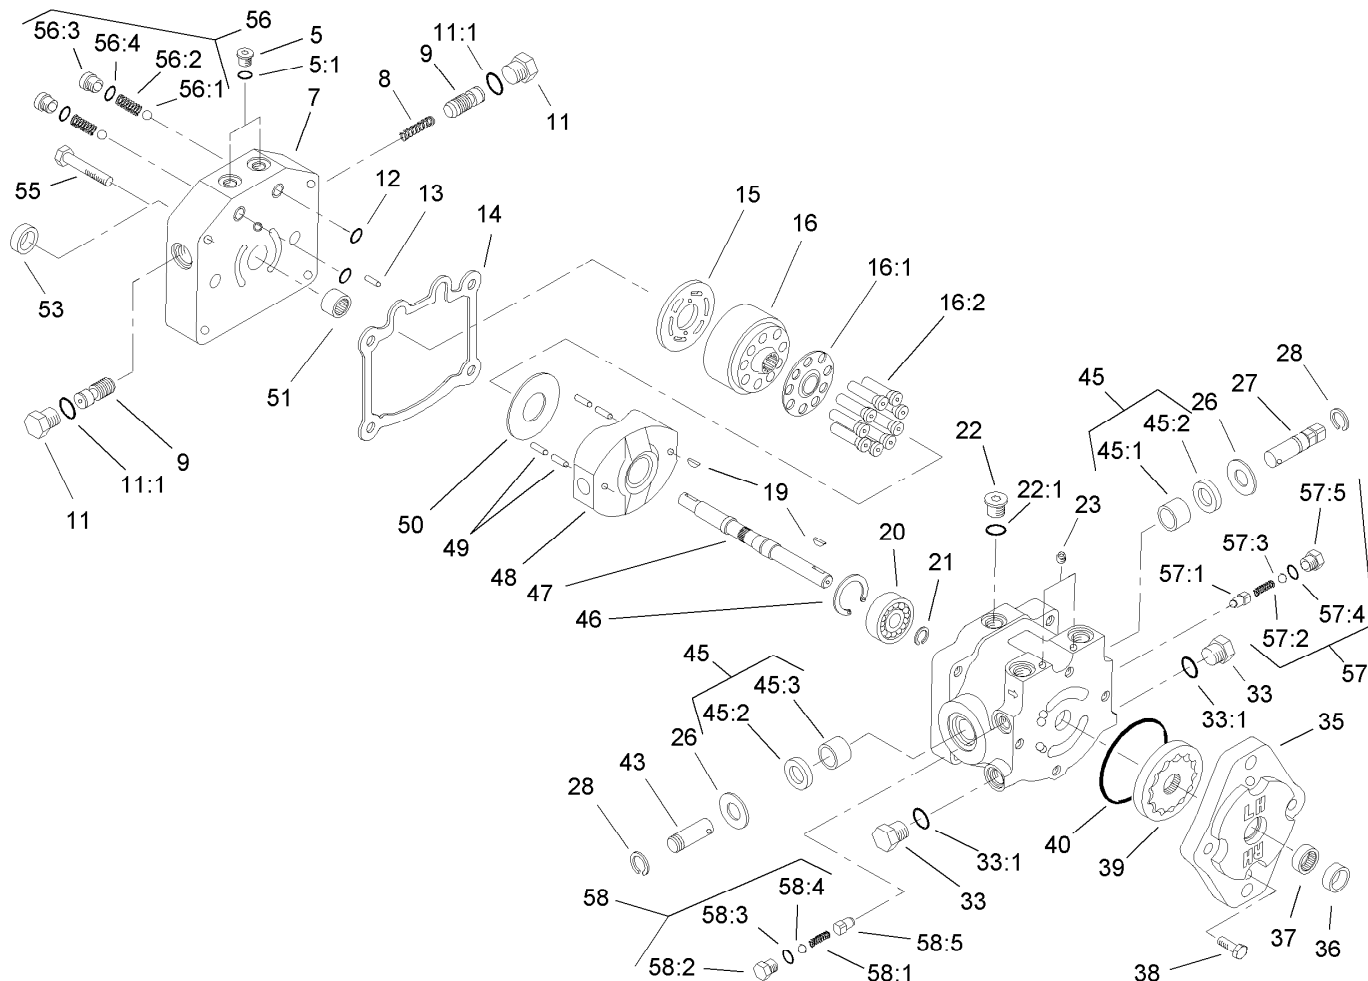 


Variable Reversible Pump Installation Assembly No. 106-9249

Ref.	Part Number	Qty.	Description
5	92-8776	2	Plug-HSH
5:1	92-8777	1	O-Ring
7	95-5808	1	Cap-End
8	25-2610	1	Spring-Valve
9	98-0920	2	Valve-Acceleration
11	28-3440	2	Plug-Threaded
11:1	75-0240	1	O-Ring
12	93-4132	2	O-Ring
13	25-2430	1	Pin-Dowel
14	25-2400	1	Gasket
15	88-8160	1	Plate-Valve
16	48-1800	1	Cylinder Block Kit
16:1		1	Retainer-Slipper ■
16:2		9	Piston ASM ■
19	3257-32	2	Key-Woodruff
20	95-5809	1	Bearing-Ball
21	94-3996	1	Ring-Retaining
22	353-988	1	Plug-Hex
22:1	237-79	1	O-Ring
23	285-17	2	Plug-Pipe
26	25-2510	2	Washer-Flat
27	25-2500	1	Shaft-Trunnion
28	32151-46	2	Ring-Retaining
33	88-8210	2	Plug

Ref.	Part Number	Qty.	Description
33:1	237-80	1	O-Ring
35	25-2690	1	Housing-Pump, Charge
36	67-8060	1	Seal-Lip
37	67-8050	1	Bearing-Needle
38	322-4	4	Screw-HH
39	95-5812	1	Gerotor ASM
40	237-95	1	O-Ring
43	88-8180	1	Shaft-Trunnion
45	88-8170	1	Housing Kit
45:1	88-8190	1	Bearing-Journal
45:2	25-3210	2	Seal-Lip
45:3	252-82	1	Bearing-Needle
46	32151-75	1	Ring-Retaining
47	95-5810	1	Shaft
48	25-2450	1	Plate-Swash, Variable
49	32121-91	4	Pin-Spring
50	25-2380	1	Plate-Thrust
51	46-8400	1	Bearing-Shaft
53	88-8230	1	Seal-Lip
55	323-45	4	Screw-HH
56	99-5689	1	Check Valve Kit ●
56:1	25-2490	1	Ball
56:2	25-2640	1	Spring-Valve
56:3	25-2650	1	Plug-Valve, Check

● Not illustrated

 ■ Not serviced separately

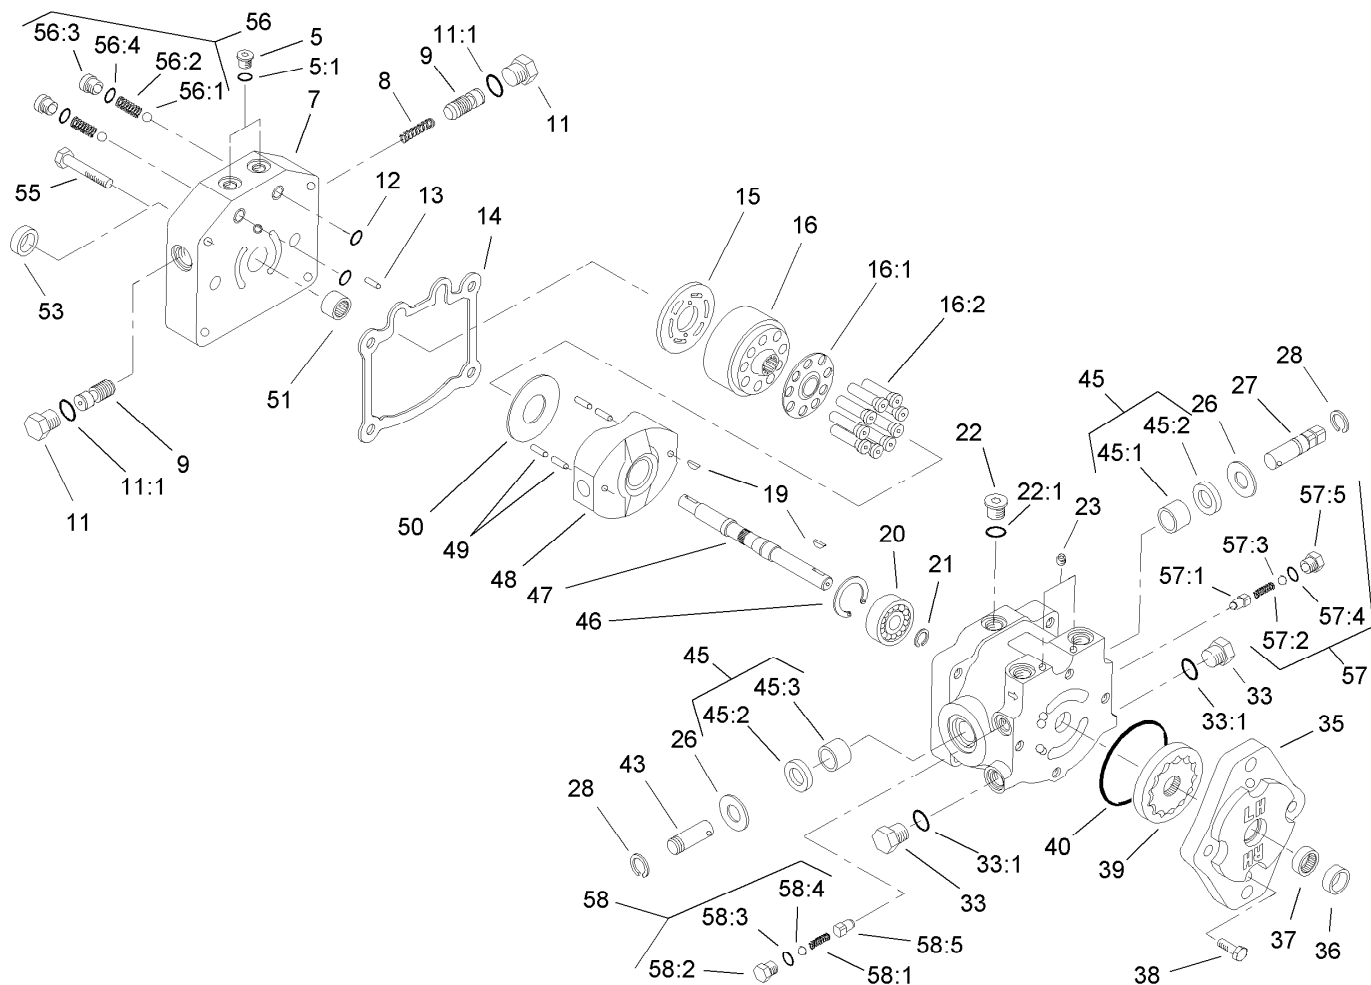


Variable Reversible Pump Installation Assembly No. 106-9249 (continued)

Ref.	Part Number	Qty.	Description
56:4	237-86	1	O-Ring
57	49-8520	1	Implement Relief Kit ●
57:1	83-7260	1	Cone-Relief, Charge
57:2	25-2570	1	Spring-Valve
57:3	25-2470	1	Pack-Shim
57:4	237-86	1	O-Ring
57:5	25-2460	1	Plug-HH

Ref.	Part Number	Qty.	Description
58	49-8510	1	Valve Kit ●
58:1	25-2480	1	Spring-Valve
58:2	25-2460	1	Plug-HH
58:3	237-86	1	O-Ring
58:4	25-2470	1	Pack-Shim
58:5	83-7260	1	Cone-Relief, Charge

● Not illustrated

 
■ Not serviced separately

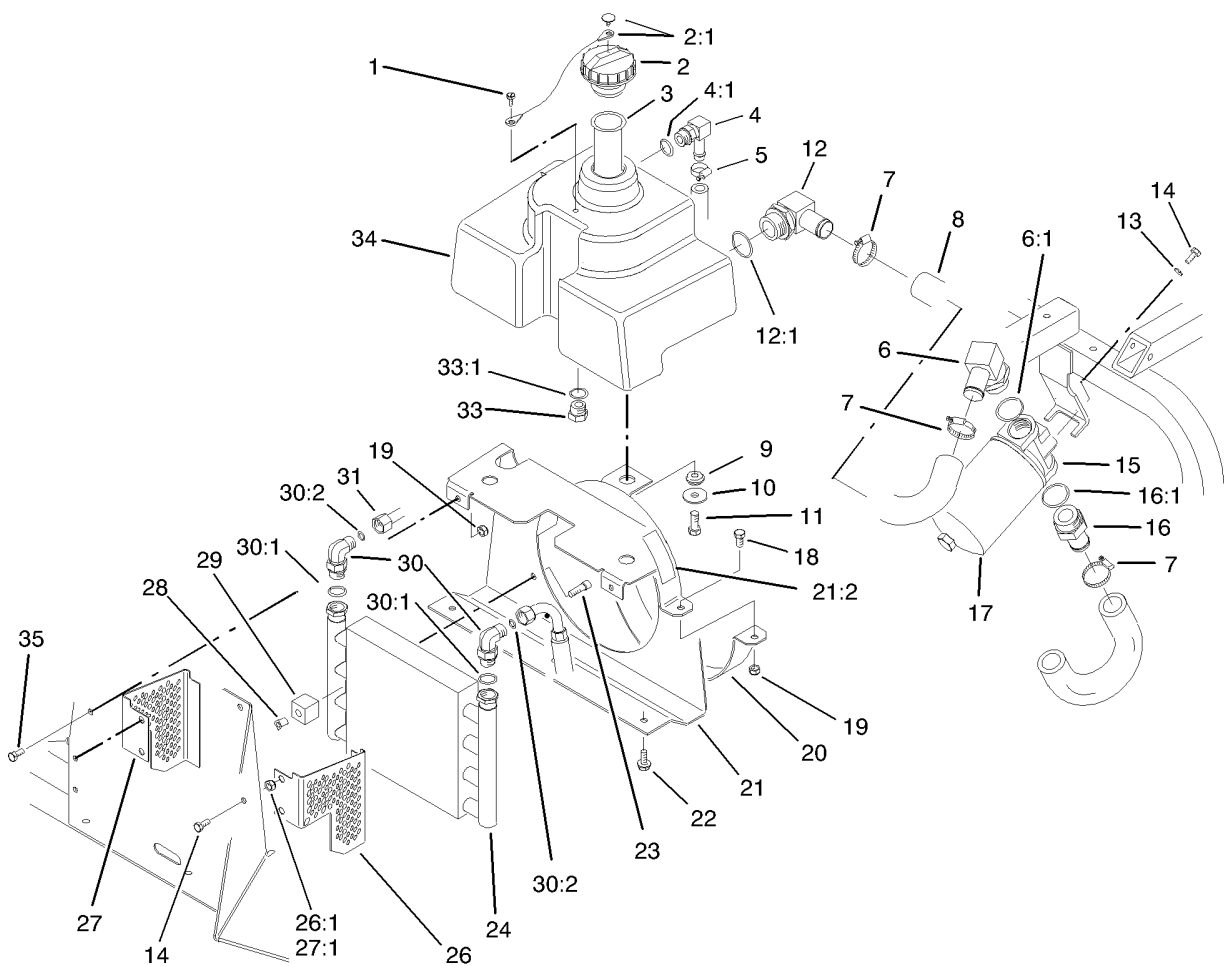

Hydraulic Reservoir Assembly

Ref.	Part Number	Qty.	Description
1	57-5420	1	Screw-Shoulder
2	93-4365	1	Cap-Oil
2:1	75-0540	1	Tether And Button Kit
3	85-9510	1	Filler-Screen
4	354-120	1	Fitting-HYD, 90 DEG
4:1	237-79	1	O-Ring
5	2412-36	1	Clamp-Hose
6	353-987	1	Fitting-HYD, 90
6:1	237-81	1	O-Ring
7	2412-129	3	Clamp-Hose
8	98-0970	1	Hose-Filter, Inlet
9	240-11	3	Bushing-Flange
10	63-8410	3	Washer
11	323-5	3	Screw-HH
12	98-0971	1	Fitting-Elbow-90
12:1	237-117	1	O-Ring
13	3253-3	2	Washer-Lock
14	321-4	6	Screw-HH
15	68-8990	1	Filter Head ASM
16	354-73	1	Fitting-Straight
16:1	237-81	1	O-Ring
17	23-9740	1	Filter-Oil


Ref.	Part Number	Qty.	Description
18	322-2	2	Screw-HH
19	3296-29	4	Nut-Lock, NI
20	85-8570-03	1	Shroud-Upper
21	98-8151	1	Cooler Mount ASM
21:2	93-7272	2	Decal-Warning
22	32144-11	3	Screw-HWHTF
23	3274-86	2	Screw-HSH
24	85-9460	1	Cooler-Oil
26	88-8120	1	Screen-Cooler, LH
26:1	32148-6	2	Insert-Nut
27	88-8110	1	Screen-Cooler, RH
27:1	32148-6	2	Insert-Nut
28	85-9670	2	T-Nut
29	85-9550	2	Rubber Clamp ASM
30	340-18	2	Fitting-HYD, 90 DEG
30:1	237-79	1	O-Ring
30:2	237-22	1	O-Ring
31	98-0987	1	Tube
33	353-550	1	Plug-HYD, HH
33:1	237-79	1	O-Ring
34	92-8959	1	Tank-HYD
35	322-3	2	Screw-HH

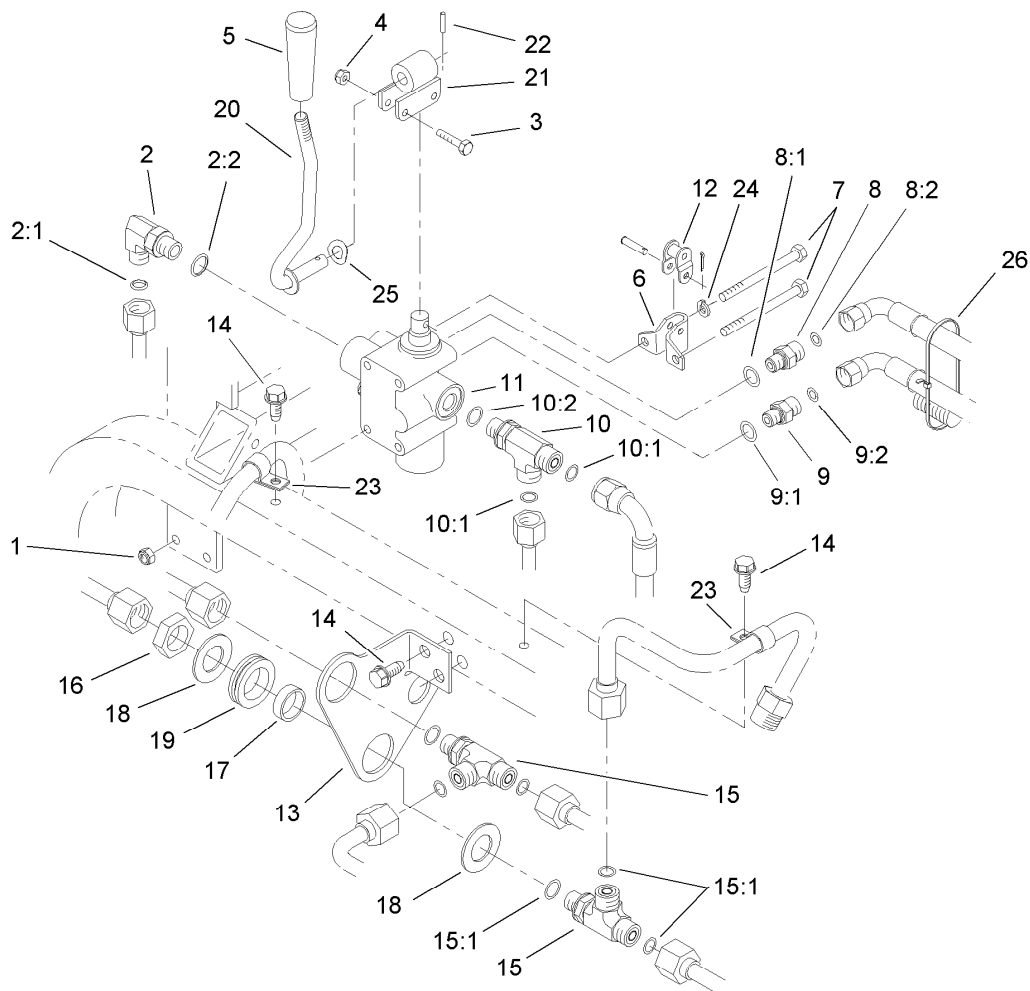 

Hydraulic Plumbing Assembly


Ref.	Part Number	Qty.	Description
1	3296-8	2	Nut-Lock
2	340-77	1	Fitting-HYD, 90 DEG
2:1	237-22	1	O-Ring
2:2	237-42	1	O-Ring
3	3290-360	2	Screw-HH
4	3296-2	2	Nut-Lock, NI
5	233-39	1	Knob-Control
6	88-8480	1	Bracket-Pivot
7	321-23	4	Screw-HH
8	85-9720	1	Fitting-Orificed
8:1	237-78	1	O-Ring
8:2	237-21	1	O-Ring
9	340-92	1	Fitting-HYD, Straight
9:1	237-78	1	O-Ring
9:2	237-21	1	O-Ring
10	340-86	1	Fitting-Tee
10:1	237-22	2	O-Ring
10:2	237-42	1	O-Ring

Ref.	Part Number	Qty.	Description
11	43-1710-01	1	Valve ASM
12	2710-20	1	Link-Offset
13	98-0963-01	1	Bracket-Bulkhead
14	32144-11	4	Screw-HWHTF
15	340-121	2	Fitting-Tee, HYD
15:1	237-30	3	O-Ring
16	340-127	2	Nut-Bulkhead
17	69-8960	2	Spacer
18	69-8930	4	Washer
19	240-5	2	Grommet-Rubber
20	99-1632	1	Lift Lever ASM
21	98-8159	1	Pivot
22	32121-73	1	Pin-Roll
23	2412-138	2	R-Clamp
24	3253-3	2	Washer-Lock
25	3290-477	1	Washer-Curved
26	3290-378	1	Tie-Cable

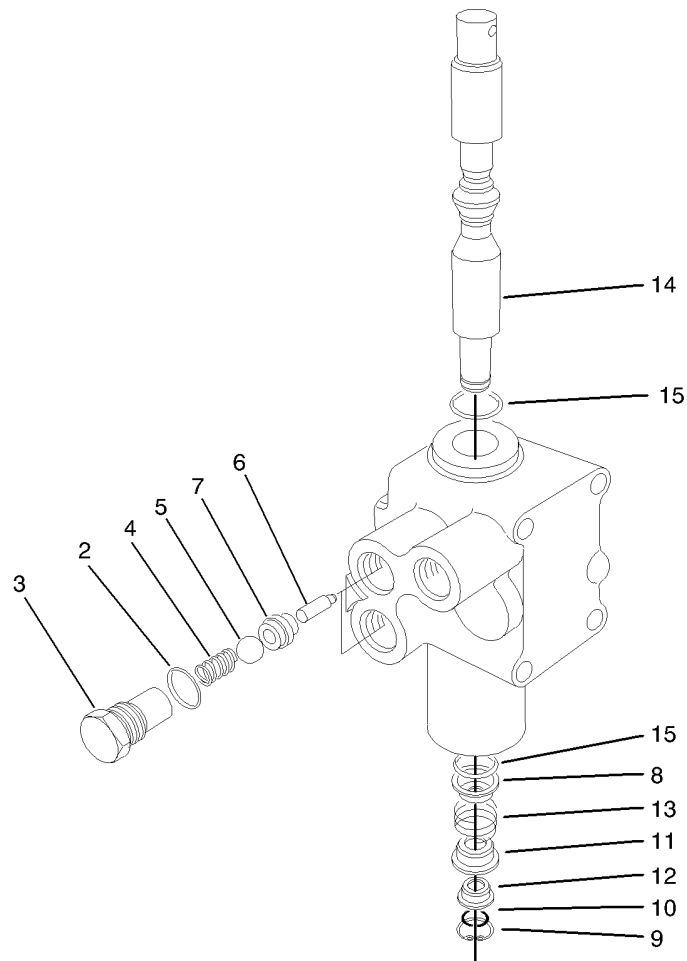 

Valve Assembly No. 43-1710-01

Ref.	Part Number	Qty.	Description
2	237-42	2	O-Ring
3	22-8330	2	Plug
4	22-8340	2	Spring
5	22-8350	2	Ball
6	22-8360	2	Pin
7	22-8370	2	Seat-Valve
8	22-8380	1	Retainer
9	22-8490	1	Ring-Snap
10	22-8480	1	Ring-Snap
11	22-8390	1	Retainer
12	22-8400	1	Spacer
13	22-8410	1	Spring
14	22-8420	1	Spool
15	22-8500	2	O-Ring

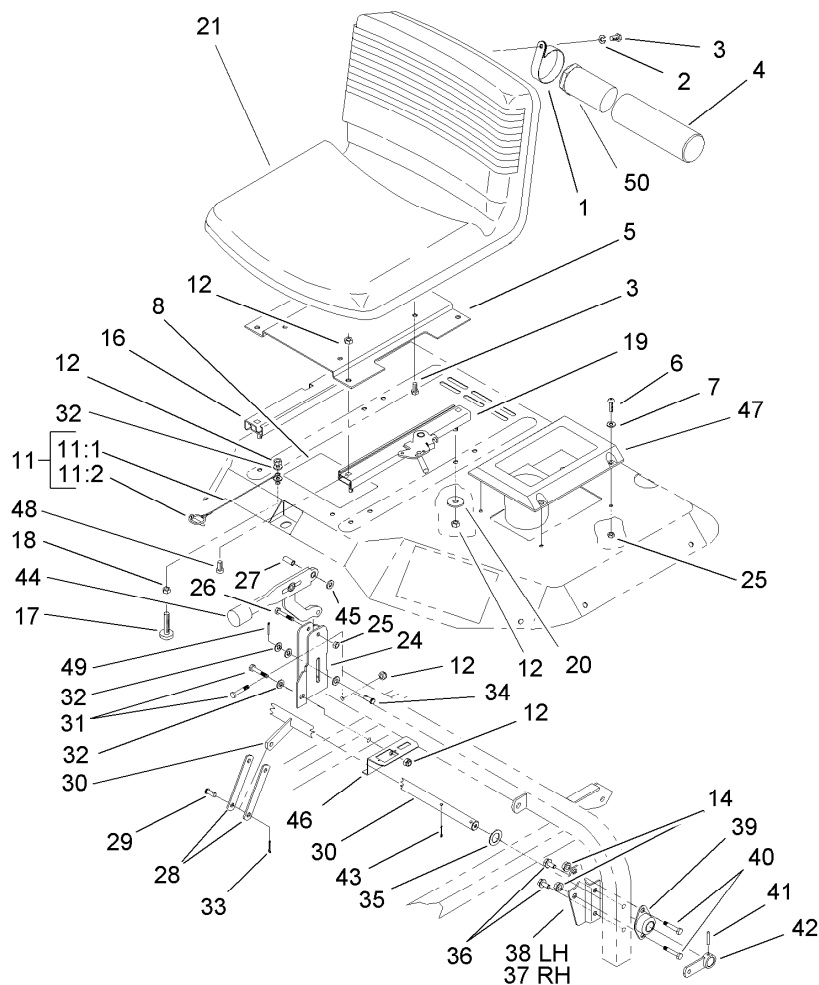 


Seat and Brake Assembly

Ref.	Part Number	Qty.	Description
1	2412-133	2	R-Clamp
2	3253-4	2	Washer-Lock
3	322-2	6	Screw-HH
4	104-7050	1	Tube-Manual
5	85-9660-03	1	Plate-Adjustment, Seat
6	3258-166	4	Screw-PRH
7	3256-1	4	Washer-Flat
8	98-0977	1	Decal-Service
11	98-0979	1	Lynch Pin ASM
11:1	28-8070	1	Lanyard
11:2	3290-495	1	Pin-Klik
12	3296-29	12	Nut-Lock, NI
14	3296-39	4	Nut-Lock, NI
16	51-0780	1	Slider-Seat
17	32141-36	2	Screw-Adjustment, Level
18	3218-2	2	Nut-Jam
19	51-0790	1	Adjuster-Seat, LH
20	63-8410	4	Washer
21	92-8976	1	Seat
24	95-5823	1	Bracket-Lever
25	3296-42	5	Nut-Lock, NI
26	321-9	1	Screw-HH
27	87-4710	1	Spacer-Brake, Parking


Ref.	Part Number	Qty.	Description
28	95-5844	2	Strap
29	283-62	1	Pin-Clevis
30	95-5848	1	Rod-Traverse
31	322-11	2	Screw-HH
32	3256-23	6	Washer-Flat
33	3272-10	1	Pin-Cotter
34	94-3829	1	Pin-Clevis
35	67-9410	2	Washer
36	32144-14	4	Screw-HWHTF
37	98-0901	1	Bracket-Bearing, RH ●
38	98-0900	1	Bracket-Bearing, LH
39	27-2320	2	Bearing
40	3234-1	4	Screw-HHF
41	32121-6	2	Pin-Roll, Slotted
42	83-9310	2	RH Brake Lever ASM
43	3272-12	2	Pin-Cotter
44	87-2710	1	Lever-Brake
45	3290-477	1	Washer-Curved
46	98-0922	1	Bracket-Hourmeter
47	69-7040	1	Holder-Cup
48	3274-12	4	Screw-HSH
49	3272-6	1	Pin-Cotter
50	104-7048	1	Cap-Housing

 ● Not illustrated

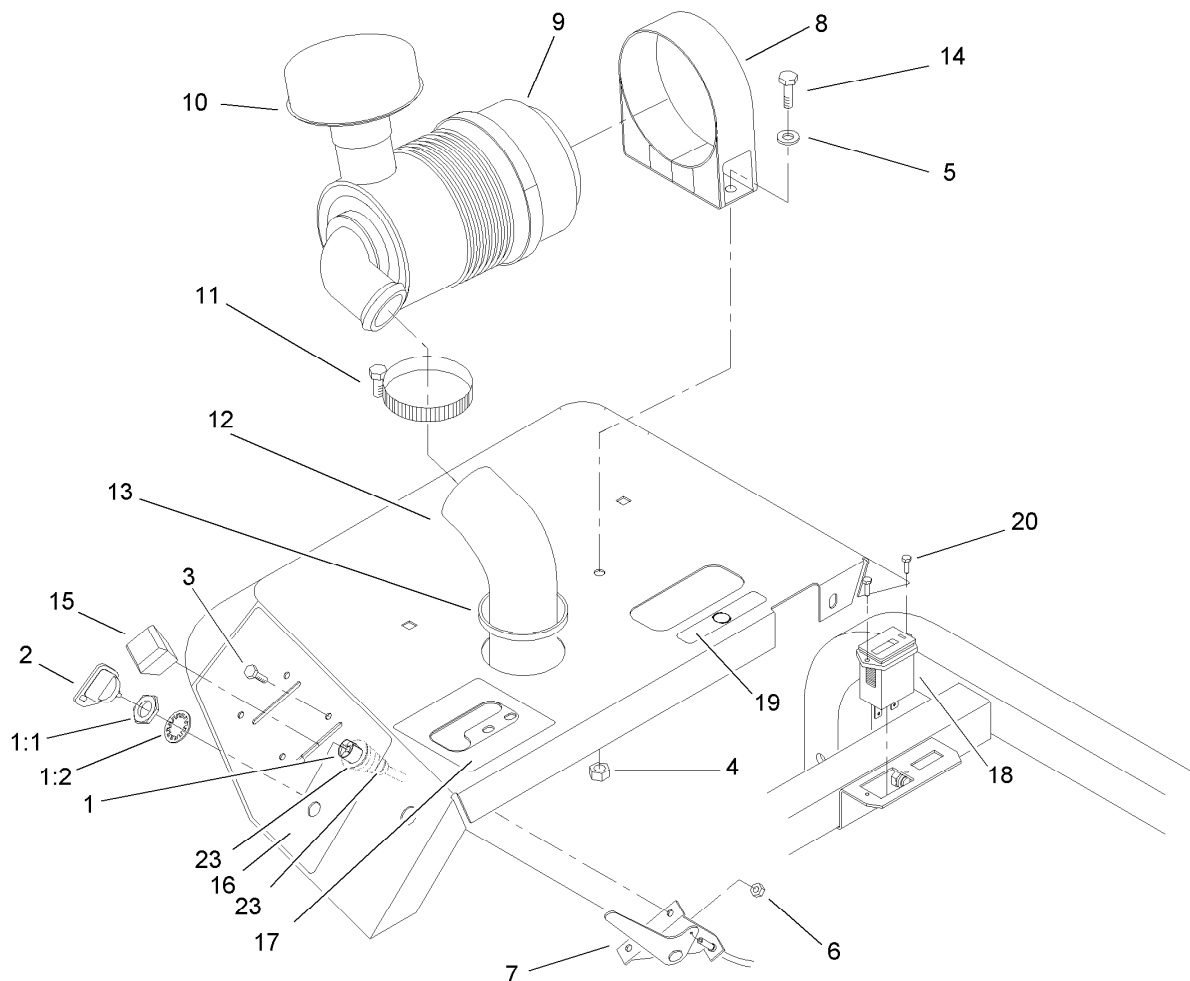


Air Cleaner and Control Panel Assembly

Ref.	Part Number	Qty.	Description
1	83-0020	1	Switch-Ignition
1:1	218-461	1	Nut-HH
1:2	3254-5	1	Washer-Tooth, Internal
2	63-8360	2	Key-Ignition
3	32105-13	4	Screw-HWH
4	3296-29	2	Nut-Lock, NI
5	3256-23	2	Washer-Flat
6	3296-2	4	Nut-Lock, NI
7	98-0991	2	Control-Choke And Throttle
8	95-5806	1	Bracket-Mounting
9	93-2190	1	Air Cleaner ASM
10	46-7510	1	Hood-Inlet, Air
11	2412-130	2	Clamp-Hose
12	92-8977	1	Hose-Cleaner, Air
13	237-164	1	Grommet
14	322-5	2	Screw-HH
15	66-0120	2	Knob
16	107-2162	1	Decal-Panel, Control
17	98-0984	1	Decal-Lift
18	75-6820	1	Hourmeter
19	93-7442	1	Decal-Lever, Parking
20	32144-18	2	Screw-HH
23	3290-378	2	Tie-Cable

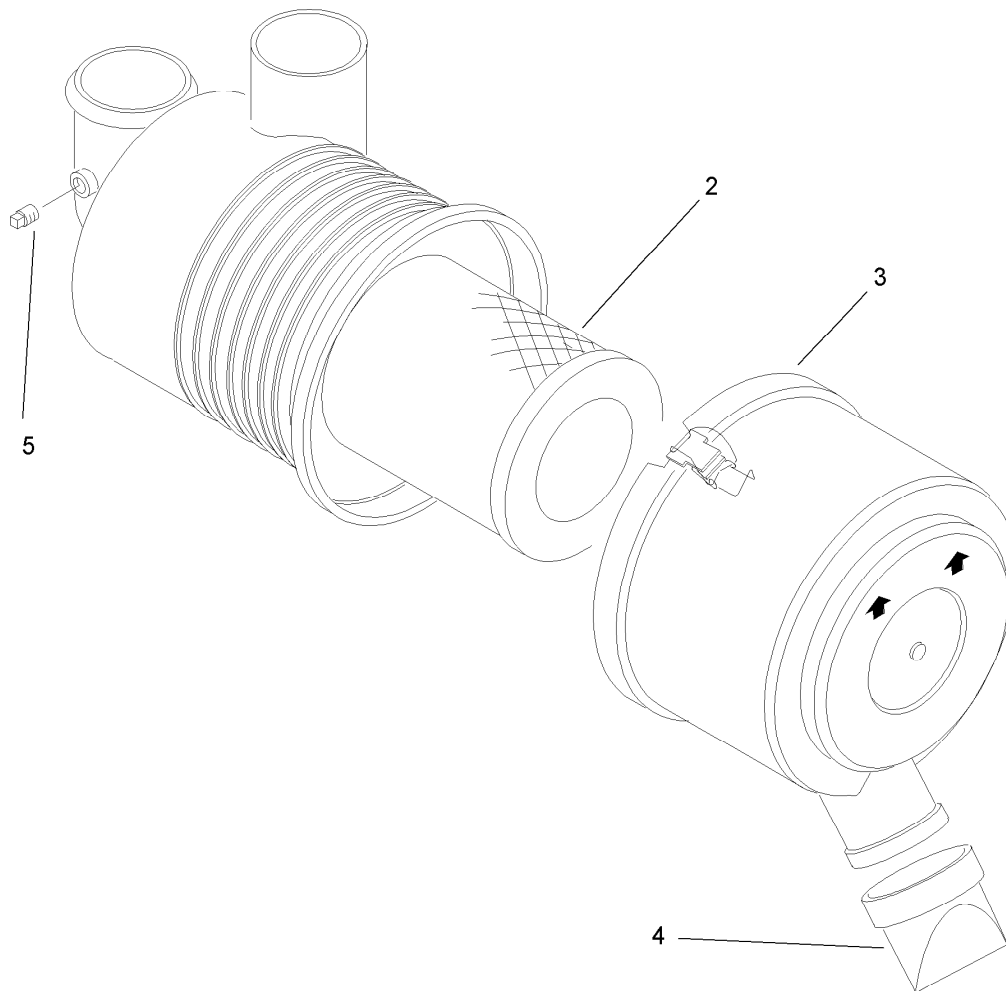 

Air Cleaner Assembly No. 93-2190



<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	93-2195	1	Filter
3	94-3652	1	Cover ASM
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

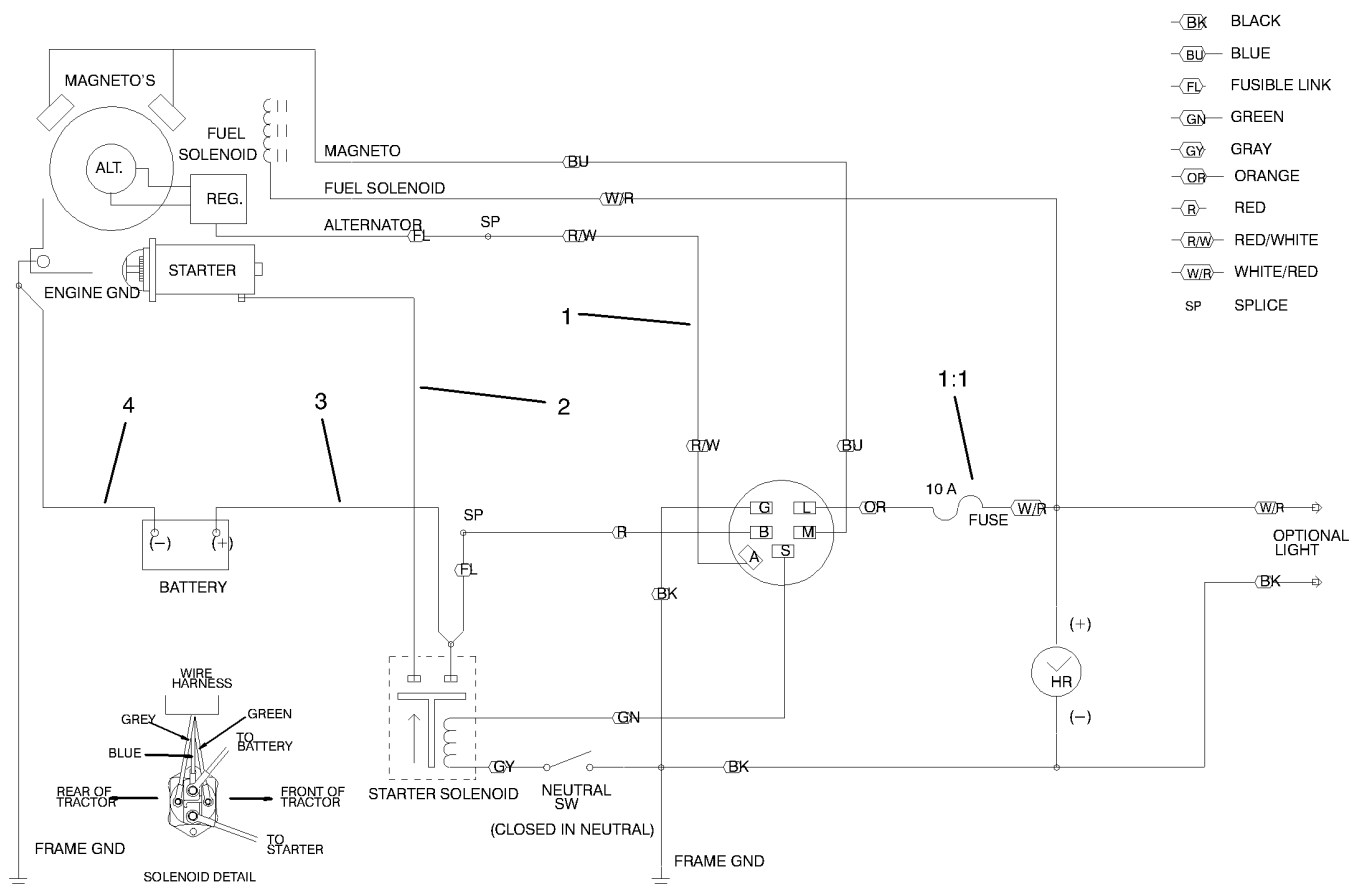 

Electrical Schematic

Ref.	Part Number	Qty.	Description
1	98-0994	1	Harness-Wire
1:1	218-578	1	Fuse-Blade, 10 Amp
1:6	93-5961	1	Boot-Lever ●
2	80-2110	1	Wire ASM
3	83-2420	1	Positive Cable ASM
3:2	28-8080	1	Boot-Terminal ●
3:3	83-2430	1	Boot-Terminal ●
4	88-8330	1	Engine Ground Wire ASM

  ● Not illustrated

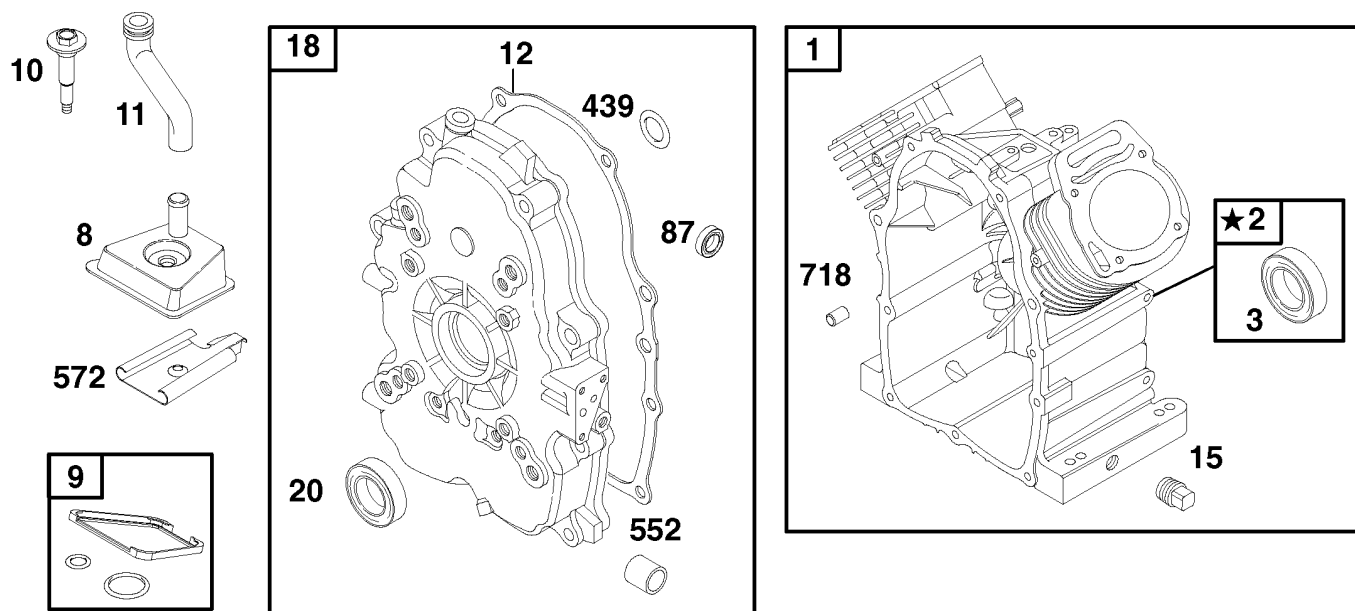

1019 LABEL KIT

1058 OWNER'S MANUAL

★ **REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**







Assemblies include all parts shown in frames.

Cylinder Assembly Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
1	808441	1	Cylinder Assembly ■
2	808534	1	Bushing-Seal Kit ■
3	805101	1	Seal-Oil ● ■
8	807795	1	Breather Assembly ■
9	807688	1	Gasket-Breather ● ■
10	805751	1	Screw ■
11	806083	1	Tube-Breather ■
12	806190	1	Gasket-Crankcase ● ■
15	94239	1	Plug-Pipe ■
18	808502	1	Cover-Crankcase ■
20	805049	1	Seal-Oil ● ■
22	805696	1	Screw-Hex. ■
87	805054	1	Seal-Governor Shaft ■
439	806191	1	Seal-O-Ring ● ■
552	805412	1	Bushing-Governor Shaft ■
572	805197	1	Baffle-Oil ■
718	805103	1	Pin-Dowel ■
1019	808036	1	Label Kit ■
1058	273685	1	Owner-S Manual ■

● Included in Gasket Set-Part No. 808389

      ■ Obtain parts from www.briggsandstratton.com

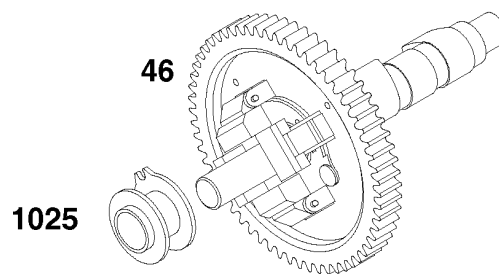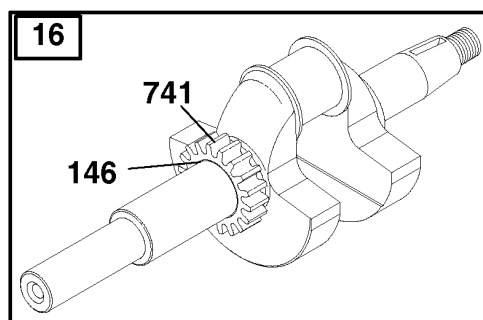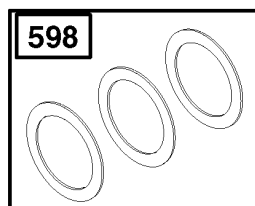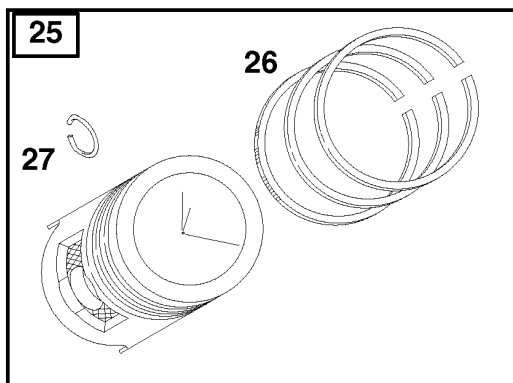
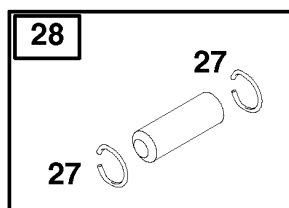
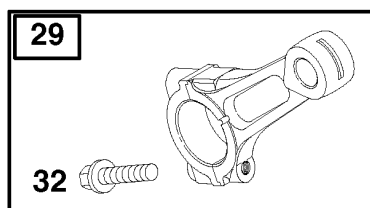


Assemblies include all parts shown in frames.

Piston and Crankshaft Assembly Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
16	692089	1	Crankshaft ●
17	805754	1	Ball Bearing ●
25	808326	1	Piston ASM (Standard) ●
25	808336	1	Piston ASM (.010 O.S.) ●
25	808337	1	Piston ASM (.020 O.S.) ●
25	808338	1	Piston ASM (.030 O.S.) ●
26	807889	1	Ring Set (Standard) ●
26	807994	1	Ring Set (.010 O.S.) ●
26	807995	1	Ring Set (.020 O.S.) ●
26	807996	1	Ring Set (.030 O.S.) ●
27	805099	1	Lock-Piston Pin ●
28	807886	1	Pin-Piston ●
29	807900	1	Rod-Connecting (Standard) ●
29	807803	1	Rod-Connecting (.020 Undersize) ●
32	805395	1	Screw-Hex. ●
46	691537	1	Camshaft ●
146	94196	1	Key-Timing ●
377	808095	1	Key-Woodruff ●
598	807625	1	Shim-Play, End ●
741	805984	1	Gear-Timing ●
1025	805313	1	Slider-Governor ●

   ● Obtain parts from www.briggsandstratton.com

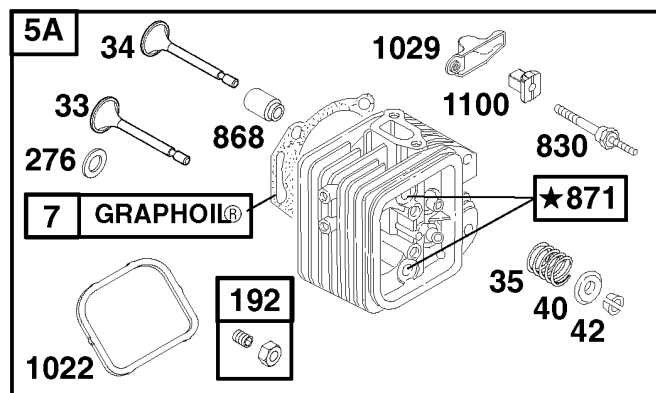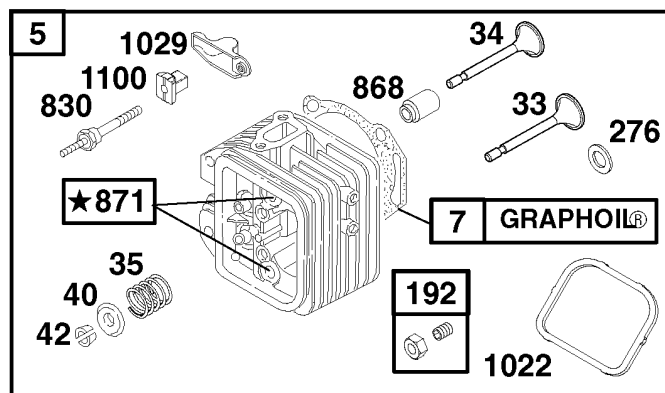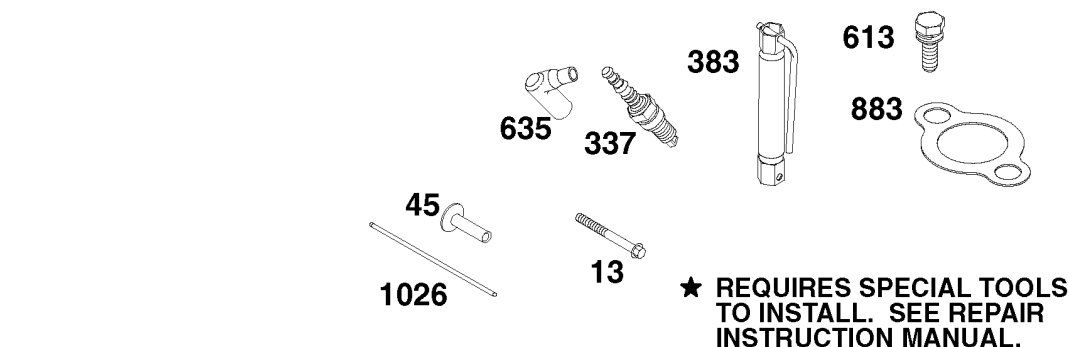

Assemblies include all parts shown in frames.


Crankcase Assembly Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
5	808383	1	Cylinder Head (No. 1) ■
5A	808384	1	Cylinder Head (No. 2) ■
7	806086	1	Gasket-Cylinder Head ●▲■
13	805097	1	Screw-HH ■
33	807681	1	Valve-Exhaust ■
34	807680	1	Valve-Intake ■
35	805937	1	Spring-Valve ■
40	805092	1	Retainer-Valve ■
42	807683	1	Keeper-Valve ■
45	262679	1	Tappet-Valve ■
192	807623	1	Adjuster-Arm, Rocker ■
276	805420	1	Washer ●▲■
337	496018	1	Spark Plug ■

Ref.	Part Number	Qty.	Description
383	19374	1	Wrench-Spark Plug ■
613	805158	1	Screw ■
635	805529	1	Boot-Spark Plug ■
830	806037	1	Stud-Rocker Arm ■
868	805094	1	Seal-Valve ■
871	805084	1	Guide-Valve ■
883	805024	1	Gasket-Exhaust ■
1022	806039	1	Gasket-Cover, Rocker ●▲■
1026	805352	1	Rod-Push ■
1026	805617	1	Rod-Push (Aluminum-Exhaust) ■
1029	806036	1	Arm-Rocker ■
1100	806038	1	Pivot-Rocker Arm ■

● Included in Gasket Set-Part No. 808389
▲ Included in Valve Overhaul Kit-Part No. 808391

 ■ Obtain parts from www.briggsandstratton.com

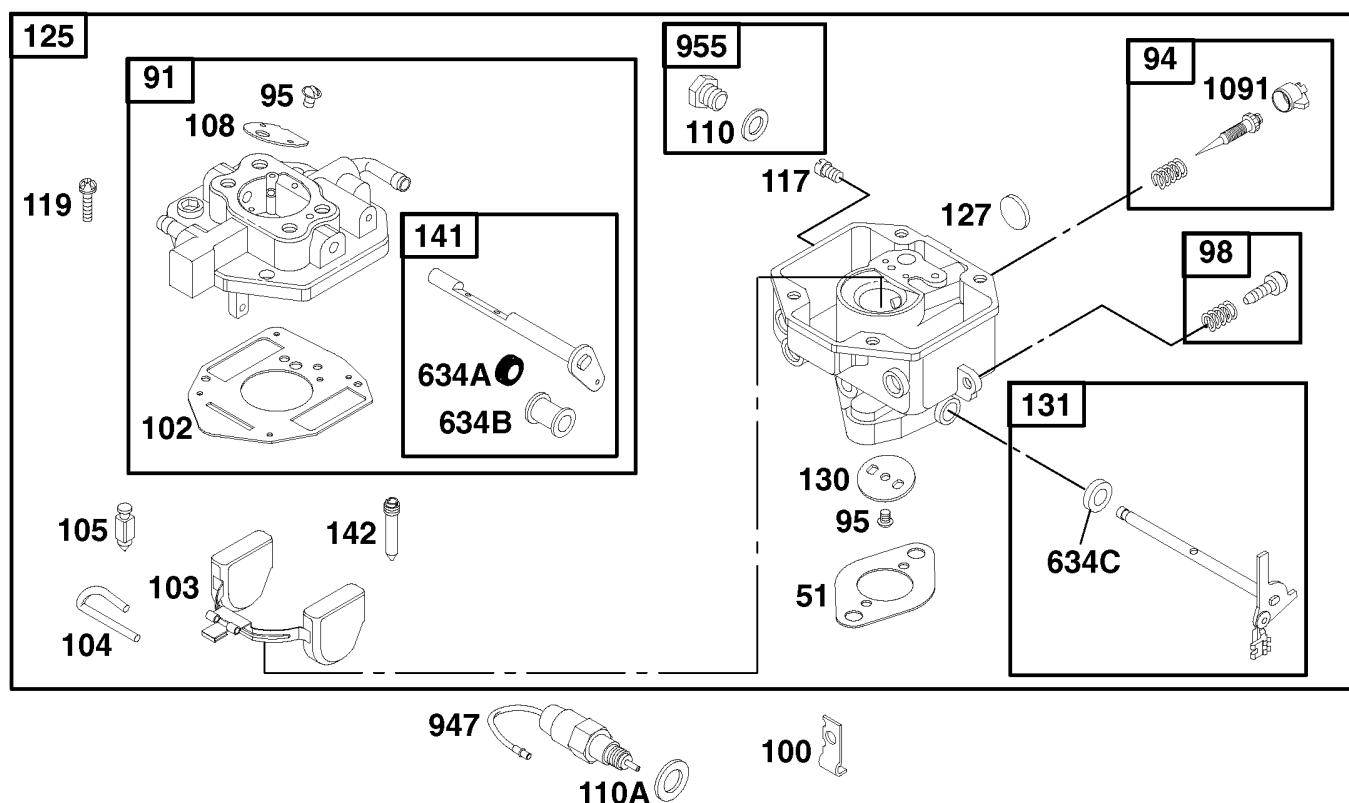


Assemblies include all parts shown in frames.

Carburetor Assembly Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
51	805700	1	Gasket-Intake ●▲	119	805540	1	Screw ▲
91	808396	1	Body Assembly-Upper ▲	125	808370	1	Carburetor Assembly ▲
94	808399	1	Idle Mixture Kit ■▲	127	805559	1	Plug-Welch ■▲
95	805538	1	Screw ■▲	130	806132	1	Valve-Throttle ▲
98	808177	1	Idle Speed Kit ▲	131	808397	1	Shaft-Throttle ▲
100	806283	1	Stop-Throttle ▲	141	808398	1	Shaft-Choke ▲
102	805541	1	Gasket-Intake Elbow ■▲	142	806128	1	Nozzle-Carburetor ■▲
103	805546	1	Float Assembly ▲	634A	805544	1	Seal-Shaft ■▲
104	805545	1	Float Hinge Pin ■▲	634B	805543	1	Collar-Choke ■▲
105	805547	1	Valve-Needle ■▲	634C	806131	1	Seal-Shaft, Choke Throttle ■▲
108	806134	1	Valve-Choke ▲	947	807664	1	Solenoid ▲
110	805549	1	Washer-Seal ■▲	955	807723	1	Plug-Carburetor ▲
110A	806137	1	Washer-Sealing ■▲	1091	805862	1	Cap-Limiter ■▲
117	806126	1	Jet-Main ■▲				
117	808413	1	Jet-Main (High Altitude) ▲				

● Included in Gasket Set-Part No. 808389
▲ Obtain parts from www.briggsandstratton.com

 ■ Included in Carburetor Kit-Part No. 808395

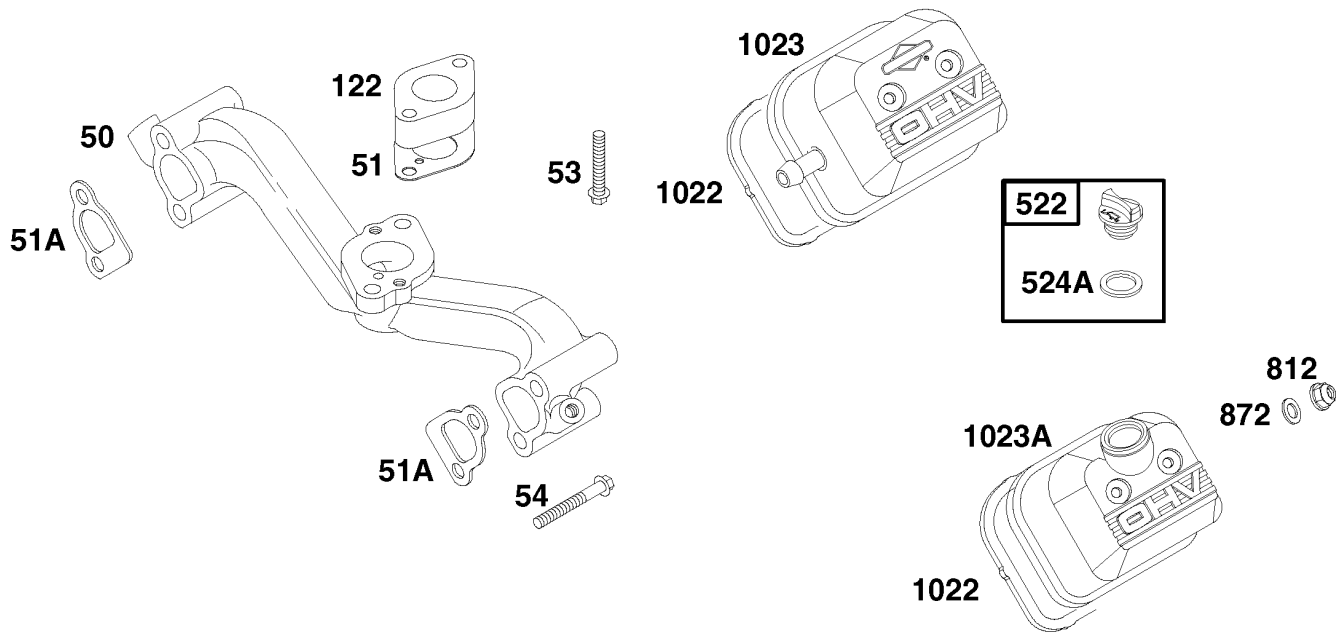


Assemblies include all parts shown in frames.

Valve Cover and Exhaust Manifold Assembly Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
50	805772	1	Manifold-Intake ■
51	805700	1	Gasket-Intake ● ■
51A	805023	1	Gasket-Intake ● ▲ ■
53	805466	1	Saew ■
54	805006	1	Screw ■
122	805673	1	Spacer-Carburetor ■
872	805420	1	Washer ● ▲ ■
522	491832	1	Plug-Fill, Dipstick ■
524A	271983	1	Seal-Filler Plug ■
812	805019	1	Nut-Lock ▲ ■
1022	806039	1	Gasket-Cover, Rocker ● ▲ ■
1023	805100	1	Cover-Valve ■
1023A	808032	1	Cover-Valve ■

● Included in Gasket Set-Part No. 808389
▲ Included in Valve Overhaul Kit-Part No. 808391

 
■ Obtain parts from www.briggsandstratton.com

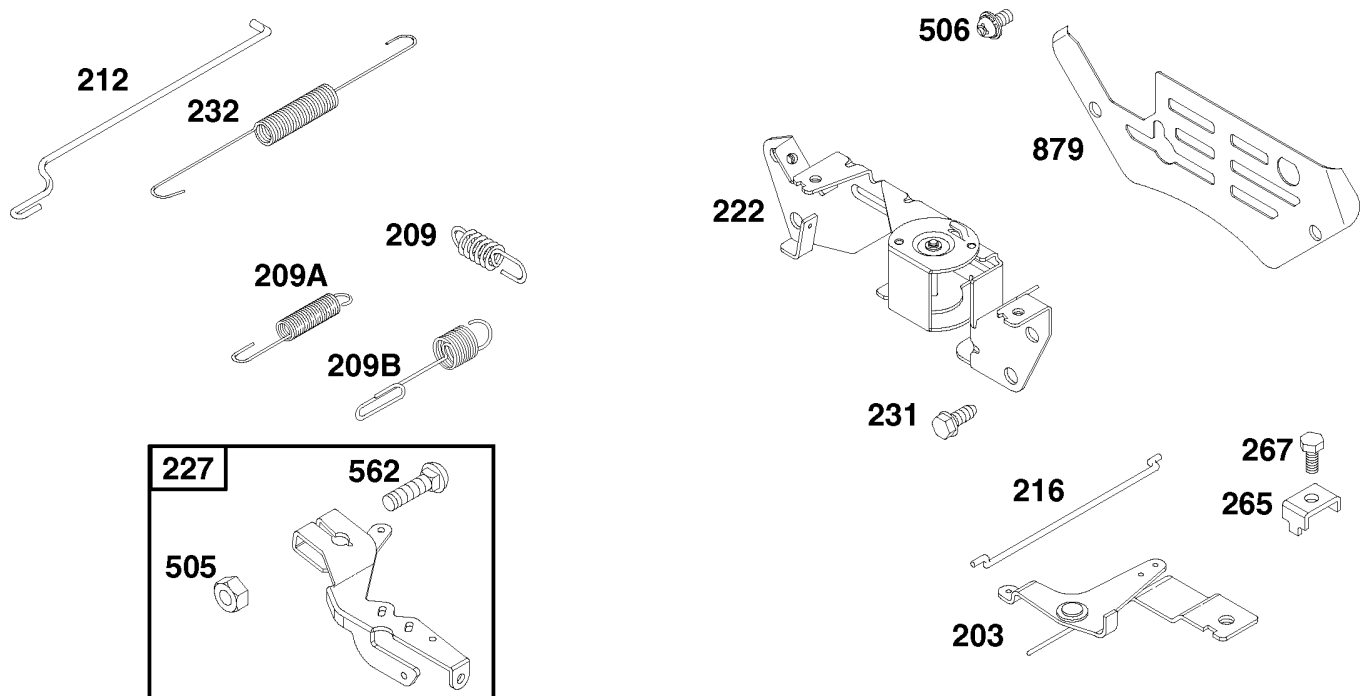

Assemblies include all parts shown in frames.

Governor Assembly Briggs and Stratton 350447-1116-E1

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
203	807609	1	Control-Choke
209	805463	1	Governor Spring
209A	805450	1	Spring-Governor
209B	806060	1	Spring-Governor (Idle)
212	805480	1	Link
216	805439	1	Link
222	808195	1	Bracket-Control
227	807528	1	Lever-Governor
231	805025	1	Screw
232	805465	1	Spring-Link
265	221535	1	Clamp-Casing
267	805762	1	Screw-HH
505	805383	1	Nut
506	805009	1	Screw
562	805381	1	Bolt
879	805841	1	Cover-Carburetor

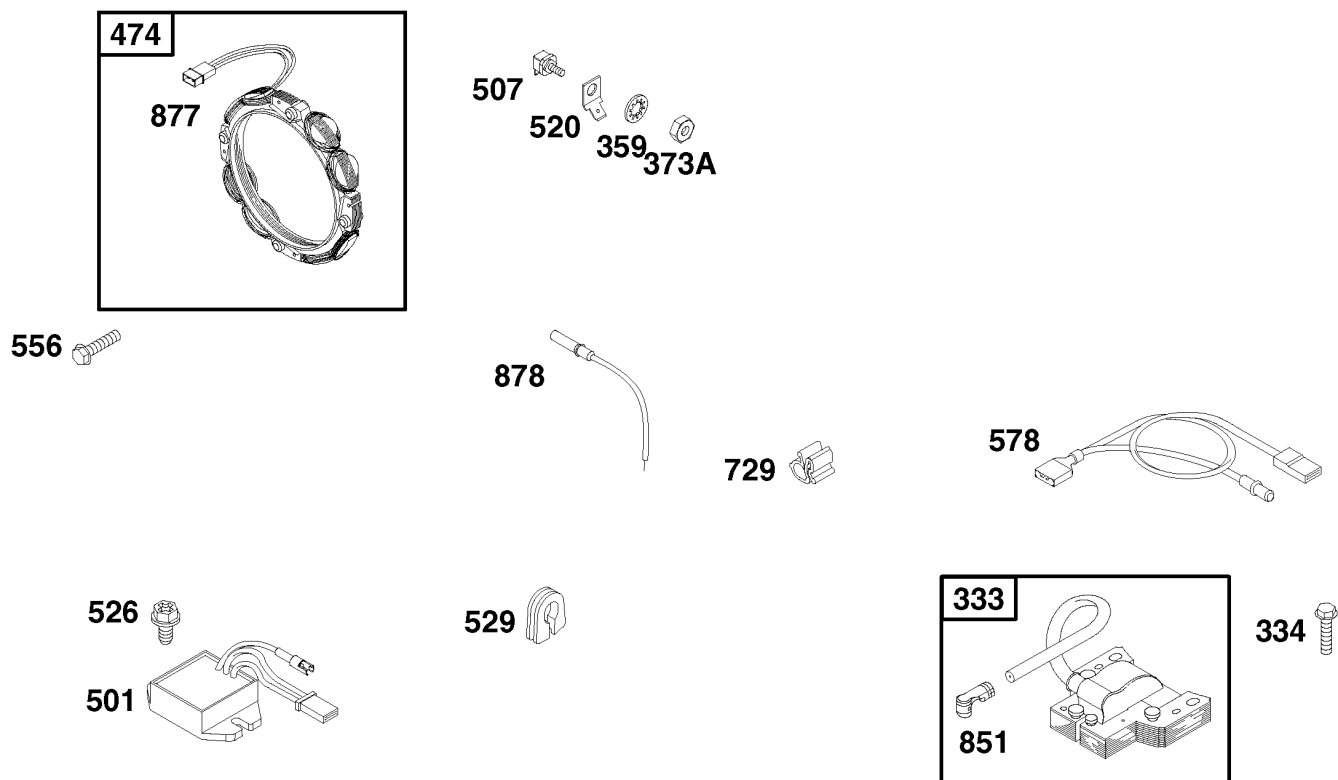 

Assemblies include all parts shown in frames.

Ignition Component Assembly Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
333	492341	1	Armature-Magneto ●
334	805407	1	Screw-HH ●
359	92791	1	Washer-Lock ●
373A	90576	1	Nut ●
556	805407	1	Screw-HH ●
474	393295	1	Alternator ●
501	394890	1	Regulator ●
507	398525	1	Insulator ●
520	93722	1	Terminal ●
526	805448	1	Screw ●
529	805641	1	Grommet ●
578	493792	1	Wire-Stop ●
729	280470	1	Clip-Wire ●
851	493880	1	Terminal-Spark Plug ●
877	399916	1	Connector-Wire, Alternator ●
878	393422	1	Harness-Alternator ●


● Obtain parts from www.briggsandstratton.com



<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
15	805059	1	Plug-Oil ■
87	805054	1	Seal-Governor Shaft ■
187	398367	1	Hose-Fuel ■
273	805058	1	Seal-O Ring ● ■
287	805247	1	Screw ■
385	693169	1	Screw ■
387	808656	1	Pump-Fuel ■
430	805030	1	Screw ■
468	805316	1	Seal-O Ring ● ■
479	805317	1	Screw-Hfh ■
523	693175	1	Dipstick ■
524	693172	1	Seal-Tube, Dipstick ■
525	693174	1	Tube-Dipstick ■
552	805412	1	Bushing-Governor Shaft ■
552A	805413	1	Bushing-Governor Shaft ■

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
565	805073	1	Stud-Hex. Drive ■
596	805057	1	Screw ■
601	93807	1	Clamp-Hose ■
615	806096	1	Pin-Cotter ■
616	807596	1	Fork-Governor ■
628	805025	1	Screw ■
657	805406	1	Screw ■
788	807685	1	Bracket-Pump ■
816	805449	1	Washer ■
988	805250	1	Gasket-Adapter ● ■
965	805654	1	Deflector-Oil ■
1017	807598	1	Screen-Oil Pump ■
1024	807644	1	Pump-Oil ■
1027	492932	1	Filter-Oil ■

 3350-407A

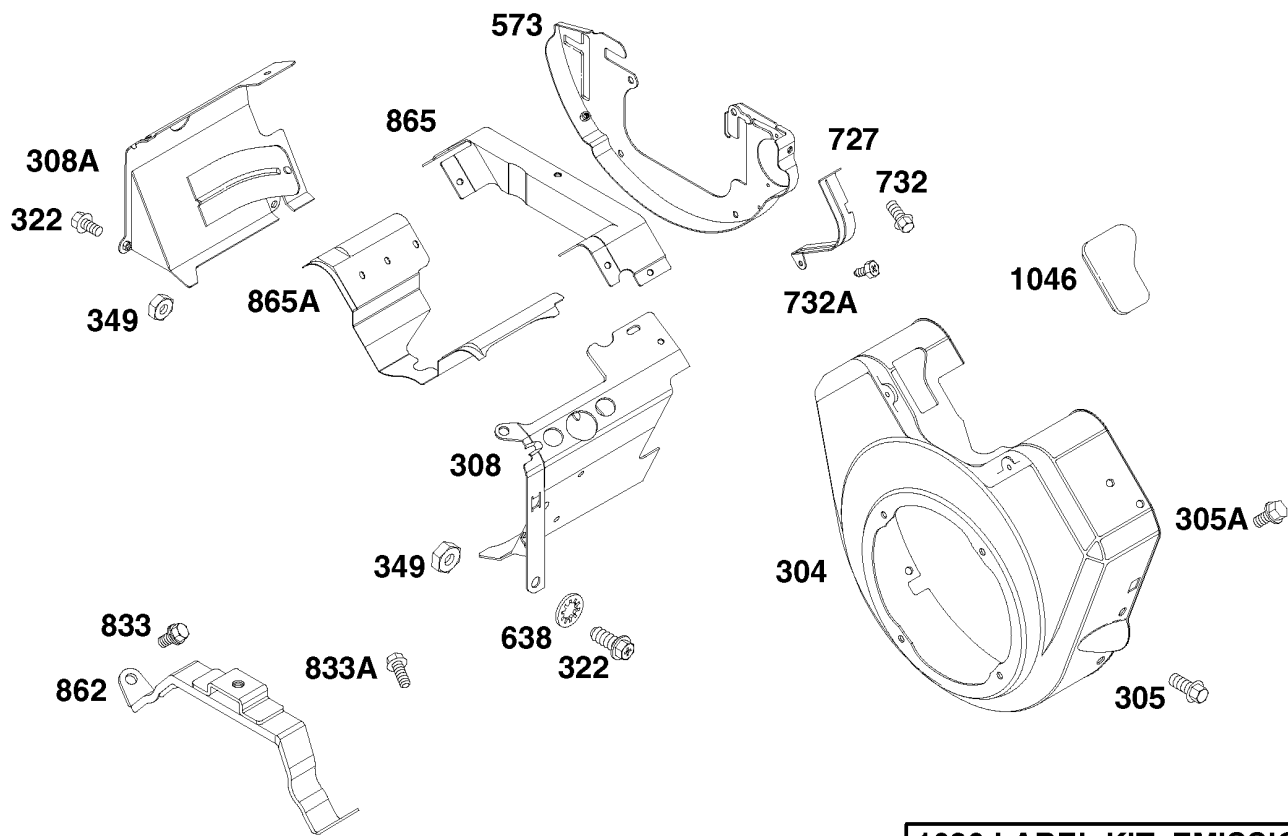




1036 LABEL KIT-EMISSION

Assemblies include all parts shown in frames.

Blower Housing Assembly Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
304	690929	1	Housing-Blower ●
305	805406	1	Screw ●
305A	805025	1	Screw ●
308	807870	1	Cover-Air Guide (Cyl.#1) ●
308A	808100	1	Cover-Air Guide (Cyl. #2) ●
322	805406	1	Screw ●
349	805383	1	Nut ●
573	807663	1	Plate-Back ●
638	806101	1	Washer-Lock ●
727	805505	1	Shield-Starter ●
732	805406	1	Screw ●
732A	805260	1	Screw ●
833	805406	1	Screw ●
833A	805902	1	Screw-Hex. (M6 X 16Mm) ●
862	807796	1	Bracket-Air Cleaner ●
865	807661	1	Cover-Air Guide ●
865A	805738	1	Cover-Air Guide ●
1036	499370	1	Label Kit-Emission ●
1046	805753	1	Plug-Blower Housing ●

   ● Obtain parts from www.briggsandstratton.com

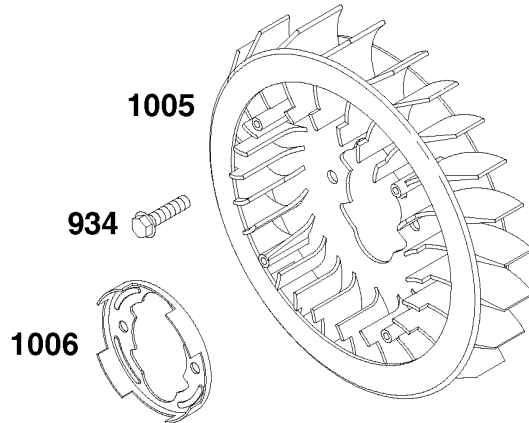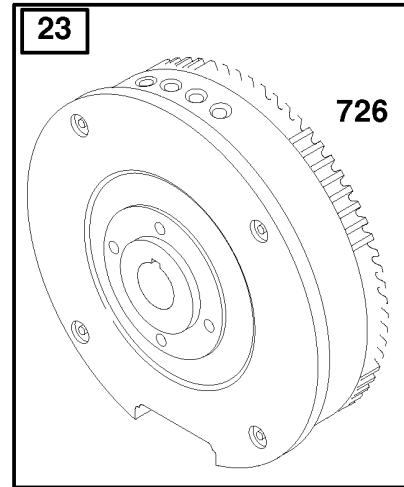


Assemblies include all parts shown in frames.

Flywheel Assembly Briggs and Stratton 350447-1116-E1

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
23	808129	1	Flywheel ●
332	806028	1	Nut-Hex. ●
363	19203	1	Puller-Flywheel ●
726	808162	1	Gear-Ring ●
934	94627	1	Screw ●
1005	808082	1	Fan-Flywheel ●
1006	224413	1	Retainer-Fan ●

 ● Obtain parts from www.briggsandstratton.com


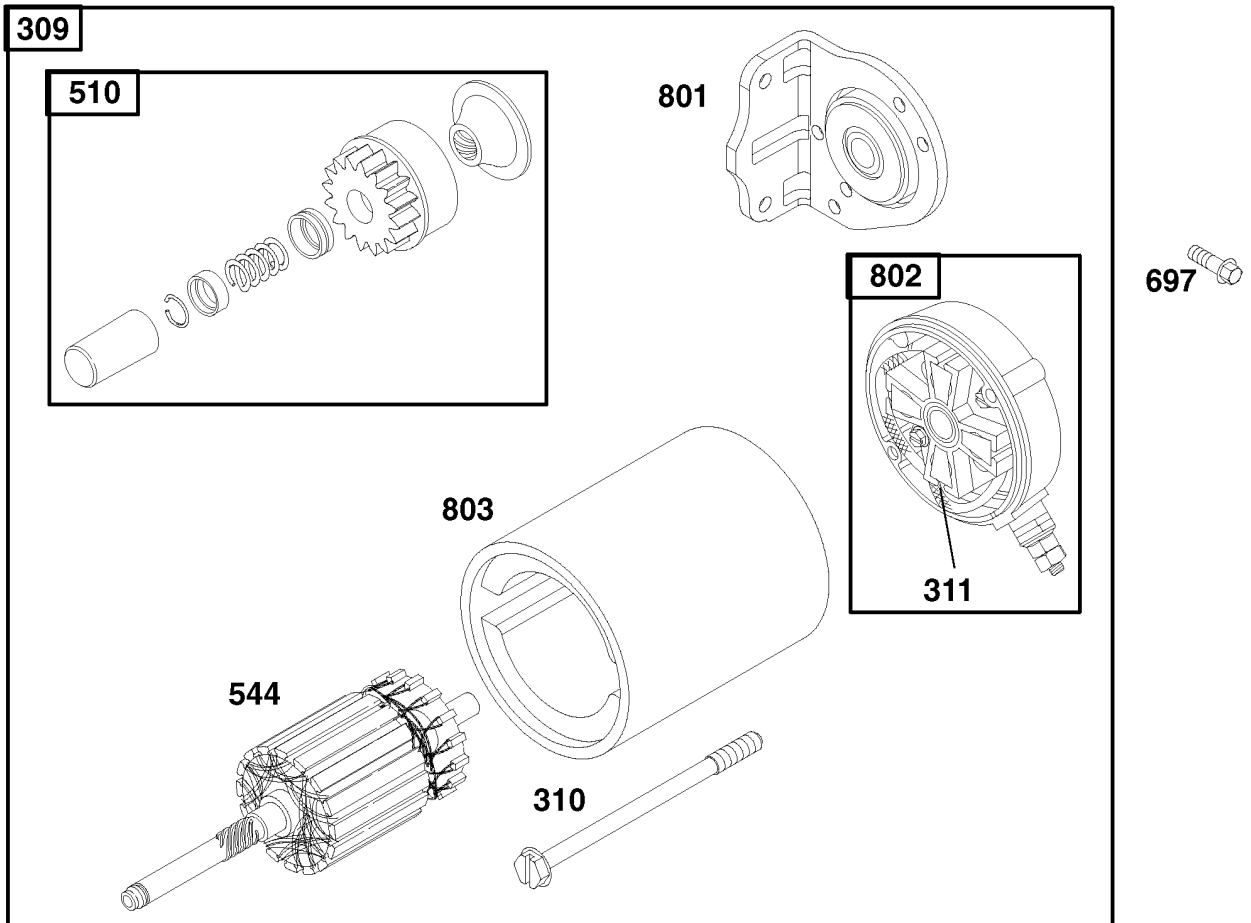


Assemblies include all parts shown in frames.

Starter Assembly Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
309	808106	1	Motor-Starter ●
310	496880	1	Bolt-Thru ●
311	496887	1	Brush Set ●
510	496881	1	Drive-Starter ●
544	496816	1	Armature-Starter ●
697	805247	1	Screw ●
801	496814	1	Cap-Drive ●
802	496813	1	Cap-End ●
803	496815	1	Housing-Starter ●

  ● Obtain parts from www.briggsandstratton.com

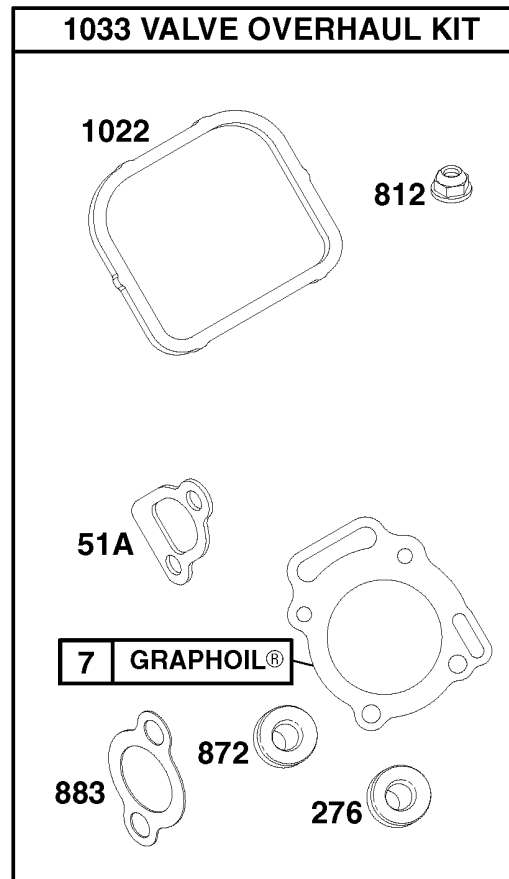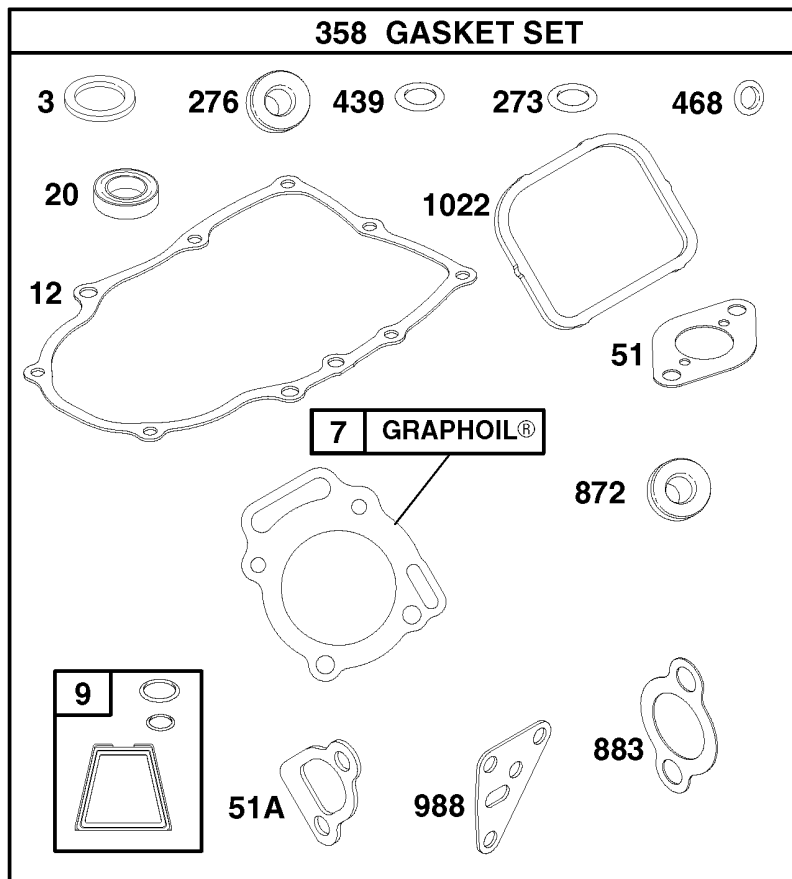

Assemblies include all parts shown in frames.


Gasket Kit Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
3	805101	1	Seal-Oil ●■
7	806086	1	Gasket-Cylinder Head ●▲■
9	807688	1	Gasket-Breather ●■
12	806190	1	Gasket-Crankcase ●■
20	805049	1	Seal-Oil ●■
51	805700	1	Gasket-Intake ●■
51A	805023	1	Gasket-Intake ●▲■
273	805058	1	Seal-O Ring ●■
276	805420	1	Washer ●▲■
358	808389	1	Gasket Set ■
439	806191	1	Seal-O-Ring ●■
468	805316	1	Seal-O Ring ●■
812	805019	1	Nut-Lock ▲■
872	805420	1	Washer ●▲■
883	805024	1	Gasket-Exhaust ●▲■
988	805250	1	Gasket-Adapter ●■
1022	806039	1	Gasket-Cover, Rocker ●▲■
1033	808391	1	Valve Overhaul Kit ■

● Included in Gasket Set-Part No. 808389

▲ Included in Valve Overhaul Kit-Part No. 808391

 ■ Obtain parts from www.briggsandstratton.com

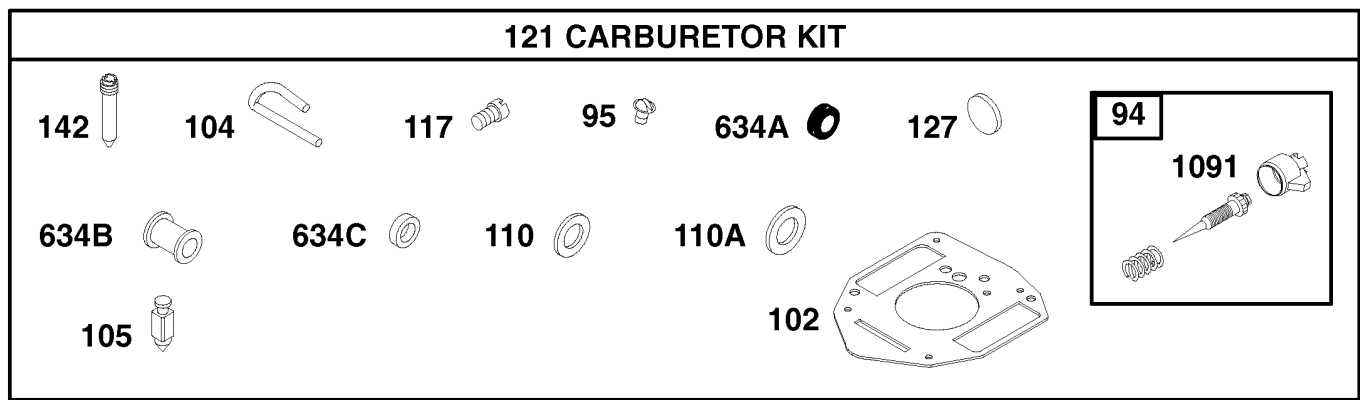

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Briggs and Stratton 350447-1116-E1

Ref.	Part Number	Qty.	Description
94	808399	1	Idle Mixture Kit ●■
95	805538	1	Screw ●■
102	805541	1	Gasket-Intake Elbow ●■
104	805545	1	Float Hinge Pin ●■
105	805547	1	Valve-Needle ●■
110	805549	1	Washer-Seal ●■
110A	806137	1	Washer-Sealing ●■
117	806126	1	Jet-Main ●■
121	808395	1	Carburetor Kit ■
127	805559	1	Plug-Welch ●■
142	806128	1	Nozzle-Carburetor ●■
634A	805544	1	Seal-Shaft ●■
634B	805543	1	Collar-Choke ●■
634C	806131	1	Seal-Shaft, Choke Throttle ●■
1091	805862	1	Cap-Limiter ●■

● Included in Carburetor Kit-Part No. 808395

■ Obtain parts from www.briggsandstratton.com

Notes:

Notes:

Notes:



Count on it.