



Count on it.

Form No. 3368-870 Rev A

Parts Catalog

Fifth-Wheel Chassis Mount Kit

ProPass 200 Top Dresser

Model No. 44715

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

 
TTH: torx truss head

Contents

Frame, Jack and Wheel Assembly 4

Walking Beam Assembly No. 119-6930 5

Hitch Assembly..... 6

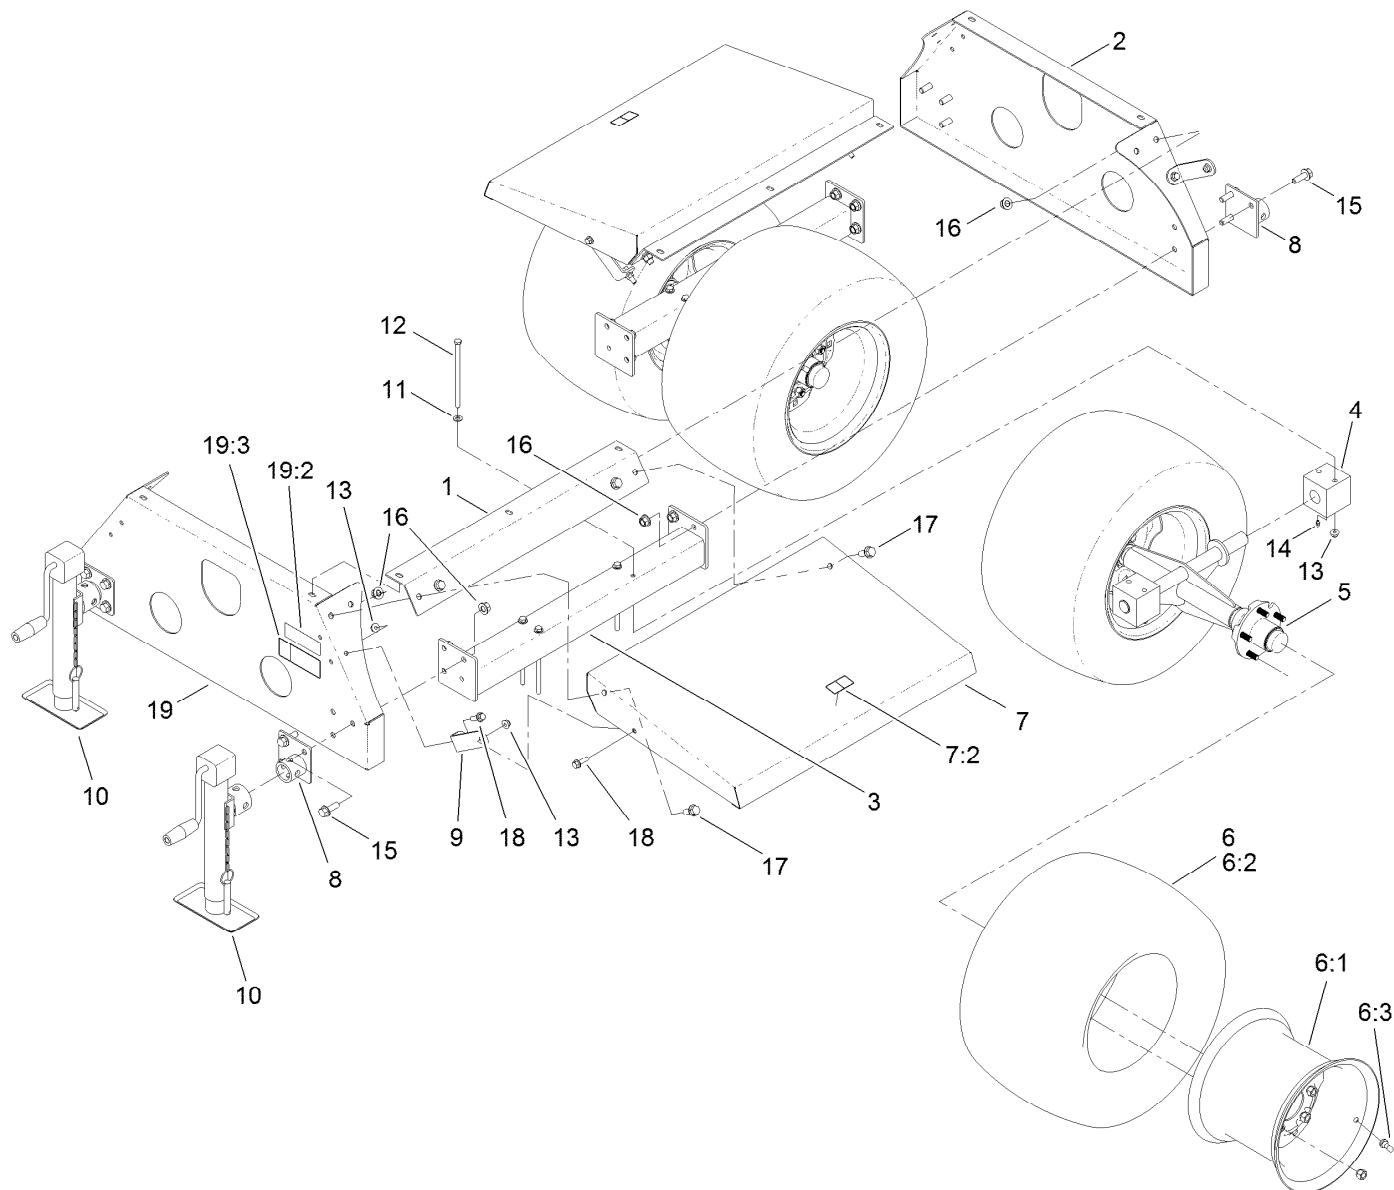


Frame, Jack and Wheel Assembly

Ref.	Part Number	Qty.	Description
1	T36052305-01	2	Member-Cross, Top
2	T36052300-01	1	Brace-Frame
3	T36052340-01	2	Cross Member ASM
4	T36032010	4	Bearing-Beam, Walking
5	119-6930	2	Walking Beam ASM
6		4	Tire And Wheel ASM (Ultra)
6:1	T54011017	1	Wheel
6:2	T68021060	1	Tire
6:3	232-27	1	Stem-Valve
7	T36052320	2	Fender ASM
7:2	119-6807	1	Decal-Warning, Do Not Step
8	T36053315-01	4	Mount-Jack
9	T36052325-01	4	Strut-Fender, Short


Ref.	Part Number	Qty.	Description
10	T0000-3423	2	Jack-Sidewind
11	3256-24	8	Washer-Flat
12	323-36	8	Screw-HH
13	104-8301	16	Nut-Flange, NI
14	302-5	4	Fitting-Grease
15	100-6116	12	Screw-HHF
16	99-5107	20	Nut-Lock
17	3234-38	8	Screw-HHF
18	3234-24	8	Screw-HHF
19	120-0995	1	Front Brace ASM
19:2	119-6827	1	Decal-Weight, Truckster
19:3	119-6812	1	Decal-Warning, Tipping Hazard

 ● Not serviced separately

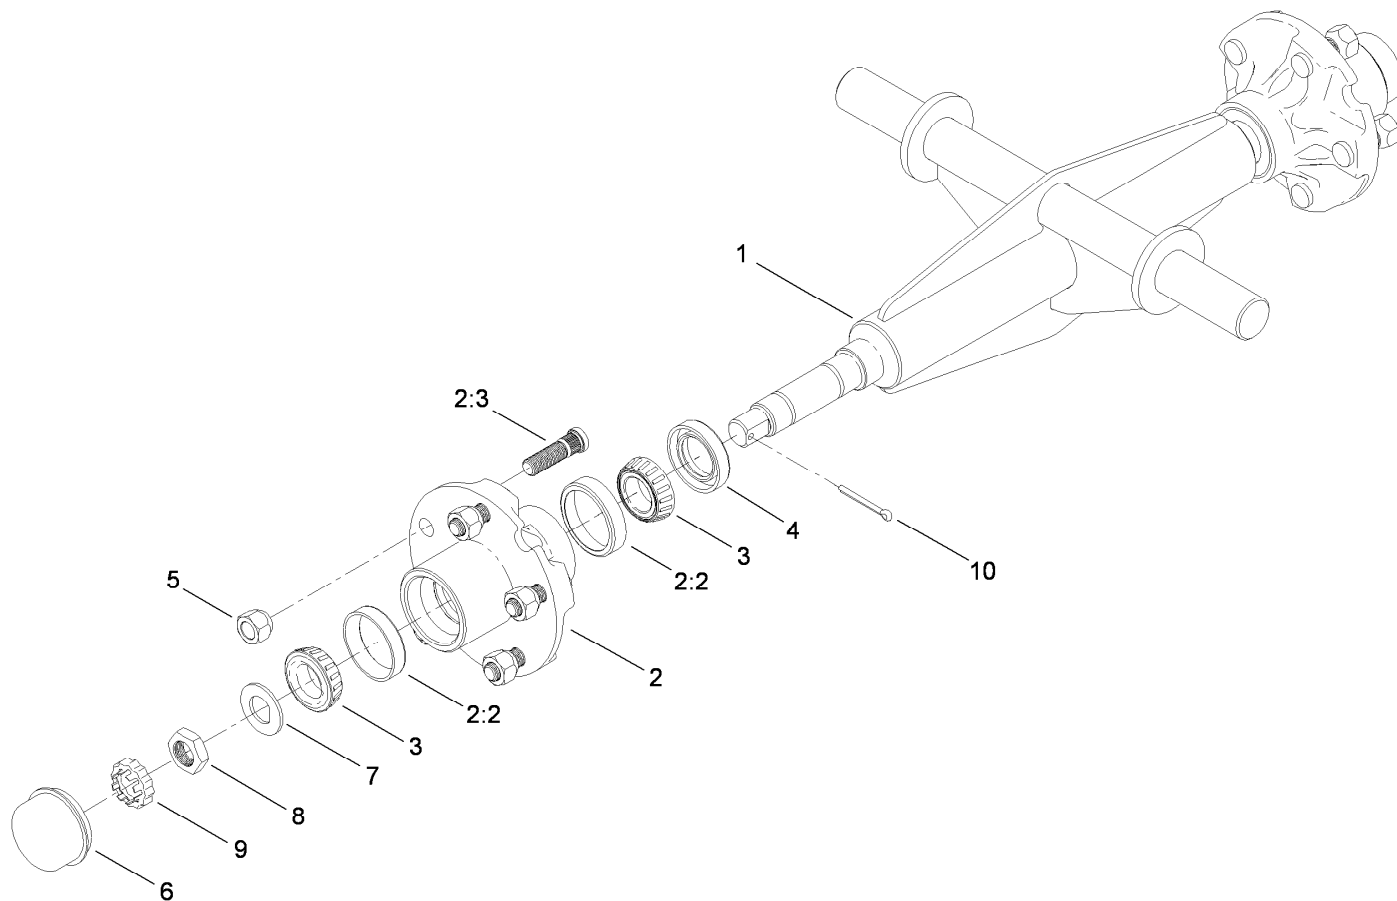

Walking Beam Assembly No. 119-6930

Ref.	Part Number	Qty.	Description
1	119-6932	1	Beam-Walking
2	117-8963	2	Hub ASM
2:2	254-72	2	Bearing-Cup, Tapered
2:3	114-3918	5	Stud-Wheel
3	254-94	4	Bearing-Cone, Tapered
4	112-1690	2	Seal-Oil
5	242-50	10	Nut-Lug
6	241-119	2	Cap-Dust
7	117-8259	2	Washer-Spindle
8	117-8260	2	Nut
9	93-0307	2	Nut-Lock, Retainer
10	3272-18	2	Pin-Cotter

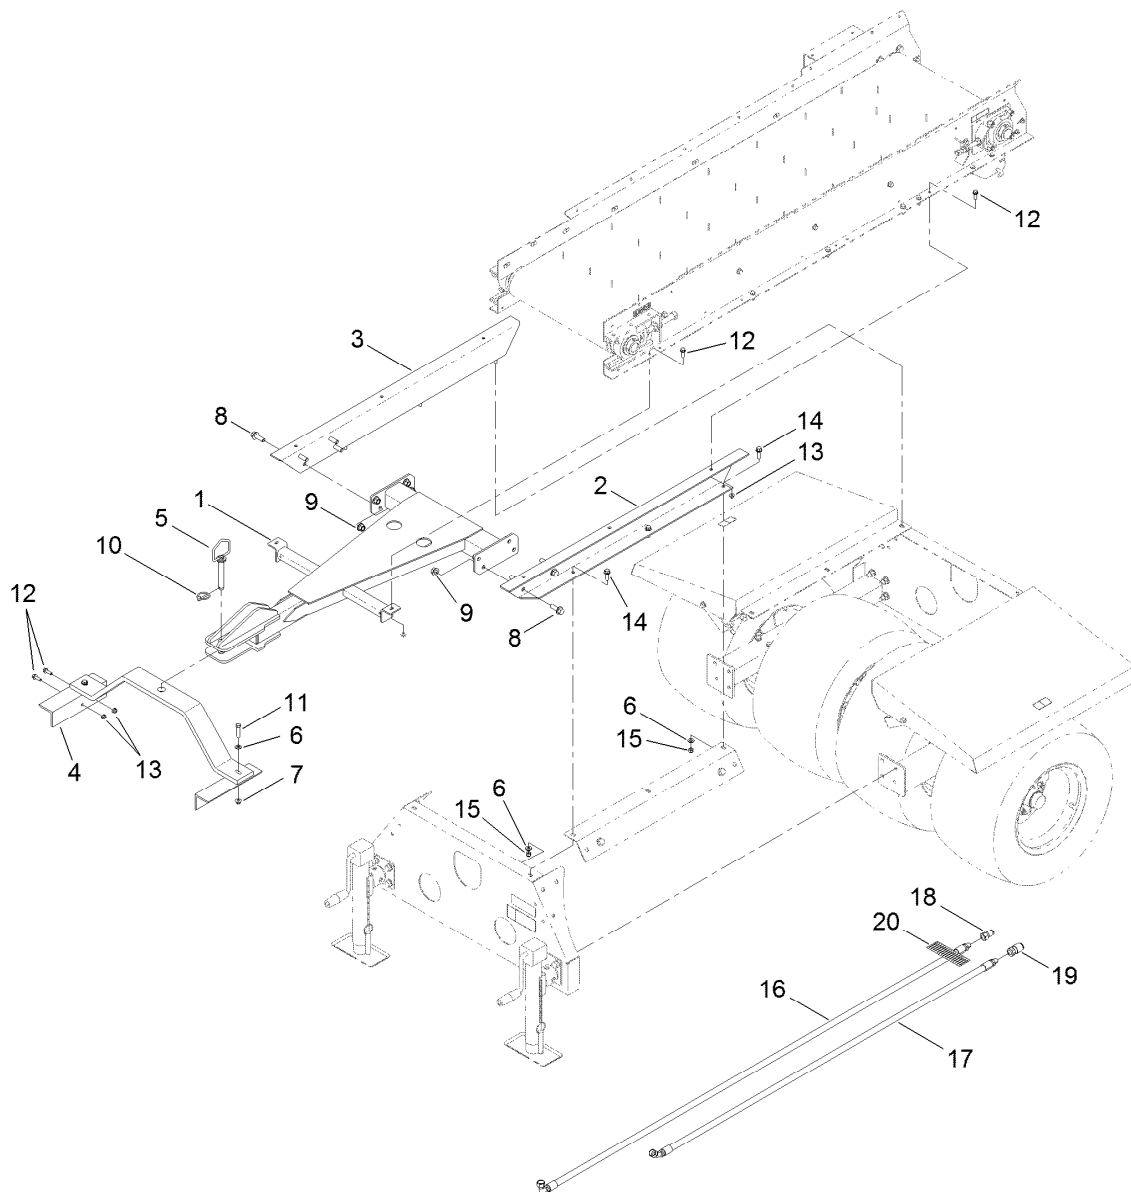 

Hitch Assembly

Ref.	Part Number	Qty.	Description
1	T36053310-01	1	Hitch-5Th Wheel
2	T36053330-01	1	Rail-5Th Wheel, LH
3	T36053335-01	1	Rail-5Th Wheel, RH
4	T36053311-01	1	Receiver-Direct Connect
5	T50991348	1	Pin-Hitch
6	3256-24	8	Washer-Flat
7	104-8301	2	Nut-Flange, NI
8	100-6116	8	Screw-HHF
9	99-5107	8	Nut-Lock
10	92-1298	1	Pin-Lynch
11	323-9	2	Screw-HH

Ref.	Part Number	Qty.	Description
12	3234-29	12	Screw-HHF
13	104-8300	12	Nut-Flange, NI
14	3234-24	6	Screw-HHF
15	3296-39	6	Nut-Lock, NI
16	120-0932	1	HYD Hose ASM
17	120-0933	1	HYD Hose ASM
18	T0001-7031	1	Coupler-Quick, 3/8 Male, Dripless
19	T0001-7030	1	Coupler-Quick, 3/8 Female, Dripless
20	119-6841	1	Decal-Directional Arrows

Notes:



Count on it.