



Count on it.

Form No. 3368-871 Rev A

Parts Catalog

MH-400 Conveyor/Swivel/Caddy

Model No. 44938

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Funnel and Swivel Plate Assembly 4

Attachment Clamp Assembly No. T36015800..... 5

Belt Drive Assembly..... 6

Hydraulic Hose and Guard Assembly 8


Caddy Assembly..... 9

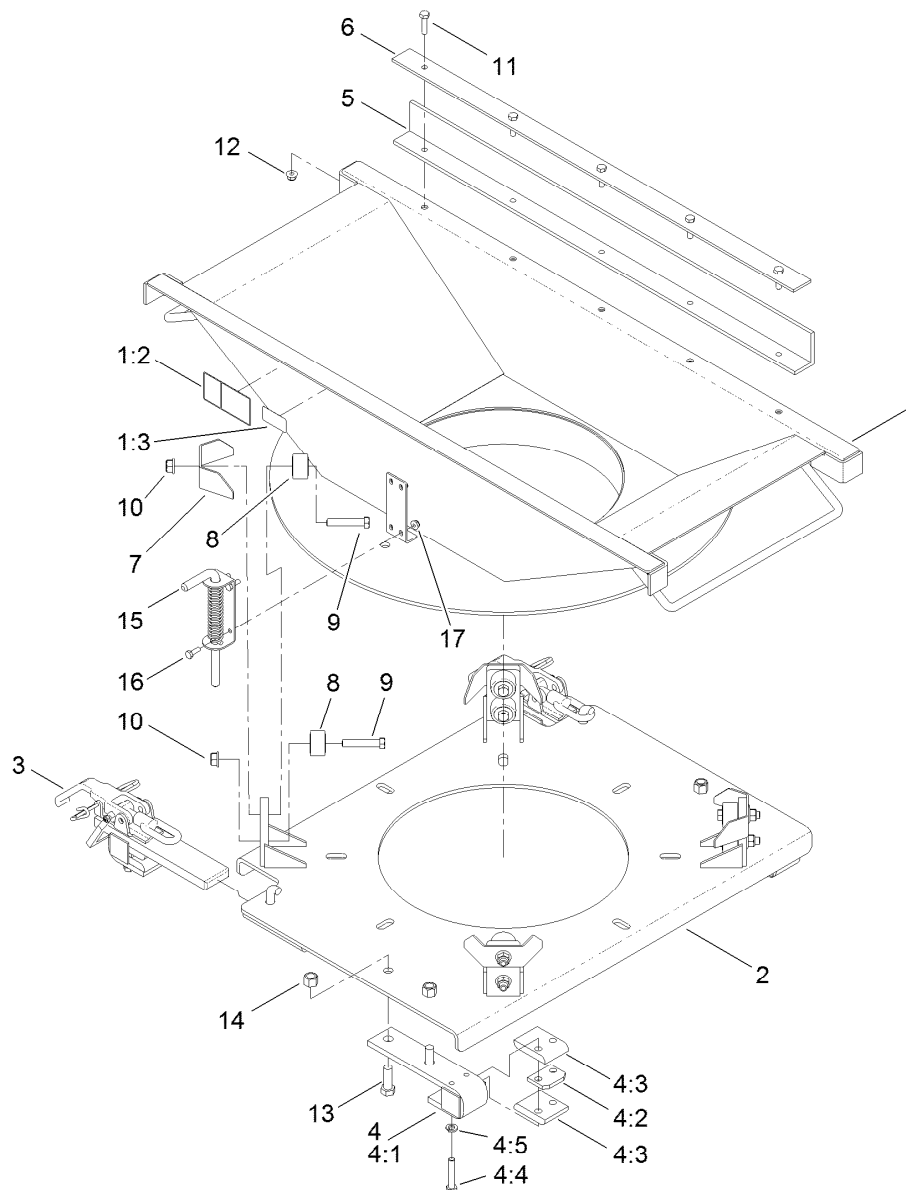

Funnel and Swivel Plate Assembly


Ref.	Part Number	Qty.	Description
1	120-0915	1	Funnel ASM
1:2	119-6821	1	Decal-Cross Conveyor
1:3	119-6810	1	Decal-Propass, Lift
2	T36027030-01	1	Swivel Plate ASM
3	T36015800	2	Attachment Clamp ASM
4	T36027020	2	Slide Bracket ASM
4:1	120-0905-01	1	Bracket-Slide
4:2	T01-13489B	1	Tab-Spacer
4:3	T36015200	2	Bar-Bearing
4:4	323-10	2	Screw-HH
4:5	3253-21	2	Washer-Lock
5	T36027060	1	Scraper-Belt, Rubber

Ref.	Part Number	Qty.	Description
6	T36027070-01	1	Retainer-Belt Scraper
7	T36027040-01	4	Plate-Scraper
8	T60118160	8	Follower-Roller
9	324-9	8	Screw-HH
10	114-8417	8	Nut-HF, NI
11	322-6	5	Screw-HH
12	104-8300	5	Nut-Flange, NI
13	325-6	4	Screw-HH
14	3296-23	4	Nut-Lock, NI
15	T62021030	1	Latch-Spring
16	321-4	4	Screw-HH
17	104-7201	4	Nut-HF

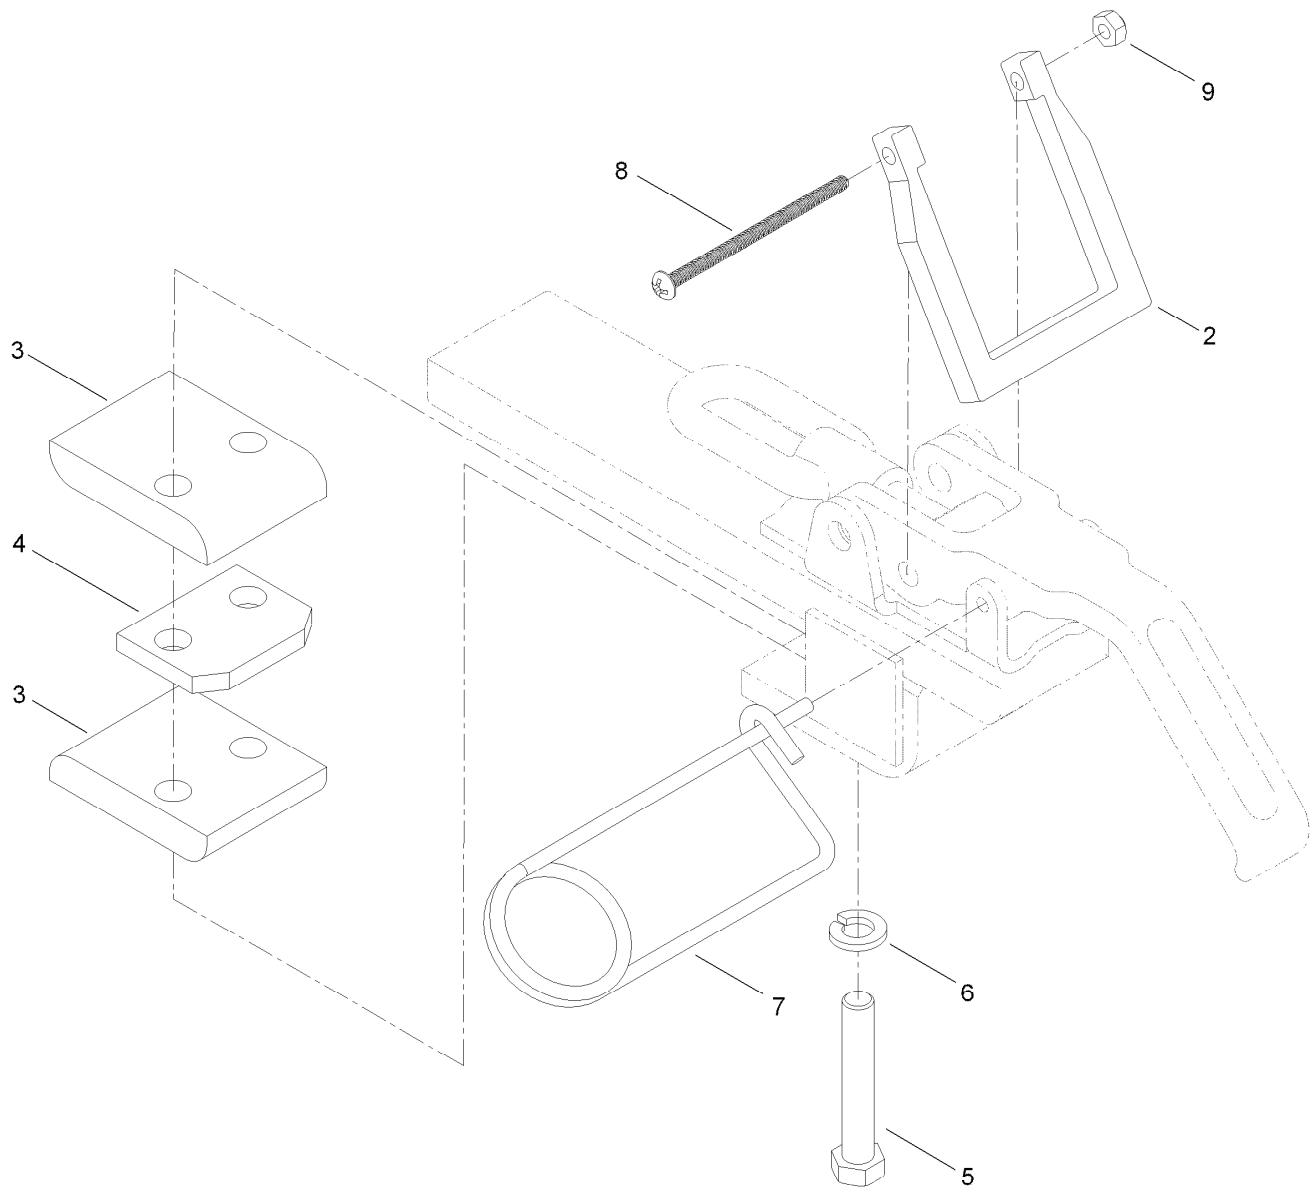

Attachment Clamp Assembly No. T36015800


Ref.	Part Number	Qty.	Description
2	T36015794	1	Lock-Attachment Clamp
3	T36015200	2	Bar-Bearing
4	T01-13489B	1	Tab-Spacer
5	323-11	2	Screw-HH
6	3253-21	2	Washer-Lock
7	T0000-3247	1	Pin-Lock
8	120-0884	1	Screw-PRH
9	3296-2	1	Nut-Lock, NI

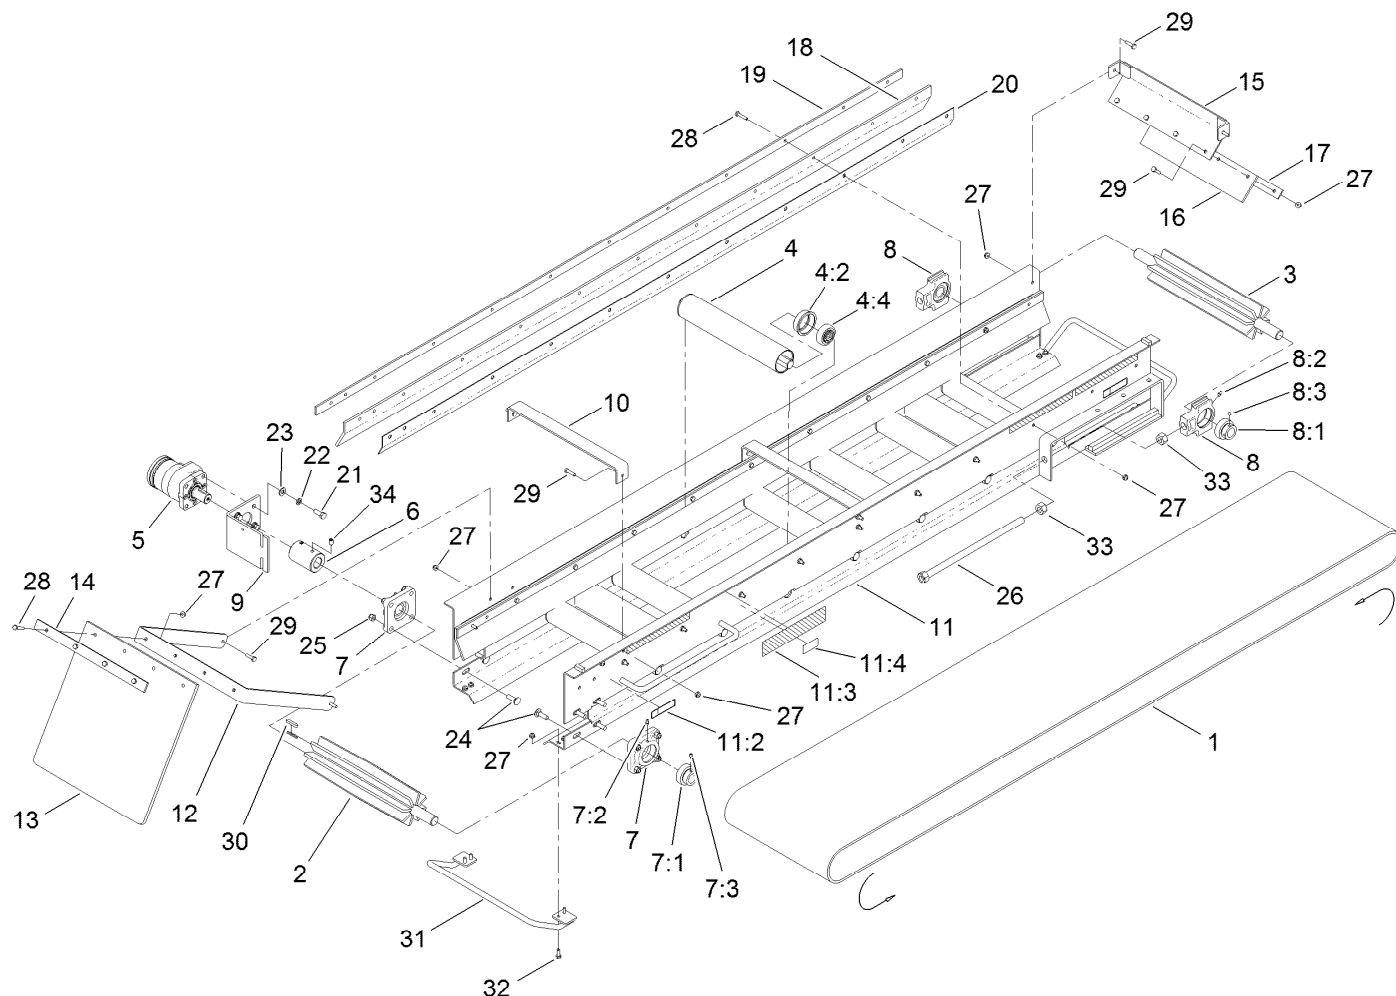

Belt Drive Assembly

Ref.	Part Number	Qty.	Description
1	T60191240	1	Belt-Endless
2	T36022010-03	1	Drive Roller ASM
3	T36022012-03	1	Idler Roller ASM
4	T36021156	7	Belt Roller ASM
4:2	T36011685	2	Insert-Roller
4:4	T60111000	2	Bearing-Ball
5	T56011022	1	HYD Motor ASM
6	120-0908	1	Coupler-Rigid
7	T60116160	2	Flange-4 Bolt
7:1	120-0907	1	Bearing-Ball
7:2	302-19	1	Fitting-Grease
7:3	3245-35	1	Screw-Set
8	T60114110	2	Take-Up 1
8:1	120-0907	1	Bearing-Ball
8:2	302-19	1	Fitting-Grease
8:3	3245-35	1	Screw-Set
9	T36022032-01	1	Bracket-Mount, Motor
10	T36022060-01	2	Bar-Spacer
11	120-0916	1	Conveyor ASM
11:2	119-0217	4	Decal-Danger
11:3	119-6849	8	Decal-Caution Strip


Ref.	Part Number	Qty.	Description
11:4	119-6810	1	Decal-Propass, Lift
12	T36021050-01	1	Bracket-Deflector
13	T36022002	1	Deflector-Rubber
14	T36021040-01	1	Bar-Deflector, Cross Conveyor
15	120-0912-01	1	Seal Bracket ASM
16	T36021170	1	Skirt-Rubber, Rear
17	T36021060-01	1	Bar-Seal
18	T36021180	2	Skirt-Rubber, Side
19	T36021190-01	2	Retainer-Skirt
20	T36021195	2	Support-Skirt
21	323-6	4	Screw-HH
22	3253-21	4	Washer-Lock
23	3256-24	4	Washer-Flat
24	3231-25	8	Screw-CARR
25	3296-39	8	Nut-Lock, NI
26	T36021110	2	Tensioner Rod ASM
27	104-7201	40	Nut-HF
28	321-8	21	Screw-HH
29	321-6	12	Screw-HH
30	T36022014	1	Key-Driver

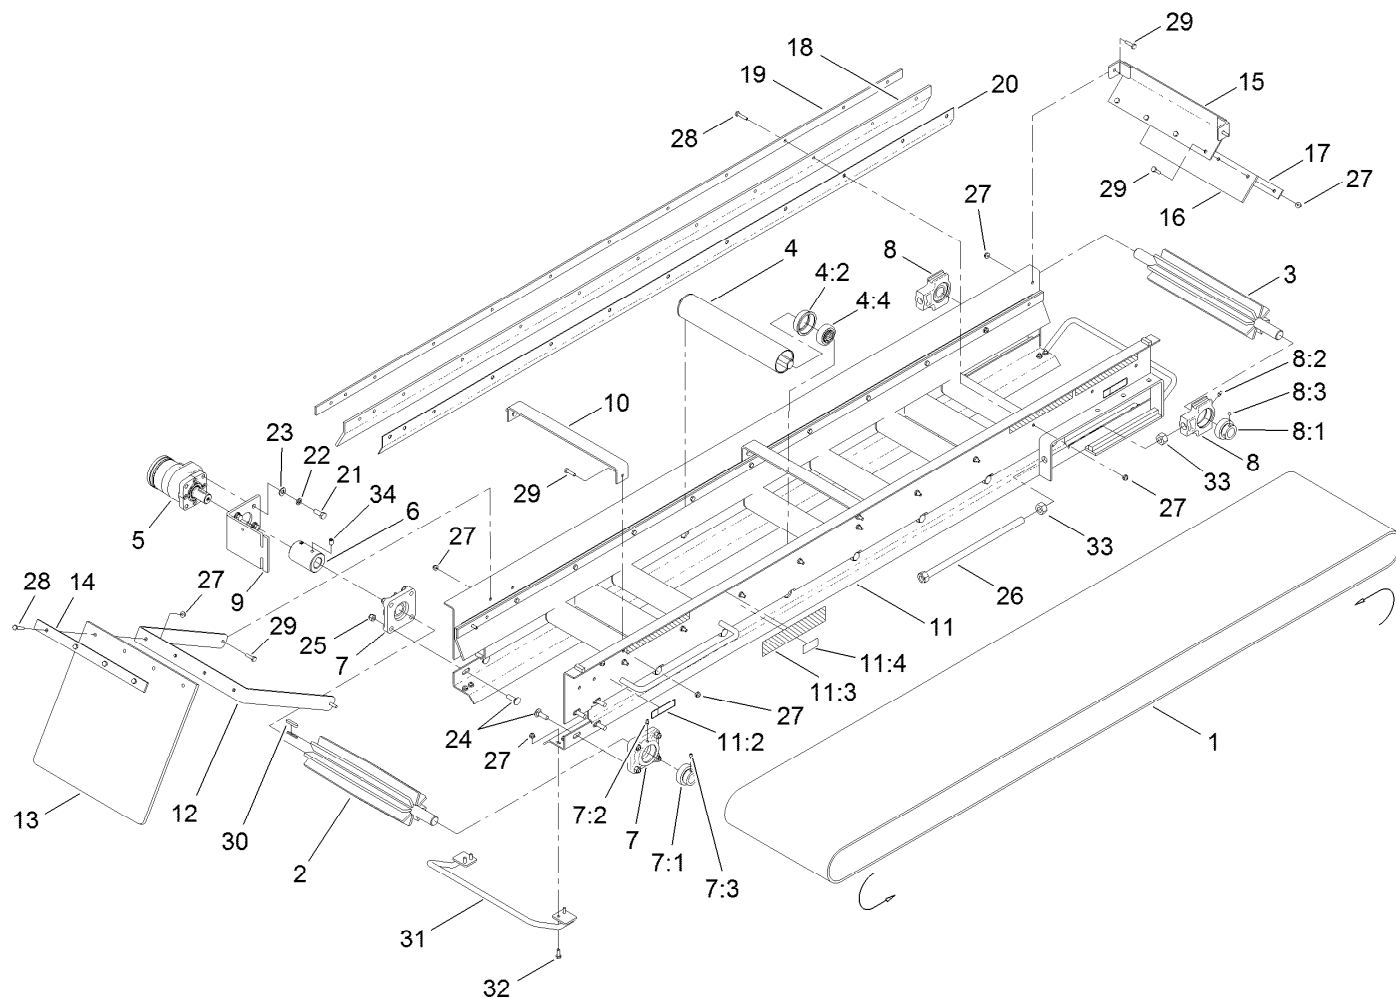

Belt Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
31	T0000-7831	2	Handle ASM
32	321-4	8	Screw-HH


Ref.	Part Number	Qty.	Description
33	3217-11	4	Nut-Hex
34	3247-4	2	Screw-Set

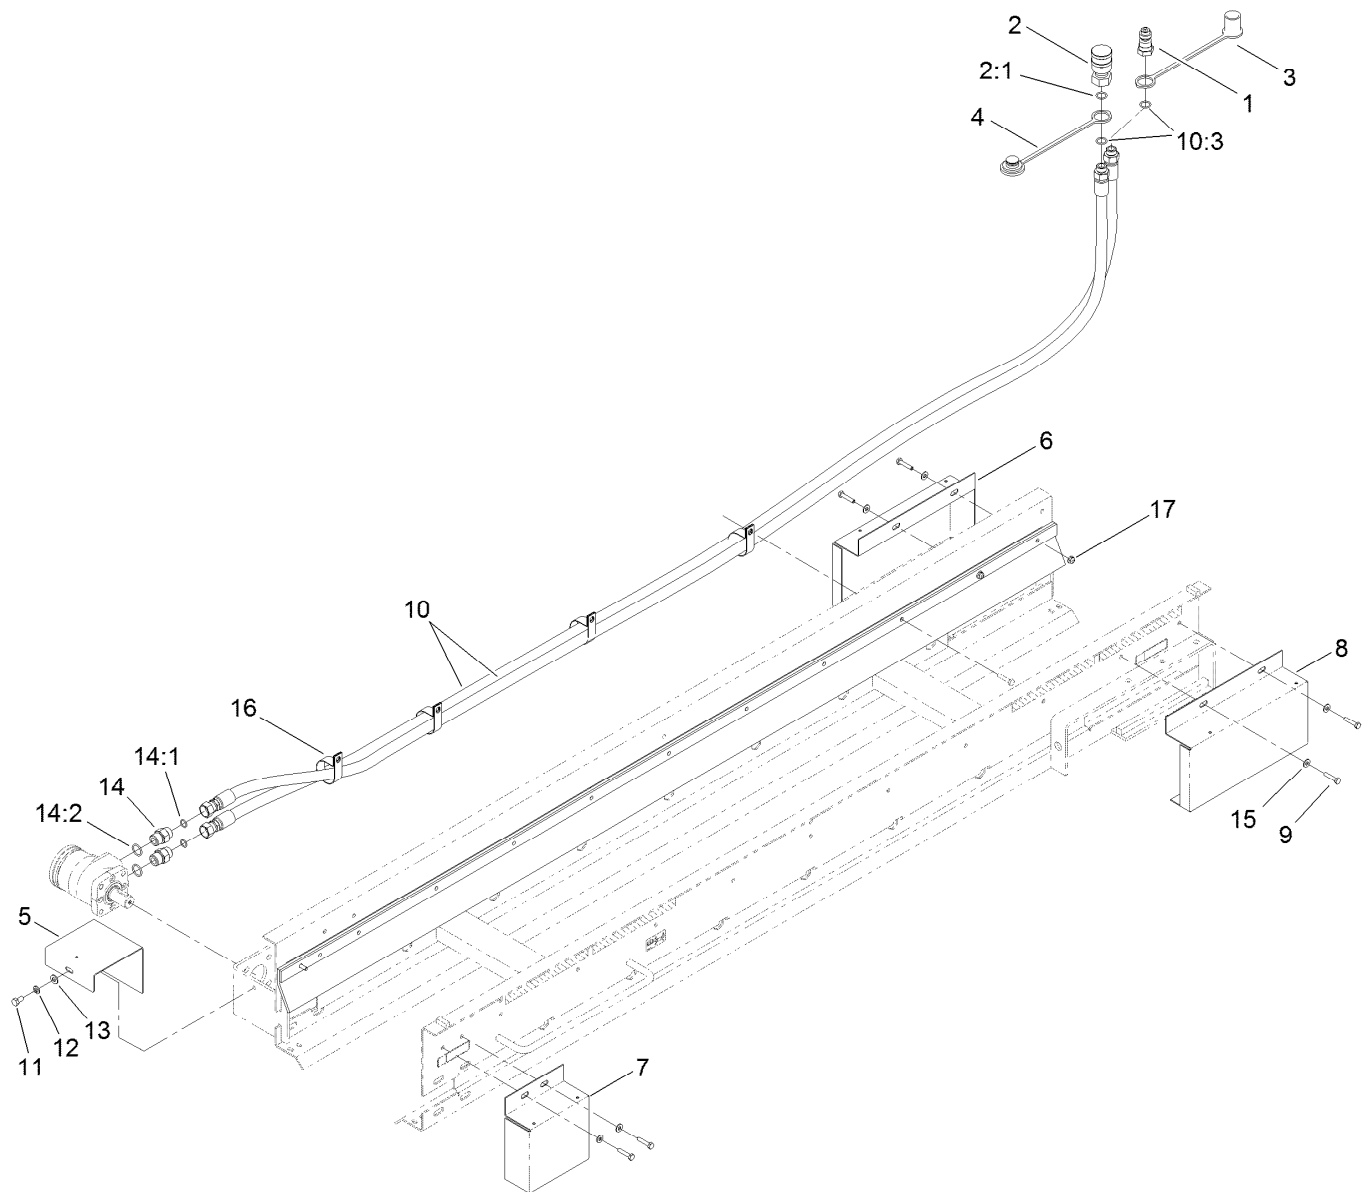

Hydraulic Hose and Guard Assembly

Ref.	Part Number	Qty.	Description
1	98-4698	1	Male-Disconnect, Quick
2	98-4699	1	Female-Disconnect, Quick
2:1	100-4165	1	Seal Kit
3	T56152152	1	Cap-Quick Connect, 1/2 Inch
4	T56152150	1	Plug-Quick Connect, 1/2 Inch
5	T36022090-03	1	Guard-Mount, Motor
6	T36022070-03	1	Guard-Tensioner, LH
7	T36022080-03	1	Guard-Idler
8	T36022075-03	1	Guard-Tensioner, RH
9	321-8	10	Screw-HH

Ref.	Part Number	Qty.	Description
10	120-0914	2	Hose-HYD
10:3	237-79	1	O-Ring
11	322-2	1	Screw-HH
12	3253-4	1	Washer-Lock
13	3256-23	1	Washer-Flat
14	340-6	2	Fitting-HYD, Straight
14:1	237-30	1	O-Ring
14:2	237-80	1	O-Ring
15	3256-22	6	Washer-Flat
16	2412-96	4	Clamp-R
17	104-7201	8	Nut-HF

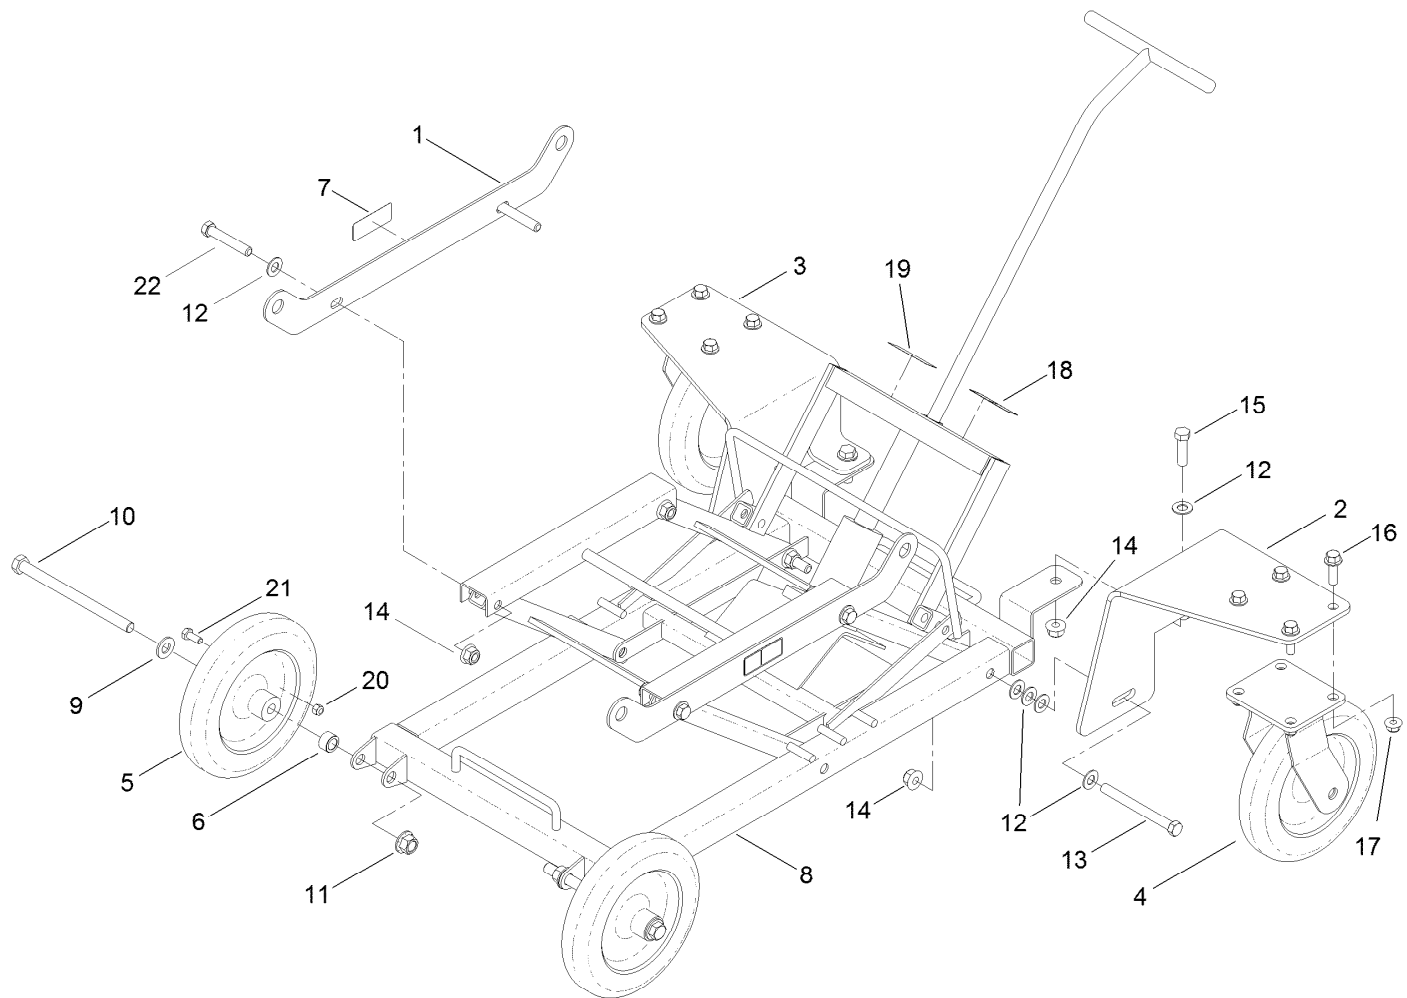

Caddy Assembly

Ref.	Part Number	Qty.	Description
1	T36026200	2	Bracket-Tie Down
2	T36026210	1	Bracket-Swivel Wheel, LH
3	T36026220	1	Bracket-Swivel Wheel, RH
4	T0002-0499	2	Wheel-8 Inch, Single Swivel
5	T55012015	2	Wheel-8 Inch, Flat Face
6	T36026230	2	Spacer-Wheel
7	119-6850	2	Decal-Warning, Caddy
8	T0001-9725	1	Jack-Option
9	3256-26	2	Washer-Flat
10	325-37	2	Screw-HH
11	99-5107	2	Nut-Lock

Ref.	Part Number	Qty.	Description
12	3256-25	14	Washer-Flat
13	324-20	2	Screw-HH
14	114-8417	8	Nut-HF, NI
15	324-6	2	Screw-HH
16	3234-24	8	Screw-HHF
17	104-8301	8	Nut-Flange, NI
18	119-6851	1	Decal-Warning, No Riders
19	119-6834	1	Decal-Max Load, Caddy
20	3296-29	16	Nut-Lock, NI
21	322-3	16	Screw-HH
22	324-13	4	Screw-HH

Notes:

Notes:



Count on it.