



**Count on it.**

# Parts Catalog

## 53cm Recycler® Lawn Mower

Model No. 20995—Serial No. 290000001 and Up

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquid Propane

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents


Housing, Rear Cover and Front Axle Assembly ..... 4

Rear Axle and Transmission Assembly ..... 5

Engine and Blade Assembly..... 6

2-Bail Handle Assembly ..... 7

Rear Bag Assembly ..... 8

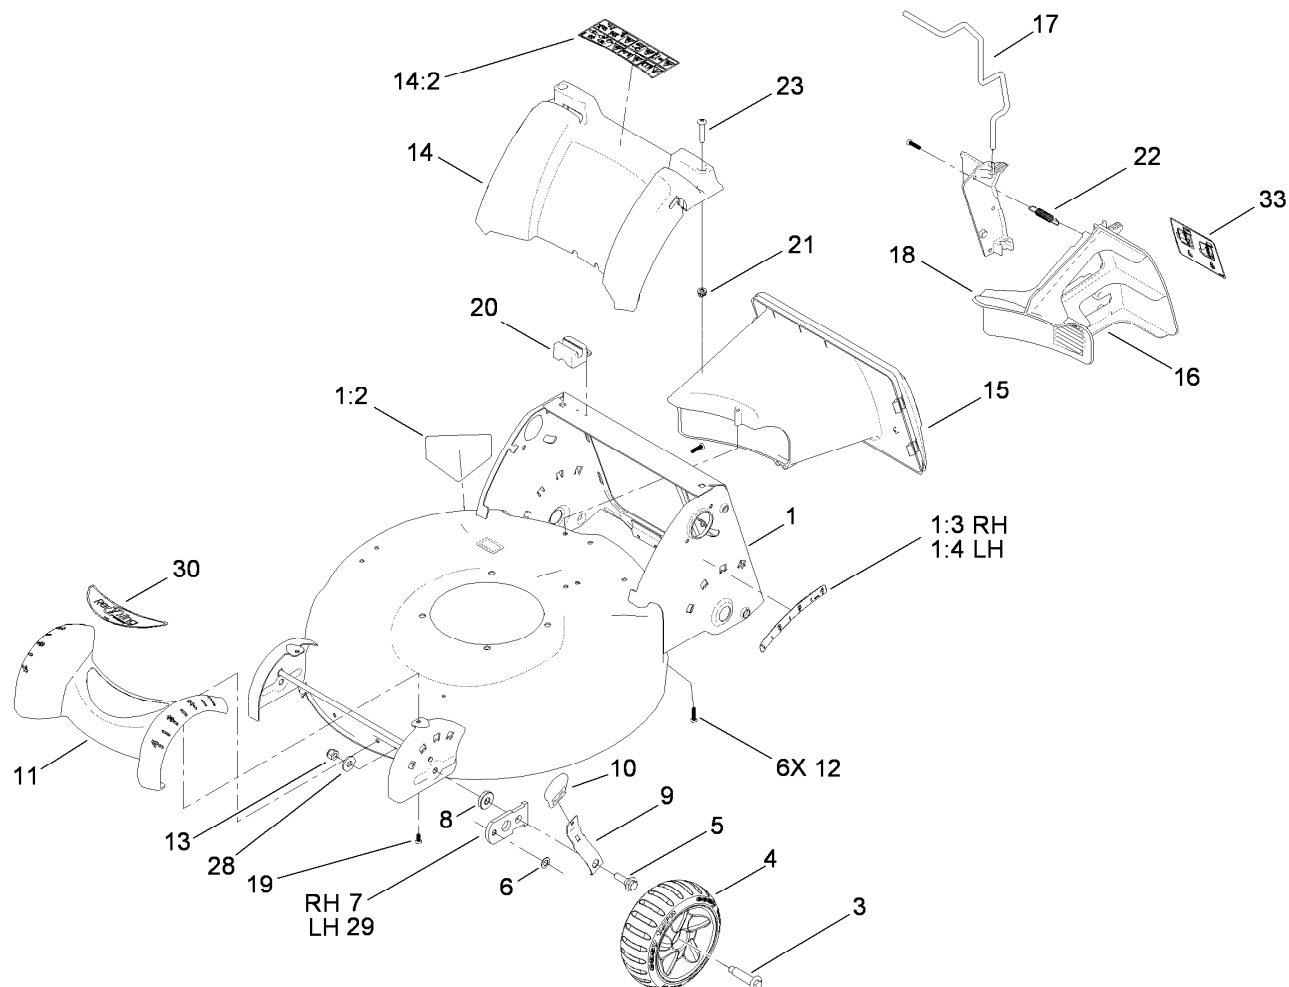


## Housing, Rear Cover and Front Axle Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 117-4193    | 1    | Deck Baffle ASM        |
| 1:2  | 112-8760    | 1    | Decal-Danger           |
| 1:3  | 108-7450    | 1    | Decal-HOC, RH          |
| 1:4  | 108-7451    | 1    | Decal-HOC, LH          |
| 3    | 614650      | 2    | Bolt-Shoulder          |
| 4    | 112-1548    | 2    | 7 Inch Front Wheel ASM |
| 5    | 614672      | 2    | Bolt-Shoulder          |
| 6    | 40-1940     | 2    | Washer                 |
| 7    | 107-3877    | 1    | Arm-Pivot, RH          |
| 8    | 92-4890     | 2    | Washer                 |
| 9    | 107-3878    | 2    | Arm-Spring             |
| 10   | 110-0549    | 2    | Knob-HOC               |
| 11   | 107-3926    | 1    | Cover-Front            |
| 12   | 108-7476    | 8    | Screw-Plastite         |
| 13   | 3296-39     | 2    | Nut-Lock, NI           |
| 14   | 115-3177    | 1    | Cover-Rear             |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 14:2 | 114-2820    | 1    | Decal-Warning     |
| 15   | 110-9455    | 1    | Tunnel            |
| 16   | 110-9446    | 1    | Plug-Mulch, LH    |
| 17   | 110-9448    | 1    | Latch-Plug, Mulch |
| 18   | 110-9447    | 1    | Plug-Mulch, RH    |
| 19   | 108-7475    | 2    | Screw-Plastite    |
| 20   | 108-0993    | 1    | Module-Switch     |
| 21   | 94-1610     | 2    | Nut-Clip          |
| 22   | 110-9458    | 1    | Spring-Extension  |
| 23   | 108-0965    | 2    | Screw-PTH         |
| 28   | 80-6990     | 2    | Washer-Hardened   |
| 29   | 108-1044    | 1    | Arm-Pivot, LH     |
| 30   | 117-5916    | 1    | Decal-Front       |
| 33   | 110-9457    | 1    | Decal-Plug, Mulch |
| 39   | 110-9468    | 1    | Mulch Plug ASM ●  |


● Not illustrated

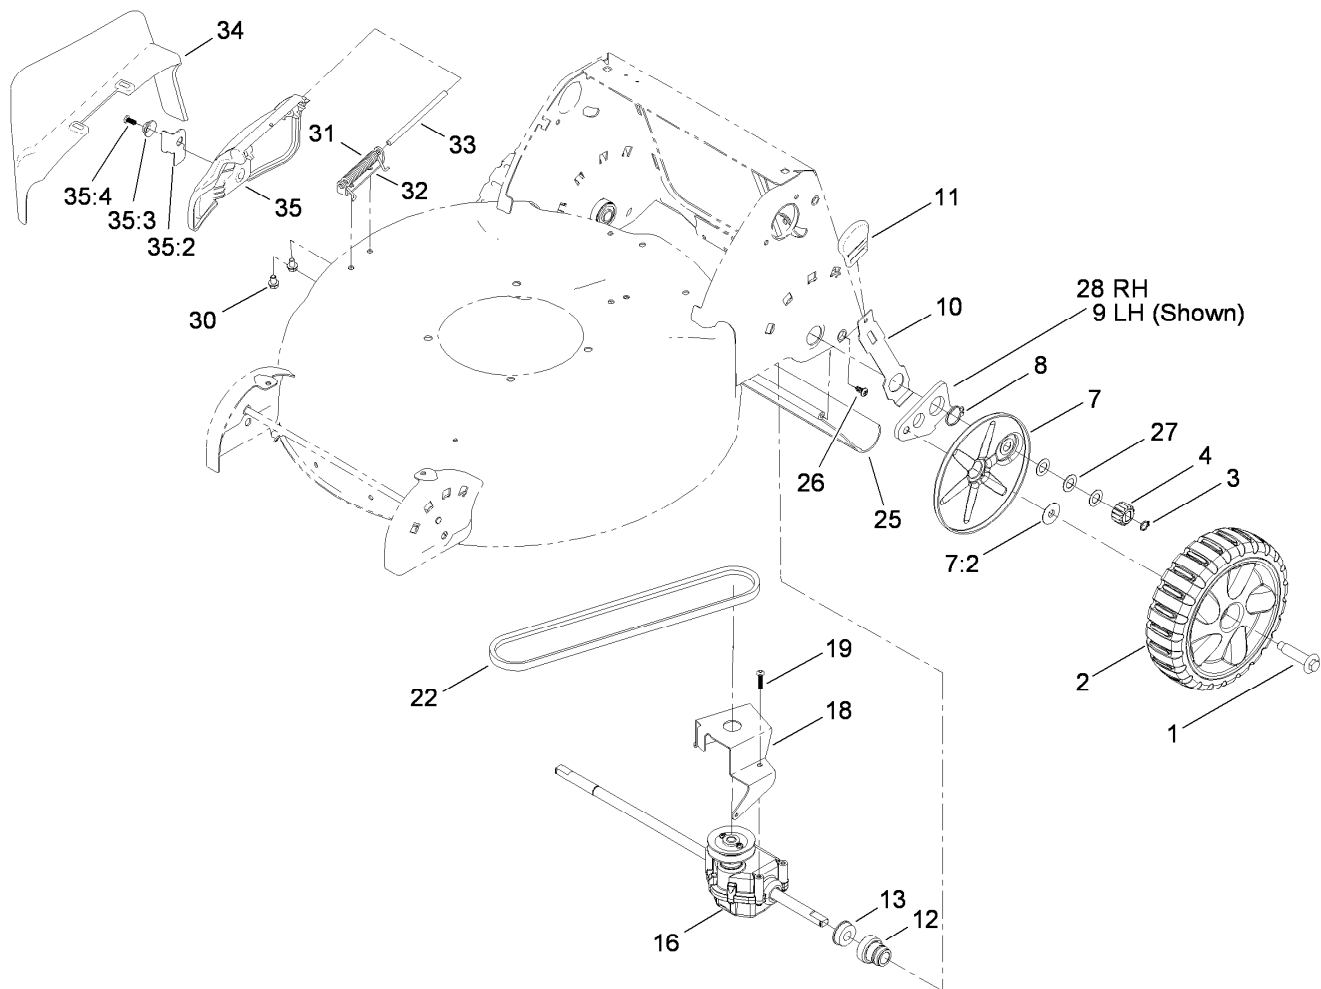

## Rear Axle and Transmission Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 614650      | 2    | Bolt-Shoulder         |
| 2    | 107-3906    | 2    | Rear Wheel ASM        |
| 3    | 32151-61    | 2    | Ring-Retaining        |
| 4    | 110-9417    | 2    | Gear-Pinion, 15T      |
| 7    | 110-1793    | 2    | Wheel Cover ASM       |
| 7:2  | 614426      | 1    | Washer-Stepped        |
| 8    | 32151-36    | 2    | Ring-Retaining        |
| 9    | 108-9344    | 1    | Arm-Rear Pivot, LH    |
| 10   | 110-9445    | 2    | Arm-Spring, Rear      |
| 11   | 110-0549    | 2    | Knob-HOC              |
| 12   | 104-8698    | 2    | Retainer-Bearing, HOC |
| 13   | 104-8699    | 2    | Bearing-Ball          |
| 16   | 110-9479    | 1    | Transmission ASM      |
| 18   | 114-7977-03 | 1    | Bracket-Transmission  |
| 19   | 108-7476    | 3    | Screw-Plastite        |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 22   | 110-9429    | 1    | V-Belt                |
| 25   | 112-8768    | 1    | Shield-Trailing       |
| 26   | 117-1092    | 2    | Screw-PTH             |
| 27   | 36-4780     | 3    | Washer-Plain          |
| 28   | 108-9343    | 1    | Arm-Rear Pivot, RH    |
| 30   | 99-8445     | 2    | Screw-HWH             |
| 31   | 99-5293     | 1    | Spring-Torsion        |
| 32   | 112-6416    | 1    | Bracket-Cover         |
| 33   | 99-5291     | 1    | Rod-Cover             |
| 34   | 105-3028    | 1    | Chute-Discharge, Side |
| 35   | 106-8376    | 1    | Discharge Door ASM    |
| 35:2 | 107-0795    | 1    | Latch-Door            |
| 35:3 | 107-7456    | 1    | Cap-Door              |
| 35:4 | 107-7461    | 1    | Screw-Plastite        |

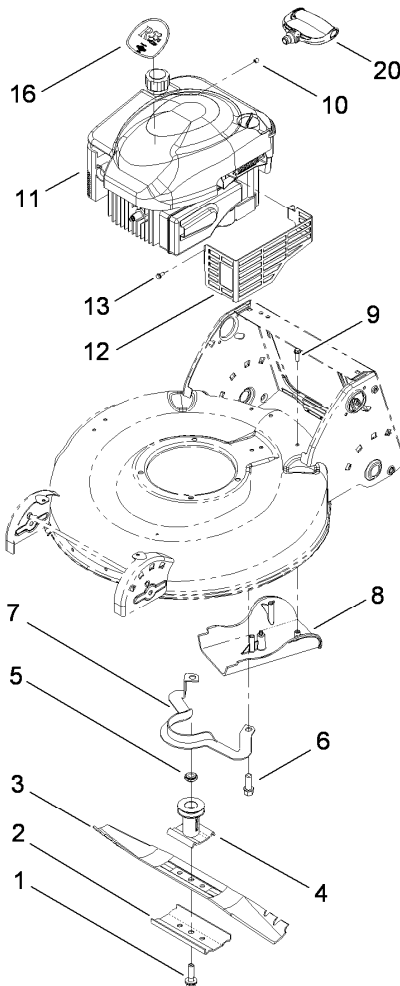


## Engine and Blade Assembly

| Ref. | Part Number                   | Qty. | Description      |
|------|-------------------------------|------|------------------|
| 1    | 105-8579                      | 1    | Bolt-Blade       |
| 2    | 108-3766-03                   | 1    | Support-Blade    |
| 3    | 108-0954-03                   | 1    | Blade-21 Inch    |
| 4    | 106-3987                      | 1    | Blade Driver ASM |
| 5    | 106-3999                      | 1    | Spacer-Driver    |
| 6    | 95-1726                       | 3    | Screw-Taptite    |
| 7    | 105-3030-03                   | 1    | Guide-Belt       |
| 8    | 110-1832                      | 1    | Cover-Belt       |
| 9    | 46-8091                       | 3    | Screw-HWH        |
| 10   | 2210-316                      | 1    | Stop-Rope        |
| 11   | Engine-B&s, 126T02-0193-B1 ●■ |      |                  |
| 12   | 104-7577-03                   | 1    | Shield-Muffler   |
| 13   | 32144-1                       | 3    | Screw-Taptite    |
| 16   | 117-5917                      | 1    | Decal-Engine     |
| 20   | 117-4142                      | 1    | Handle-Recoil    |


● Not serviced separately

■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

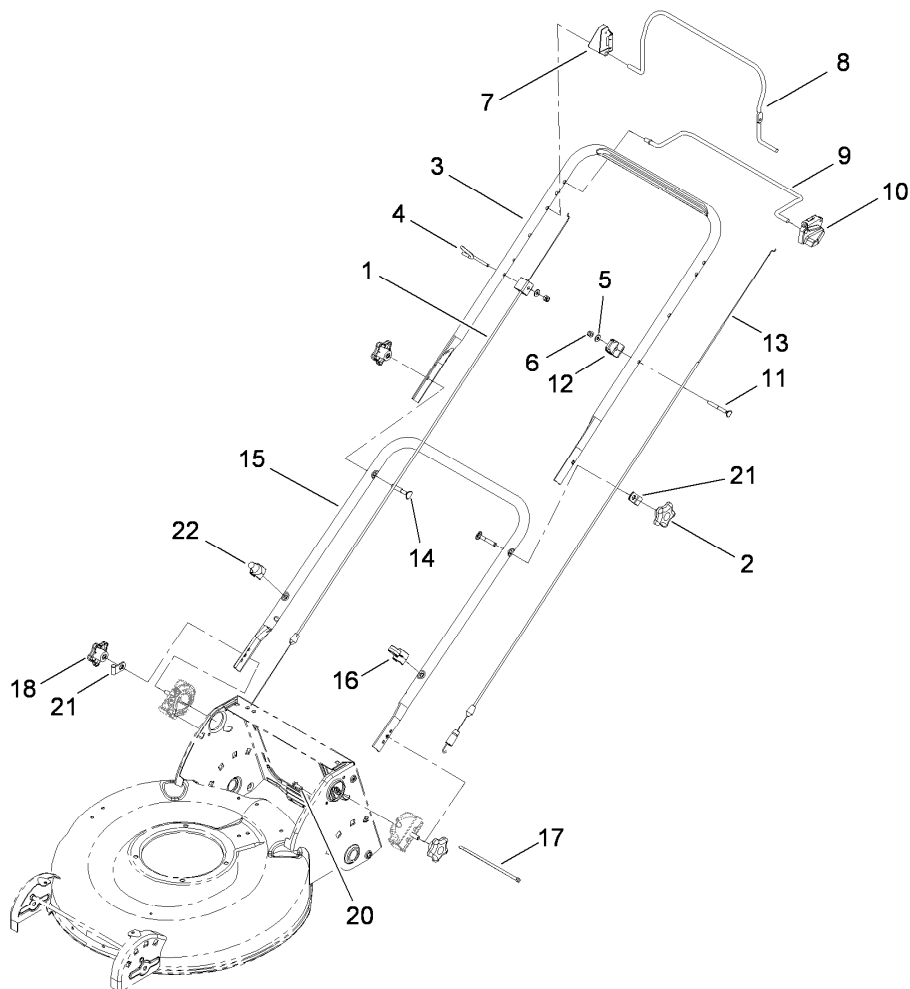

## 2-Bail Handle Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 104-8677    | 1    | Cable-Brake         |
| 2    | 108-8162    | 4    | Knob-Locking        |
| 3    | 104-8680-05 | 1    | Handle-Upper        |
| 4    | 106-8330    | 1    | Guide-Rope          |
| 5    | 3256-1      | 2    | Washer-Flat         |
| 6    | 3296-73     | 2    | Nut-Lock, NI        |
| 7    | 107-0757    | 1    | Stop-Pivot          |
| 8    | 105-6800-03 | 1    | Bail-Brake          |
| 9    | 105-1837-03 | 1    | Bail-Control        |
| 10   | 104-8682    | 1    | Stop-Pivot          |
| 11   | 95-4453     | 1    | Screw               |
| 12   | 92-7729     | 1    | Anchor-Cable, Upper |
| 13   | 110-1834    | 1    | Cable-Traction      |
| 14   | 112-8876    | 2    | Screw-Handle        |
| 15   | 110-1828-05 | 1    | Handle-Lower        |
| 16   | 106-6805    | 1    | Guide-Cable         |
| 17   | 614249      | 1    | Strap-Tie           |
| 18   | 115-3157    | 2    | Handle Mount ASM    |
| 20   | 49-2040     | 4    | Screw-HWHTF         |
| 21   | 2412-113    | 2    | Clamp               |
| 22   | 117-4141    | 1    | Guide-Rope, Lower   |

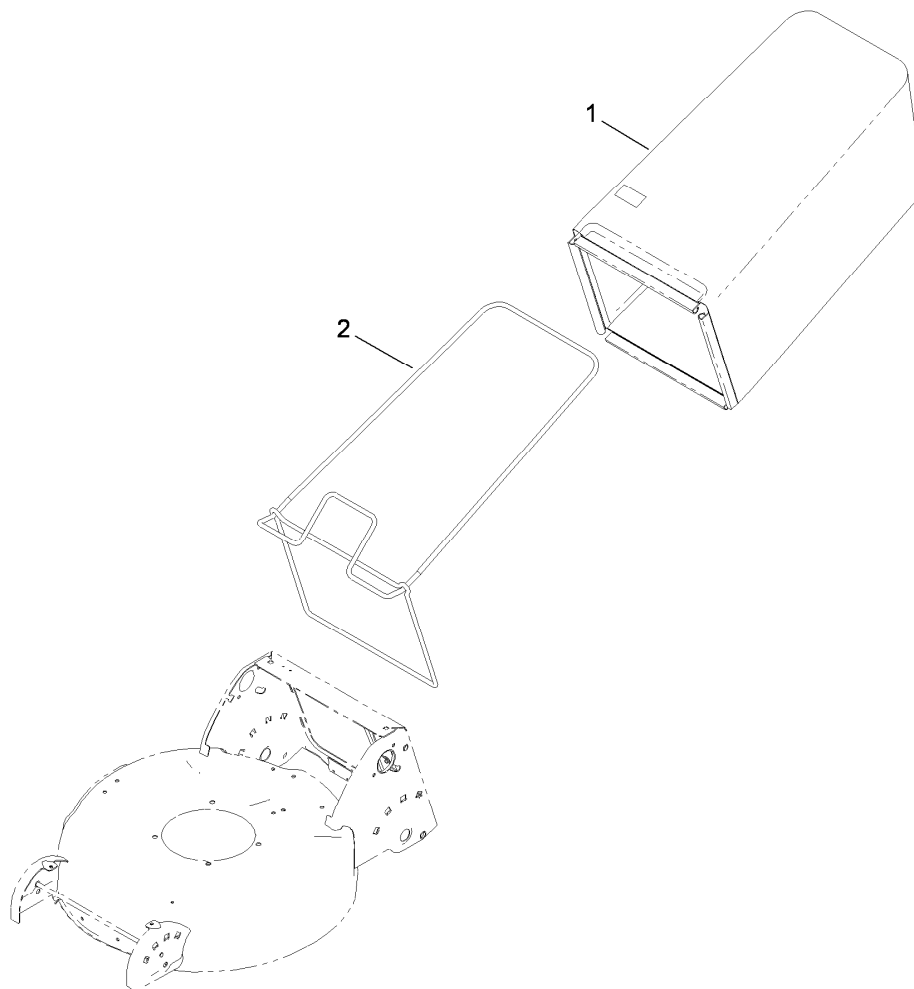

## Rear Bag Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 117-4191           | 1           | Grass Bag ASM (Black) |
| 1           | 119-7000           | 1           | Grass Bag ASM (White) |
| 2           | 112-8750-03        | 1           | Frame-Bag             |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**