


For Serial Nos.
510,000 & Higher

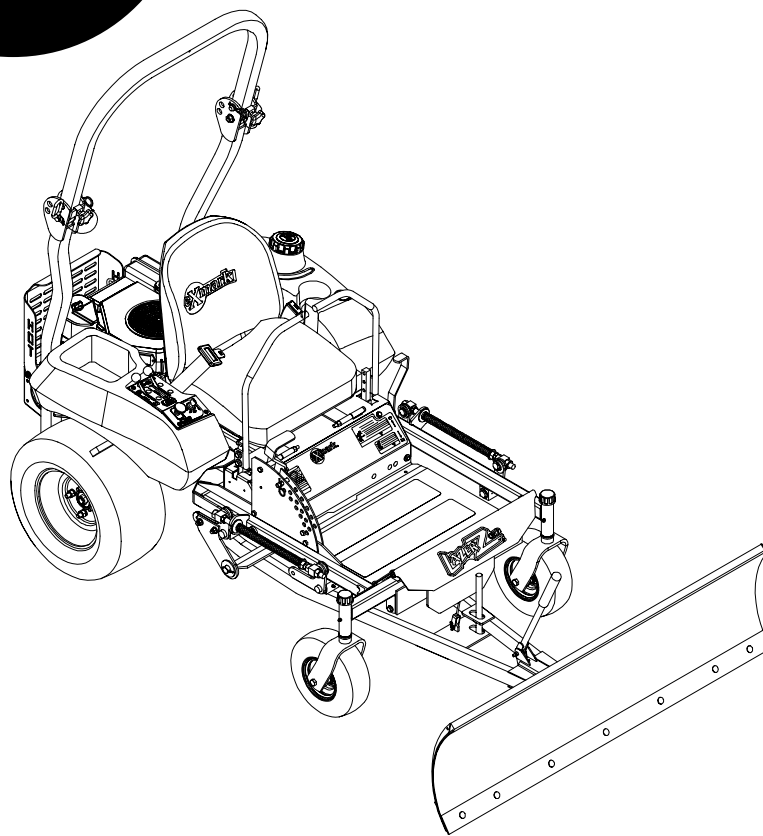

56" SNOW BLADE

LAZER Z[®] CT MODELS

CONGRATULATIONS on the purchase of your new Exmark equipment. This product has been carefully designed and manufactured to give you a maximum amount of dependability and years of trouble-free operation. If additional information is needed, or should you require trained mechanic service, contact your authorized Exmark equipment dealer or distributor. If you need to order replacement parts from your dealer, always give the model number and serial number of your equipment as well as the part number, description and quantity of the part needed.

The Serial No. plate is located on the top left hand rear surface of the blade. For ease of ordering and reference, we suggest that you record the information requested in the following identification table.

Place Model No. and Serial No. Label Here
(Included in Literature Pack)
or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

OPERATOR'S & PARTS MANUAL



WARNING

POTENTIAL HAZARD

- ◆ This product is a piece of power equipment.

WHAT CAN HAPPEN

- ◆ Failure to follow safe operating practices can result in serious operator injury or even death.

HOW TO AVOID THE HAZARD

- ◆ Keep all shields, guards, and safety devices (especially the grass discharge system) in place and in proper working condition.
- ◆ Stop engine and wait for all moving parts to stop. Remove spark plug wire(s) or remove key before adjusting, servicing, or performing maintenance.
- ◆ Keep hands, feet, and clothing away from power driven parts.
- ◆ Keep off mower unless seat platform is provided.
- ◆ Keep others off mower.

Exmark reserves the right to make changes or add improvements to its products at any time without incurring any obligation to make such changes to products manufactured previously. Exmark, or its distributors and dealers, accept no responsibility for variations which may be evident in the actual specifications of its products and the statements and descriptions contained in this publication.

EXMARK PARTS PLUS® PROGRAM


EFFECTIVE DATE: September 1, 1995

Program

If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE* Guaranteed!!

How the Program Works

1. If dealer does not have part in stock for a "down" unit at the time of request by customer, the dealer contacts his distributor by 1:00 p.m., local time, and requests Exmark Parts Plus® shipment of six (6) line items or less.
2. Distributor ships part(s) to dealer or customer, as requested by dealer, same day, overnight UPS. Distributor bills dealer for part and freight charges where applicable.
3. If distributor does not have the part(s) in stock to satisfy Exmark Parts Plus® order, he contacts Exmark by 3:00 p.m., central time, with an Exmark Parts Plus® order of six (6) line items or less.
4. If order is received by 3:00 p.m. central time, Exmark ships part(s) direct to dealer or customer, as requested by distributor, same day, overnight UPS, Exmark bills the distributor for parts and shipping charges, where applicable.
5. The customer pays for the part and freight if it is shipped under the Exmark Parts Plus® and if it arrives in accordance to the program.
6. Who pays for the part and freight if it fails to arrive overnight in accordance to the program?
 - A. Under any circumstance the customer does not pay.
 - B. If the part does not arrive overnight due to:
 1. The dealer not submitting the Exmark Parts Plus® order to his Exmark distributor by 1:00 p.m., the dealer pays for the part and freight.
 2. The Distributor being unable to ship the part the same day or not submitting the Exmark Parts Plus® order to Exmark by 3:00 p.m., central time, the Distributor pays for the part and freight.
 3. Exmark being unable to ship the part and the Exmark parts order is received by 3:00 p.m., central time, Exmark pays for the part and freight.
 4. If the part does not arrive overnight due to the shipper (UPS), the shipper pays for the freight and Exmark pays for the part.

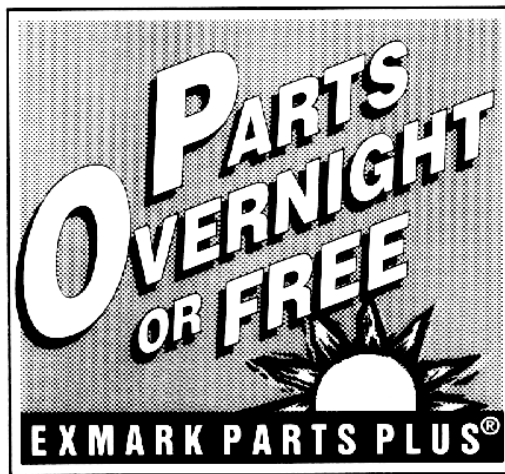

The following restrictions apply -- The Exmark Parts Plus® Program is available only through participating Exmark Dealers and applies only to orders submitted on this program Monday through Thursday. Parts Plus service is available only in the 48 contiguous United States. UPS has initiated a Saturday delivery program to many areas of the continental United States and can be requested for an overnight shipment on Friday to be delivered Saturday. The next day air charge, plus the Saturday delivery fee will be the responsibility of the purchaser. Exmark Mfg. will assume no responsibility for Saturday delivery shipments. To qualify, all Exmark Parts Plus® orders must be received by Exmark by 3:00 p.m., central time. Orders must be six (6) line items or less. Exclusions from the Exmark Parts Plus® Program are: Any wholegood or accessory in its entirety, engines and engine replacement parts, 5-speed Peerless transmissions and 5-speed transaxles, hydraulic or hydrostatic wheel motors, cutter decks and engine decks or any item exceeding United Parcel Service size and weight restrictions.

Due to UPS restrictions, aerosol spray paint is considered a hazardous material and cannot be shipped via UPS next day or Second Day Air.

Exmark Manufacturing stocks a limited supply of parts for transaxles, pumps and wheel motors. These parts can be ordered for Next Day Air shipment but will not be guaranteed per the Parts Plus Program.

OPERATOR'S MANUAL

This manual contains assembly, operating, maintenance, adjustment, and safety instructions for your Exmark Snow Blade.

BEFORE OPERATING YOUR SNOW BLADE, CAREFULLY READ THIS MANUAL AND THE MANUAL FOR YOUR MOWER IN THEIR ENTIRETY.

By following the operating, maintenance, and safety instructions, you will prolong the life of your Snow Blade, maintain its maximum efficiency, and promote safe operation.

If additional information is needed, or should you require trained mechanic service, contact your authorized Exmark equipment dealer or distributor.

All Exmark equipment dealers and distributors are kept informed of the latest methods of servicing and are equipped to provide prompt and efficient service in the field or at their service stations. They carry ample stock of service parts or can secure them promptly for you from the factory.

All Exmark parts are thoroughly tested and inspected before leaving the factory; however, attention is required on your part if you are to obtain the fullest measure of satisfaction and performance.

TABLE OF CONTENTS

1. SAFETY	PAGE
1.1 Safety Alert Symbol.....	1
1.2 Training.....	1
1.3 Preparation	1
1.4 Operation	2-3
2. SPECIFICATIONS	
2.1 Model Numbers.....	3
2.2 Dimensions	3
3. ASSEMBLY INSTRUCTIONS	
3.1 Assembly Diagram	4
3.2 Assembling the Blade	5-6
3.3 Preparing the Traction Unit	6-7
3.4 Installing the Blade.....	7-8
4. OPERATION INSTRUCTIONS	
4.1 Lowering and Raising the Blade.....	9
4.2 Adjusting the Blade Angle	9
4.3 Adjusting the Blade Trip Springs.....	10
5. MAINTENANCE	
5.1 Greasing and Lubricating the Blade	10-11
5.2 Reversing the Scraper	11
5.3 Removing the Blade.....	12
5.4 Storing the Blade	13
6. PARTS LIST	
6.1 Frame Assembly	14
6.2 Lift Assembly.....	15
6.3 Blade Assembly	16
7. WARRANTY.....	17

1. SAFETY

1.1 SAFETY ALERT SYMBOL

This SAFETY ALERT SYMBOL  is used both in this manual and on the machine to identify important safety messages which must be followed to avoid accidents. This symbol means:

ATTENTION! BECOME ALERT!
YOUR SAFETY IS INVOLVED!

The safety alert symbol appears above information which alerts you to unsafe actions or situations and will be followed by the word **DANGER**, **WARNING**, or **CAUTION**.

DANGER: White lettering/Red background. Indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

WARNING: Black lettering/Orange background. Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

CAUTION: Black lettering/Yellow background. Indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury.

1.2 TRAINING

- 1.2.1 Regard the Exmark mower as a piece of power equipment and teach this regard to all who operate this unit.
- 1.2.2 Before operating your Snow Blade, carefully read and understand this manual and the operator's manual for your mower in their entirety. Familiarize yourself with the controls and the proper use of the equipment. If the operator(s) or mechanic(s) can not read English it is the owner's responsibility to explain this material to them.
- 1.2.3 Do not allow operation of this machine by untrained personnel. Never allow children, teenagers, or people unfamiliar with these instructions to use the mower. Local regulations may restrict the age of the operator.
- 1.2.4 Avoid mowing while people, especially children, or pets, are nearby. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

1.3 PREPARATION

- 1.3.1 Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by Exmark.
- 1.3.2 The use of personal protective equipment, such as (but not limited to) protection for the eyes, ears, feet, and head is recommended.

 CAUTION	
POTENTIAL HAZARD	◆ This machine produces sound levels in excess of 85 dBA at the operator's ear when in operation.
WHAT CAN HAPPEN	◆ Exposure to sound levels of 85 dBA or above for extended periods of time can cause hearing loss.
HOW TO AVOID THE HAZARD	◆ Wear hearing protection when operating this machine.

- 1.3.3 While mowing, always wear substantial footwear and long trousers. Do not operate equipment when barefoot or when wearing open sandals.
- 1.3.4 Thoroughly inspect the area where the equipment is to be used and remove all stones, sticks, wires, bones, and other foreign objects which may damage the equipment or cause personal injury to the operator or bystanders.


1.4 OPERATION

Although hazard control and accident prevention are partially dependent upon the design and configuration of the equipment, these factors are also dependent upon the awareness, concern, prudence, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the equipment. It is essential that all Operator Safety Mechanisms be connected and in operating condition prior to use. Refer to the Operator's Manual for the mower for additional hazard control and accident prevention information.

- 1.4.1 Use **EXTREME** caution when removing snow on slopes as loss of traction and/or tip-over could occur. The operator is responsible for safe operation on slopes.

 DANGER	
POTENTIAL HAZARD	♦ Operating on a wet surface or steep slope can cause sliding and loss of control.
WHAT CAN HAPPEN	♦ Wheels dropping over edges, ditches, or steep banks can cause rollovers, which may result in serious injury or death.
HOW TO AVOID THE HAZARD	♦ Do not operate near drop-offs. ♦ Do not operate on slopes greater than 15 degrees. ♦ Reduce speed and use extreme caution on slopes. ♦ Avoid sudden turns or rapid speed changes.

- Use a walk behind snow blower or hand shovel near drop-offs, ditches, and steep banks. This area can be dangerous, see Figure 1.

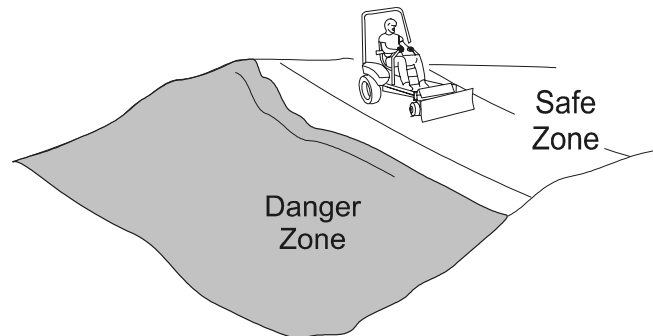

G0238

FIGURE 1

- Progressively greater care is needed as the slope increases.
- Always avoid sudden starting or stopping on a slope. If tires lose traction, lift the snow blade and proceed slowly off the slope.
- Avoid sudden starts when operating uphill. Mower may tip backward.
- Be aware the loss of traction may occur going downhill. Weight transfer to the front wheels may cause drive wheels to slip and cause loss of braking and steering.
- Watch for ditches, holes, rocks, dips, and rises that change the operating angle, as rough terrain could overturn the machine.
- Remove or mark obstacles such as rocks, tree limbs, etc. from the operating area. Deep snow can hide obstacles.
- Always install and remove the Snow Blade, as instructed. Failure to do so will cause a reduction in stability or traction. Do not operate the mower with only a portion of the Snow Blade installed.

1.4.2 A Rollover Protection System (roll bar) is installed on the unit.

 WARNING
POTENTIAL HAZARD ◆ There is no rollover protection when the roll bar is down.
WHAT CAN HAPPEN ◆ Wheels dropping over edges, ditches, steep banks, or water can cause rollovers, which may result in serious injury, death or drowning.
HOW TO AVOID THE HAZARD ◆ Keep the roll bar in the raised and locked position and use seat belt. ◆ Lower the roll bar only when absolutely necessary. ◆ Do not wear seat belt when the roll bar is down. ◆ Drive slowly and carefully. ◆ Raise the roll bar as soon as clearance permits.

- Be certain that the seat belt can be released quickly if the machine is driven or rolls into ponds of water.
- Check carefully for overhead clearances (i.e. branches, doorways, and electrical wires) before driving under any objects and do not contact them.

1.4.3 Stop engine and wait for all moving parts to stop. Remove key and engage park brake whenever leaving the mower.

2. SPECIFICATIONS

2.1 MODEL NUMBER: LCTSB

2.2 DIMENSIONS

2.2.1 Overall Unit Width with Snow Blade: 56"

2.2.2 Overall Unit Length with Snow Blade: 95.6"


2.2.3 Weight: 140 lbs (64 kg) (Snow Blade Assembly)

3. ASSEMBLY INSTRUCTIONS

3.1 ASSEMBLY DIAGRAM

Item	Qty	Description
1	2	Hairpin, Cotter
2	2	Pin, Clevis 5/16 x 1
3	1	Asm, Index Lever W/Grip
4	1	Wld, Lift Shaft
5	1	Asm, Pulley Plate
6	2	Plate, Stabilizer
7	2	Plate, Support
8	2	Arm, Lift
9	1	Screw, HH 1/4-20 x 2
10	2	Screw, HH 1/4-20 x 5/8
11	6	Screw, HH 3/8-16 x 1 1/2
12	2	Screw, HH 1/2-13 x 1 1/4
13	4	Bolt, Carriage 3/8-16 x 1
14	2	Washer, Lock 1/4
15	8	Washer, 3/8 SAE
16	2	Washer, 3/4 SAE

Item	Qty	Description
17	2	Washer, 7/8 Std
18	3	Pin, Cotter 1/8 x 1
19	1	Pin, Cotter 1/8 x 1 1/2
20	2	Pin, Cotter 5/32 x 1 1/2
21	4	Screw, SH 3/8-16 x 1 1/4
22	2	Nut, Nyloc 1/2-13
23	8	Nut, Nyloc 3/8-16
24	1	Nut, Nyloc 1/4-20
25	1	Rod, Lower Pivot
26	1	Asm, 56" Snow Blade
27	2	Skid
28	1	Screw, HH 3/4-16 x 3 3/4
29	1	Nut, Hex 3/4-16 Light
30	REF	Washer, Spring Disk 3/8
31	REF	Nut, Whizlock 3/8-16

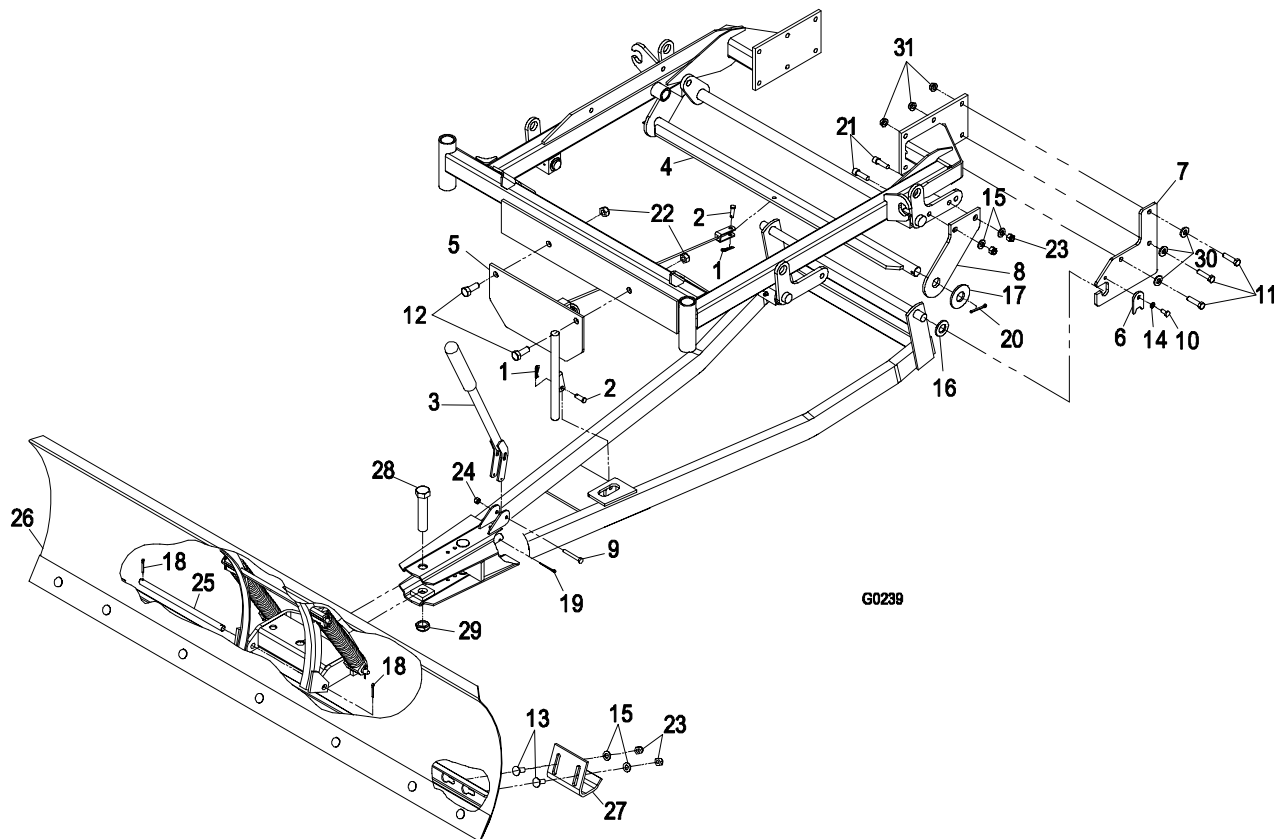

3.2 ASSEMBLING THE BLADE

1. Lift and rotate the channel assembly (Fig. 1) so that the holes align with the lower blade mounts.
2. Slide the rod through the holes and secure it with two cotter pins (1 in.) (Fig. 1).

NOTE: If you have difficulty sliding the rod through the holes, partially remove the upper rod and use a hammer to drive the rod through. Then install the upper rod.

3. Bend the ends of the cotter pins to secure the rod.

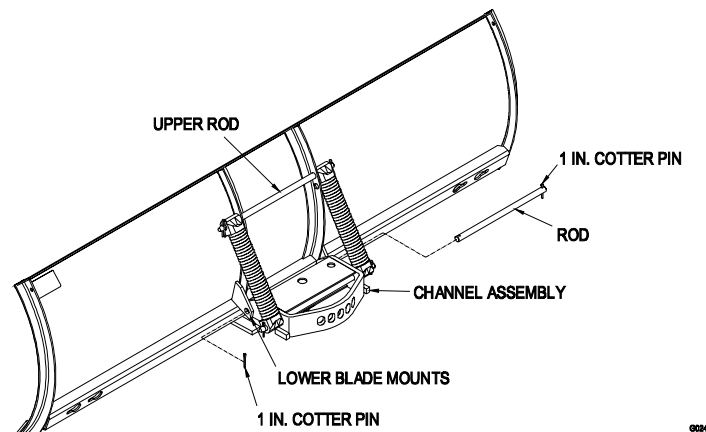


Figure 1

4. Attach the skids to the blade with 4 carriage bolts (3/8 X 1 in.), flat washers (3/8 in.) (Fig. 2). Position the skids according to what type of surface you will be plowing. Position the skids lower for plowing rough surfaces or higher for plowing smoother surfaces.

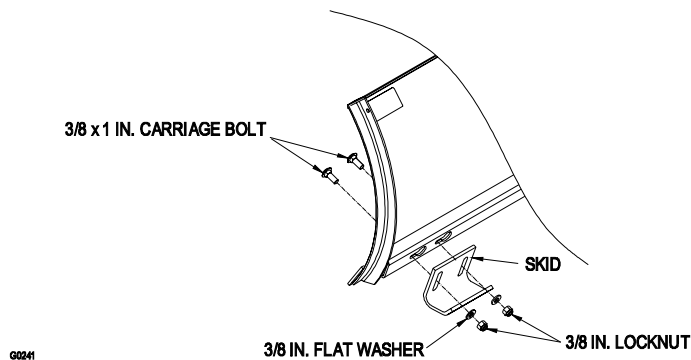


Figure 2

5. Apply general purpose grease to the pivot area of the frame and channel (Fig. 3).
6. Slide the blade channel assembly between the frame mount and secure it with a bolt (3/4 x 3-3/4 in.) and locknut (3/4 in.) (Fig. 3).

NOTE: Do not tighten the nut and bolt excessively, thereby causing binding on the channel weldment as it pivots from side to side.

7. Connect the index lever to the angle pin with a cotter pin (1/8 x 1-1/2 in.) (Fig. 3).
8. Attach the index lever to the frame assembly with a bolt (1/4 x 2 in.) and locknut (1/4 in.) (Fig. 3).

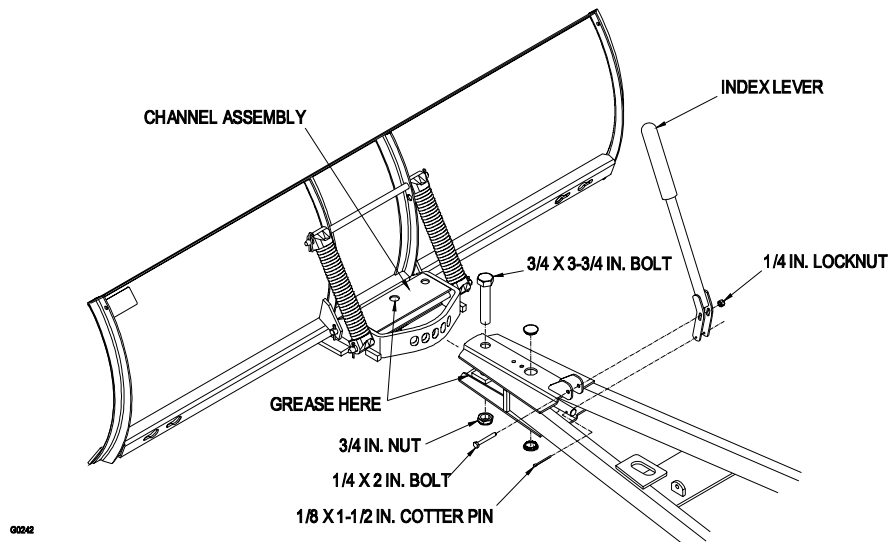


Figure 3

3.3 PREPARING THE TRACTION UNIT

1. Position the mower on a flat surface.
2. Stop the engine, wait for all moving parts to stop, and remove key.
3. Raise the deck to the transport position (Fig.11).
4. Place blocks under the edges of the mower deck skirt (Fig. 4).
5. Lower the mower deck until it is safely resting onto the blocks (Fig. 4).
6. Remove the (4) top mower deck chain bolts to disconnect the mower from the front frame (Fig. 4).

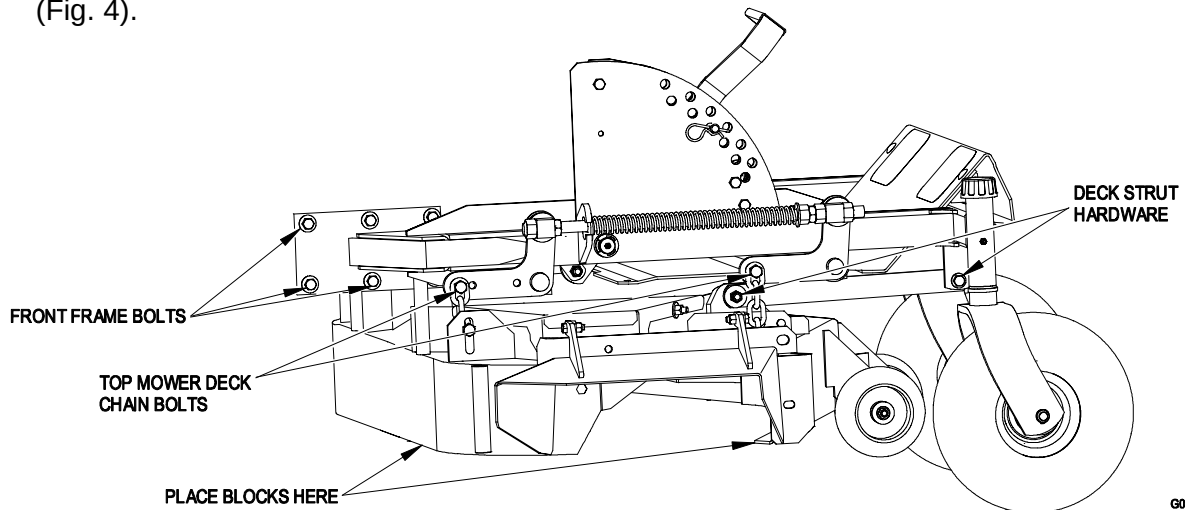


Figure 4

7. Remove the deck drive belt from the mower deck idler pulley to loosen the belt.
8. Remove the deck drive belt from the PTO clutch.
9. Remove all hardware from the struts to disconnect the mower from the front frame (Fig. 4).
10. Slide mower deck out from under the front frame. Set aside all components for reuse.
11. Remove and discard the 6 front frame bolts (3 from each side). Retain the washers and whizlock nuts to be reused (Fig 4).
12. Attach a support plate to each side of the traction unit frame using 3 bolts (3/8 x 1-1/2 in.) and the washers and whizlock nuts that were removed in step 11 (Fig. 5). Torque the bolts to 30 ft.-lb. (41 N·m).

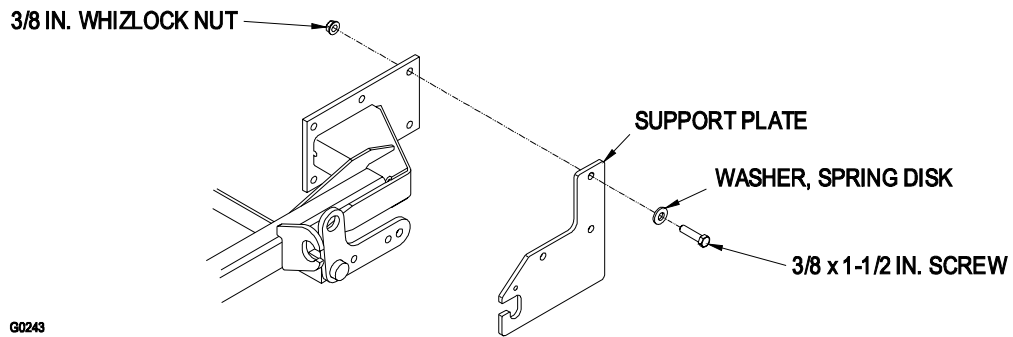


Figure 5

12. Attach one lift arm to each rear deck lift arm loosely. Using 2 socket head screws, 2 flat washers and 2 nyloc nuts per side (Fig. 6).
13. Slide the lift shaft through the lower hole in one lift arm. Assemble the large flat washer and 5/32 x 1-1/2 cotter pin. Spread the cotter pin to secure. Slide the opposite end of the lift shaft into the lower hole of the opposite lift arm. Assemble the large flat washer and cotter pin, and then spread the cotter pin to secure. Tighten all 4 socket head screws.

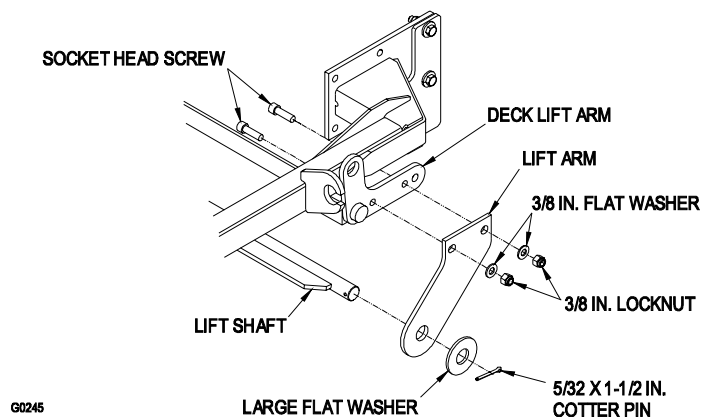


Figure 6

3.4 INSTALLING THE BLADE

1. Slide the blade frame beneath the traction unit, slide 2 large flat washers on the shaft and hook the rear shaft of the blade frame into the slots in the support plates (Fig. 7).
2. To keep the blade assembly from moving around in the slots, attach a retainer plate to each side of the support plates with a screw (1/4 x 5/8 in.) and lock washer (Fig. 7).

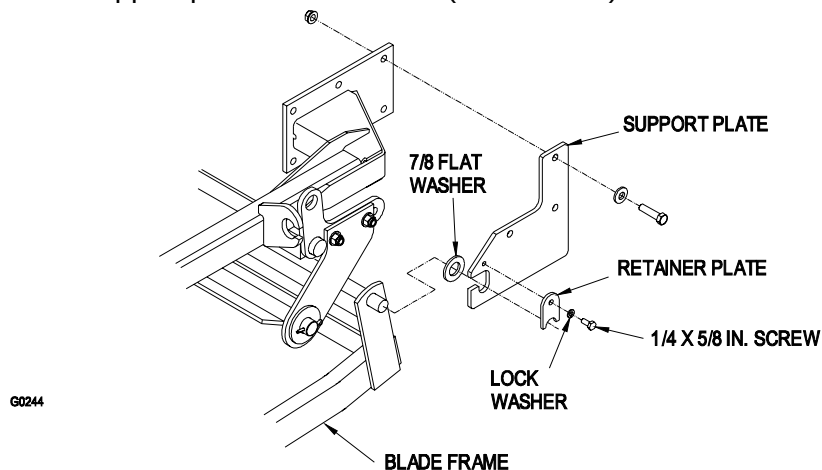


Figure 7

3. Insert the shaft on the pulley plate assembly into the slot in the blade frame and secure the assembly to the front of the traction unit with 2 bolts ($1/2 \times 1-1/4$ in.) and locknuts ($1/2$ in.) (Fig. 8).

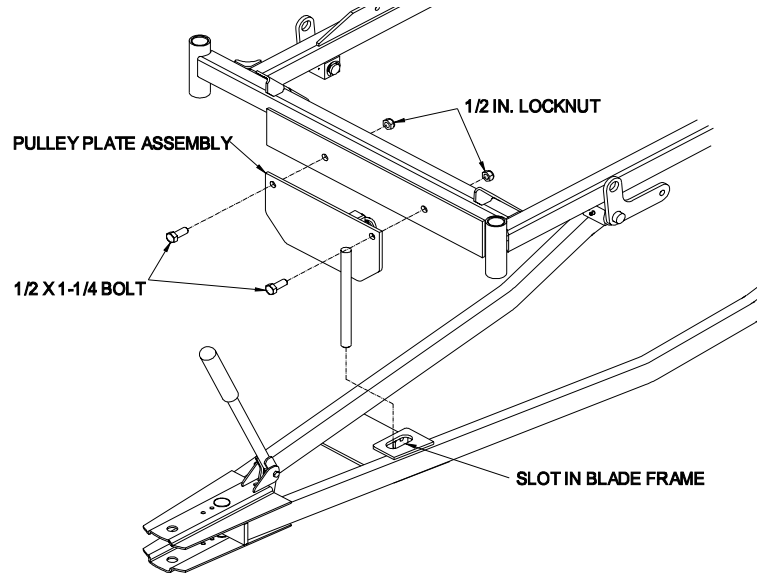


Figure 8

4. Connect the cable clevis to the blade assembly frame with a clevis pin and hairpin cotter ($1-3/16$ in.) (Fig. 9).

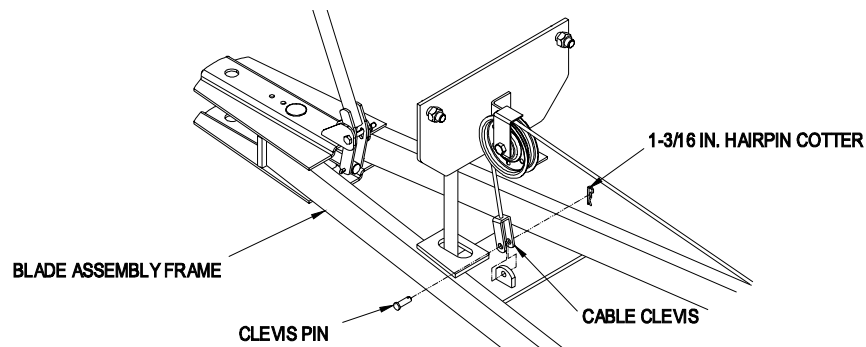


Figure 9

5. Connect the other end of the cable to the lift shaft with a clevis pin and hairpin cotter ($1-3/16$ in.) (Fig. 10).

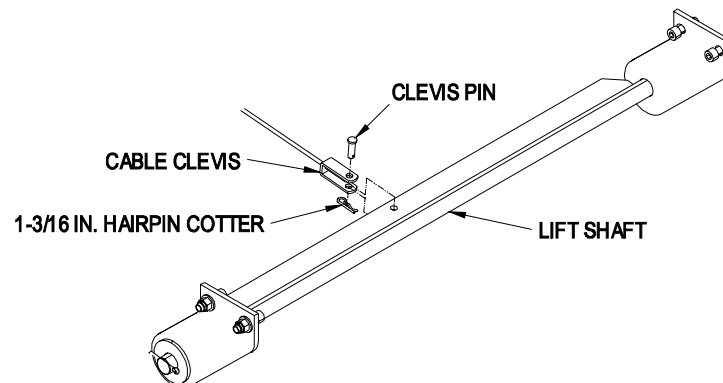


Figure 10

4. OPERATION INSTRUCTIONS

IMPORTANT: This snow blade should be used for plowing **snow only**.

4.1 LOWERING AND RAISING THE BLADE

Lowering the Blade

1. Move the hairpin cotter and clevis pin to the lowest position in the height-of-cut bracket (Fig 11.)

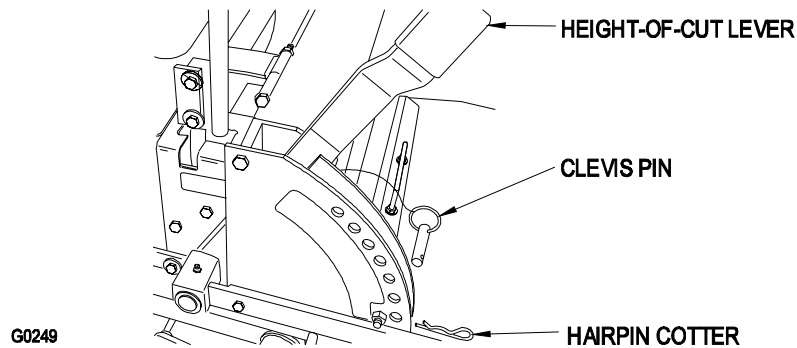


Figure 11

2. Slowly lower the height-of-cut lever.

Raising the Blade

1. Raise the height-of-cut lever to the transport position (highest height of cut).

4.2 ADJUSTING THE BLADE ANGLE

There are five positions for the side to side angle of the blade. To change the blade angle, perform the following procedure.

1. Raise the blade.
2. Push the index lever forward with one hand (Fig. 12) while positioning the blade with the other hand until you have reached the desired blade angle.
3. Release the index lever.

NOTE: The angle pin must snap into a hole in the channel to retain the blade position.

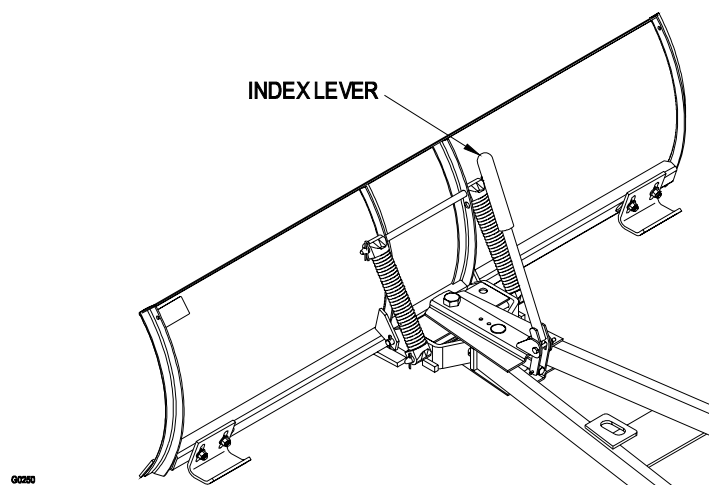


Figure 12

4.3 ADJUSTING THE BLADE TRIP SPRINGS

The blade trip springs can be mounted in four positions. The top hole provides the greatest scraping pressure and the bottom hole provides the least scraping pressure (Fig. 13).

1. Remove the hairpin cotter and slide the rod from the blade and springs (Fig. 13).
2. Slide the rod through the springs and the new hole position in the blade (Fig. 13).

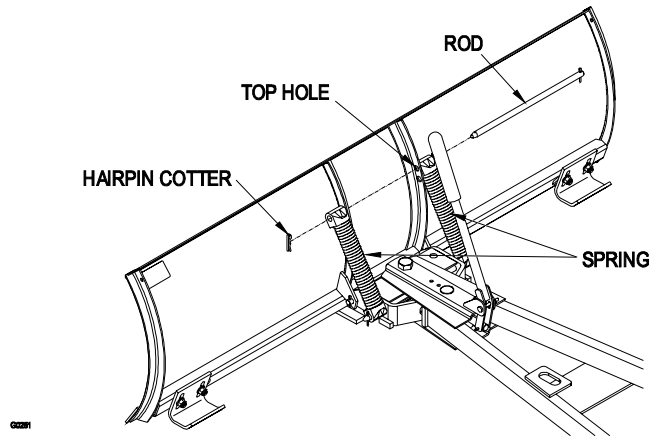


Figure 13

5. MAINTENANCE

Recommended Maintenance Schedule

Service Interval	Maintenance Procedure
25 Hours	• Grease the channel pivot. • Oil the linkages
Yearly/Storage Service	• Grease the channel pivot. • Oil the linkages. • Examine the scraper for wear and replace if necessary. • Paint any chipped surfaces.

**CAUTION**

POTENTIAL HAZARD

- ◆ If you leave the wire on the spark plug, someone could accidentally start the engine.

WHAT CAN HAPPEN

- ◆ Accidental starting of the engine could seriously injure you or other bystanders.

HOW TO AVOID THE HAZARD

- ◆ Disconnect the wire from the spark plug before you do any maintenance. Set the wire aside so that it does not accidentally contact the spark plug.

5.1 GREASING AND LUBRICATING THE BLADE

Grease and oil the blade after every 25 operating hours or once a year, whichever occurs first.

Grease type: general-purpose grease

Oil type: SAE 10W or 10W30

Greasing the Channel Pivot

1. Lower the blade.
2. Set the parking brake, stop the engine, and remove the ignition key.
3. Clean the area around the channel pivot with a rag. Apply grease to the pivot bolt, frame, and channel indexing holes (Fig. 14).

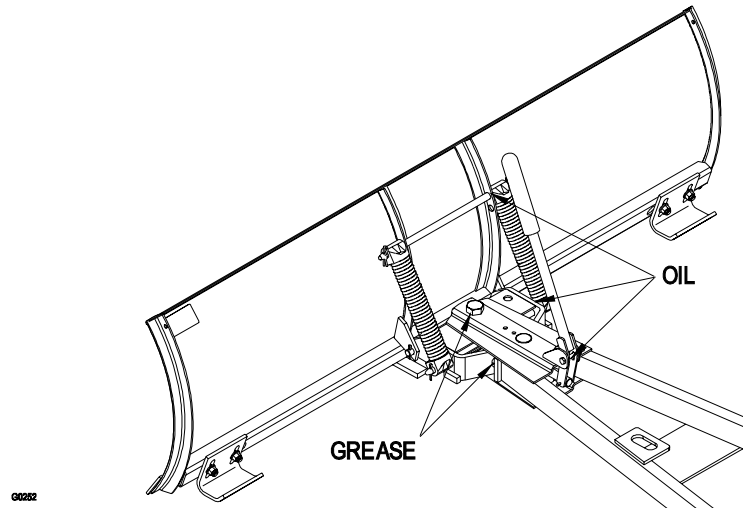


Figure 14

4. Wipe off excess grease.

Oiling the Linkages

1. Set the parking brake, stop the engine, and remove the ignition key.
2. Place a few drops of oil on all movable linkages (Fig. 14).
3. Wipe off excess oil.

5.2 REVERSING THE SCRAPER

Periodically inspect the scraper blade for wear. Reverse the scraper blade when it becomes worn and before the working surface contacts the housing.

1. Raise the blade and support the housing off of the ground.
2. Remove the carriage bolts and locknuts securing the scraper (Fig. 15).
3. Reverse the scraper and install it with the previously removed hardware (Fig. 15).

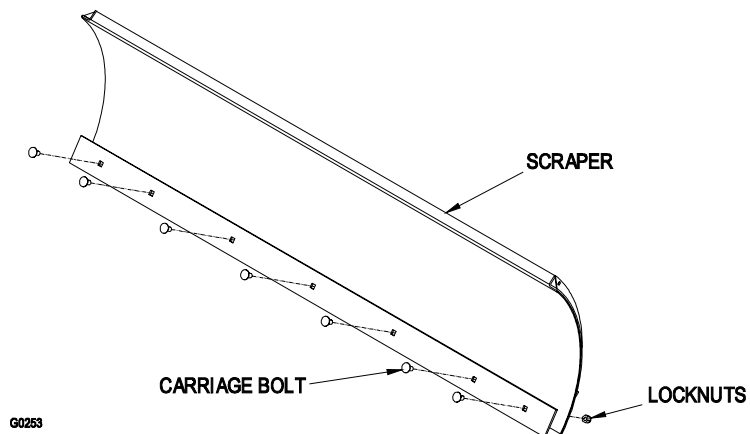


Figure 15

5.3 REMOVING THE BLADE

1. Lower the blade to the ground.
2. Disconnect the cable from the lift shaft and blade assembly frame.
3. Remove the pulley plate assembly (Fig. 16).

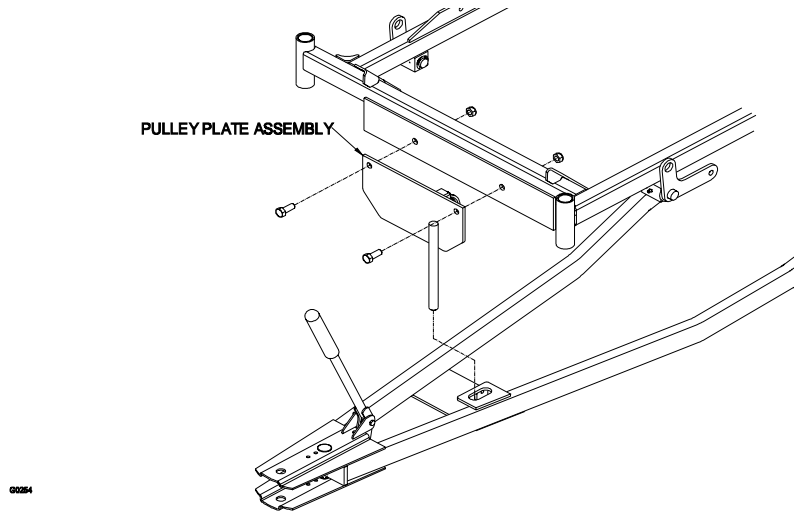


Figure 16

4. Remove the blade retainer plates from the support plates and unhook the blade assembly (Fig. 15). Do not remove the support plates.

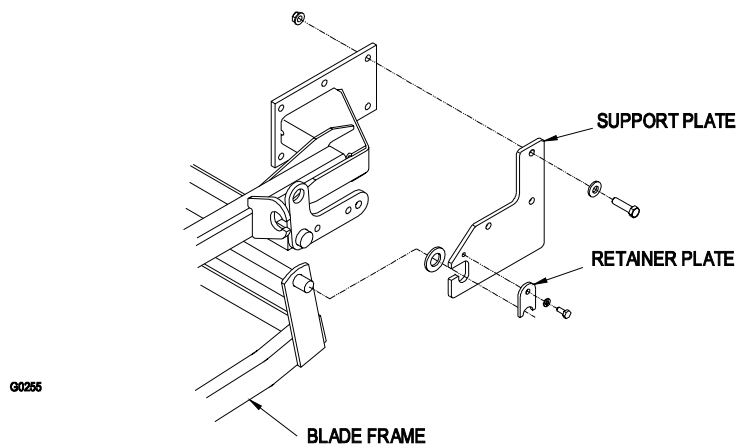


Figure 16

5. Remove the lift arms and lift shaft (Fig. 17).

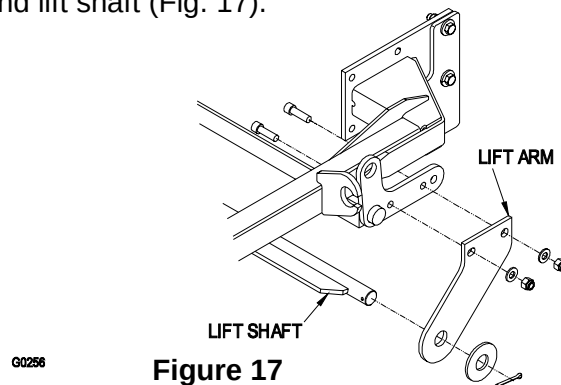


Figure 17


NOTE: Retain all parts for future installation.

5.4 STORING THE BLADE

1. Before long-term storage, wash the entire blade assembly with mild detergent and water to remove dirt and grime.
2. Check the condition of the scraper; refer to Reversing the Scraper, page 11.
3. Grease and oil the blade; refer to Greasing and Lubricating the Blade, page 11.
4. Check and tighten all bolts, nuts, and screws. Repair or replace any part that is damaged.
5. Paint all scratched or bare metal surfaces. Paint is available from our Authorized Exmark Service Dealer.
6. Store the blade in a clean, dry garage or storage area.
7. Cover the machine to protect it and keep it clean.

6. PARTS LIST


6.1 FRAME ASSEMBLY

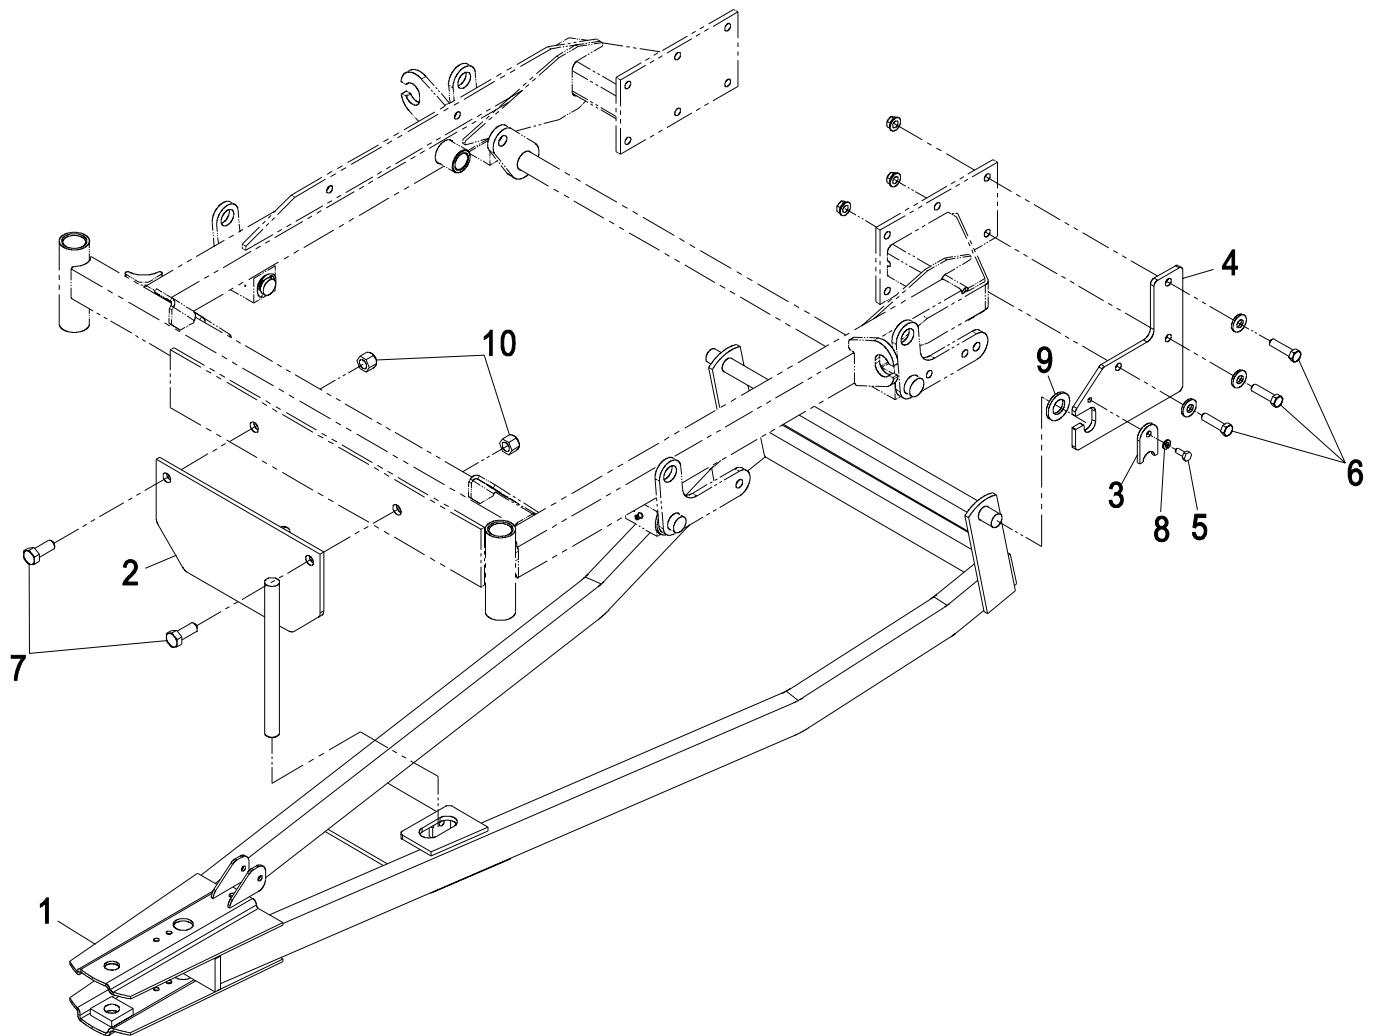

Item	Part No.	Description	Qty.
1	103-5989-03	Wld, Snow Blade Frame	1
2	103-5990-03	Wld, Pulley Plate.....	1
3	104-8090-03	Plate, Stabilizer.....	2
4	105-1900-03	Plate, Support.....	2
5	321-3	Screw, HH 1/4-20 x 5/8	2

Item	Part No.	Description	Qty.
6	323-8	Screw, HH 3/8-16 x 1 1/2.....	6
7	325-5	Screw, HH 1/2-13 x 1 1/4.....	2
8	3253-3	Washer, Lock 1/4	2
9	3256-28	Washer, 3/4 SAE.....	2
10	3296-23	Nut, Nyloc 1/2-13.....	2


6.2 LIFT ASSEMBLY

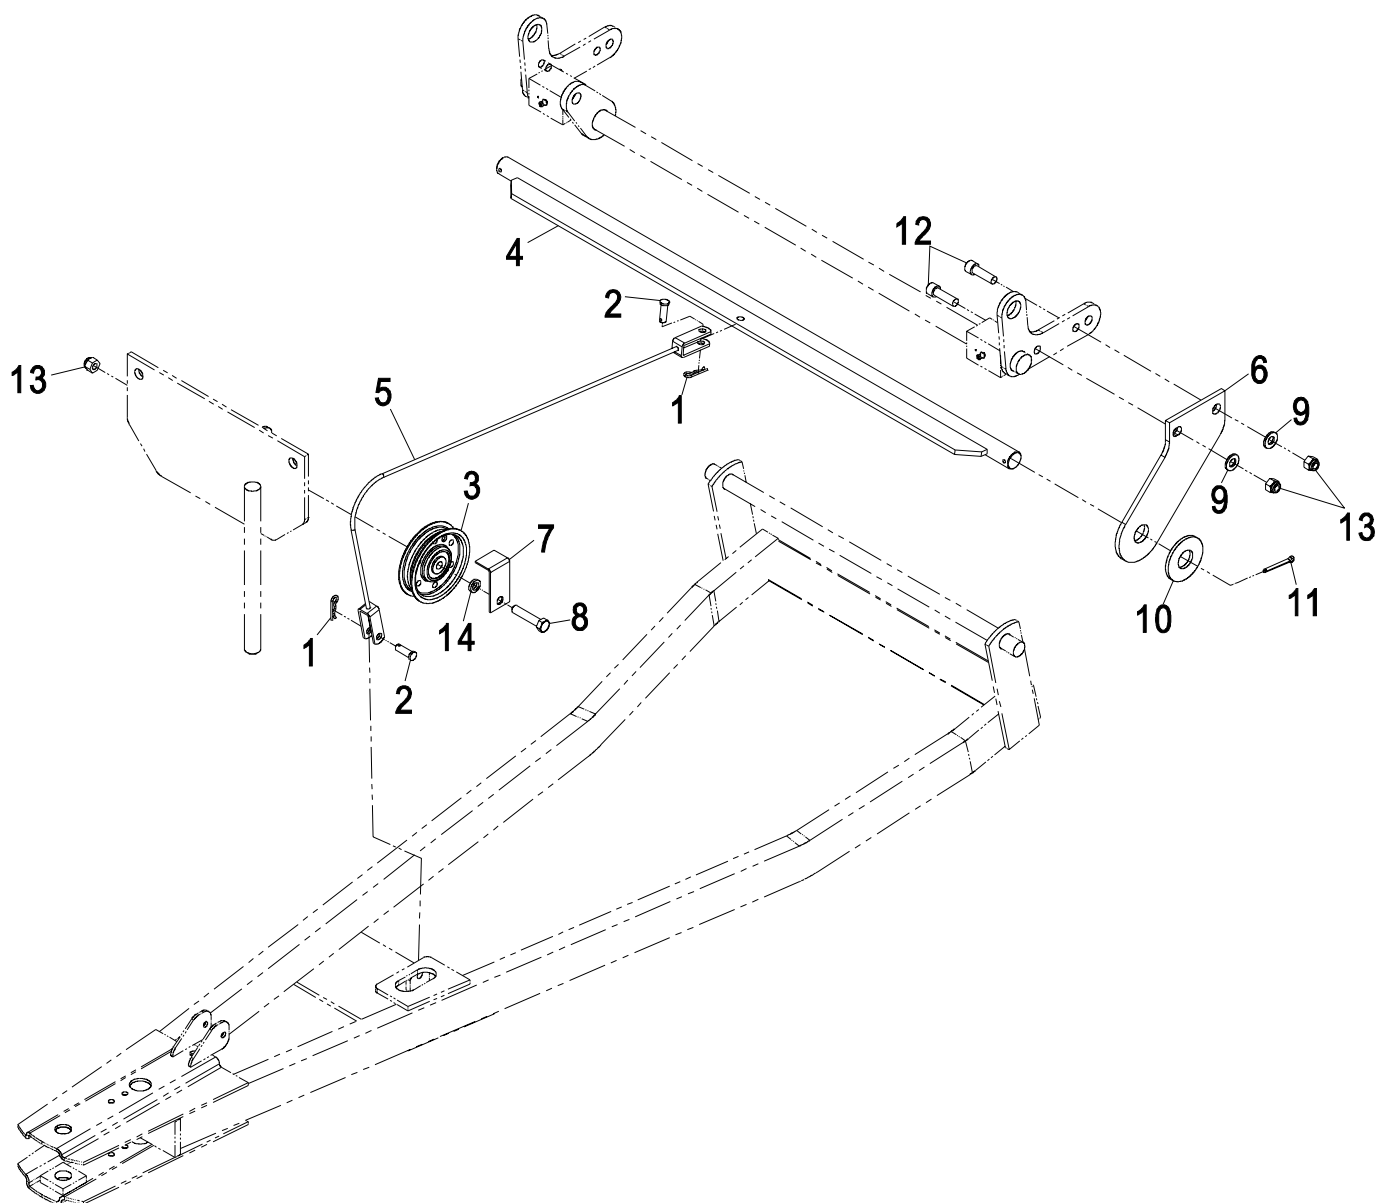

Item	Part No.	Description	Qty.
1	1-806003	Hairpin, Cotter.....	2
2	1-808280	Pin, Clevis 5/16 x 1	2
3	92-7101	Pulley, Flat Idler	1
4	103-5984	Wld, Lift Shaft	1
5	103-5988	Asm, Lift Cable	1
6	105-1914	Arm, Lift	2
7	105-3411 -03	Guide, Cable.....	1

Item	Part No.	Description	Qty.
8	323-9	Screw, HH 3/8-16 x 1 3/4.....	1
9	3256-24	Washer, 3/8 SAE.....	4
10	3256-9	Washer, 7/8 Std.....	2
11	3272-18	Pin, Cotter 5/32 x 1 1/2	2
12	3274-1	Screw, SH 3/8-16 x 1 1/4	4
13	3296-39	Nut, Nyloc 3/8-16.....	5
14	104662	Spacer	1

6.3 BLADE ASSEMBLY

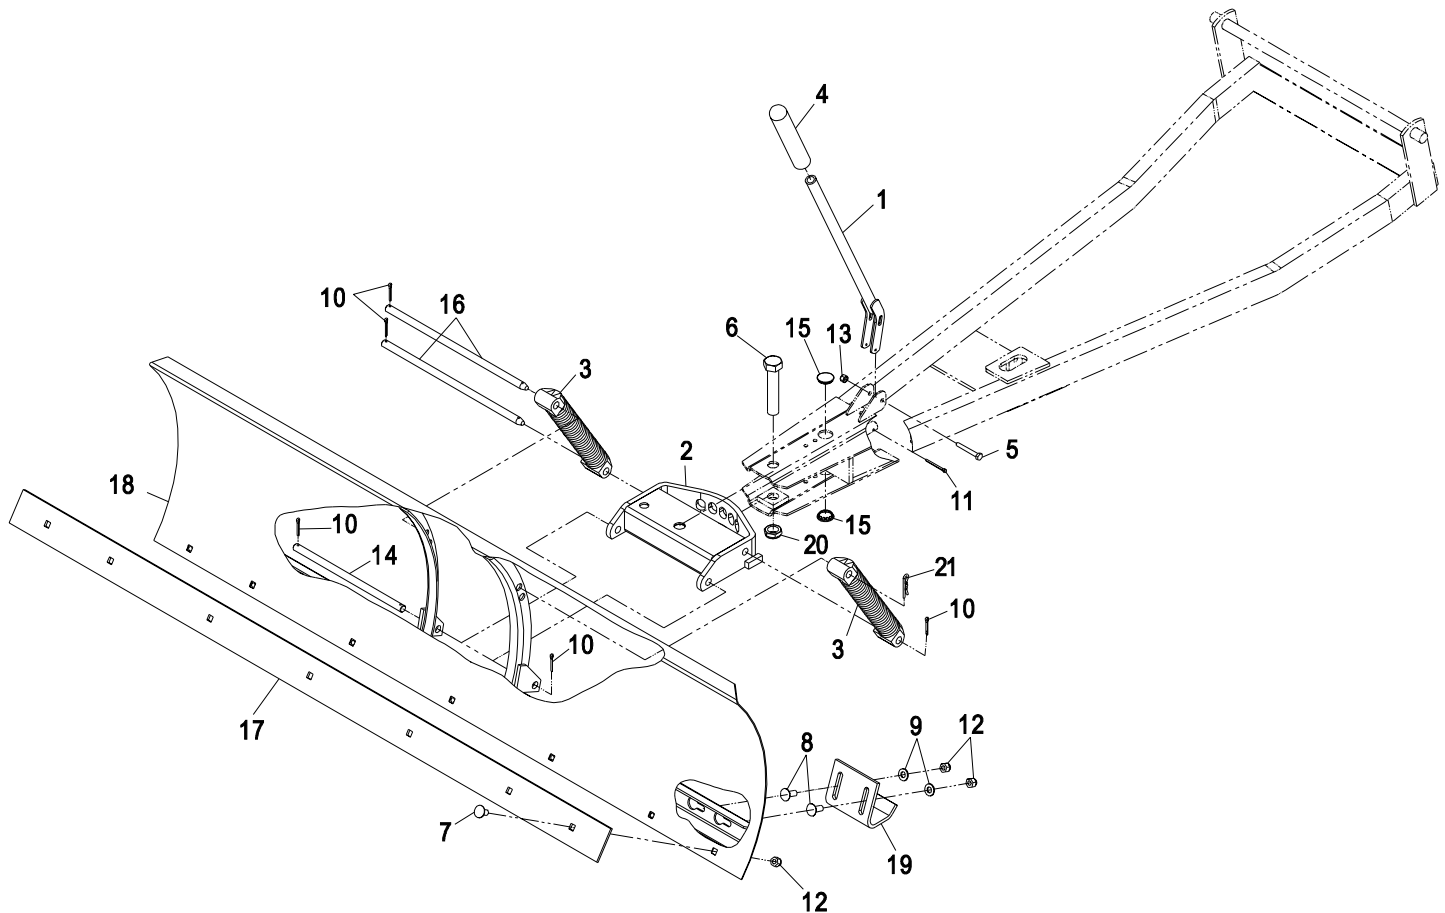

Item	Part No.	Description	Qty.
1	99-7787-03	Wld, Index Lever	1
2	104-8053-03	Wld, Index.....	1
3	105-1386-03	Asm, Lug/Spring	2
4	105-1904	Grip, Snow Blade Handle	1
5	321-11	Screw, HH 1/4-20 x 2	1
6	3216-7	Screw, HH 3/4-16 x 3 3/4	1
7	3231-1	Bolt, Carriage 3/8-16 x 3/4	7
8	3231-2	Bolt, Carriage 3/8-16 x 3/4	4
9	3256-24	Washer, 3/8 SAE	4
10	3272-11	Pin, Cotter 1/8 x 1	5
11	3272-13	Pin, Cotter 1/8 x 1 1/2	1

Item	Part No.	Description	Qty.
12	3296-39	Nut, Nyloc 3/8-16	11
13	3296-42	Nut, Nyloc 1/4-20	1
14	4564	Rod, Lower Pivot	1
15	4944	Plug, Hole	2
16	5120	Rod, Blade Pivot	2
17	103618-03	Plate, Blade Edge	1
18	116780-03	Wld, 56" Snow Blade	1
19	117424-03	Skid	2
20	9156404	Nut, Hex 3/4-16 Light	1
21	9335124	Hairpin, Cotter	1

7.

2-Year Limited Warranty Exmark Turf Equipment

(For units purchased on or after October 1, 2004)

Conditions and Products Covered

Exmark Mfg. Co. Inc. and its affiliate, Exmark Warranty Company, pursuant to an agreement between them, jointly warrant on the terms and conditions herein, that we will repair, replace or adjust any part manufactured by Exmark and found by us (in the exercise of our reasonable discretion) to be defective in factory materials or workmanship for a period of two years.

This warranty applies to Exmark turf equipment purchased on or after October 1, 2004 sold in the US or Canada. This warranty may only be assigned or transferred to a second (or third) owner by an authorized Exmark dealer. The warranty period commences upon the date of the original retail purchase.

Products

Products	Warranty Period
• All Products (except as noted below)	2 years
• All Attachments and Accessories	1 year
• Metro 21 Series	1 year
• Belts and Tires	90 days
• Battery	1 Year Prorated
• Engine*	Warranty is covered by engine manufacturer

*Please refer to the engine manufacturer's warranty statement that is included in the literature packet. We are not authorized to handle warranty adjustments on engines.

This warranty only includes the cost of parts and labor.

Items and Conditions Not Covered

This warranty does not cover the following:

- Pickup and delivery charges to and from any authorized Exmark Service Dealer.
- Any damage or deterioration due to normal use, wear and tear, or exposure.
- Cost of regular maintenance service or parts, such as filters, fuel, lubricants, tune-up parts, and adjustments.
- Any product or part which has been altered or misused or required replacement or repair due to normal wear, accidents, or lack of proper maintenance.
- Any repairs necessary due to use of parts, accessories or supplies, including gasoline, oil or lubricants, incompatible with the turf equipment or other than as recommended in the operator's manual or other operational instructions provided by Exmark.

All warranty work must be performed by an authorized Exmark Service Dealer using Exmark approved replacement parts.

Instructions for Obtaining Warranty Service

1. Contact any Exmark Service Dealer to arrange service at their dealership. To locate a dealer convenient to you, access our website at www.exmark.com. U.S. Customers may also call 402-223-6375.
2. Bring the product and your proof of purchase (sales receipt) to the Exmark Service Dealer.

If for any reason you are dissatisfied with the Service Dealer's analysis or with the assistance provided, contact us at:

Exmark Customer Service Department
The Exmark Warranty Company
2101 Ashland Avenue
Beatrice, NE 68310
402-223-6375 or
service@exmark.com

Owner's Responsibilities

The Exmark turf equipment, including any defective part, must be returned to an authorized Exmark service dealer within the warranty period. This warranty extends only to turf equipment operated under normal conditions. You must properly service and maintain your Exmark product as described in the operator's manual. Such routine maintenance, whether performed by a dealer or by you, is at your expense.

As a condition to this warranty, customer shall have read the operator's manual and shall have completed and submitted to Exmark Warranty Company, within the prescribed time, the Exmark warranty registration.

General Conditions

The sole liability of Exmark and Exmark Warranty Company with respect to this warranty shall be repair and replacement as set forth herein. **Neither Exmark nor Exmark Warranty Company shall have any liability for any other cost, loss or damage, including but not limited to, any incidental or consequential loss or damage.**

In particular, we shall have no liability or responsibility for:

- Expenses related to gasoline, oil or lubricants.
- Travel time, overtime, after hours time or other extraordinary repair charges or charge relating to repairs or replacements outside of normal business hours at the place of business of the authorized Exmark service dealer.
- Rental of like or similar replacement equipment during the period of any warranty, repair or replacement work.
- Any telephone or telegram charges or travel charges.
- Loss or damage to person or property other than that covered by the terms of this warranty.
- Any claims for lost revenue, lost profit or additional cost as a result of a claim of breach of warranty.
- Attorney's fees.

No Claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any Exmark mower.

There are no understandings, agreements, representations, or warranties, express or implied, including but not limited to any regarding the merchantability (that product is fit for ordinary use) or fitness for use (that product is fit for a particular purpose), not specified herein, respecting the equipment which is the subject of this warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SERVICE RECORD

[illegible]

SEE EXMARK'S COMPLETE LINE OF ACCESSORIES

RIDING ACCESSORIES

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

WALK BEHIND ACCESSORIES

GRASS CATCHER
MICRO-MULCH SYSTEM
STEERABLE SULKY
SULKY HITCH KIT
TURF STRIPER

Check us out on the Web:
www.exmark.com

© 2004 EXMARK MFG. CO. INC.
INDUSTRIAL PARK BOX 808
BEATRICE, NE 68310

PART NO. 103-8856
(402) 223-6300
FAX (402) 223-5489

ALL RIGHTS RESERVED

PRINTED IN U.S.A.

