



Count on it.

Form No. 3352-321 Rev E

Parts Catalog

Line Painter 1200

Model No. 42004—Serial No. 250000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping


TTH: torx truss head

Contents

Front Caster and Rear Transaxle Assembly	4
Transaxle Assembly No. 108-0110	6
Engine, Fuel Tank and Frame Assembly	8
Pump and Tank Assembly	10
Pump Assembly No. 108-0437	11
Valve Assembly	12
Operator Control Assembly	13
Cable and Steering Control Assembly	14
Spray Arm and Fitting Assembly	15
Hose Plumbing Assembly	16
Cylinder and Crankcase Assembly	17
Piston and Crankshaft Assembly	18
Valve and Camshaft Assembly	19
Lubrication Equipment Assembly	20
Cooling Equipment Assembly	21
Electrical Equipment Assembly	22
Control Equipment Assembly	23
Carburetor Assembly	24
Air Filter and Muffler Assembly	25
Recoil Starter Assembly	26
Attachments and Accessories	27

This exploded view diagram illustrates the assembly of a vehicle chassis. The main chassis body is shown with various mounting points and components. Key parts include:

 
- Chassis Body:** The central rectangular frame (23) with mounting points for the suspension and wheels.
- Suspension Components:** Includes the rear suspension arm (30), shock absorber (32), and various bushings and pins (e.g., 31, 37, 38, 40, 43, 42, 18, 16, 39, 41, 17, 14:1, 14:2, 14:3, 14:4, 14:5).
- Wheels and Tires:** Two wheels are shown, with the front wheel (14) and rear wheel (15) assembly including the tire (14:1) and hub (14:2).
- Brake Components:** The brake master cylinder (23) and brake lines (27, 28) are shown.
- Steering Components:** The steering knuckle (24) and steering arm (25) are shown.
- Engine/Motor Components:** The engine/motor (23) and its mounting bracket (27) are shown.
- Fasteners:** Numerous bolts, nuts, and washers are labeled with numbers (e.g., 31, 37, 38, 40, 43, 42, 18, 16, 39, 41, 17, 14:1, 14:2, 14:3, 14:4, 14:5).
- Inset Detail:** A circular inset provides a detailed view of the rear suspension assembly, showing the shock absorber (32), spring (30), and various mounting points (61, 62, 59, 63, 58, 45, 32, 28).



Front Caster and Rear Transaxle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-0110	1	Transaxle-Gear	30	108-0320	1	Rod-Guide
2	88-4840	1	Pulley-Transmission	31	108-0133	1	Nozzle-Twinjet, 8006E (Standard)
3	32120-64	1	Ring-Snap, External	32	233-70	2	Knob-Star, Three
5	108-0461	2	Wheel ASM	36	95-3805	1	Spring
5:1	99-2992	1	Tire	37	100-1668	1	Screw-Flange
5:2	107-0520	1	Wheel	38	63-7400	1	Washer-Rebound
8	104-8300	4	Nut-Flange, NI	39	3255-8	2	Washer-Lock
9	3230-9	4	Screw-CARR	40	94-1291	2	Bushing
10	7-5461	1	Spacer	41	108-0063	2	Screw-HSH
11	3253-3	1	Washer-Lock	42	108-0335	1	Plate-Caster
12	329-23	1	Screw-HH	43	108-0324	1	Washer-Wave
14	100-6451	1	Caster Wheel ASM	45	32121-4	2	Pin-Roll, Slotted
14:1	232-27	1	Stem-Valve	46	108-0330	1	Guide
14:2	302-11	1	Fitting-Lube, 45 DEG	47	324-2	1	Screw-HH
14:3	83-4740	1	Bearing	48	3254-20	1	Washer-Lock, Int
14:4	62-5580	2	Bearing-Outside	49	66-9010	1	Spring-Compression
14:5	100-6452	1	Tire-Tubeless	50	1-543792	2	Wingnut
15	100-6453	1	Bushing-Spanner	53	3-6498	4	Washer-Thrust
16	325-19	1	Screw-HH	54	88-5360	2	Spacer
17	32153-5	1	Nut-Hex	55	7-0036	2	Key-Square
18	108-0310-01	1	Caster Fork ASM	56	70-1160	2	Washer
23	108-4844	1	Battery Box ASM	57	32151-48	2	E-Ring
24	108-0987	1	Foam-Battery	58	3229-11	1	Screw-CARR
25	32144-20	2	Screw-HHFTF	59	108-0071	1	Plate ASM
26	108-0107	1	Lever-Shift	61	92-6982	2	Spacer-Brake
27	108-0359	1	Wrench-Filter	62	3256-82	2	Washer-Flat
28	108-0317	1	Guide ASM	63	321-20	1	Screw-HH
29	108-0321	1	Guide ASM				


Transaxle Assembly No. 108-0110

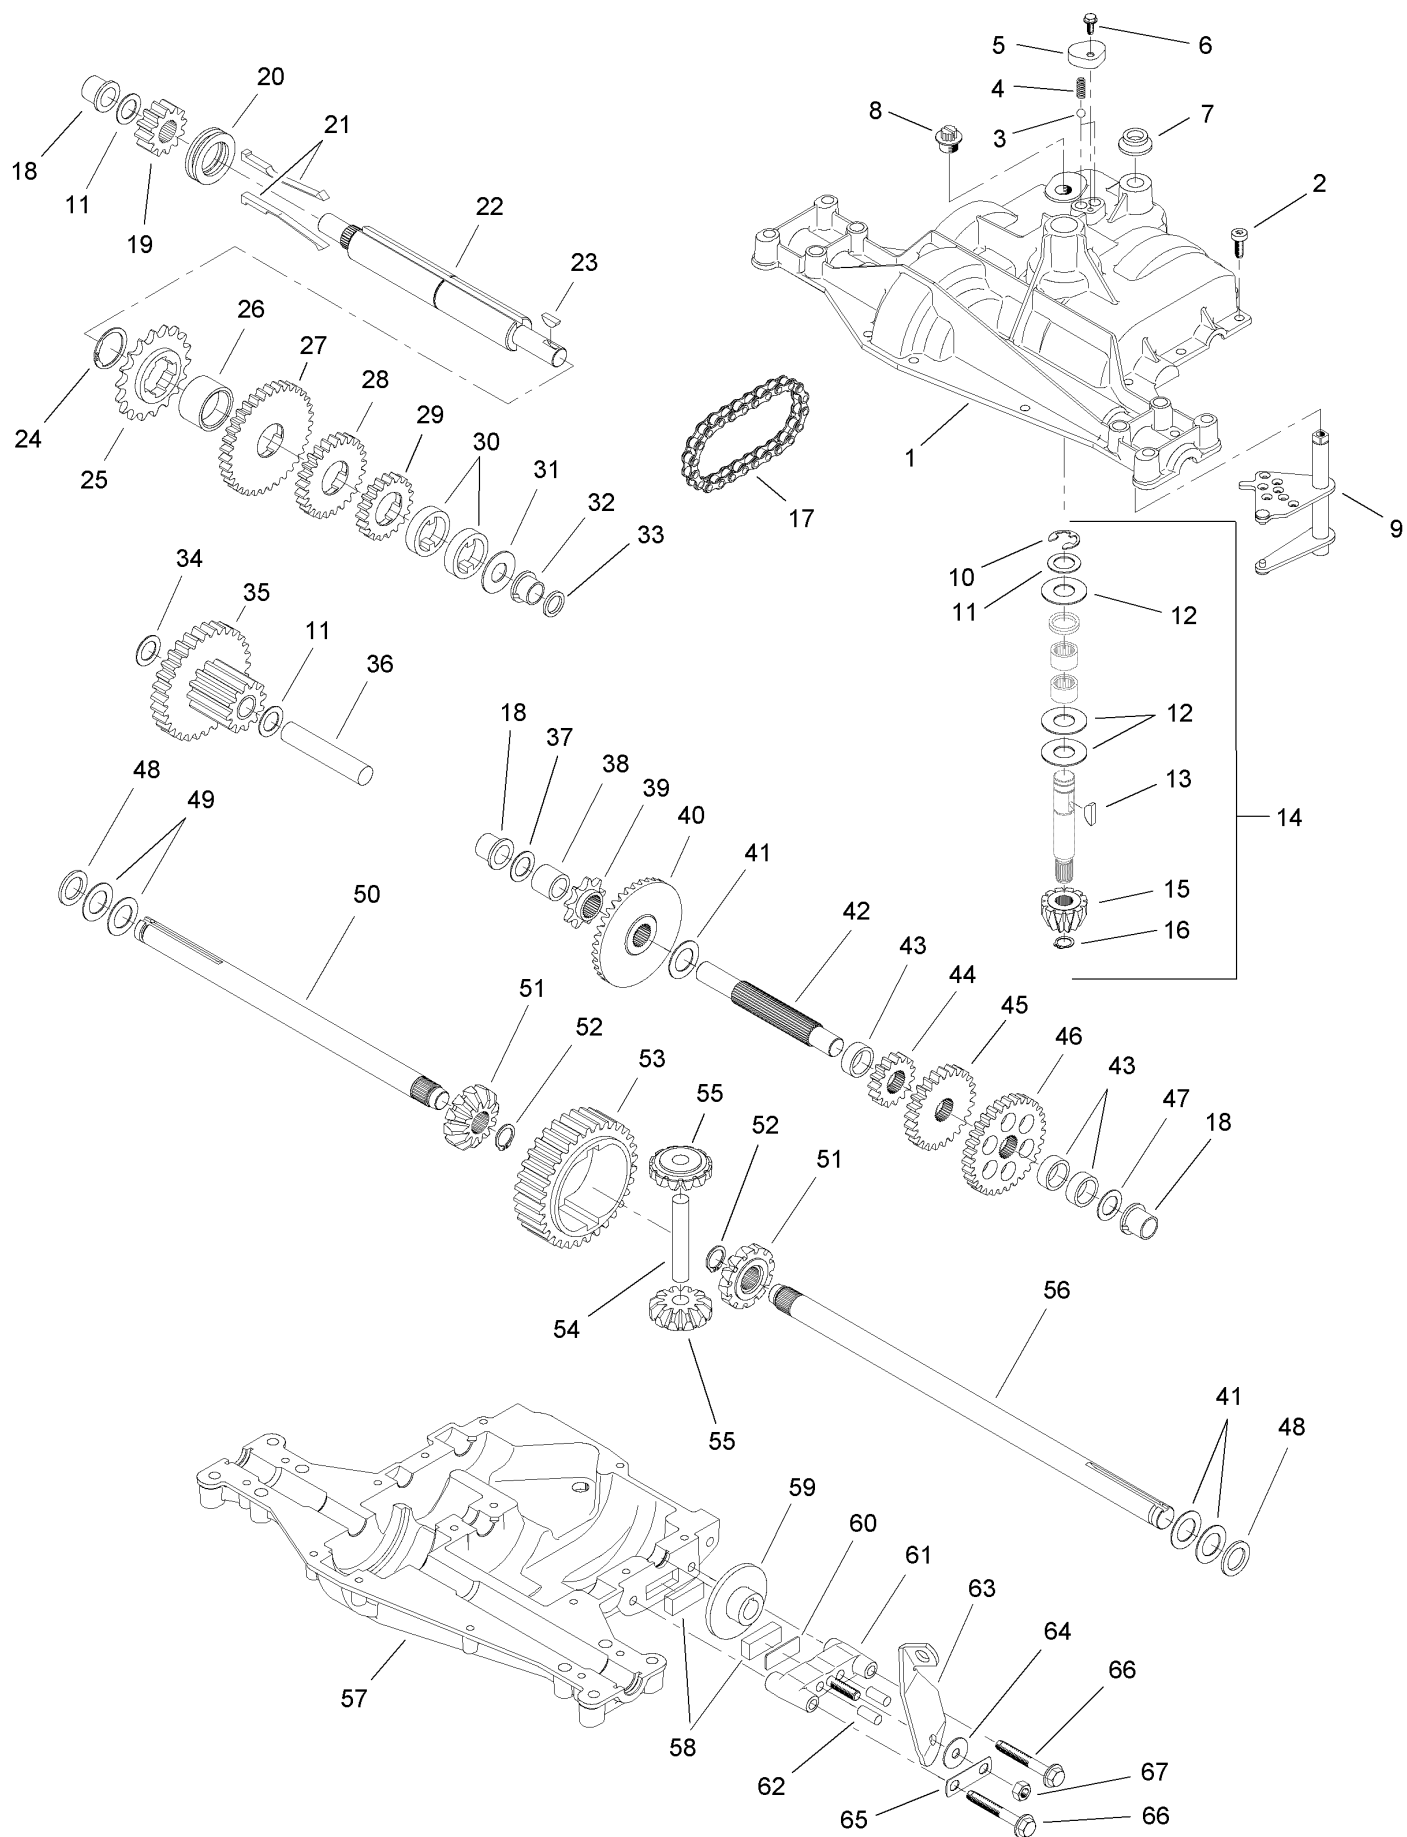

Transaxle Assembly No. 108-0110 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-3152	1	Housing-Upper	36	110-3187	1	Shaft-Idler
2	110-3153	16	Screw-Tapping	37	110-3188	1	Washer-Plain
3	110-3154	2	Ball-Detent	38	110-3189	1	Spacer
4	110-3155	2	Spring-Detent	39	110-3190	1	Sprocket-9T
5	110-3156	1	Cover-Detent	40	110-3191	1	Gear-Bevel, 36T
6	110-3157	1	Screw-Tapping	41	110-3192	2	Shim ASM (.750 Shaft)
7	110-3158	1	V-Ring	42	110-3193	1	Shaft-Drive
8	110-3159	1	Plug-Cap	43	110-3194	3	Spacer
9	110-3160	1	Shifter Kit	44	110-3195	1	Gear-Spur, 15T
10	110-3161	1	Ring-Retaining	45	110-3196	1	Gear-Spur, 23T
11	110-3162	3	Shim ASM (.625 Shaft)	46	110-3197	1	Gear-Spur, 31T
12	110-3163	3	Washer-Plain	47	110-3198	1	Washer-Plain
13	110-3164	1	Key-Woodruff	48	110-3199	2	Washer-Neoprene
14	110-3165	1	Input Shaft ASM	49	110-3200	2	Washer-Plain
15	110-3166	1	Pinion-Bevel, 12T	50	110-3201	1	Axle-LH
16	110-3167	1	Ring-Retaining	51	110-3202	2	Gear-Miter, 12T
17	110-3168	1	Chain-Pitch, 24	52	110-3203	2	Ring-Retaining
18	110-3169	3	Bearing-Flange	53	110-3204	1	Gear-Spur, 32T
19	110-3170	1	Gear-Spur, 12T	54	110-3205	1	Shaft-Cross
20	110-3171	1	Collar-Clutch	55	110-3206	2	Gear-Miter, 12T (Idler)
21	110-3172	1	Clutch Keys ASM	56	110-3207	1	Axle-RH
22	110-3173	1	Shaft-Intermediate	57	110-3208	1	Housing-Lower
23	110-3174	1	Key-Woodruff	58	110-3209	1	Puck Friction Kit
24	110-3175	1	Ring-Retaining	59	110-3210	1	Disc-Brake
25	110-3176	1	Sprocket-18T	60	110-3211	1	Spacer-Puck, Brake
26	110-3177	1	Spacer	61	110-3212	1	Jaw-Brake
27	110-3178	1	Gear-Spur, 35T	62	110-3213	2	Pin-Dowel
28	110-3179	1	Gear-Spur, 27T	63	110-3214	1	Lever-Actuating
29	110-3180	1	Gear-Spur, 19T	64	110-3215	1	Washer-Plain
30	110-3181	2	Spacer	65	110-3216	1	Bracket-Rotation, Anti
31	110-3182	1	Washer-Plain	66	110-3217	2	Screw-Tapping
32	110-3183	1	Bearing-Flange	67	110-3218	1	Nut-Lock
33	110-3184	1	Seal-Oil	68	110-3219	1	Grease ●
34	110-3185	1	Washer-Plain				
35	110-3186	1	Combination Gear ASM (12T 30T)				


● Not illustrated

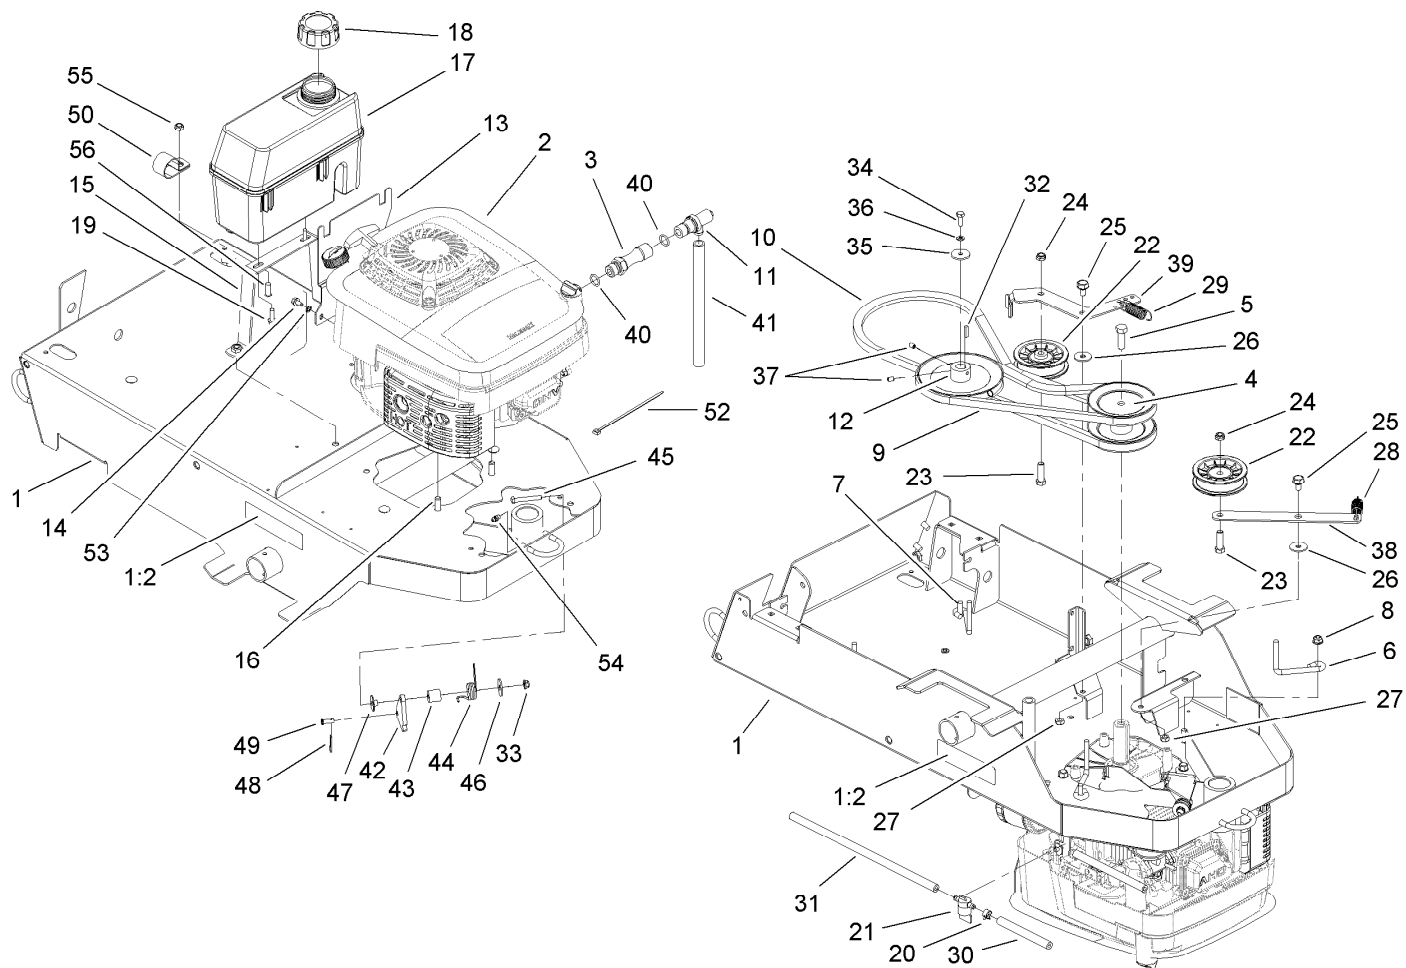

Engine, Fuel Tank and Frame Assembly


Ref.	Part Number	Qty.	Description
1	107-0534	1	Deck ASM
1:2	93-7814	2	Decal-Danger
2	108-0208	1	Engine-Kawasaki, Fj180V1-As16-R
3	108-0263	1	Extension-Drain
4	108-0137	1	Pulley-Engine
5	3212-4	1	Screw-HH
6	93-3855	4	Guide-Belt, RH
7	3230-28	4	Screw-CARR
8	104-8300	4	Nut-Flange, NI
9	703621	1	V-Belt
10	108-0172	1	Belt-V
11	108-0223	1	Valve-Drain, Oil
12	68-0180	1	Pulley-Transmission
13	106-0908-03	1	Bracket-Tank
14	104-2628	3	Screw-HWH
15	84-9160-03	1	Base-Tank
16	95-1726	6	Screw-Taptite
17	106-0625	1	Tank-Fuel
18	93-7198	1	Gas Cap ASM
19	46-8091	2	Screw-HWH
20	2412-98	4	Clamp
21	1-603770	1	Valve-Fuel
22	104-4160	2	Pulley-Idler
23	323-7	2	Screw-HH
24	3296-59	2	Nut-Lock, NI
25	37-8770	2	Bolt-Shoulder
26	5-4460	2	Washer-Pivot

Ref.	Part Number	Qty.	Description
27	3296-47	2	Nut-Lock, NI
28	107-1045	1	Spring-Extension
29	702906	1	Spring-Extension
30	107-0588	1	Hose-Fuel
31	107-0589	1	Hose-Fuel
32	10-8040	1	Key-Square
33	104-7201	1	Nut-HF
34	329-23	1	Screw-HH
35	1-503033	1	Washer-Retainer, Pulley
36	3253-3	1	Washer-Lock
37	3245-41	2	Screw-HSH
38	108-0175	1	Bracket-Idler
39	108-0186	1	Bracket-Idler
40	237-69	2	O-Ring
41	99-3085	1	Hose-Hinge
42	108-0339	1	Detent-Caster
43	108-0344	1	Spacer
44	108-0097	1	Spring-Torsion
45	321-10	1	Screw-HH
46	3256-82	1	Washer-Flat
47	108-0354	1	Bushing-Flange
48	1-806003	1	Pin-Cotter, Hair
49	60-1730	1	Pin-Clevis
50	2412-82	1	Clamp
52	1-303287	4	Tie-Cable
53	3255-7	1	Washer-Lock/EXT
54	302-5	1	Fitting-Grease

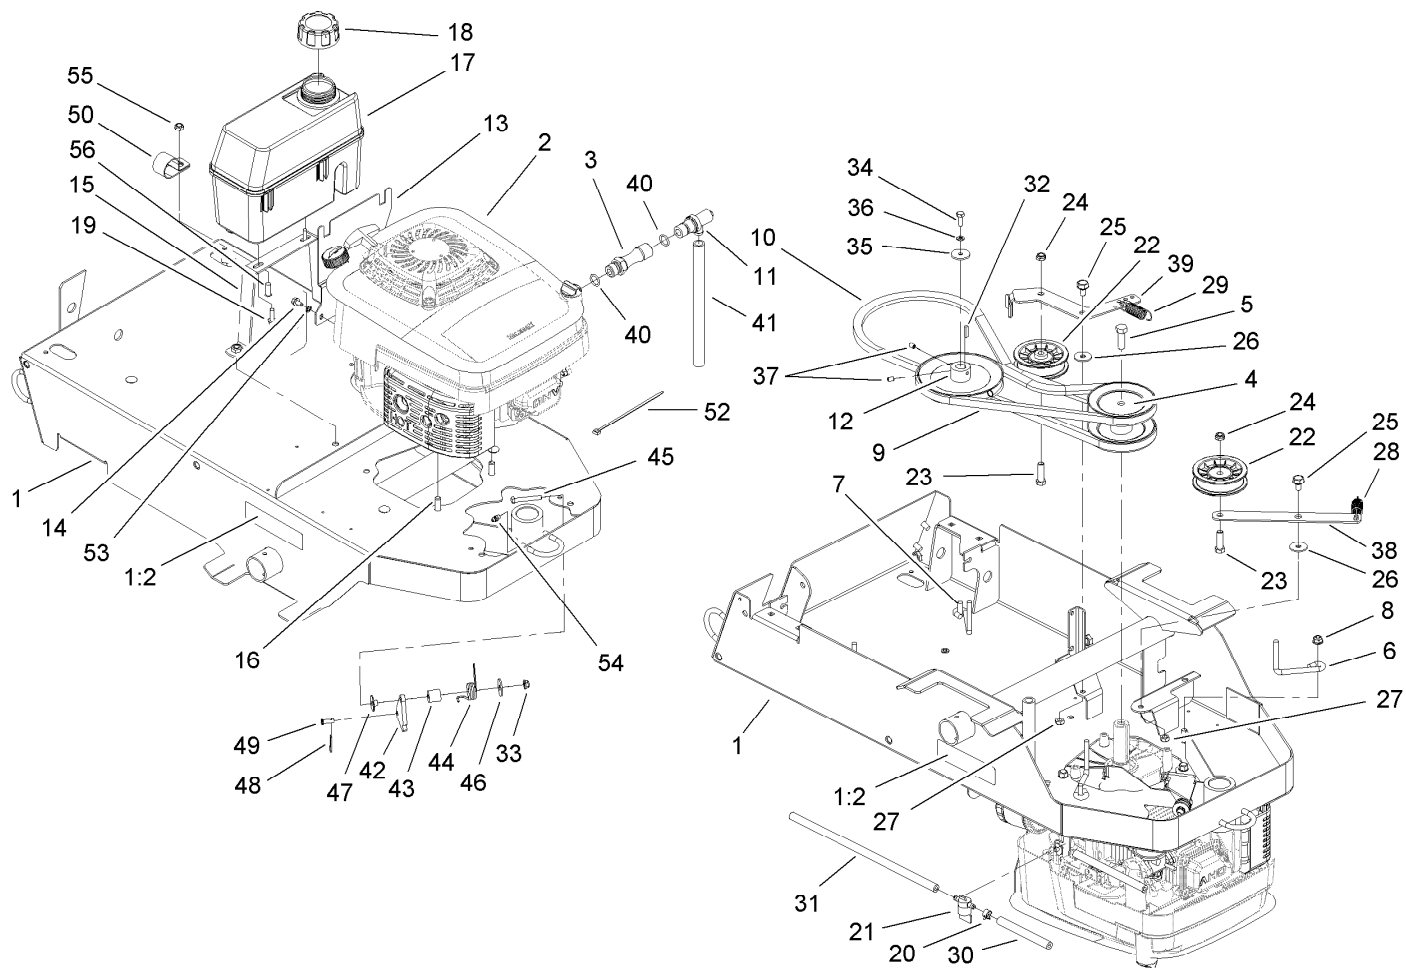

Engine, Fuel Tank and Frame Assembly (continued)


Ref.	Part Number	Qty.	Description
55	104-8301	1	Nut-Flange, NI
56	3231-22	1	Screw-CARR

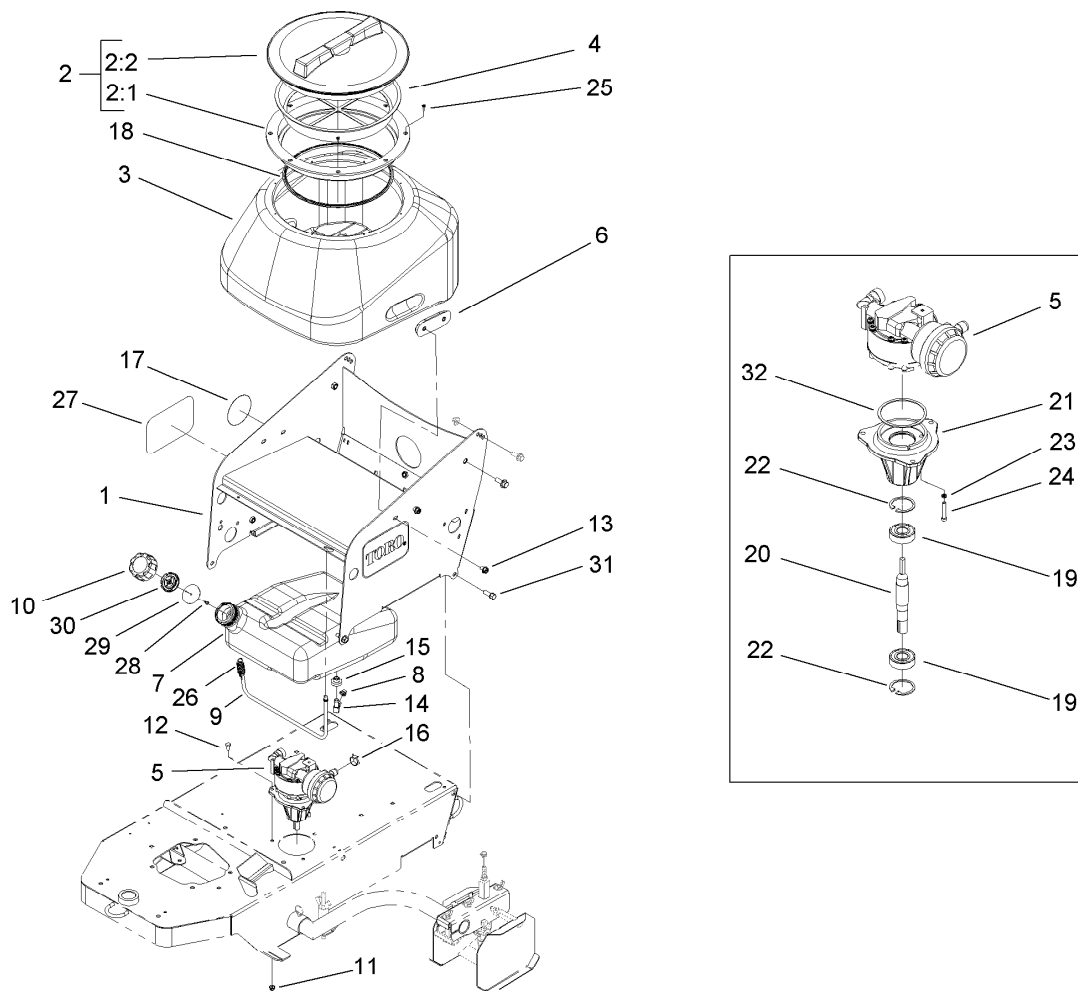

Pump and Tank Assembly

Ref.	Part Number	Qty.	Description
1	108-0211-01	1	Support-Tank
2	108-0268	1	Flange And Lid ASM
2:1	108-0105	1	Flange-Lid
2:2	108-0139	1	Lid
3	108-0103	1	Tank
4	108-0155	1	Strainer-Basket
5	108-0437	1	Pump ASM
6	108-0210	2	Holddown ASM
7	108-0378	1	Tank-Water
8	2412-98	1	Clamp
9	108-0217	1	Rod-Support, Front Tank
10	108-0305	1	Cap-Water, Fresh
11	104-7201	3	Nut-HF
12	321-4	3	Screw-HH
13	3234-28	4	Screw-HHF
14	107-0531	1	Fitting-Elbow, 90 DEG
15	46-6560	1	Bushing


Ref.	Part Number	Qty.	Description
16	2412-135	1	Clamp-Hose
17	108-0233	1	Decal-Flush
18	107-0576	1	O-Ring
19	119-4769	2	Bearing-Ball
20	108-0433	1	Driveshaft-Pump
21	108-0374	1	Housing-Drive, Pump
22	32120-42	2	Ring-Retaining
23	3253-17	2	Washer-Lock
24	3273-23	2	Screw-HH
25	107-0574	8	Screw-PFH
26	107-1045	1	Spring-Extension
27	62-5550	2	Decal
28	60-9750	1	Stud-Barbed
29	56-6110	1	Gasket-Vented
30	55-3550	1	Insert-Cap, Gas
31	105-6245	4	Screw-Tapping
32	107-0554	1	Gasket-Seal, Pump

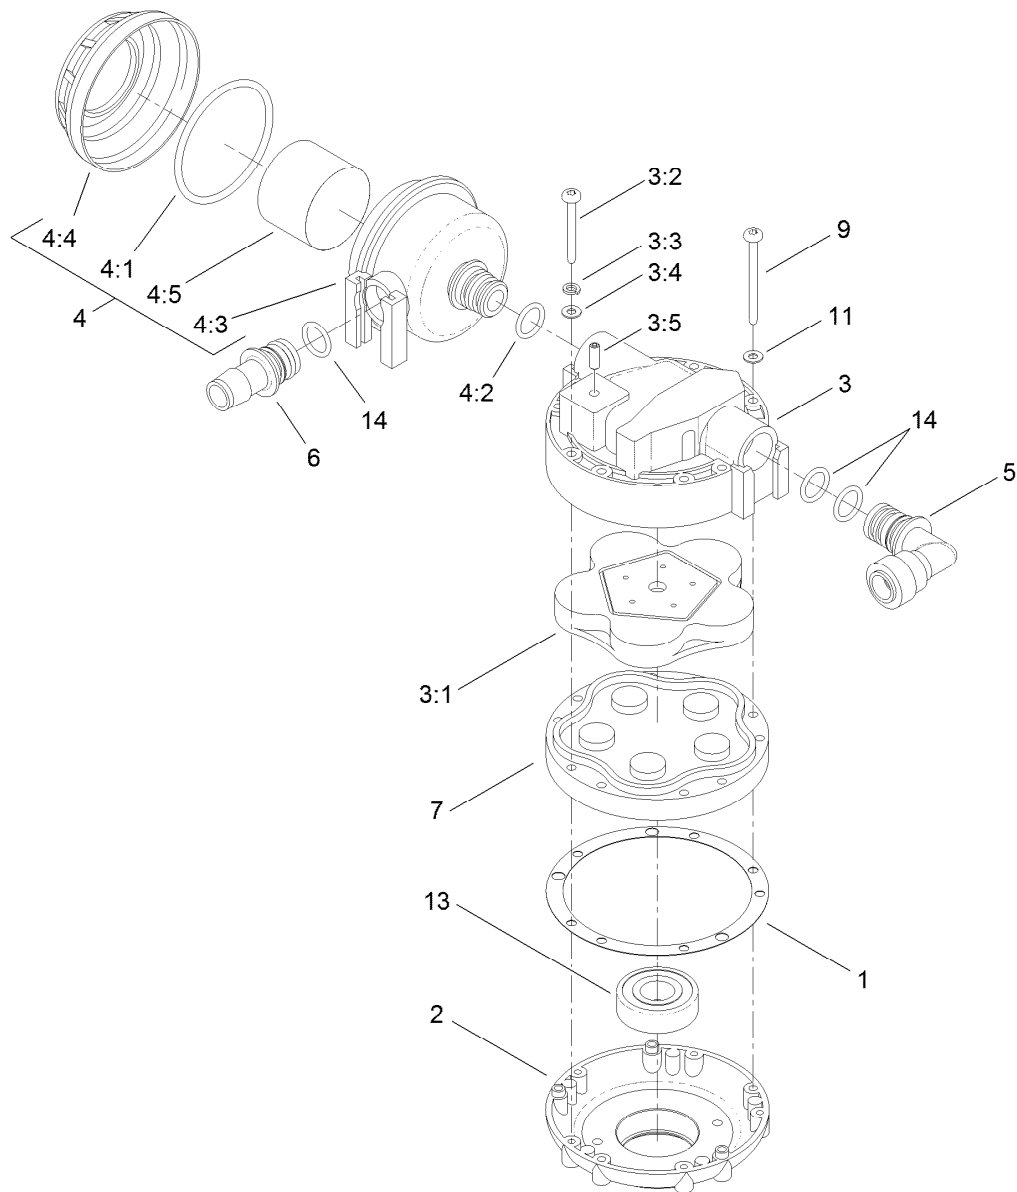

Pump Assembly No. 108-0437

Ref.	Part Number	Qty.	Description
1	107-0553	1	Gasket-Head, Pump
2	108-0526	1	Pump Endbell ASM
3	108-0431	1	Pump Head ASM
3:1	108-0313	1	Check Valve Kit
3:2	107-0525	5	Screw-Thread Forming
3:3	107-0527	5	Washer-Lock, Split
3:4	107-0528	5	Washer-Flat
3:5	107-0529	1	Screw
4	108-0368	1	Filter ASM (40 Mesh)
4:1	935901	1	O-Ring
4:2	237-154	1	O-Ring


Ref.	Part Number	Qty.	Description
4:3	112-6783	1	Housing-Filter
4:4	112-6784	1	Cover-Filter
4:5	112-6785	1	Screen-Filter
5	108-0366	1	Fitting-Elbow, 90 DEG
6	108-0367	1	Fitting-Straight
7	119-2886	1	Wobbler Plate/Diaphragm ASM
9	107-0526	5	Screw-Thread Forming
11	107-0528	5	Washer-Flat
13	119-4769	1	Bearing-Ball
14	237-154	3	O-Ring

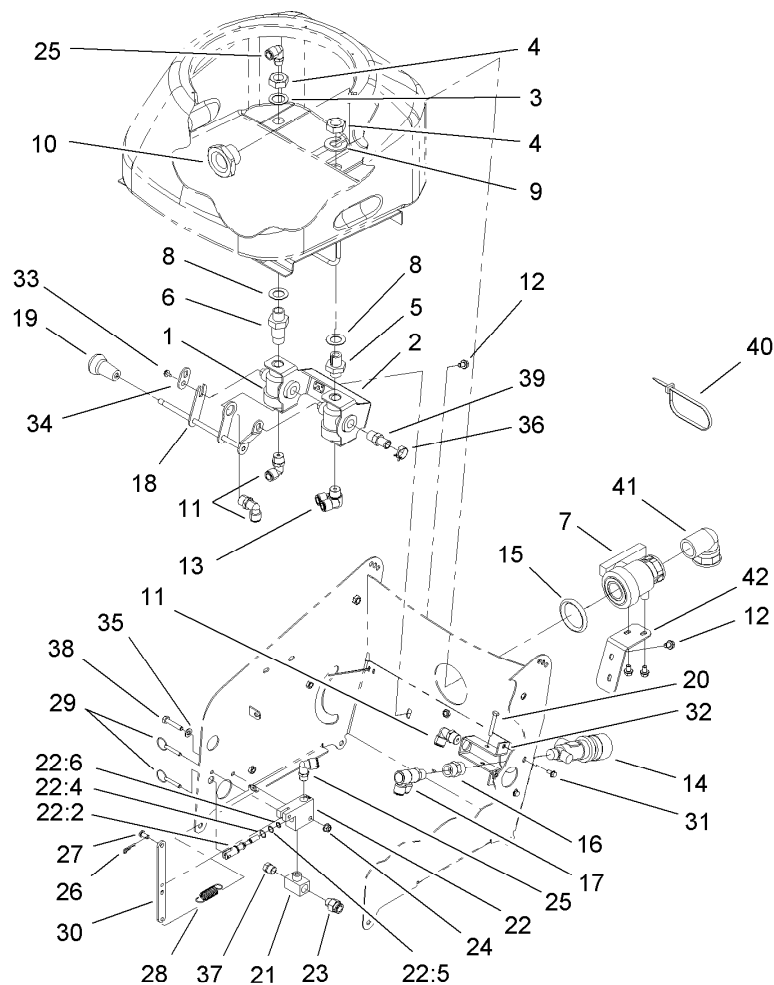

Valve Assembly

Ref.	Part Number	Qty.	Description
1	108-0530	2	Valve, 3-Way
2	108-0382	1	Bracket-Valve, 3-Way
3	107-0585	1	Washer-Flat
4	108-0082	2	Nut-Jam
5	108-0531	1	Port-Outlet
6	108-0532	1	Port-Recirculation
7	108-0069	1	Valve-Ball
8	52-7270	2	Washer-Rubber
9	108-0363	1	Washer-Slotted
10	108-0067	1	Fitting-Nut
11	108-0534	3	Fitting-Elbow, 90 DEG
12	100-1719	5	Screw-Flange
13	108-0346	1	Fitting-Tee
14	108-0158	1	Regulator-Pressure
15	107-0575	1	O-Ring
16	108-0548	1	Fitting-Straight
17	108-0535	1	Fitting-Tee
18	108-0515	1	Lever ASM
19	99-7981	1	Knob-Grip, Soft
20	321-10	1	Screw-HH
21	108-0542	1	Fitting-Tee
22	108-0512	1	Valve-Shutoff, Paint
22:2	108-0511	1	Spool-Valve



Ref.	Part Number	Qty.	Description
22:4	237-30	1	O-Ring
22:5	237-7	1	O-Ring
22:6	237-21	1	O-Ring
23	108-0468	1	Fitting-Straight
24	104-8300	1	Nut-Flange, NI
25	108-0549	2	Fitting-Elbow, 90 DEG
26	1-806003	1	Pin-Cotter, Hair
27	9321204	1	Pin-Clevis
28	702906	1	Spring-Extension
29	100-7264	2	Pin-Cotterless
30	108-0514	1	Lever-Shutoff
31	3234-13	2	Screw-HHF
32	108-0395	1	Bracket-Valve
33	32144-4	1	Screw-HWH
34	107-0590	1	Retainer-Valve, 3 Way
35	3256-23	1	Washer-Flat
36	2412-135	1	Clamp-Hose
37	108-0544	1	Fitting-Plug
38	322-8	1	Screw-HH
39	108-0454	1	Fitting-Straight
40	1-303287	1	Tie-Cable
41	108-0065	1	Fitting-Elbow, 90
42	108-0066	1	Bracket-Valve, Drain

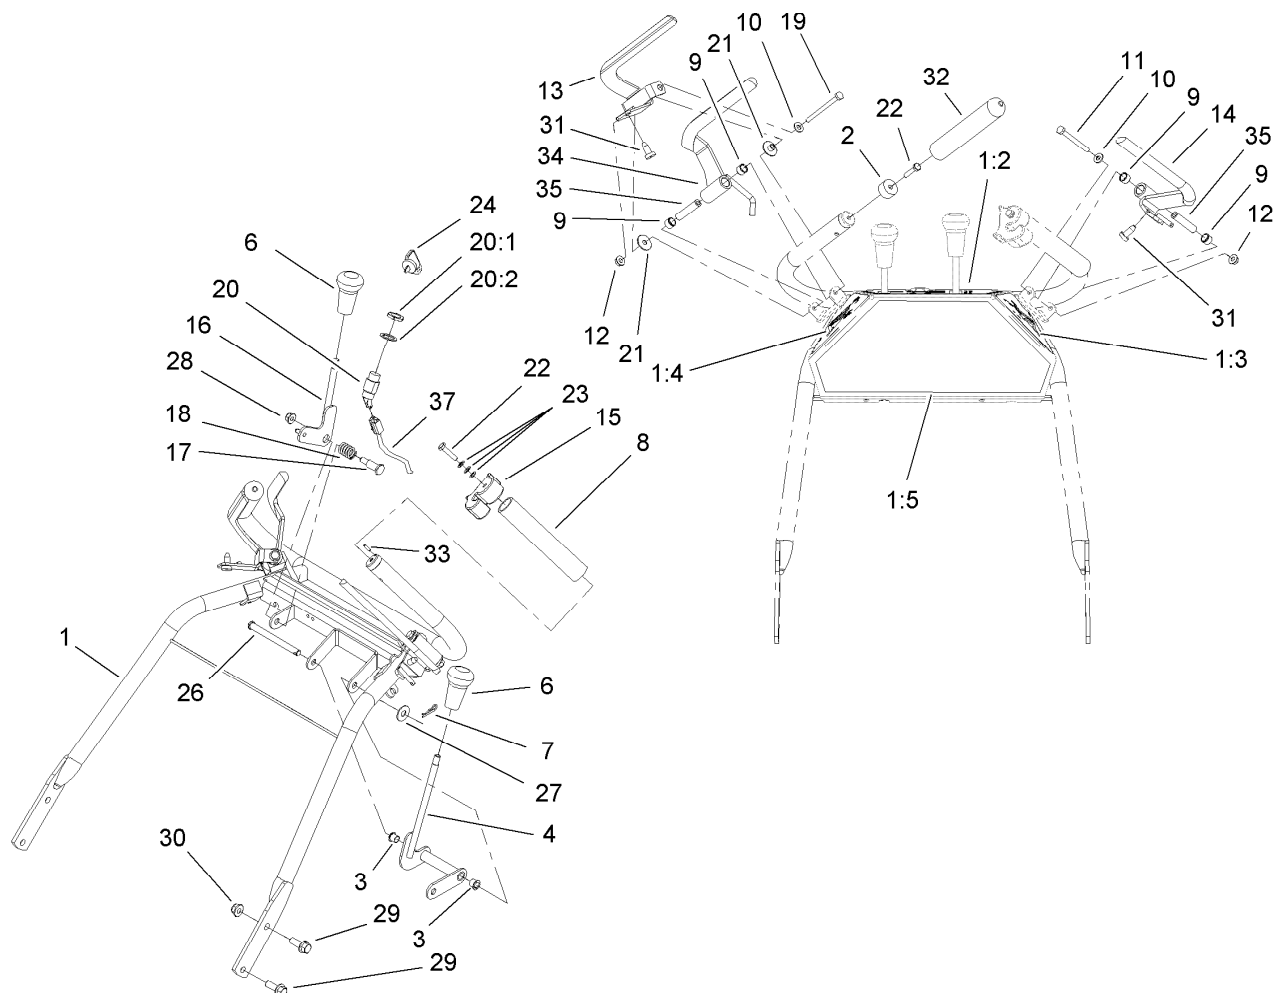

Operator Control Assembly


Ref.	Part Number	Qty.	Description
1	107-0535	1	Handle ASM
1:2	108-0326	1	Decal-Console
1:3	108-0327	1	Decal-Control, Left
1:4	108-0328	1	Decal-Control, Right
1:5	108-0343	1	Decal
2	106-5248-03	1	Spacer
3	52-2891	2	Bushing-Flanged, Nylon
4	108-0488	1	Shift Lever ASM
6	99-7981	2	Knob-Grip, Soft
7	1-806003	1	Pin-Cotter, Hair
8	103-0815	1	Grip-Bar, Handle
9	1-413152	4	Bushing-Sleeve
10	3256-22	2	Washer-Flat
11	321-14	1	Screw-HH
12	104-7201	2	Nut-HF
13	108-0095	1	Caster Release Control Lever ASM
14	108-0196-03	1	Left Control ASM
15	108-0458	1	Latch-Handle, Nozzle
16	108-0449	1	Brake Handle ASM
17	63-2650	1	Screw-Shoulder

Ref.	Part Number	Qty.	Description
18	107-3017	1	Spring-Compression
19	321-19	1	Screw-HH
20	29-5560	1	Switch-On / Off
20:1	218-461	1	Nut-HH
20:2	3254-5	1	Washer-Tooth, Internal
21	108-0354	2	Bushing-Flange
22	103-0235	2	Screw-HH
23	1-303435	3	Washer-Spring
24	63-8360	1	Key-Ignition
26	100-1413	1	Pin-Clevis
27	93-1633	1	Washer
28	104-8300	1	Nut-Flange, NI
29	3234-42	4	Screw-HHF
30	104-8301	2	Nut-Flange, NI
31	87-8460	2	Bumper-Rubber
32	108-0098	1	Grip-Handle
33	103-0464	1	Pin-Spring
34	108-0362-03	1	RH Control Lever ASM
35	103-0027	2	Bushing-Lever, Drive
37	108-0230	1	Harness-Wire

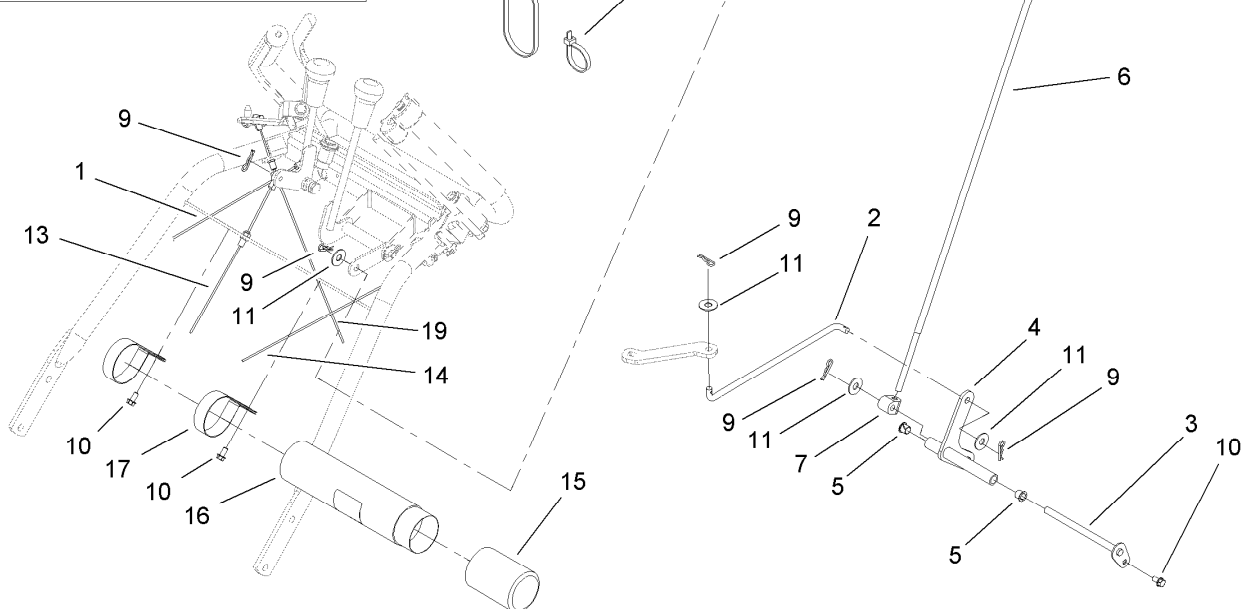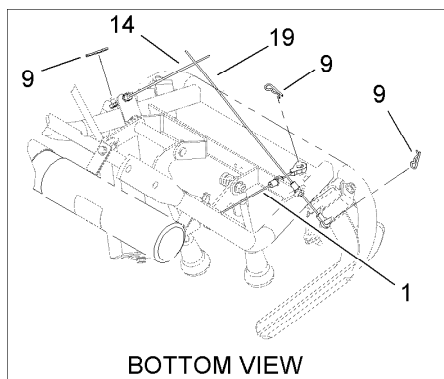

Cable and Steering Control Assembly


Ref.	Part Number	Qty.	Description
1	108-0204	1	Cable-Traction
2	108-0489	1	Linkage-Shift, Horizontal
3	108-0481	1	Pivot Shaft ASM
4	108-0484	1	Bell Crank ASM
5	52-2891	2	Bushing-Flanged, Nylon
6	108-0490	1	Rod-Control, Speed
7	74-0521	1	Fitting-Rod
9	1-806003	8	Pin-Cotter, Hair
10	32144-4	3	Screw-HWH
11	93-1633	3	Washer
13	108-0501	1	Cable-Brake
14	108-0505	1	Cable-Shut Off, Nozzle
15	104-7048	1	Cap-Housing
16	104-7050	1	Tube-Manual
17	2412-133	2	R-Clamp
19	108-0323	1	Cable-Release, Caster
20	1-303287	2	Tie-Cable
21	3290-379	3	Tie-Cable

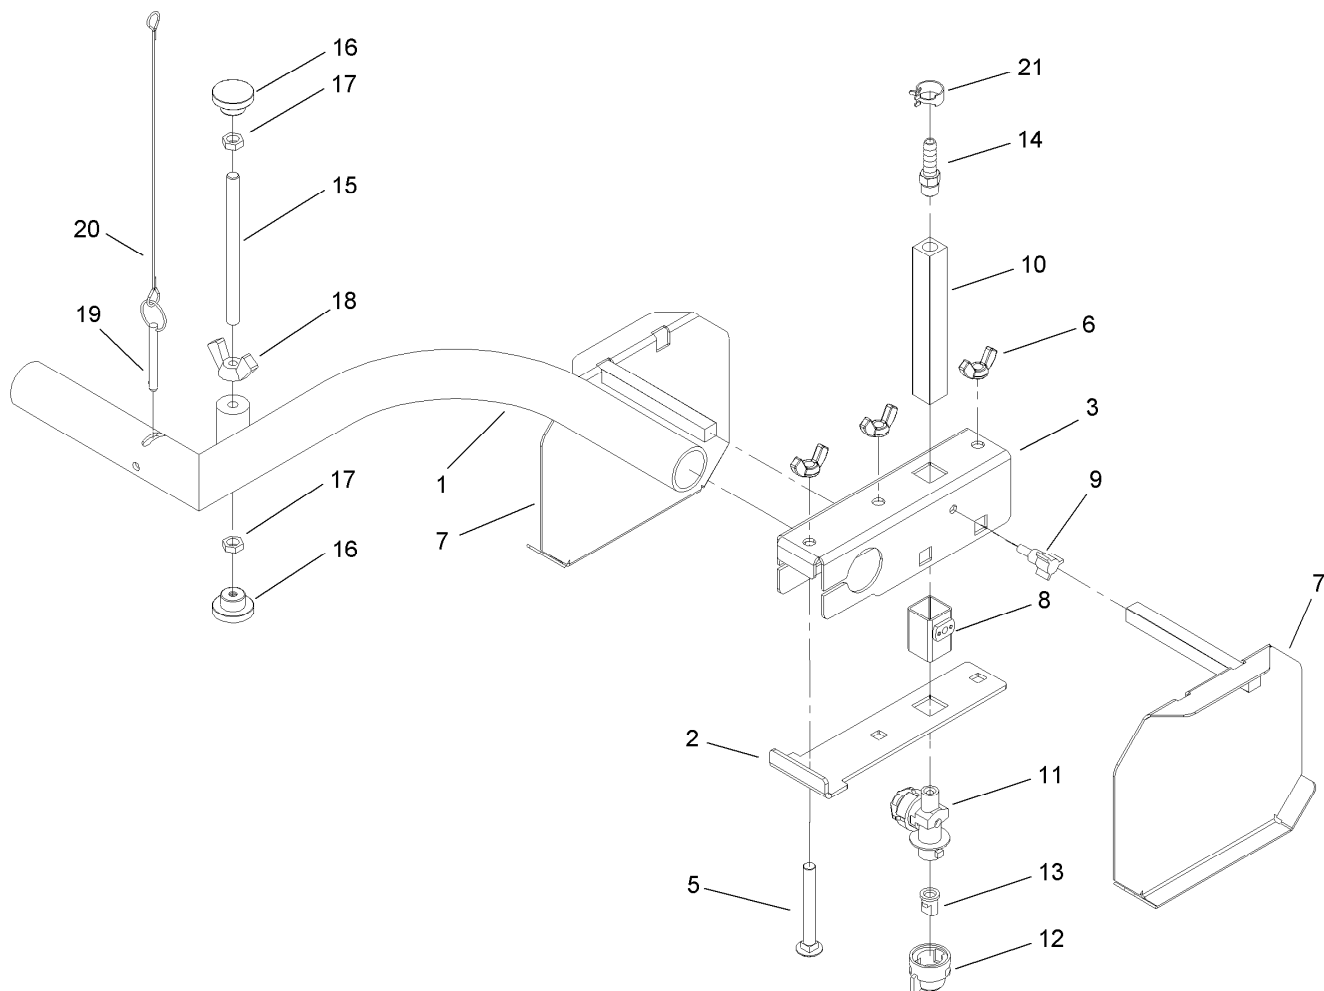

Spray Arm and Fitting Assembly


Ref.	Part Number	Qty.	Description
1	108-0284	1	Arm ASM
2	108-0287	1	Bracket-Clamp
3	108-0286	1	Bracket-Nozzle
5	3231-10	3	Screw-CARR
6	1-543678	3	Wingnut
7	108-0148	2	Shield ASM
8	108-0257	1	Bracket-Nozzle
9	233-70	1	Knob-Star, Three
10	108-0099	1	Tube-Nozzle
11	108-0125	1	Nozzle-Diaphragm, No Drip
12	107-0524	1	Single Fan Cap ASM
12	108-0129	1	Cap ASM
13	107-0523	1	Nozzle-Single Fan, 6504E

Ref.	Part Number	Qty.	Description
13	108-0130	1	Nozzle-Twin Jet, 6508
13	108-0131	1	Nozzle-Twin Jet, 8008
13	108-0132	1	Nozzle-Twin Jet, 6506
13	108-0133	1	Nozzle-Twinjet, 8006E (Standard)
14	108-0266	1	Fitting-Straight
15	108-0292	1	Rod-Threaded
16	108-0333	2	Knob-Circular
17	3218-3	2	Nut-Jam
18	32103-3	1	Nut-Wing
19	108-0094	1	Pin-Cotterless
20	107-9853	1	Lanyard
21	2412-143	1	Clamp-Hose

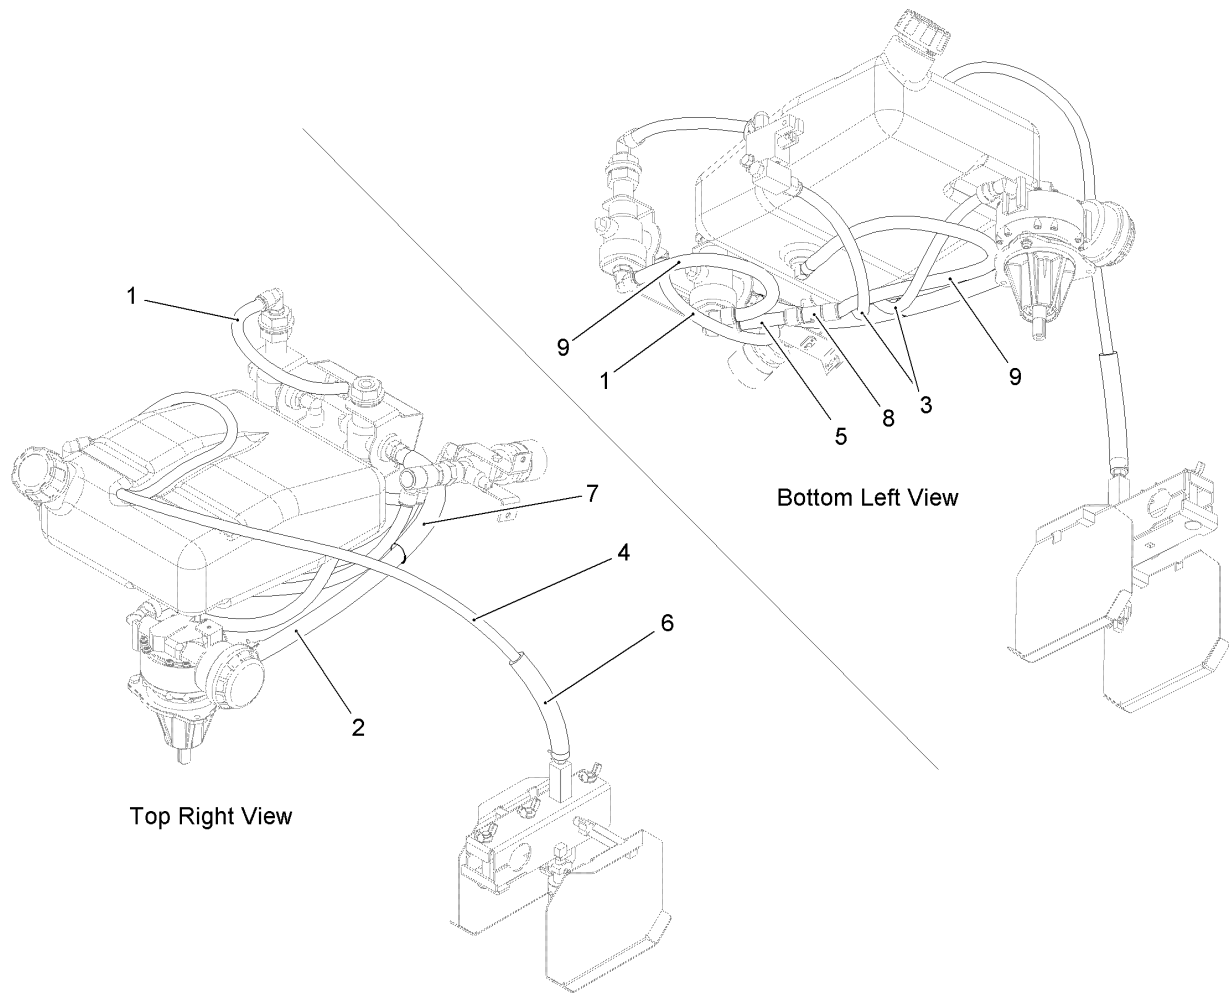


Hose Plumbing Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-0443	2	Hose
2	108-0446	1	Hose
3	108-0442	2	Hose
4	108-0445	1	Hose
5	108-0440	1	Hose
6	107-0570	1	Hose
7	107-0591	1	Guard-Hose, 8 Inch
8	107-0594	1	Valve-Check
9	108-0441	2	Hose

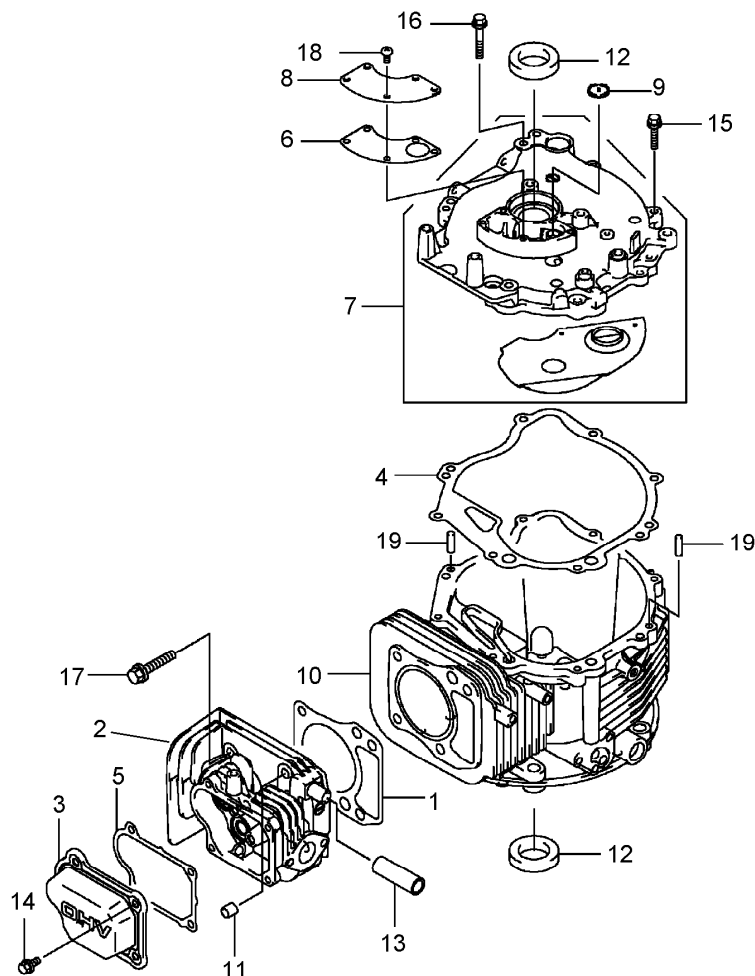


Cylinder and Crankcase Assembly

Ref.	Part Number	Qty.	Description
1	108-2627	1	Gasket-Head
2	108-2501	1	Head-Cylinder
3	108-2502	1	Case-Rocker
4	108-2503	1	Gasket
5	108-2504	1	Gasket-Case, Rocker
6	108-2505	1	Gasket-Breather
7	108-2506	1	Cover
8	108-2507	1	Cover-Breather
9	108-2508	1	Valve-Breather
10	108-2509	1	Crankcase-Complete
11	108-2510	2	Pin
12	108-2511	2	Seal-Oil, Tc (28-44-9)
13	108-2512	1	Tube (12X16X49)
14	100-2804	4	Bolt-Flanged
15	100-2610	7	Bolt-Flanged (6X25)
16	108-2513	1	Bolt-Flange
17	108-2514	4	Bolt-Flange
18	100-2763	5	Screw-Pan
19	108-2515	2	Pin-Dowel (6X12)

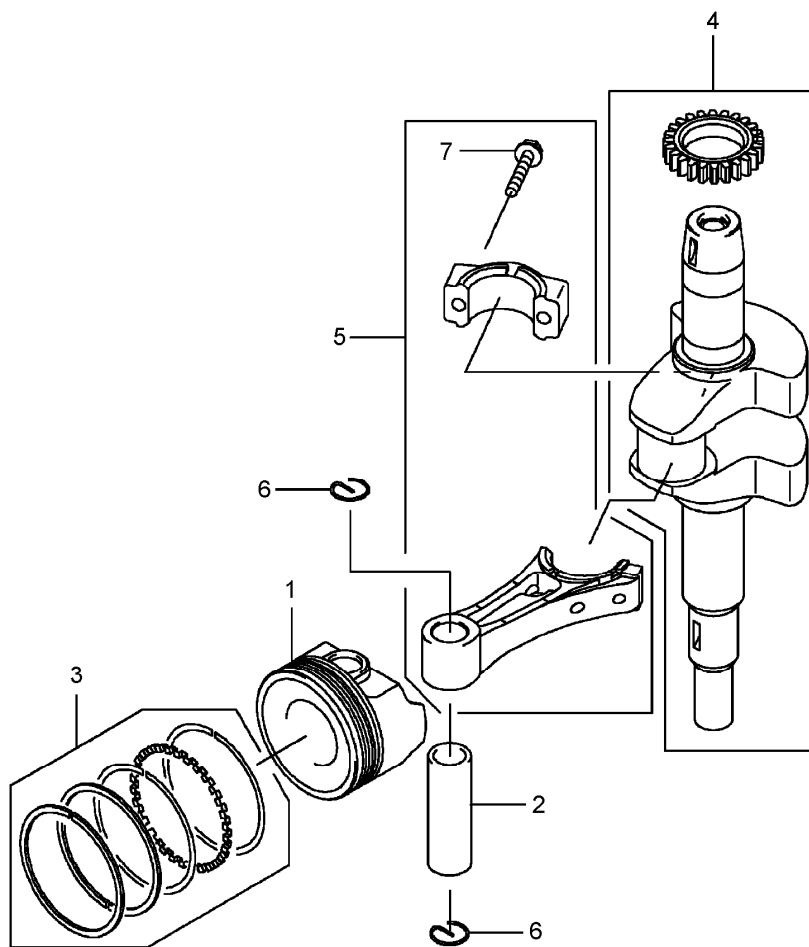


Piston and Crankshaft Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-2516	1	Piston-Engine
2	108-2517	1	Pin-Piston
3	108-2518	1	Ring-Set, Piston
4	107-0560	1	Crankshaft
5	108-2520	1	Connecting Rod ASM
6	108-2521	2	Ring-Snap
7	108-2522	2	Bolt-Flanged (6X30)

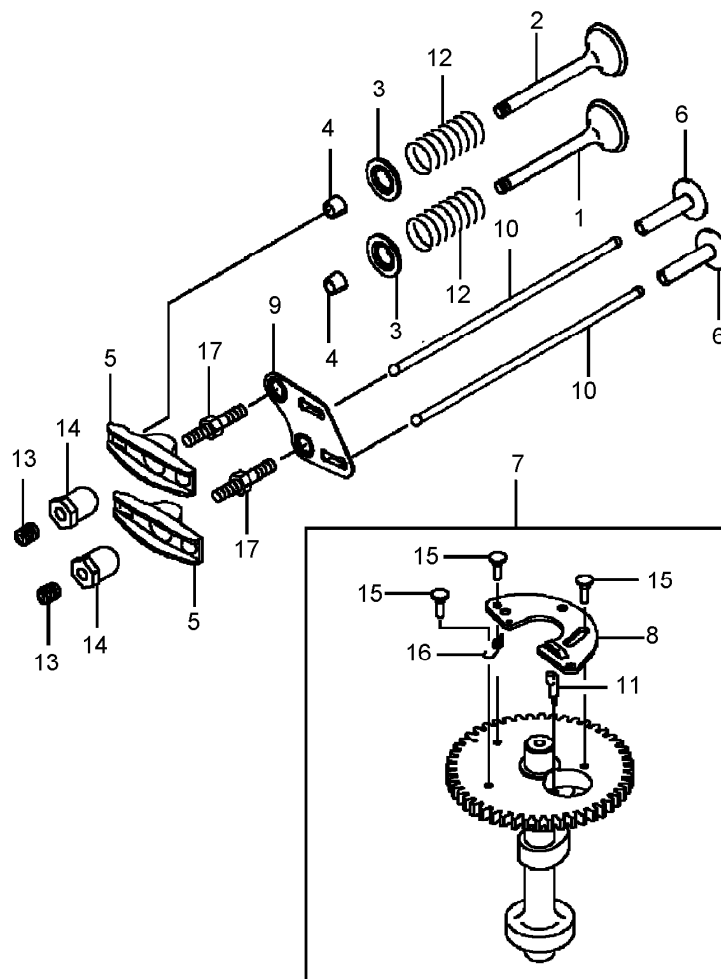


Valve and Camshaft Assembly

Ref.	Part Number	Qty.	Description
1	108-2523	1	Valve-Intake
2	108-2524	1	Valve-Exhaust
3	108-2525	2	Retainer-Spring, Valve
4	95-9744	4	Collet
5	108-2526	2	Arm-Rocker
6	108-2527	2	Tappet
7	108-2528	1	Camshaft Valve ASM
8	108-2529	1	Weight
9	108-2530	1	Guide
10	108-2531	2	Rod-Push
11	108-2532	1	Arm
12	108-2533	2	Spring-Valve, Engine
13	108-2534	2	Screw
14	93-8534	2	Nut
15	108-2535	3	Pin
16	108-2536	1	Spring
17	108-2537	2	Bolt

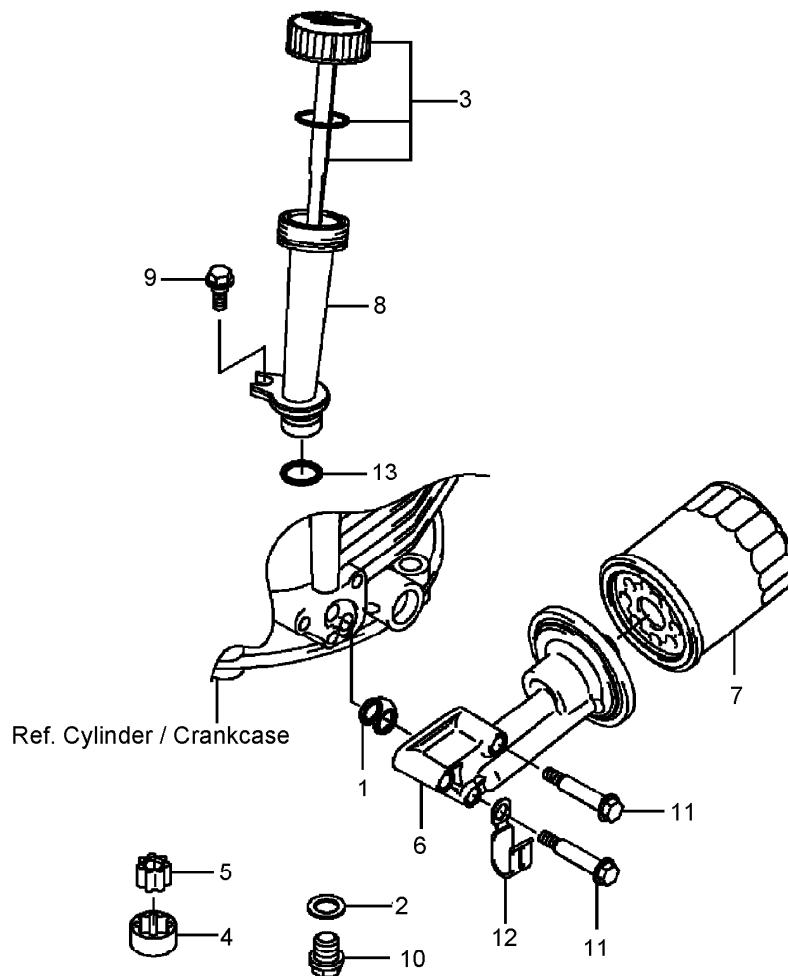


Lubrication Equipment Assembly

Ref.	Part Number	Qty.	Description
1	100-2644	1	Gasket
2	108-2538	1	Gasket
3	108-2539	1	Cap ASM
4	108-2540	1	Rotor-Pump
5	108-2541	1	Rotor-Pump
6	108-2542	1	Pipe
7	108-3842	1	Filter-Oil
8	108-2543	1	Filler
9	108-2544	1	Bolt
10	108-2545	1	Bolt
11	108-2546	3	Bolt
12	108-2547	1	Clamp
13	100-2690	1	O-Ring (16Mm)

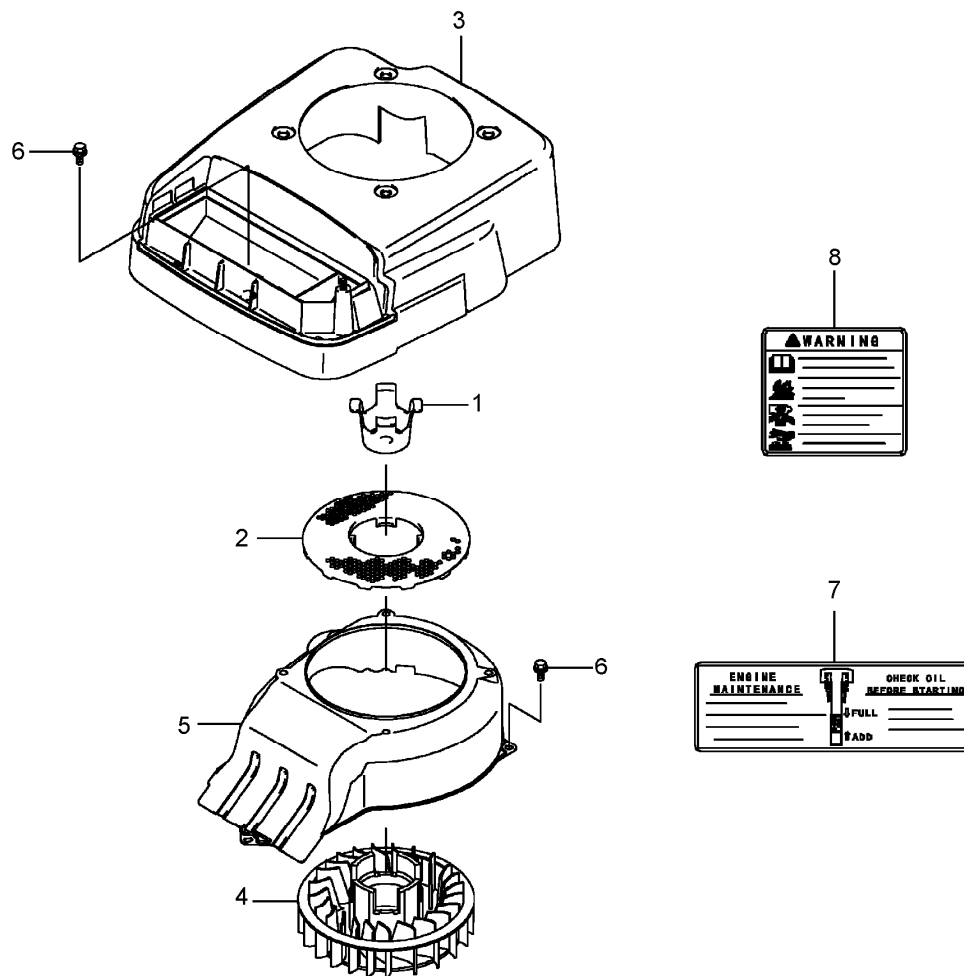


Cooling Equipment Assembly

Ref.	Part Number	Qty.	Description
1	108-2548	1	Bracket-Fan
2	108-2549	1	Screen
3	108-2550	1	Cover
4	108-2551	1	Fan
5	108-2552	1	Housing-Fan
6	100-2804	2	Bolt-Flanged
7	108-2624	1	Label-Manual
8	108-2625	1	Label-Warning

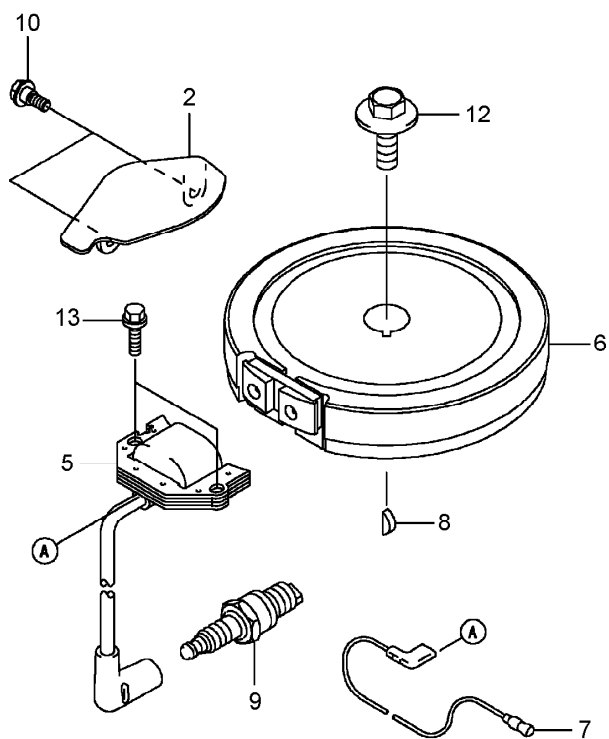


Electrical Equipment Assembly

Ref.	Part Number	Qty.	Description
2	108-2553	1	Cover
5	108-2554	1	Coil Ignition ASM
6	108-2555	1	Flywheel
7	107-0567	1	Wire-Lead
8	93-8571	1	Key
9	KW10676	1	Spark Plug
10	108-2544	2	Bolt
12	108-2559	1	Bolt (12X30)
13	95-9893	2	Bolt-Flanged (6X20)

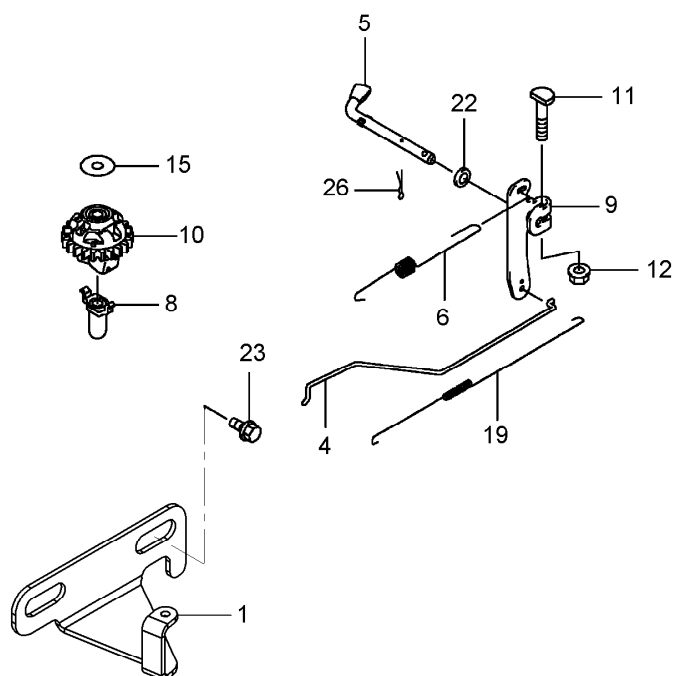


Control Equipment Assembly

Ref.	Part Number	Qty.	Description
1	107-0568	1	Panel-Control
4	108-2563	1	Link-Throttle
5	108-2564	1	Arm-Pivot
6	108-2565	1	Spring-Governor
8	108-2567	1	Sleeve
9	108-2568	1	Arm-Governor
10	108-2569	1	Governor ASM
11	108-2570	1	Bolt
12	108-2571	1	Nut
15	93-8612	1	Washer
19	108-2573	1	Spring-Throttle
22	108-2575	1	Washer (6.5X11.5X2.0)
23	100-2804	2	Bolt-Flanged
26	108-2578	1	Pin-Snap

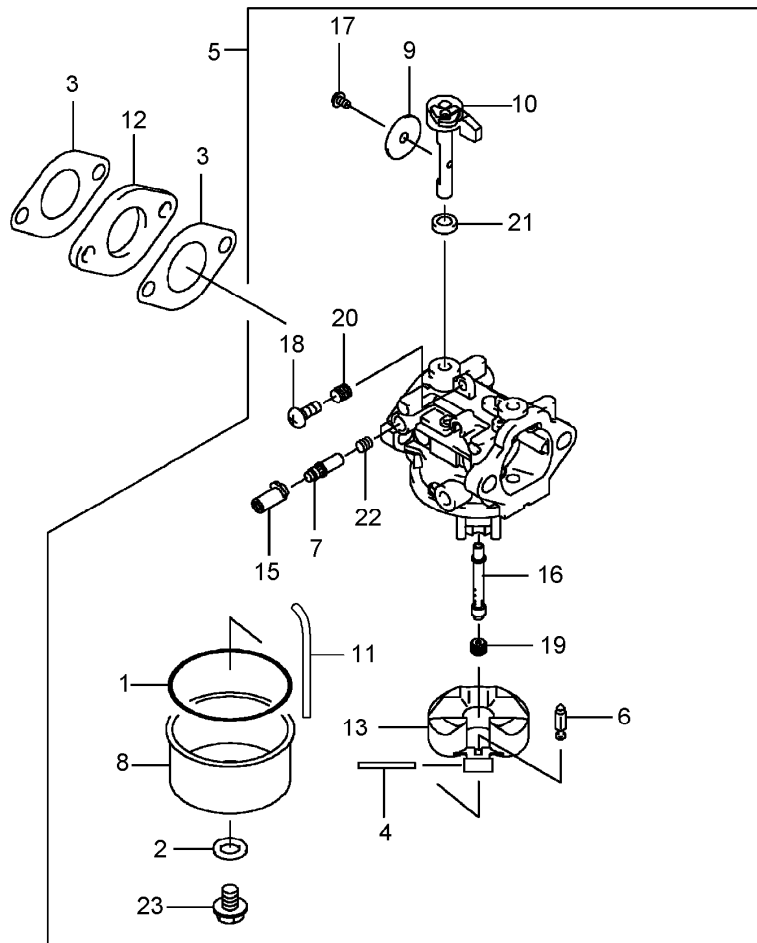


Carburetor Assembly

Ref.	Part Number	Qty.	Description
1	108-2579	1	Gasket
2	108-2580	1	Gasket-Screw
3	108-2581	2	Gasket
4	108-2582	1	Shaft
5	107-0561	1	Carburetor ASM
6	108-2584	1	Needle-Jet
7	108-2585	1	Screw-Pilot, Air
8	107-0563	1	Chamber-Float
9	108-2587	1	Valve-Throttle
10	108-2588	1	Shaft-Carburetor
11	107-0566	1	Tube
12	108-2590	1	Insulator
13	108-2591	1	Float ASM
15	108-2593	1	Limiter
16	107-0562	1	Nozzle-Main
17	108-2595	1	Screw
18	108-2596	1	Screw
19	107-0564	1	Jet-Main (No.78)
20	108-2598	1	Spring
21	108-2599	1	Seal
22	108-2600	1	Spring
23	108-2601	1	Screw

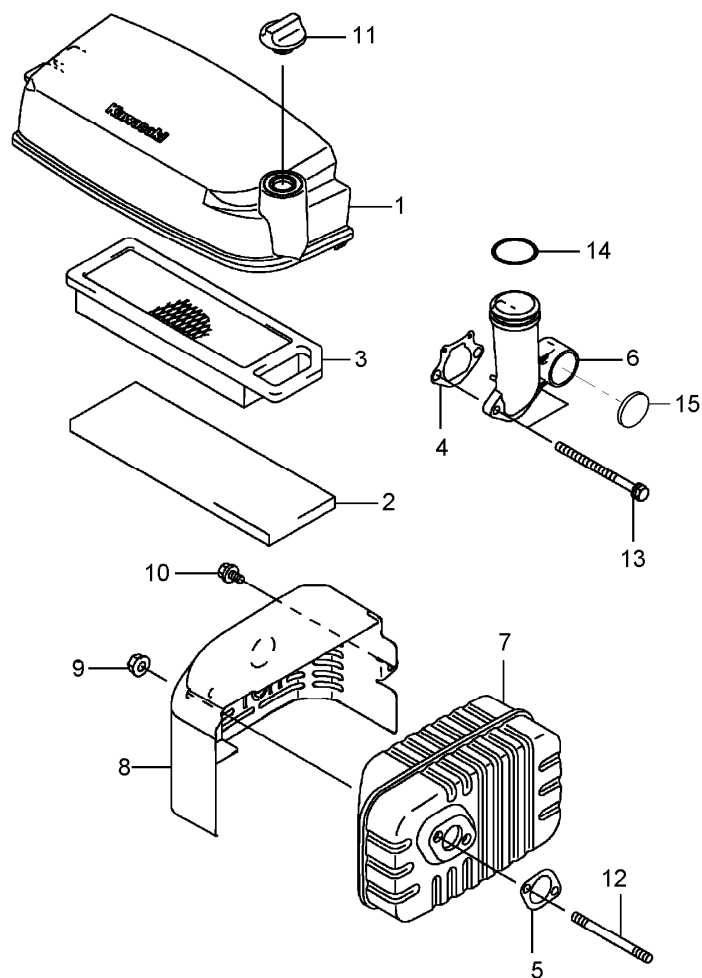

Air Filter and Muffler Assembly

Ref.	Part Number	Qty.	Description
1	108-2602	1	Case-Filter, Air
2	108-2603	1	Element-Filter, Air
3	108-2604	1	Air Filter Element ASM
4	108-2605	1	Gasket-Pipe, Intake
5	108-2606	1	Gasket-Muffler
6	108-2607	1	Pipe-Intake
7	108-2608	1	Muffler
8	108-2609	1	Cover-Muffler
9	108-2610	2	Nut
10	108-2611	1	Bolt (6X10)
11	108-2612	1	Nut
12	100-2761	2	Bolt-Stud
13	100-2762	2	Bolt
14	108-2613	1	O-Ring (32Mm)
15	107-0565	1	Pump-Priming

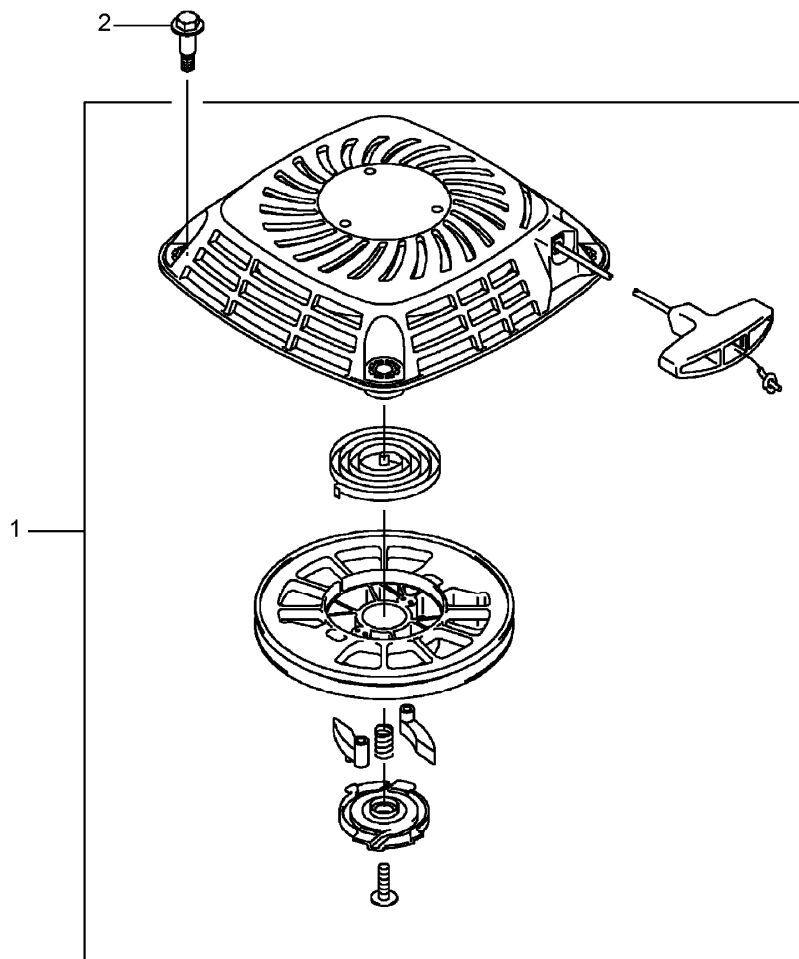

Recoil Starter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-2614	1	Starter-Recoil
2	108-2615	4	Bolt

Attachments and Accessories

For 42053 Line Painter 1200

Product Name	Model/Part
Hourmeter Kit	107-0571
Pressure Gauge Kit	107-0572
Hand Wand Kit.....	42047



Count on it.