



Count on it.

Parts Catalog

Line Painter 1200

Model No. 42053—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Front Caster and Rear Transaxle Assembly	4
Transaxle Assembly No. 108-0110	6
Engine, Fuel Tank and Frame Assembly	8
Pump and Tank Assembly	10
Pump Assembly No. 108-0437	11
Valve Assembly	12
Operator Control Assembly	14
Cable and Steering Control Assembly	15
Spray Arm and Fitting Assembly	16
Hose Plumbing Assembly	17
Cylinder and Crankcase Assembly	18
Piston and Crankshaft Assembly	19
Valve and Camshaft Assembly	20
Lubrication Equipment Assembly	21
Cooling Equipment Assembly	22
Electric Equipment Assembly	23
Control Equipment Assembly	24
Carburetor Assembly	25
Air Filter and Muffler Assembly	26
Fuel Tank and Fuel Valve Assembly	27
Starter Assembly	28
Label Set	29
Attachments and Accessories	30

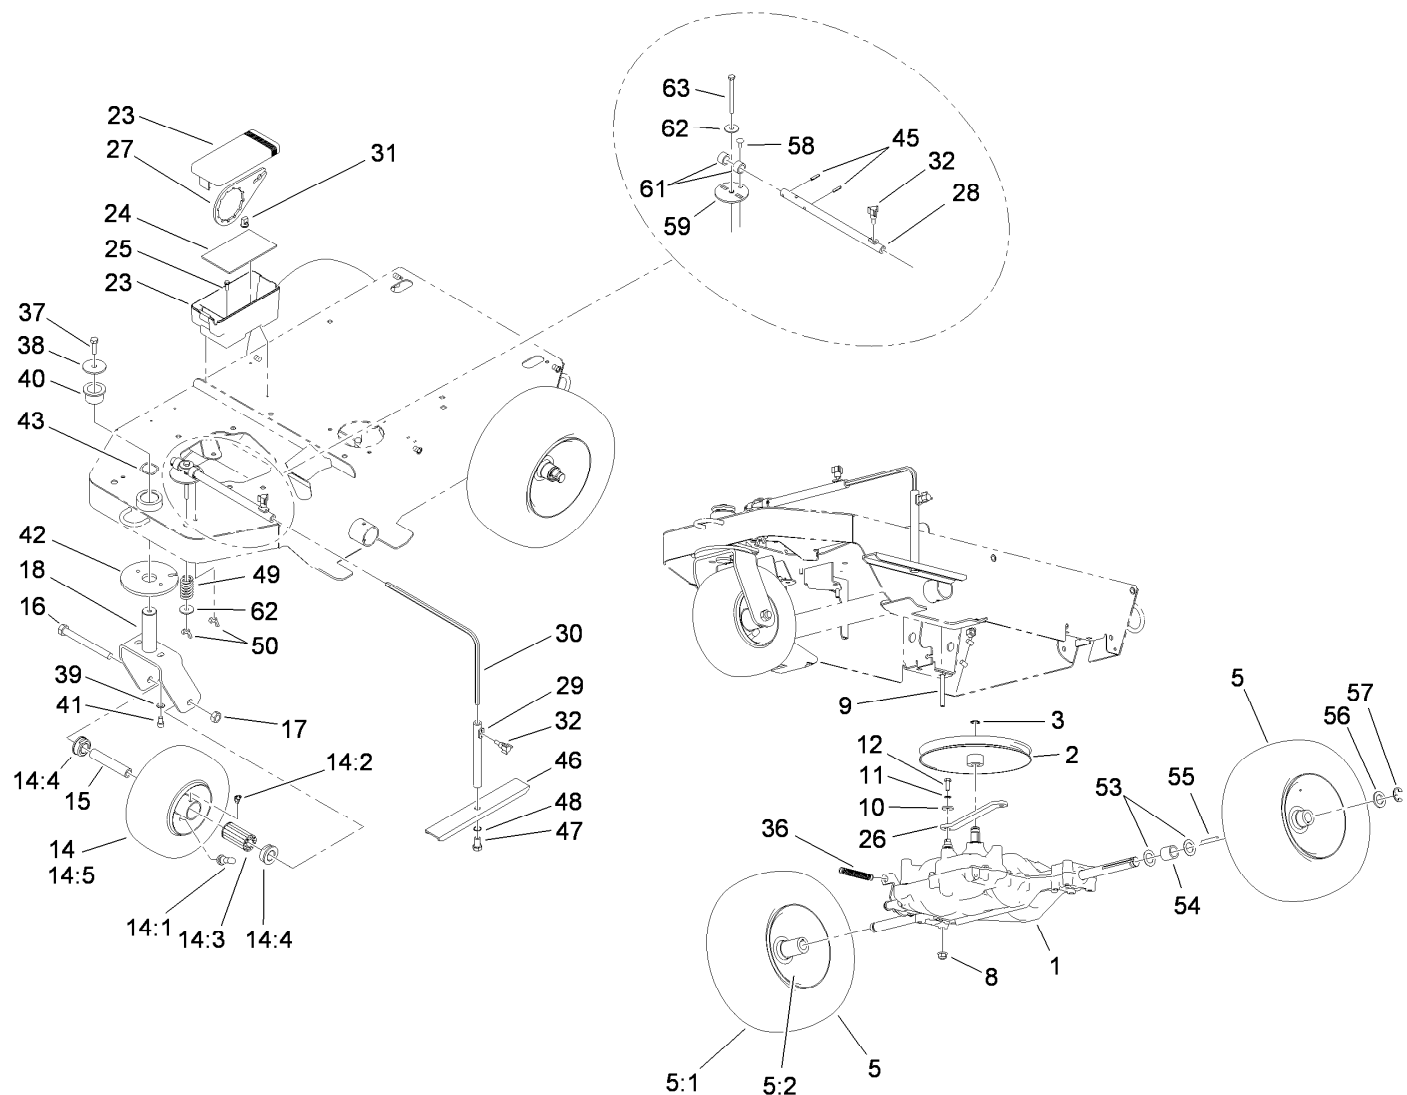

Front Caster and Rear Transaxle Assembly

Ref.	Part Number	Qty.	Description
1	108-0110	1	Transaxle-Gear
2	88-4840	1	Pulley-Transmission
3	32120-64	1	Ring-Snap, External
5	108-0461	2	Wheel ASM
5:1	99-2992	1	Tire
5:2	107-0520	1	Wheel
8	104-8300	4	Nut-Flange, NI
9	3230-9	4	Screw-CARR
10	7-5461	1	Spacer
11	3253-3	1	Washer-Lock
12	329-23	1	Screw-HH
14	100-6451	1	Caster Wheel ASM
14:1	232-27	1	Stem-Valve
14:2	302-11	1	Fitting-Lube, 45 DEG
14:3	83-4740	1	Bearing
14:4	62-5580	2	Bearing-Outside
14:5	100-6452	1	Tire-Tubeless
15	100-6453	1	Bushing-Spanner
16	325-19	1	Screw-HH
17	32153-5	1	Nut-Hex
18	108-0310-01	1	Caster Fork ASM

Ref.	Part Number	Qty.	Description
23	108-4844	1	Battery Box ASM
24	108-0987	1	Foam-Battery
25	32144-20	2	Screw-HHFTF
26	108-0107	1	Lever-Shift
27	108-0359	1	Wrench-Filter
28	108-0317	1	Guide ASM
29	108-0321	1	Guide ASM
30	108-0320	1	Rod-Guide
31	108-0133	1	Nozzle-Twinjet, 8006E (Standard)
32	233-70	2	Knob-Star, Three
36	95-3805	1	Spring
37	100-1668	1	Screw-Flange
38	63-7400	1	Washer-Rebound
39	3255-8	2	Washer-Lock
40	94-1291	2	Bushing
41	108-0063	2	Screw-HSH
42	108-0335	1	Plate-Caster
43	108-0324	1	Washer-Wave
45	32121-4	2	Pin-Roll, Slotted
46	108-0330	1	Guide

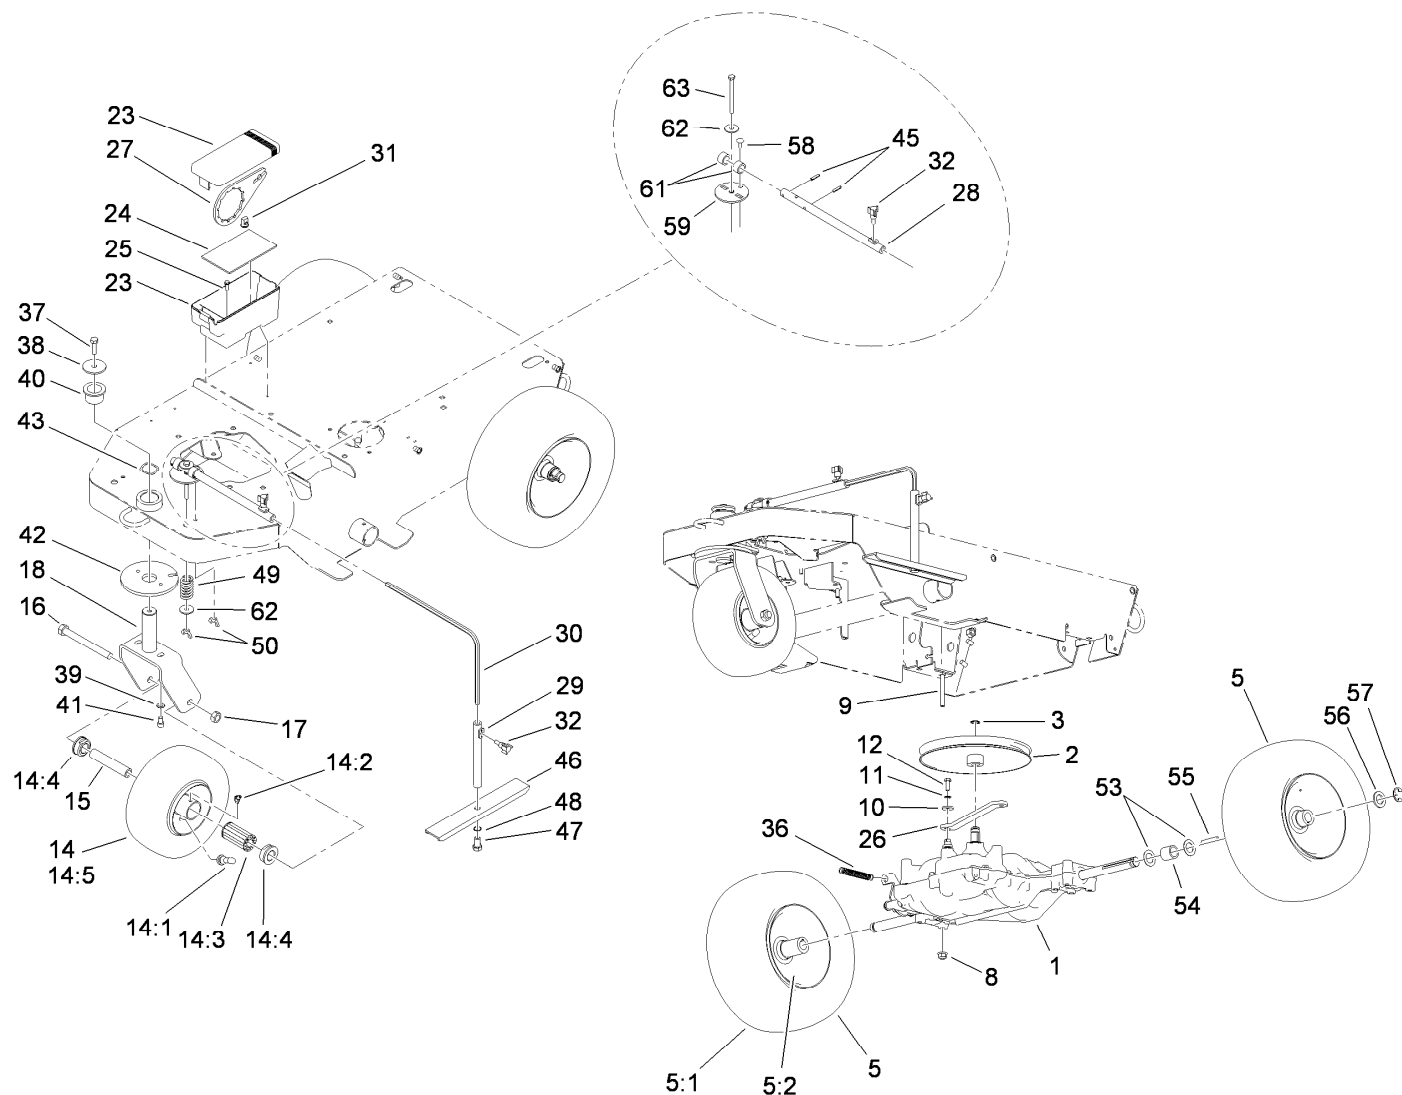


Front Caster and Rear Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
47	324-2	1	Screw-HH
48	3254-20	1	Washer-Lock, Int
49	66-9010	1	Spring-Compression
50	1-543792	2	Wingnut
53	3-6498	4	Washer-Thrust
54	88-5360	2	Spacer
55	7-0036	2	Key-Square

Ref.	Part Number	Qty.	Description
56	70-1160	2	Washer
57	32151-48	2	E-Ring
58	3229-11	1	Screw-CARR
59	108-0071	1	Plate ASM
61	92-6982	2	Spacer-Brake
62	3256-82	2	Washer-Flat
63	321-20	1	Screw-HH


Transaxle Assembly No. 108-0110

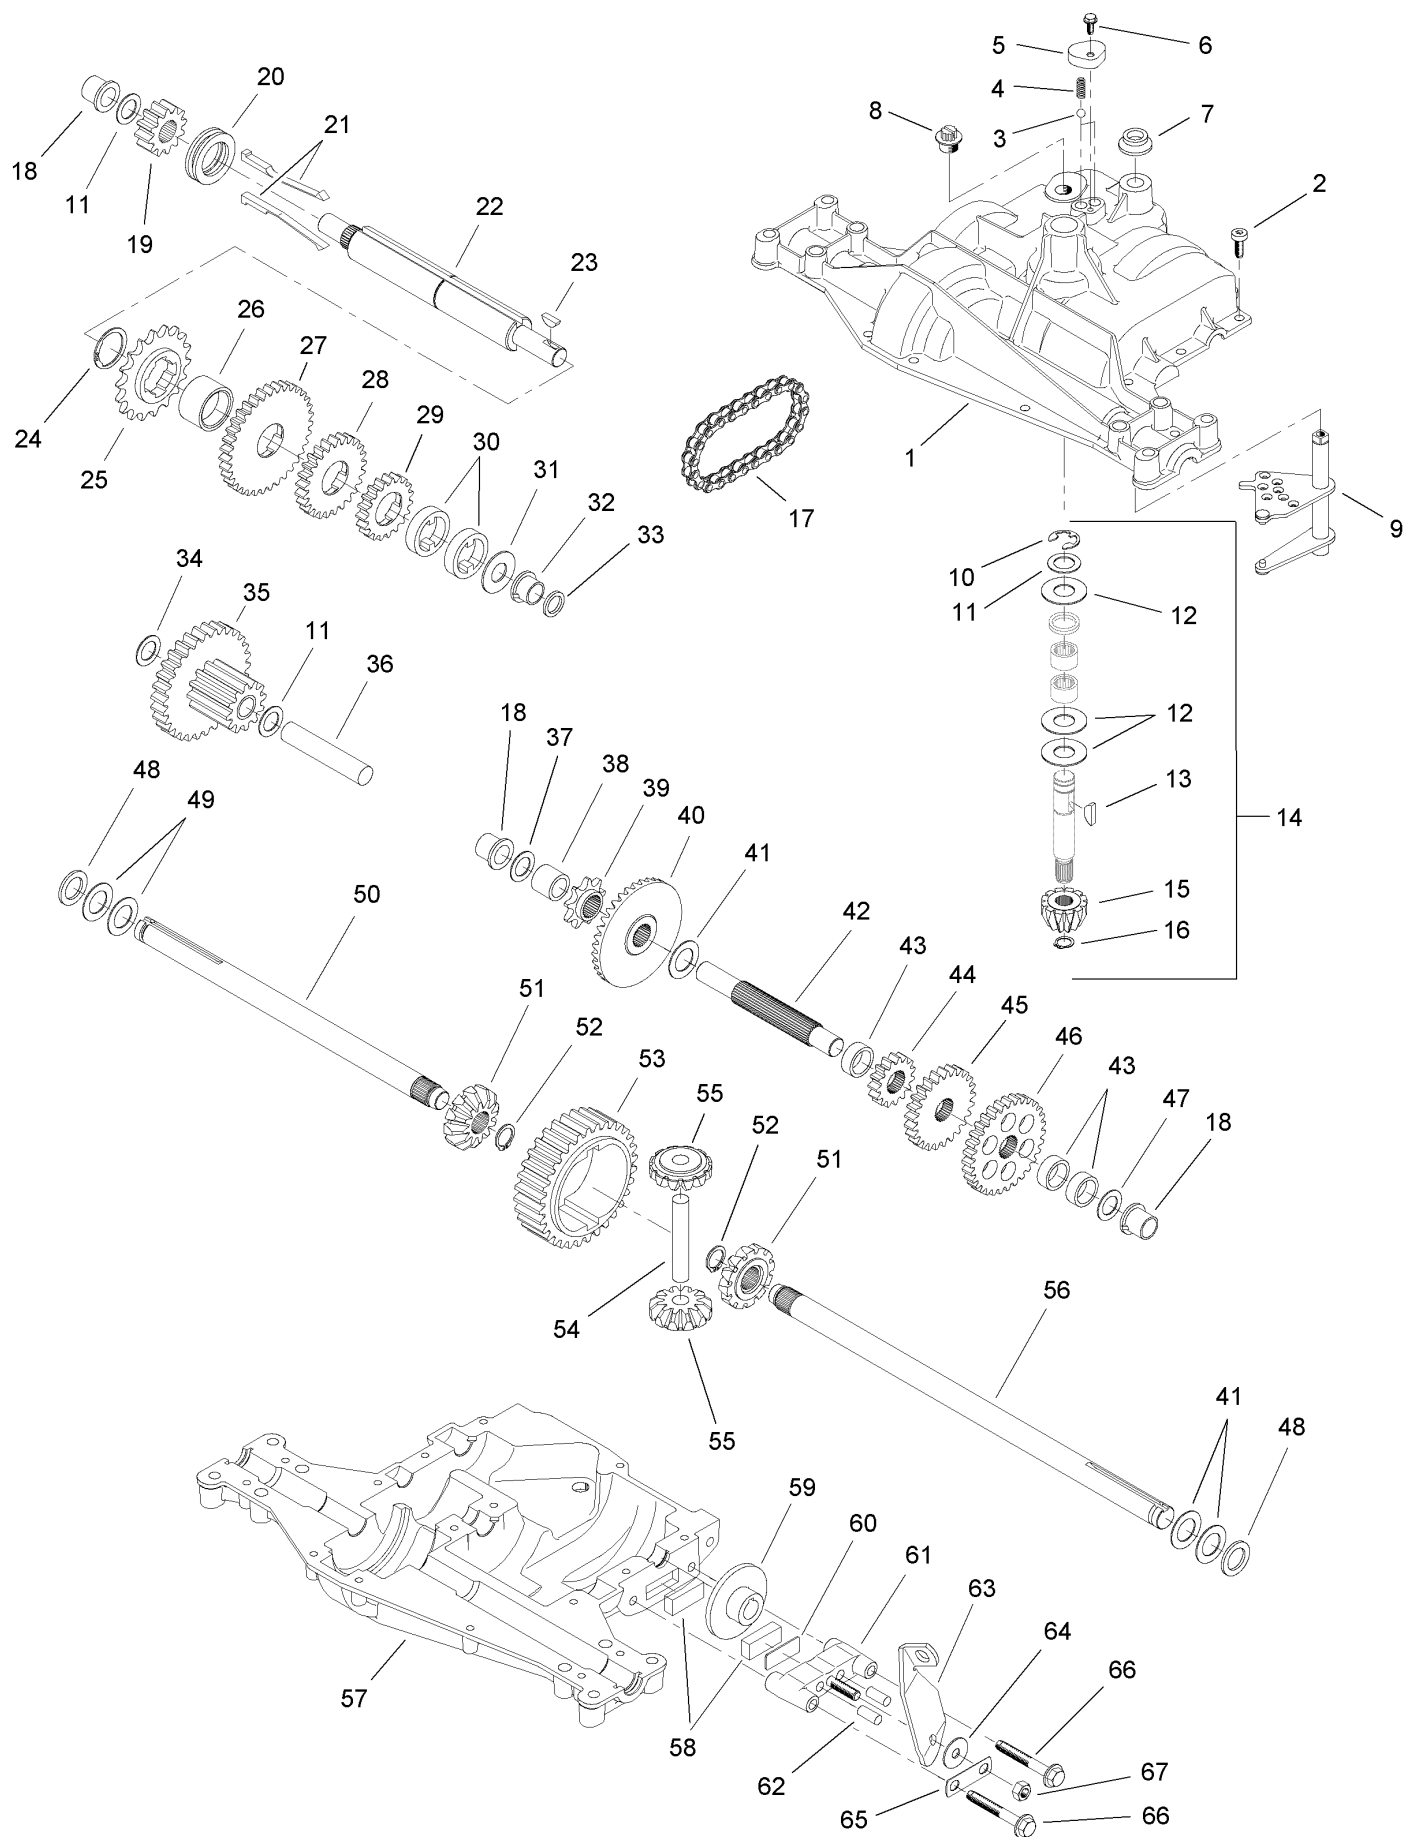

Transaxle Assembly No. 108-0110 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-3152	1	Housing-Upper	36	110-3187	1	Shaft-Idler
2	110-3153	16	Screw-Tapping	37	110-3188	1	Washer-Plain
3	110-3154	2	Ball-Detent	38	110-3189	1	Spacer
4	110-3155	2	Spring-Detent	39	110-3190	1	Sprocket-9T
5	110-3156	1	Cover-Detent	40	110-3191	1	Gear-Bevel, 36T
6	110-3157	1	Screw-Tapping	41	110-3192	2	Shim ASM (.750 Shaft)
7	110-3158	1	V-Ring	42	110-3193	1	Shaft-Drive
8	110-3159	1	Plug-Cap	43	110-3194	3	Spacer
9	110-3160	1	Shifter Kit	44	110-3195	1	Gear-Spur, 15T
10	110-3161	1	Ring-Retaining	45	110-3196	1	Gear-Spur, 23T
11	110-3162	3	Shim ASM (.625 Shaft)	46	110-3197	1	Gear-Spur, 31T
12	110-3163	3	Washer-Plain	47	110-3198	1	Washer-Plain
13	110-3164	1	Key-Woodruff	48	110-3199	2	Washer-Neoprene
14	110-3165	1	Input Shaft ASM	49	110-3200	2	Washer-Plain
15	110-3166	1	Pinion-Bevel, 12T	50	110-3201	1	Axle-LH
16	110-3167	1	Ring-Retaining	51	110-3202	2	Gear-Miter, 12T
17	110-3168	1	Chain-Pitch, 24	52	110-3203	2	Ring-Retaining
18	110-3169	3	Bearing-Flange	53	110-3204	1	Gear-Spur, 32T
19	110-3170	1	Gear-Spur, 12T	54	110-3205	1	Shaft-Cross
20	110-3171	1	Collar-Clutch	55	110-3206	2	Gear-Miter, 12T (Idler)
21	110-3172	1	Clutch Keys ASM	56	110-3207	1	Axle-RH
22	110-3173	1	Shaft-Intermediate	57	110-3208	1	Housing-Lower
23	110-3174	1	Key-Woodruff	58	110-3209	1	Puck Friction Kit
24	110-3175	1	Ring-Retaining	59	110-3210	1	Disc-Brake
25	110-3176	1	Sprocket-18T	60	110-3211	1	Spacer-Puck, Brake
26	110-3177	1	Spacer	61	110-3212	1	Jaw-Brake
27	110-3178	1	Gear-Spur, 35T	62	110-3213	2	Pin-Dowel
28	110-3179	1	Gear-Spur, 27T	63	110-3214	1	Lever-Actuating
29	110-3180	1	Gear-Spur, 19T	64	110-3215	1	Washer-Plain
30	110-3181	2	Spacer	65	110-3216	1	Bracket-Rotation, Anti
31	110-3182	1	Washer-Plain	66	110-3217	2	Screw-Tapping
32	110-3183	1	Bearing-Flange	67	110-3218	1	Nut-Lock
33	110-3184	1	Seal-Oil	68	110-3219	1	Grease ●
34	110-3185	1	Washer-Plain				
35	110-3186	1	Combination Gear ASM (12T 30T)				


● Not illustrated

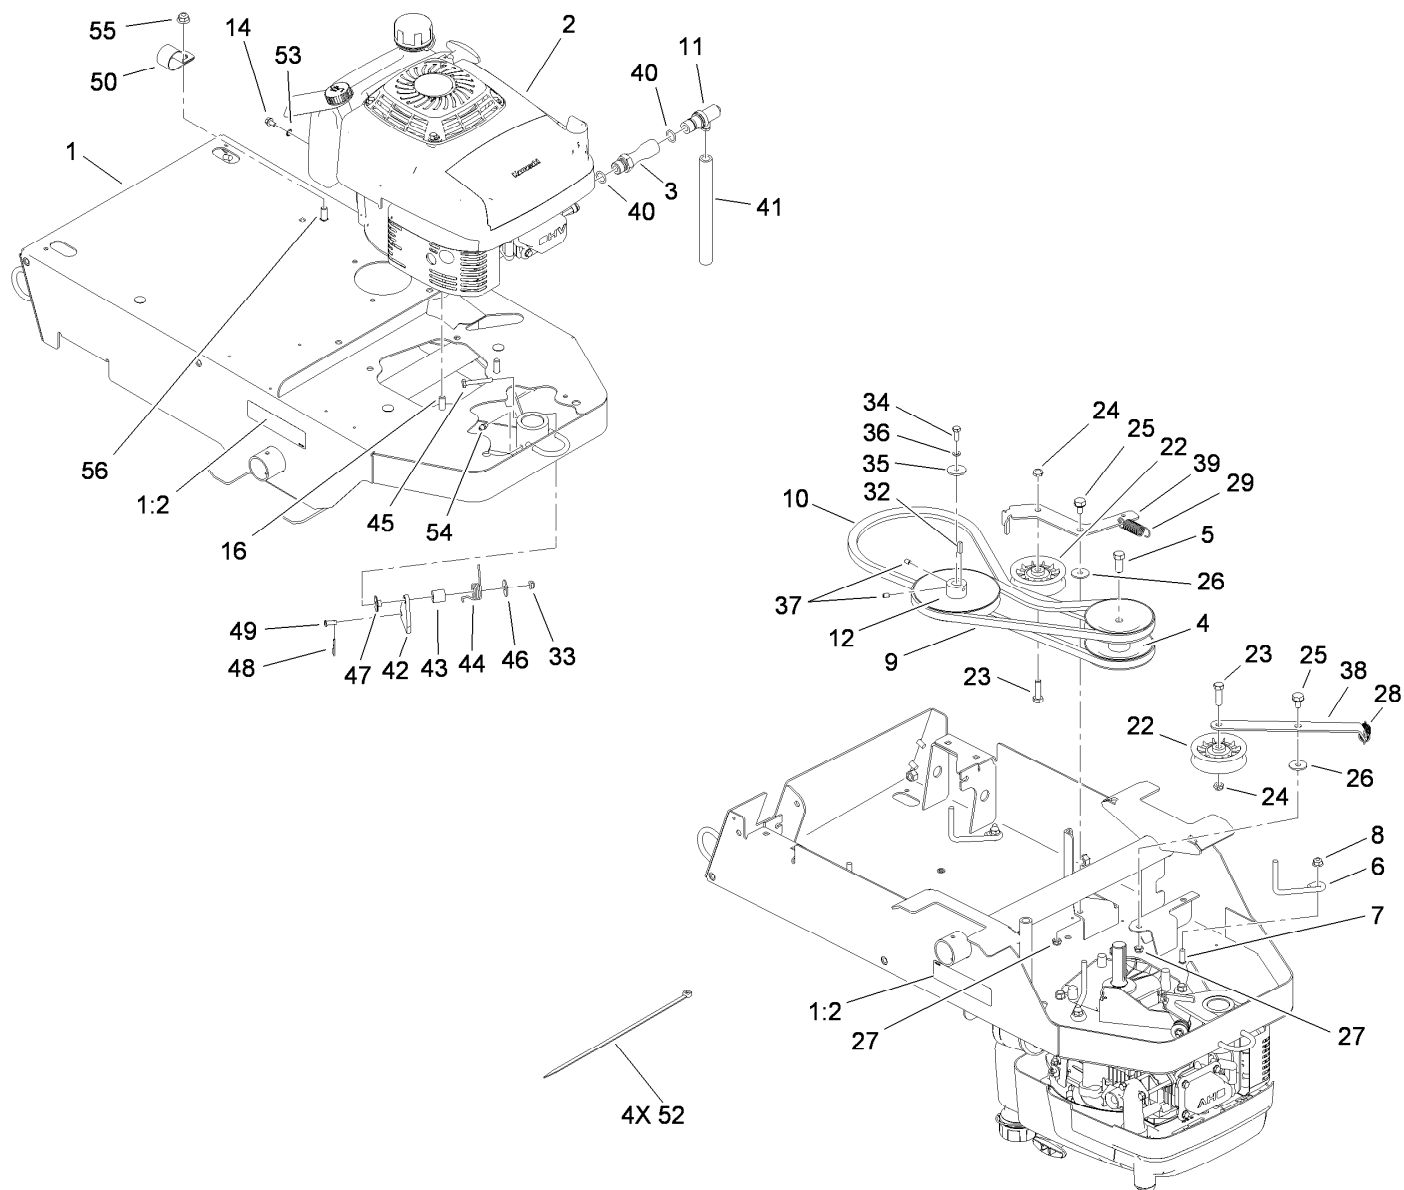

Engine, Fuel Tank and Frame Assembly

Ref.	Part Number	Qty.	Description
1	107-0534	1	Deck ASM
1:2	93-7814	2	Decal-Danger
2	112-6759	1	Engine-Kawasaki, 6 Hp
3	108-0263	1	Extension-Drain
4	108-0137	1	Pulley-Engine
5	3212-4	1	Screw-HH
6	93-3855	4	Guide-Belt, RH
7	3230-2	4	Bolt-CARR
8	104-8300	4	Nut-Flange, NI
9	703621	1	V-Belt
10	108-0172	1	Belt-V
11	108-0223	1	Valve-Drain, Oil
12	68-0180	1	Pulley-Transmission
14	104-2628	1	Screw-HWH
16	95-1726	4	Screw-Taptite
22	104-4160	2	Pulley-Idler
23	323-7	2	Screw-HH
24	3296-59	2	Nut-Lock, NI
25	37-8770	2	Bolt-Shoulder
26	5-4460	2	Washer-Pivot
27	3296-47	2	Nut-Lock, NI


Ref.	Part Number	Qty.	Description
28	107-1045	1	Spring-Extension
29	702906	1	Spring-Extension
32	10-8040	1	Key-Square
33	104-7201	1	Nut-HF
34	329-23	1	Screw-HH
35	1-503033	1	Washer-Retainer, Pulley
36	3253-3	1	Washer-Lock
37	3245-41	2	Screw-HSH
38	108-0175	1	Bracket-Idler
39	108-0186	1	Bracket-Idler
40	237-69	2	O-Ring
41	99-3085	1	Hose-Hinge
42	108-0339	1	Detent-Caster
43	108-0344	1	Spacer
44	108-0097	1	Spring-Torsion
45	321-10	1	Screw-HH
46	3256-82	1	Washer-Flat
47	108-0354	1	Bushing-Flange
48	9335044	1	Pin-Hair
49	60-1730	1	Pin-Clevis
50	2412-82	1	Clamp

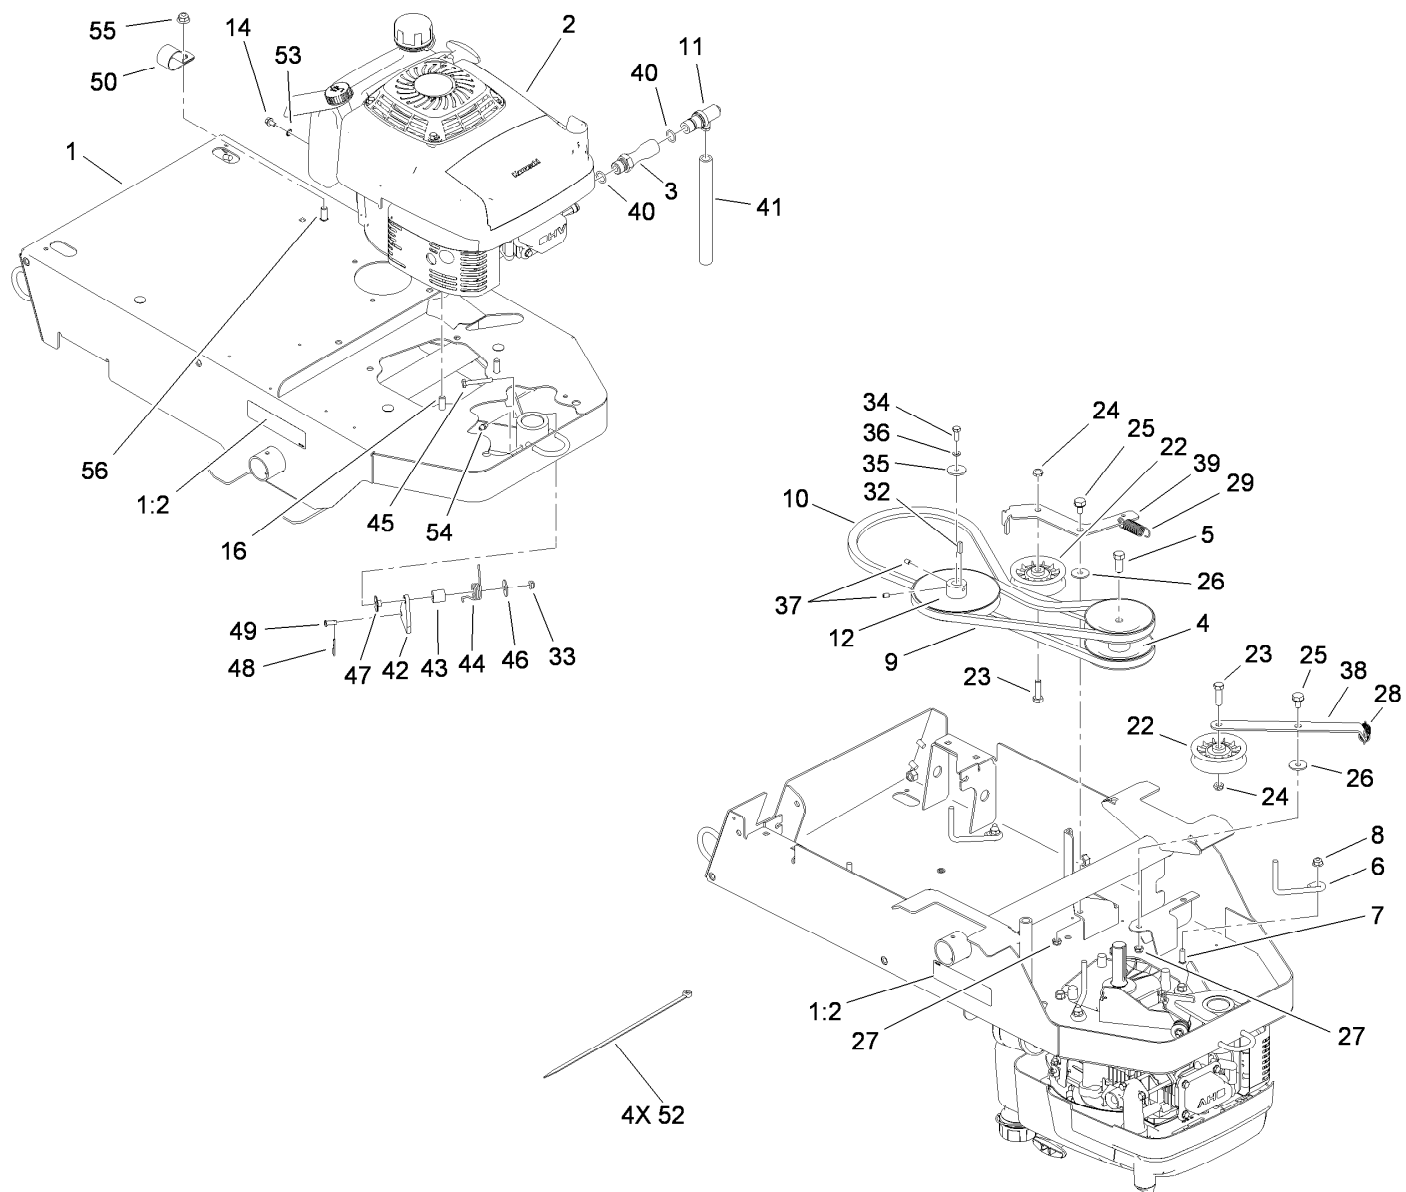

Engine, Fuel Tank and Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
52	1-303287	4	Tie-Cable
53	3255-7	1	Washer-Lock/EXT
54	302-5	1	Fitting-Grease


Ref.	Part Number	Qty.	Description
55	104-8301	1	Nut-Flange, NI
56	3231-22	1	Screw-CARR

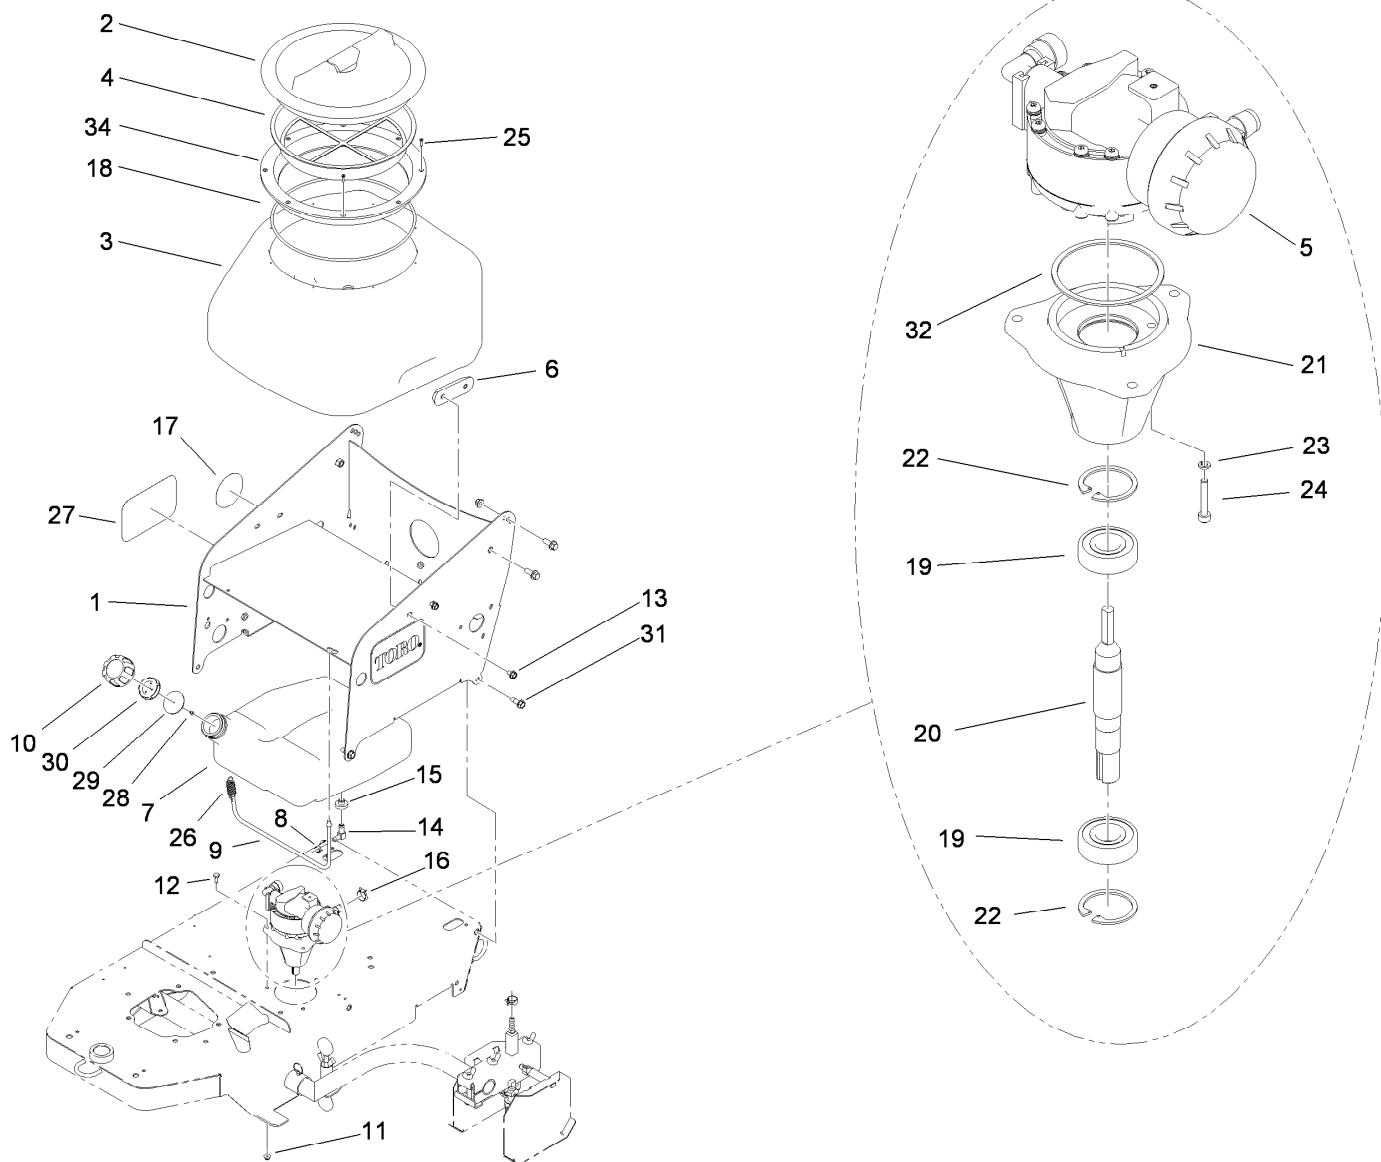

Pump and Tank Assembly

Ref.	Part Number	Qty.	Description
1	108-0211-01	1	Support-Tank
2	108-0139	1	Lid
3	108-0103	1	Tank
4	108-0155	1	Strainer-Basket
5	108-0437	1	Pump ASM
6	108-0210	2	Holddown ASM
7	108-0378	1	Tank-Water
8	2412-98	1	Clamp
9	108-0217	1	Rod-Support, Front Tank
10	108-0305	1	Cap-Water, Fresh
11	104-7201	3	Nut-HF
12	321-4	3	Screw-HH
13	3234-28	4	Screw-HHF
14	107-0531	1	Fitting-Elbow, 90 DEG
15	46-6560	1	Bushing
16	2412-135	1	Clamp-Hose
17	108-0233	1	Decal-Flush


Ref.	Part Number	Qty.	Description
18	107-0576	1	O-Ring
19	119-4769	2	Bearing-Ball
20	108-0433	1	Driveshaft-Pump
21	108-0374	1	Housing-Drive, Pump
22	32120-42	2	Ring-Retaining
23	3253-17	2	Washer-Lock
24	3273-23	2	Screw-HH
25	107-0574	8	Screw-PFH
26	107-1045	1	Spring-Extension
27	62-5550	2	Decal
28	60-9750	1	Stud-Barbed
29	56-6110	1	Gasket-Vented
30	55-3550	1	Insert-Cap, Gas
31	105-6245	4	Screw-Tapping
32	107-0554	1	Gasket-Seal, Pump
34	108-0105	1	Flange-Lid

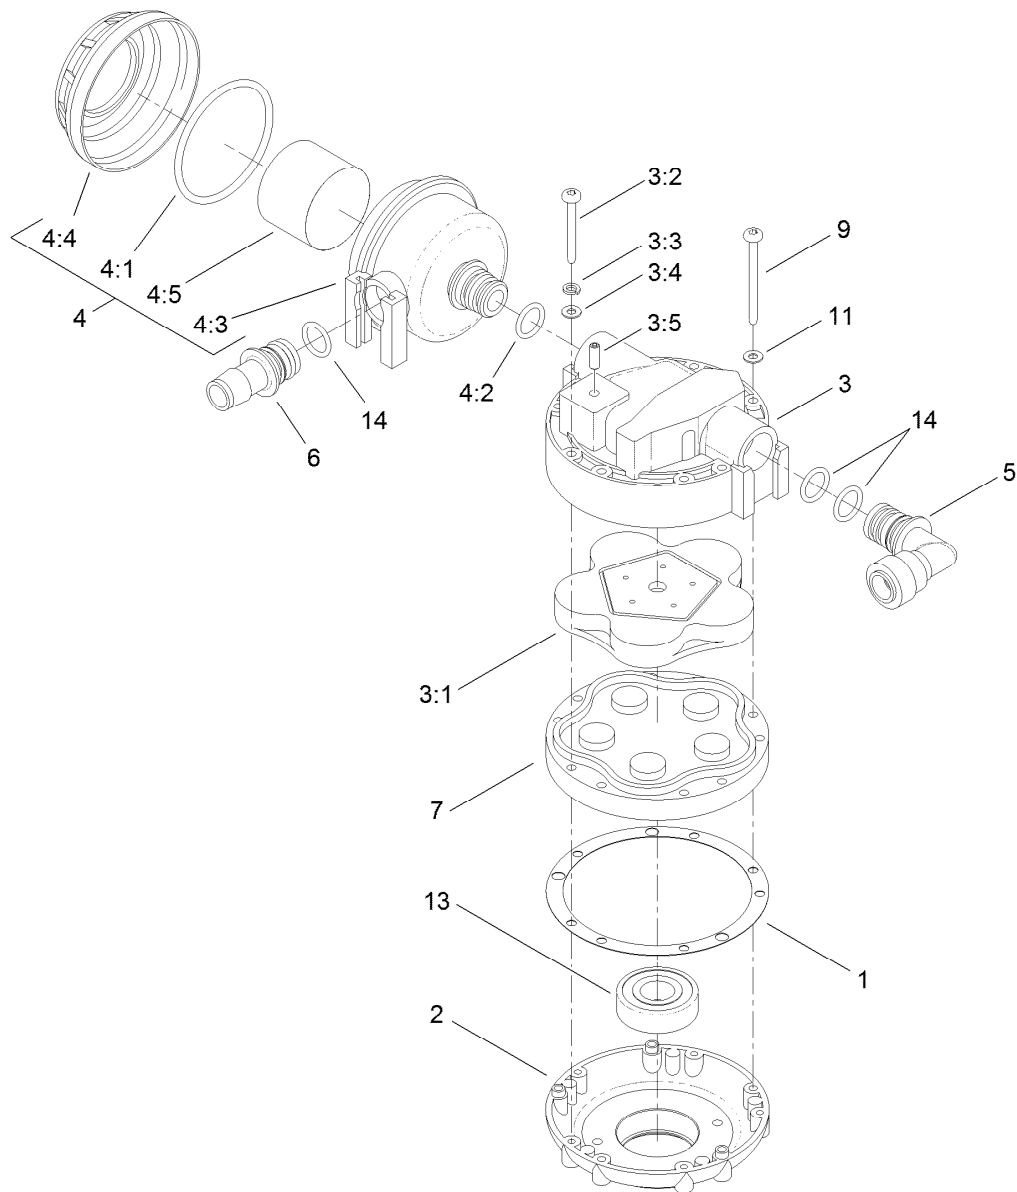

Pump Assembly No. 108-0437

Ref.	Part Number	Qty.	Description
1	107-0553	1	Gasket-Head, Pump
2	108-0526	1	Pump Endbell ASM
3	108-0431	1	Pump Head ASM
3:1	108-0313	1	Check Valve Kit
3:2	107-0525	5	Screw-Thread Forming
3:3	107-0527	5	Washer-Lock, Split
3:4	107-0528	5	Washer-Flat
3:5	107-0529	1	Screw
4	108-0368	1	Filter ASM (40 Mesh)
4:1	935901	1	O-Ring
4:2	237-154	1	O-Ring


Ref.	Part Number	Qty.	Description
4:3	112-6783	1	Housing-Filter
4:4	112-6784	1	Cover-Filter
4:5	112-6785	1	Screen-Filter
5	108-0366	1	Fitting-Elbow, 90 DEG
6	108-0367	1	Fitting-Straight
7	119-2886	1	Wobbler Plate/Diaphragm ASM
9	107-0526	5	Screw-Thread Forming
11	107-0528	5	Washer-Flat
13	119-4769	1	Bearing-Ball
14	237-154	3	O-Ring

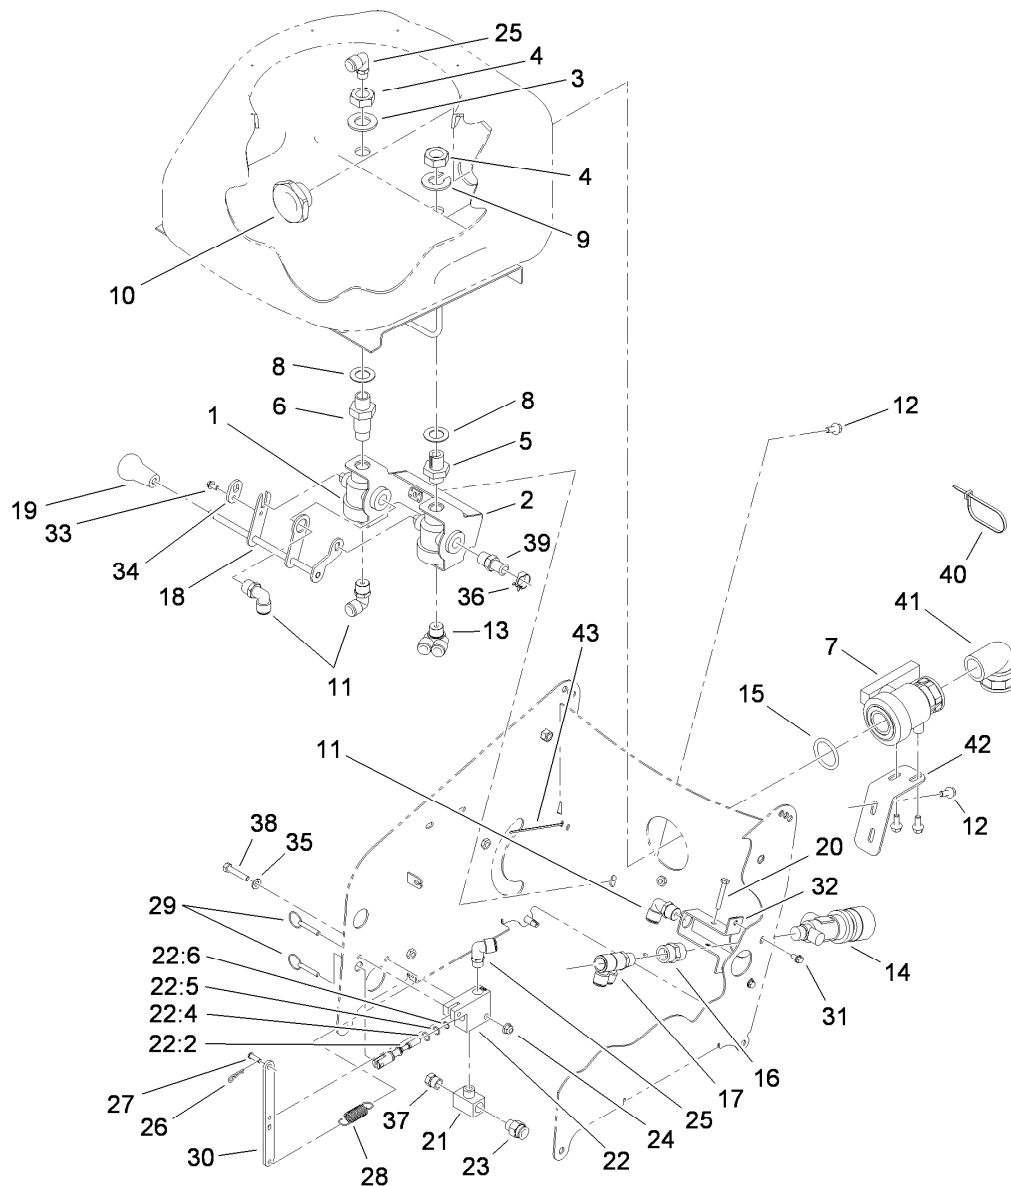

Valve Assembly

Ref.	Part Number	Qty.	Description
1	108-0530	2	Valve, 3-Way
2	108-0382	1	Bracket-Valve, 3-Way
3	107-0585	1	Washer-Flat
4	108-0082	2	Nut-Jam
5	108-0531	1	Port-Outlet
6	108-0532	1	Port-Recirculation
7	108-0069	1	Valve-Ball
8	52-7270	2	Washer-Rubber
9	108-0363	1	Washer-Slotted
10	108-0067	1	Fitting-Nut
11	108-0534	3	Fitting-Elbow, 90 DEG
12	100-1668	5	Screw-Flange
13	108-0346	1	Fitting-Tee
14	108-0158	1	Regulator-Pressure
15	107-0575	1	O-Ring
16	108-0548	1	Fitting-Straight
17	108-0535	1	Fitting-Tee
18	108-0515	1	Lever ASM
19	99-7981	1	Knob-Grip, Soft
20	321-10	1	Screw-HH
21	108-0542	1	Fitting-Tee


Ref.	Part Number	Qty.	Description
22	108-0512	1	Valve-Shutoff, Paint
22:2	108-0511	1	Spool-Valve
22:4	237-30	1	O-Ring
22:5	237-7	1	O-Ring
22:6	237-21	1	O-Ring
23	108-0468	1	Fitting-Straight
24	104-8300	1	Nut-Flange, NI
25	108-0549	2	Fitting-Elbow, 90 DEG
26	9335044	1	Pin-Hair
27	9321204	1	Pin-Clevis
28	702906	1	Spring-Extension
29	100-7264	2	Pin-Cotterless
30	108-0514	1	Lever-Shutoff
31	3234-13	2	Screw-HHF
32	108-0395	1	Bracket-Valve
33	32144-4	1	Screw-HWH
34	107-0590	1	Retainer-Valve, 3 Way
35	3256-23	1	Washer-Flat
36	2412-135	1	Clamp-Hose
37	108-0544	1	Fitting-Plug
38	322-8	1	Screw-HH

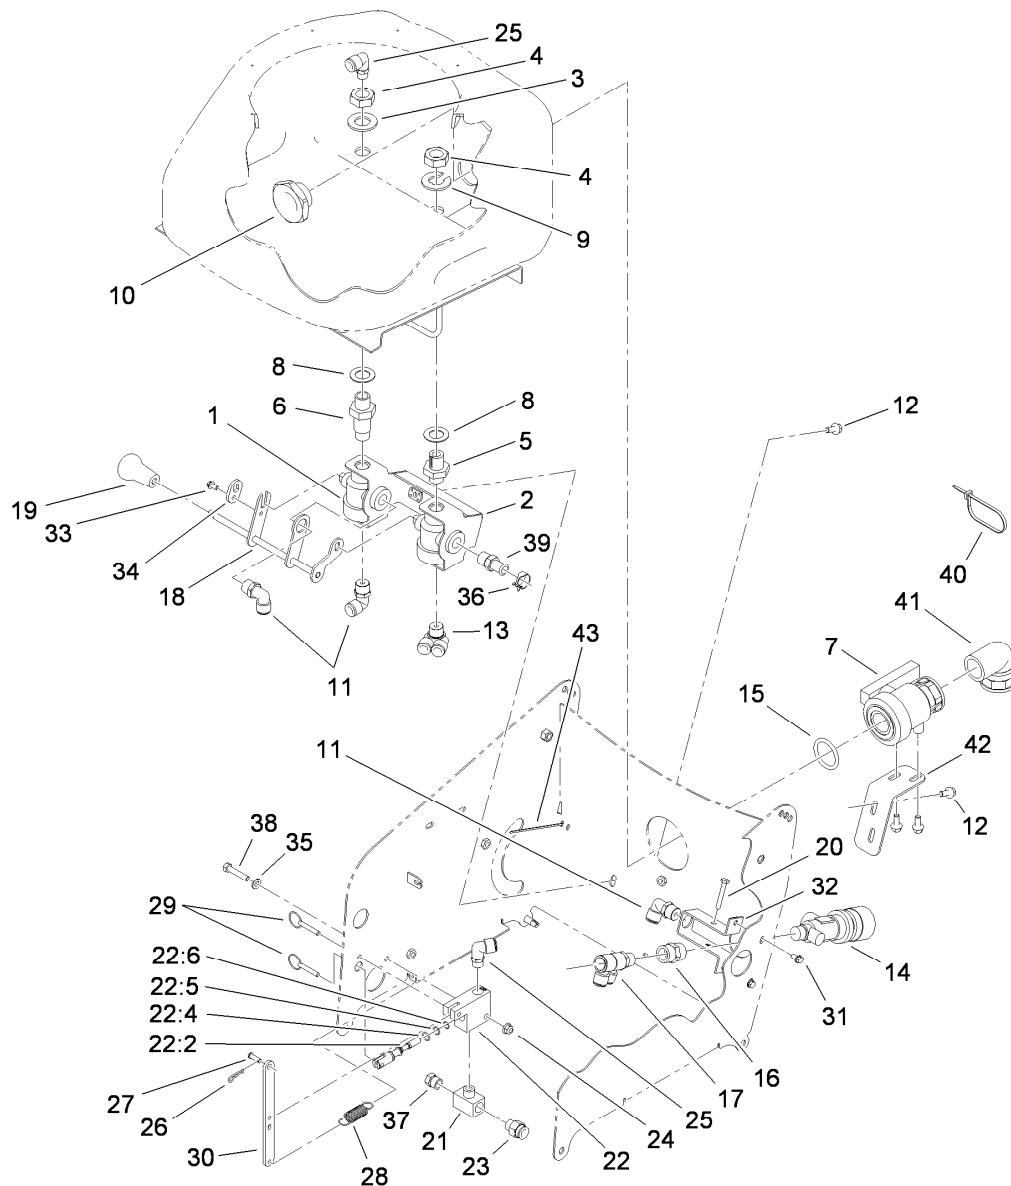

Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
39	108-0454	1	Fitting-Straight
40	3290-379	1	Tie-Cable
41	108-0065	1	Fitting-Elbow, 90


Ref.	Part Number	Qty.	Description
42	108-0066	1	Bracket-Valve, Drain
43	614249	1	Strap-Tie

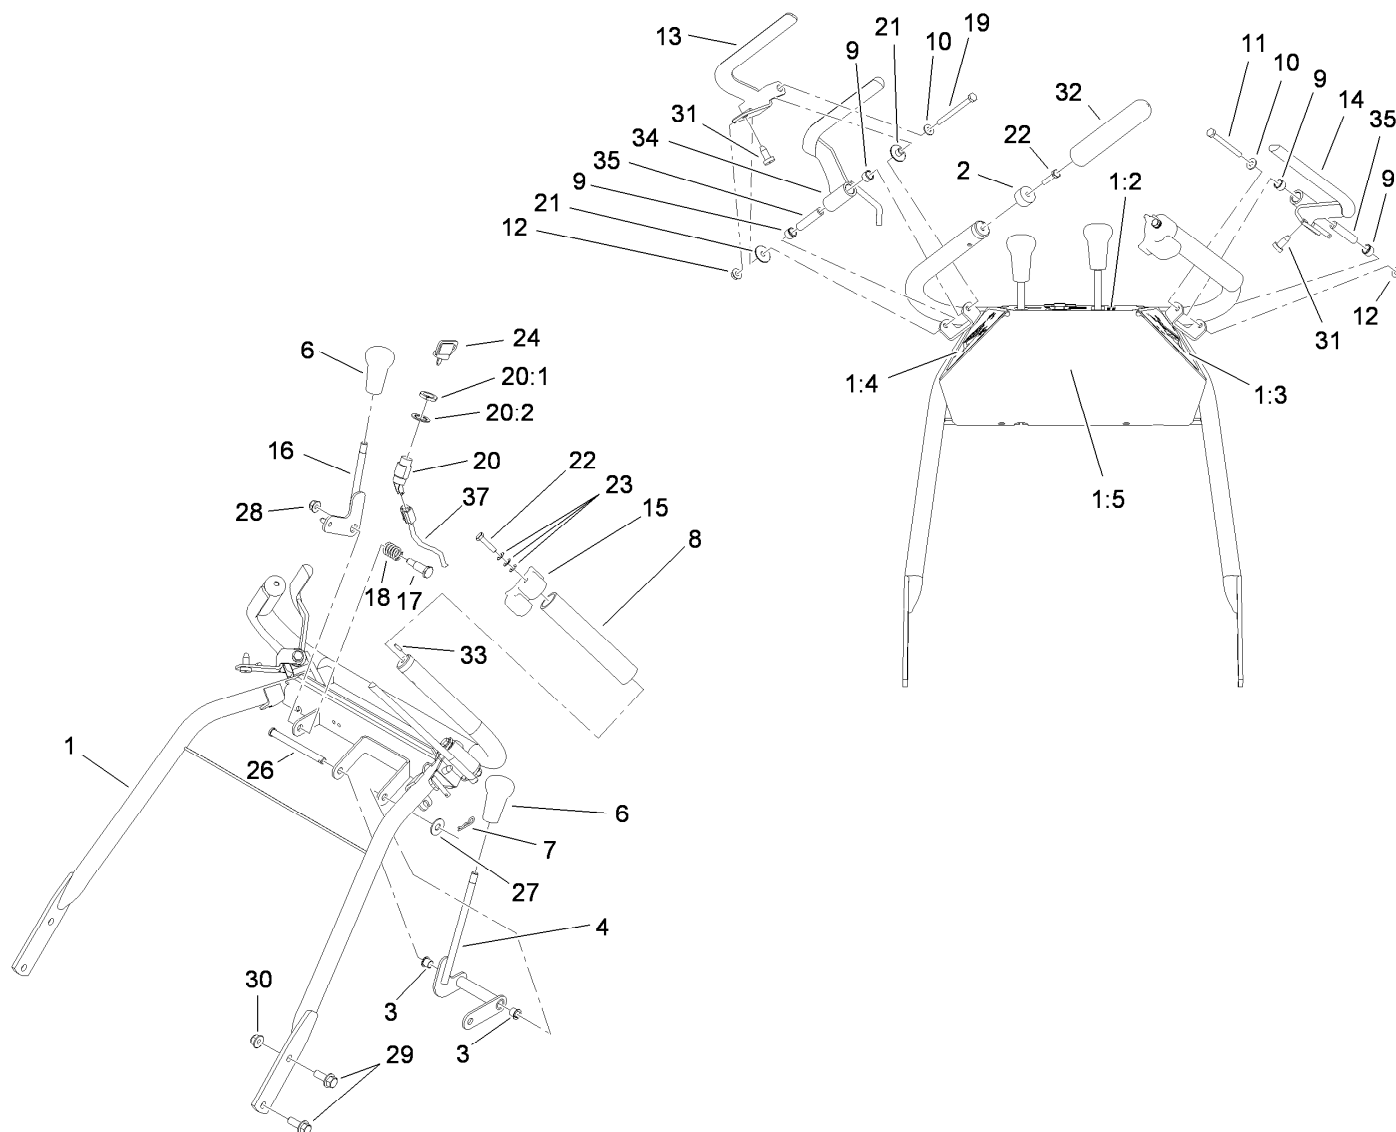

Operator Control Assembly

Ref.	Part Number	Qty.	Description
1	107-0535	1	Handle ASM
1:2	108-0326	1	Decal-Console
1:3	108-0327	1	Decal-Control, Left
1:4	108-0328	1	Decal-Control, Right
1:5	108-0343	1	Decal
2	106-5248-03	1	Spacer
3	52-2891	2	Bushing-Flanged, Nylon
4	108-0488	1	Shift Lever ASM
6	99-7981	2	Knob-Grip, Soft
7	1-806003	1	Pin-Cotter, Hair
8	103-0815	1	Grip-Bar, Handle
9	1-413152	4	Bushing-Sleeve
10	3256-22	2	Washer-Flat
11	321-14	1	Screw-HH
12	104-7201	2	Nut-HF
13	108-0095	1	Caster Release Control Lever ASM
14	108-0196-03	1	Left Control ASM
15	108-0458	1	Latch-Handle, Nozzle
16	108-0449	1	Brake Handle ASM
17	63-2650	1	Screw-Shoulder


Ref.	Part Number	Qty.	Description
18	107-3017	1	Spring-Compression
19	321-19	1	Screw-HH
20	29-5560	1	Switch-On / Off
20:1	218-461	1	Nut-HH
20:2	3254-5	1	Washer-Tooth, Internal
21	108-0354	2	Bushing-Flange
22	103-0235	2	Screw-HH
23	1-303435	3	Washer-Spring
24	63-8360	1	Key-Ignition
26	100-1413	1	Pin-Clevis
27	93-1633	1	Washer
28	104-8300	1	Nut-Flange, NI
29	3234-42	4	Screw-HHF
30	104-8301	2	Nut-Flange, NI
31	87-8460	2	Bumper-Rubber
32	108-0098	1	Grip-Handle
33	103-0464	1	Pin-Spring
34	108-0362-03	1	RH Control Lever ASM
35	103-0027	2	Bushing-Lever, Drive
37	108-0230	1	Harness-Wire

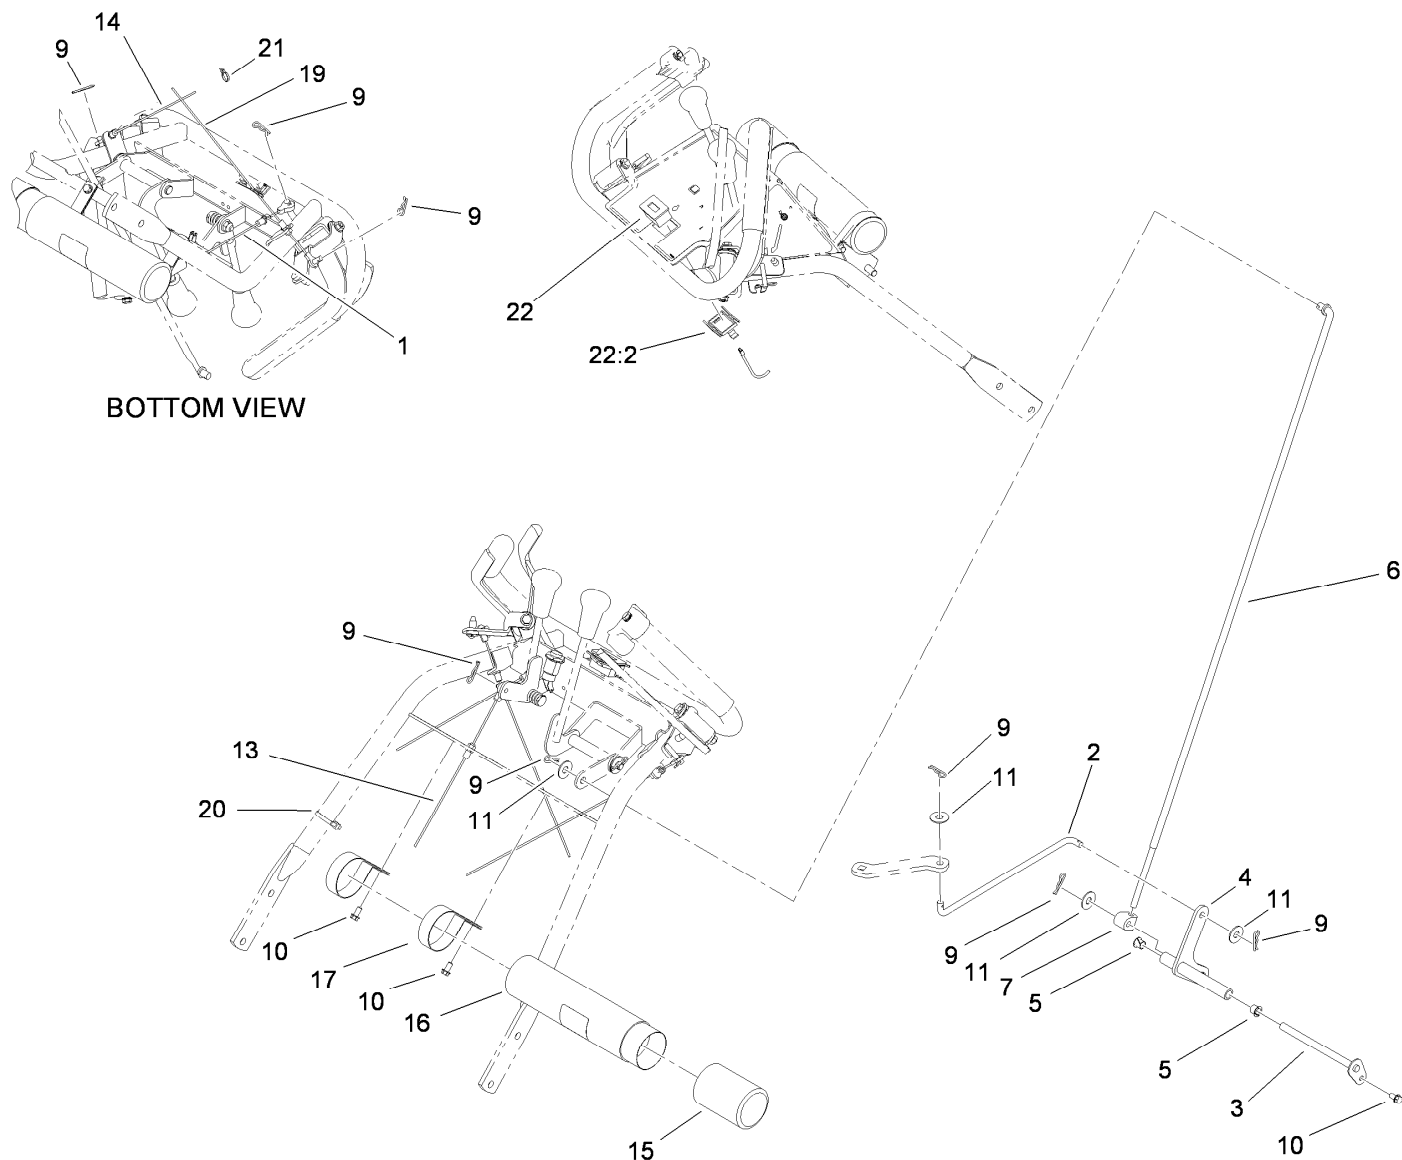

Cable and Steering Control Assembly

Ref.	Part Number	Qty.	Description
1	108-0204	1	Cable-Traction
2	108-0489	1	Linkage-Shift, Horizontal
3	108-0481	1	Pivot Shaft ASM
4	108-0484	1	Bell Crank ASM
5	52-2891	2	Bushing-Flanged, Nylon
6	108-0490	1	Rod-Control, Speed
7	74-0521	1	Fitting-Rod
9	1-806003	9	Pin-Cotter, Hair
10	32144-4	3	Screw-HWH
11	93-1633	4	Washer


Ref.	Part Number	Qty.	Description
13	108-0501	1	Cable-Brake
14	108-0505	1	Cable-Shut Off, Nozzle
15	104-7048	1	Cap-Housing
16	104-7050	1	Tube-Manual
17	2412-133	2	R-Clamp
19	108-0323	1	Cable-Release, Caster
20	1-303287	3	Tie-Cable
21	3290-379	2	Tie-Cable
22	104-4233	1	Meter-Hour
22:2	104-4234	1	Clip-Mounting

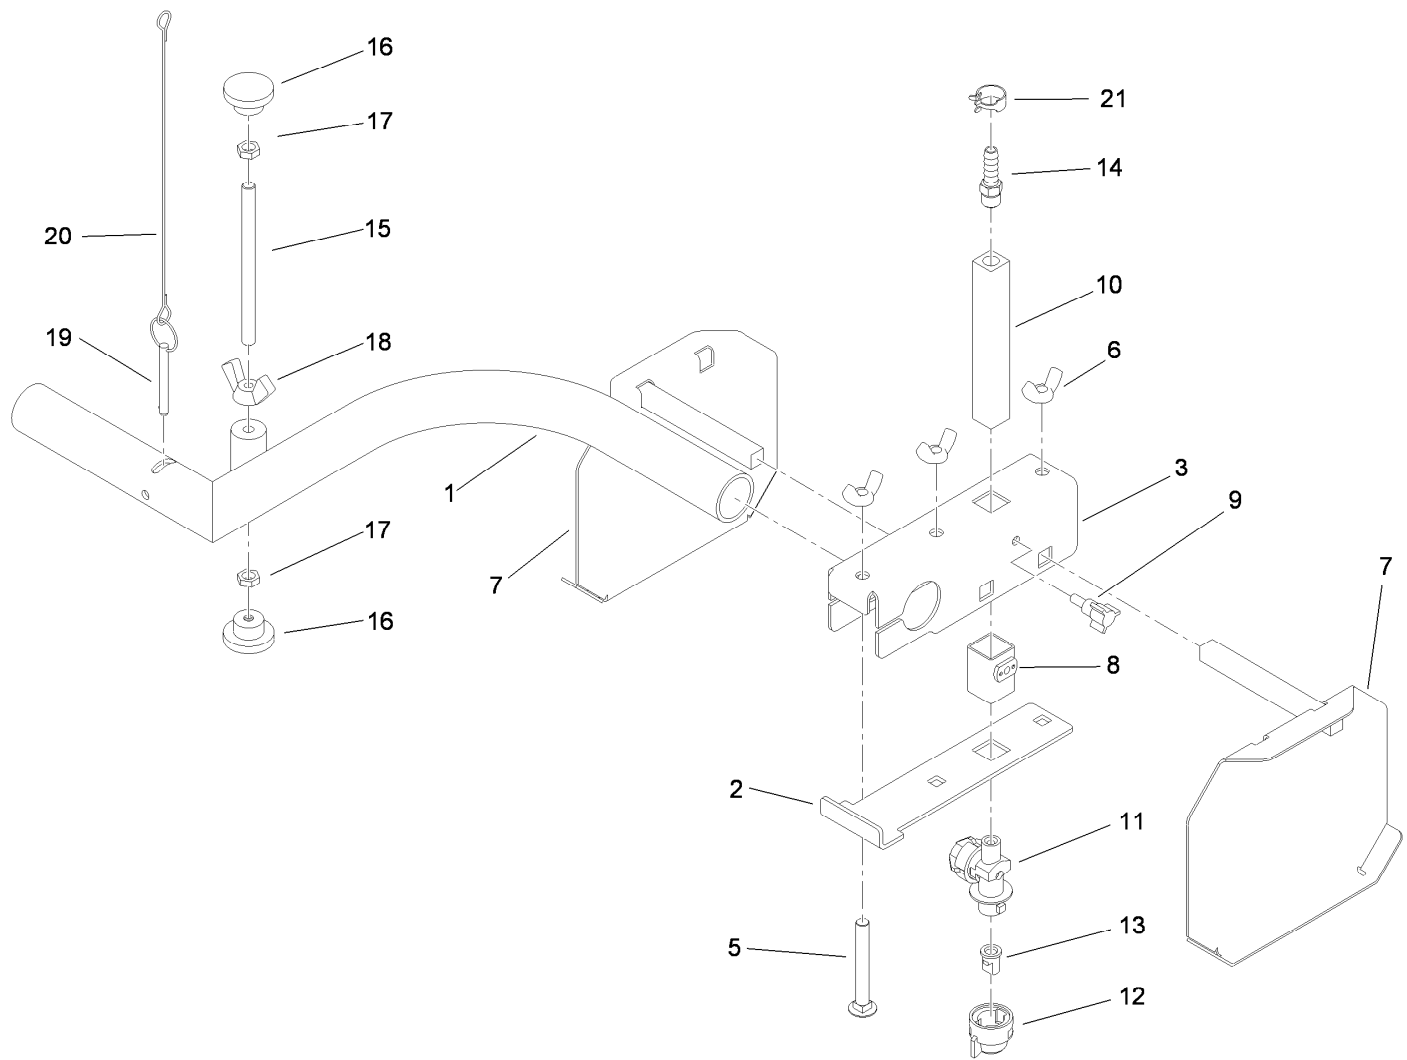

Spray Arm and Fitting Assembly


Ref.	Part Number	Qty.	Description
1	108-0284	1	Arm ASM
2	108-0287	1	Bracket-Clamp
3	108-0286	1	Bracket-Nozzle
5	3231-10	3	Screw-CARR
6	1-543678	3	Wingnut
7	108-0148	2	Shield ASM
8	108-0257	1	Bracket-Nozzle
9	233-70	1	Knob-Star, Three
10	108-0099	1	Tube-Nozzle
11	108-0125	1	Nozzle-Diaphragm, No Drip
12	107-0524	1	Single Fan Cap ASM
12	108-0129	1	Cap ASM
13	107-0523	1	Nozzle-Single Fan, 6504E

Ref.	Part Number	Qty.	Description
13	108-0130	1	Nozzle-Twin Jet, 6508
13	108-0131	1	Nozzle-Twin Jet, 8008
13	108-0132	1	Nozzle-Twin Jet, 6506
13	108-0133	1	Nozzle-Twinjet, 8006E (Standard)
14	108-0266	1	Fitting-Straight
15	108-0292	1	Rod-Threaded
16	108-0333	2	Knob-Circular
17	3218-3	2	Nut-Jam
18	32103-3	1	Nut-Wing
19	108-0094	1	Pin-Cotterless
20	107-9853	1	Lanyard
21	2412-143	1	Clamp-Hose

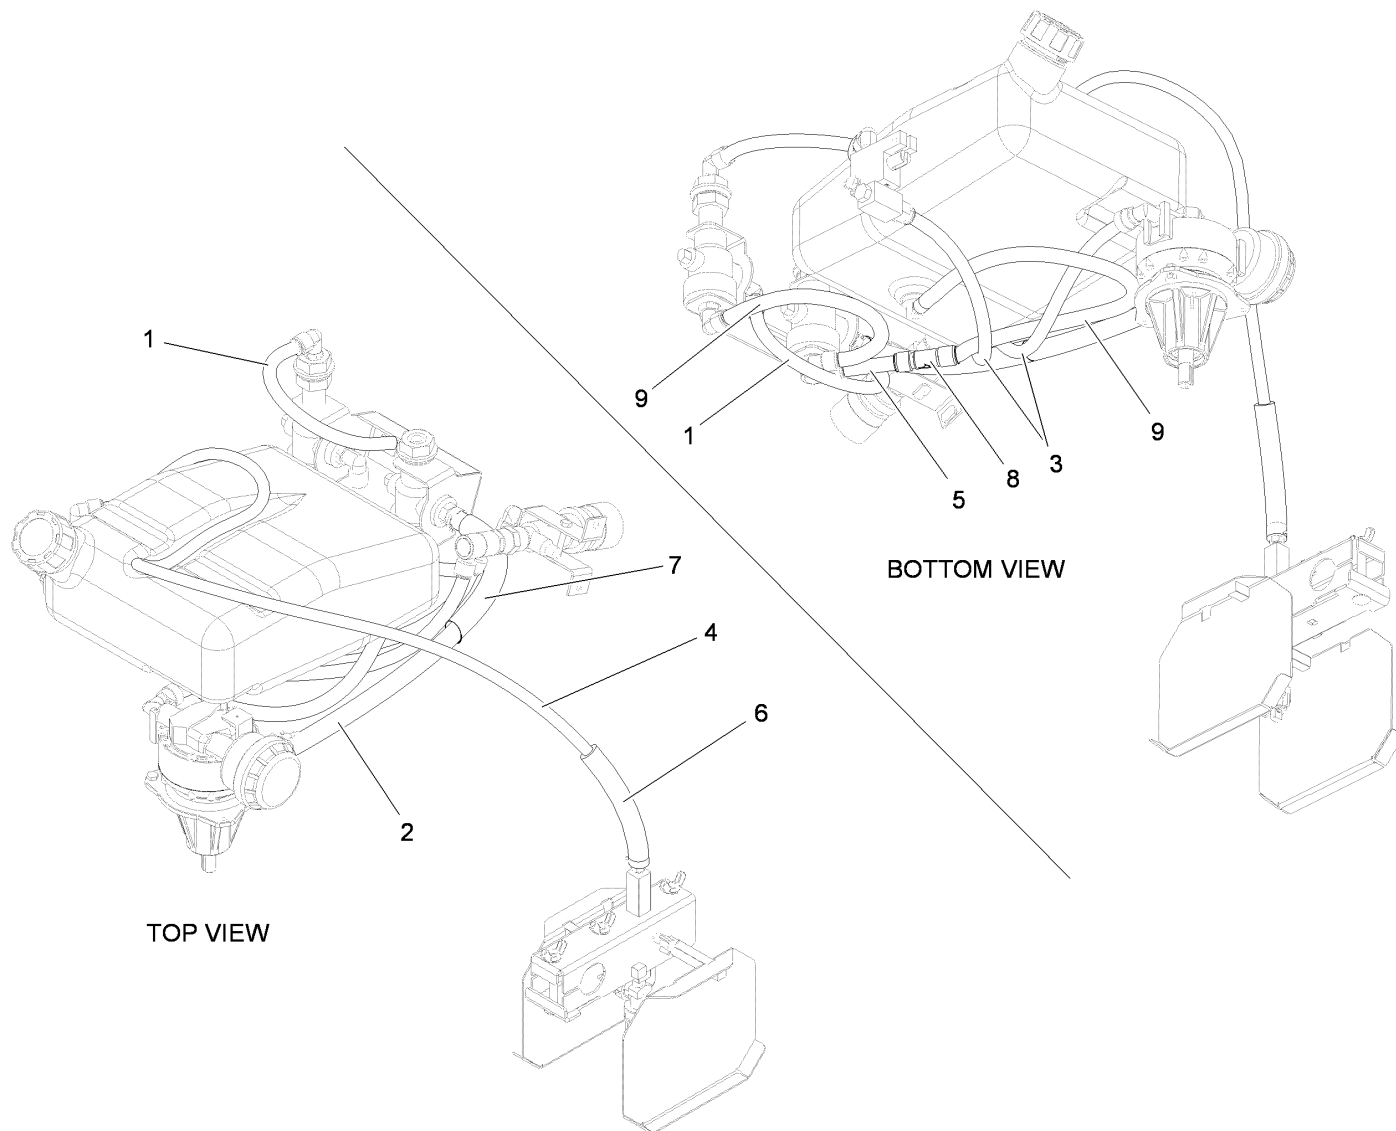


Hose Plumbing Assembly

Ref.	Part Number	Qty.	Description
1	108-0443	2	Hose
2	108-0446	1	Hose
3	108-0442	2	Hose
4	108-0445	1	Hose
5	108-0440	1	Hose
6	107-0570	1	Hose
7	107-0591	1	Guard-Hose, 8 Inch
8	107-0594	1	Valve-Check
9	108-0441	2	Hose

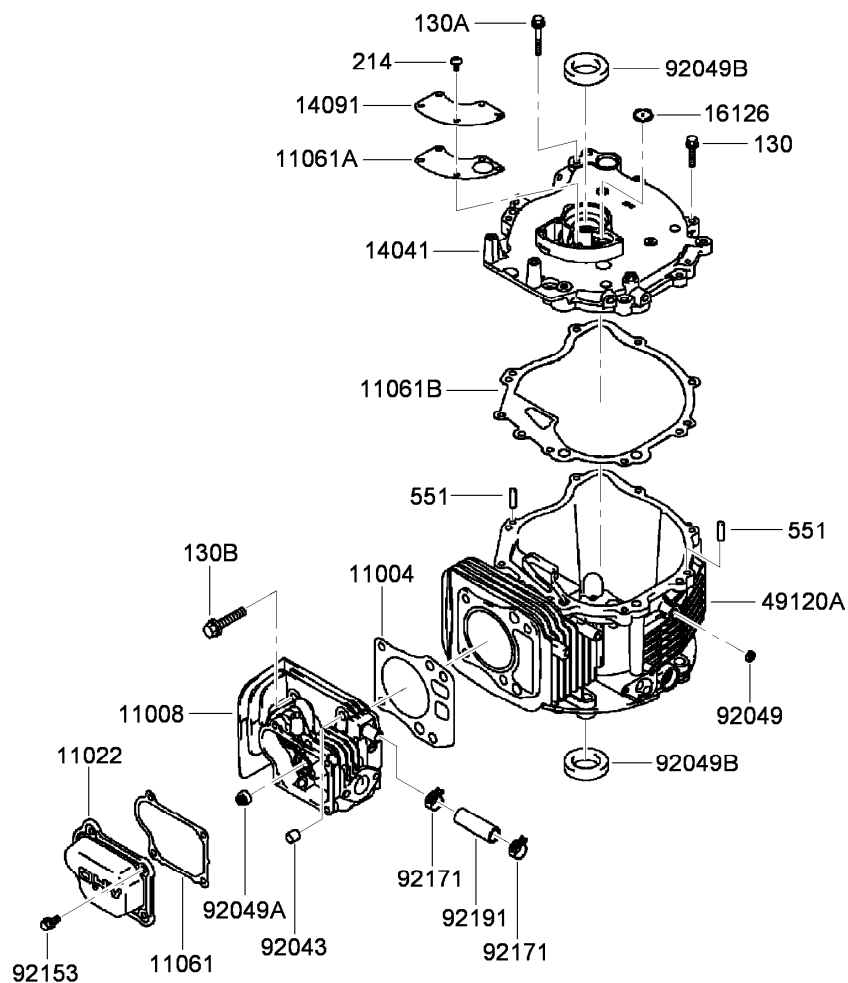


Cylinder and Crankcase Assembly

Ref.	Part Number	Qty.	Description
130	115-8653	7	Bolt-Flange (6X25)
130A	115-8654	1	Bolt-Flange (6X35)
130B	115-8655	4	Bolt-Flange (8X40)
214	115-6598	5	Screw-Pan+- (5X10)
551	108-2515	2	Pin-Dowel (6X12)
11004	108-2500	1	Gasket-Head
11008	108-2501	1	Head-Cylinder
11022	108-2502	1	Case-Rocker
11061	108-2504	1	Gasket-Case, Rocker
11061A	108-2505	1	Gasket-Breather
11061B	108-2503	1	Gasket
14041	108-2506	1	Cover
14091	108-2507	1	Cover-Breather
16126	108-2508	1	Valve-Breather
49120A	115-8651	1	Crankcase
92043	108-2510	2	Pin
92049	KW10227	1	Seal-Oil, Vc (6X10X2.5)
92049A	114-8650	1	Seal-Oil, Rv C2 (6X11X10.2)
92049B	108-2511	2	Seal-Oil, Tc (28-44-9)
92153	114-8655	4	Bolt (6X12)
92171	115-8652	2	Clamp
92191	108-2512	1	Tube (12X16X49)

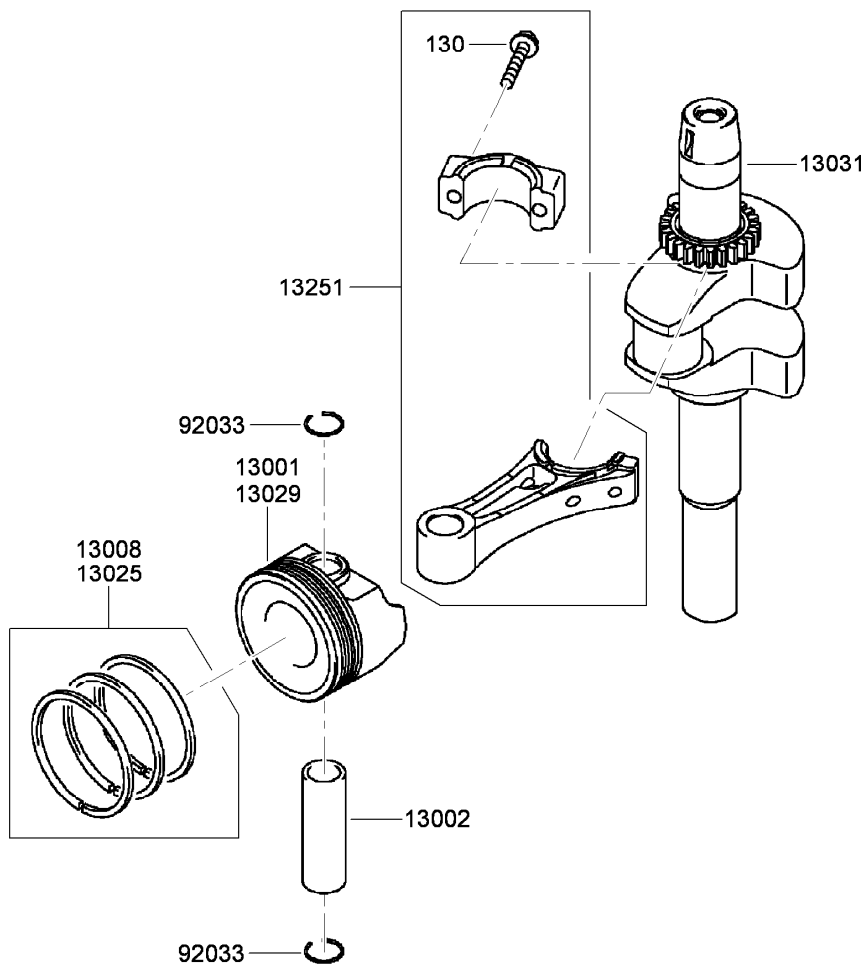


Piston and Crankshaft Assembly

Ref.	Part Number	Qty.	Description
130	115-8659	2	Bolt-Flange (6X30)
13001	115-8656	1	Piston-Engine
13002	108-2517	1	Pin-Piston
13008	115-8657	1	Piston Ring Set
13025	115-8658	1	Piston Ring Set (0.50)
13029	114-8661	1	Piston-Engine (L 0.50)
13031	107-0560	1	Crankshaft
13251	108-2520	1	Connecting Rod ASM
92033	114-8665	2	Ring-Snap

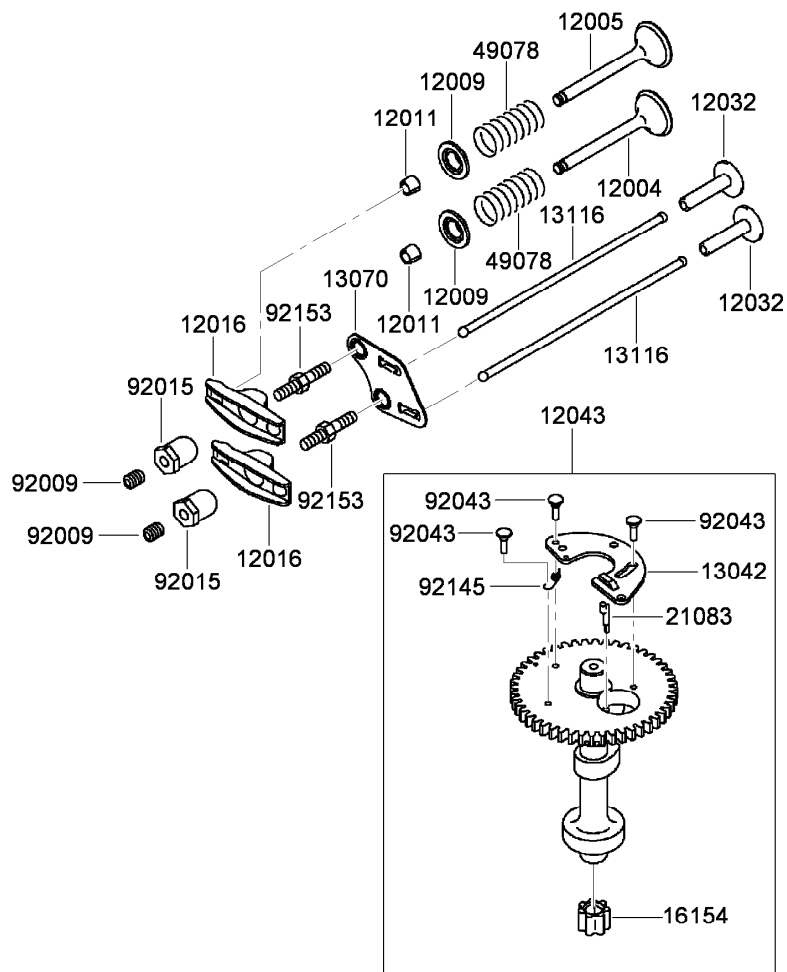


Valve and Camshaft Assembly

Ref.	Part Number	Qty.	Description
12004	114-8666	1	Valve-Intake
12005	114-8667	1	Valve-Exhaust
12009	108-2525	2	Retainer-Spring, Valve
12011	95-9744	4	Collet
12016	114-8668	2	Arm-Rocker
12032	108-2527	2	Tappet
12043	115-8660	1	Camshaft Valve ASM
13042	108-2529	1	Weight
13070	108-2530	1	Guide
13116	108-2531	2	Rod-Push
16154	108-2541	1	Rotor-Pump
21083	108-2532	1	Arm
49078	108-2533	2	Spring-Valve, Engine
92009	108-2534	2	Screw
92015	93-8534	2	Nut
92043	108-2535	3	Pin
92145	108-2536	1	Spring
92153	108-2537	2	Bolt

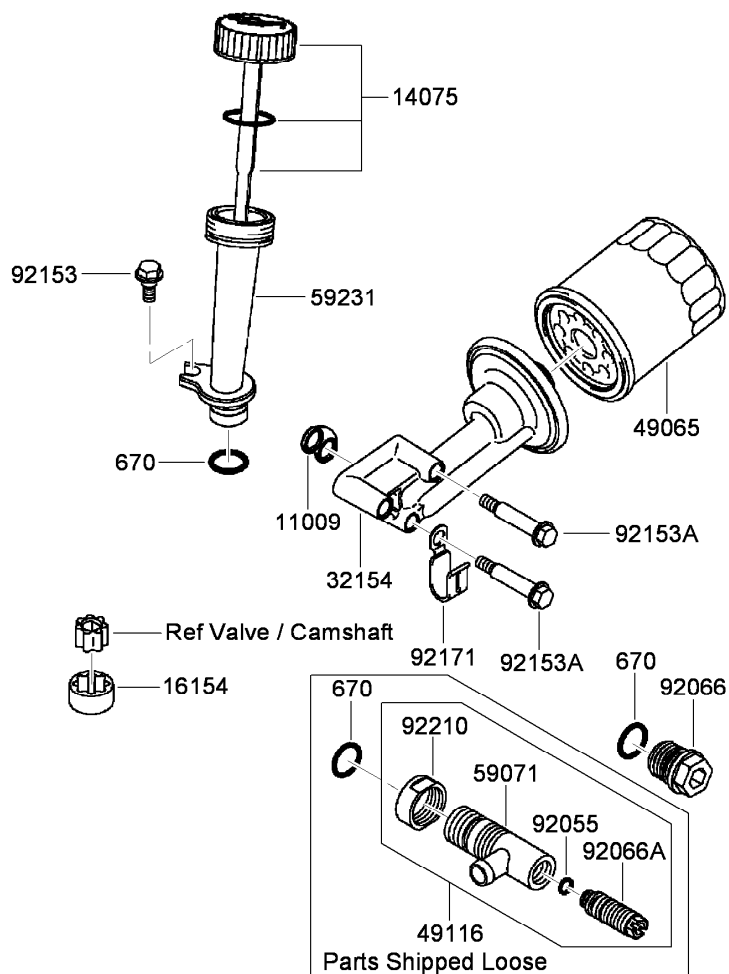


Lubrication Equipment Assembly

Ref.	Part Number	Qty.	Description
670	100-2690	3	O-Ring (16Mm)
11009	100-2644	1	Gasket
14075	108-2539	1	Cap ASM
16154	108-2540	1	Rotor-Pump
32154	115-8661	1	Pipe
49065	KW10761	1	Filter-Oil
49116	108-0223	1	Valve-Drain, Oil
59071	115-8662	1	Joint
59231	108-2543	1	Filler
92055	115-8663	1	Ring (0.6Mm)
92066	112-9991	1	Plug-Drain, Oil
92066A	115-8664	1	Plug
92153	108-2544	1	Bolt
92153A	108-2546	3	Bolt
92171	115-8665	1	Clamp
92210	115-8666	1	Nut

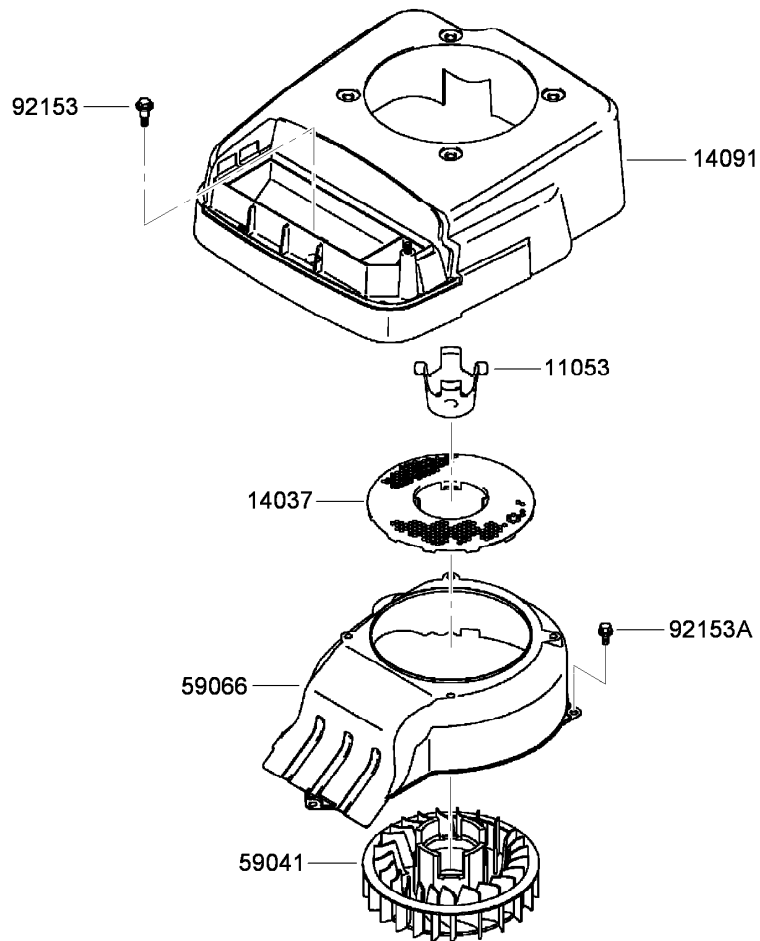


Cooling Equipment Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11053	108-2548	1	Bracket-Fan
14037	108-2549	1	Screen
14091	115-8667	1	Cover
59041	108-2551	1	Fan
59066	108-2552	1	Housing-Fan
92153	114-8697	1	Bolt
92153A	114-8655	1	Bolt (6X12)

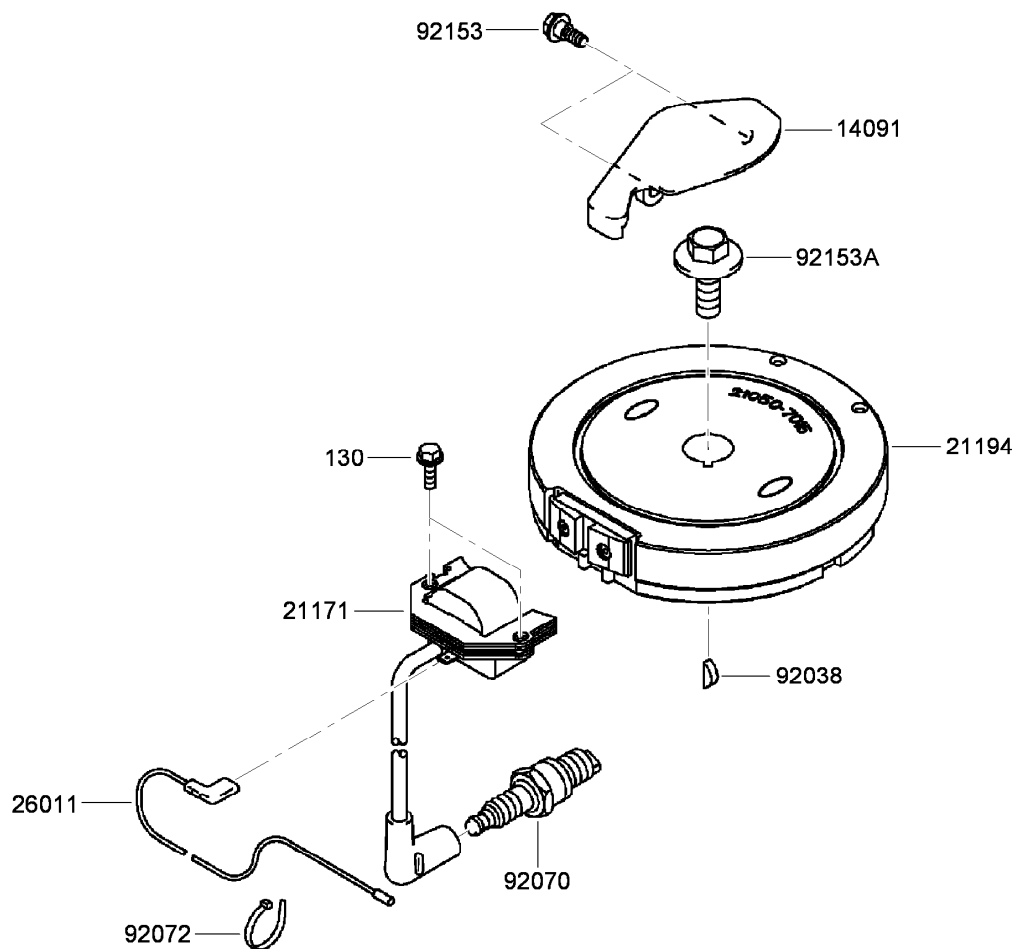


Electric Equipment Assembly

Ref.	Part Number	Qty.	Description
130	95-9893	2	Bolt-Flanged (6X20)
14091	115-8668	1	Cover
21171	108-2554	1	Coil Ignition ASM
21194	115-8669	1	Flywheel
26011	107-0567	1	Wire-Lead
92038	93-8571	1	Key
92070	108-2557	1	Sparkplug (Bpr5Es) (Ngk) Solid
92072	115-6585	1	Band
92153	108-2544	2	Bolt
92153A	108-2559	1	Bolt (12X30)

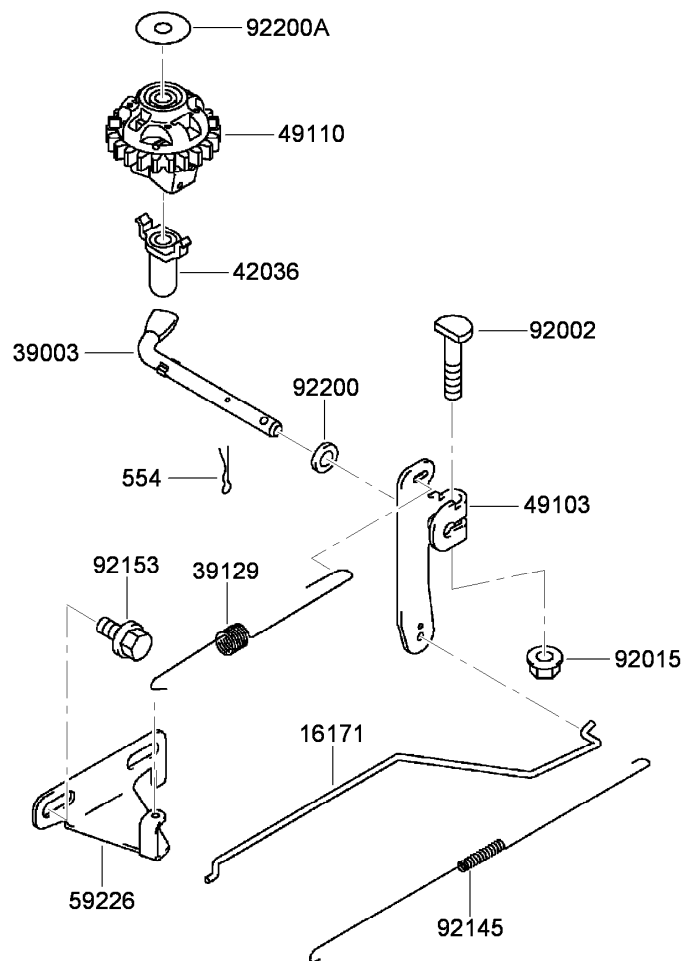

Control Equipment Assembly


Ref.	Part Number	Qty.	Description
554	115-8671	1	Pin-Snap (1.2X21.2)
16171	108-2563	1	Link-Throttle
39003	108-2564	1	Arm-Pivot
39129	115-8670	1	Spring-Governor
42036	108-2567	1	Sleeve
49103	108-2568	1	Arm-Governor
49110	108-2569	1	Governor ASM
59226	107-0568	1	Panel-Control
92002	108-2570	1	Bolt
92015	108-2571	1	Nut
92145	108-2573	1	Spring-Throttle
92153	114-8655	2	Bolt (6X12)
92200	108-2575	1	Washer (6.5X11.5X2.0)
92200A	94-6842	1	Washer (6.2X20X0.5)

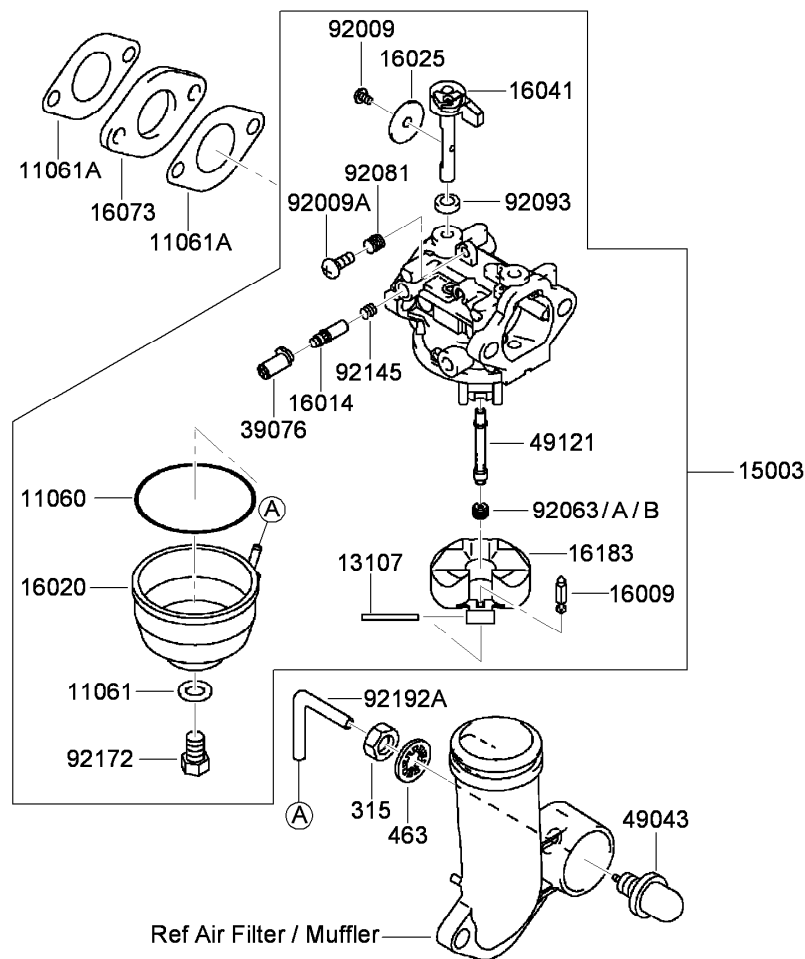

Carburetor Assembly


Ref.	Part Number	Qty.	Description
315	115-8677	1	Nut-Hex, Fine (10Mm)
463	115-8678	1	Washer-Toothed
11060	108-2579	1	Gasket
11061	108-2580	1	Gasket-Screw
11061A	108-2581	2	Gasket
13107	108-2582	1	Shaft
15003	115-8672	1	Carburetor ASM
16009	108-2584	1	Needle-Jet
16014	108-2585	1	Screw-Pilot, Air
16020	107-0563	1	Chamber-Float
16025	108-2587	1	Valve-Throttle
16041	108-2588	1	Shaft-Carburetor
16073	108-2590	1	Insulator
16183	108-2591	1	Float ASM

Ref.	Part Number	Qty.	Description
39076	108-2593	1	Limiter
49043	107-0565	1	Pump-Priming
49121	107-0562	1	Nozzle-Main
92009	108-2595	1	Screw
92009A	108-2596	1	Screw
92063	115-8673	1	Jet-Main (No.76)
92063A	108-2597	1	Jet-Main (No.74)
92063B	107-0564	1	Jet-Main (No.78)
92081	108-2598	1	Spring
92093	108-2599	1	Seal
92145	108-2600	1	Spring
92172	115-8674	1	Screw
92192A	115-8676	1	Tube (2X5X75)

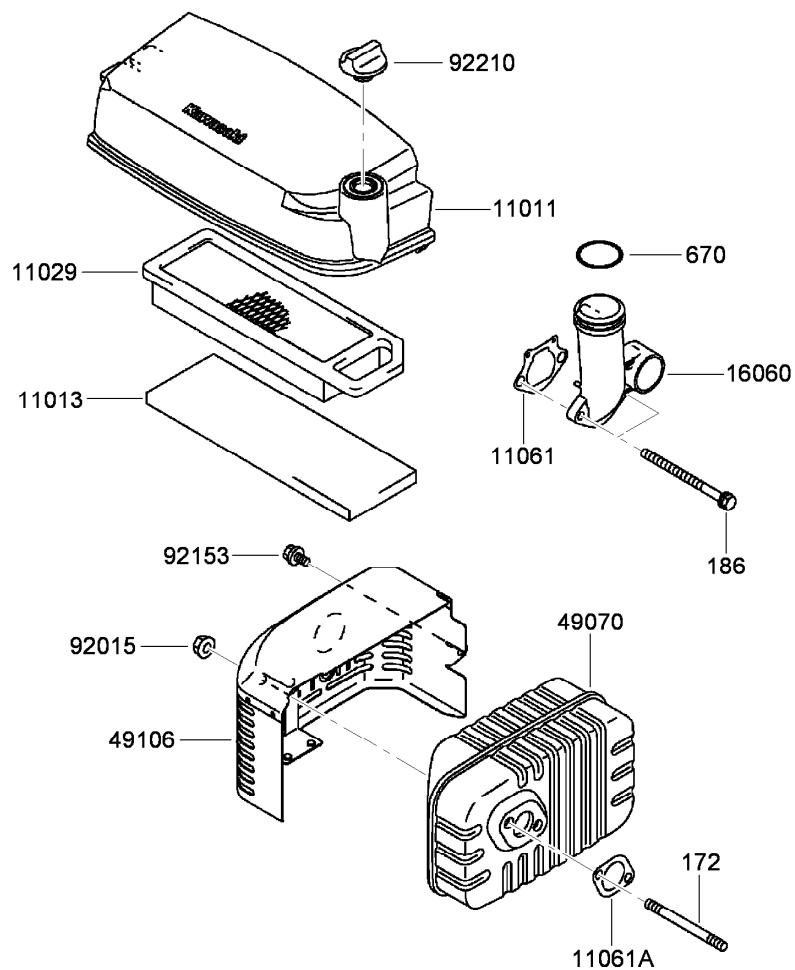


Air Filter and Muffler Assembly

Ref.	Part Number	Qty.	Description
172	115-8681	2	Bolt-Stud (6X80)
186	115-8682	2	Bolt-Upset, Wp (6X80)
670	108-2613	1	O-Ring (32Mm)
11011	108-2602	1	Case-Filter, Air
11013	108-2603	1	Element-Filter, Air
11029	108-2604	1	Air Filter Element ASM
11061	108-2605	1	Gasket-Pipe, Intake
11061A	108-2606	1	Gasket-Muffler
16060	108-2607	1	Pipe-Intake
49070	115-8679	1	Muffler
49106	115-8680	1	Cover-Muffler
92015	108-2610	2	Nut
92153	108-2611	1	Bolt (6X10)
92210	108-2612	1	Nut

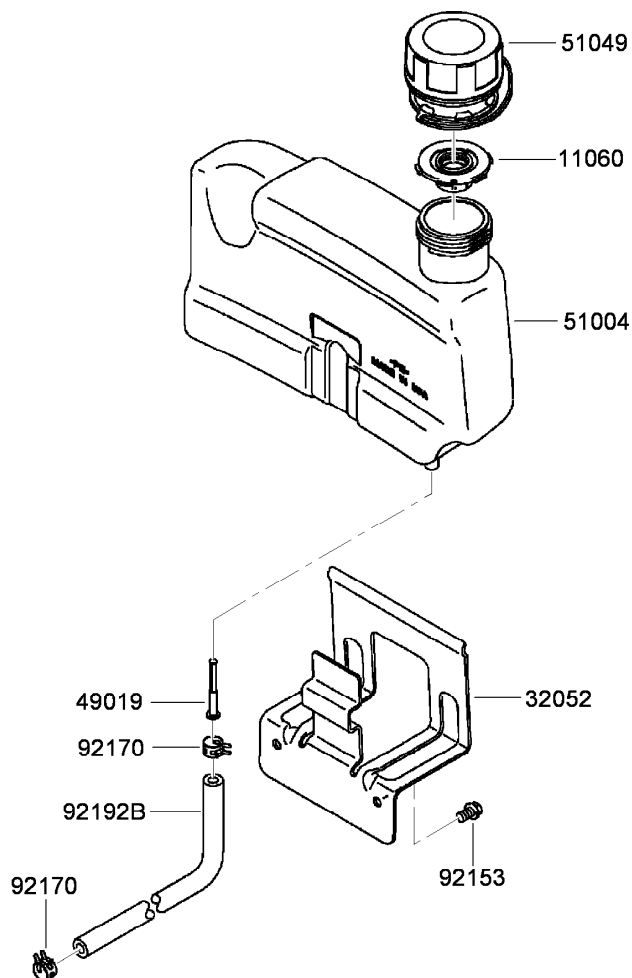

Fuel Tank and Fuel Valve Assembly

Ref.	Part Number	Qty.	Description
11060	115-8683	1	Gasket
32052	115-8684	1	Bracket-Tank
49019	115-8685	1	Filter-Fuel
51004	115-8686	1	Tank-Fuel
51049	115-8688	1	Cap-Tank
92153	108-2611	1	Bolt (6X10)
92170	100-2820	1	Clamp
92192B	115-8691	1	Tube (6.35X12.7X375)

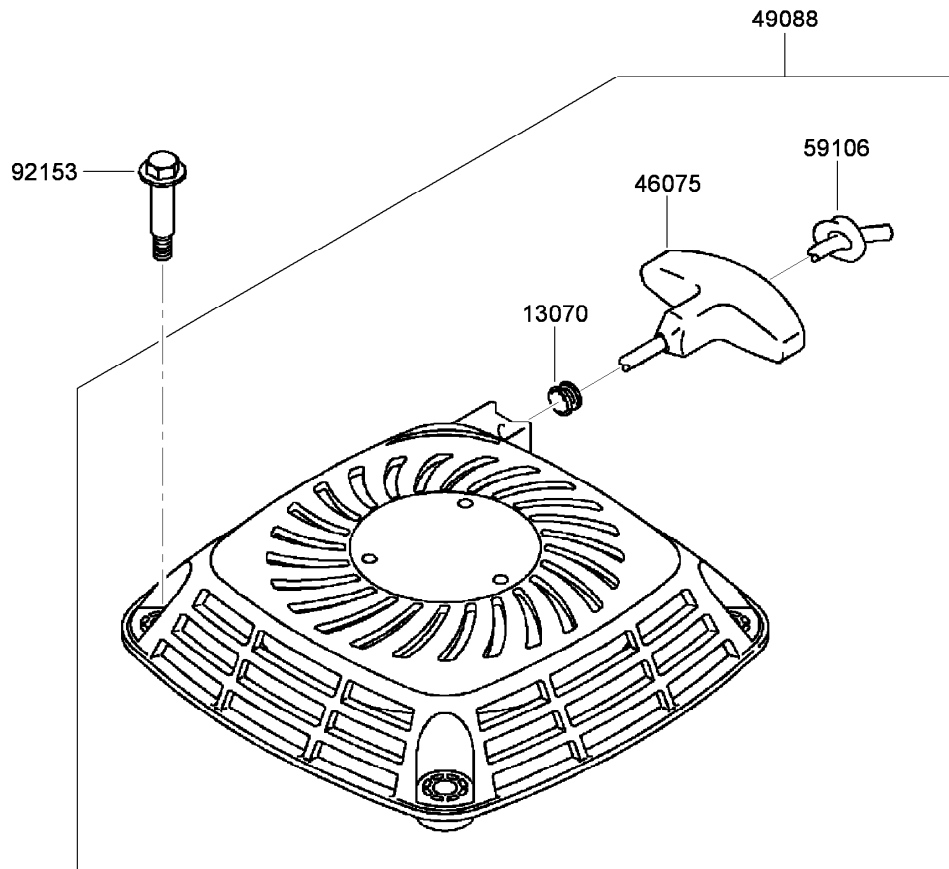


Starter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13070	115-8692	1	Guide
46075	115-8693	1	Grip
49088	115-8694	1	Starter-Recoil
59106	115-8695	1	Rope (1500Mm)
92153	108-2615	4	Bolt

56070



56033

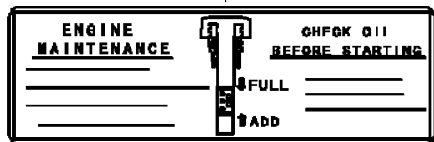

Label Set

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
56033	108-2624	1	Label-Manual
56070	108-2625	1	Label-Warning

Attachments and Accessories

For 42053 Line Painter 1200

Product Name	Model/Part
Pressure Gauge Kit	107-0572
MVP Kit.....	30036
White Xtreme Plus Paint.....	42005
White Xtreme Paint.....	42007
Sulky.....	42023
Red Xtreme Paint	42025
Yellow Xtreme Paint.....	42026
Blue Xtreme Paint.....	42027
Green Xtreme Paint.....	42028
Black Xtreme Paint	42029
Hand Wand Kit.....	42047

Notes:



Count on it.