



Count on it.

Parts Catalog

21in Heavy-Duty Recycler®/Rear Bagger

Lawn Mower

Model No. 22190—Serial No. 270000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

 
STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Housing Assembly	4
Housing Assembly No. 98-7139	5
Wheel and Tire Assembly No. 100-2870	6
Gear Case Assembly No. 74-1861	7
Engine and Blade Assembly	8
Handle Assembly	9
Rear Drive and Wheel Assembly	10
Rear Wheel Assembly No. 100-2860	11
Grass Bag Assembly No. 106-0975	12
Cylinder and Crankcase Assembly Kawasaki FJ180V-AS39	13
Piston and Crankshaft Assembly Kawasaki FJ180V-AS39	14
Valve and Camshaft Assembly Kawasaki FJ180V-AS39	15
Lubrication Equipment Assembly Kawasaki FJ180V-AS39	16
Cooling Equipment Assembly Kawasaki FJ180V-AS39	17
Electric Equipment Assembly Kawasaki FJ180V-AS39	18
Control Equipment Assembly Kawasaki FJ180V-AS39	19
Carburetor Assembly Kawasaki FJ180V-AS39	20
Air Filter and Muffler Assembly Kawasaki FJ180V-AS39	21
Fuel Tank and Fuel Valve Assembly Kawasaki FJ180V-AS39	22
Starter Assembly Kawasaki FJ180V-AS39	23
Brake and Cover Assembly Kawasaki FJ180V-AS39	24
Label Assembly Kawasaki FJ180V-AS39	25

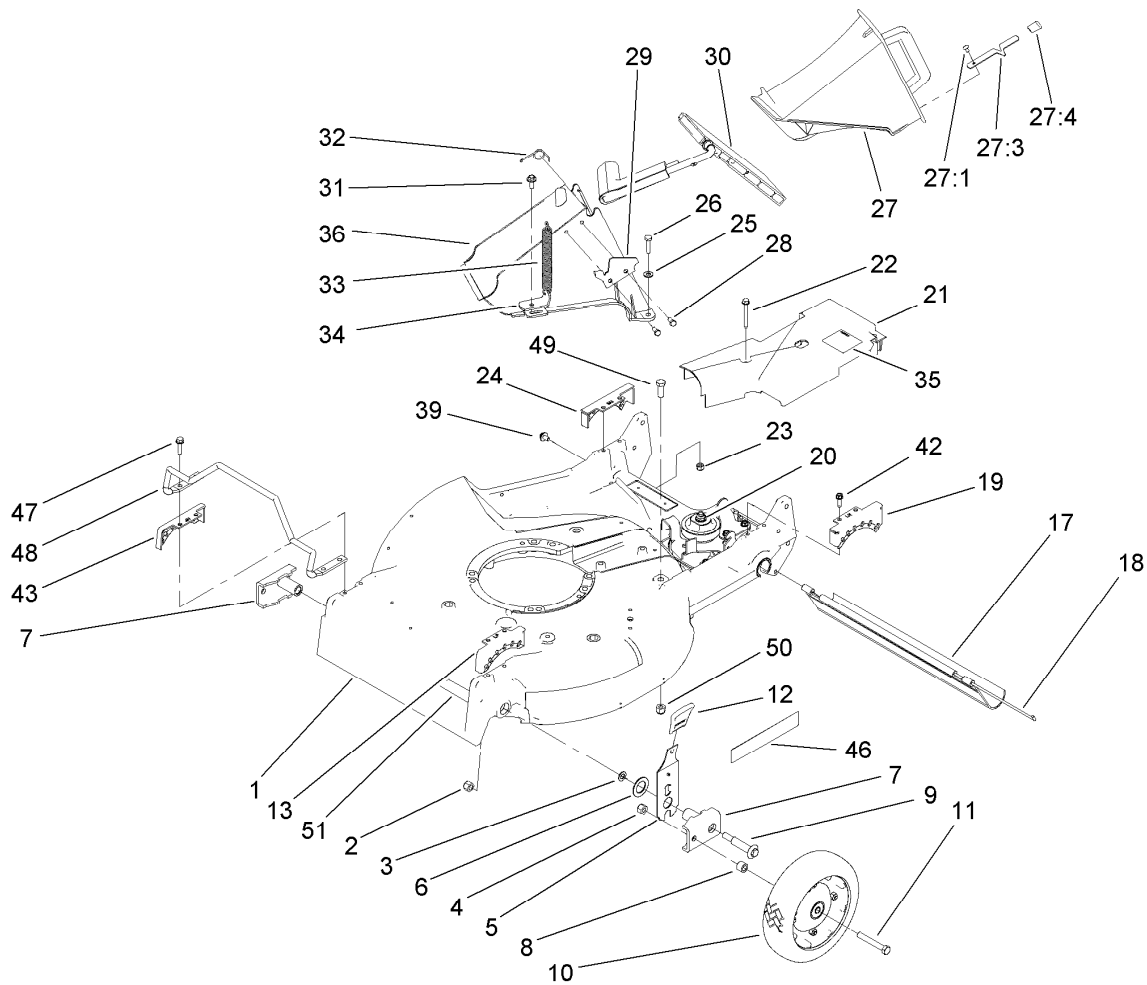

Housing Assembly


Ref.	Part Number	Qty.	Description
1	98-7139	1	Housing
2	3296-6	2	Nut-Lock
3	40-1940	2	Washer
4	32152-2	2	Nut-Lock, Cone
5	110-0537	2	Spring Arm ASM
6	257-3	2	Washer-Thrust
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	27-6232	2	Bolt-Wheel
10	100-2870	2	Wheel And Tire ASM
11	323-12	2	Screw-HH
12	110-0549	2	Knob-HOC
13	49-8760	1	Quadrant-Front, LH
17	112-9989	1	Shield-Trailing
18	33-3208	1	Rod-Shield
19	49-8740	1	Quadrant-Rear, LH
20	74-1861	1	Gear Case ASM
21	74-1770	1	Cover-Belt
22	37-7260	2	Screw-HHFTF
23	3296-42	2	Nut-Lock, NI
24	49-8750	1	Quadrant-Rear, RH
25	3256-22	2	Washer-Flat
26	321-8	2	Screw-HH

Ref.	Part Number	Qty.	Description
27	77-0500	1	Discharge Plug ASM
27:1	3295-35	1	Rivet-Head, Flat
27:3	76-4640	1	Latch-Plug, Discharge
27:4	76-4650	1	Grip-Latch
28	46-8090	2	Screw-Plastite
29	93-3154	1	Latch-Plate
30	93-7351	1	Discharge Door ASM
31	46-6811	1	Screw-HWH
32	80-3770	1	Retainer-Door
33	76-4660	1	Spring-Door
34	71-9350	1	Bracket-Spring
35	52-2620	1	Label-Grease
36	82-9152	1	Tunnel-Discharge
39	46-6810	1	Screw And Washer ASM
42	49-2040	4	Screw-HWHTF
43	49-8770	1	Quadrant-Front, RH
46	106-0689	1	Decal
47	32144-86	4	Screw-HWHTF
48	99-6722	1	Guard-Engine
49	323-6	2	Screw-HH
50	3296-39	2	Nut-Lock, NI
51	68-7410	1	Decal-Blade

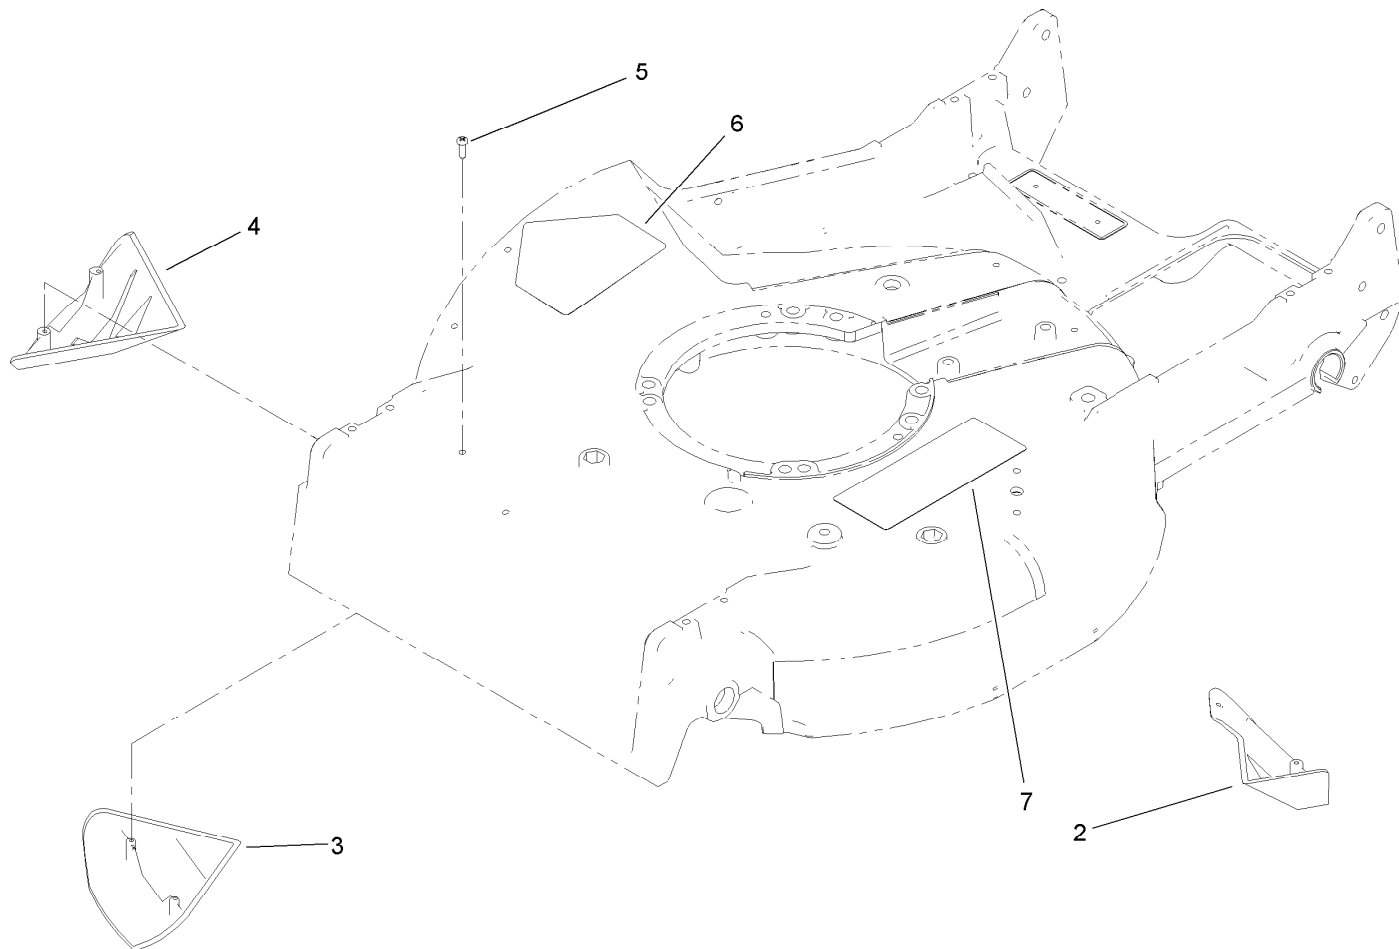 

Housing Assembly No. 98-7139


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	92-1750	1	Kicker-Rear
3	92-1720	1	Kicker-Front
4	92-1730	1	Kicker-RH
5	32144-111	6	Screw-PPH
6	39-5770	1	Decal-Danger
7	104-8589	1	Decal-Warning

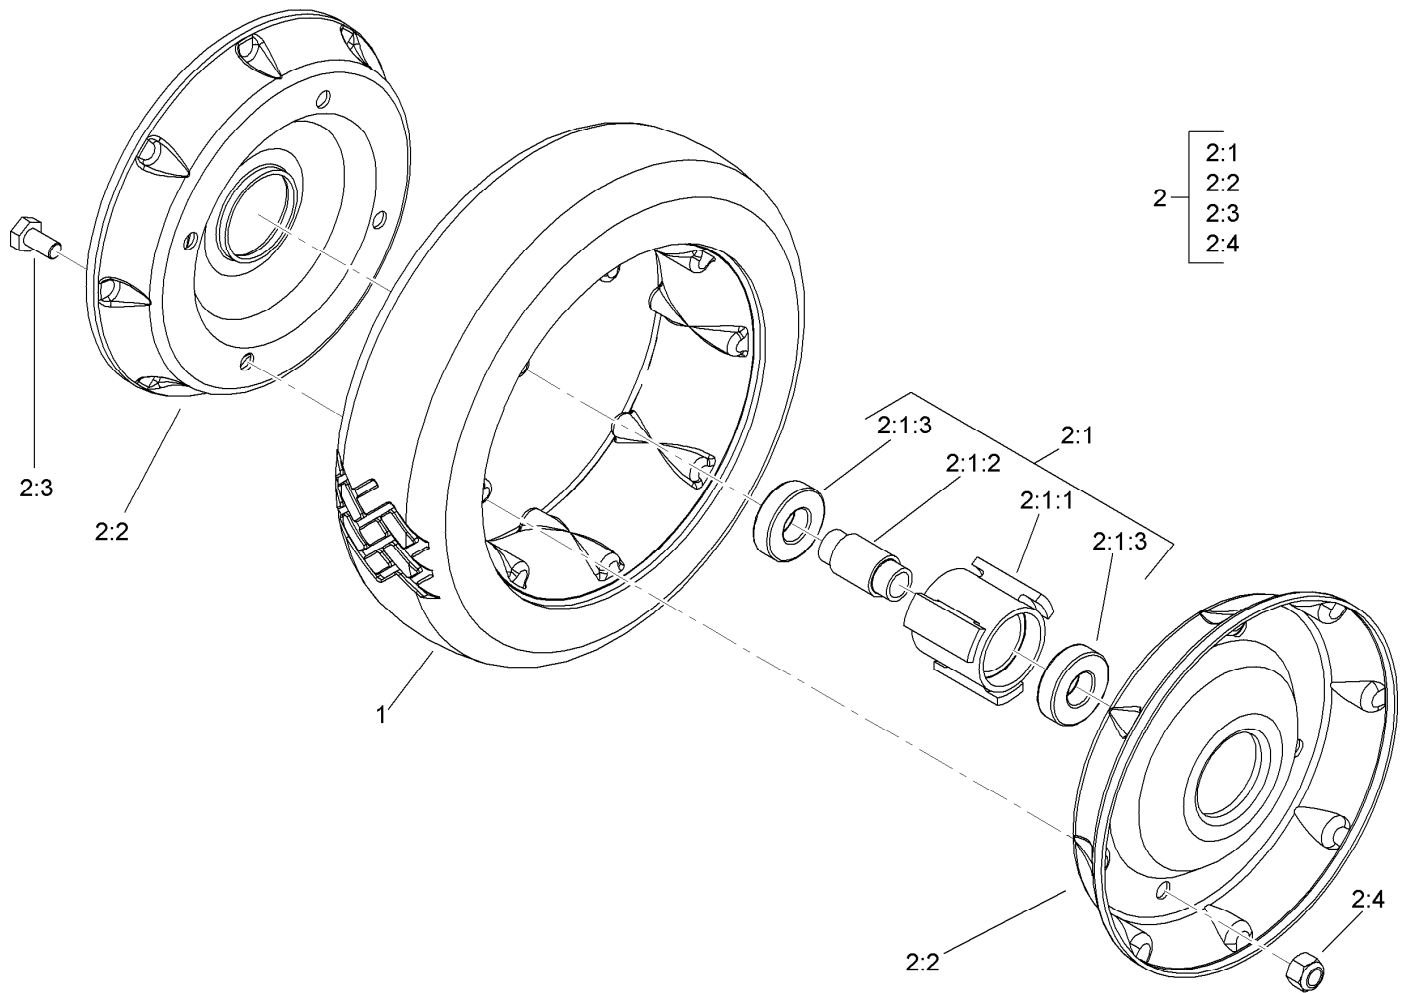 

Wheel and Tire Assembly No. 100-2870

Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	53-7780-06	2	Plate-Wheel, Half
2:3	321-2	4	Screw-HH
2:4	3296-42	4	Nut-Lock, NI

 
● Not serviced separately

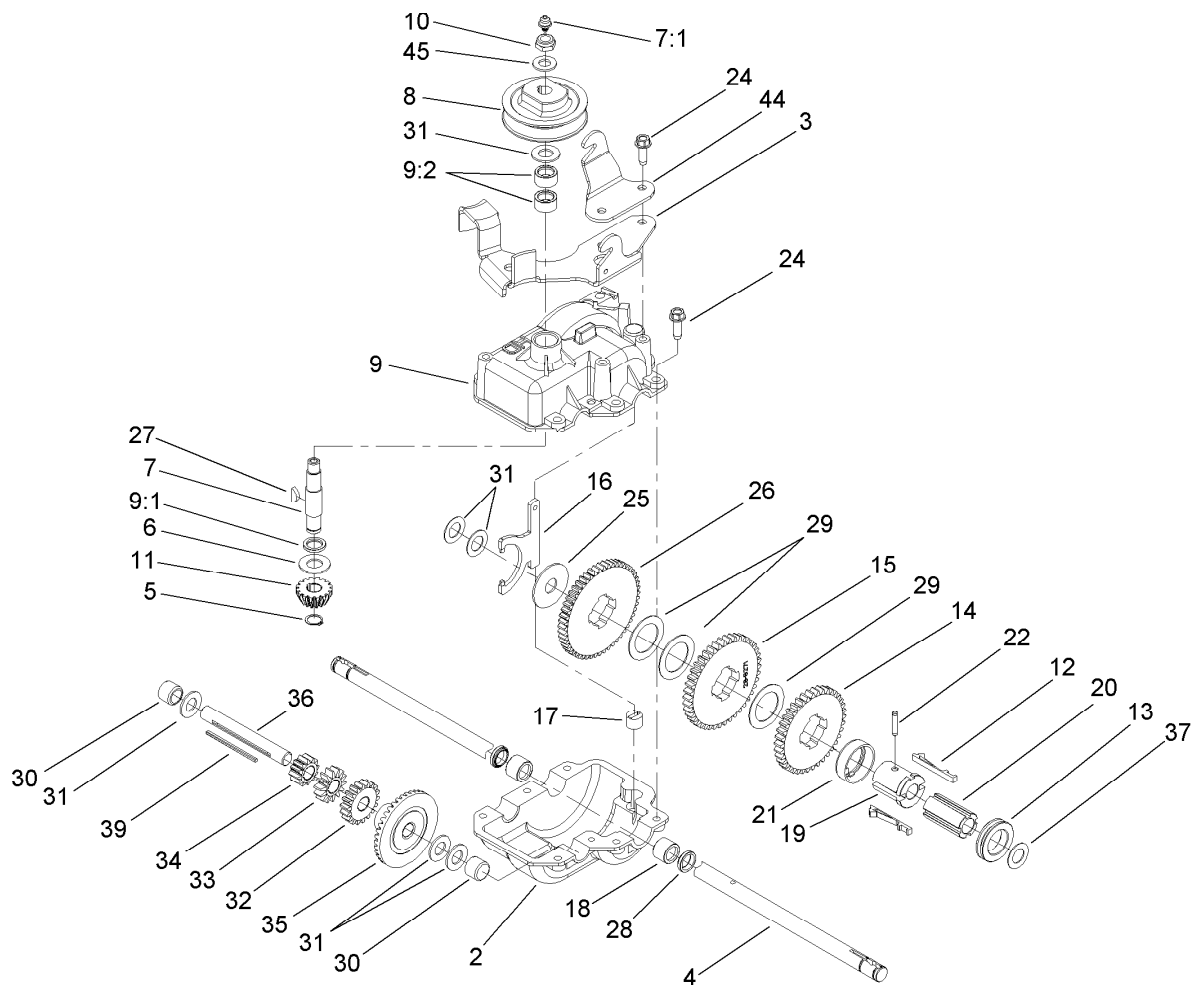

Gear Case Assembly No. 74-1861


Ref.	Part Number	Qty.	Description
2	74-1920	1	Case-Gear, Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74-1890	1	Shaft-Output
5	32151-57	1	Ring-Retaining
6	47-2910	1	Washer-Thrust
7	13-5149	1	Input Shaft ASM
7:1	302-63	1	Zerk
8	39-6740	1	Pulley
9	13-9739	1	Upper Gearcase ASM
9:1	47-7260	1	Seal
9:2	47-7270	2	Bearing
10	3296-5	1	Nut-Lock
11	39-6660	1	Pinion-Bevel
12	29-9330	2	Key-Shift
13	29-9340	1	Collar-Shift
14	42-4740	1	Gear-38T
15	29-9271	1	Gear-42T
16	60-8870	1	Yoke-Shift
17	29-9570	1	Bushing-Yoke
18	47-6730	2	Seal-Oil
19	55-8010	1	Sleeve-Gear

Ref.	Part Number	Qty.	Description
20	39-6720	1	Sleeve
21	55-8020	1	Retainer-Key
22	3285-19	1	Pin-Groove
24	49-2040	6	Screw-HWHTF
25	29-9690	1	Washer
26	46-3560	1	Gear
27	3257-1	2	Key-Woodruff
28	48-2060	2	Bearing-Roller
29	36-4770	3	Washer
30	252-103	2	Bearing-Closed
31	36-4792	4	Washer-Thrust
32	39-6650	1	Gear-18T
33	46-3550	1	Gear-14T
34	46-3540	1	Gear-12T
35	74-1760	1	Gear-Bevel
36	53-7950	1	Shaft-Intermediate
37	36-4780	3	Washer-Plain
39	39-7842	1	Key
44	74-1750-03	1	Bracket-Engage, Traction
45	3256-45	1	Washer-Flat

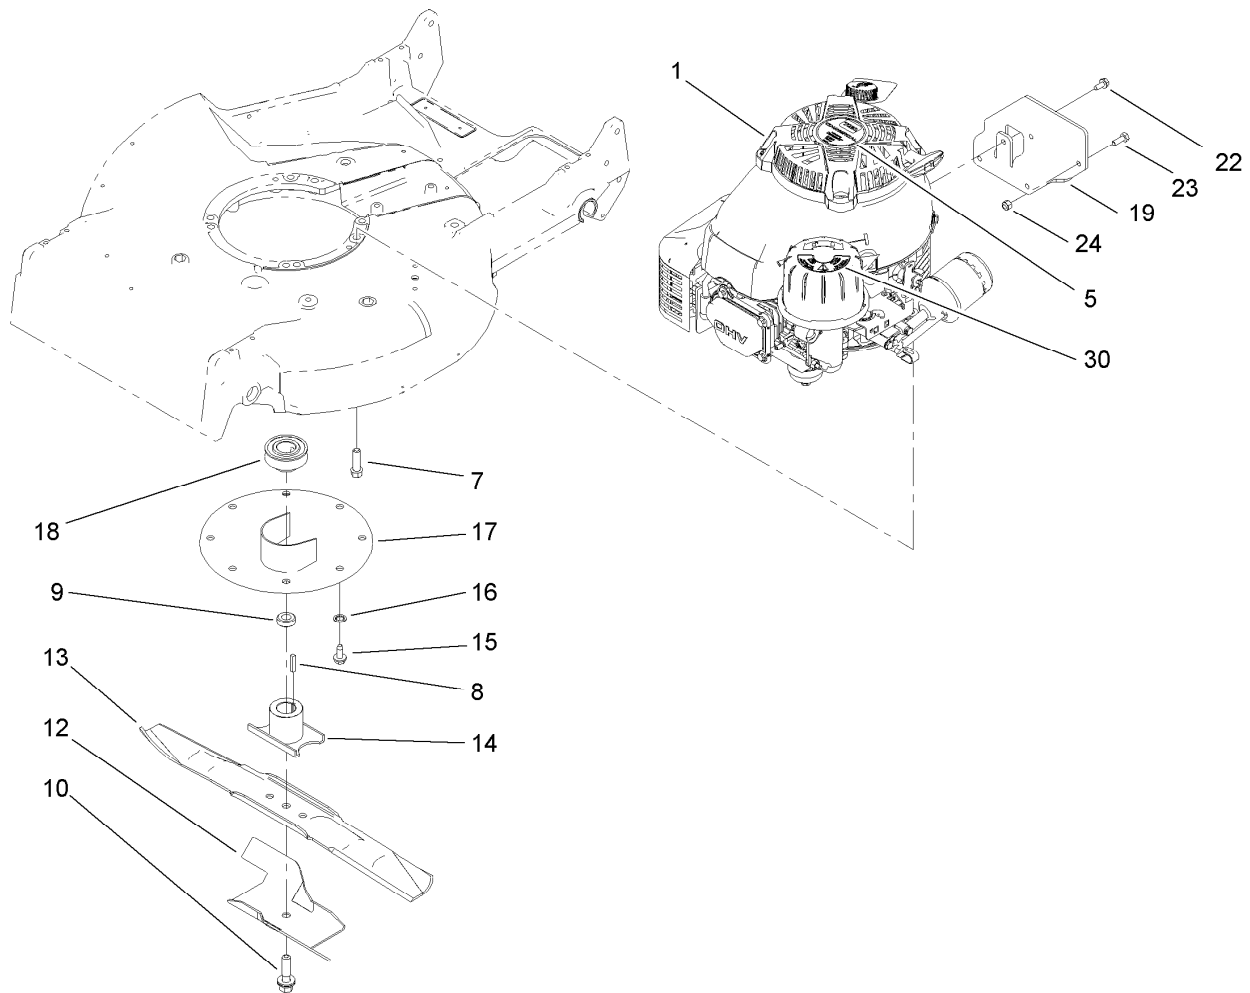 

Engine and Blade Assembly


Ref.	Part Number	Qty.	Description
1	114-3432	1	Engine-Kawasaki, Fj180V-As39
5	112-9967	1	Decal
7	95-1727	4	Screw-Taptite
8	5-1077	1	Key-Square
9	103-3795	1	Spacer-Retainer, Blade
10	105-8579	1	Bolt-Blade
12	92-1599-03	1	Stiffener-Blade
13	91-2256-03	1	Blade-21 Inch
14	52-2170-03	1	Retainer-Blade ASM
15	32144-70	3	Screw-HWHTF
16	3254-6	3	Washer-Lock, Internal
17	65-5860	1	Protector-Crankshaft
18	46-7910	1	Pulley-Driver
19	112-9730-03	1	Bracket-Adapter, Tank
22	115-1004	3	Screw-HWH
23	321-4	2	Screw-HH
24	3296-42	2	Nut-Lock, NI
30	114-3415	1	Decal-Air Cleaner

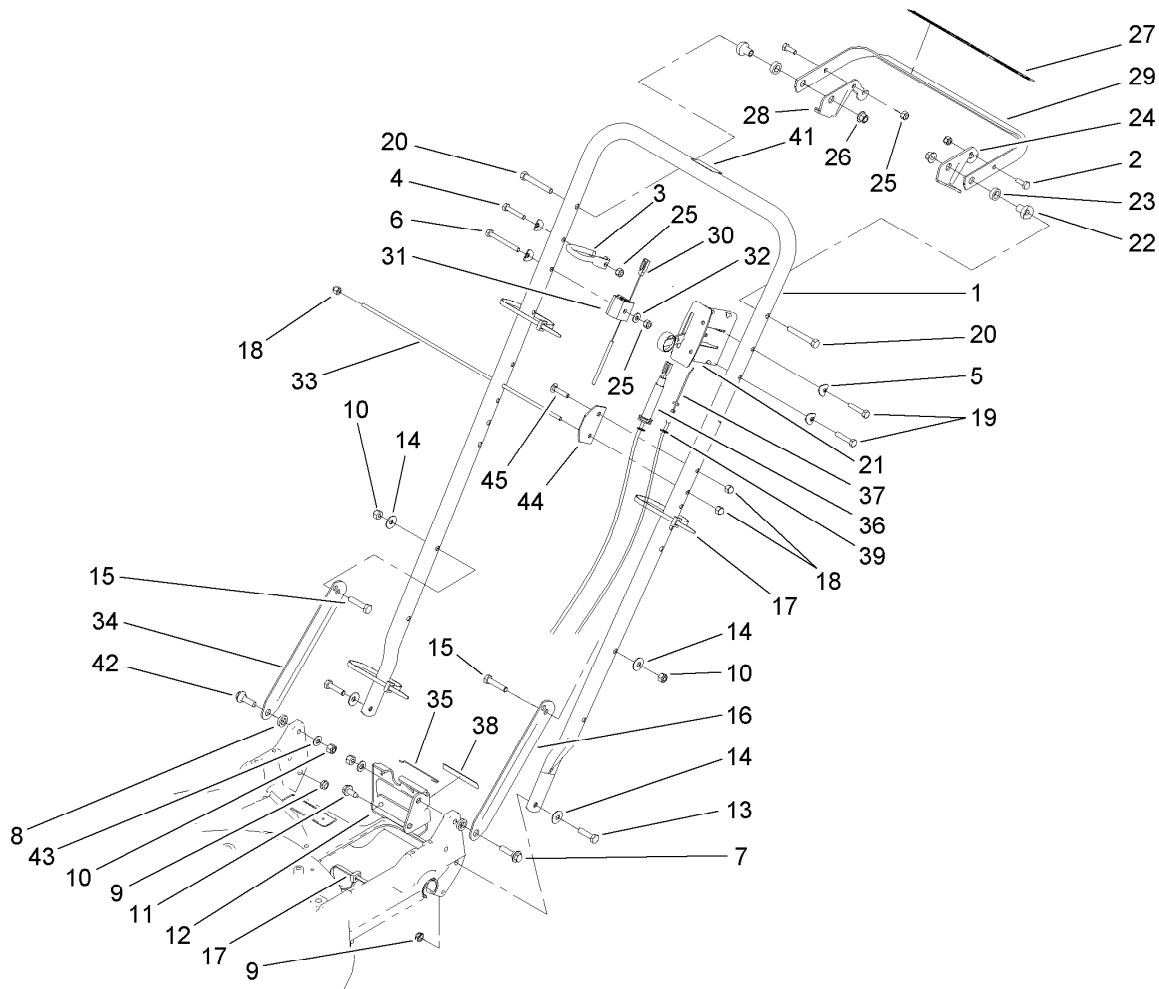 

Handle Assembly

Ref.	Part Number	Qty.	Description
1	98-2000-03	1	Handle
2	321-4	2	Screw-HH
3	46-8081	1	Guide-Rope
4	321-9	1	Screw-HH
5	3-7501	4	Washer
6	321-15	1	Screw-HH
7	27-7210	1	Screw-Shoulder
8	3-3287	2	Spacer-Latch, Handle
9	3296-47	2	Nut-Lock, NI
10	3296-29	4	Nut-Lock, NI
11	32144-70	1	Screw-HWHTF
12	74-1741	1	Bracket-Adjustment, Traction
13	322-6	2	Screw-HH
14	3290-456	4	Washer-Belleville
15	322-7	2	Screw-HH
16	100-3298-03	1	Latch-Handle, LH
17	3290-378	5	Tie-Cable
18	32111-7	3	Nut-Cap
19	321-13	2	Screw-HH
20	322-11	2	Screw-HH
21	114-3448	1	Control-Head, Throttle
22	49-1630	2	Spacer-Support

Ref.	Part Number	Qty.	Description
23	256-276	2	Spacer-Nylon
24	66-5350	1	Lever-Control
25	3296-42	4	Nut-Lock, NI
26	3296-58	2	Nut-Lock, NI
27	115-1003	1	Decal-Traction
28	77-5270	1	Lever-Control
29	61-8270-03	1	Bar-Control
30	103-2683	1	Cable-Brake
31	46-6980	1	Support-Cable
32	3256-22	1	Washer-Flat
33	48-2810	1	Rod-Support, Bag
34	100-3297-03	1	Latch-Handle, RH
35	46-7030	1	Retainer-Cable
36	74-1791	1	Cable-Traction
37	106-0888	1	Throttle Cable ASM
38	74-1970	1	Decal-Position, Gear
39	32151-86	2	E-Ring
41	98-4387	1	Decal-Protection, Ear
42	27-7211	1	Screw-Shoulder
43	3256-23	2	Washer-Flat
44	104-1326	1	Plate-Aligning, Bag
45	3229-3	1	Screw-CARR

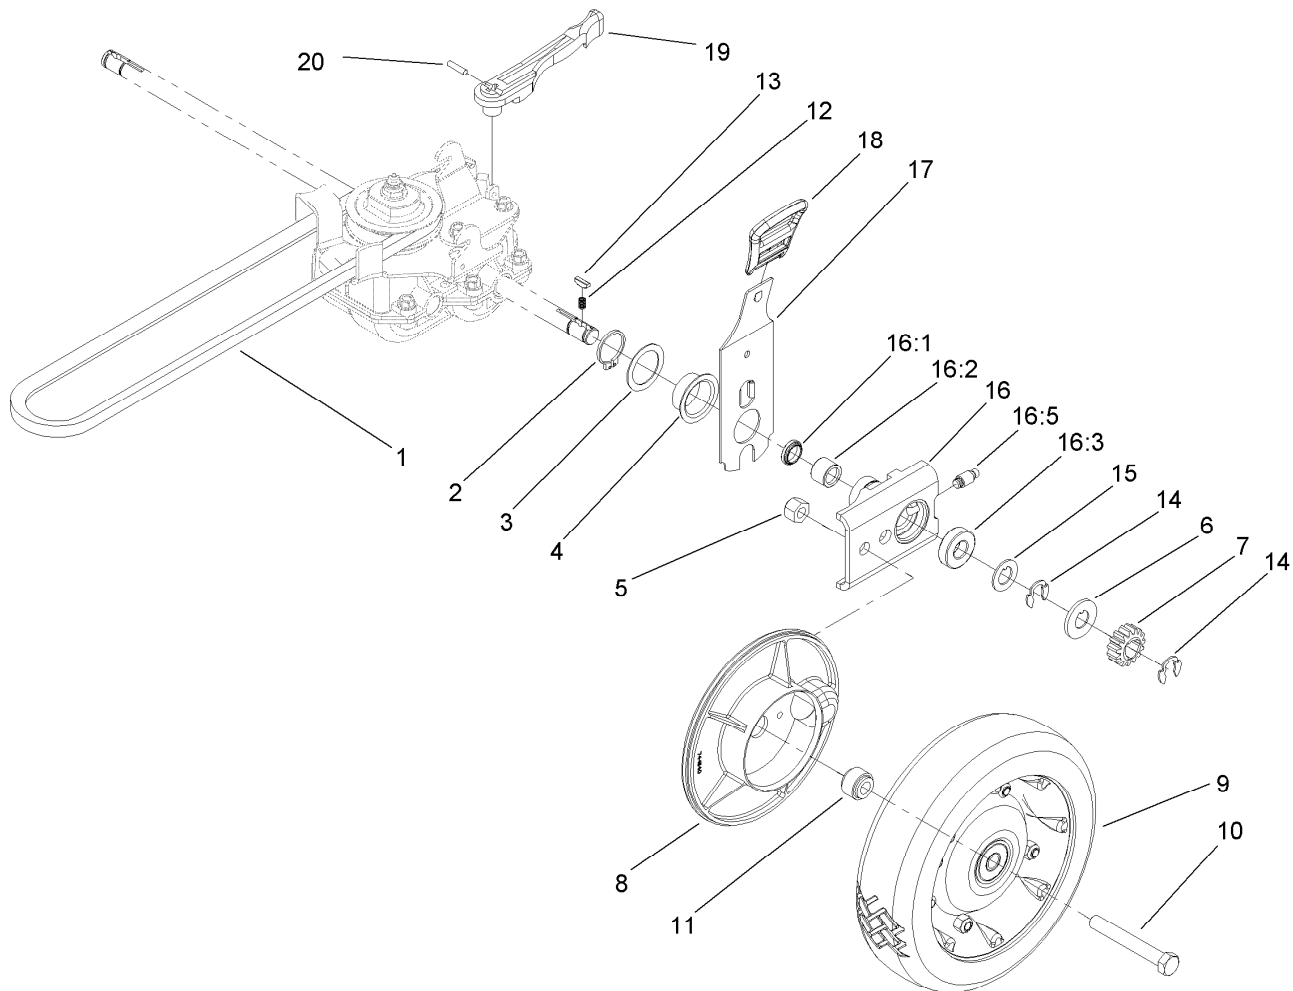 


Rear Drive and Wheel Assembly

Ref.	Part Number	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Lock, Cone
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	100-2860	2	Wheel And Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key

Ref.	Part Number	Qty.	Description
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	110-0538	2	Rear Spring Arm ASM
18	110-0549	2	Knob-HOC
19	74-1960	1	Lever-Shift
20	32121-99	1	Pin-Coil
99	106-0975	1	Grass Bag ASM ●

 
● Not illustrated

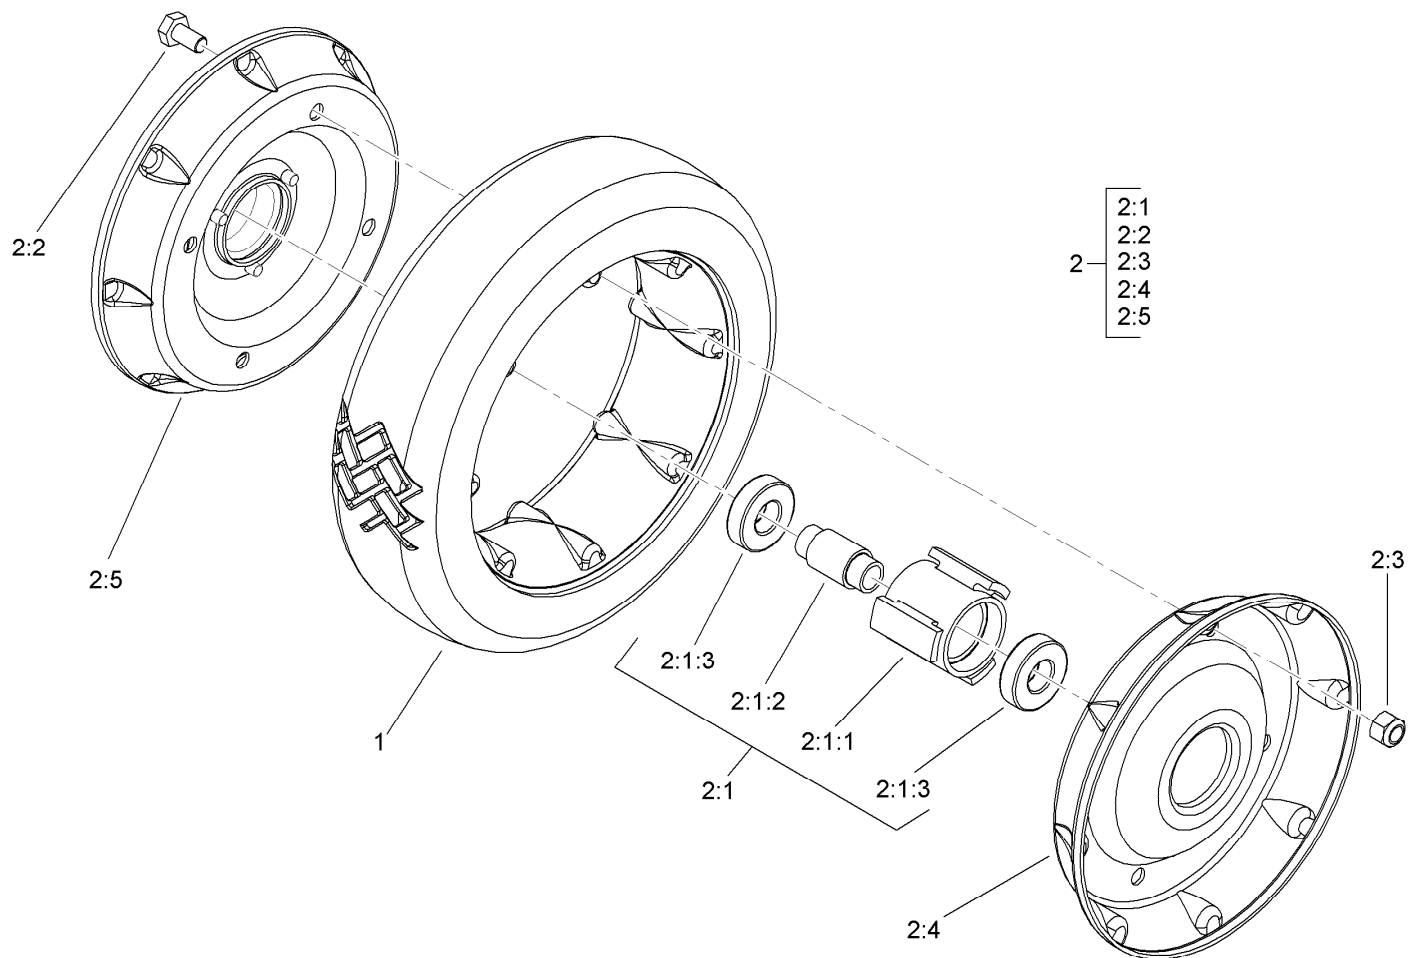

Rear Wheel Assembly No. 100-2860


Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock, NI
2:4	53-7780-06	1	Plate-Wheel, Half
2:5	92-4957-06	1	Wheel Half And Gear ASM

 ● Not serviced separately

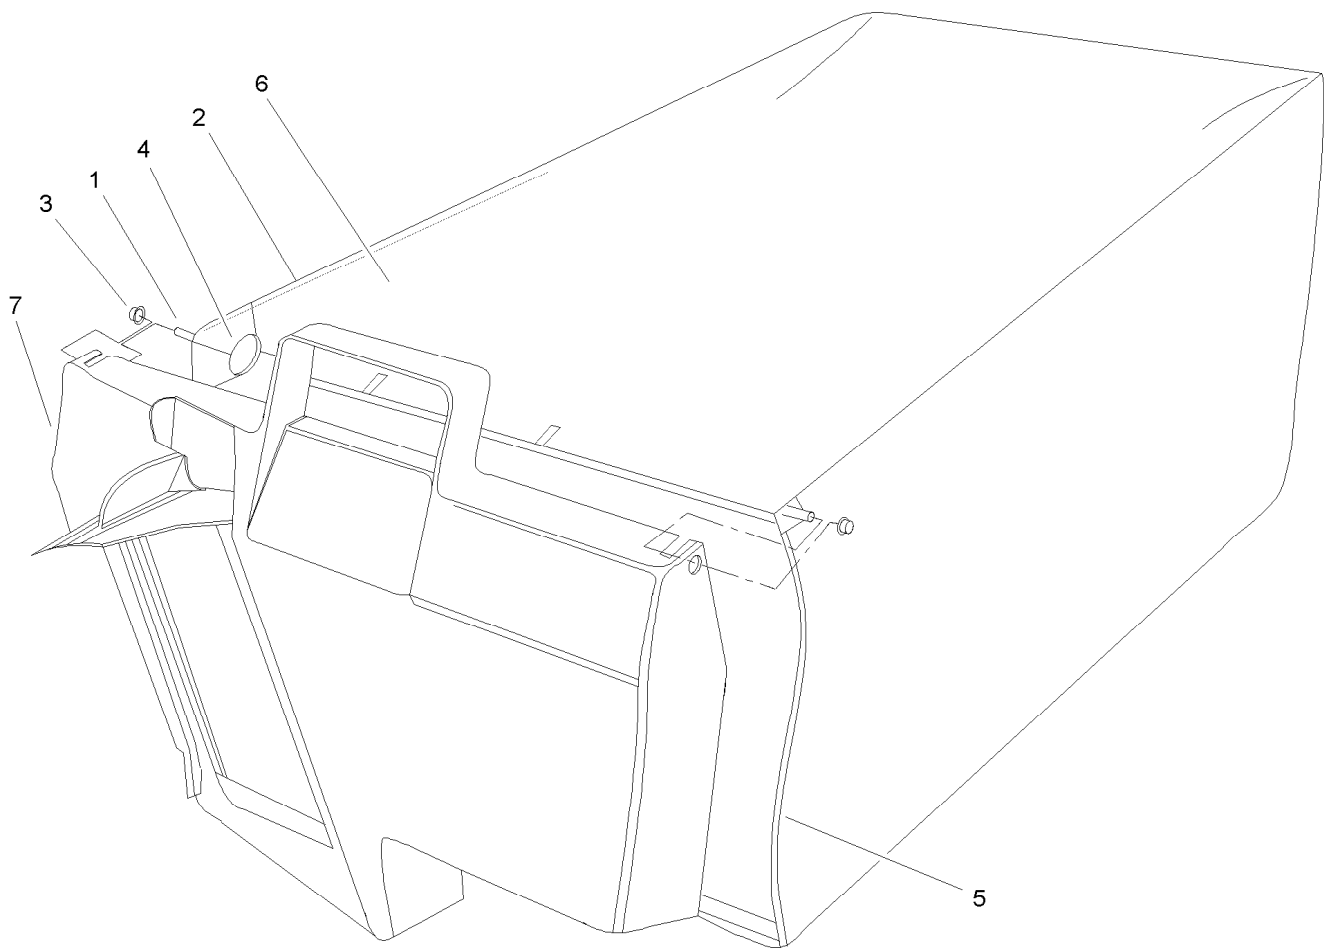

Grass Bag Assembly No. 106-0975


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	33-4820	1	Hinge-Door, Bag
2	42-4030	1	Frame-Bag, Upper
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	106-0926	1	Bag-Grass
7	48-2840	1	Door-Bag, Grass

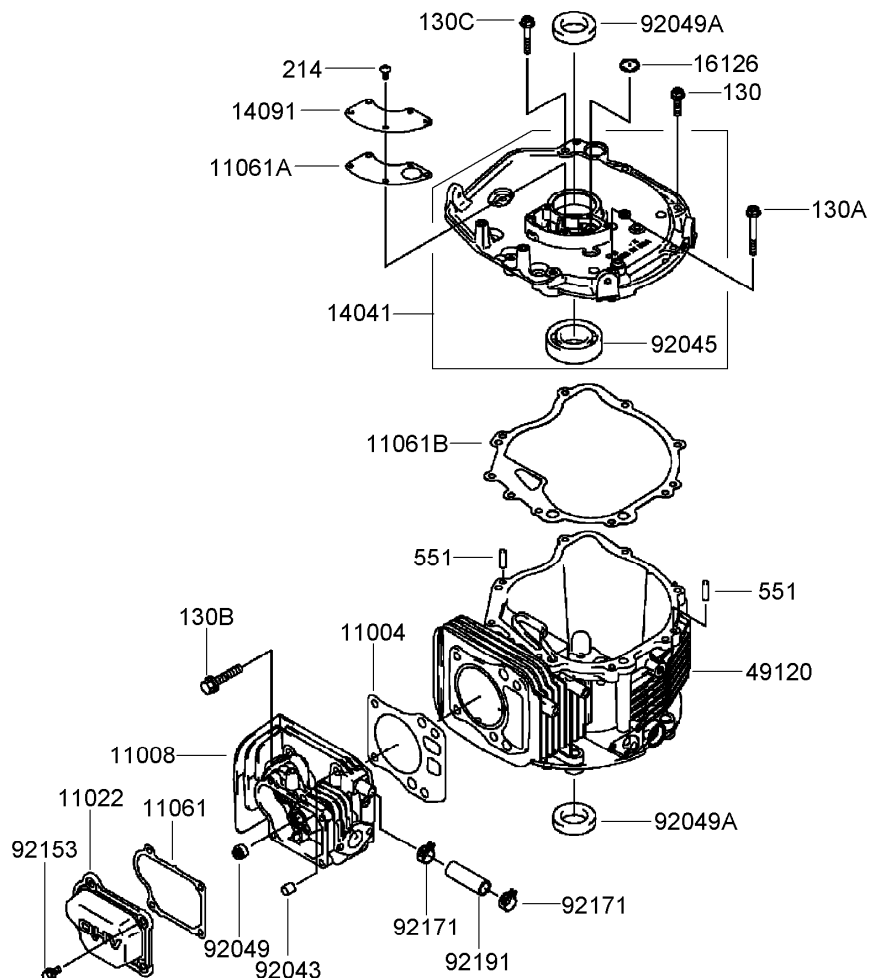 

Cylinder and Crankcase Assembly Kawasaki FJ180V-AS39

Ref.	Part Number	Qty.	Description
11004	11004-7020	1	Gasket-Head ●
11008	11008-7025	1	Head-Cylinder ●
11022	11022-7005	1	Case-Rocker ●
11061	11061-7023	1	Gasket-Case, Rocker ●
11061A	11061-7031	1	Gasket-Breather ●
11061B	11061-7060	1	Gasket-Cover, Crankcase ●
14041	14041-7010	1	Cover ●
14091	14091-7010	1	Cover-Breather ●
16126	16126-7014	1	Valve-Breather ●
49120	49120-7082	1	Crankcase ●
92043	92043-7001	2	Pin ●
92045	92045-1207	1	Bearing-Ball (62/28) ●
92049	92049-7001	1	Seal-Oil, R V C2 (6X11X10.2) ●
92049A	92049-7008	2	Seal-Oil (28-44-9 T C) ●
92153	92153-7043	4	Bolt (6X12) ●
92171	92171-7024	2	Clamp ●
92191	92191-7025	1	Tube (12X16X49) ●
130	130BA0625	7	Bolt-Flanged (6X25) ●
130A	130BA0650	1	Bolt-Flanged (6X50) ●
130B	130CA0840	4	Bolt-Flanged (8X40) ●
130C	130G0635	1	Bolt-Flanged (6X35) ●
214	214AA0510	5	Screw-Pan +-(5X10) ●
551	551A0612	2	Pin-Dowel (6X12) ●

 
● Obtain parts from www.kawpowerepc.com

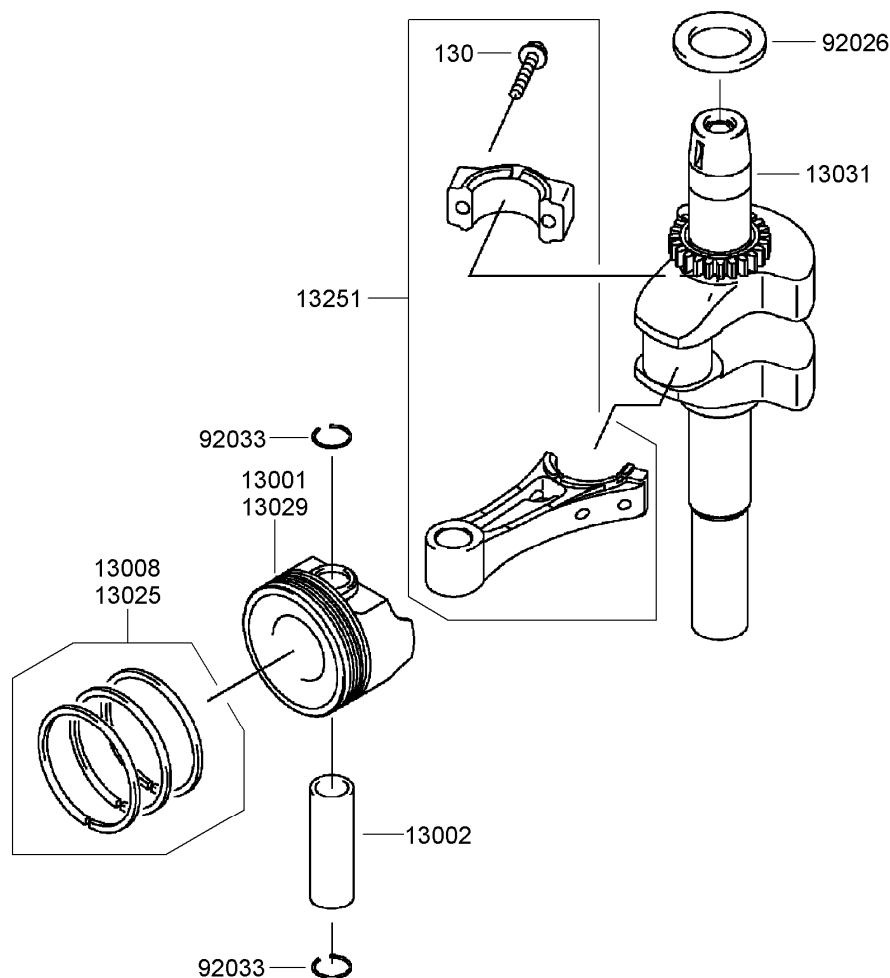

Piston and Crankshaft Assembly Kawasaki FJ180V-AS39


Ref.	Part Number	Qty.	Description
13001	13001-7023	1	Piston-Engine ●
13002	13002-7001	1	Pin-Piston ●
13008	13008-7002	1	Piston Ring Set ●
13025	13025-7006	1	Piston Ring Set (L 0.50) ●
13029	13029-7005	1	Piston-Engine (L 0.50) ●
13031	13031-7064	1	Crankshaft ●
13251	13251-7011	1	Connecting Rod ASM ●
92026	92026-7020	1	Spacer ●
92033	92033-7002	2	Ring-Snap ●
130	130BA0630	2	Bolt-Flanged (6X30) ●

 ● Obtain parts from www.kawpowerepc.com

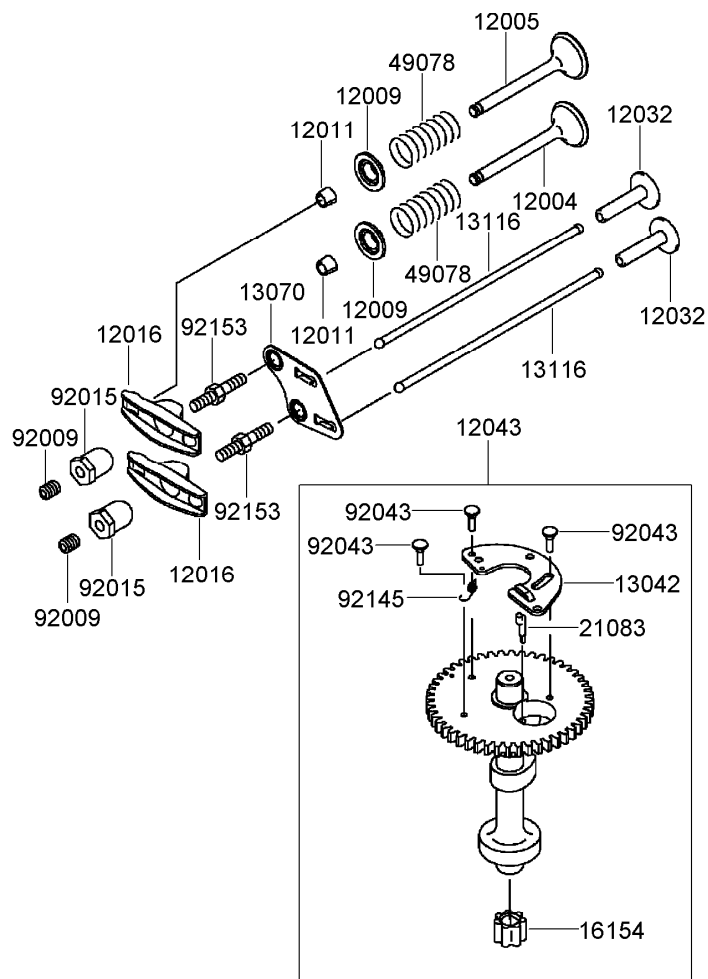

Valve and Camshaft Assembly Kawasaki FJ180V-AS39


Ref.	Part Number	Qty.	Description
12004	12004-7005	1	Valve-Intake ●
12005	12005-7006	1	Valve-Exhaust ●
12009	12009-7001	2	Retainer-Spring, Valve ●
12011	12011-2056	4	Collet ●
12016	12016-7008	2	Arm-Rocker ●
12032	12032-7001	2	Tappet ●
12043	12043-7005	1	Camshaft Valve ASM ●
13042	13042-7006	1	Weight ●
13070	13070-7009	1	Guide ●
13116	13116-7003	2	Rod-Push ●
16154	16154-7004	1	Rotor-Pump ●
21083	21083-7009	1	Arm ●
49078	49078-7001	2	Spring-Valve, Engine ●
92009	92009-2341	2	Screw ●
92015	92015-2253	2	Nut ●
92043	92043-7006	3	Pin ●
92145	92145-7016	1	Spring ●
92153	92153-7019	2	Bolt ●

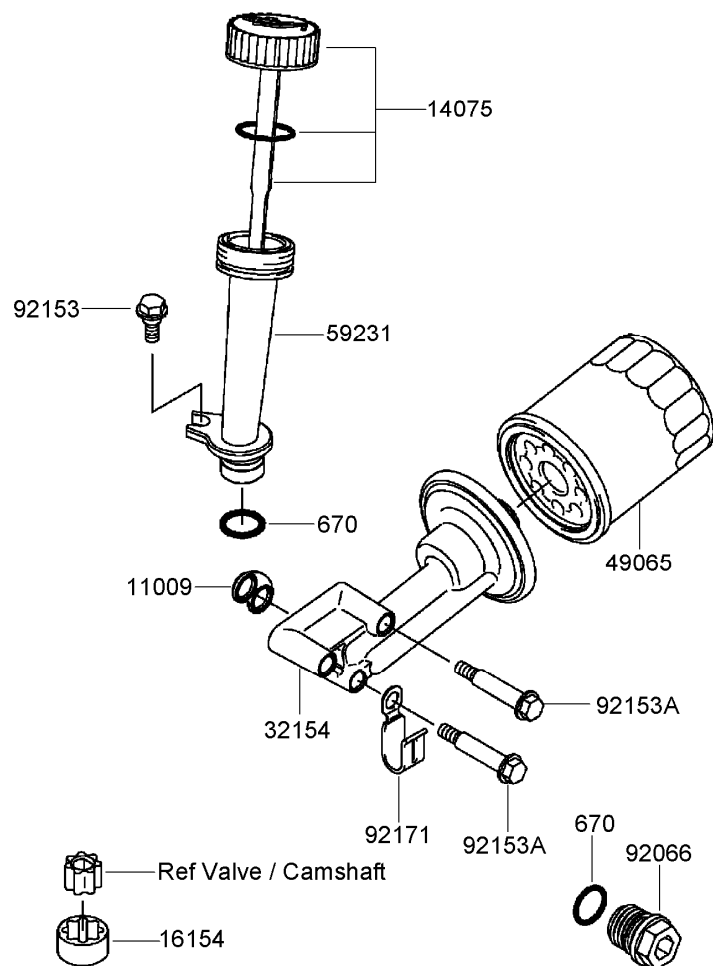 

Lubrication Equipment Assembly Kawasaki FJ180V-AS39

Ref.	Part Number	Qty.	Description
11009	11009-2860	1	Gasket ●
14075	14075-7007	1	Cap ASM ●
16154	16154-7002	1	Rotor-Pump ●
32154	32154-7018	1	Pipe ●
49065	49065-2078	1	Filter-Oil ●
59231	59231-7004	1	Filler ●
92066	92066-7003	1	Plug ●
92153	92153-7007	1	Bolt ●
92153A	92153-7028	3	Bolt ●
92171	92171-7008	1	Clamp ●
670	670D2016	2	O-Ring (16Mm) ●

 
● Obtain parts from www.kawpowerepc.com

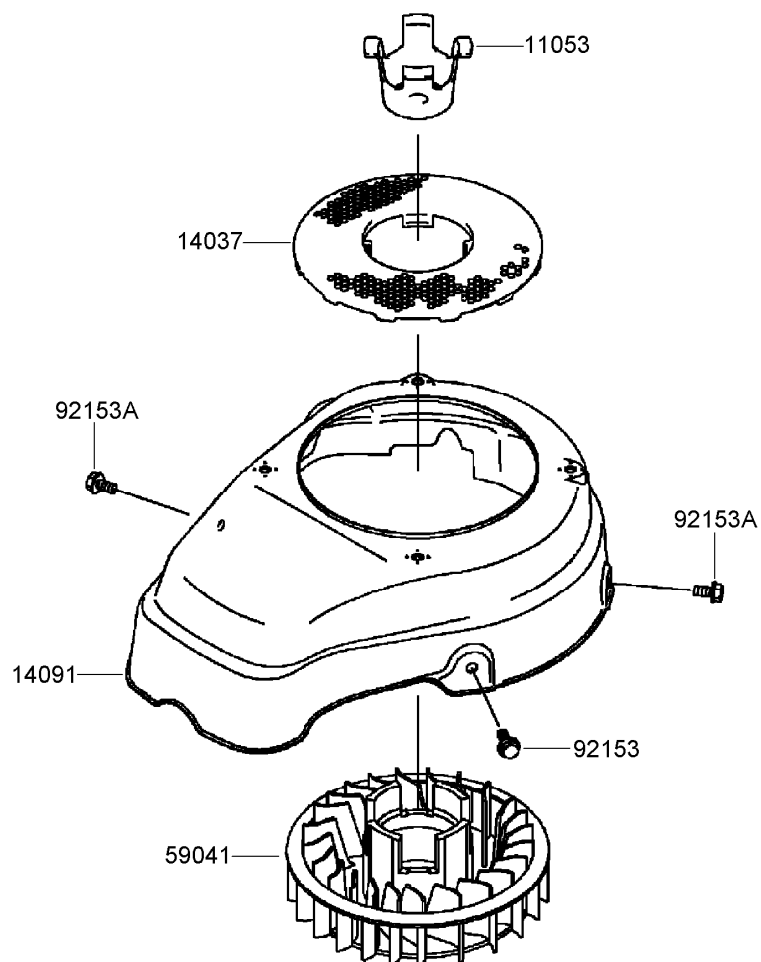

Cooling Equipment Assembly Kawasaki FJ180V-AS39


Ref.	Part Number	Qty.	Description
11053	11053-7009	1	Bracket-Fan ●
14037	14037-7017	1	Screen ●
14091	14091-7053	1	Cover ●
59041	59041-7009	1	Fan ●
92153	92153-7007	1	Bolt ●
92153A	92153-7043	2	Bolt (6X12) ●

 ● Obtain parts from www.kawpowerepc.com

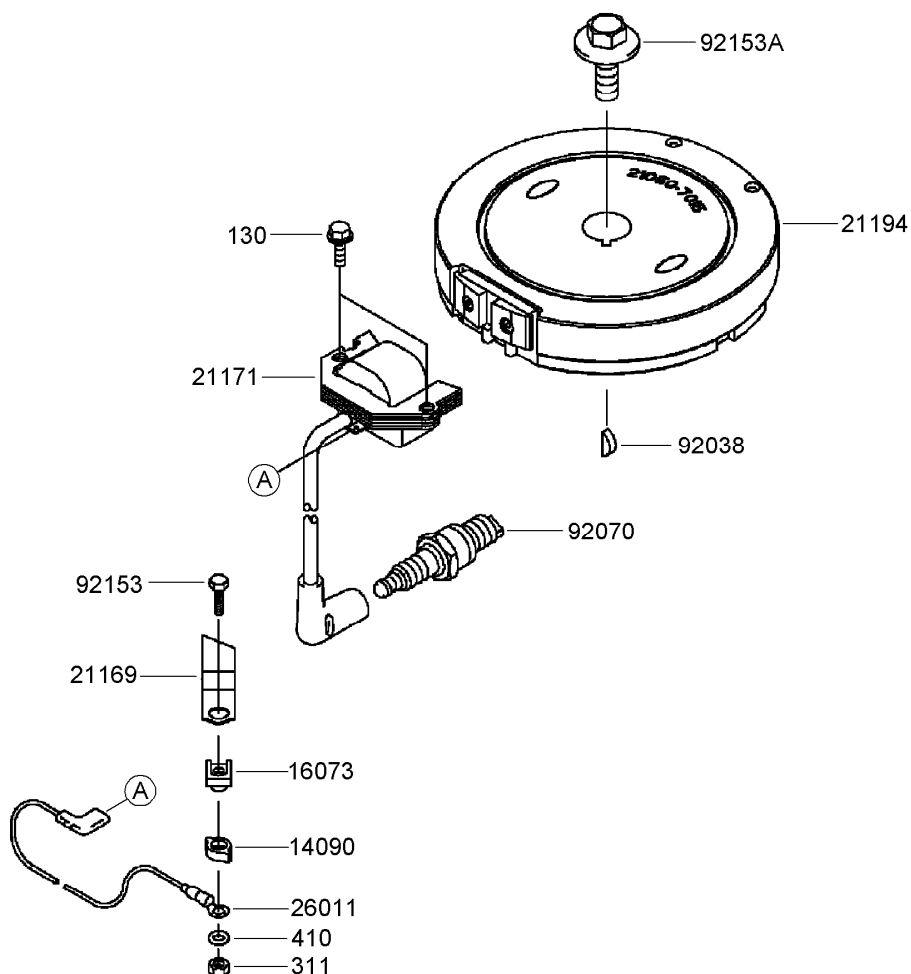

Electric Equipment Assembly Kawasaki FJ180V-AS39


Ref.	Part Number	Qty.	Description
14090	14090-2108	1	Cover ●
16073	16073-2192	1	Insulator ●
21169	21169-2071	1	Terminal ●
21171	21171-7030	1	Ignition Coil ASM ●
21194	21194-7024	1	Flywheel ●
26011	26011-7013	1	Wire-Lead ●
92038	92038-2077	1	Key ●
92070	92070-2088	1	Spark Plug, B P R 5E S (N G K) Solid ●
92153	92153-7012	1	Bolt (4X16) ●
92153A	92153-7030	1	Bolt (12X30) ●
130	130AA0620	2	Bolt-Flanged (6X20) ●
311	311B0400	1	Nut-Hex (4Mm) ●
410	410B0400	1	Washer-Plain, S (4Mm) ●

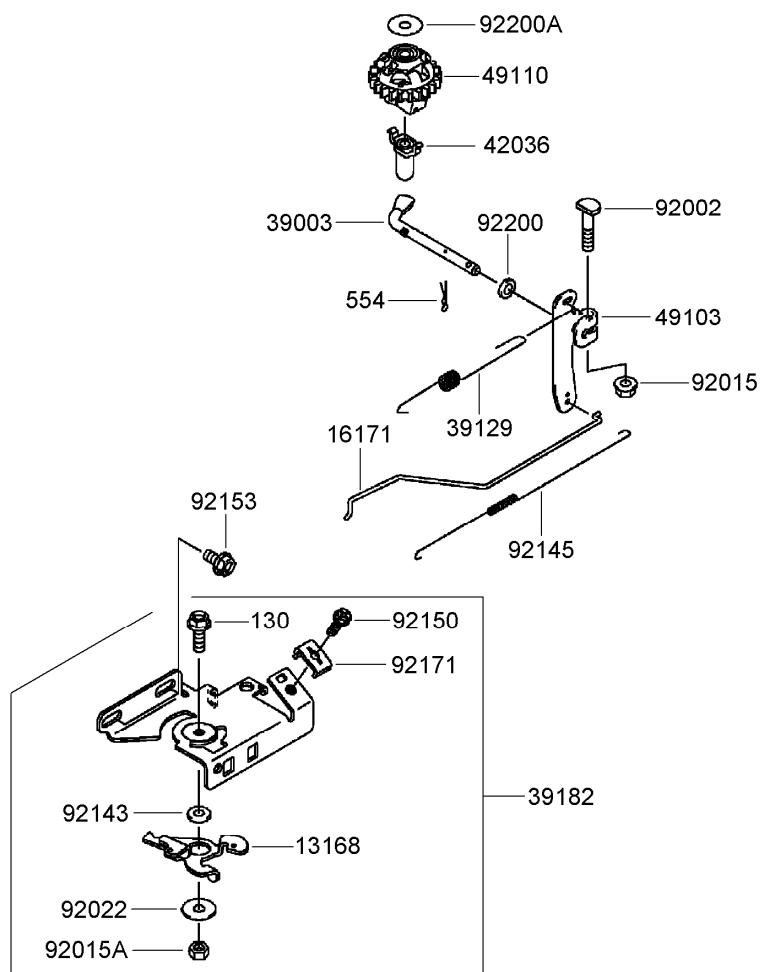 

Control Equipment Assembly Kawasaki FJ180V-AS39

Ref.	Part Number	Qty.	Description
13168	13168-7032	1	Lever ●
16171	16171-7015	1	Link-Throttle ●
39003	39003-7002	1	Arm-Pivot ●
39129	39129-7014	1	Spring-Governor ●
39182	39182-7010	1	Control Panel ASM ●
42036	42036-2051	1	Sleeve ●
49103	49103-7005	1	Arm-Governor ●
49110	49110-7002	1	Governor ASM ●
92002	92002-2269	1	Bolt (6X28) ●
92015	92015-1193	1	Nut ●
92015A	92015-2051	1	Nut ●
92022	92022-2372	1	Washer (6X19X1.2) ●
92143	92143-2135	1	Collar (6X13X2.3) ●
92145	92145-7025	1	Spring-Throttle ●
92150	92150-2182	1	Bolt (5X18) ●
92153	92153-7043	2	Bolt (6X12) ●
92171	92171-7016	1	Clamp ●
92200	92200-2029	1	Washer (6.5X11.5X2.0) ●
92200A	92200-2036	1	Washer (6.2X20X0.5) ●
130	130AA0618	1	Bolt-Flanged (6X18) ●
554	554A0600	1	Pin-Snap (1.2X21.2) ●

 
● Obtain parts from www.kawpowerepc.com

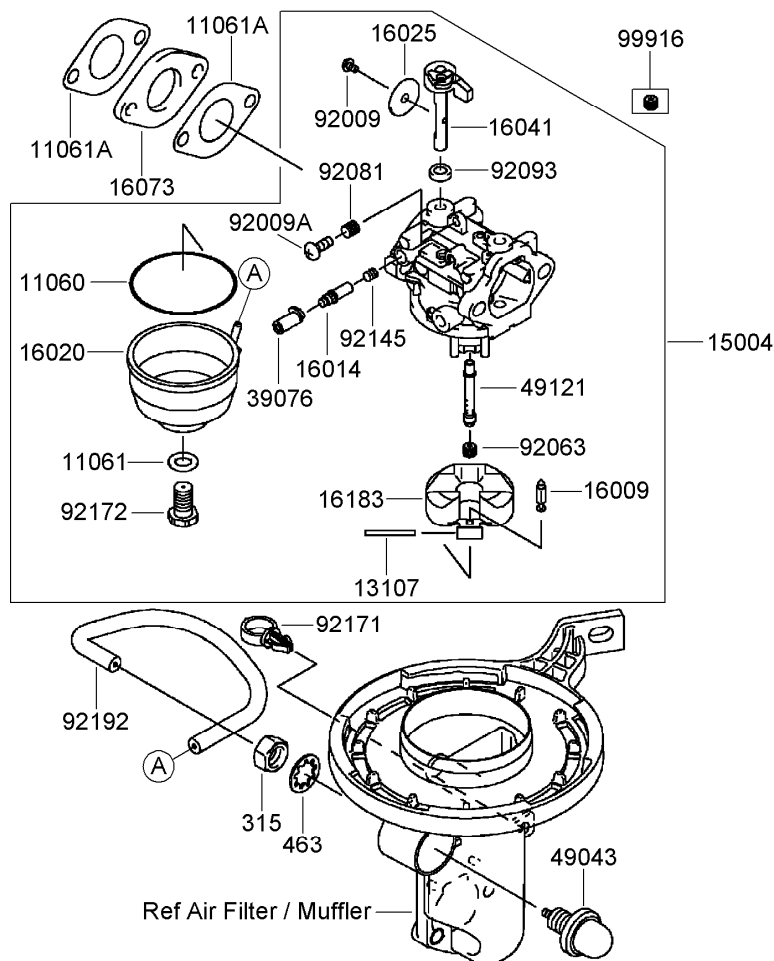

Carburetor Assembly Kawasaki FJ180V-AS39

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
11060	11060-2190	1	Gasket ●	49121	49121-7014	1	Nozzle-Main ●
11061	11061-7010	1	Gasket-Screw ●	92009	92009-2083	1	Screw ●
11061A	11061-7015	2	Gasket-Insulator ●	92009A	92009-2349	1	Screw ●
13107	13107-7024	1	Shaft ●	92063	92063-7061	1	Jet-Main, No. 78 ●
15004	15004-7011	1	Carburetor ASM ●	92081	92081-2234	1	Spring ●
16009	16009-2136	1	Needle-Jet ●	92093	92093-2100	1	Seal ●
16014	16014-7008	1	Screw-Air, Pilot ●	92145	92145-7015	1	Spring ●
16020	16020-7005	1	Chamber-Float ●	92171	92171-7014	1	Clamp ●
16025	16025-7007	1	Valve-Throttle ●	92172	92172-7003	1	Screw ●
16041	16041-7019	1	Shaft-Carburetor ●	92192	92192-7092	1	Tube (2.2X7.3X190) ●
16073	16073-7006	1	Insulator ●	99916	99916-7007	1	Main Jet K H I Parts Kit ●
16183	16183-2002	1	Float ASM ●	315	315B1000	1	Nut-Hex, Fine (10Mm) ●
39076	39076-7001	1	Limiter ●	463	463H1000	1	Washer-Toothed (10Mm) ●
49043	49043-7002	1	Pump-Priming ●				

 
● Obtain parts from www.kawpowerepc.com

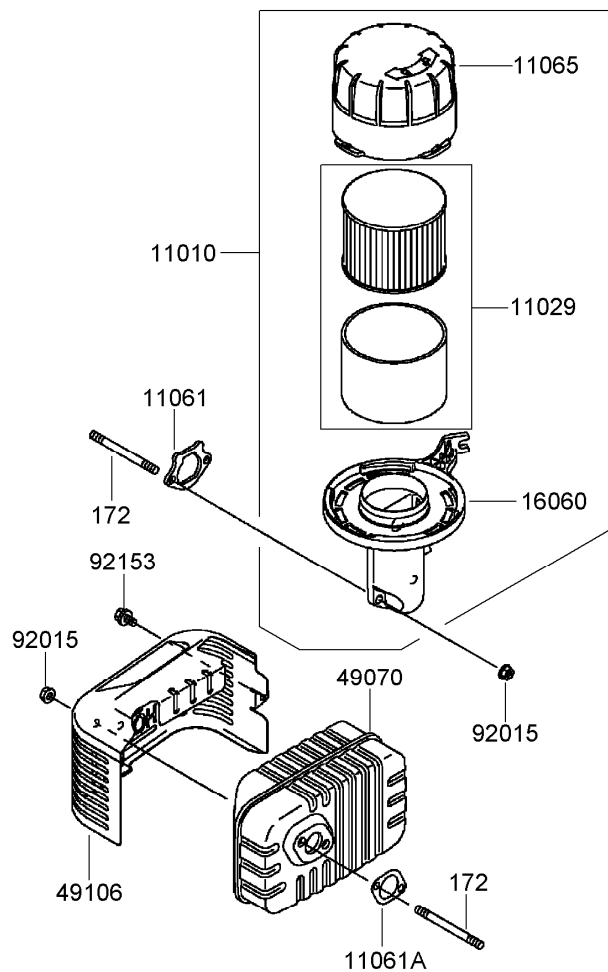

Air Filter and Muffler Assembly Kawasaki FJ180V-AS39


Ref.	Part Number	Qty.	Description
11010	11010-7024	1	Air Filter ASM ●
11029	11029-7023	1	Air Filter Element ASM ●
11061	11061-7012	1	Gasket-Pipe, Intake ●
11061A	11061-7029	1	Gasket-Muffler ●
11065	11065-7019	1	Cap ●
16060	16060-7031	1	Pipe-Intake ●
49070	49070-7026	1	Muffler ●
49106	49106-7021	1	Cover-Muffler ●
92015	92015-1193	4	Nut ●
92153	92153-7023	1	Bolt (6X10) ●
172	172BA0680	4	Bolt-Stud (6X80) ●

 ● Obtain parts from www.kawpowerepc.com

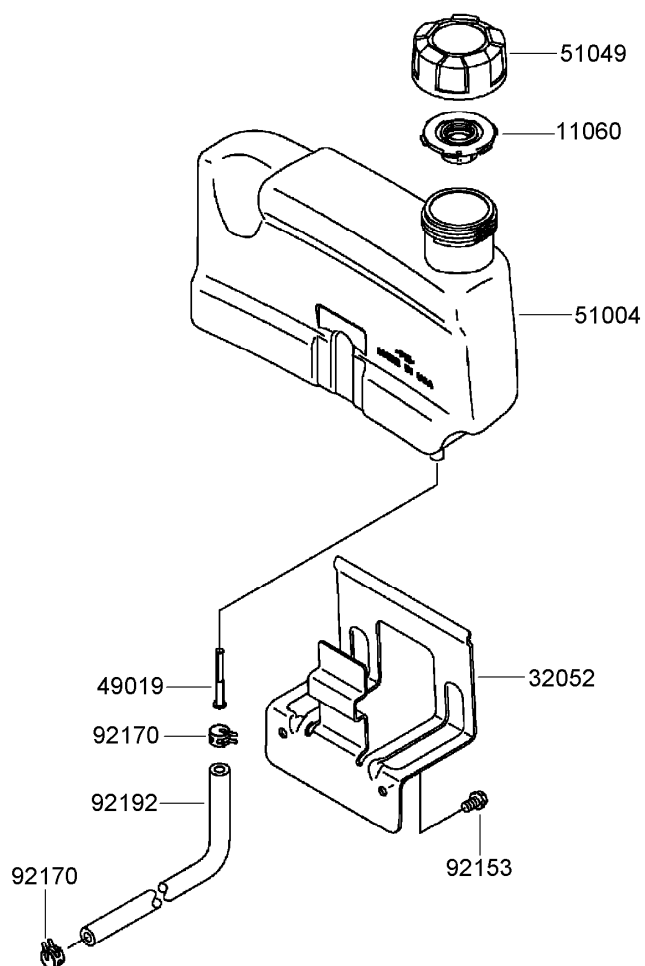

Fuel Tank and Fuel Valve Assembly Kawasaki FJ180V-AS39


Ref.	Part Number	Qty.	Description
11060	11060-2145	1	Gasket ●
32052	32052-7001	1	Bracket-Tank ●
49019	49019-7003	1	Filter-Fuel ●
51004	51004-7004	1	Tank-Fuel ●
51049	51049-7004	1	Cap-Tank ●
92153	92153-7023	2	Bolt (6X10) ●
92170	92170-2009	2	Clamp ●
92192	92192-7084	1	Tube (6X12.7X375) ●

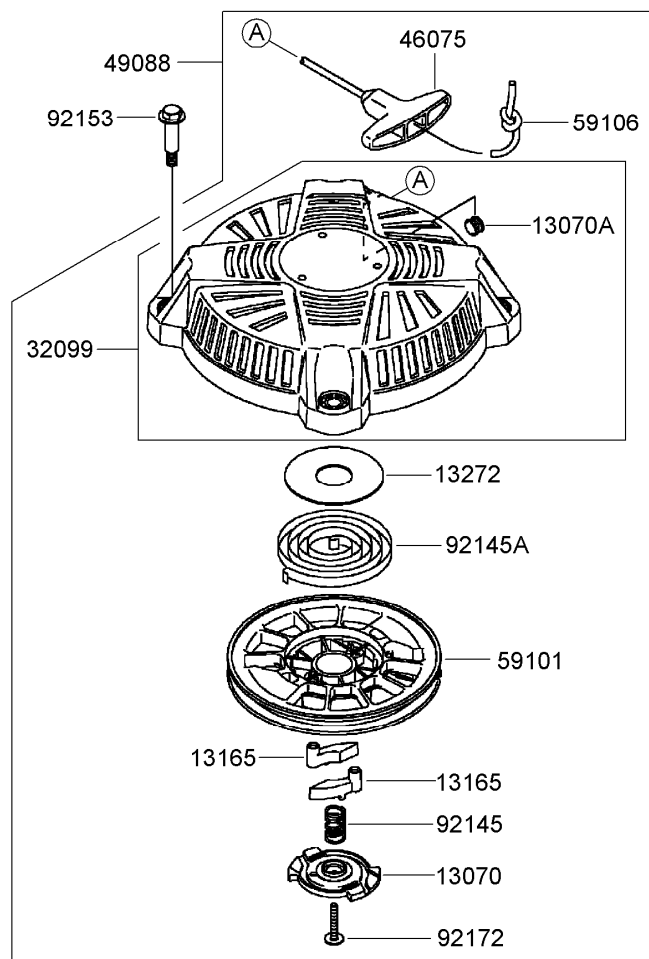 

Starter Assembly Kawasaki FJ180V-AS39

Ref.	Part Number	Qty.	Description
13070	13070-7014	1	Guide ●
13070A	13070-7015	1	Guide ●
13165	13165-7002	2	Pawl-Starter, Recoil ●
13272	13272-7001	1	Plate ●
32099	32099-7004	1	Case-Starter, Recoil ●
46075	46075-7002	1	Grip ●
49088	49088-7027	1	Starter-Recoil ●
59101	59101-7002	1	Reel-Starter, Recoil ●
59106	59106-7003	1	Rope (2200Mm) ●
92145	92145-7052	1	Spring ●
92145A	92145-7054	1	Spring ●
92153	92153-7021	4	Bolt (M6) ●
92172	92172-7030	1	Screw ●

 ● Obtain parts from www.kawpowerepc.com

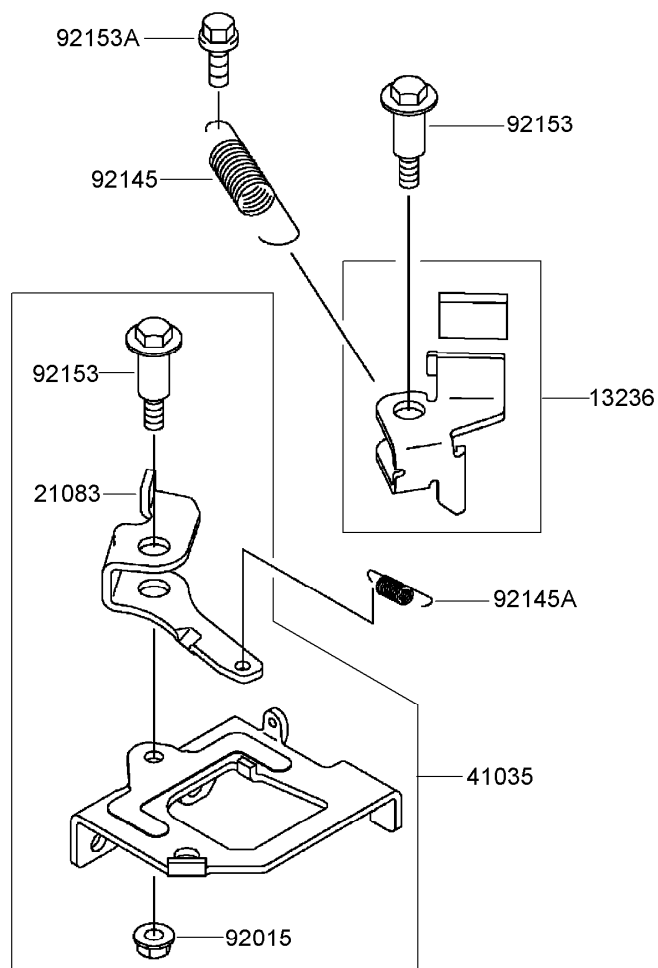

Brake and Cover Assembly Kawasaki FJ180V-AS39


Ref.	Part Number	Qty.	Description
13236	13236-7008	1	Lever ●
21083	21083-7016	1	Arm ●
41035	41035-7005	1	Brake Panel ASM ●
92015	92015-1193	1	Nut ●
92145	92145-7023	1	Spring ●
92145A	92145-7032	1	Spring ●
92153	92153-7020	2	Bolt ●
92153A	92153-7023	1	Bolt (6X10) ●

● Obtain parts from www.kawpowerepc.com

56070



 56033

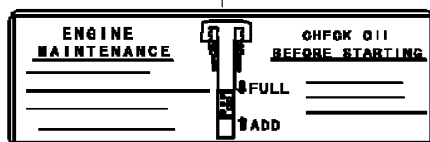

Label Assembly Kawasaki FJ180V-AS39

Ref.	Part Number	Qty.	Description
56033	56033-7003	1	Label-Manual •
56070	56070-7001	1	Label-Warning •

• Obtain parts from www.kawpowerepc.com

Notes:

Notes:



Count on it.