




NAVIGATOR®

Model No. NV740KC—Serial No. 312000000 and Up

Picture below may not reflect actual product.

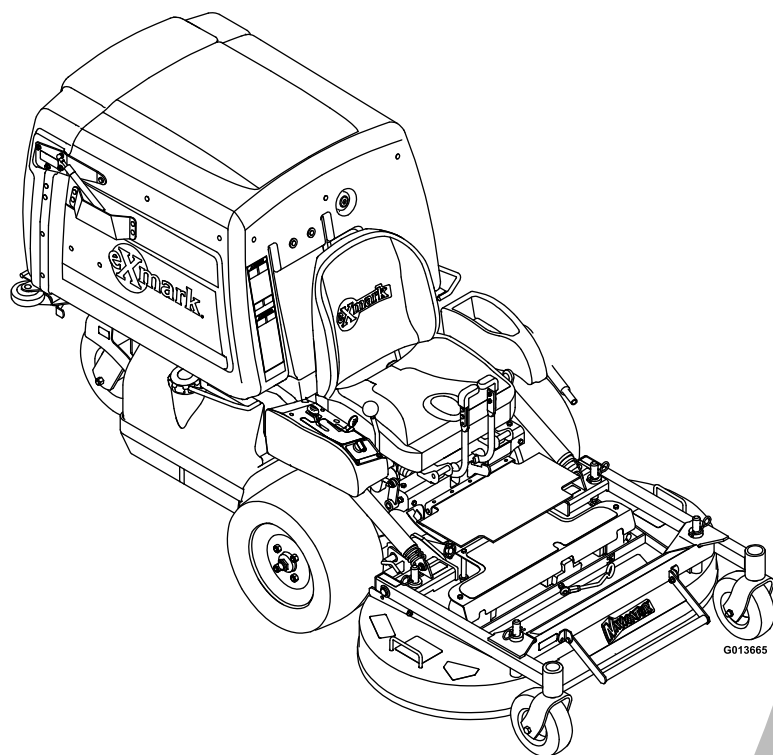

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HJ: hex jam	PTH: phillips truss head
ASM: assembly	HLH: hex lag head	PTO: power-take-off
BBC: blade brake control	HOC: height-of-cut	RH: right hand
BHTF: button head thread forming	HSBH: hex socket button head	ROPS: roll-over protection system
CARR: carriage	HSFH: hex socket flat head	RRB: rear roller brush
CCW: counter clockwise	HSH: hex socket head	SFH: slotted fillister head
CW: clockwise	HWH: hex washer head	SHH: slotted hex head
DEG: degrees	HWHTF: hex washer head thread forming	SHWH: slotted hex washer head
DPA: Dual Point Adjustment	HYD: hydraulic	SPH: slotted pan head
ECM: electronic control module	LH: left hand	SQH: square head
EXT: external	LP: Liquid Propane	SRH: slotted round head
FH: flat head	NI: nylon insert	STD: standard
GA: gauge	NPTF: national pipe thread fine	TAP: self tapping
HD: heavy-duty	PFH: phillips flat head	TTH: torx truss head
HF: hex flange	PPH: phillips pan head	
HH: hex head	PPHTF: phillips pan head thread forming	
HHF: hex head flange	PRH: phillips round head	
HHFTF: hex head flange thread forming		

Touch Up Paint

Exmark black touch up spray paint – gloss black.


Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).



If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Seat, Tires and Consoles Assembly	4
Main Frame Assembly	6
Park Brake Assembly	7
Speed Controls Assembly	8
Fuel Assembly	10
Blower Assembly	11
Jackshaft Assembly	12
Engine Assembly	14
Hydraulic Assembly	15
Hopper Assembly Pg1	17
Hopper Assembly Pg2	18
Electrical Assembly	20

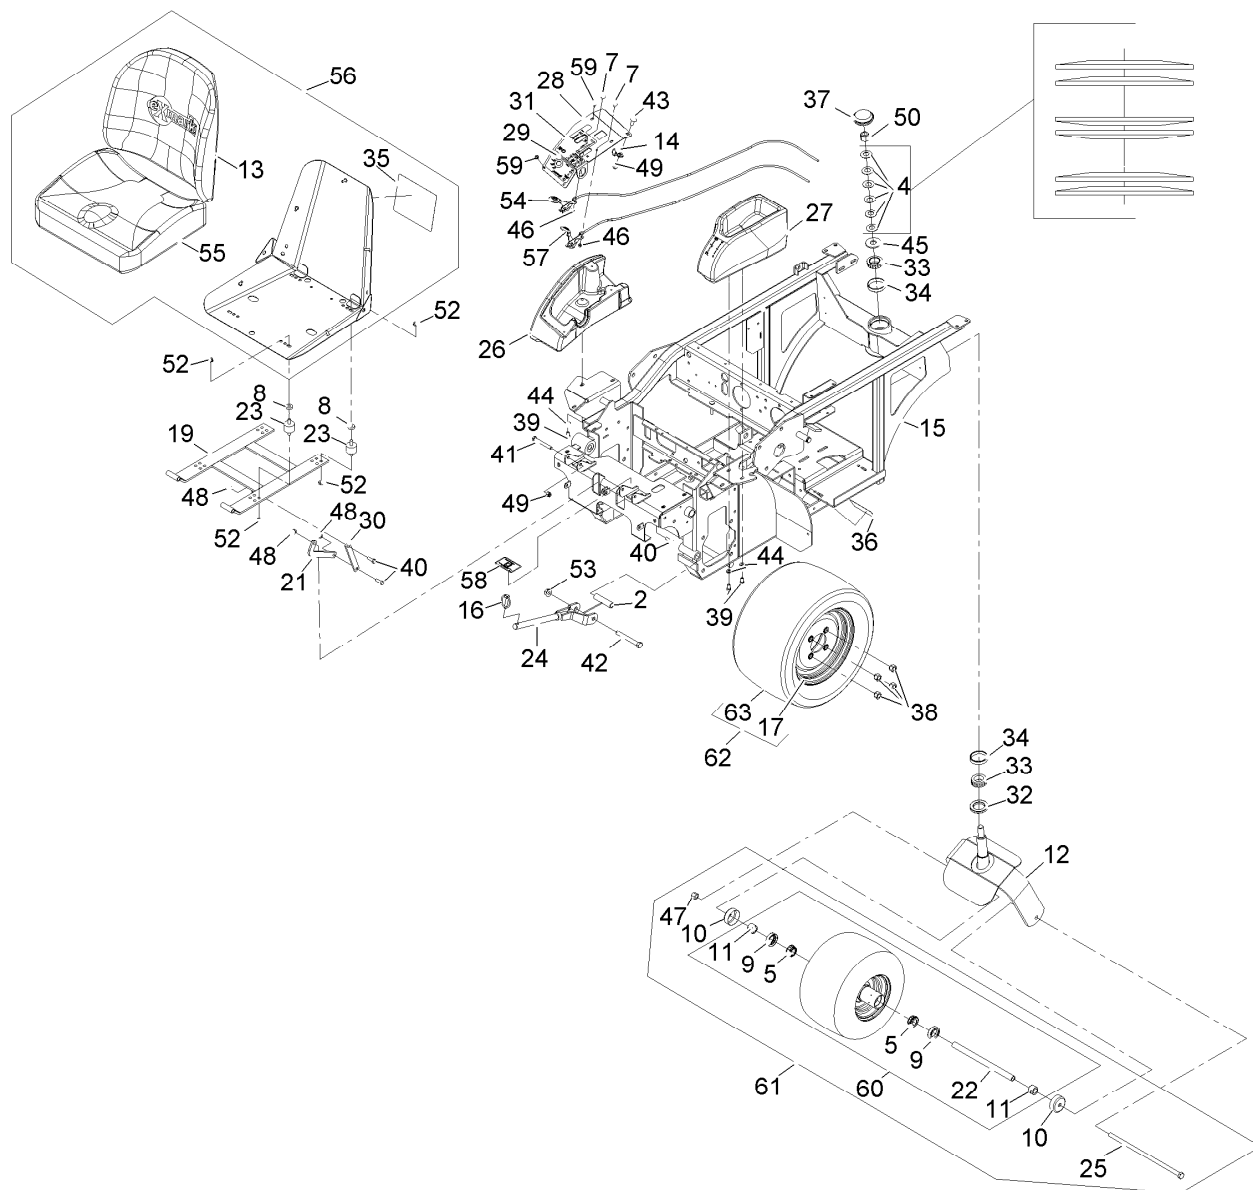


Seat, Tires and Consoles Assembly

Ref.	Part Number	Qty.	Description
2	1-633060	2	Spacer-Wheel, Short
4	1-633508	6	Washer-Spring Disc
5	1-633585	2	Bearing-Cone Tapered Roller
7	1-807513	4	Bolt-Carriage #10-24 X 1/2
8	5-0652	4	Spacer
9	103-0063	2	Seal-Double Lip
10	103-2768	2	Guard-Seal
11	103-3051	2	Spacer-Nut ■
12	103-3351-03	1	Wld, Rear Caster Fork
13	116-3738	1	Cushion, Seat Back
14	1-643312	1	Clip-Loom
15	116-4850	1	Asm, Mainframe W/Decals
16	103-4155	2	Pin-Lynch
17	103-4318	2	Asm, Wheel
19	103-4362-03	1	Wld, Seat Frame Std
21	103-5181	1	Link-Seat Stop, Lower
22	103-5302	1	Axle, Caster
23	103-5496	4	Mount-Vibration, Rubber

Ref.	Part Number	Qty.	Description
24	103-6596-03	2	Wld, Push Rod
25	103-7738	1	Screw-HH 1/2-13 X 13
26	103-8143	1	Console, RH
27	103-8146	1	Console, LH
28	116-4859	1	Panel, Control Console
29	103-8451	1	Decal, Ignition/Speed Control
30	103-8563	1	Link, Seat
31	109-4638	1	Decal, Console
32	103-9027	1	Grease Seal
33	103-9028	2	Cone-Bearing Taper Roller
34	103-9029	2	Cup-Bearing Tapered Roller
35	116-1175	1	Decal, Service Aid
36	103-9034	1	Decal, Clutch Adjustment
37	103-9057	1	Cap, Grease
38	242-50	8	Nut-Lug 1/2-20
39	322-2	6	Screw-HH 5/16-18 X 5/8
40	322-5	3	Screw-HH 5/16-18 X 1
41	323-14	2	Screw-HH 3/8-16 X 3

● Optional Equipment

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

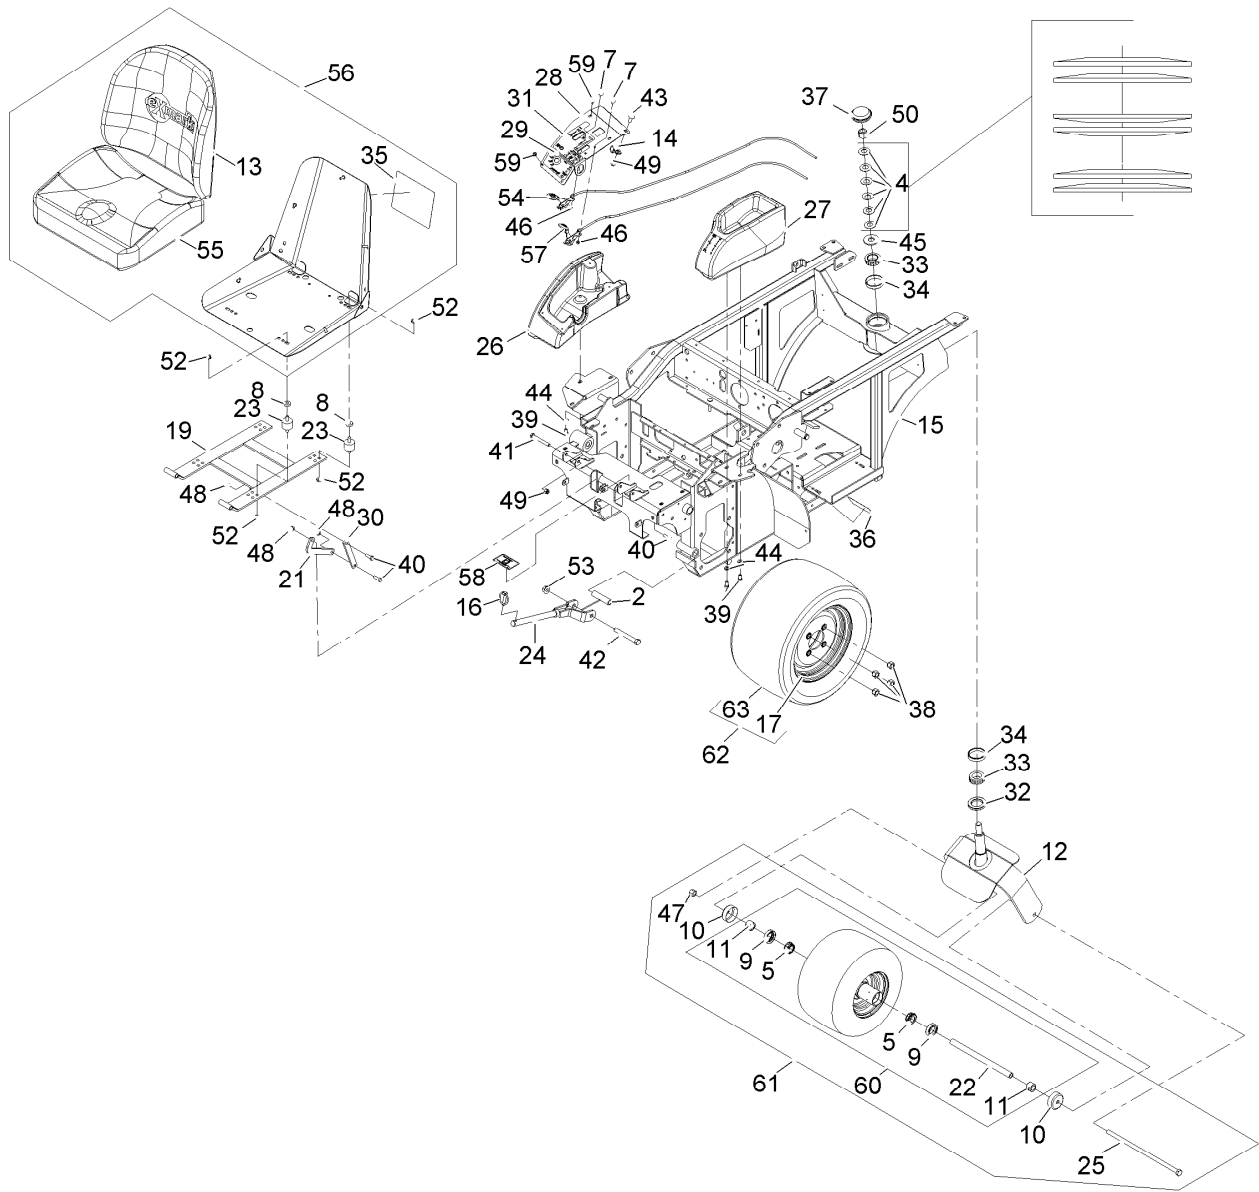


Seat, Tires and Consoles Assembly (continued)

Ref.	Part Number	Qty.	Description
42	325-17	2	Screw-HH 1/2-13 X 4
43	3231-27	1	Bolt-Carriage 3/8-16 X 7/8
44	3256-23	6	Washer-5/16 Sae
45	3256-8	1	Washer
46	3296-2	4	Nut-Nyloc #10-24
47	3296-23	1	Nut-Nyloc 1/2-13
48	3296-29	3	Nut-Nyloc 5/16-18
49	3296-39	3	Nut-Nyloc 3/8-16
50	3296-51	1	Nut-Nyloc 3/4-10
52	32128-20	8	Nut-Whizlock 5/16-18
53	32128-49	2	Nut-Whizlock 1/2-13
54	109-4640	1	Cable, Choke
55	116-4848	1	Cushion, Seat Bottom/W Switch

Ref.	Part Number	Qty.	Description
56	116-4849	1	Asm, Seat
57	109-4641	1	Cable, Throttle
58	109-4273	1	Decal, Wheel Motor
59	109-2661	4	Screw-PPH #10-24 X 1/2
60	103-5305	1	Asm, Wheel, Tire & Brg 13X8.00-6 Sp
61	103-9494	1	Asm, Rear Caster Wheel W/Axle
62	103-4319	2	Asm, Wheel & Tire 18X10.50-10
62	103-4321	2	Asm, Wheel & Tire 18X8.50-10 ●
63	105-1945	2	Tire
63	103-4320	2	Tire ●

● Optional Equipment


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

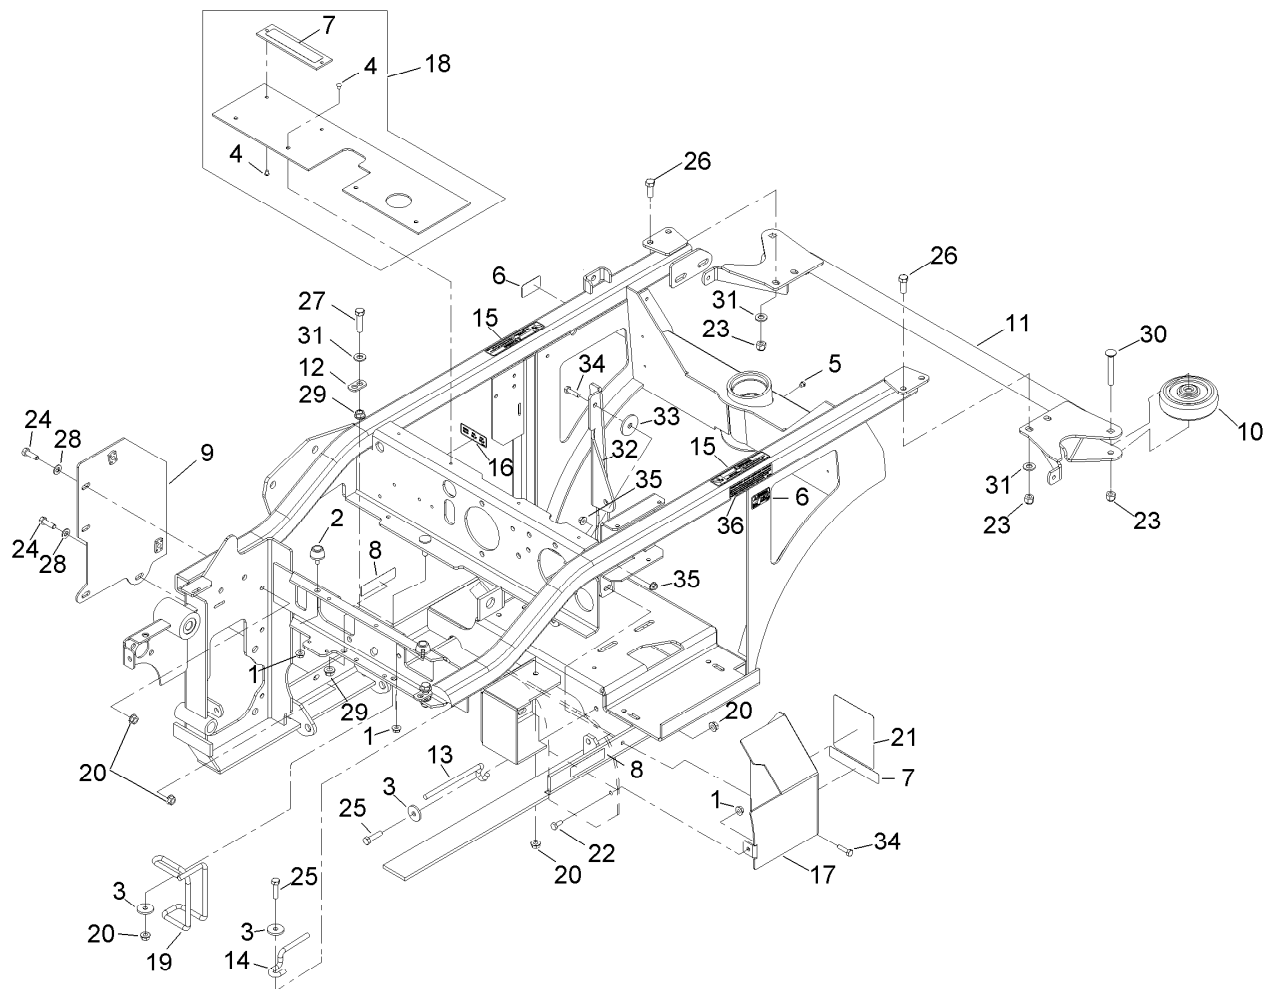

Main Frame Assembly

Ref.	Part Number	Qty.	Description
1	32128-33	5	Nut-Whizlock 1/4-20
2	109-2365	2	Rubber Bumper ASM
3	1-613235	3	Washer
4	1-803035	6	Rivet 3/16 X 1/4
5	1-811010	1	Plug
6	65-2690	2	Decal-Surface, Hot
7	98-4361	2	Decal-Warning
8	98-5954	2	Decal-Cover, Missing
9	109-2487-03	1	Wld, Fender
10	103-5408	2	Wheel
11	109-0925-03	1	Wld, Bumper Rear
12	103-6537	2	Tab, Spring Anchor
13	103-8333	1	Guide, Belt
14	103-8349	1	Guide, Belt
15	103-8495	2	Decal, Pinch Point
16	103-8611	1	Decal, Relay
17	103-9475	1	Asm Drive, Shield
18	103-9476	1	Asm, Shield W/Decal


Ref.	Part Number	Qty.	Description
19	103-9022	1	Guide, Belt
20	32128-20	7	Nut-Whizlock 5/16-18
21	103-9274	1	Decal, Belt Routings
22	321-3	1	Screw-HH 1/4-20 X 5/8
23	3296-39	6	Nut-Nyloc 3/8-16
24	322-5	4	Screw-HH 5/16-18 X 1
25	322-6	2	Screw-HH 5/16-18 X 1 1/4
26	323-6	4	Screw-HH 3/8-16 X 1
27	323-8	2	Screw-HH 3/8-16 X 1 1/2
28	3256-23	4	Washer-5/16 Sae
29	3290-357	4	Nut-Whizlock 3/8-16
30	3231-31	2	Bolt-Carriage 3/8-16 X 2 1/2
31	3256-24	6	Washer-3/8 Sae
32	109-5874-03	1	Brace, PTO
33	1-213069	1	Washer
34	321-6	2	Screw-HH 1/4-20 X 1
35	32128-33	5	Nut-Whizlock 1/4-20
36	117-2718	1	Decal-Arrester, Spark

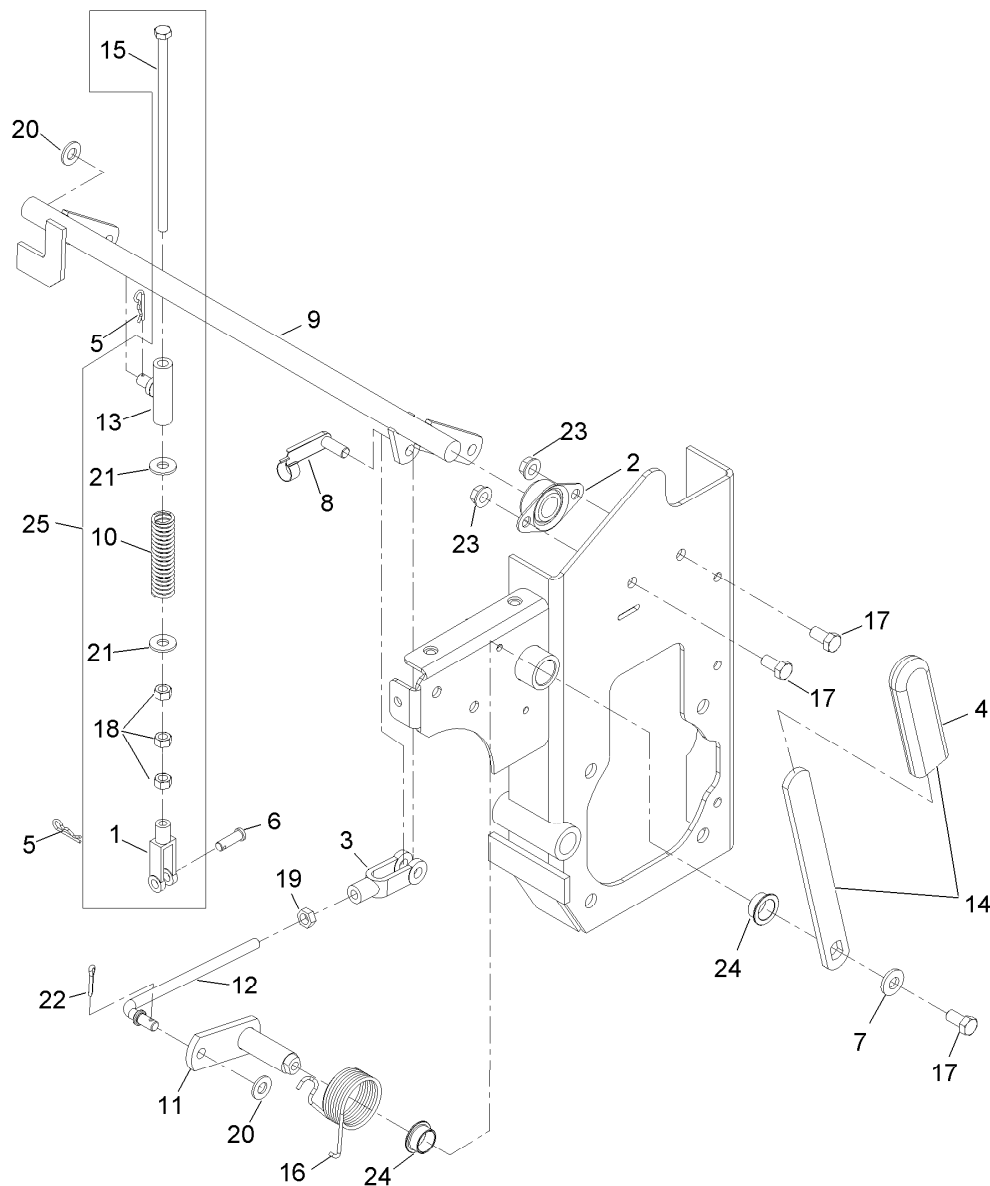

Park Brake Assembly

Ref.	Part Number	Qty.	Description
1	1-303105	2	Yoke-Adjustable
2	1-633102	2	Bearing-Flanged
3	1-633131	1	Yoke-Linkage, Brake
4	1-633268	1	Grip-Lever
5	1-806003	4	Hairpin-Cotter
6	1-808280	2	Pin-Clevis 5/16 X 1 49/64
7	98-5975	1	Washer-Spring Disc 3/8
8	103-2399	1	Pin-Clevis Spring 3/8
9	103-4383-03	1	Wld, Brakeshaft
10	103-4388	2	Spring
11	103-4390	1	Wld, Brake Pivot
12	103-4399	1	Rod, Linkage Brake
13	103-6576	2	Wld, Swivel Brake


Ref.	Part Number	Qty.	Description
14	103-9469	1	Asm, Park Brake Handle W/Grip
15	103-7377	2	Screw-HH 5/16-24 X 7 3/4
16	103-9915	1	Spring, Torsion RH
17	323-4	5	Screw-HH 3/8-16 X 3/4
18	3219-2	6	Nut-Hex 5/16-24
19	3219-3	1	Nut-Hex 3/8-24
20	3256-24	3	Washer-3/8 Sae
21	3256-3	4	Washer-5/16 Std
22	3272-10	1	Pin-Cotter 1/8 X 3/4
23	3290-357	4	Nut-Whizlock 3/8-16
24	108519	2	Bushing-Bronze
25	109-0714	2	Asm, Brake Linkage

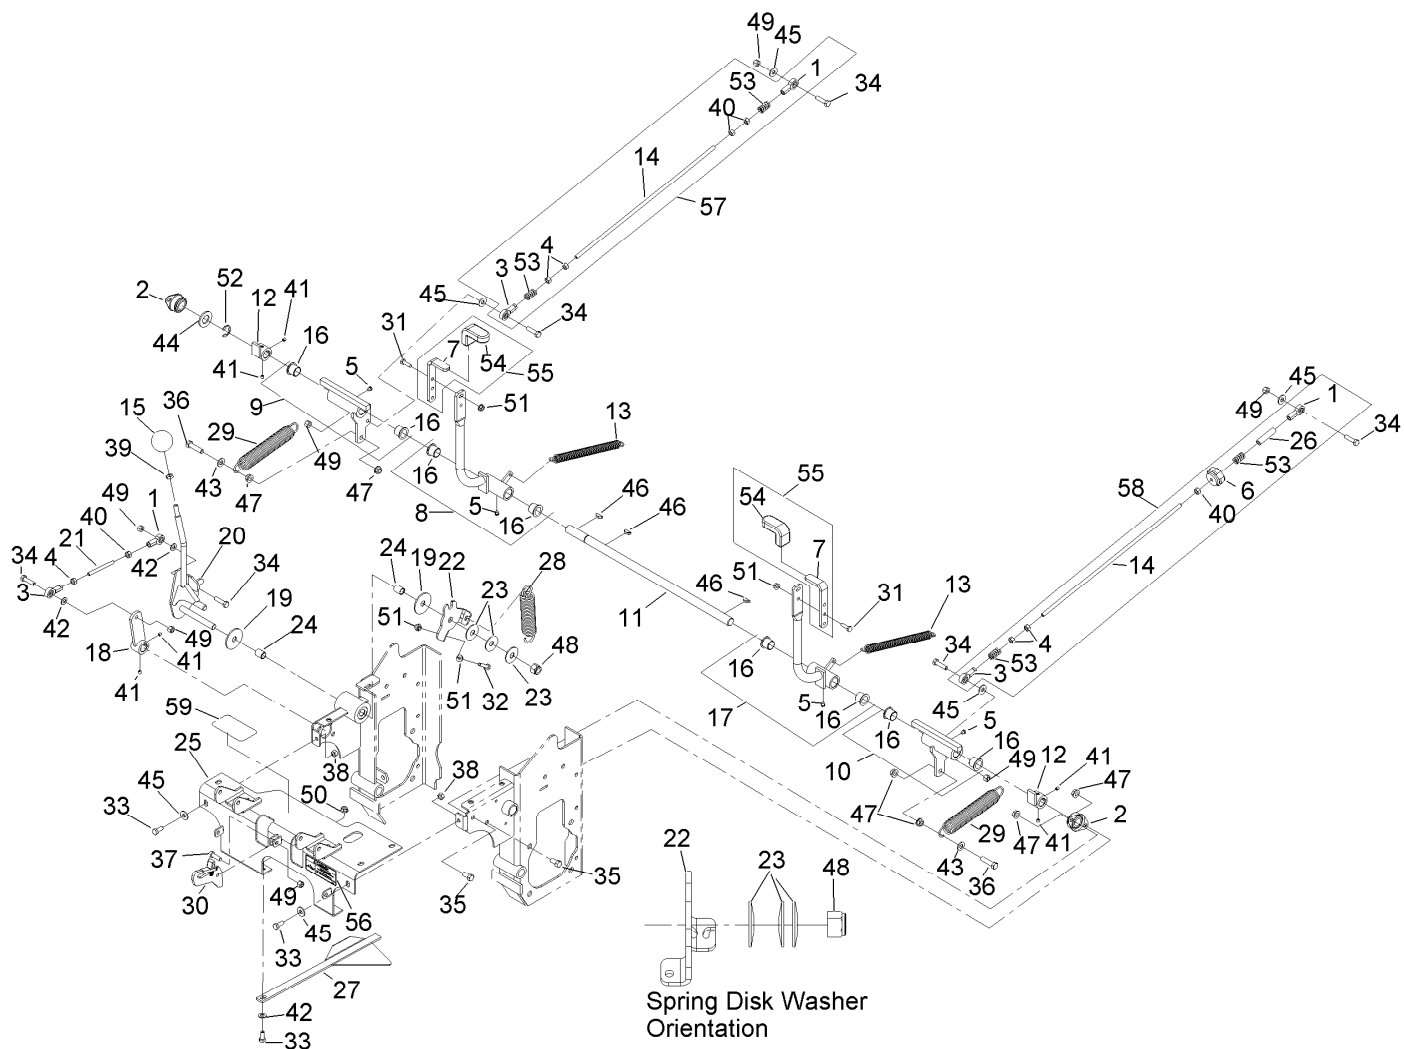

Speed Controls Assembly

Ref.	Part Number	Qty.	Description
1	1-543017	3	Balljoint
2	1-633102	2	Bearing-Flanged
3	1-633152	3	Balljoint
4	1-804524	5	Nut-Hex 5/16-24 (LH)
5	1-811010	4	Plug
6	103-3060	1	Knob-Tracking
7	103-9468	2	Asm, Handle W/Grip
8	103-9730	1	Asm, Steering Lever W/Bearings (RH)
9	103-9731	1	Asm, Actuator W/Bearings (RH)
10	103-9732	1	Asm, Actuator W/Bearings (LH)
11	103-4278	1	Shaft, Speed Control
12	103-4342-03	2	Wld, Hub Speed Control
13	103-4373	2	Spring, Extension
14	103-4377	2	Linkage, Rod Steering (LH)
15	103-4397	1	Knob, Speed Control
16	103-4398	8	Bearing, Flange Iglide
17	103-9733	1	Asm, Steering Lever W/Bearings (LH)


Ref.	Part Number	Qty.	Description
18	103-5008	1	Wld, Control Arm
19	103-5009	2	Disc, Friction
20	103-5013	1	Wld, Speed Control Lever
21	103-5016	1	Rod, Threaded Control Link
22	103-5017	1	Plate, Speed Control Friction
23	103-5018	3	Washer-Spring Disc
24	103-5064	2	Bearing-Plastic 1/2
25	109-5927	1	Asm, Console W/Decals
26	103-5945	1	Spacer
27	103-5993-03	1	Guide, Plenum
28	103-6078	1	Spring, Extension
29	103-6532	2	Spring, Extension
30	103-8494	1	Hook
31	321-5	4	Screw-HH 1/4-20 X 7/8
32	321-8	1	Screw-HH 1/4-20 X 1 1/4
33	322-3	6	Screw-HH 5/16-18 X 3/4
34	322-6	6	Screw-HH 5/16-18 X 1 1/4
35	323-4	4	Screw-HH 3/8-16 X 3/4
36	323-8	2	Screw-HH 3/8-16 X 1 1/2
37	322-5	1	Screw-HH 5/16-18 X 1

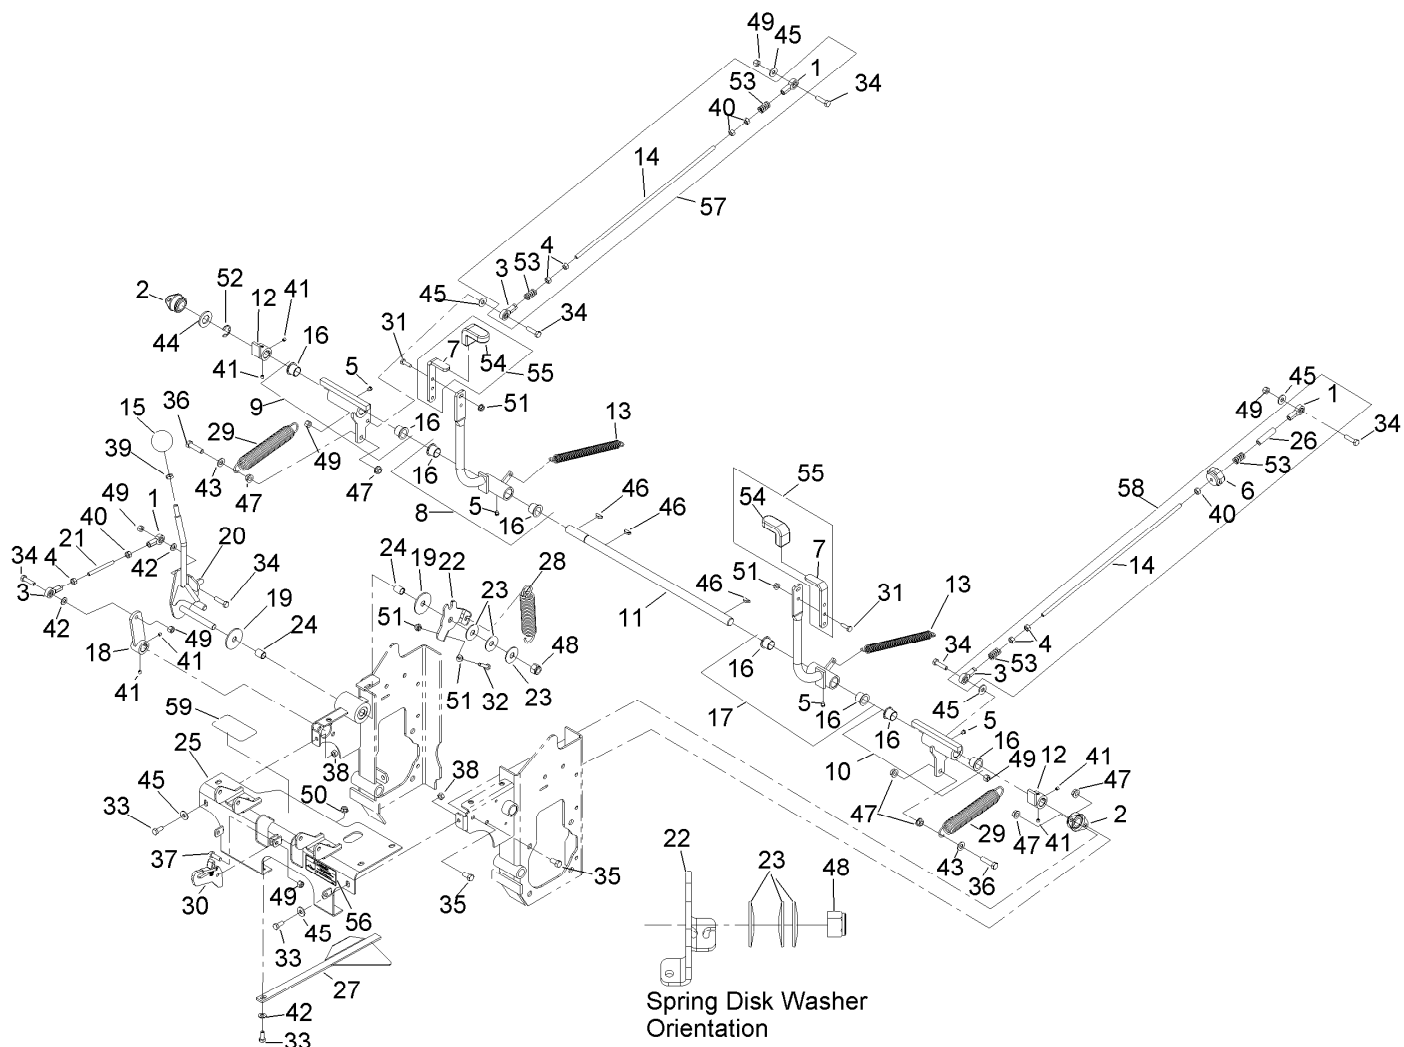

Speed Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
38	3217-6	2	Nut-Hex 5/16-18
39	3218-3	1	Nut-Jam 3/8-16
40	3219-2	4	Nut-Hex 5/16-24
41	3245-1	6	Screw-Set, HSH
42	3256-23	3	Washer-5/16 Sae
43	3256-24	2	Washer-3/8 Sae
44	3256-28	1	Washer-3/4 Sae
45	3256-3	9	Washer-5/16 Std
46	3257-5	3	Key-Woodruff #9 3/4 X 3/16
47	3290-357	8	Nut-Whizlock 3/8-16
48	3296-19	1	Nut-Nyloc 1/2-20

Ref.	Part Number	Qty.	Description
49	3296-29	7	Nut-Nyloc 5/16-18
50	32128-20	1	Nut-Whizlock 5/16-18
51	32128-33	6	Nut-Whizlock 1/4-20
52	32151-48	1	E-Ring
53	1-323245	4	Spring-Compression
54	103-5994	2	Grip, Steering Handle
55	103-9468	2	Asm, Handle W/Grip
56	103-8425	1	Decal-Driveline
57	103-9493	1	Asm, Pump Linkage (RH)
58	103-9492	1	Asm, Pump Linkage (LH)
59	109-4273	1	Decal, Wheel Motor

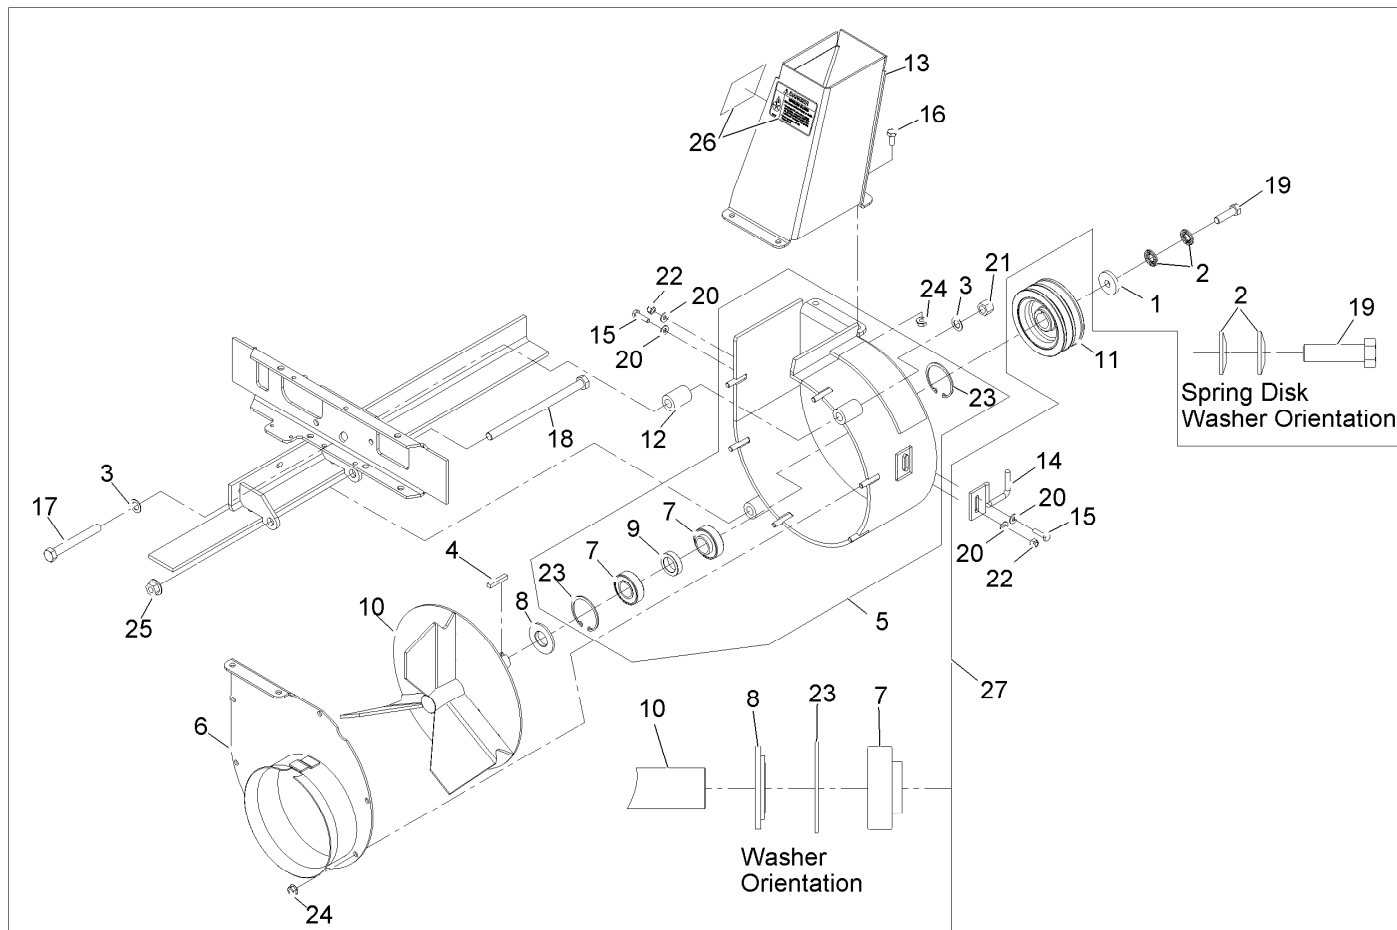


Blower Assembly

Ref.	Part Number	Qty.	Description
1	1-543610	1	Washer
2	1-603610	2	Washer-Spring Disc 7/16
3	18-9810	2	Washer-Thrust
4	67-7490	1	Key-Machine 1/4 X 1/4 X 1 1/2
5	109-0183	1	Asm, Blower Housing W/Brgs
6	103-3370-03	1	Wld, Blower Cover Assembly
7	103-3540	2	Bearing-Ball
8	103-3894	1	Spacer, Blower
9	103-4921	1	Spacer, Bearing
10	103-5194	1	Wld, Impeller
11	103-6733	1	Sheave, Blower
12	103-6999	1	Spacer, Mount
13	103-9474	1	Asm, Discharge Chute W/Decal

Ref.	Part Number	Qty.	Description
14	103-9167-03	1	Wld, Guide
15	321-6	2	Screw-HH 1/4-20 X 1
16	322-3	4	Screw-HH 5/16-18 X 3/4
17	325-17	1	Screw-HH 1/2-13 X 4
18	325-42	1	Screw-HH 1/2-13 X 8
19	3212-6	1	Screw-HH 7/16-20 X 1 1/2 ●
20	3256-22	4	Washer-1/4 Sae
21	3296-23	1	Nut-Nyloc 1/2-13
22	3296-42	2	Nut-Nyloc 1/4-20
23	32120-8	2	Ring-Retaining
24	32128-20	10	Nut-Whizlock 5/16-18
25	32128-49	1	Nut-Whizlock 1/2-13
26	109-7318	2	Decal, Danger
27	109-0184	1	Asm, Blower Complete

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

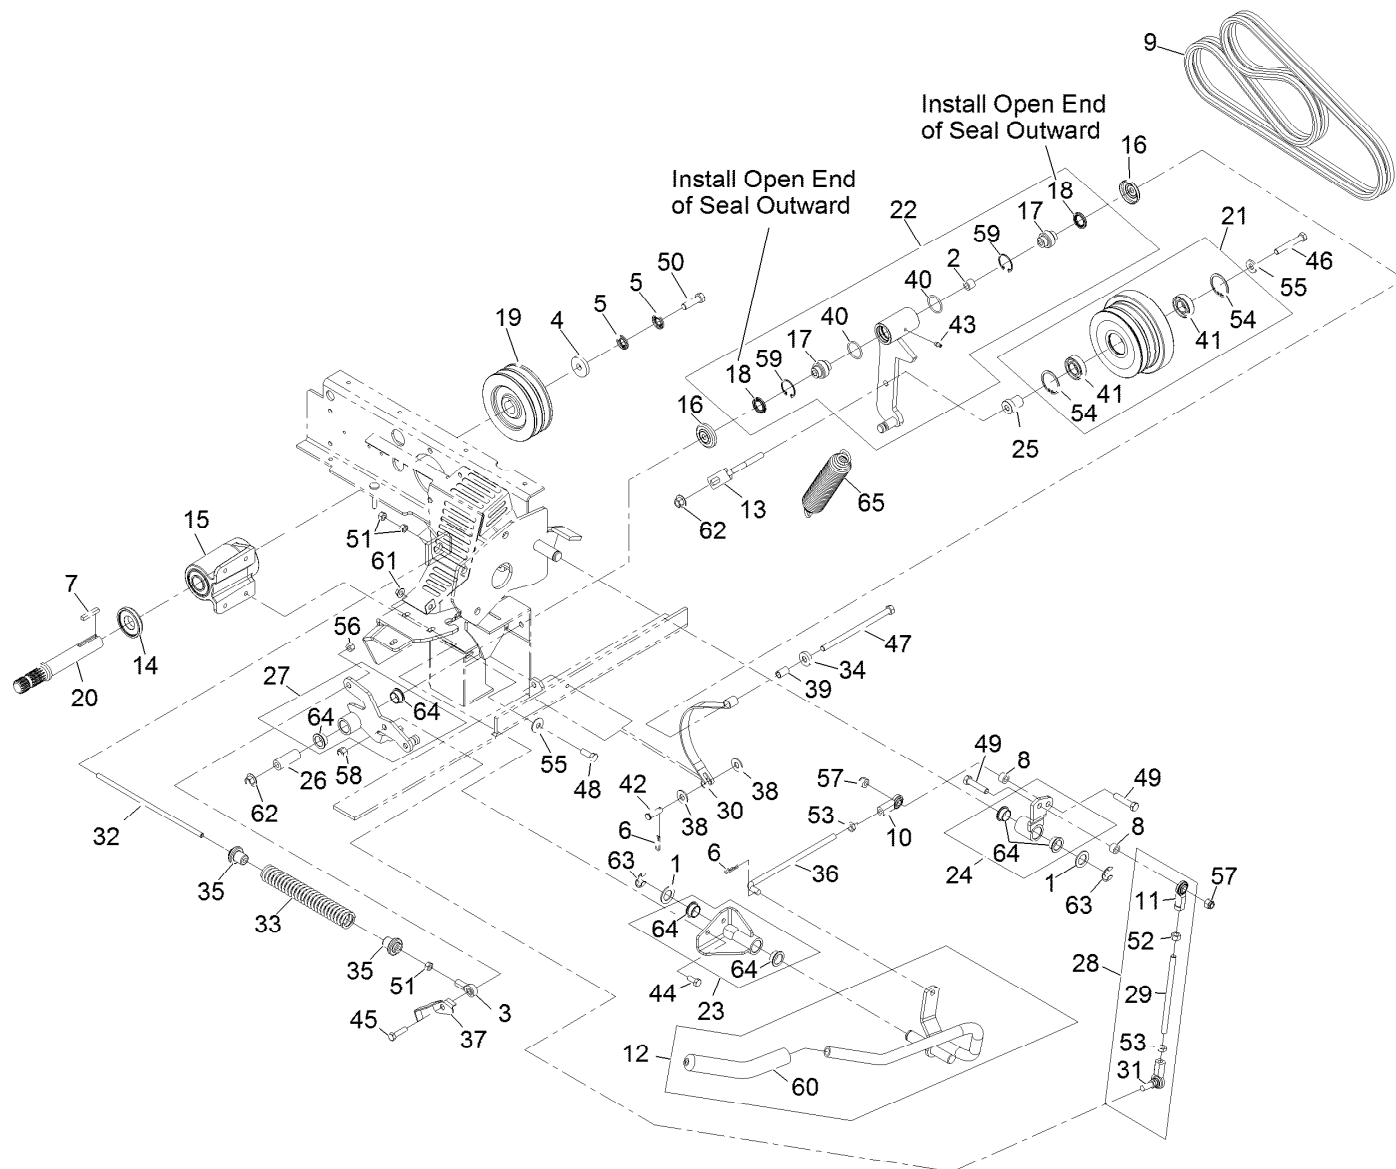


Jackshaft Assembly

Ref.	Part Number	Qty.	Description
1	1-303007	2	Washer
2	1-413088	1	Spacer
3	1-543017	1	Balljoint
4	1-543610	1	Washer
5	1-603610	2	Washer-Spring Disc 7/16
6	1-806003	2	Hairpin-Cotter
7	67-7490	1	Key-Machine 1/4 X 1/4 X 1 1/2
8	92-9025	2	Spacer
9	103-6737	1	Belt, Matched Pair
10	103-0608	1	Balljoint
11	103-1167	1	Joint-Ball End, .38X.38Fe LH
12	103-9486	1	Asm, PTO Handle W/Grip
13	109-5491	1	Belt, Guide
14	103-2535	1	Spacer-Guard Bottom
15	103-2544	1	Jackshaft ASM
16	103-2916	2	Guard-Top
17	103-3504	2	Bearing-Spherical

Ref.	Part Number	Qty.	Description
18	103-3506	2	Seal-Single Lip
19	103-6732	1	Sheave
20	103-6735	1	Jackshaft
21	103-9439	1	Asm, Idler Sheave
22	103-8253	1	Asm, Idler Pivot
23	103-9295	1	Asm, Pivot W/Bushing
24	103-9297	1	Asm, Arm W/Bushing
25	103-7350	1	Spacer, Idler
26	103-7382	1	Bushing
27	103-9296	1	Asm, Arm W/Bushing
28	103-7392	1	Asm, Link Clutching
29	103-7393	1	Linkage, Rod
30	103-7697	1	Band, Brake
31	103-7994	1	Balljoint
32	103-7996	1	Linkage, PTO Brake Rod
33	103-7997	1	Spring, Brake
34	5-0652	1	Spacer
35	103-8254	2	Bushing, Spring
36	103-8277	1	Link, Handle


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

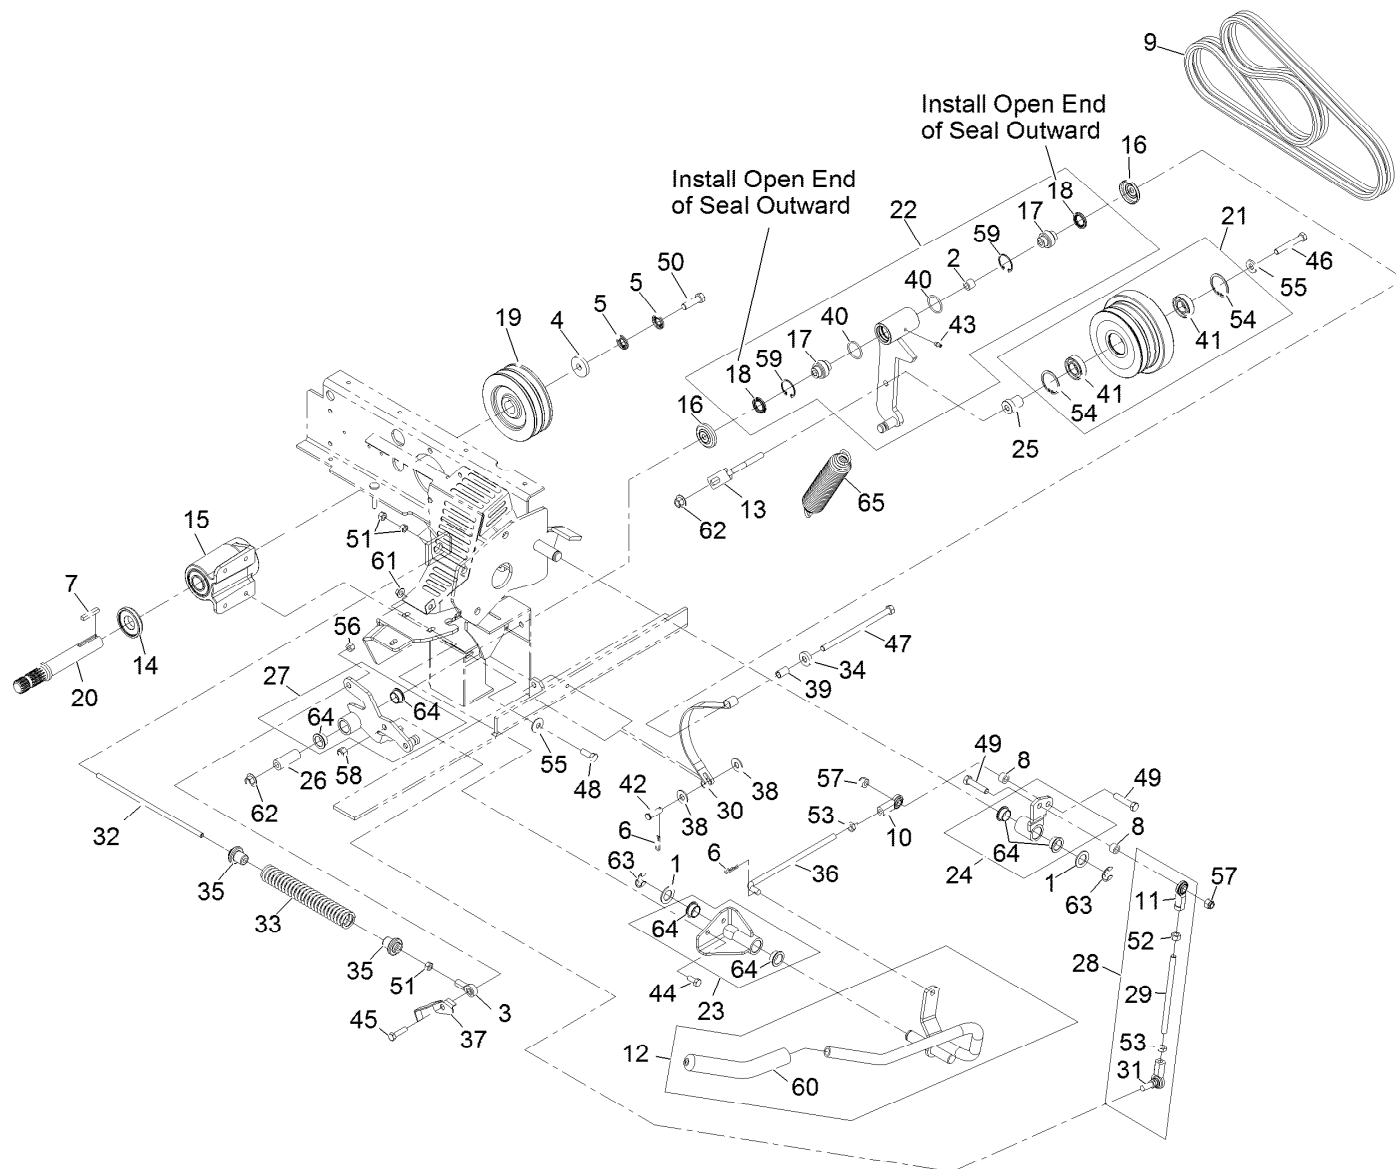

Jackshaft Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
37	103-8716-03	1	Flag, Switch	52	3219-20	1	Nut-Hex 3/8-24 LH
38	3256-4	2	Washer-3/8 Std	53	3219-3	2	Nut-Hex 3/8-24
39	103-9816	1	Spacer	54	32151-13	2	Ring-Retaining
40	106-7159	2	O-Ring	55	98-5975	5	Washer-Spring Disc 3/8
41	251-347	2	Bearing-Ball Deep Groove	56	3296-29	1	Nut-Nyloc 5/16-18
42	283-2	1	Pin-Clevis 3/8 X 1 1/6	57	3296-39	2	Nut-Nyloc 3/8-16
43	302-19	1	Zerk-1/4-28 Str	58	3296-6	1	Nut-Nyloc 3/8-24
44	322-3	2	Screw-HH 5/16-18 X 3/4	59	32120-10	2	Ring-Retaining
45	322-6	1	Screw-HH 5/16-18 X 1 1/4	60	103-8153	1	Grip, Control Lever
46	323-12	1	Screw-HH 3/8-16 X 2 1/2	61	32128-20	2	Nut-Whizlock 5/16-18
47	323-36	1	Screw-HH 3/8-16 X 7	62	32128-19	2	Nut-Hex 3/8-16 Side Lock
48	323-6	4	Screw-HH 3/8-16 X 1	63	32151-48	2	E-Ring
49	323-9	2	Screw-HH 3/8-16 X 1 3/4	64	108519	6	Bushing-Bronze
50	3212-6	1	Screw-HH 7/16-20 X 1 1/2 ●	65	109-0148	1	Spring-Extension
51	3219-2	3	Nut-Hex 5/16-24				

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

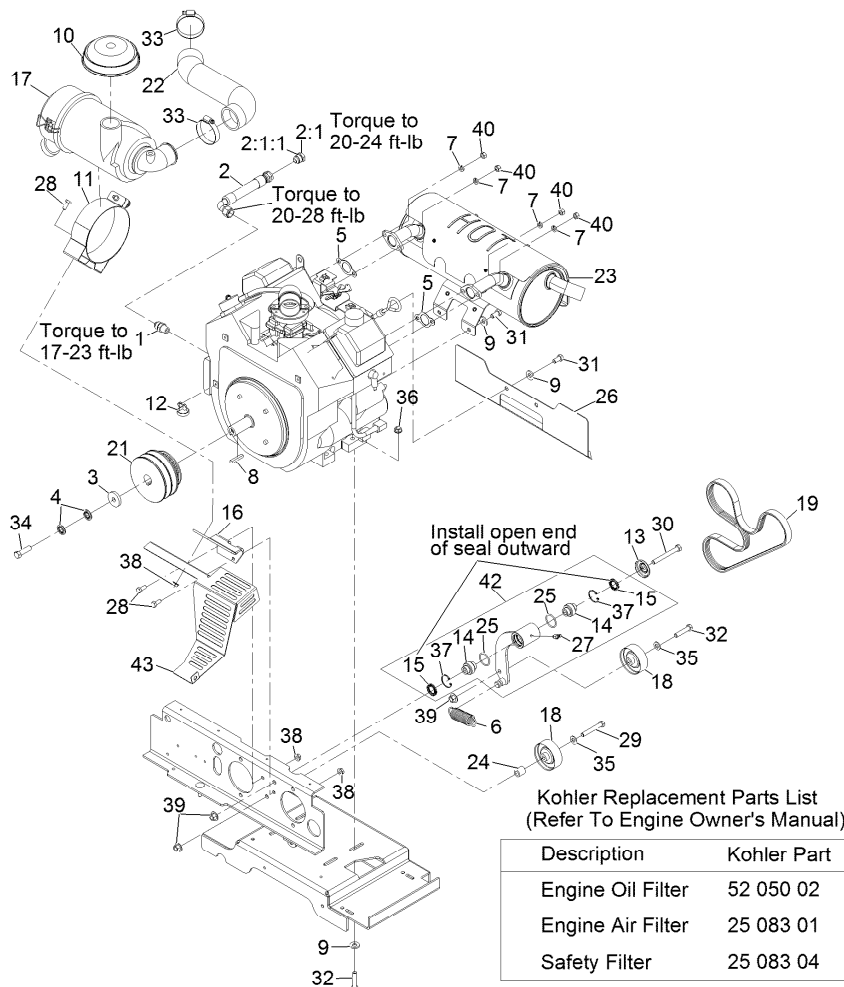


Engine Assembly

Ref.	Part Number	Qty.	Description
1	116-1455	1	Fitting-Straight ●
2	116-5338	1	Hose, Oil Drain W/Plug
2:1	353-508	1	Plug-W/O-Ring
2:1:1	237-42	1	O-Ring
3	1-543610	1	Washer
4	1-603610	2	Washer-Spring Disc 7/16
5	1-653291	2	Gasket-Exhaust
6	1-653331	1	Spring
7	1-805005	4	Washer-Lock 5/16 Heavy
8	67-7490	1	Key-Machine 1/4 X 1/4 X 1 1/2
9	98-5975	8	Washer-Spring Disc 3/8
10	100-2436	1	Asm-Hood Air Intake W/Clamp
11	103-1058	1	Bracket-Filter, Air
12	109-7896	1	Tie-Cable
13	103-2916	1	Guard-Top
14	103-3504	2	Bearing-Spherical
15	103-3506	2	Seal-Single Lip
16	103-3695-03	1	Bracket, Air Filter
17	103-8569	1	Air Cleaner, Canister
18	116-6361	2	Pulley, Idler Flat
19	103-4244	1	Belt, Poly-V K

Ref.	Part Number	Qty.	Description
21	103-6731	1	Sheave, Engine
22	103-6961	1	Hose, Air Intake
23	103-7444	1	Muffler
24	106-5574	1	Spacer-Mounting, Steering
25	106-7159	2	O-Ring
26	109-0181-03	1	Shield, Exhaust
27	302-11	1	Zerk-45° 1/4-28
28	322-3	4	Screw-HH 5/16-18 X 3/4
29	323-12	1	Screw-HH 3/8-16 X 2 1/2
30	323-20	1	Screw-HH 3/8-16 X 3-1/4
31	323-4	4	Screw-HH 3/8-16 X 3/4
32	323-9	5	Screw-HH 3/8-16 X 1 3/4
33	2412-42	2	Clamp-Hose
34	3212-6	1	Screw-HH 7/16-20 X 1 1/2 ■
35	3256-24	2	Washer-3/8 Sae
36	3290-357	4	Nut-Whizlock 3/8-16
37	32120-10	2	Ring-Retaining
38	32128-20	4	Nut-Whizlock 5/16-18
39	32128-43	3	Nut-Whizlock 3/8-16
40	33014-00	4	Nut-Hex M8-1.25
42	103-7349	1	Asm, Short Idler
43	116-7272-03	1	Shield-Heat

● Use a Teflon Pipe Sealant or equivalent on threads.

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

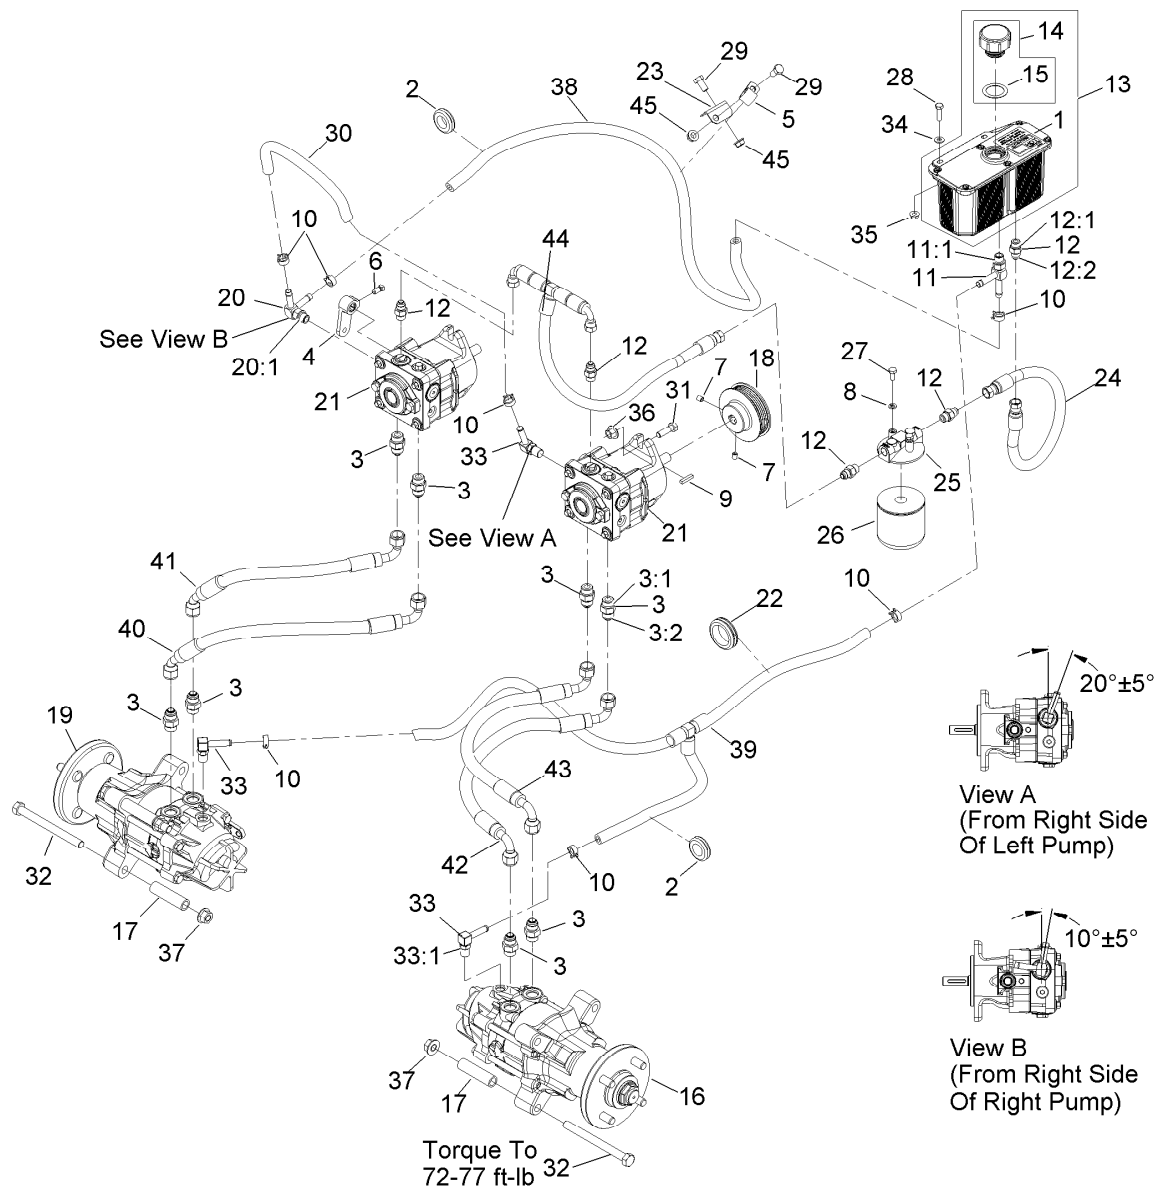

Hydraulic Assembly


Ref.	Part Number	Qty.	Description
1	116-0404	1	Decal-Hydraulic Tank
2	1-543286	2	Grommet
3	1-603990	8	Adapter-Straight
3:1	1-603920	1	O-Ring-Sae #8
3:2	1-603992	1	O-Ring-37 Flare #8
4	1-632208	2	Arm-Control, Pump
5	1-633396	1	Clip-Loom 5/8
6	1-803022	2	Setscrew-5/16-18 X 5/8 ▲
7	1-803310	4	Setscrew-5/16-18 X 3/8 ▲
8	1-805004	2	Washer-Lock 1/4 Heavy
9	1-807272	2	Key-5Mm X 5Mm X 25Mm
10	103-1988	7	Clamp-Hose 11/16
11	103-1828	1	Adapter-Running Tee
11:1	237-42	1	O-Ring
12	103-2156	5	Adapter-Straight
12:1	237-42	1	O-Ring
12:2	103-1020	1	O-Ring-37 Flare #6
13	103-1947	1	HYD Reservoir ASM
14	103-7615	1	Asm, Cap W/Gasket

Ref.	Part Number	Qty.	Description
15	103-1949	1	Gasket-Cap
16	103-3406	1	Motor, Wheel (LH)
16:1	103-9762	1	Kit, Seal ●
16:2	103-9763	1	Handle, Actuating ●
16:3	103-9764	1	Clip-Retaining ●
16:4	103-9765	1	Nut, Hex Toplock 1-20Unef-2B ●
16:5	103-4242	1	Asm, Wheel Hub W/Studs ●
16:6	103-7447	4	Stud, Wheel 1/2-20 X 1/2 ●
17	109-7041	8	Spacer
18	103-4246	2	Sheave
19	103-4612	1	Motor, Wheel (RH)
19:1	103-9762	1	Kit, Seal ●
19:2	103-9763	1	Handle, Actuating ●
19:3	103-9764	1	Clip-Retaining ●
19:4	103-9765	1	Nut, Hex Toplock 1-20Unef-2B ●
19:5	103-4242	1	Asm, Wheel Hub W/Studs ●
19:6	103-7447	4	Stud, Wheel 1/2-20 X 1/2 ●

● Not illustrated

▲ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Use only for operation below 32°F (0°C).

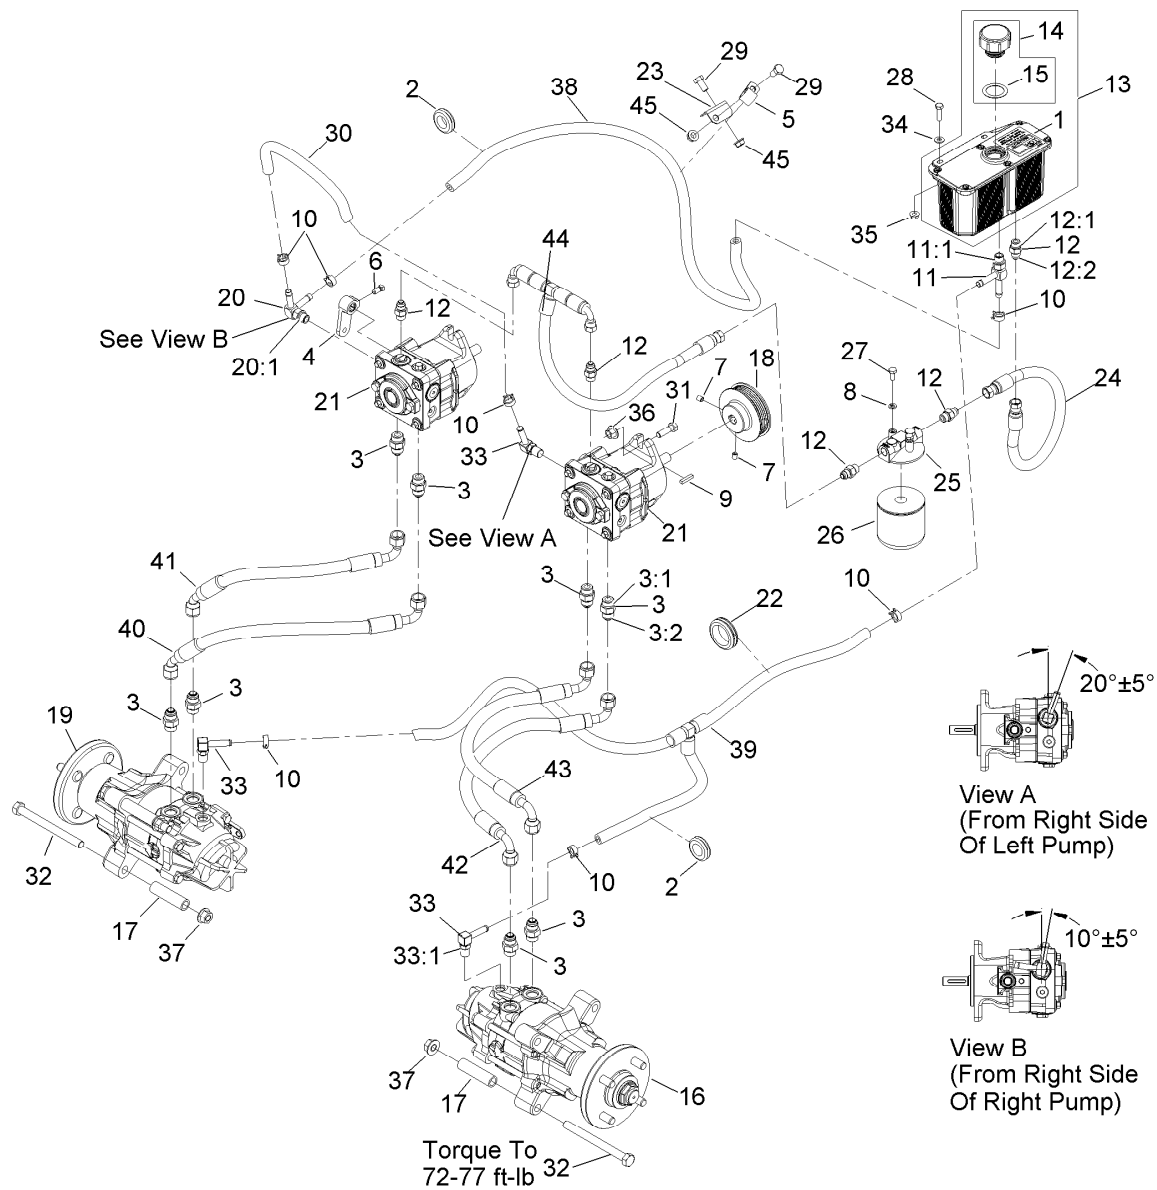


Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
20	103-5469	1	Adapter-Tee Special	30	103-5452	1	Hose, Hydraulic
20:1	237-42	1	O-Ring	31	323-7	4	Screw-HH 3/8-16 X 1 1/4
21	116-2441	2	Pump, Hydro	32	325-22	8	Screw-HH 1/2-13 X 5 1/2
21:1	103-7441	1	Bearing-Shaft, Input ●	33	100-4887	3	Fitting-Barbed, 90 DEG
21:2	103-7443	1	Cylinder Block Kit ●	33:1	1-603921	1	O-Ring-Sae #6
21:3	94-6922	1	Bearing-Thrust ●	34	3256-22	2	Washer-1/4 Sae
21:4	105-6184	1	Seal Overhaul Kit ●	35	32128-33	2	Nut-Whizlock 1/4-20
22	103-7706	1	Grommet	36	32128-43	4	Nut-Whizlock 3/8-16
23	103-8631	1	Bracket, Clamp	37	32128-49	8	Nut-Whizlock 1/2-13
24	109-1258	1	Hose, Hydraulic	38	103-5477	1	Hose, Hydraulic
25	104-7836	1	Filter-Head	39	103-8617	1	Hose, Hydraulic
26	109-4180	1	Filter, 25 Micron Bi-Directional	40	109-1260	1	Hose, Hydraulic
26	1-523541	1	Element, Oil Filter(Winter) ■	41	109-1261	1	Hose, Hydraulic
27	321-3	2	Screw-HH 1/4-20 X 5/8	42	109-1262	1	Hose, Hydraulic
28	321-6	2	Screw-HH 1/4-20 X 1	43	109-1263	1	Hose, Hydraulic
29	323-4	2	Screw-HH 3/8-16 X 3/4	44	109-1264	1	Hose, Hydraulic
				45	3290-357	2	Nut-Whizlock 3/8-16

● Not illustrated

▲ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


■ Use only for operation below 32°F (0°C).

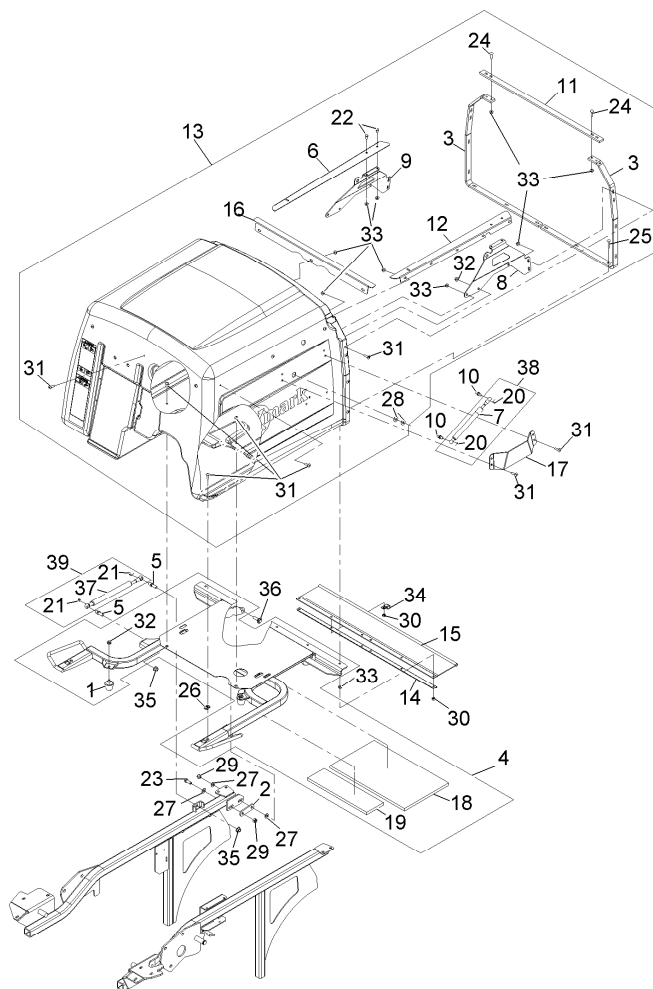

Hopper Assembly Pg1

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	1-543963	2	Bumper, Rubber	21	103-8325	2	Clip-Retainer-13Mm
2	1-633068	2	Arm-Lift, Deck	22	321-2	4	Screw-HH 1/4-20 X 1/2
3	103-5045-03	2	Brace, Side	23	323-6	2	Screw-HH 3/8-16 X 1
4	109-4086	1	Asm, Hopper Frame	24	3229-2	4	Bolt-Carriage 1/4-20 X 1
5	103-5426	2	Stud-Ball 13Mm	25	3229-4	6	Bolt-Carriage 1/4-20 X 1 1/2
6	103-5736-03	1	Channel, Screen (RH)	26	107069	4	Nut-Retainer-Panel 1/4-20
7	103-5746	2	Shock, Gas Tension	27	3256-24	6	Washer-3/8 Sae
8	103-5749-03	1	Panel, Hinge (LH)	28	3256-3	4	Washer-5/16 Std
9	103-5751-03	1	Panel, Hinge (RH)	29	3296-39	6	Nut-Nyloc 3/8-16
10	103-5752	4	Stud-Ball 10Mm	30	3296-42	29	Nut-Nyloc 1/4-20
11	103-5772-03	1	Brace, Top	31	32105-32	30	Screw-Truss HD 1/4-20 X 1
12	103-5774-03	1	Channel, Screen (LH)	32	32128-20	4	Nut-Whizlock 5/16-18
13	103-9457	1	Asm, Hopper ●	33	32128-33	39	Nut-Whizlock 1/4-20
14	103-6022-03	1	Channel, Hopper Frame	34	1-513762	1	Clip-Loom 1/2
15	103-6025	1	Shield, Trailing	35	33005-00	2	Nut-Hex M10-1.5 Flg
16	103-7035-03	1	Channel, Screen Front	36	614672	2	Screw-Shoulder 3/8-16 X 1.295
17	109-4019	2	Guard, Damper	37	103-5425	1	Shock, Gas Compression
18	103-7824	1	Insulation, Foam Pad Rear	38	109-0715	2	Kit, Damper W/Clips
19	103-7825	1	Insulation, Foam Pad Front	39	109-0716	1	Kit, Damper W/Clips
20	103-8324	4	Clip-Retainer-10Mm				


● Reference Hopper Assembly Pg 2 for remainder of items included in assembly.

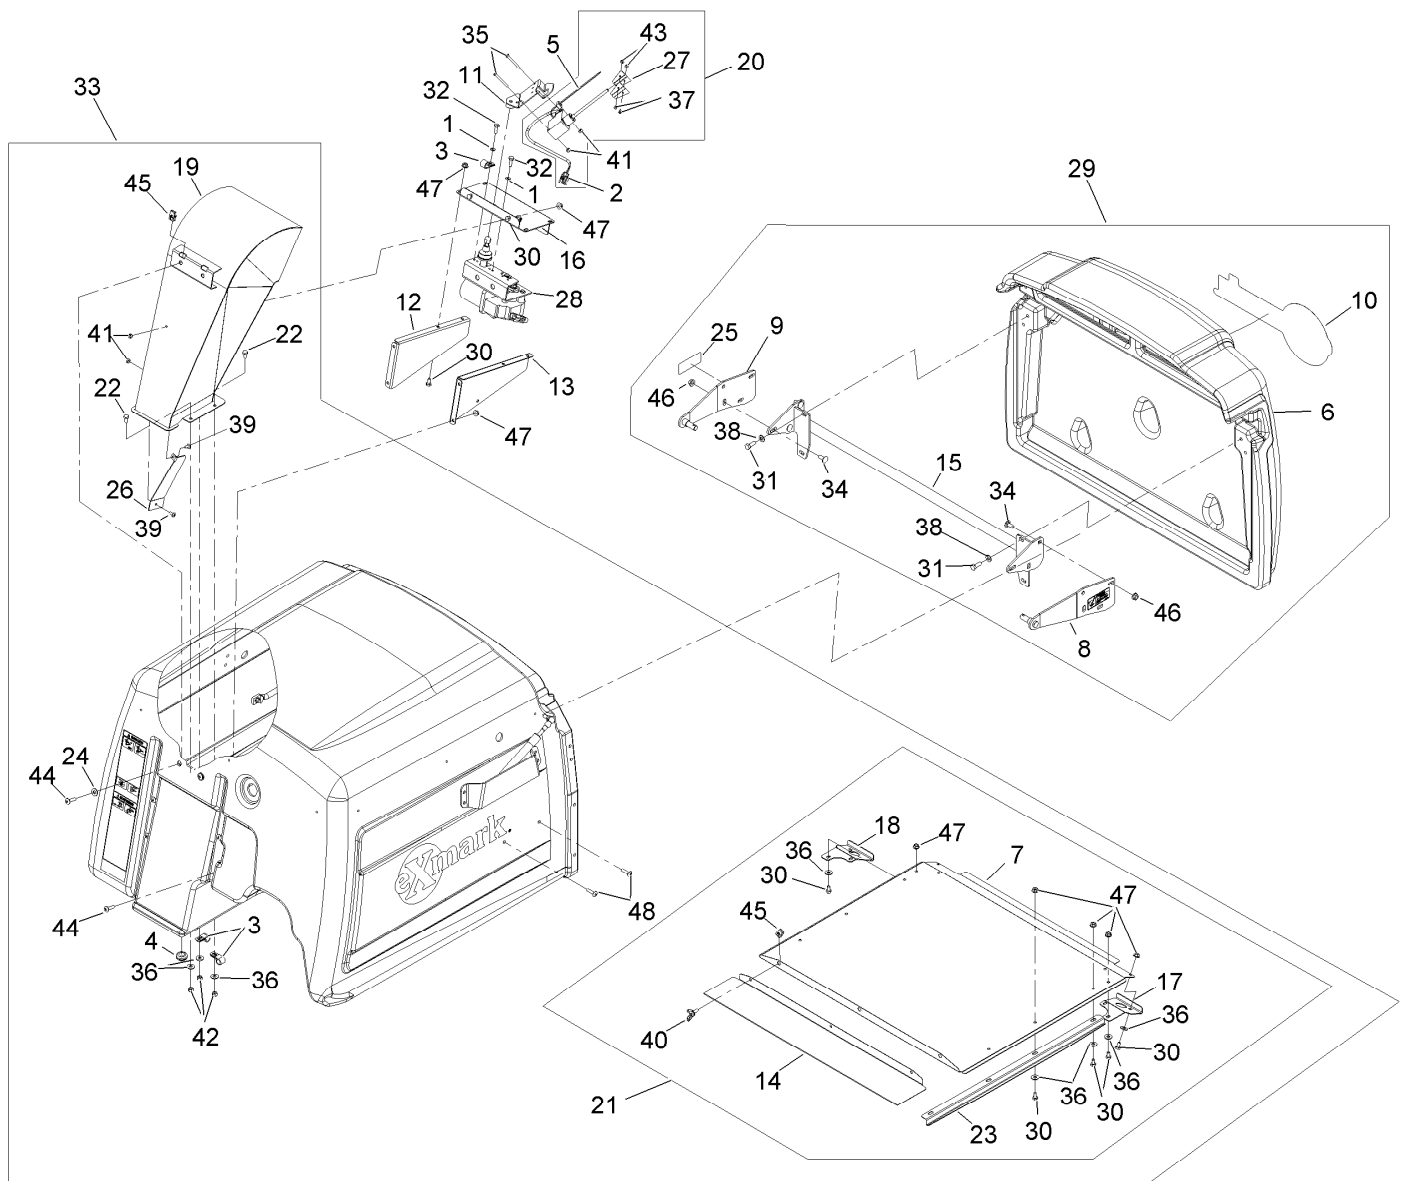

Hopper Assembly Pg2

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	1-303435	3	Washer-Spring Disc 1/4	18	103-7099-03	1	Handle, Screen (RH)
2	109-3854	1	Kit, Fill Sensor Wire	19	109-3650-03	1	Wld, Diffuser
3	1-513762	4	Clip-Loom 1/2	20	103-9466	1	Asm, Fill Sensor
4	1-543296	1	Grommet	21	109-0717	1	Asm, Hopper Screen
5	1-303335	1	Tie-Cable 7 15/16 (Large)	22	321-4	5	Screw-HH 1/4-20 X 3/4
6	109-3955	1	Door, 9.5 Bushel Hopper	23	103-8203-03	2	Guide, Screen
7	103-5745-03	1	Panel, Hopper Screen	24	1-613235	2	Washer
8	109-4253	1	Asm, Door Pivot W/Decal (LH)	25	103-8444	2	Decal, Pinch Point
9	109-4254	1	Wld, Door Pivot W/Decal (RH)	26	103-8680	1	Deflector, Discharge Chute
10	103-6024	1	Decal, Exmark Logo	27	103-8789	2	Flag, Fill Sensor
11	109-3648	1	Wld, Switch Mount	28	109-3853	1	Motor
12	103-6067-03	1	Bracket, Motor (LH)	29	103-9456	1	Asm, Door Hopper
13	103-6068-03	1	Bracket, Motor (RH)	30	321-2	19	Screw-HH 1/4-20 X 1/2
14	103-7048-03	1	Panel, Screen Extend	31	322-4	4	Screw-HH 5/16-18 X 7/8
15	109-4153-03	1	Wld, Door Support	32	329-4	3	Screw-HH 1/4-28 X 3/4
16	103-7085-03	1	Plate, Switch	33	103-9457	1	Asm, Hopper ●
17	103-7098-03	1	Handle, Screen (LH)	34	3230-23	6	Bolt-Carriage 5/16-18 X 3/4 Short Neck
				35	3250-48	2	Screw-PPH #10-24 X 1 3/4

● Reference Hopper Assembly Pg 1 for remainder of items included in assembly.

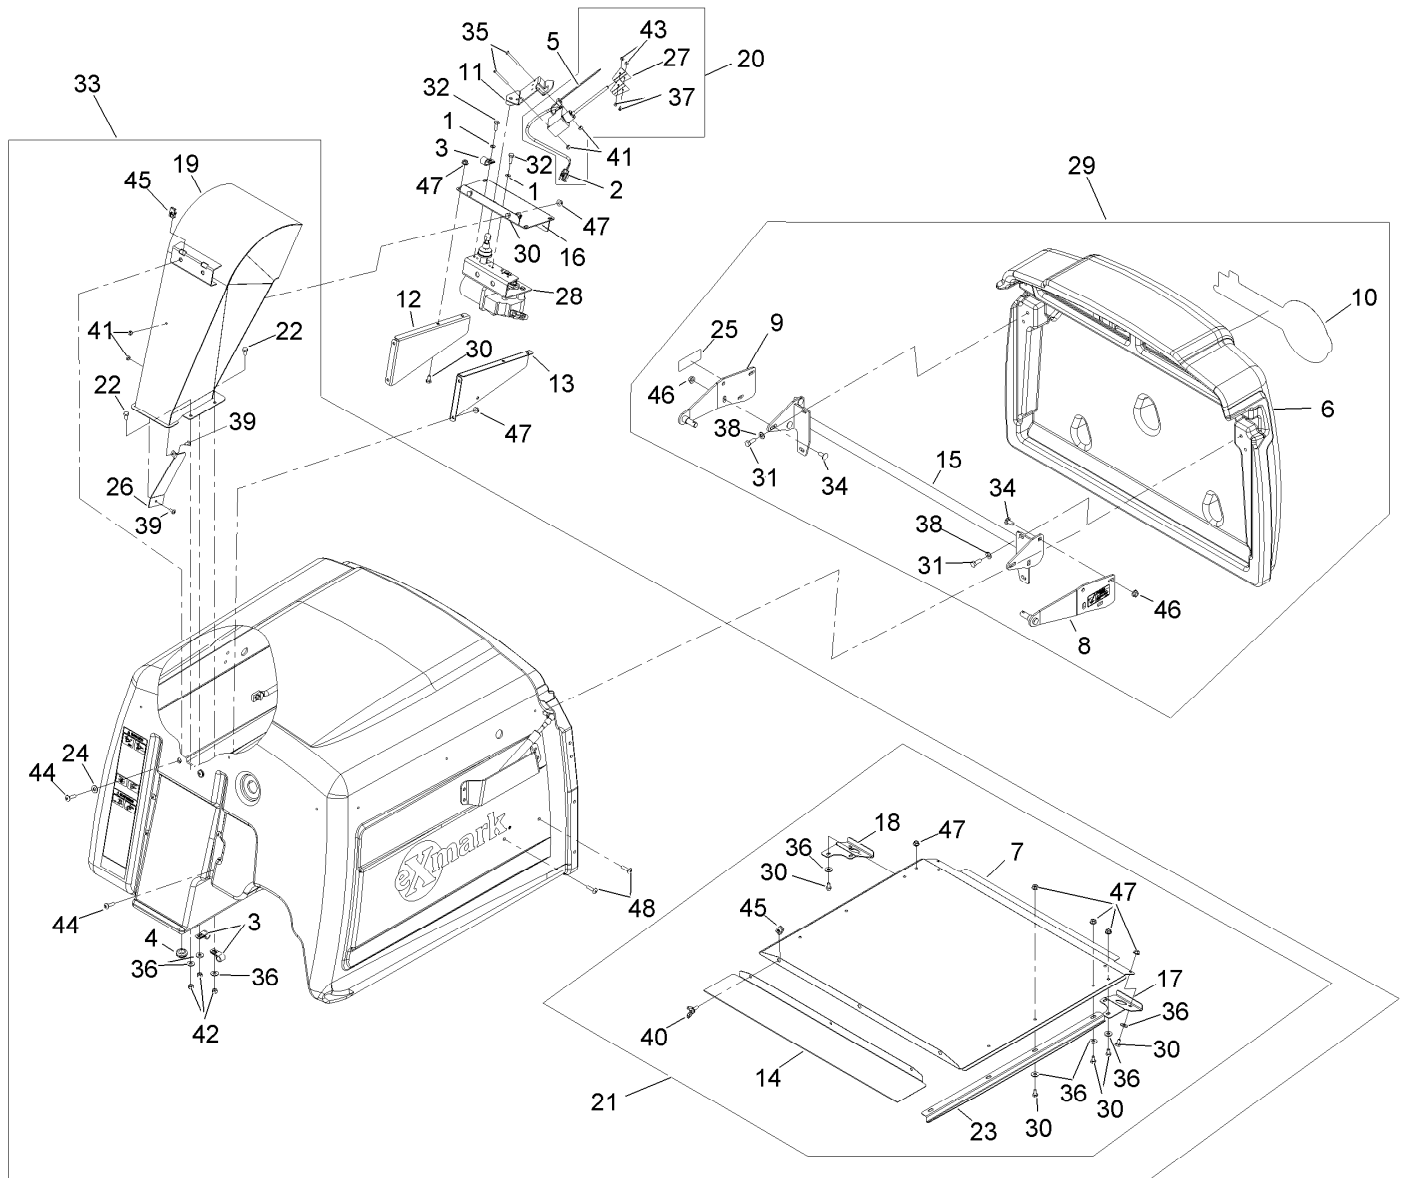


Hopper Assembly Pg2 (continued)

Ref.	Part Number	Qty.	Description
36	3256-2	17	Washer-1/4 Std
37	9107622	2	Screw-PPH #6-32 X 5/8
38	3256-23	4	Washer-5/16 Sae
39	32122-30	2	Screw-Truss HD #10-24 X 1/2
40	109-1063	3	Screw-Wing 1/4-20 X 3/4
41	3296-2	4	Nut-Nyloc #10-24
42	3296-42	5	Nut-Nyloc 1/4-20

Ref.	Part Number	Qty.	Description
43	3296-9	2	Nut-Nyloc #6-32 Thin
44	32105-32	6	Screw-Truss HD 1/4-20 X 1
45	107069	5	Nut-Retainer-Panel 1/4-20
46	32128-20	8	Nut-Whizlock 5/16-18
47	32128-33	27	Nut-Whizlock 1/4-20
48	32122-42	4	Screw-Truss HD 1/4-20 X 1/2

● Reference Hopper Assembly Pg 1 for remainder of items included in assembly.

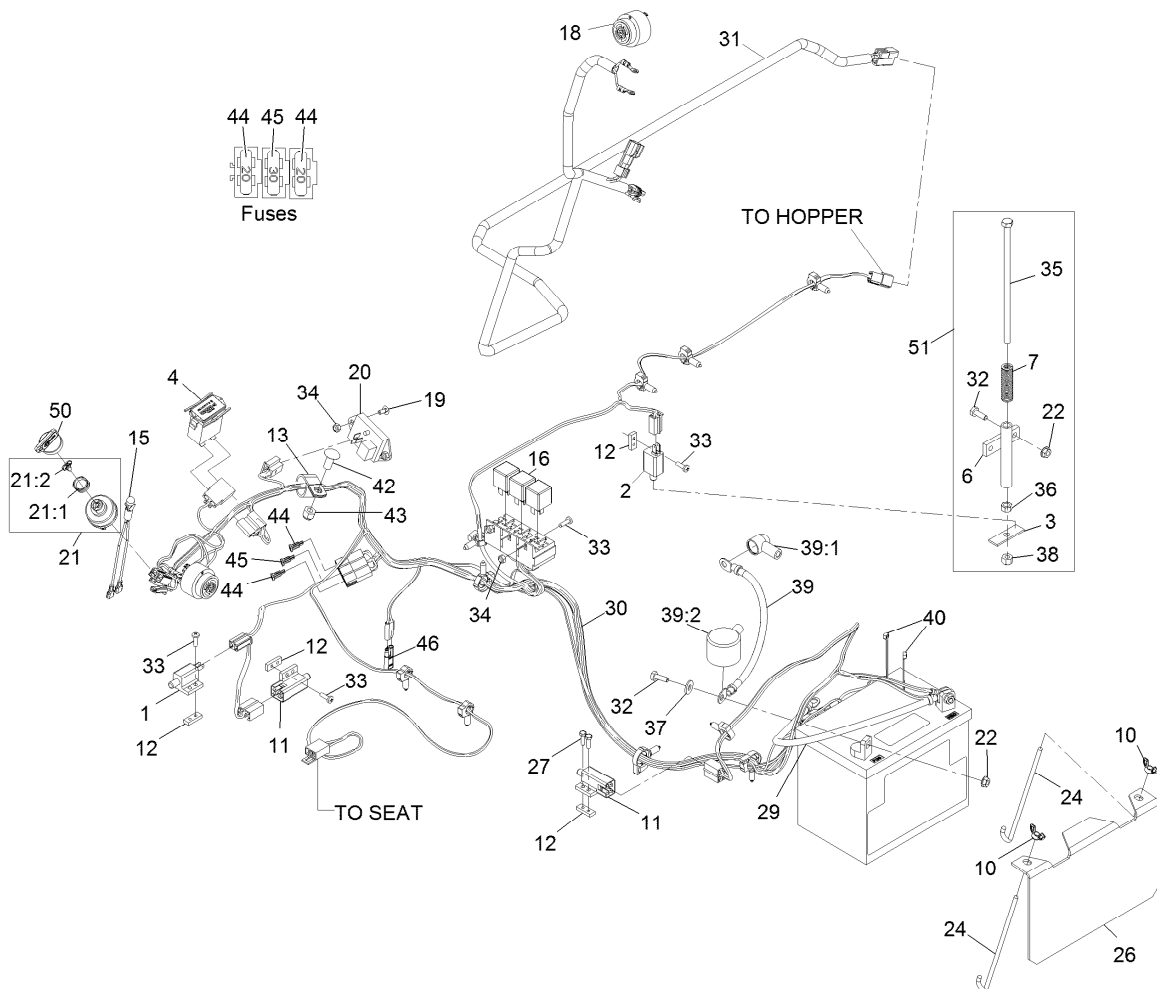

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	1-513051	1	Switch-N.O.
2	1-513152	1	Switch-N.C.
3	1-513180	1	Plate-Switch, Seat
4	1-513374	1	Meter-Engine Hours
6	1-522424-03	1	Mount-Spring, Seat
7	1-523415	1	Spring
10	1-543792	2	Wingnut-Nyloc 1/4-20
11	1-633111	2	Switch
12	1-633181	4	Plate-Tapped
13	1-643312	1	Clip-Loom
15	1-643267	1	Indicator-Red Led
16	1-643275	3	Relay-12Vdc 40 Amp
18	103-0205	2	Alarm-Dual Tone 12Vdc
19	1-807513	2	Bolt-Carriage #10-24 X 1/2
20	100-6186	1	Module-Delay, Seat
21	109-4736	1	Asm, Switch W/Nut
21:1	103-0498	1	Nut-Ignition
21:2	1-603511	1	Key-Ignition
22	32128-33	4	Nut-Whizlock 1/4-20
24	1-633651	2	Bolt-Holddown
26	103-4161-03	1	Hold Down, Battery
27	3290-134	2	Screw-HH Machine 10-24 X 5/8

Ref.	Part Number	Qty.	Description
29	103-8355	1	Cable-Ground(-)
30	116-5491	1	Harness, Wiring ●
31	103-8800	1	Harness, Hopper Wire ●
32	321-4	4	Screw-HH 1/4-20 X 3/4
33	3290-500	8	Screw-PPH #10-24 X 5/8
34	3296-2	4	Nut-Nyloc #10-24
35	322-50	1	Screw-HH 5/16-18 X 7 1/2
36	3217-6	1	Nut-Hex 5/16-18
37	3256-2	2	Washer-1/4 Std
38	3296-29	1	Nut-Nyloc 5/16-18
39	116-4730	1	Cable, Battery (+)
39:1	1-543393	1	Insulator-Solenoid
39:2	109-2407	1	Insulator-Battery
40	1-303287	2	Tie-Cable 5 1/2 (Small)
42	3231-27	1	Bolt-Carriage 3/8-16 X 7/8
43	3296-39	1	Nut-Nyloc 3/8-16
44	1-816001	2	Fuse-Blade Type, 20 Amp
45	1-816003	1	Fuse-Blade Type, 30 Amp
46	116-0053	2	Cap-Plug
50	103-2106	1	Key-Exmark Logo
51	103-8528	1	Asm, Hopper Switch Actuator

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:

Notes:

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK.

4-CYCLE PREMIUM ENGINE OIL

Part No. 116-3373

Both SAE 30 and SAE 10W-30 in one bottle.

Contains increased levels of zinc and phosphorus for better lubricity.

No Viscosity Index Improvers that tend to shear down in high heat.

Synthetic formulation.

Gas & Diesel compatible.

Anti-corrosion additives.

API 'SL' and JASO rated with wet clutch compatibility for other machines.


PREMIUM HYDRO OIL

Part No. 109-9828

Commercial quality for tough, high-heat conditions.

Designed specifically for zero-turn mower hydraulic systems.

Superior shear resistance under heavy loads.

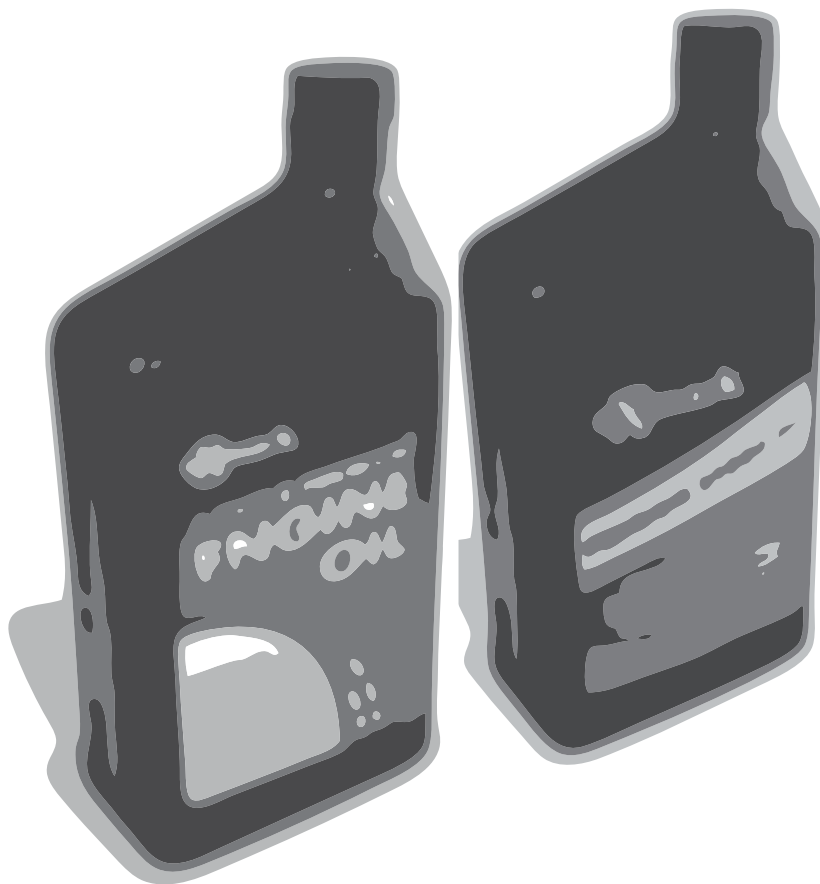

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2012 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4500-990 Rev. A
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.

