

Engine Replacement 2006 and Before Sand Pro/Infield Pro 5020 Traction Units

Model No. 117-2732 Model No. 119-2465

Installation Instructions

Refer to your *Toro Operator's Manual*, the *Toro Service Manual*, and the *Briggs and Stratton Service Manual* for information on engine and component replacement and adjustment.

Note: Remove the blower housing, flywheel, governor springs and the air cleaner support bracket from the old engine and install them on the new engine (Figure 1).

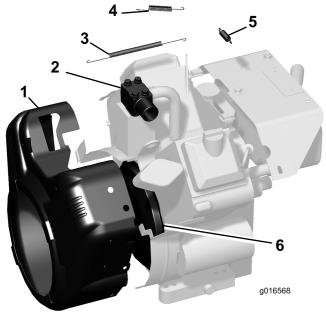


Figure 1

- 1. Blower housing
- Governor spring
- 2. Air cleaner support bracket 5.
- 5. Governor spring
- 3. Governor spring
- 6. Flywheel