



Count on it.

Parts Catalog

DH 220 Lawn Tractor

Model No. 74593—Serial No. 311000401 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard


TAP: self tapping

TTH: torx truss head

Contents


Frame, Fender, Seat and Fuel Tank Assembly	4
Frame Kit Assembly No. 120-8750	6
Front Axle Assembly	7
Lower Steering Link Assembly	8
Body and Hood Assembly	10
Operation - Brake and Bypass Assembly	12
Operation - Travel Pedal Assembly	13
Rear Wheel and Transaxle Assembly	14
Transaxle Assembly No. 121-0900	16
Grass Collector Assembly	18
Tunnel Assembly	19
Deck, Spindle and Blade Assembly	20
Rear Baffle and Bag on Demand Assembly	22
Cutting Pan and Drive System Assembly	24
Mower Lift Assembly	26
Engine and Muffler Assembly	27
Battery and Electrical Harness Assembly	28
Electrical Switch No. 2 Assembly	29
Electrical Switch Assembly No. 2	30
Electrical Switch Assembly No. 3	31
Attachments and Accessories	32

Frame, Fender, Seat and Fuel Tank Assembly

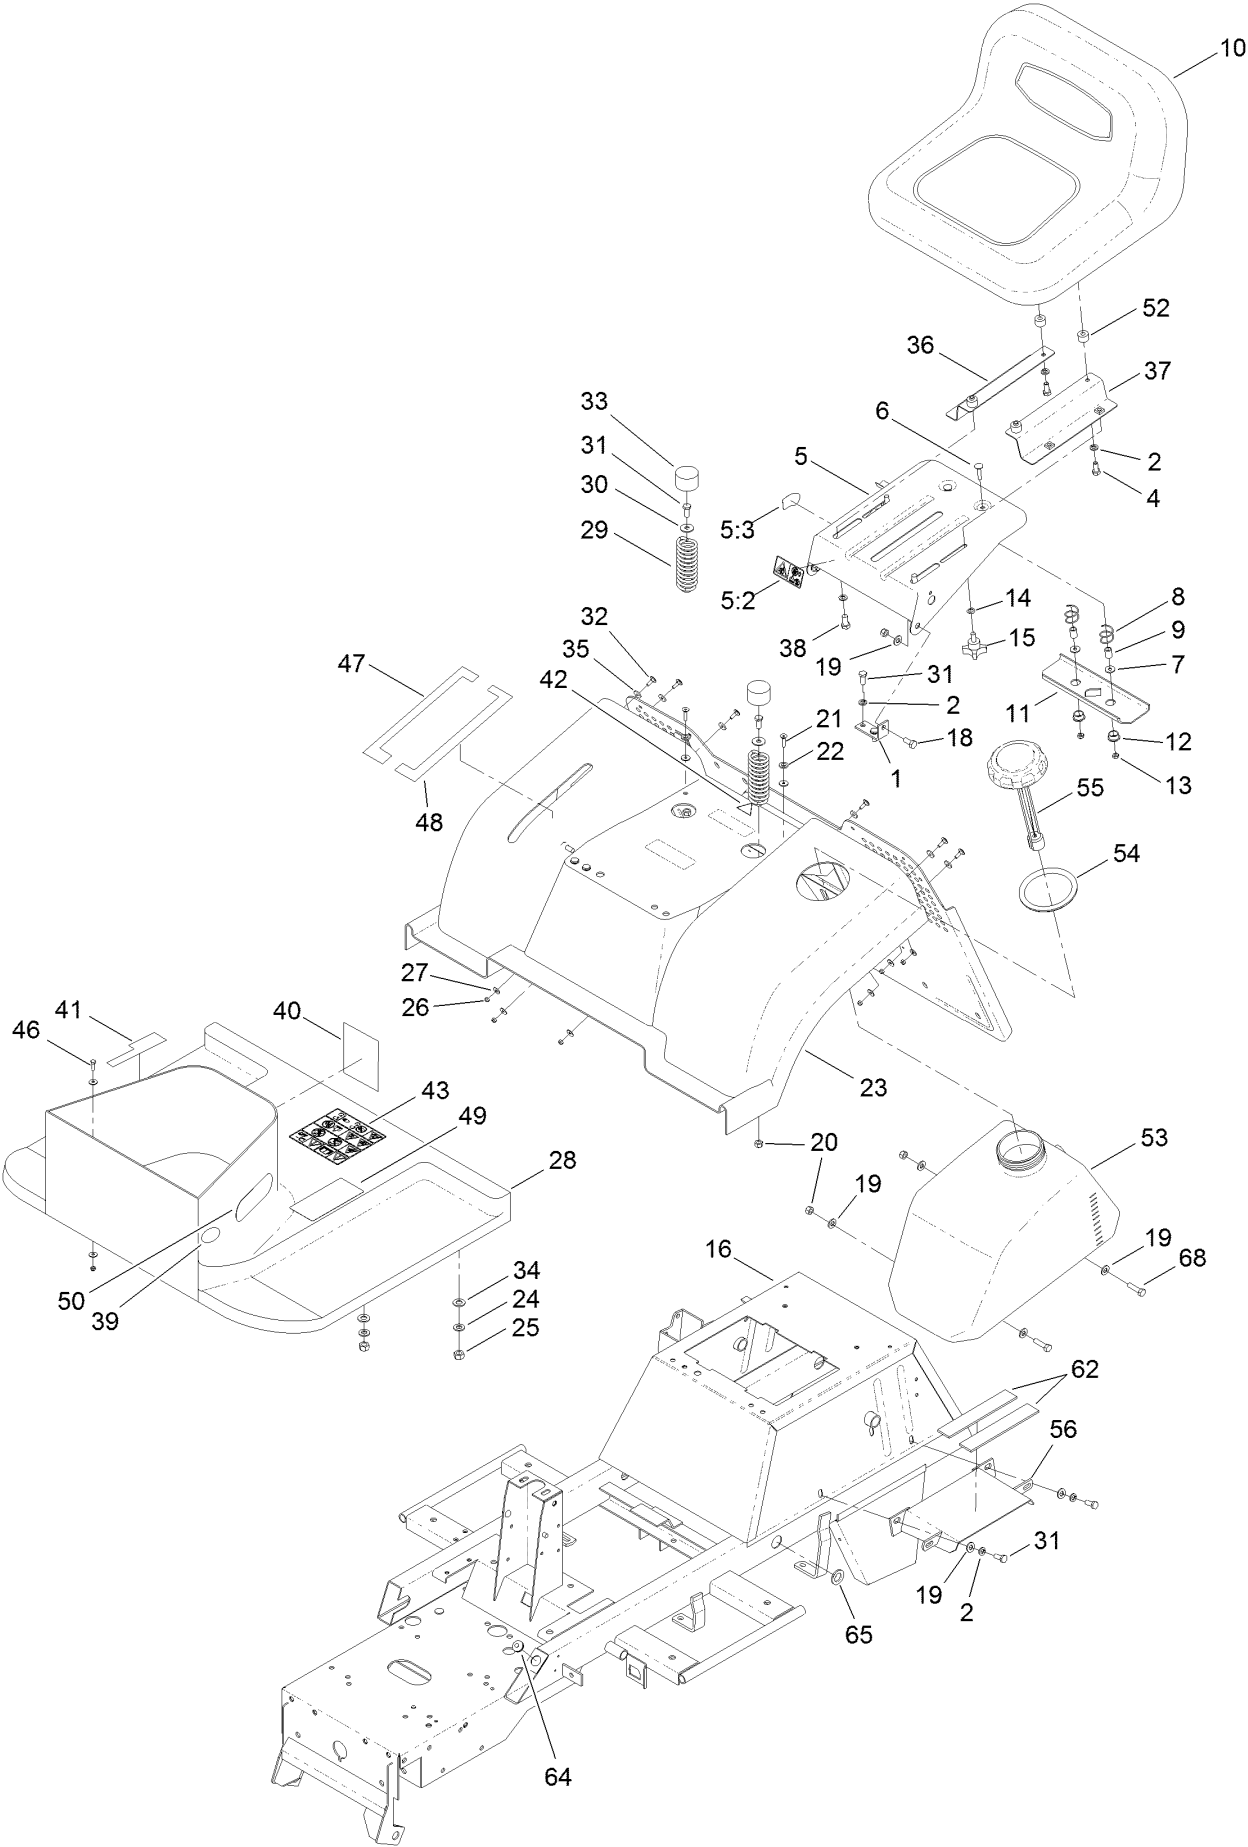


Frame, Fender, Seat and Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-2926	2	Bracket-Support, Seat	30	104-2946	2	Washer-Plain
2	3253-4	12	Washer-Lock	31	33114-020	8	Screw-HH
4	322-3	4	Screw-HH	32	104-2948	6	Bolt-Carriage
5	120-8704	1	Seat Pan ASM	33	104-2857	2	Cap-Hub
5:2	119-2730	1	Decal-Danger	34	104-2951	4	Washer-Rubber
5:3	99-5340	1	Decal-Switch	35	104-2952	8	Washer-Rubber
6	104-2930	2	Bolt-Carriage	36	107-8915	1	Bracket-Seat, RH
7	104-2931	2	Washer-Flat	37	107-8916	1	Bracket-Seat, LH
8	104-2932	2	Spring-Seat	38	33104-020	2	Screw-HHF
9	104-2933	2	Spacer-Split	39	104-3237	1	Decal-Brake, Parking
10	107-2213	1	Seat ASM	40	104-3238	1	Decal-Starting
11	104-2934	1	Bracket	41	104-3241	1	Decal-Operation, Hydro
12	104-2935	2	Bushing	42	104-3242	1	Decal-Bag To Frame
13	33023-00	2	Nut-Lock	43	119-2725	1	Decal-Danger
14	104-2936	2	Washer-Spring	46	60-6910	6	Screw
15	104-2937	2	Knob-Adjustment	47	104-3239	1	Decal-HOC, LH
16	120-8750	1	Frame Kit	48	104-3240	1	Decal-HOC, RH
18	104-2939	2	Screw-Support, Seat	49	106-8552	1	Decal-Operation
19	33094-00	6	Washer-Plain	50	107-8976	2	Decal-Tower
20	33024-00	4	Nut-Lock	52	107-8924	2	Shim-Seat
21	104-2940	2	Screw-HSFH	53	110-8689	1	Tank-Fuel
22	104-2941	2	Washer-Finish	54	110-8691	1	Protector-Neck, Filler
23	120-8765	1	Fender-Rear	55	110-8697	1	Cap-Fuel
24	33095-00	4	Washer-Flat	56	120-8756	1	Bracket-Tank, Fuel
25	33025-00	4	Nut-Lock, NI	62	110-8690	2	Strip-Rubber, Fuel Tank
26	87-5140	12	Nut-Lock	64	107-8950	1	Grommet
27	104-2943	18	Washer-Flat	65	110-8683	1	Grommet
28	104-2944	1	Footrest ASM	68	33114-030	2	Screw-HH
29	104-2945	2	Spring-Seat				

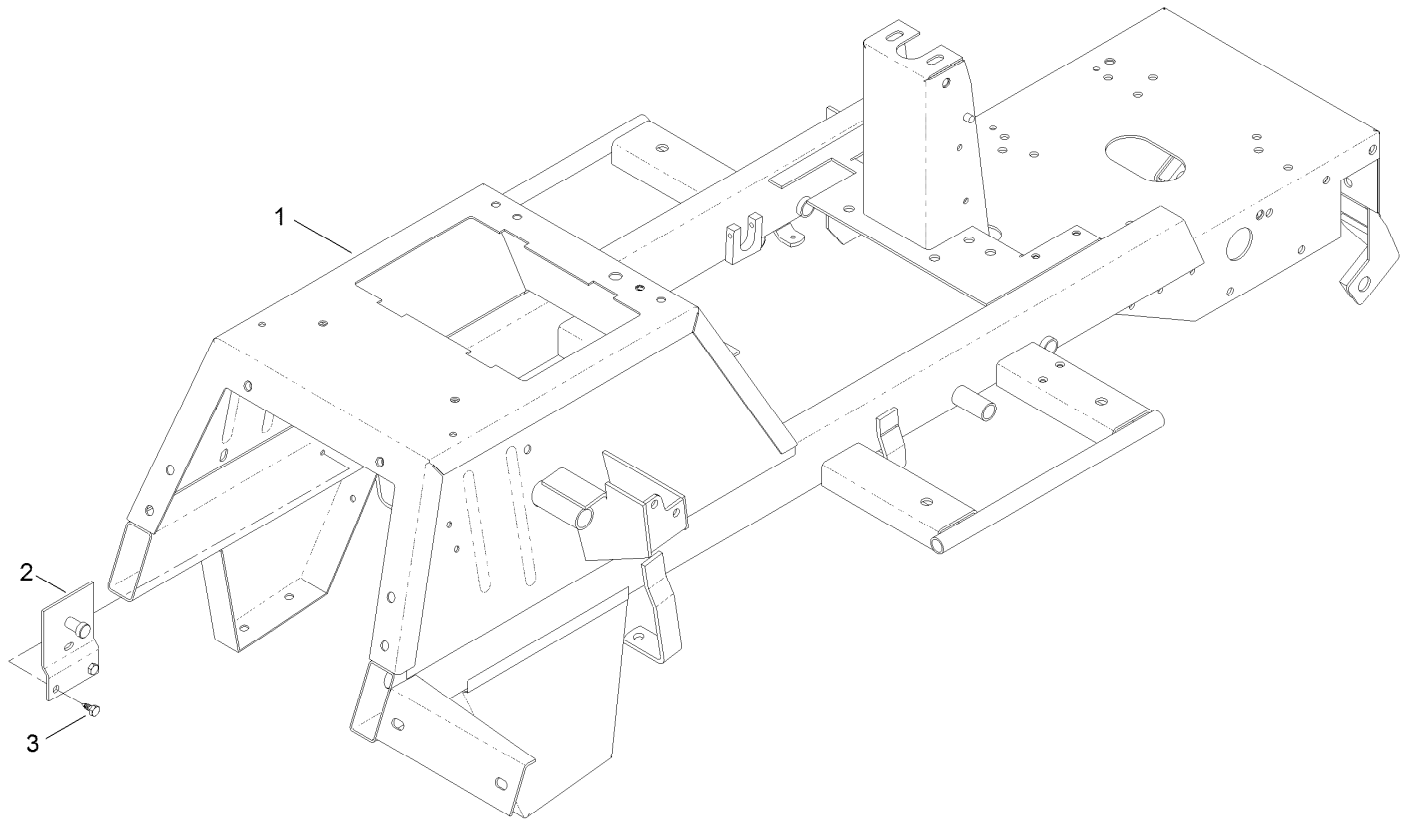

Frame Kit Assembly No. 120-8750

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8751	1	Frame-Chassis
2	120-8752	1	Bracket-Magnet
3	120-8753	2	Screw

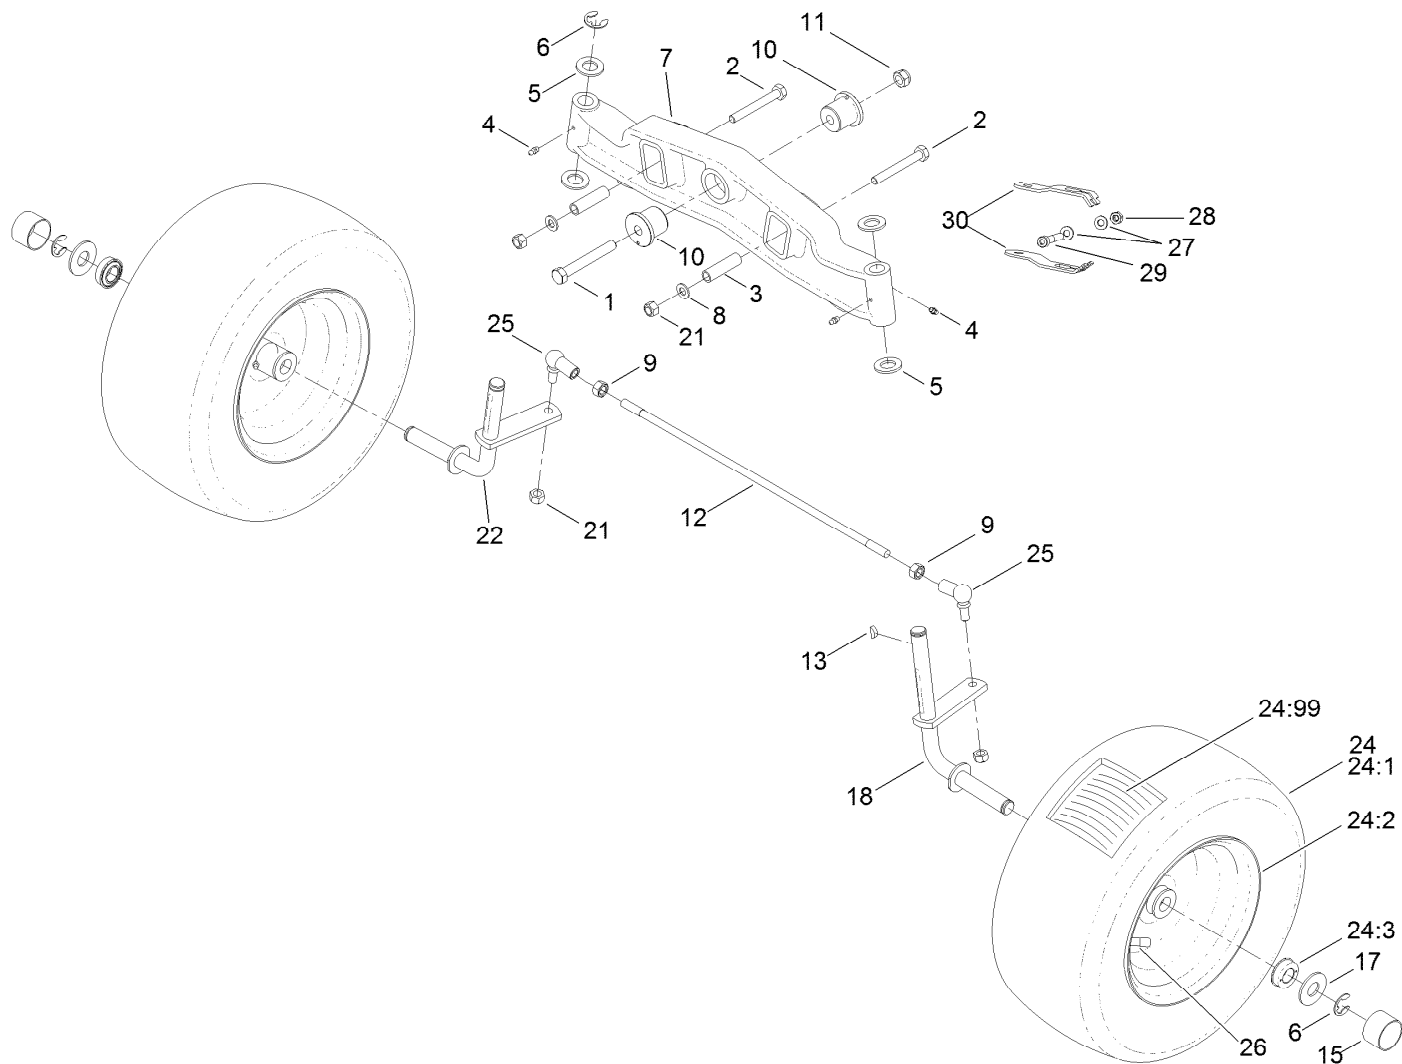


Front Axle Assembly

Ref.	Part Number	Qty.	Description
1	33116-090	1	Screw-HH
2	33115-080	2	Screw-HH
3	104-2851	2	Spacer
4	104-2904	3	Fitting-Grease
5	104-2905	5	Washer-Flat
6	104-2891	3	Clip-Spring
7	104-2852	1	Axle-Front
8	104-2906	2	Washer-Flat
9	48-9520	2	Nut
10	104-2890	2	Bushing-Axle, Front
11	104-2907	1	Nut-Locking, Self
12	104-2855	1	Rod-Tie, Front Axle
13	104-2856	1	Key-Woodruff
15	104-2857	2	Cap-Hub
17	120-8739	4	Washer

Ref.	Part Number	Qty.	Description
18	120-8705	1	Spindle-Front, LH
21	33025-00	4	Nut-Lock, NI
22	114-3242	1	Spindle-Front, Right
24		2	Wheel ASM ●
24:1	99-2336	1	Tire
24:2	114-3243	1	Rim-Front
24:3	110513	2	Bearing-Wheel
24:99	112819	1	Tube-Inner
25	104-2876	2	Joint-Ball, Angle
26	106-8596	1	Valve-Tire
27	106-4756	2	Washer-Plain
28	33024-00	1	Nut-Lock
29	120-8774	1	Screw
30	120-8713	2	Lever-Spindle, Steering

● Not serviced separately


Lower Steering Link Assembly

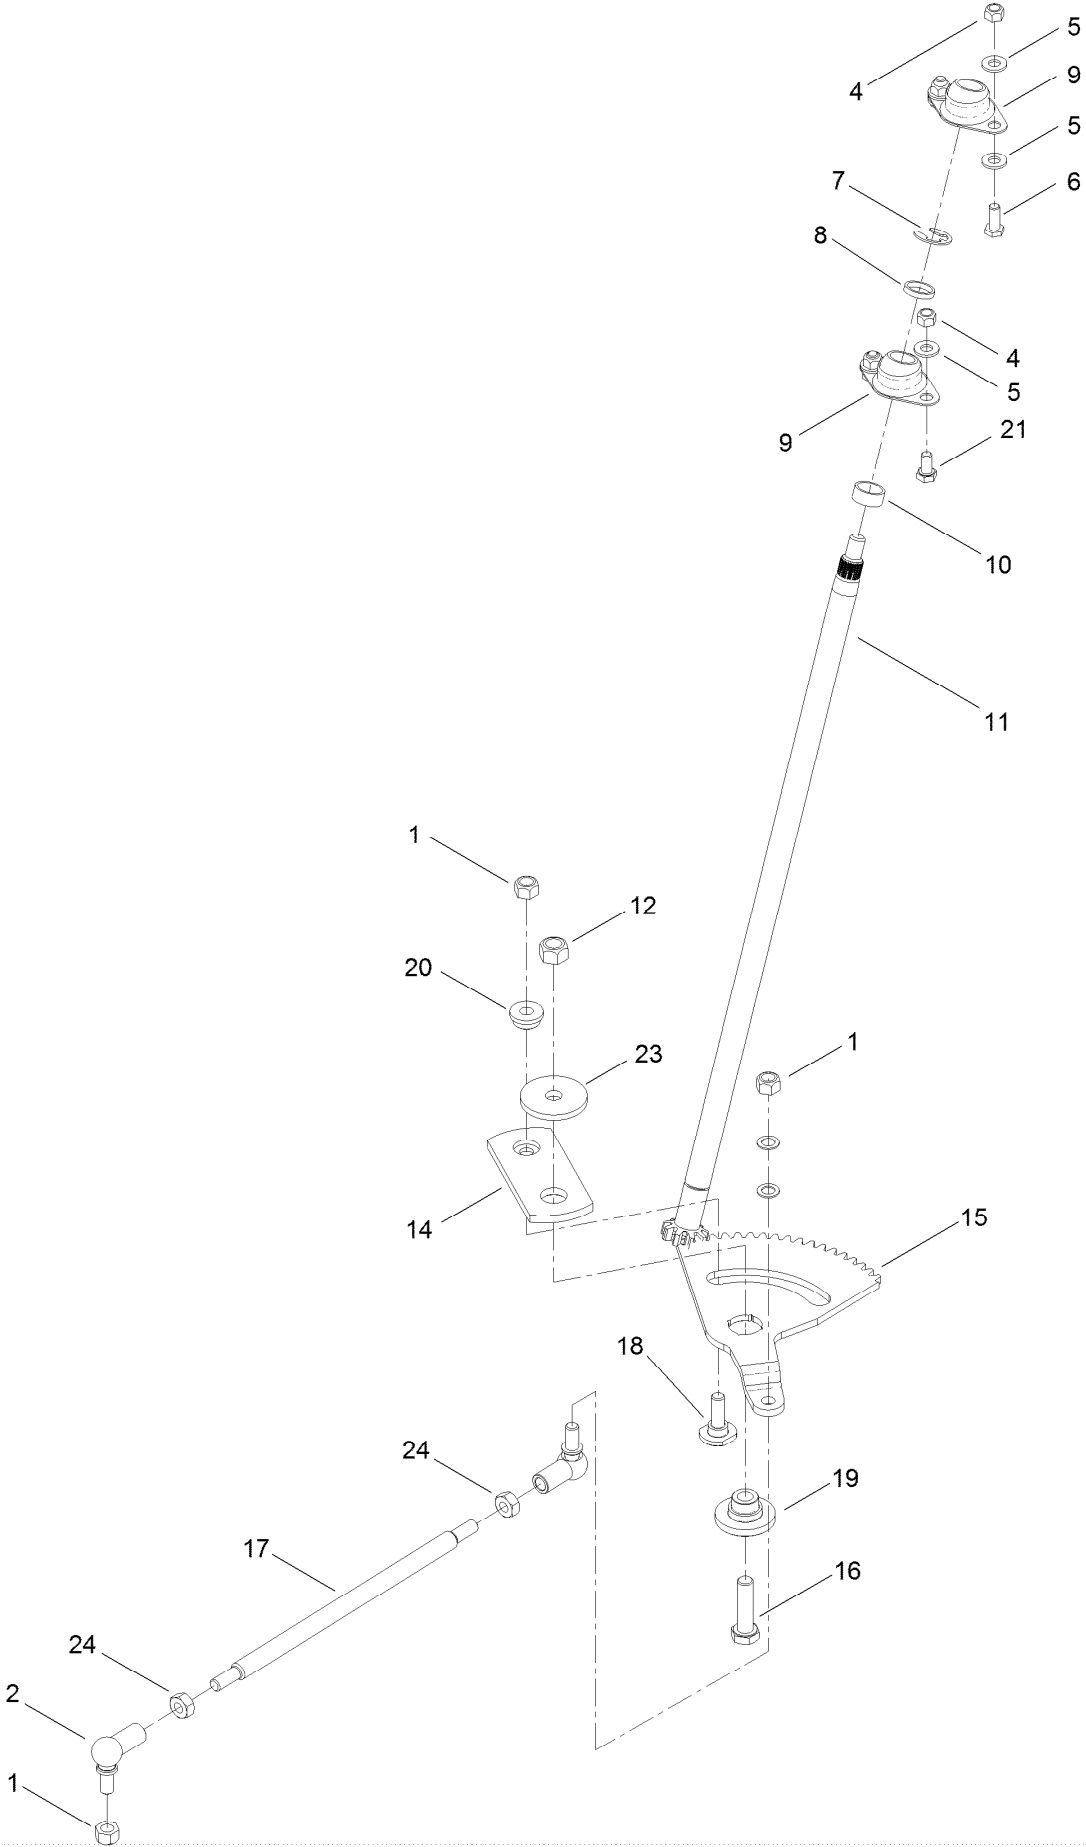

Lower Steering Link Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	33025-00	3	Nut-Lock, NI	14	105-1238	1	Plate-Steering
2	104-2876	2	Joint-Ball, Angle	15	120-8749	1	Gear-Sector
4	33024-00	4	Nut-Lock	16	104-2910	1	Screw-HH
5	33094-00	6	Washer-Plain	17	104-2886	1	Link-Drag
6	33114-020	2	Screw-HH	18	105-1239	1	Bolt-Shoulder
7	104-2891	1	Clip-Spring	19	105-1240	1	Pivot-Steering
8	104-2877	1	Spacer-Upper	20	105-1241	1	Bushing
9	104-2878	2	Bearing-Spherical	21	33114-016	2	Screw-HH
10	104-2879	1	Spacer-Lower	23	108-8892	1	Washer
11	106-5773	1	Shaft-Steering	24	48-9520	2	Nut
12	33026-00	1	Nut-Lock				

Body and Hood Assembly

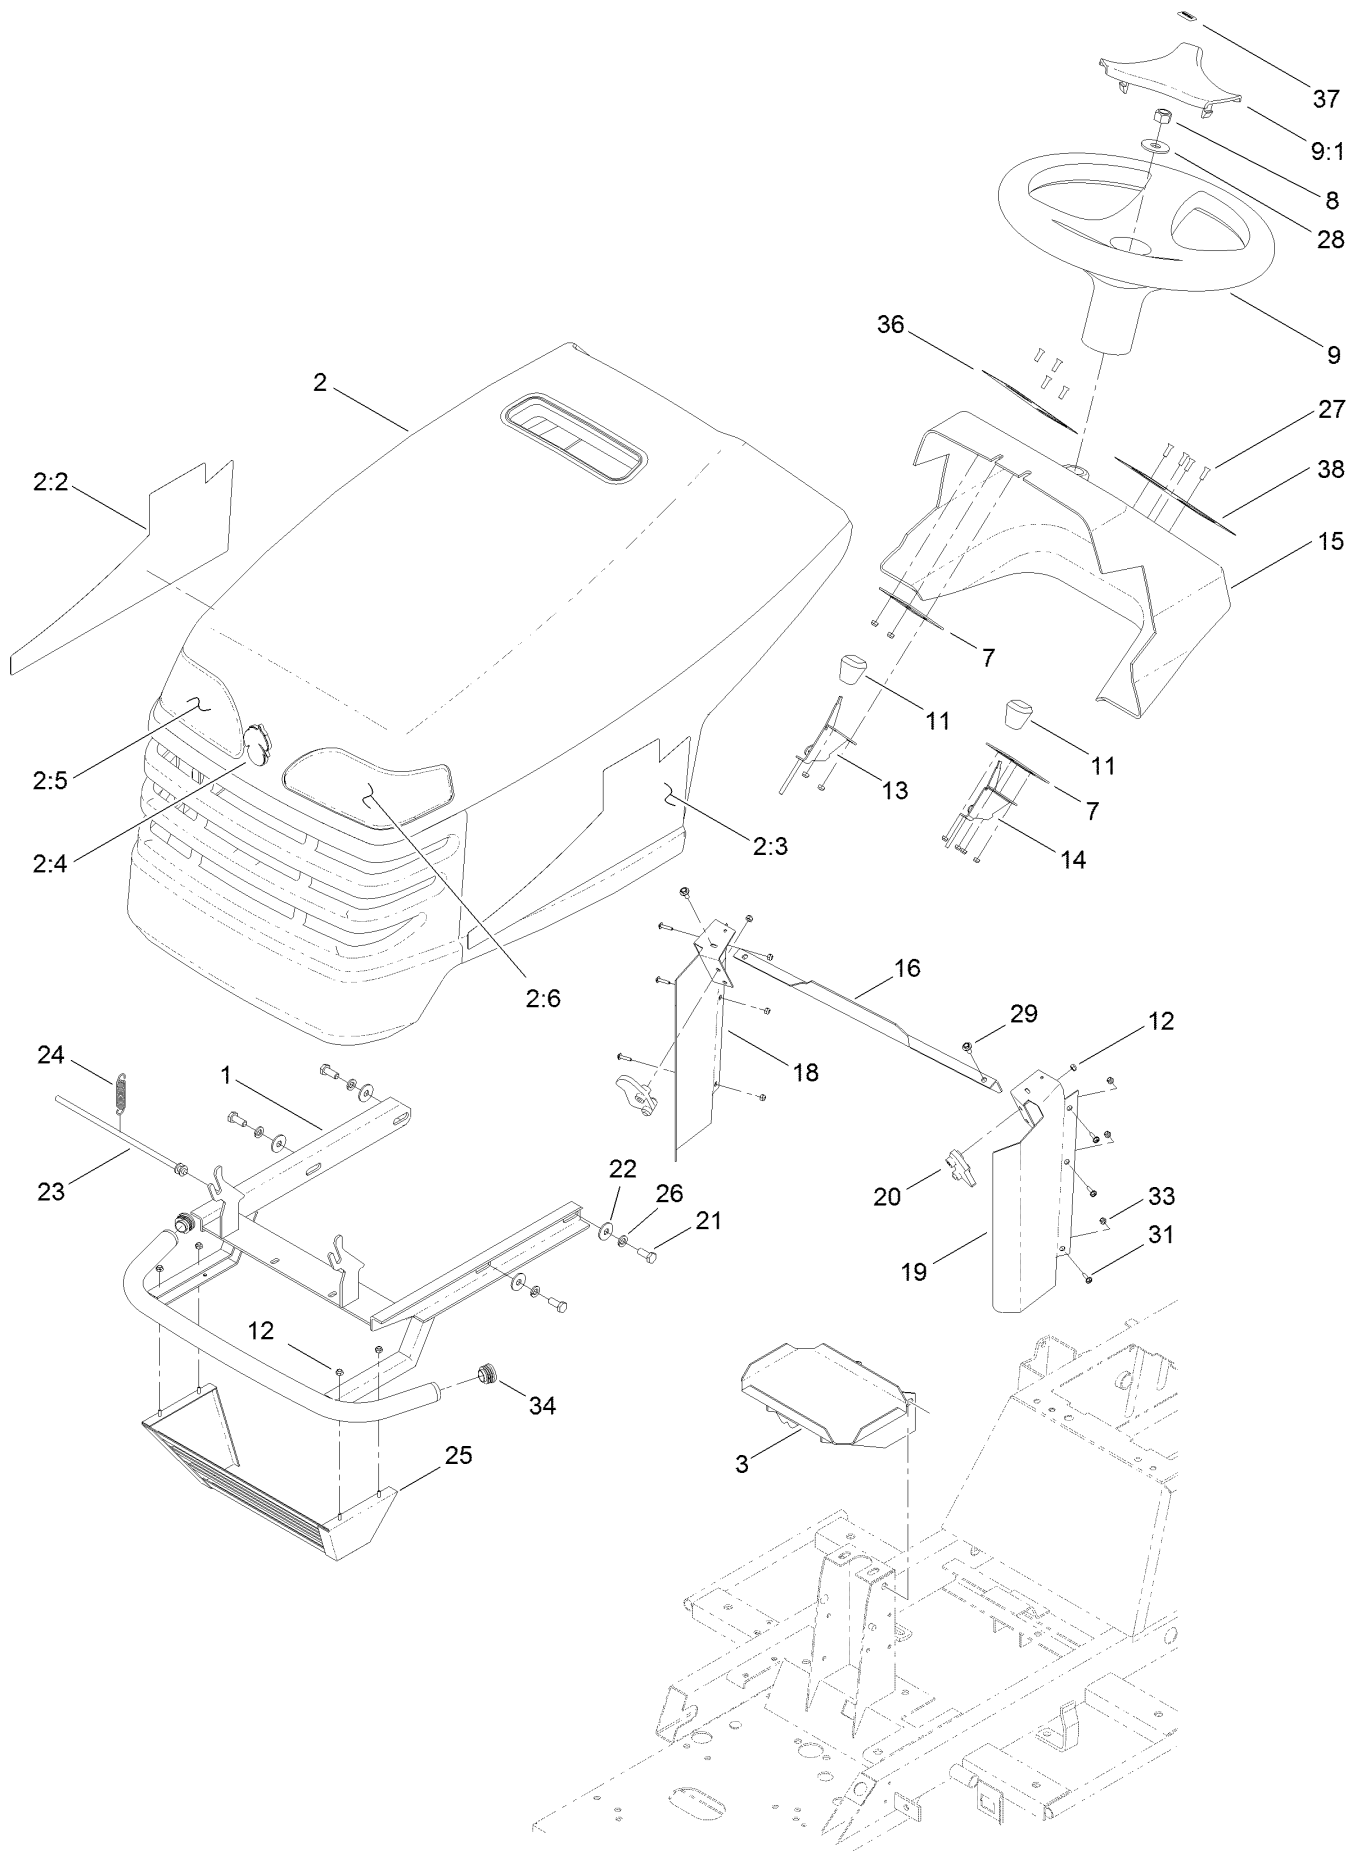


Body and Hood Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	107-2216	1	Support-Bumper	18	104-2972	1	Panel-Right
2	107-8990	1	Hood ASM	19	104-2973	1	Panel-Left
2:2	107-8913	1	Decal-Hood, RH	20	92-6960	2	Latch-Hood
2:3	107-8902	1	Decal-Hood, LH	21	33114-020	4	Screw-HH
2:4	95-4248	1	Emblem	22	104-2946	4	Washer-Plain
2:5	107-8983	1	Lens-Headlamp, RH	23	120-8766	1	Shaft
2:6	107-8984	1	Lens-Headlamp, LH	24	104-2975	1	Spring-Hood
3	119-8243	1	Tray-Battery	25	107-2218	1	Guard-Muffler
7	104-2962	2	Brace	26	3253-4	4	Washer-Lock
8	33026-00	1	Nut-Lock	27	106-5759	8	Screw
9	98-1472	1	Wheel-Steering	28	106-5758	1	Washer
9:1	98-1468	1	Cover-Wheel, Steering	29	104-2980	2	Screw
11	66-0120	2	Knob	31	107-8918	6	Screw
12	87-5140	14	Nut-Lock	33	104-2985	6	Nut-Hex
13	92-6784	1	Control-Throttle (Twin)	34	107-8943	2	Plug-End, Tube
14	92-6783	1	Control-Choke (Twin)	36	104-3234	1	Decal
15	104-2968	1	Panel-Dash	37	98-1459	1	Decal
16	114-3132	1	Brace	38	104-3233	1	Decal-Choke/PTO

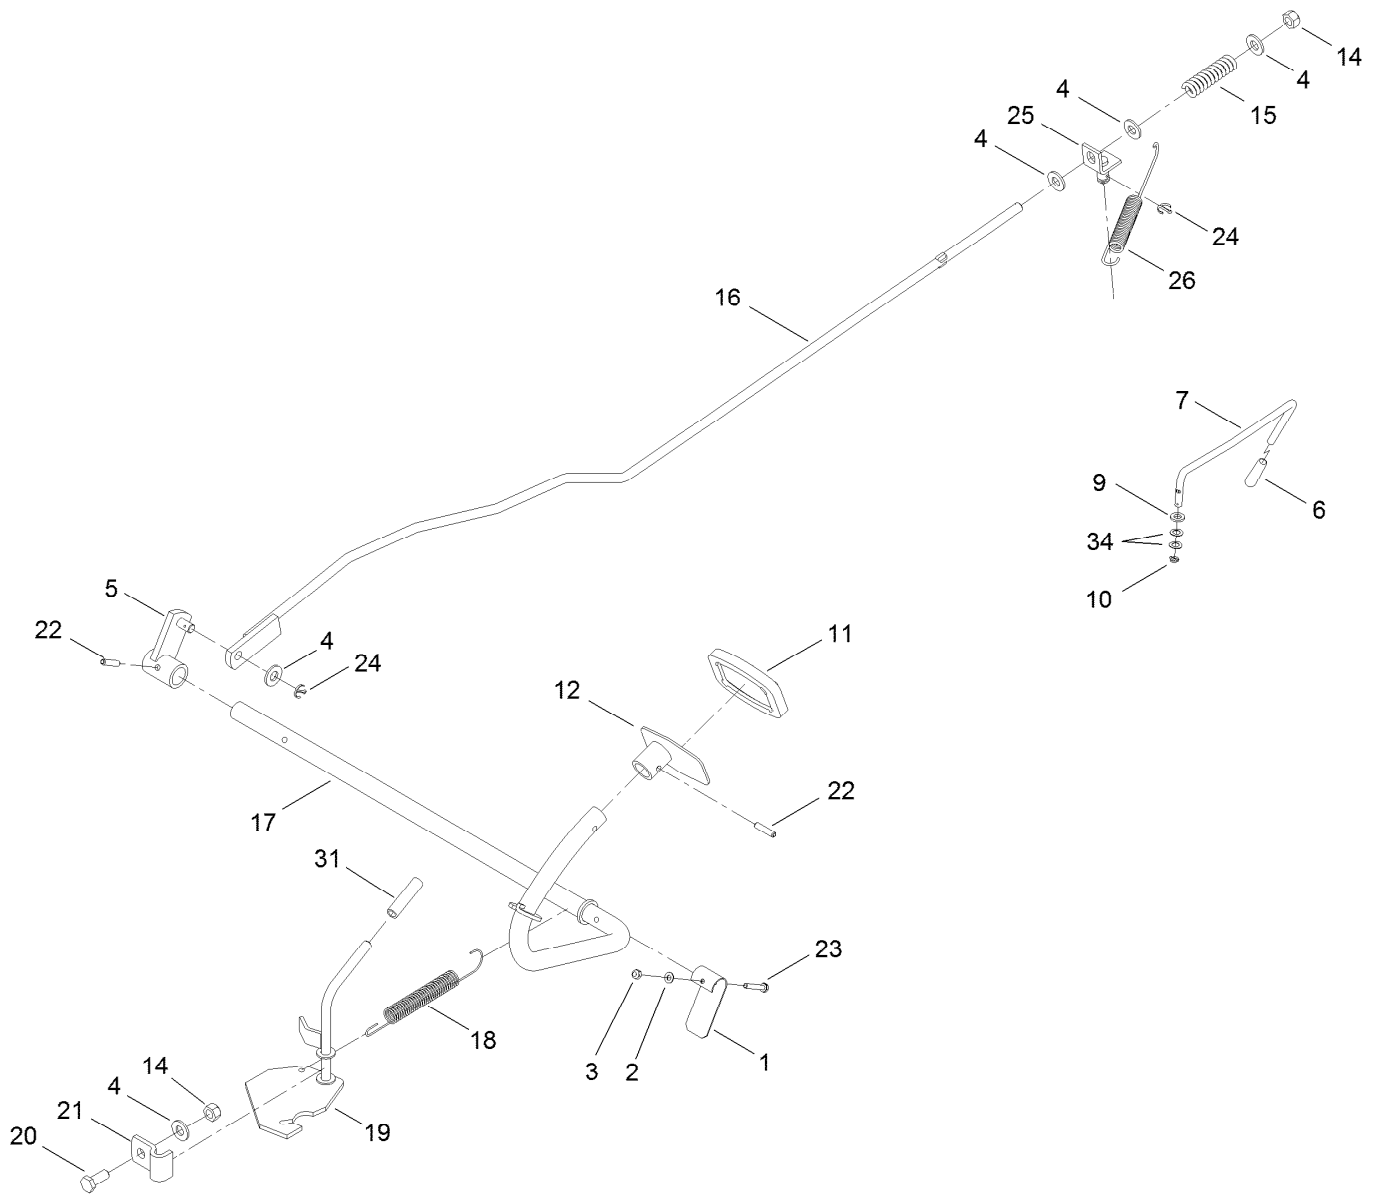

Operation - Brake and Bypass Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	104-2992	1	Lever-Spring	16	104-3003	1	Rod-Connecting, Brake
2	104-2984	1	Washer	17	104-3246	1	Shaft-Brake
3	104-2985	1	Nut-Hex	18	104-3005	1	Spring-Brake, Hand
4	33094-00	5	Washer-Plain	19	104-3006	1	Lever-Brake, Hand
5	104-2993	1	Bracket-Rod, Brake	20	33114-020	1	Screw-HH
6	108-8708	1	Cap-Bypass Lever, Hydro	21	104-3007	1	Clamp-Lever, Parking Brake
7	120-8762	1	Rod-Lever, Bypass	22	104-3008	2	Pin-Spring
9	104-3193	1	Washer	23	104-3009	1	Screw-Hex
10	104-2997	1	Pin-Cotter	24	104-3016	2	Pin-Cotter
11	104-3018	1	Pad-Pedal	25	104-3011	1	Bracket-Rod, Brake
12	120-8763	1	Pedal	26	104-3012	1	Spring
14	33024-00	2	Nut-Lock	31	104-3247	1	Cap
15	104-3002	1	Spring-Brake	34	106-5770	2	Washer

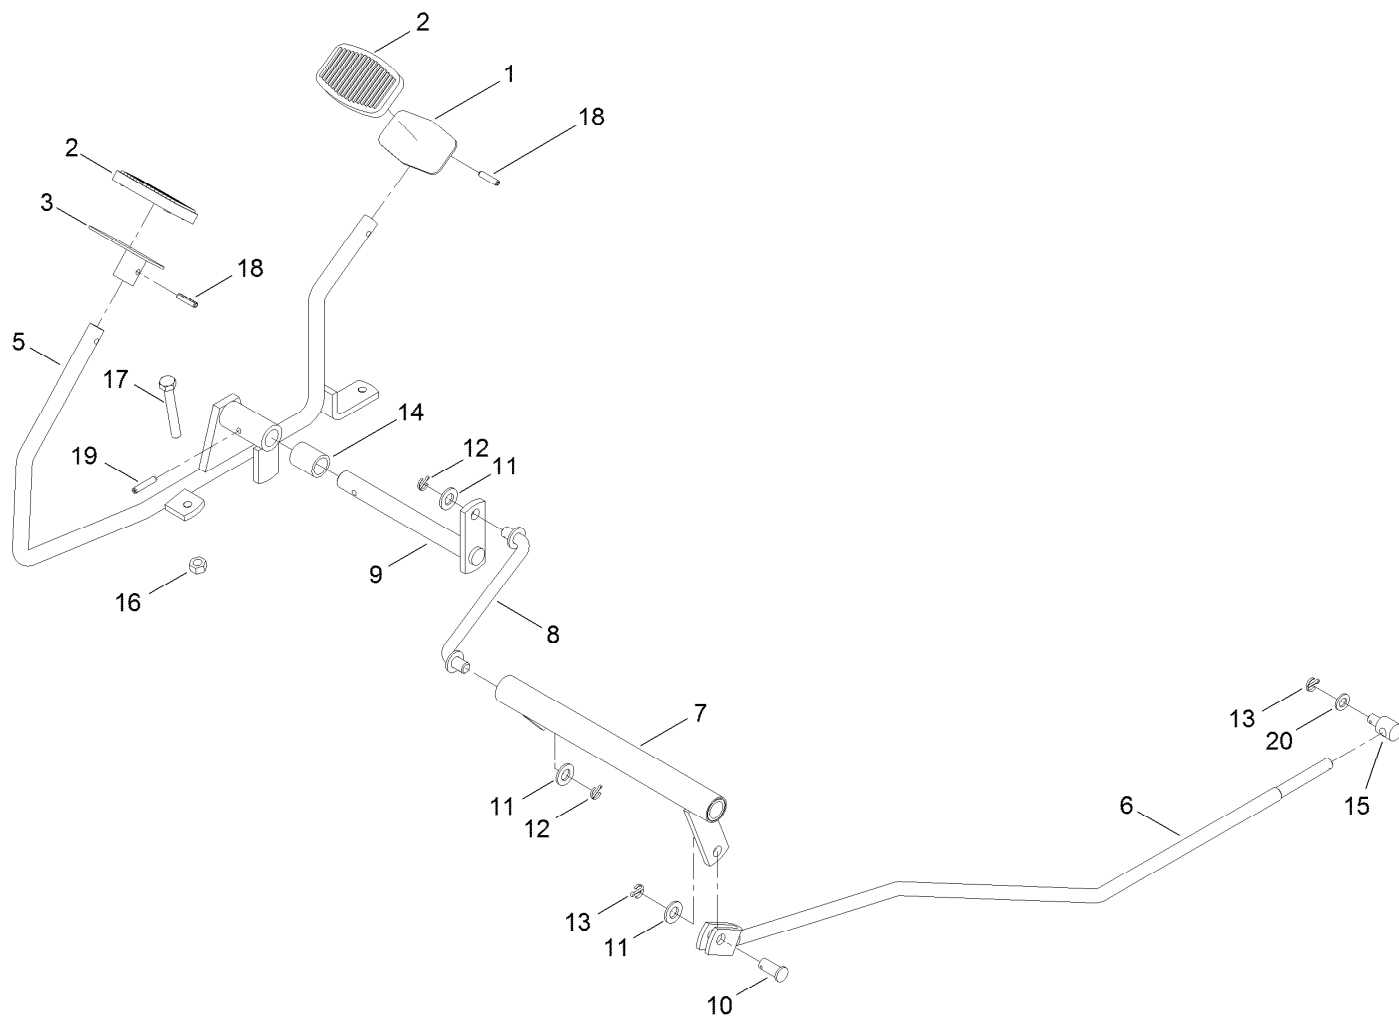


Operation - Travel Pedal Assembly

Ref.	Part Number	Qty.	Description
1	104-3017	1	Pedal-Rear, Travel
2	104-3018	2	Pad-Pedal
3	120-8761	1	Pedal-Travel, Front
5	104-3021	1	Rod-Travel
6	104-3022	1	Rod-Tie
7	104-3023	1	Shaft-Diagonal
8	104-3024	1	Link-Formed
9	104-3025	1	Shaft-Diagonal
10	120-8770	1	Pin
11	33095-00	3	Washer-Flat

Ref.	Part Number	Qty.	Description
12	104-3016	2	Pin-Cotter
13	104-3027	2	Pin-Cotter
14	104-3028	1	Spacer
15	104-3029	1	Pin
16	33014-00	1	Nut-Hex
17	33114-060	1	Screw-HH
18	104-3008	2	Pin-Spring
19	104-3030	1	Pin-Spring
20	104-3031	1	Washer

Rear Wheel and Transaxle Assembly

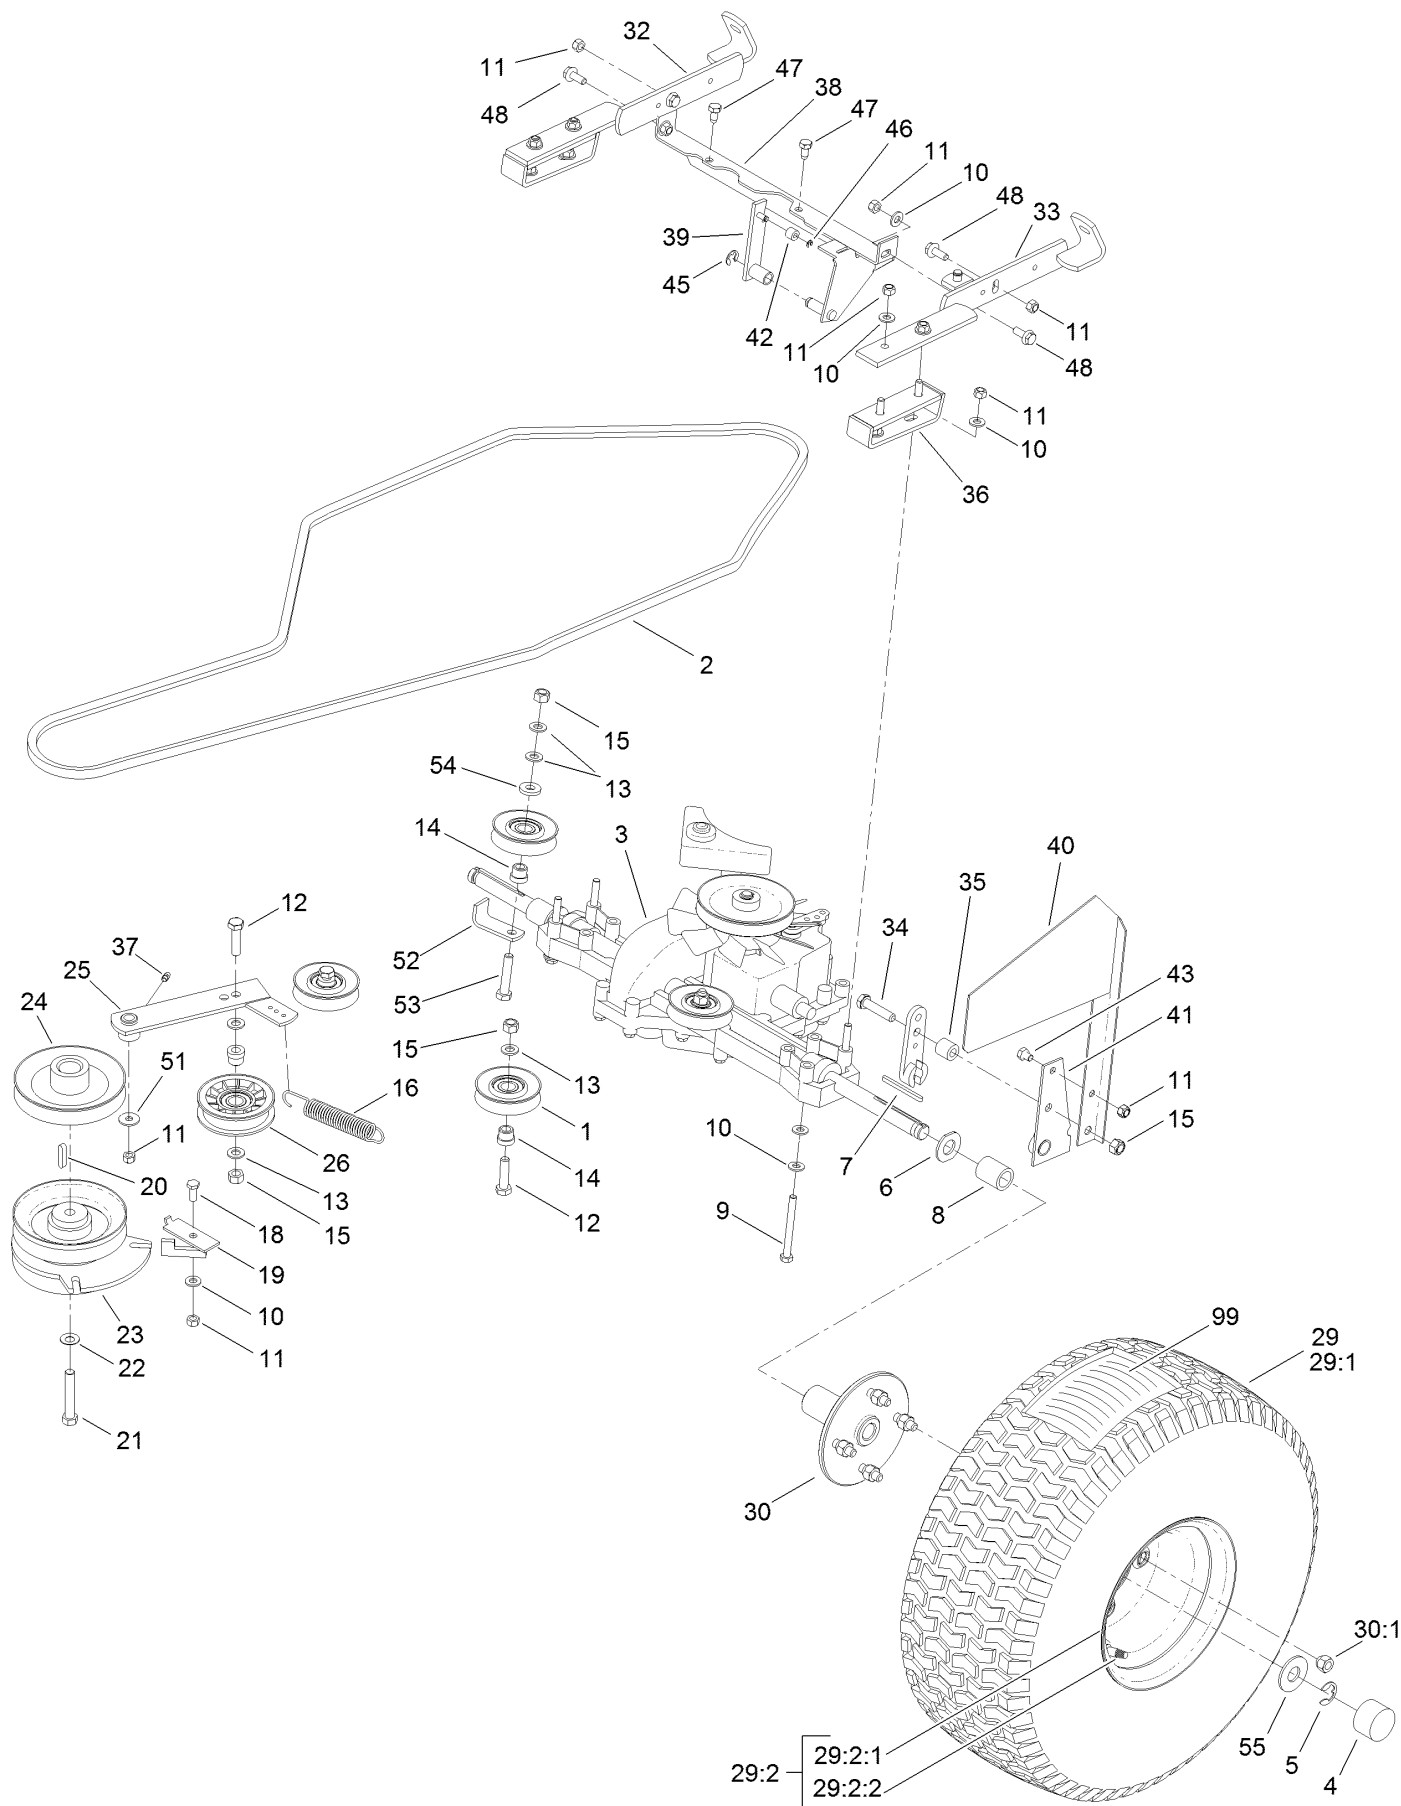


Rear Wheel and Transaxle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-2887	4	Pully-Idler	29:2	107-8932	1	Wheel ASM
2	104-2888	1	V-Belt-Traction	29:2:1		1	Rim ●
3	121-0900	1	Transaxle	29:2:2	106-8596	1	Valve-Tire
4	104-2857	2	Cap-Hub	30	108-8718	2	Hub-Wheel
5	104-2891	2	Clip-Spring	30:1	108-8717	4	Nut-Lug
6	104-3206	2	Washer	32	106-8594	1	Bracket-Right
7	104-2892	2	Key-Square	33	106-8593	1	Bracket-Left
8	104-2895	2	Spacer-Axle	34	33115-045	1	Screw-HH
9	33114-080	4	Screw-HH	35	104-2925	1	Sleeve
10	33094-00	19	Washer-Plain	36	104-3343	2	Plate-Reinforcing
11	33024-00	15	Nut-Lock	37	104-2904	1	Fitting-Grease
12	33115-040	4	Screw-HH	38	104-3327	1	Bar ASM
13	33095-00	7	Washer-Flat	39	104-3328	1	Arm-Switch
14	104-2896	5	Bushing-Idler	40	104-3325	1	Arm-Control, Cruise
15	33025-00	6	Nut-Lock, NI	41	104-3326	1	Tenon
16	104-2897	1	Spring	42	104-3329	1	Roller
18	33114-020	1	Screw-HH	43	33114-010	1	Screw-HH
19	104-2898	1	Retainer	45	104-3341	1	Stirrup
20	104-2899	1	Key-Square	46	104-3014	1	Stirrup
21	3212-10	1	Screw-HH	47	104-3344	2	Screw-Thread Forming
22	93-9043	1	Washer-Spring, Belleville	48	104-3065	4	Screw-Hex
23	104-3334	1	Clutch-Electric	51	104-2946	2	Washer-Plain
24	104-2911	1	Pulley-Engine	52	108-8732	1	Retainer-Belt
25	104-2912	1	Arm-Idler	53	33115-050	1	Screw-HH
26	104-2913	1	Pulley-Idler	54	108-8709	1	Washer-Flat
29	107-8929	2	Tire And Wheel ASM	55	120-8739	4	Washer
29:1	99-2994	1	Tire	99	232-37	1	Tube


● Not serviced separately

Transaxle Assembly No. 121-0900

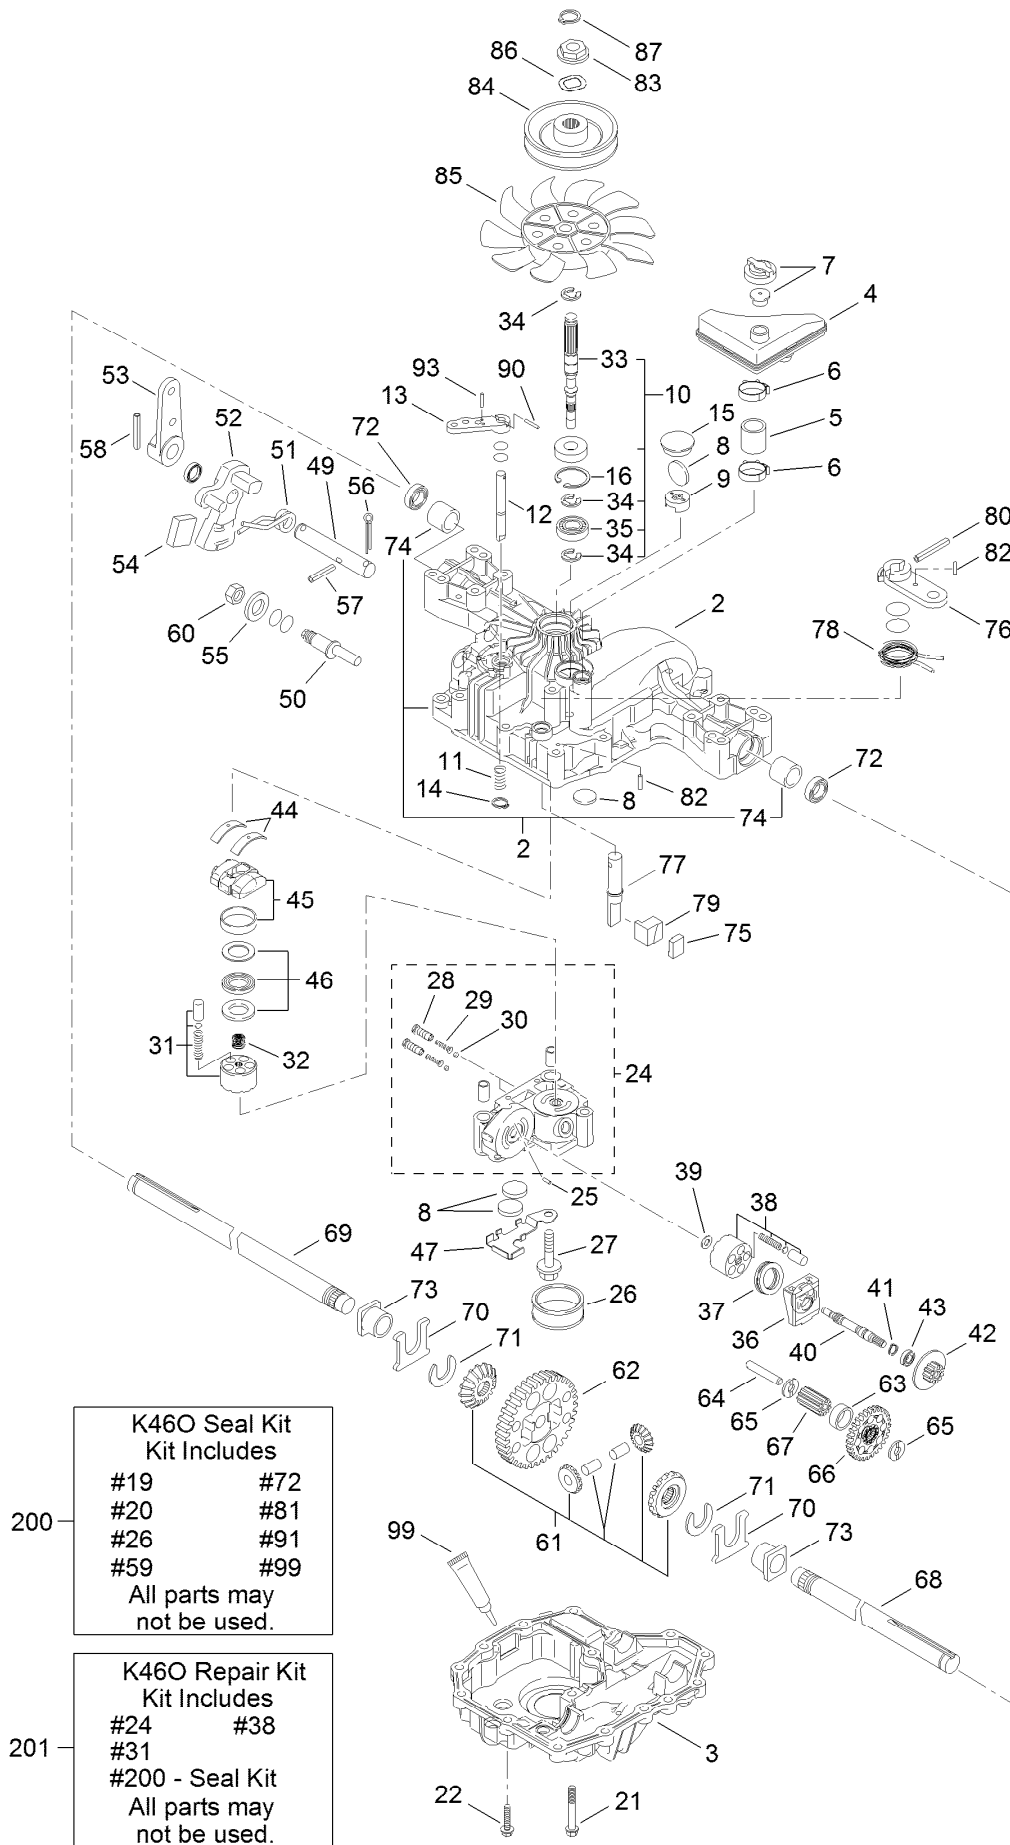

Transaxle Assembly No. 121-0900 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	121-0901	1	Upper Case Kit	50	121-0926	1	Fulcrum
3	104-3253	1	Housing-Lower	51	114-3217	1	Spring-Torsion
4	121-0902	1	Tank-Reservoir	52	114-3180	1	Arm-Control
5	121-0903	1	Tube	53	121-0927	1	Lever-Control
6	104-3255	1	Clamp-Miniature	54	121-0928	1	Plate-Jerky
7	121-0904	1	Valve-Vent	55	121-0929	1	Washer
8	104-3257	1	Magnet	56	114-3182	1	Pin-Cotter
9	121-0905	1	Holder-Magnet	57	121-0930	1	Spring Pin
10	121-0906	1	Pump Shaft/Bearing Kit	58	121-0931	1	Pin-Roll
11	121-0907	1	Spring	60	121-0932	1	Nut
12	104-3260	1	Shaft-Bypass	61	121-0933	1	Differential Gear Kit
13	104-3261	1	Lever-Bypass	62	121-0934	1	Gear-Final
14	104-3262	1	Ring	63	121-0935	1	Collar-Pinion, Final
15	104-3263	1	Plug-Bore	64	121-0936	1	Shaft-Reduction
16	121-0908	1	Ring-Snap	65	121-0937	1	Washer
21	121-0909	1	Screw-Tapping	66	121-0938	1	Gear-Reduction
22	121-0910	1	Screw-Tapping	67	121-0939	1	Gear-Pinion, Final
24	121-0911	1	Center Case W/Ball Ids Kit	68	121-0940	1	Shaft-Axle, Left
25	104-3270	1	Pin	69	121-0941	1	Shaft-Axle, Right
26	121-0912	1	Filter	70	121-0942	1	Washer-Thrust
27	104-3272	1	Bolt	71	121-0943	1	Ring
28	121-0913	1	Valve-Ids	72	121-0944	1	Seal
29	121-0914	1	Spring-Ids	73	121-0945	1	Bushing
30	121-0915	1	Ball	74	121-0946	1	Bushing
31	121-0916	1	Cylinder Block (Pump) Kit	75	121-0947	1	Shoe-Brake
32	104-3277	1	Spring-Pump	76	121-0948	1	Lever-Brake
33	104-3278	1	Shaft-Pump	77	121-0949	1	Shaft-Brake
34	121-0917	1	E-Ring	78	121-0950	1	Spring-Return, Brake
35	121-0918	1	Bearing	79	121-0951	1	Actuator-Brake
36	104-3279	1	Housing	80	92-0767	1	Pin
37	121-0919	1	Bearing-Thrust	82	121-0952	1	Pin-Spring
38	121-0920	1	Cylinder Block Kit (Motor)	83	121-0953	1	Collar-Spline
39	104-3282	1	Washer	84	121-0954	1	Pulley
40	121-0921	1	Shaft-Motor	85	121-0955	1	Fan-White
41	121-0922	1	Ring-Snap	86	121-0956	1	Washer-Wave
42	104-3284	1	Motor-Gear	87	121-0957	1	Ring-Snap
43	121-0923	1	Bearing	90	121-0958	1	Pin-Spring
44	104-3286	1	Metal-Thrust	93	104-3264	1	Pin
45	104-3287	1	Plate-Swash	99	121-0959	1	Sealant
46	121-0924	1	Thrust Bearing (Pump) Kit	200	121-0960	1	Seal Kit
47	121-0925	1	Holder-Magnet	201	121-0961	1	Repair Kit
49	114-3181	1	Shaft-Control				

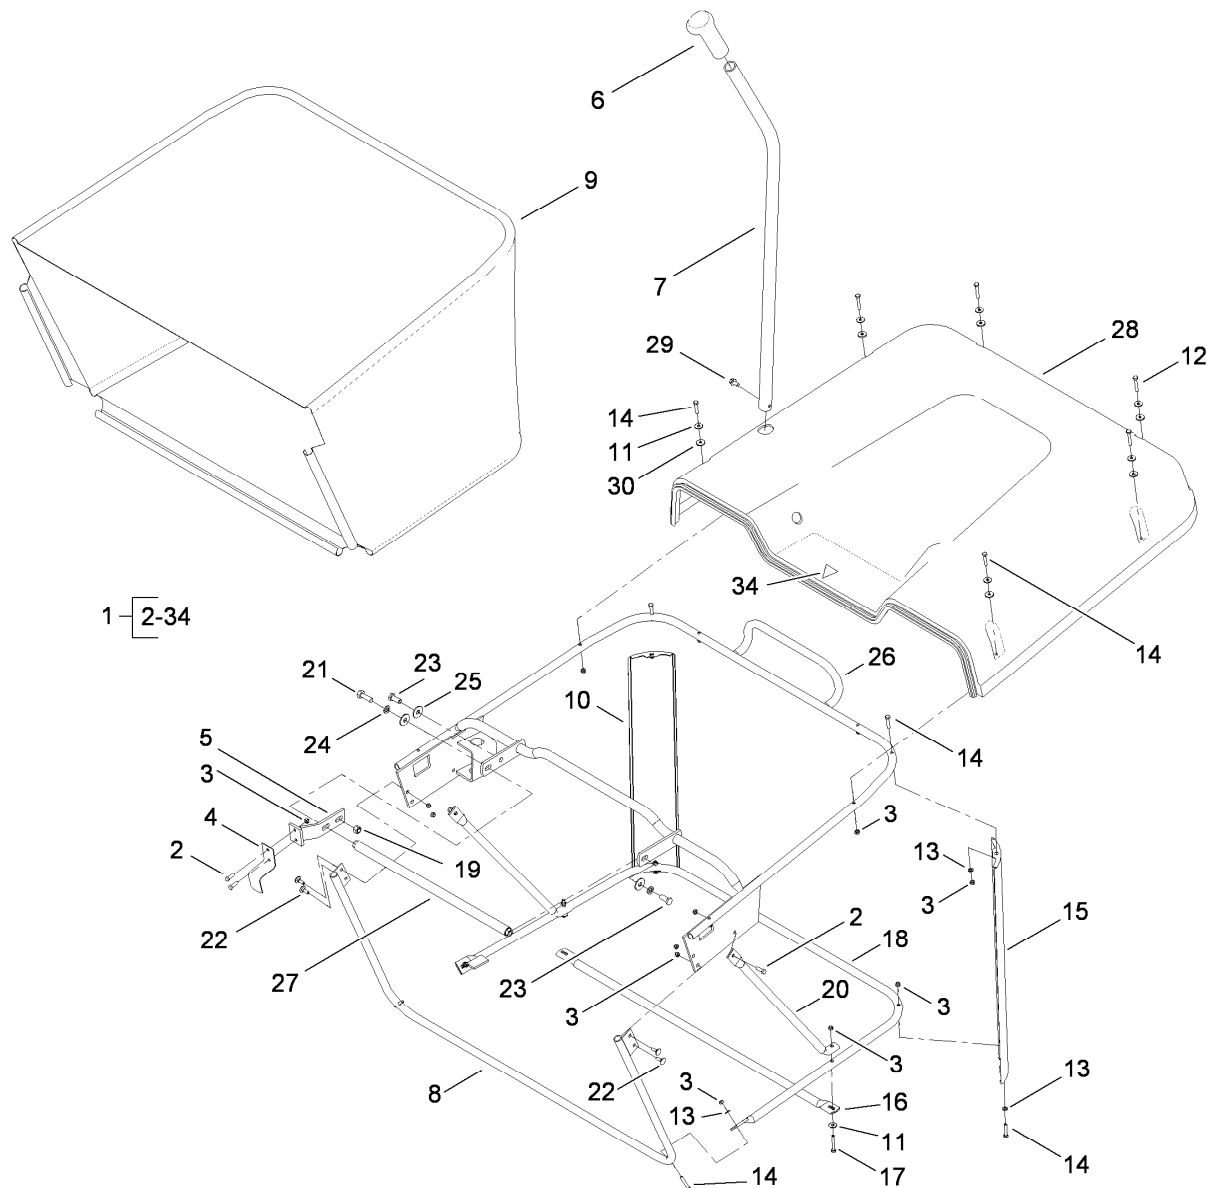


Grass Collector Assembly

Ref.	Part Number	Qty.	Description
1	106-5760	1	Collector ASM ●
2	60-6910	2	Screw
3	87-5140	22	Nut-Lock
4	104-3033	1	Spring-Coll, Interlock Switch
5	106-5761	1	Bracket-Spring
6	104-3035	1	Grip-Handle
7	107-8917	1	Lever-Dump
8	104-3037	1	Front Frame ASM
9	104-3038	1	Bag-Grass
10	104-3039	1	Support-Corner, Right
11	104-2943	8	Washer-Flat
12	87-5150	4	Bolt
13	52-6430	14	Washer
14	104-3041	10	Screw-Hex
15	104-3042	1	Support-Corner, Left
16	104-3043	1	Brace-Connecting

Ref.	Part Number	Qty.	Description
17	104-3044	2	Screw-Hex
18	104-3045	1	Bottom Frame ASM
19	33024-00	1	Nut-Lock
20	104-3046	2	Brace
21	33114-025	1	Screw-HH
22	104-2948	4	Bolt-Carriage
23	33114-020	2	Screw-HH
24	3253-4	2	Washer-Lock
25	104-2946	4	Washer-Plain
26	104-3047	1	Top Frame ASM
27	104-3048	1	Handle-Lift
28	106-5762	1	Cover-Collector
29	106-5763	1	Screw
30	104-2952	6	Washer-Rubber
34	104-3242	1	Decal-Bag To Frame

● Not illustrated

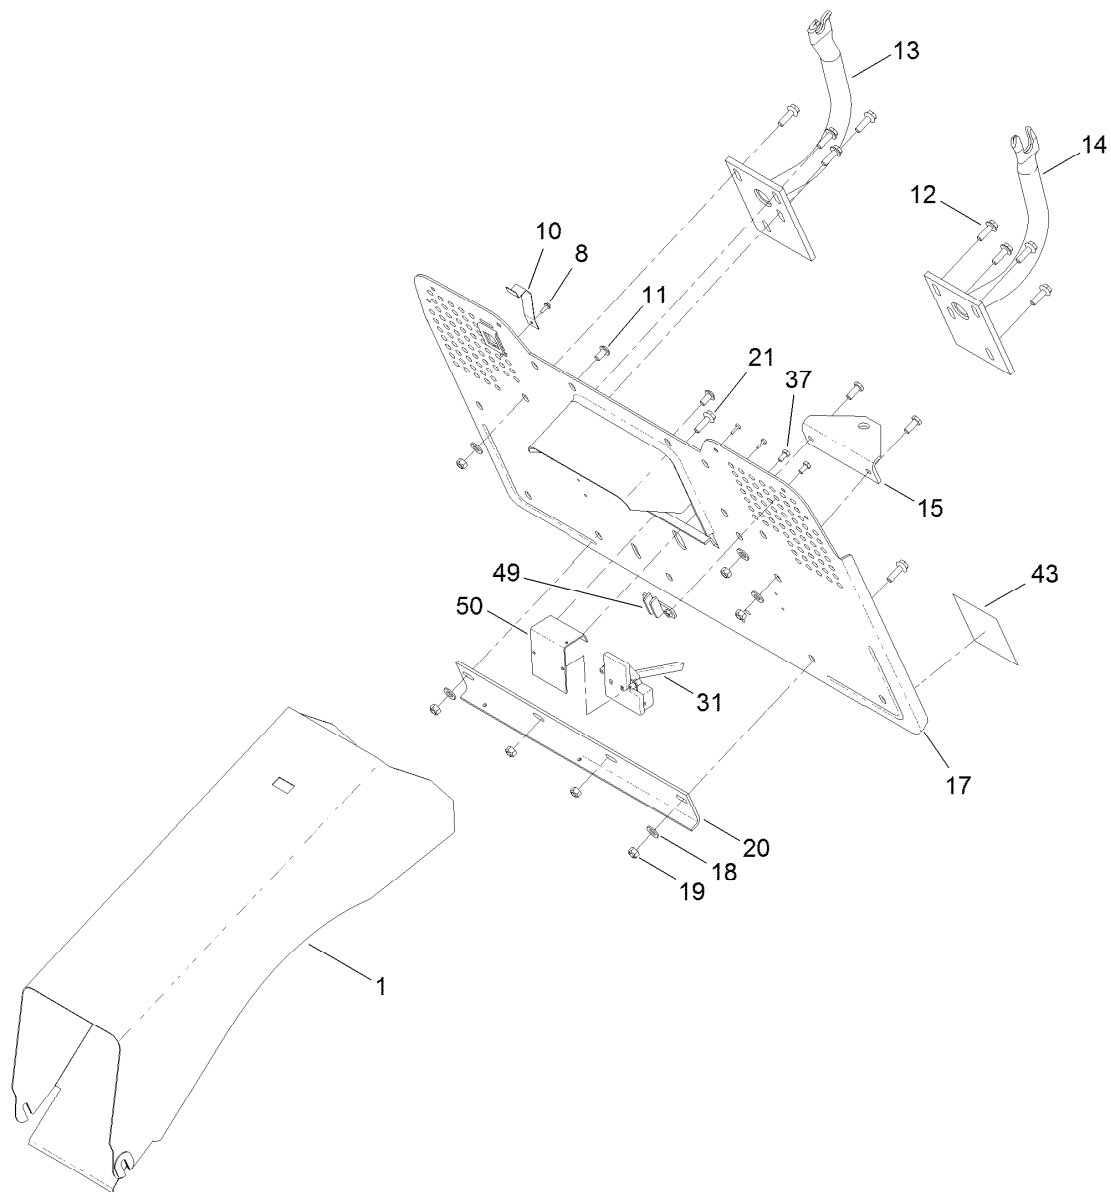


Tunnel Assembly

Ref.	Part Number	Qty.	Description
1	120-8767	1	Tunnel
8	104-2983	1	Screw
10	119-2741	1	Bracket-Bag Present Switch
11	104-3060	2	Bolt-Carriage
12	104-3061	4	Screw
13	104-3062	1	Support-Collector, Right
14	104-3063	1	Support-Collector, Left
15	119-5516	1	Hitch-Tow
17	120-8768	1	Plate-Collector

Ref.	Part Number	Qty.	Description
18	33095-00	8	Washer-Flat
19	33024-00	8	Nut-Lock
20	120-8769	1	Bracket-Hitch, Support
21	104-3068	6	Screw-Hex
31	119-5429	1	Switch-Omron
37	33113-012	4	Screw-HH
43	104-3243	1	Decal-Bypass, Hydro
49	110-8688	1	Bracket-Support, Fuel Tank
50	119-5431	1	Bracket-Switch Omron


Deck, Spindle and Blade Assembly

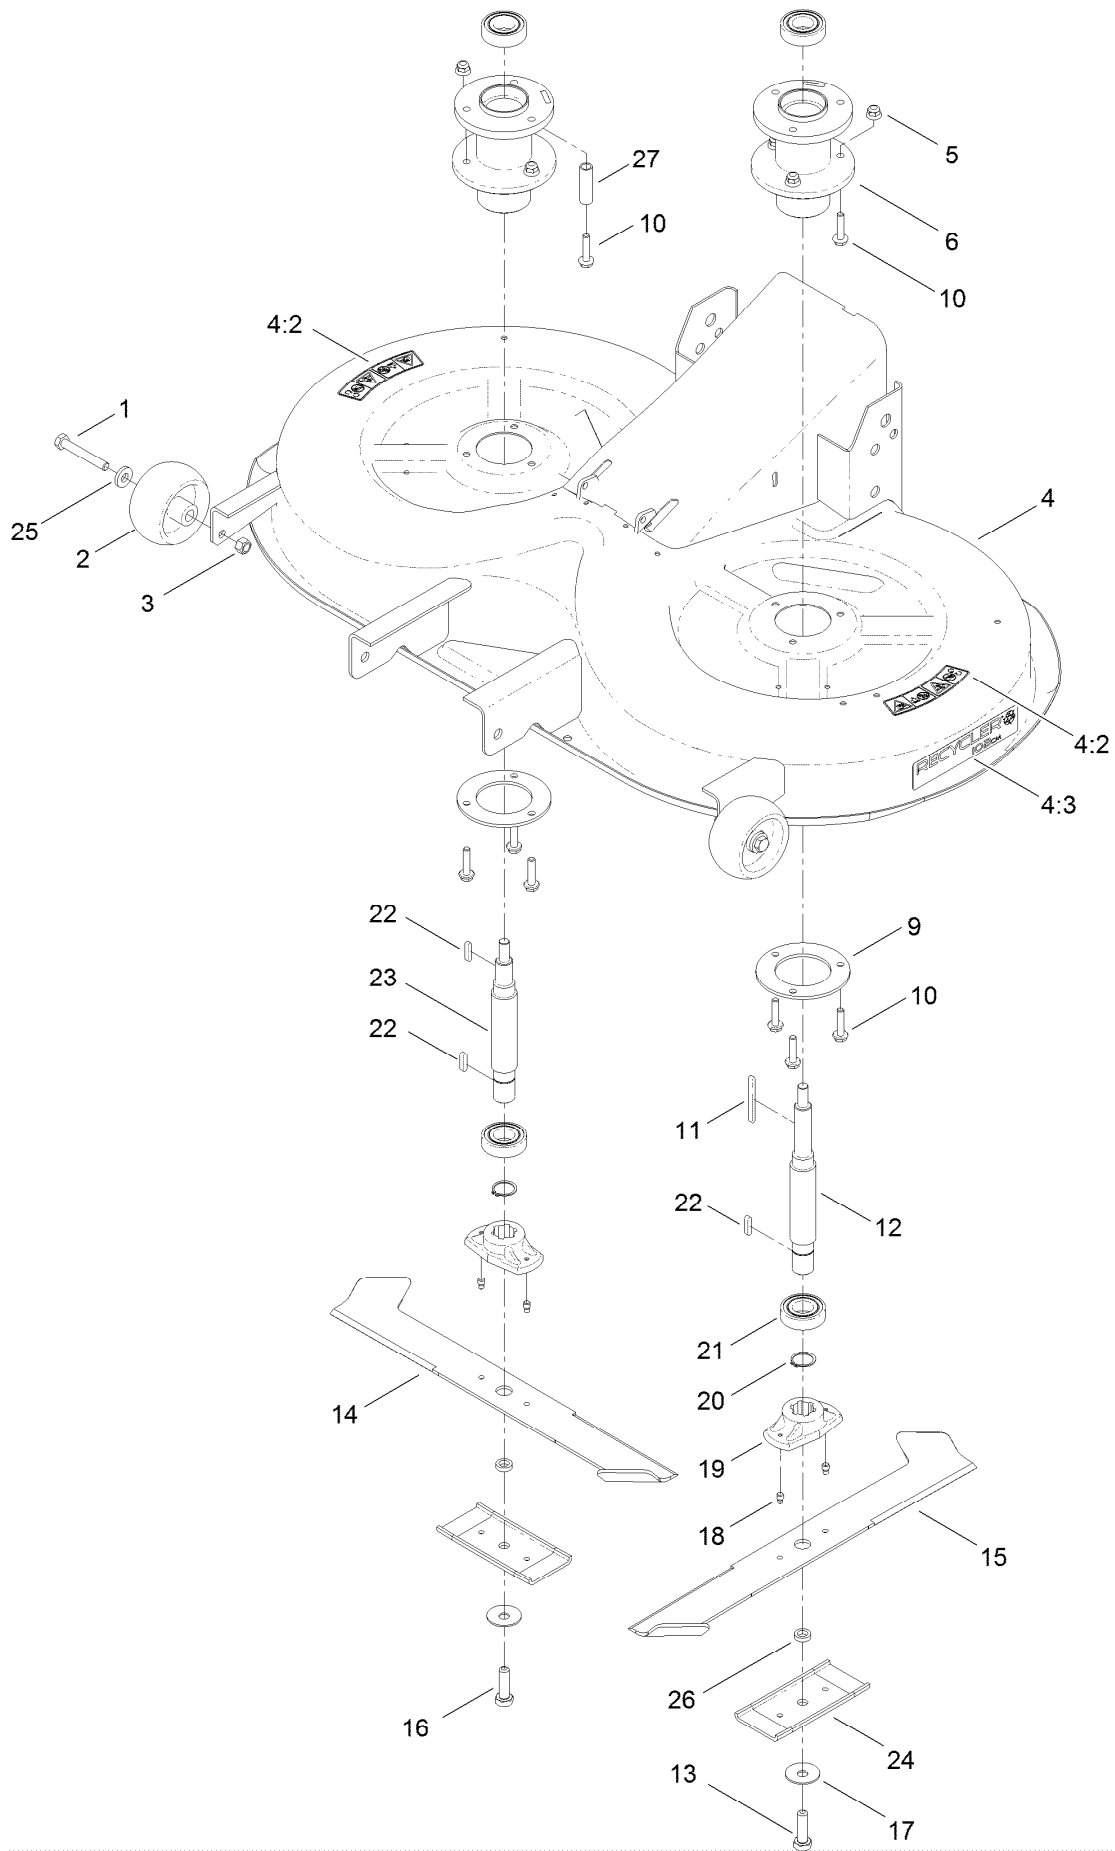

Deck, Spindle and Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	33115-070	2	Screw-HH	15	106-8558	1	Blade-LH
2	120-8759	2	Wheel-Gauge	16	106-5798	1	Bolt-Blade, HH
3	33025-00	2	Nut-Lock, NI	17	106-6532	2	Washer-Blade
4	120-8780	1	Deck-Assembly, Complete	18	104-3093	4	Pin-Shear, Grooved
4:2	119-2726	2	Decal-Danger	19	106-4185	2	Adapter-Blade
4:3	119-2727	1	Decal-Recycler	20	104-3095	2	Ring-Locking
5	104-3082	12	Nut-Lock, HF	21	116-0720	4	Bearing-Ball
6	107-8992	2	Housing-Spindle	22	104-3097	3	Key-Square
9	104-3084	2	Support-Ring	23	106-8566	1	Shaft-Blade, Right
10	104-3085	12	Bolt-HHF	24	106-6533	2	Stiffener-Blade
11	104-3086	1	Key	25	108-8709	2	Washer-Flat
12	106-8565	1	Shaft-Blade, Left	26	106-6530	2	Spacer
13	106-5797	1	Bolt-HH, Blade	27	120-8738	2	Spacer
14	106-8557	1	Blade-RH				


Rear Baffle and Bag on Demand Assembly

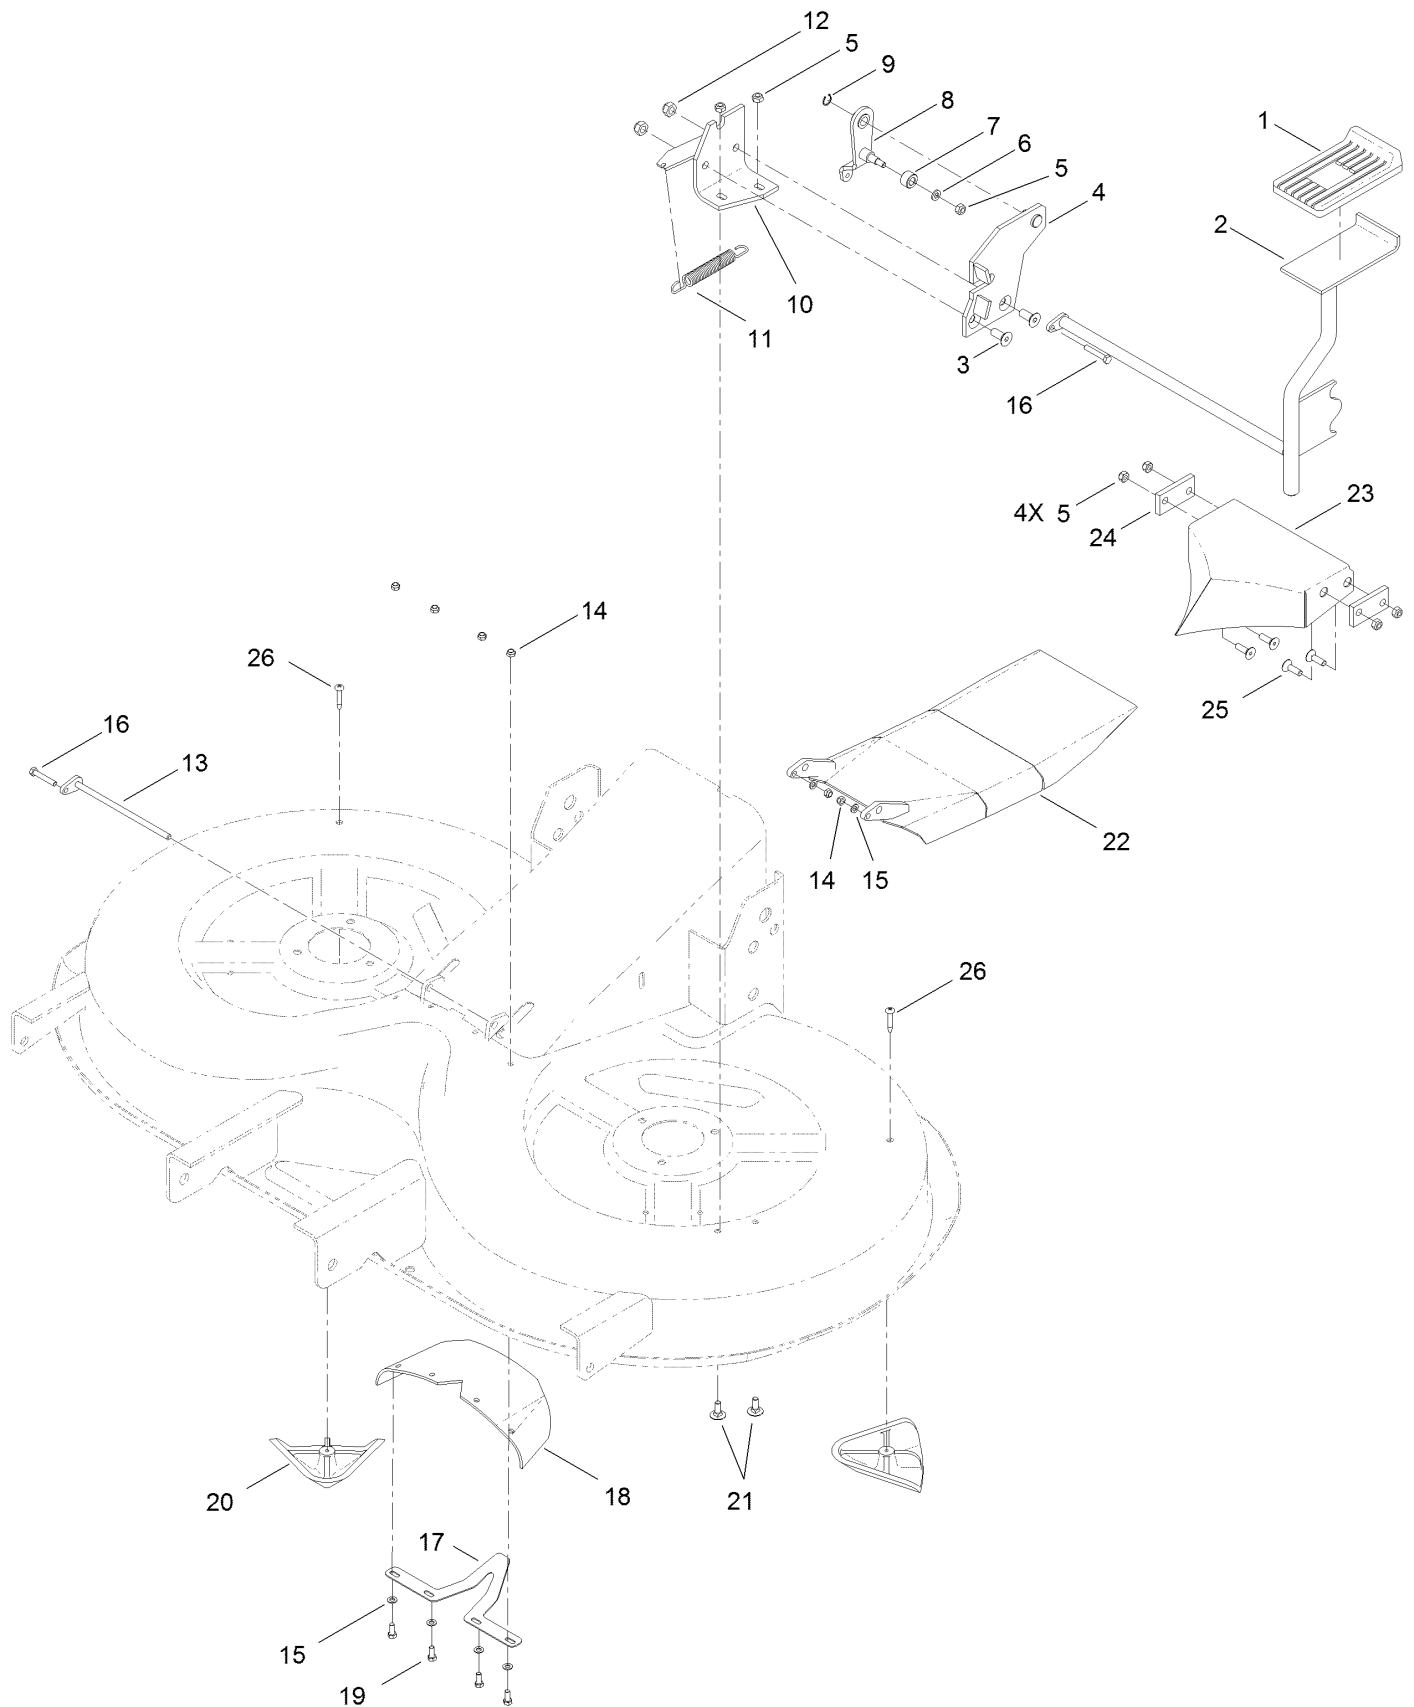

Rear Baffle and Bag on Demand Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-8583	1	Cover-Lever, Foot	14	87-5140	6	Nut-Lock
2	106-8582	1	Lever-Foot	15	52-6430	6	Washer
3	100-8159	2	Screw-HSFH	16	87-5150	2	Bolt
4	106-8578	1	Plate-Stop	17	106-8567	2	Guide
5	33023-00	7	Nut-Lock	18	106-8586	1	Gasket-Door, Mulch
6	33093-00	1	Washer-Flat	19	106-8575	4	Screw-HH
7	106-8581	1	Roller	20	106-8587	2	Kicker
8	106-8579	1	Lever-Spring	21	33123-016	2	Screw-CARR
9	106-8592	1	Ring-Locking	22	107-8968	1	Door-Mulch
10	106-8577	1	Bracket-Mounting	23	106-8573	1	Baffle-Center
11	106-8580	1	Spring	24	106-8572	2	Plate-Baffel, Center
12	48-9510	2	Nut	25	106-8574	4	Screw
13	106-8585	1	Rod-Door, Mulch	26	104-1451	2	Screw-TAP, PPH

Cutting Pan and Drive System Assembly

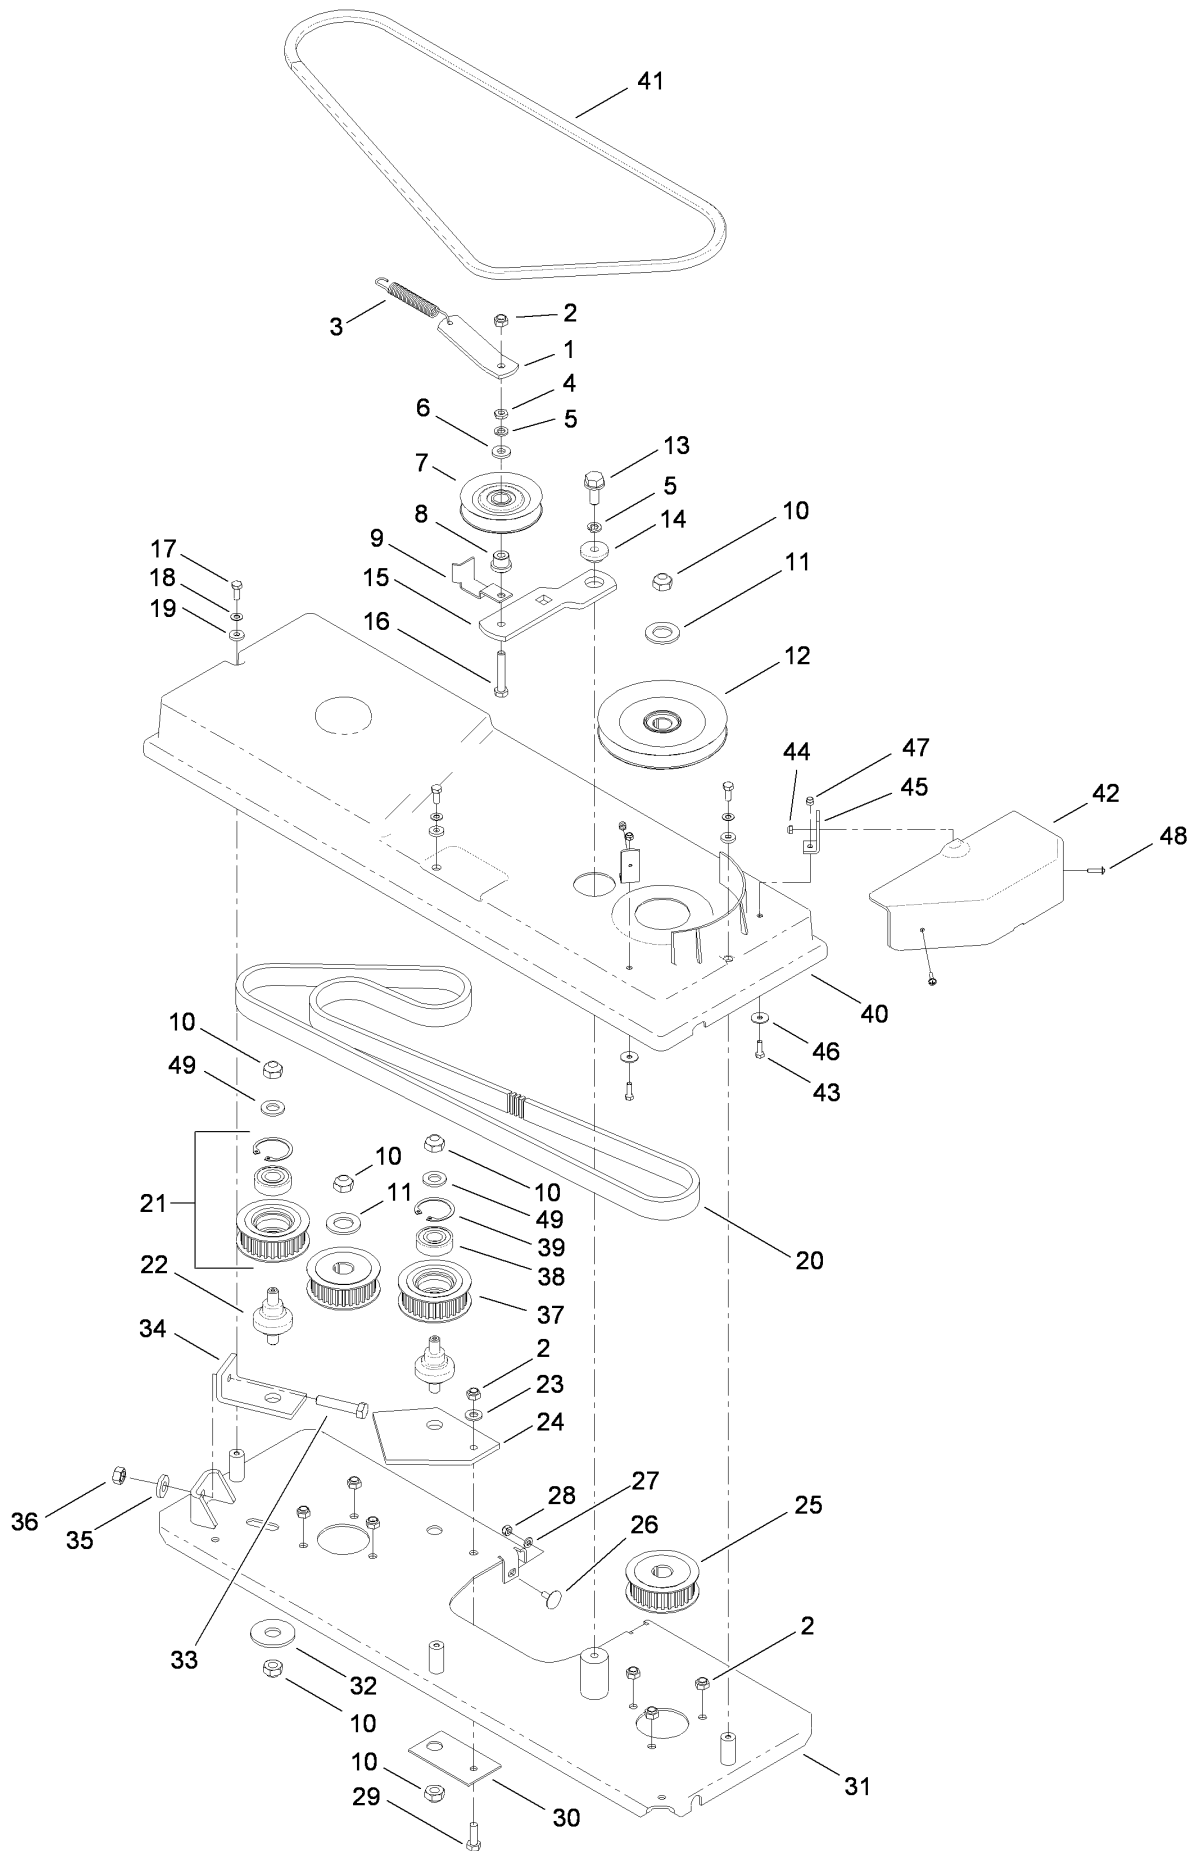

Cutting Pan and Drive System Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-3099	1	Lever-Engagement	26	33123-016	2	Screw-CARR
2	48-9510	8	Nut	27	33093-00	2	Washer-Flat
3	104-3101	1	Spring	28	33023-00	2	Nut-Lock
4	57-6390	1	Nut-Jam	29	33114-025	3	Screw-HH
5	3253-4	1	Washer-Lock	30	104-3117	1	Plate-Anchor
6	106-8588	1	Washer-Flat	31	107-8996	1	Plate-Drive, Blade
7	104-3103	1	Pulley-Idler	32	104-2909	1	Washer
8	104-3104	1	Bushing	33	33115-050	1	Screw-HH
9	104-3105	1	Retainer-Belt	34	104-3120	1	Bracket-Idler
10	48-9540	6	Nut-Lock, Hex NI	35	108-8709	1	Washer-Flat
11	33099-00	4	Washer-Flat	36	48-9520	1	Nut
12	104-3107	1	Pulley-Drive	37	104-3121	1	Pulley-Cog
13	33105-025	1	Screw-HHF	38	100-1048	1	Bearing-Ball
14	107-8995	1	Shim-Arm, Idler	39	104-3123	1	Ring-Locking
15	104-3109	1	Arm-Idler	40	106-8589	1	Belt-Cover
16	33114-050	1	Screw-HH	41	104-3126	1	V-Belt
17	33113-016	3	Screw-HH	42	107-8941	1	Guard-Belt
18	106-8568	3	Washer-Flat	43	60-6910	2	Screw
19	83-7420	3	Washer-Rubber	44	87-5140	2	Nut-Lock
20	106-8591	1	Belt-Cog	45	107-8940	2	Bracket
21	104-3113	2	Cog Pulley ASM	46	3256-61	4	Washer-Flat
22	104-3114	2	Pin-Pulley, Cog	47	46-0430	2	Nut-Lock
23	33094-00	1	Washer-Plain	48	107-8918	2	Screw
24	104-3115	1	Support-Pulley	49	33096-00	2	Washer-Flat
25	104-3116	2	Pulley-Cog, Drive				

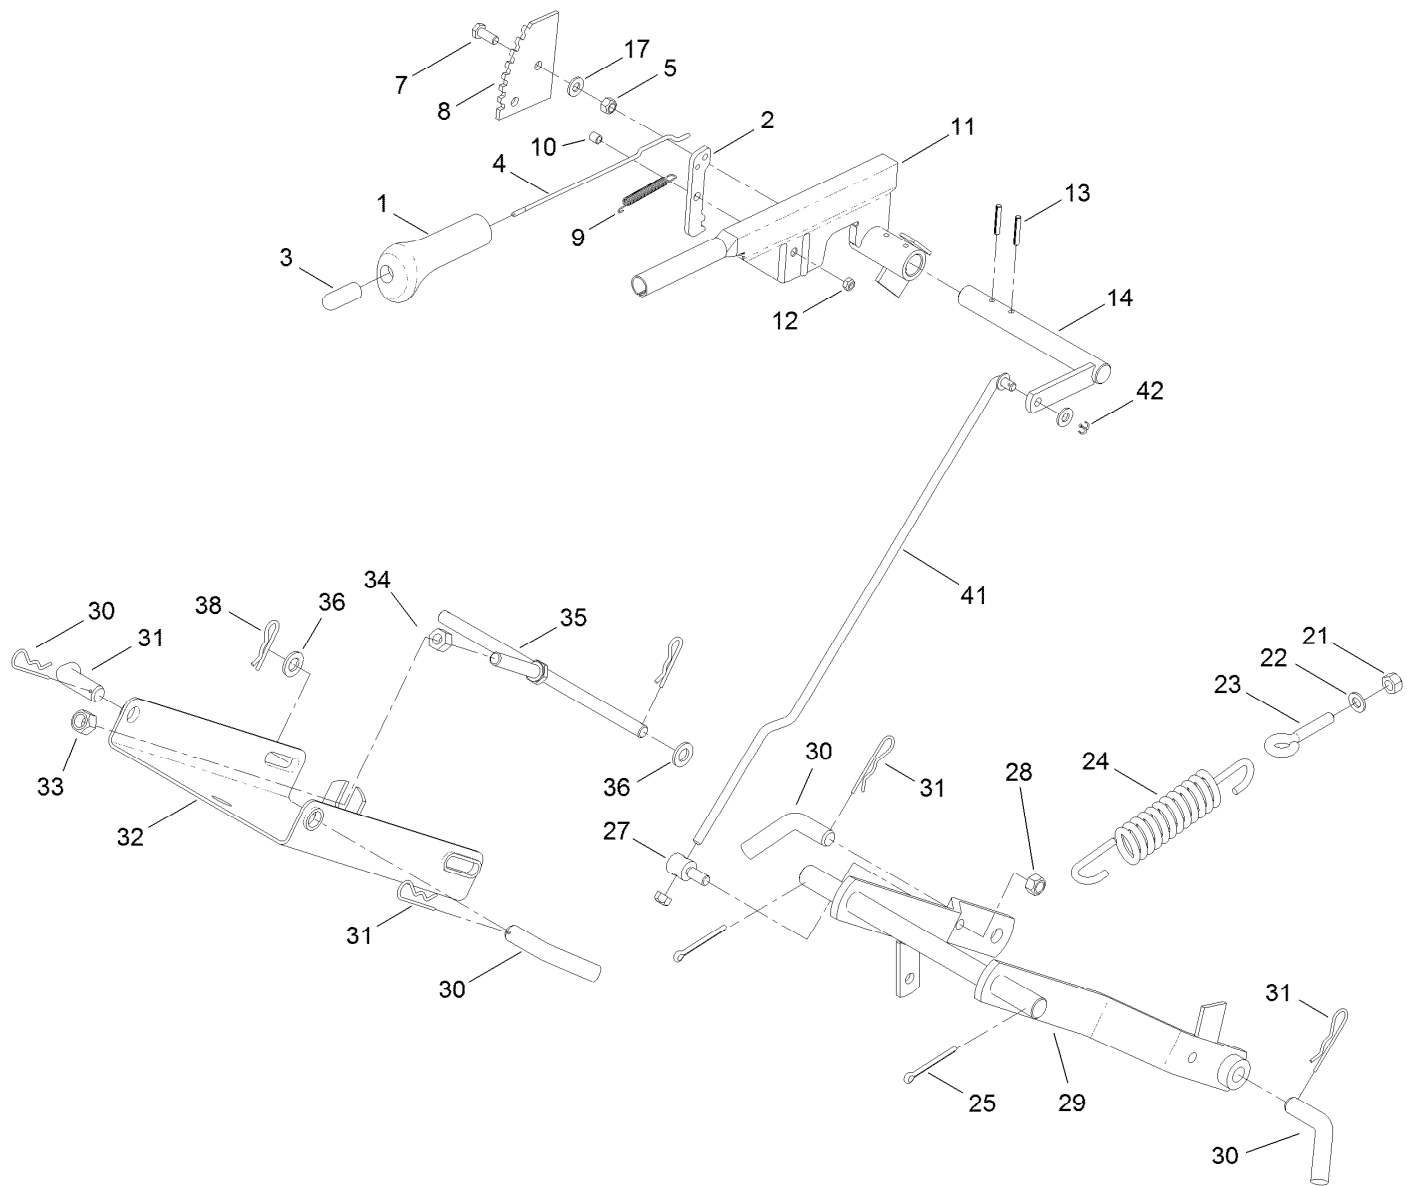

Mower Lift Assembly

Ref.	Part Number	Qty.	Description
1	104-3129	1	Grip-Handle
2	104-3130	1	Ratchet-Plate, Pivot
3	104-3131	1	Button-Plunger
4	104-3132	1	Rod-Connection
5	33024-00	3	Nut-Lock
7	33114-020	2	Screw-HH
8	114-3244	1	Gear-Segment, Deck Lift
9	104-3134	1	Spring
10	120-8754	1	Bushing
11	104-3136	1	Lever-Arm, Height Adj.
12	33023-00	1	Nut-Lock
13	104-2994	2	Pin-Spring
14	114-3245	1	Shaft-Lift, Deck
17	33094-00	3	Washer-Plain
21	33025-00	1	Nut-Lock, NI
22	33095-00	1	Washer-Flat
23	104-3139	1	Bolt-Eye

Ref.	Part Number	Qty.	Description
24	104-3140	1	Spring-Lift
25	104-3141	1	Pivot Arm ASM
27	104-3142	1	Pin-Lifting
28	33025-00	1	Nut-Lock, NI
29	104-3016	2	Pin-Cotter
30	120-8757	4	Pin-Deck, Suspension Front
31	104-3144	4	Pin-Hair
32	120-8758	1	Suspension-Mower Deck, Front
33	33026-00	1	Nut-Lock
34	33016-00	1	Nut-Hex
35	120-8771	1	Shaft
36	104-3124	2	Washer-Flat
38	104-3148	2	Pin-Hair
41	104-3149	1	Rod-Height, Adj.
42	104-3151	1	Pin-Cotter

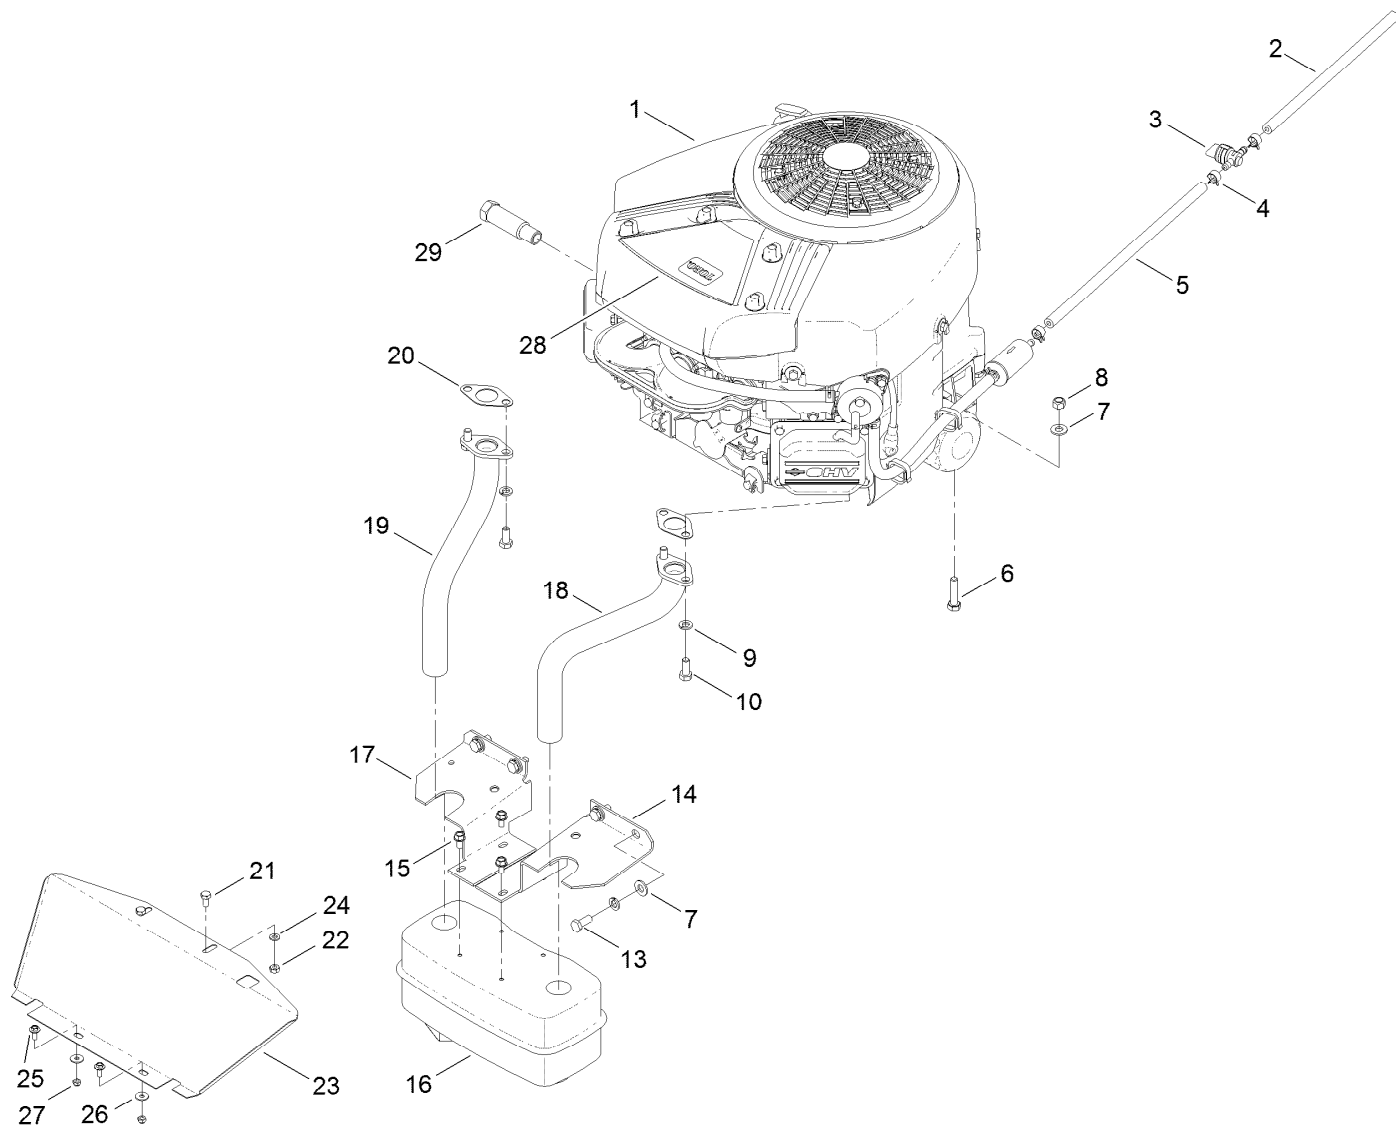


Engine and Muffler Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Briggs, 406777-0113-B1 ●■
2	110-8692	1	Line-Fuel
3	104-3224	1	Valve-Tank, Fuel
4	104-3212	4	Clamp-Line, Fuel
5	110-8696	1	Line-Fuel
6	33114-035	4	Screw-HH
7	33094-00	8	Washer-Plain
8	33024-00	4	Nut-Lock
9	104-2927	8	Washer-Spring
10	322-3	4	Screw-HH
13	33114-020	4	Screw-HH
14	104-3214	1	Guard-Muffler, LH
15	106-5763	4	Screw

Ref.	Part Number	Qty.	Description
16	104-3225	1	Muffler
17	104-3215	1	Guard-Muffler, RH
18	104-3216	1	Tube-Exhaust, LH
19	104-3217	1	Tube-Exhaust, RH
20	104-3226	2	Gasket-Exhaust
21	33113-012	2	Screw-HH
22	33023-00	2	Nut-Lock
23	104-3219	1	Shield-Heat
24	33093-00	2	Washer-Flat
25	104-2980	2	Screw
26	104-2943	2	Washer-Flat
27	87-5140	2	Nut-Lock
28	117-7820	1	Decal-Engine
29	120-8755	1	Coupler-Oil Drain

● Not serviced separately


■ Obtain parts from www.briggsandstratton.com

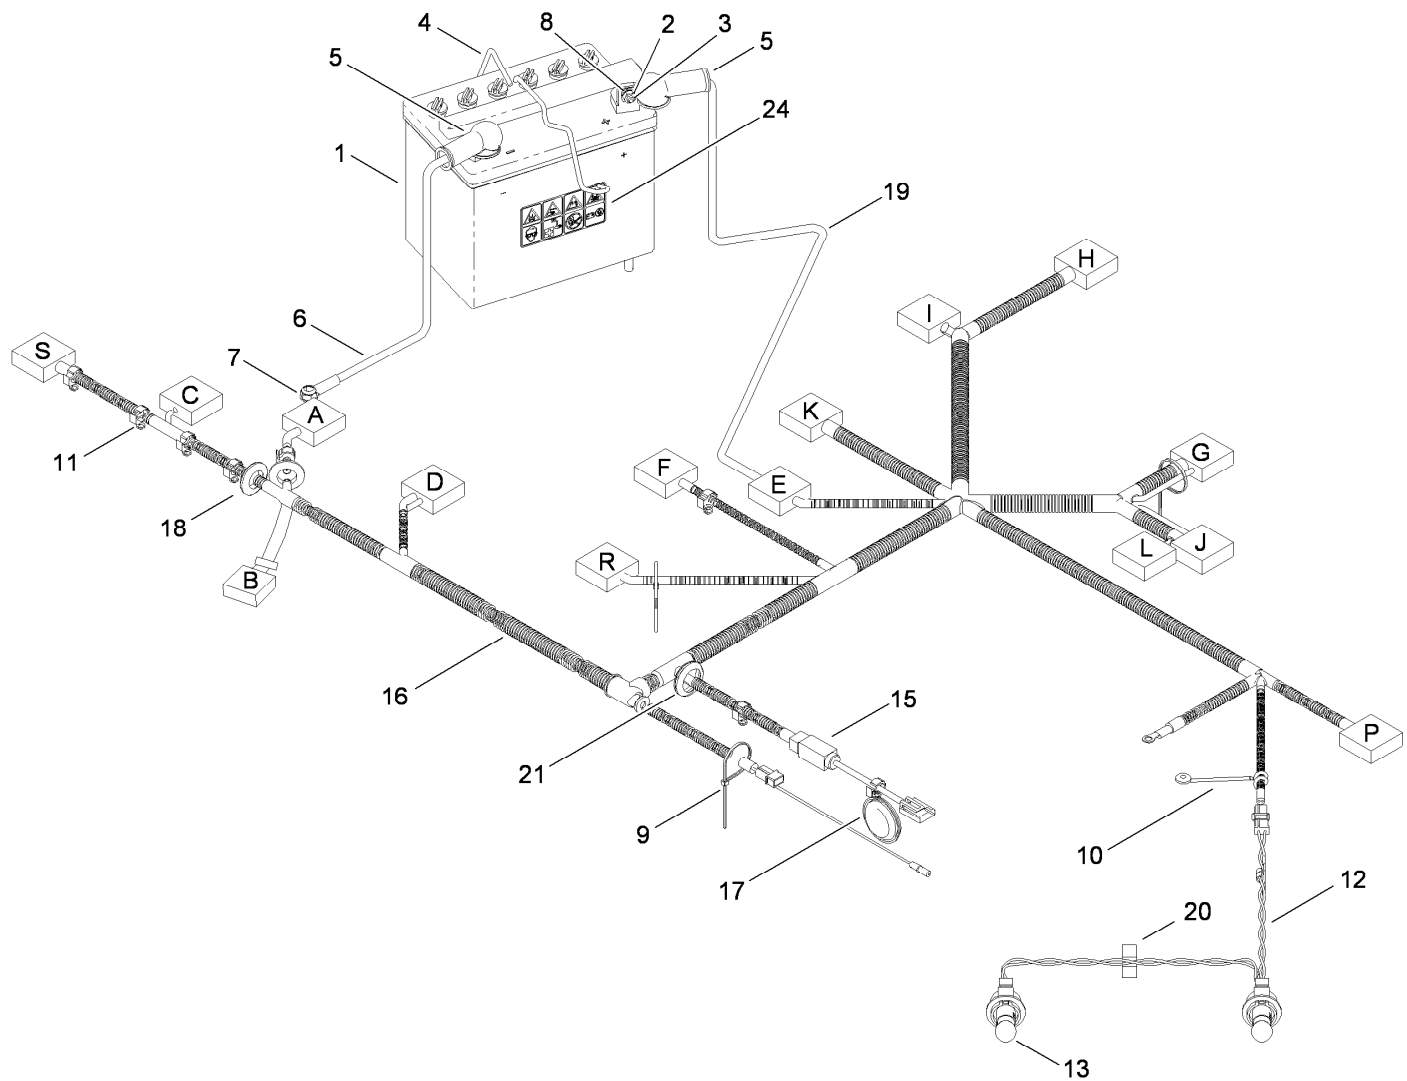

Battery and Electrical Harness Assembly

Ref.	Part Number	Qty.	Description
1	104-2491	1	Battery
2	33013-00	2	Nut-Hex
3	33113-016	2	Screw-HH
4	119-2799	1	Clamp-Battery
5	104-3154	2	Boot-Rubber
6	110-8678	1	Cable-Battery, Negative
7	33024-00	1	Nut-Lock
8	33093-00	2	Washer-Flat
9	3334-945	3	Cable Tie
10	104-3156	1	Holder-Harness, Wiring
11	104-3157	9	Clip-Snap





Ref.	Part Number	Qty.	Description
12	114-3128	1	Harness-Wire, Light
13	114-3129	2	Bulb-Light
15	104-3160	1	Harness-Clutch
16	120-8764	1	Harness-Wiring
17	104-3163	1	Cap
18	104-3165	2	Bushing
19	110-8677	1	Cable-Battery, Positive
20	104-3167	2	Clip-Nylon
21	104-3168	1	Bushing
24	93-7276	1	Decal-Danger

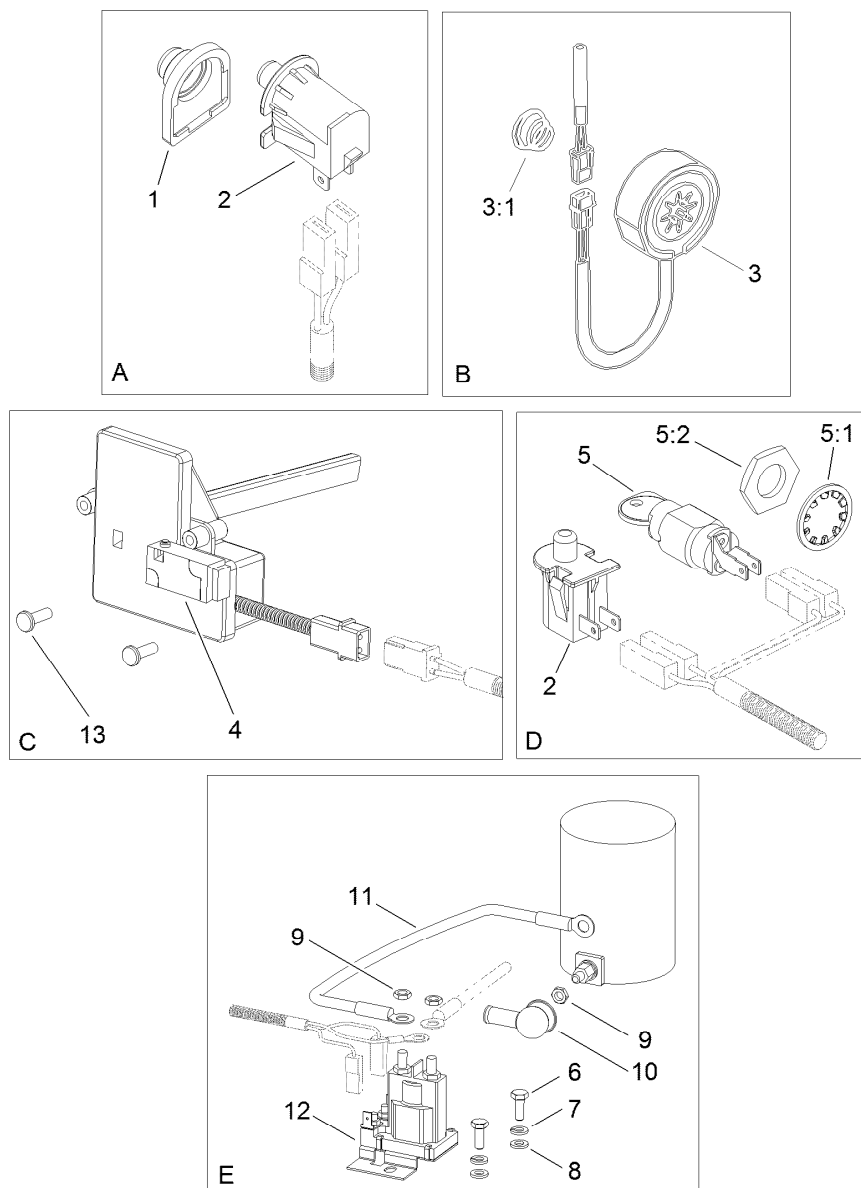

Electrical Switch No. 2 Assembly

Ref.	Part Number	Qty.	Description
1	104-3178	2	Cover-Protective
2	104-3179	3	Switch-Delta
3	99-8090	1	Magnet ASM
3:1	93-6601	1	Spring-Compression
4	119-5429	1	Switch-Omron
5	46-5780	1	Starter Switch ASM
5:1	3254-5	1	Washer-Tooth, Internal
5:2	218-461	1	Nut-HH


Ref.	Part Number	Qty.	Description
6	33113-012	2	Screw-HH
7	104-3186	2	Washer-Spring
8	33093-00	2	Washer-Flat
9	32128-32	3	Nut-HHF
10	104-3187	1	Boot-Rubber
11	104-3188	1	Lead-Starter, Electric
12	104-3189	1	Solenoid
13	104-3349	2	Screw

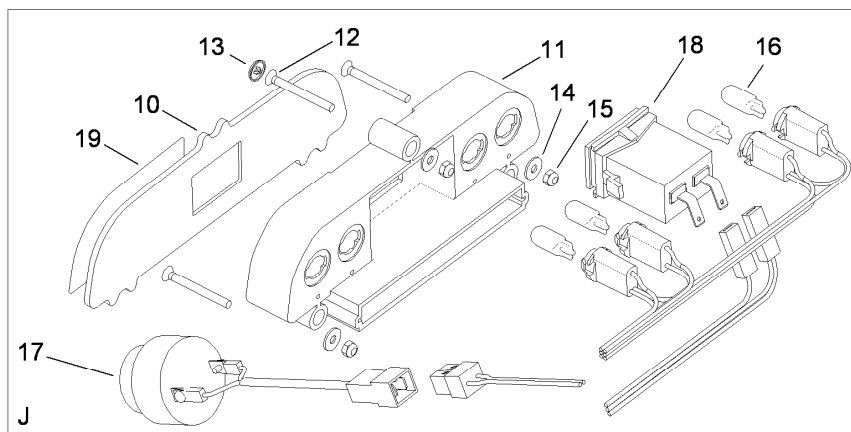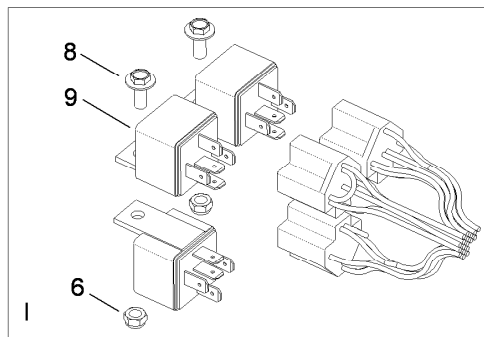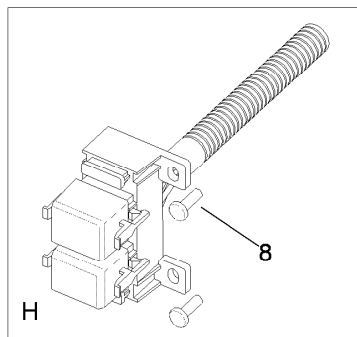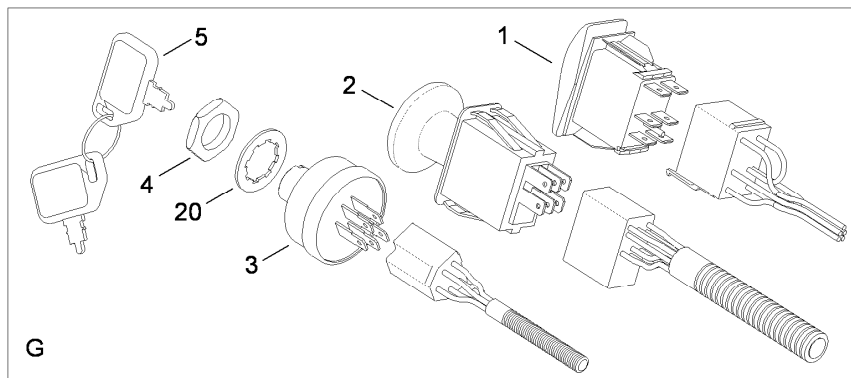

Electrical Switch Assembly No. 2

Ref.	Part Number	Qty.	Description
1	93-0527	1	Switch-Cruise
2	93-9998	1	Switch-PTO
3	92-6785	1	Switch-Ignition
4	218-461	1	Nut-HH
5	62-7770	2	Key-Ignition
6	87-5140	2	Nut-Lock
8	104-2978	4	Screw-Hex
9	104-3173	3	Relay
10	92-6705	1	Lens-Dash
11	92-6732	1	Housing-Light, Indicator

Ref.	Part Number	Qty.	Description
12	104-3191	3	Screw
13	104-3174	3	Cap-Screw
14	104-3175	3	Washer
15	104-2985	3	Nut-Hex
16	104-3176	4	Bulb
17	104-3177	1	Buzzer
18	94-4208	1	Hourmeter
19	104-2854	1	Decal-Dash
20	3254-5	1	Washer-Tooth, Internal

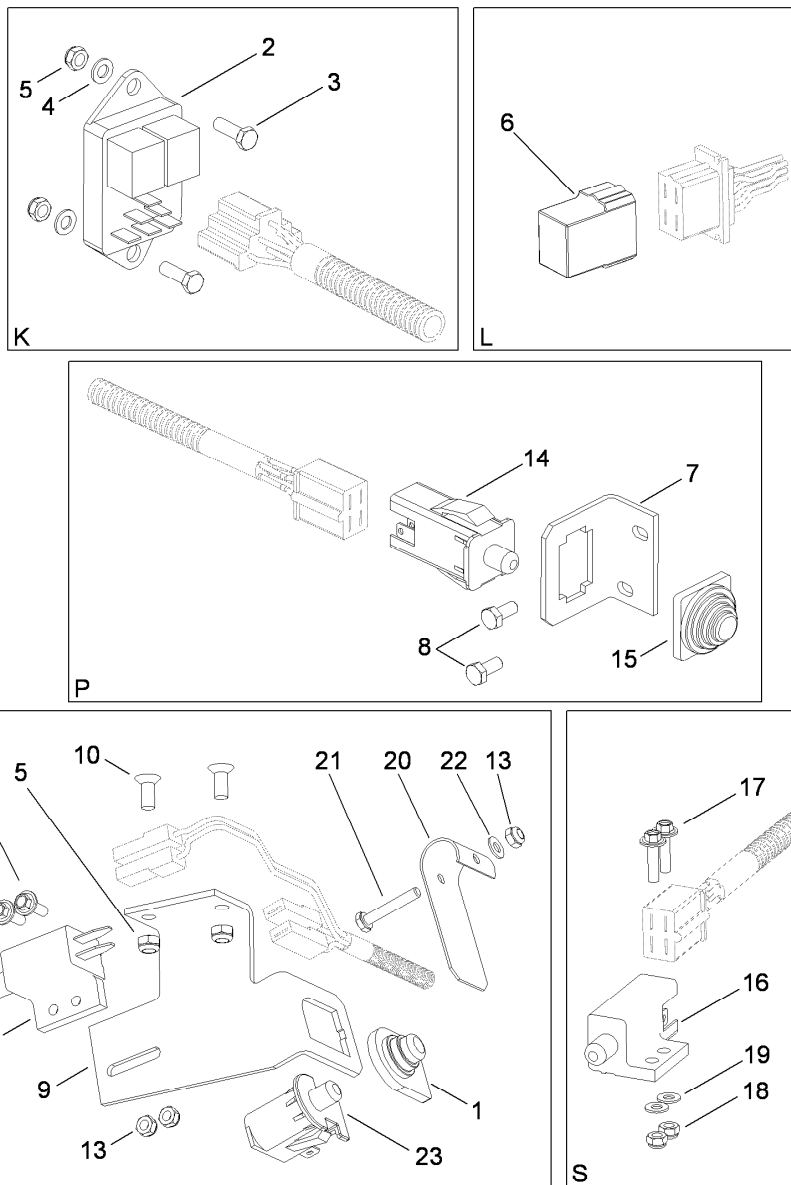

Electrical Switch Assembly No. 3

Ref.	Part Number	Qty.	Description
1	104-3178	1	Cover-Protective
2	99-3701	1	Module-Clutch
3	60-6910	2	Screw
4	52-6430	2	Washer
5	87-5140	4	Nut-Lock
6	104-3169	1	Circuit-Memory
7	104-3333	1	Holder-Switch
8	104-3190	2	Screw
9	104-3332	1	Holder-Switch
10	104-2980	2	Screw
11	95-1653	1	Switch-Pole, Single
12	104-2983	2	Screw

Ref.	Part Number	Qty.	Description
13	104-2985	3	Nut-Hex
14	104-3338	1	Switch-Delta
15	104-3339	1	Cover-Switch
16	104-3330	1	Switch-Delta
17	104-3331	2	Bolt
18	46-0430	2	Nut-Lock
19	52-6430	2	Washer
20	106-5765	1	Lever-Spring
21	104-3009	1	Screw-Hex
22	106-5766	1	Washer
23	104-3180	1	Switch-Delta

Attachments and Accessories

For 74593 DH 220 Lawn Tractor

Product Name	Model/Part
Bagging Blade Kit, 2003 and After DH Series Lawn Tractors	106-8559
Belt Guard Kit	120-1190
Rear Discharge Kit.....	79471

Notes:

Notes:

Notes:



Count on it.