



Count on it.

Parts Catalog

Eductor Kit

Multi-Pro® 5800 Turf Sprayer

Model No. 41612—Serial No. 311000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Eductor Kit.....	4
Cleanload Assembly No. 119-0477.....	6

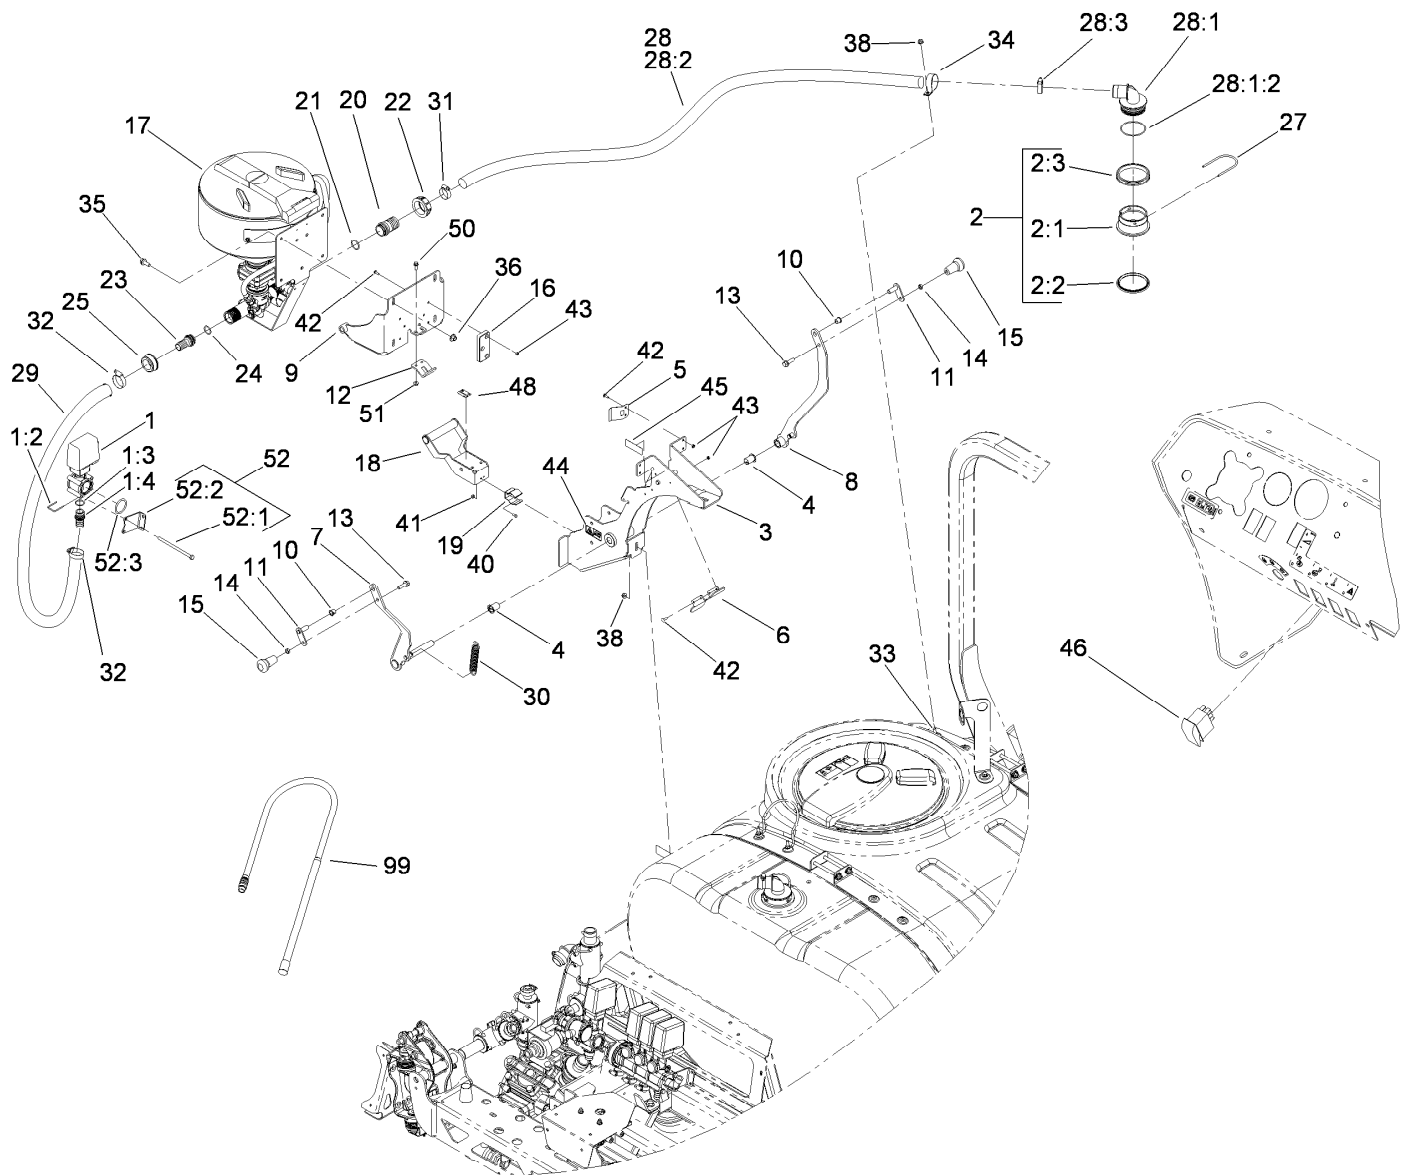

Eductor Kit

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	119-0488	1	Valve ASM	14	3218-3	2	Nut-Jam
1:2	119-4862	1	Fork	15	99-7981	2	Knob-Grip, Soft
1:3	119-4868	1	O-Ring	16	119-4963	2	Pad-Wear
1:4	117-7992	1	Hosebarb	17	119-0477	1	Cleanload ASM
2	117-7851	1	Bulkhead ASM	18	119-4971-03	1	Handle ASM
2:1	117-7850	1	Fitting-Bulkhead	19	119-4937	1	Clip-Spring
2:2	100-8646	1	Gasket-Bulkhead	20	117-7877	1	Hosebarb
2:3	100-8647	1	Nut-Bulkhead	21	117-7922	1	O-Ring
3	119-4934-03	1	Eductor-Mount	22	117-7879	1	Nut-Fly
4	100-8541	2	Bushing-A Arm	23	117-7973	1	Hosebarb
5	119-4951	2	Tab-Spring	24	110-5239	1	O-Ring
6	119-4962	1	Plate-Strike	25	110-5247	1	Nut-Fly
7	119-4907-03	1	Arm-Pivot, LH	27	117-7996	1	Fork
8	119-4908-03	1	Arm-Pivot, RH	28		1	Main Eductor Hose ASM ●
9	119-4912-03	1	Pivot Plate ASM	28:1	117-7870	1	Hosebarb ASM
10	256-257	2	Bushing-Nyliner	28:1:2	100-6989	1	O-Ring
11	119-4918	2	Pin-Pivot	28:2	119-0474	1	Hose-Main Supply
12	119-4928	1	Bracket-Latch	28:3	41327	1	Clamp-Hose
13	3234-24	2	Screw-HHF	29	119-0473	1	Hose-Supply

● Not serviced separately

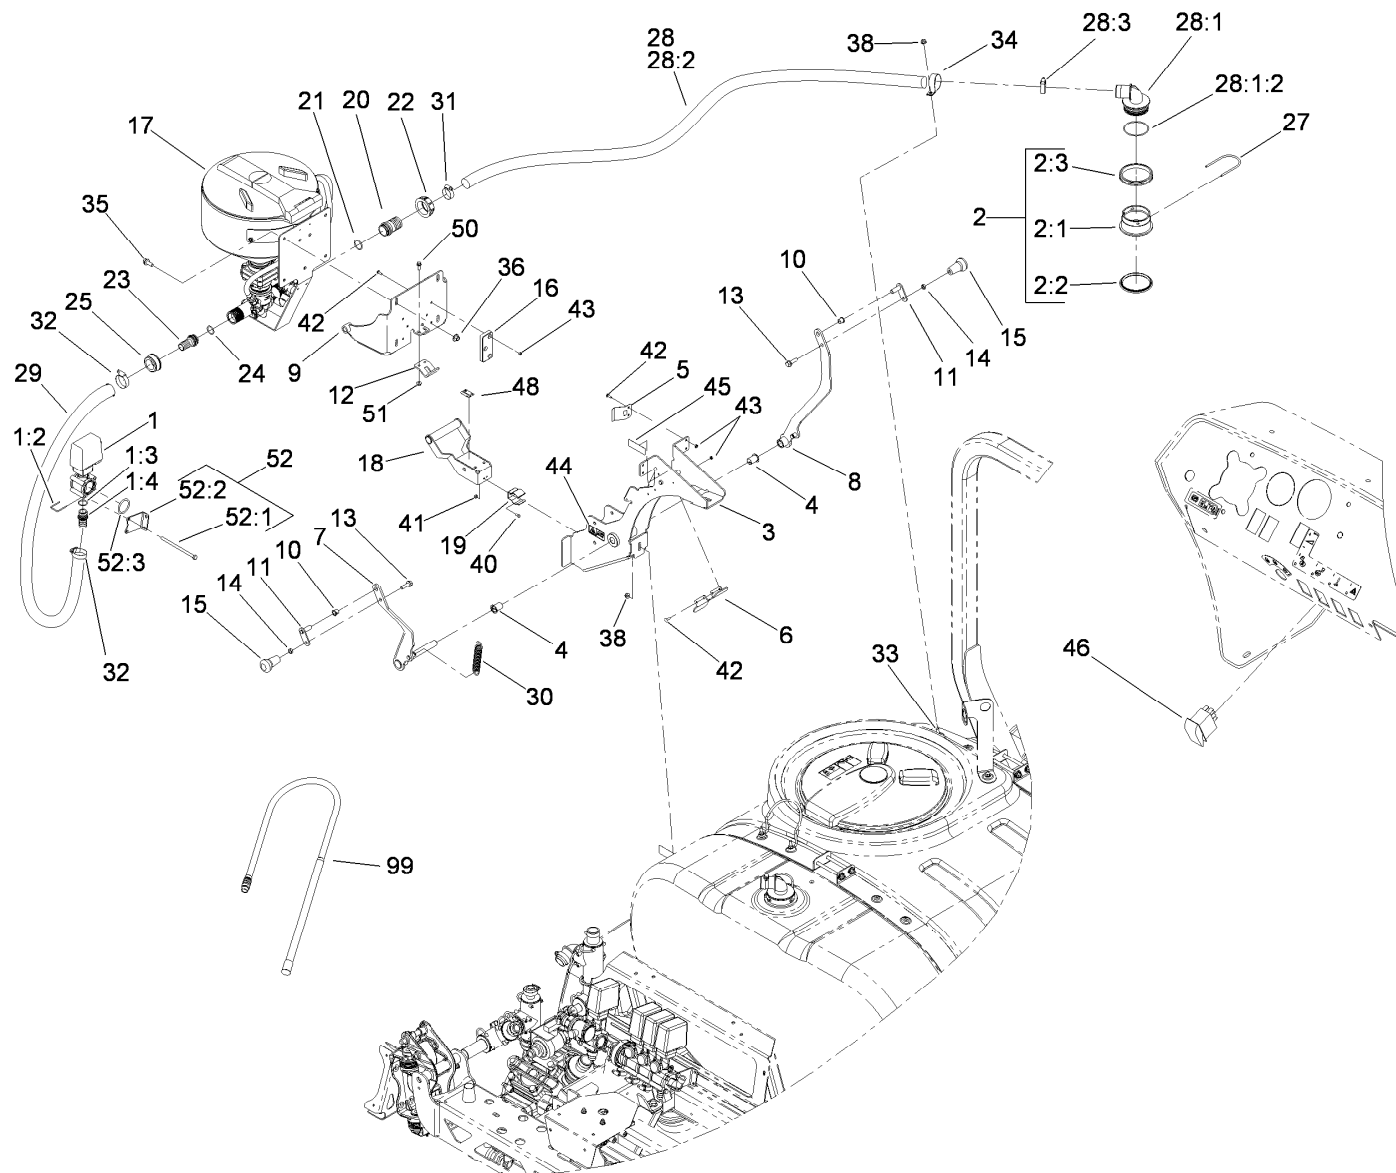


Eductor Kit (continued)

Ref.	Part Number	Qty.	Description
30	100071	2	Spring-Extension
31	41327	1	Clamp-Hose
32	2412-3	2	Clamp-Hose
33	3230-2	1	Bolt-CARR
34	2412-96	1	Clamp-R
35	3234-11	4	Screw-HHF
36	32128-43	4	Nut-Flange
38	104-8300	2	Nut-Flange, NI
40	3250-12	2	Screw-PPH
41	3296-2	2	Nut-Lock, NI
42	1-807533	14	Bolt-CARR
43	3296-12	14	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
44	93-6674	2	Decal-Warning
45	119-4986	1	Decal-Regulatory
46	100-8490	1	Switch-Rocker
48	119-4988	1	Decal-Mp, Lock
50	3234-4	2	Screw-HHF
51	32128-33	2	Nut-HF
52		1	Bracket Mounting Kit ●
52:1	119-4879	4	Screw-HH
52:2	119-4952	1	Bracket-Mount
52:3	119-4870	1	O-Ring
99	120-0651	1	Lance-Eductor

● Not serviced separately

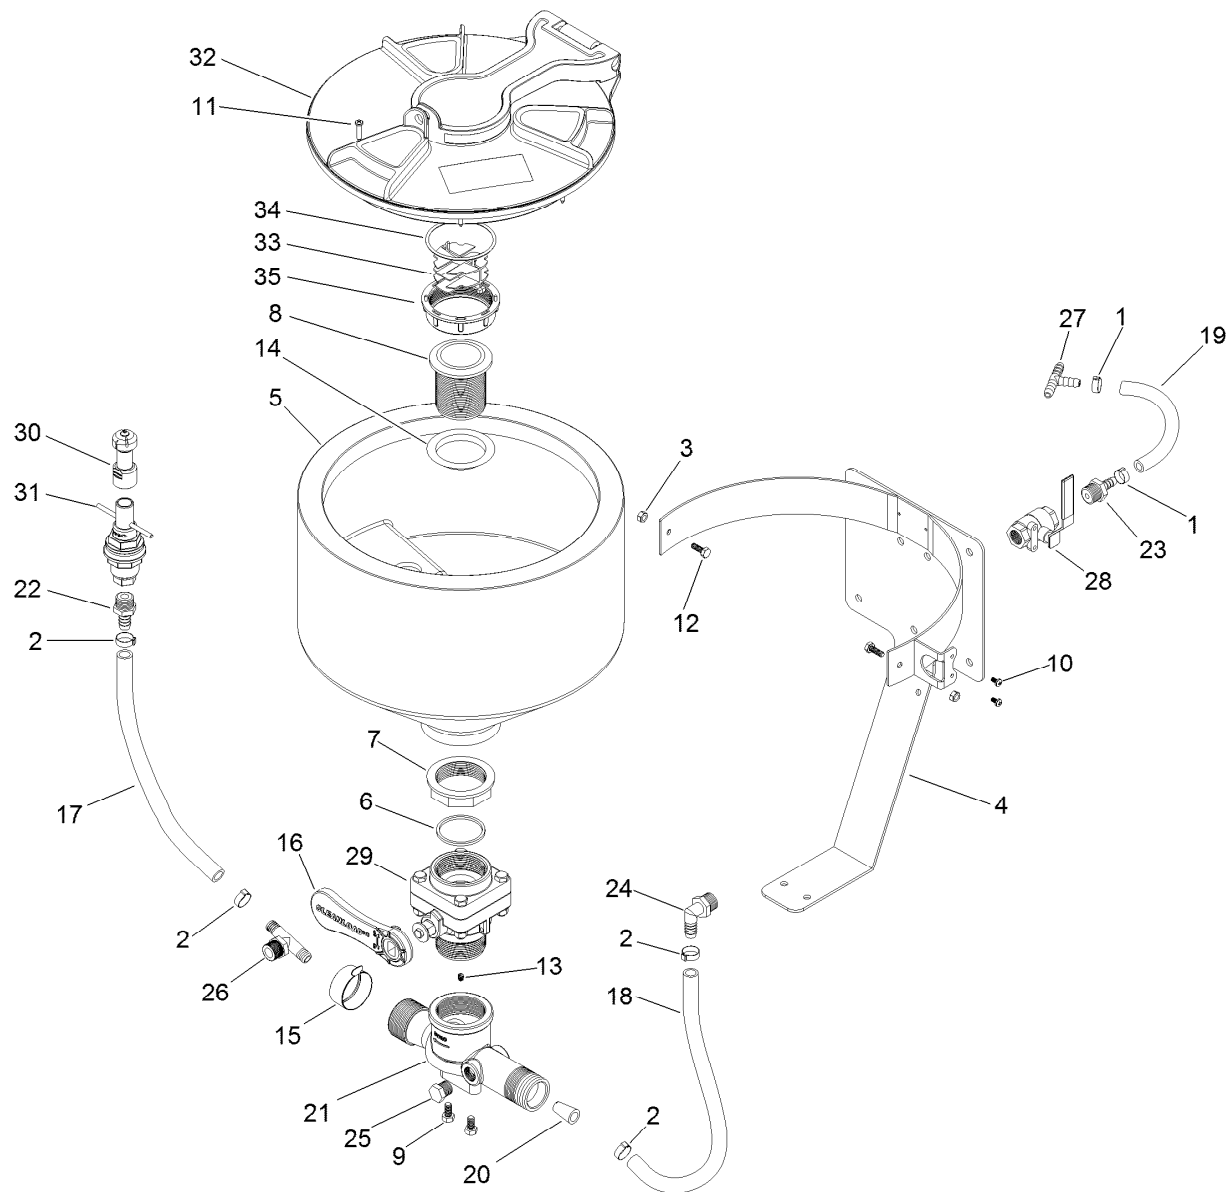

Cleanload Assembly No. 119-0477

Ref.	Part Number	Qty.	Description
1	120-8650	2	Clamp-Hose
2	120-8651	4	Clamp-Hose
3	120-8652	2	Nut-Hex
4	120-8653	1	Mount-Frame, Back
5	120-8654	1	Tank-5.8 Gallon
6	120-8655	1	Gasket
7	120-8656	1	Ring-Locking
8	120-8657	1	Head-Drain
9	120-8658	2	Screw-HH
10	120-8659	2	Screw
11	120-8660	8	Screw
12	120-8661	2	Bolt
13	120-8662	1	Screw-Set
14	120-8663	1	Gasket
15	120-8664	1	Fitting-Cap
16	120-8665	1	Handle-Valve, Ball
17	120-8666	1	Hose-Bottle, Rinse
18	120-8667	1	Hose-Valve, Feeder

Ref.	Part Number	Qty.	Description
19	120-8668	1	Hose
20	120-8669	1	Orifice-Jet, Agitator
21	120-8670	1	Eductor-Cleanload
22	120-8671	1	Fitting-Hosebarb
23	120-8672	1	Fitting-Hosebarb
24	120-8673	1	Fitting-Elbow, Hosebarb
25	120-8674	1	Fitting-Plug
26	120-8675	1	Fitting-Tee
27	120-8676	1	Fitting-Tee
28	120-8677	1	Valve
29	120-8678	1	Valve-Ball
30	120-8679	1	Proclean Bottlewash ASM
31	120-8680	1	Rinse-Valve
32	120-8681	1	TI-Ring, S/A
33	120-8682	1	Breather-Labyrinth
34	120-8683	1	O-Ring-Breather
35	120-8684	1	Nut-Breather

Notes:



Count on it.