



Count on it.

Parts Catalog

21in Heavy-Duty

Recycler®/Rear Bagger Lawn Mower

Model No. 22188—Serial No. 280000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Housing, Chute and Wheel Assembly	4
Housing Assembly No. 98-7146	5
Wheel and Tire Assembly No. 100-2870	6
Gear Case Assembly No. 74-1860	7
Engine and Blade Assembly	8
Engine and Tank assembly	9
Handle Assembly	10
Control Panel Assembly	11
Rear Drive and Wheel Assembly	12
Rear Wheel Assembly No. 100-2860	13
Grass Bag Assembly No. 106-0975	14
Cylinder and Crankcase Assembly Kawasaki FJ180V-AS30	15
Piston and Crankshaft Assembly Kawasaki FJ180V-AS30	16
Valve and Camshaft Assembly Kawasaki FJ180V-AS30	17
Lubrication Equipment Assembly Kawasaki FJ180V-AS30	18
Cooling Equipment Assembly Kawasaki FJ180V-AS30	19
Electric Equipment Assembly Kawasaki FJ180V-AS30	20
Control Equipment Assembly Kawasaki FJ180V-AS30	21
Carburetor Assembly Kawasaki FJ180V-AS30	22
Air Filter and Muffler Assembly Kawasaki FJ180V-AS30	23
Starter Assembly Kawasaki FJ180V-AS30	24
Label Assembly Kawasaki FJ180V-AS30	25

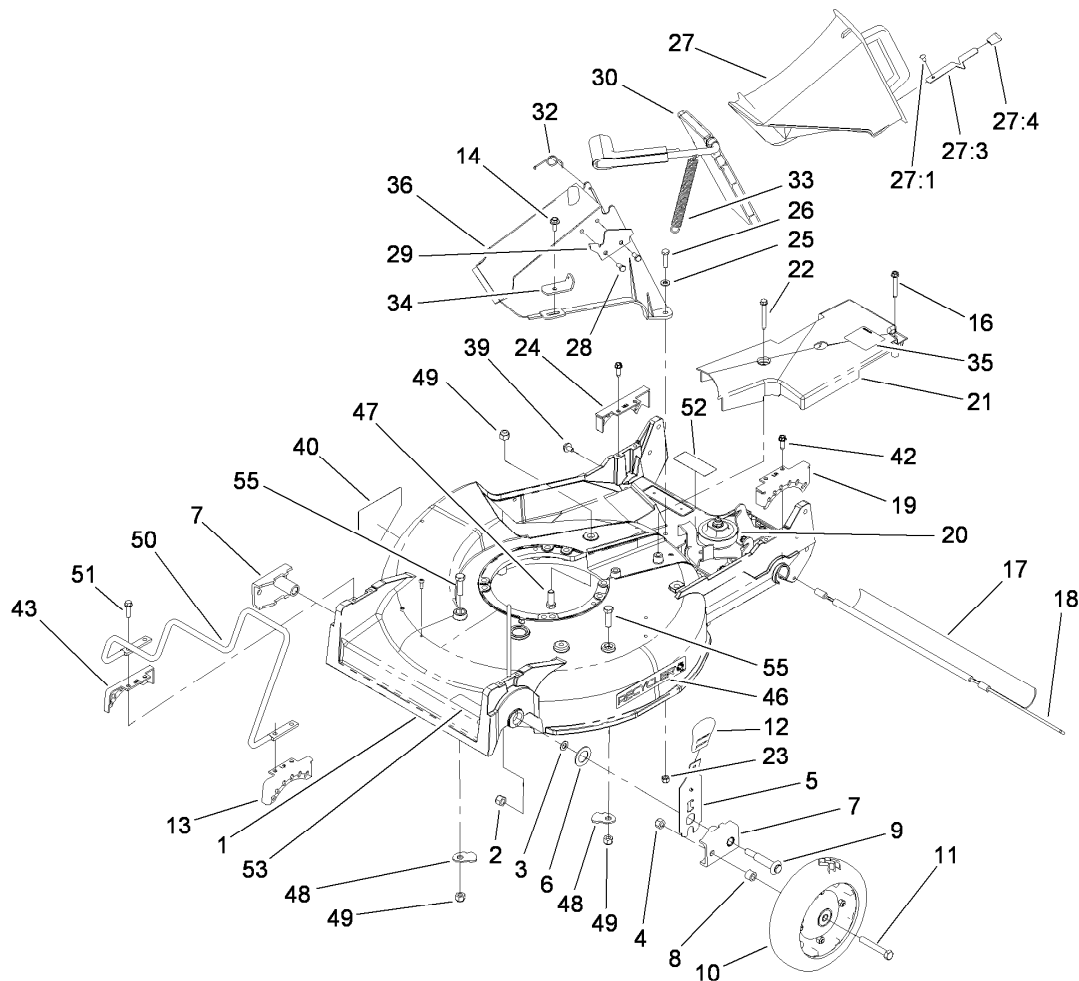

Housing, Chute and Wheel Assembly


Ref.	Part Number	Qty.	Description
1	98-7146	1	Housing
2	3296-6	2	Nut-Lock
3	40-1940	2	Washer
4	32152-2	2	Nut-Lock, Cone
5	110-0537	2	Spring Arm ASM
6	257-3	2	Washer-Thrust
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	114-3468	2	Screw-Shoulder
10	100-2870	2	Wheel And Tire ASM
11	323-12	2	Screw-HH
12	110-0549	2	Knob-HOC
13	49-8760	1	Quadrant-Front, LH
14	46-6811	1	Screw-HWH
16	92-1616	1	Screw-HWHTF
17	112-9989	1	Shield-Trailing
18	33-3208	1	Rod-Shield
19	49-8740	1	Quadrant-Rear, LH
20	74-1860	1	Gear Case ASM
21	74-1770	1	Cover-Belt
22	37-7260	1	Screw-HHFTF
23	3296-42	2	Nut-Lock, NI
24	49-8750	1	Quadrant-Rear, RH
25	3256-22	2	Washer-Flat
26	321-8	2	Screw-HH

Ref.	Part Number	Qty.	Description
27	77-0500	1	Discharge Plug ASM
27:1	3295-35	1	Rivet-Head, Flat
27:3	76-4640	1	Latch-Plug, Discharge
27:4	76-4650	1	Grip-Latch
28	46-8090	2	Screw-Plastite
29	93-3154	1	Latch-Plate
30	93-7351	1	Discharge Door ASM
32	80-3770	1	Retainer-Door
33	76-4660	1	Spring-Door
34	71-9350	1	Bracket-Spring
35	52-2620	1	Label-Grease
36	82-9152	1	Tunnel-Discharge
39	46-6810	1	Screw And Washer ASM
40	43-8480	1	Decal-Danger
42	49-2040	4	Screw-HWHTF
43	49-8770	1	Quadrant-Front, RH
46	106-0689	1	Decal
47	323-6	1	Screw-HH
48	84-8930	2	Shield-Retainer
49	3296-39	3	Nut-Lock, NI
50	109-7638	1	Guard-Engine
51	32144-86	4	Screw-HWHTF
52	92-1779	1	Decal-Warning
53	68-7410	1	Decal-Blade
55	323-7	2	Screw-HH

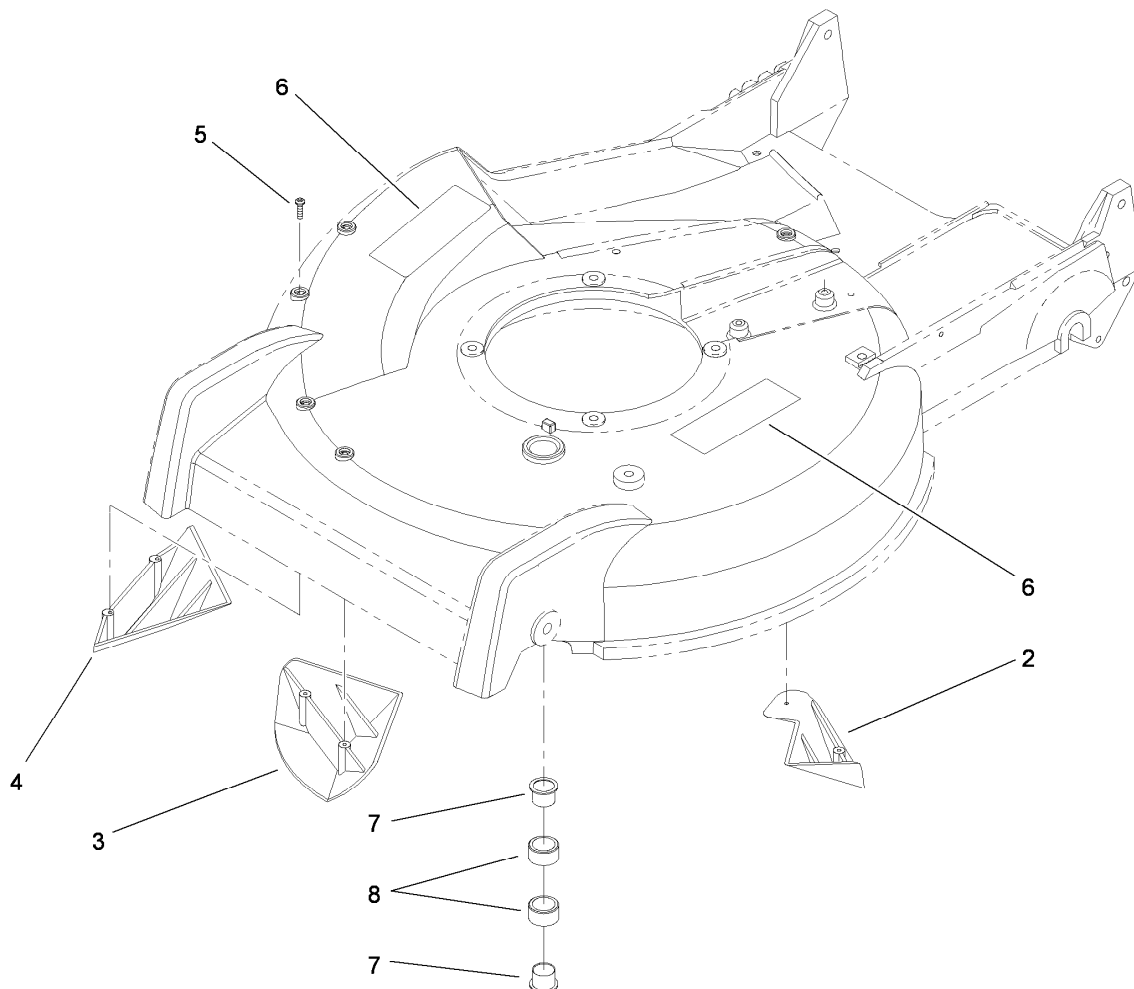

Housing Assembly No. 98-7146


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	92-1750	1	Kicker-Rear
3	92-1720	1	Kicker-Front
4	92-1730	1	Kicker-RH
5	32144-111	6	Screw-PPH
6	110-4978	2	Decal-Danger
7	2410-72	2	Caplug
8	68-9780	2	Bearing

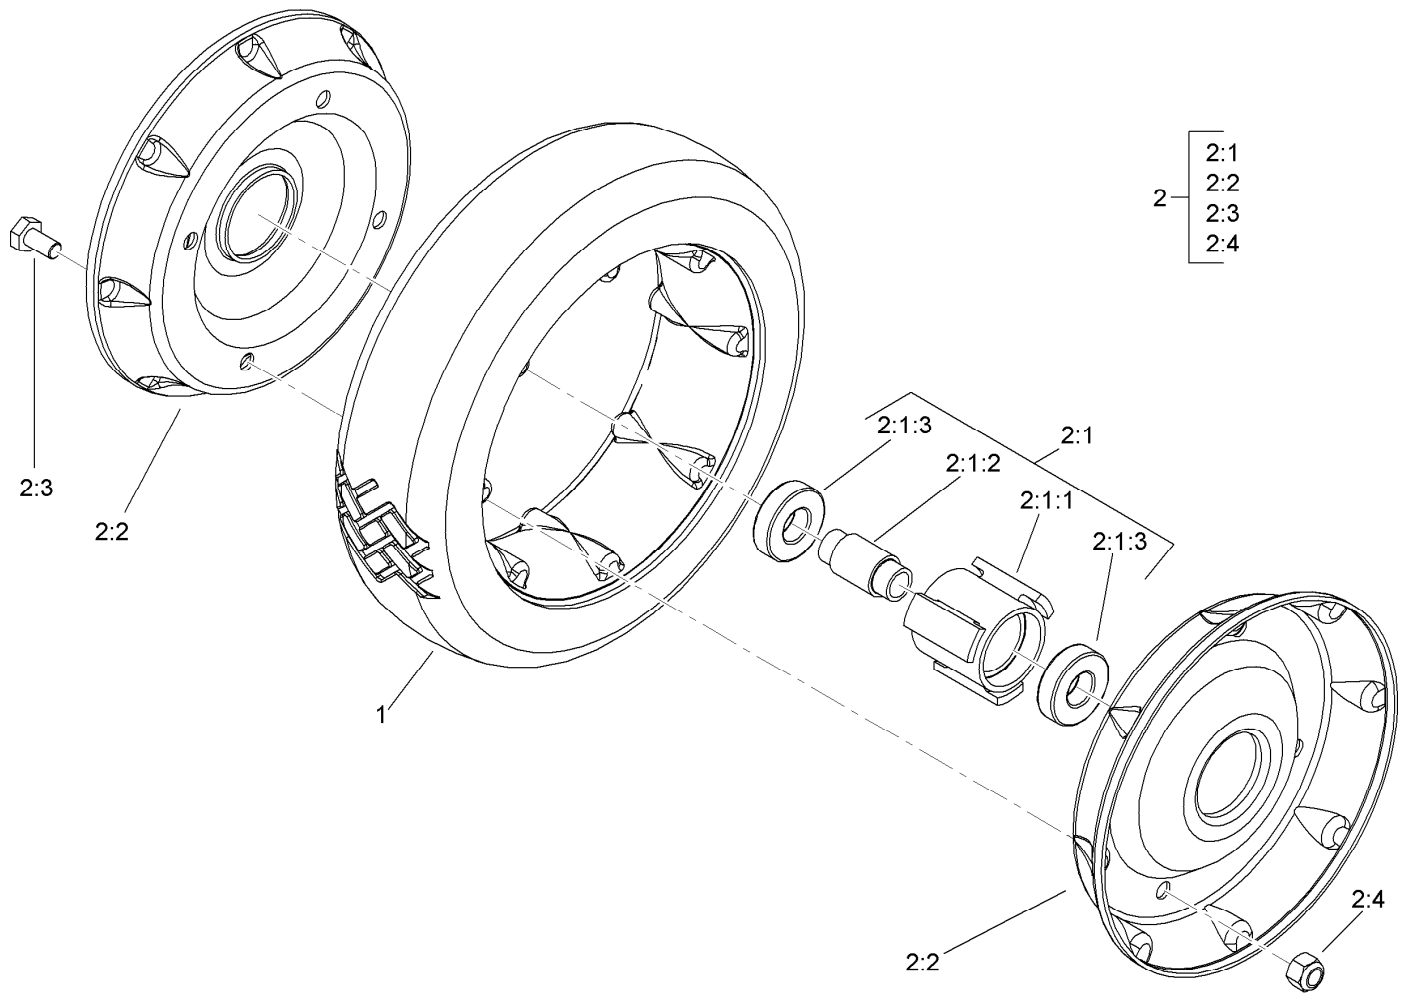

Wheel and Tire Assembly No. 100-2870


Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	53-7780-06	2	Plate-Wheel, Half
2:3	321-2	4	Screw-HH
2:4	3296-42	4	Nut-Lock, NI

● Not serviced separately

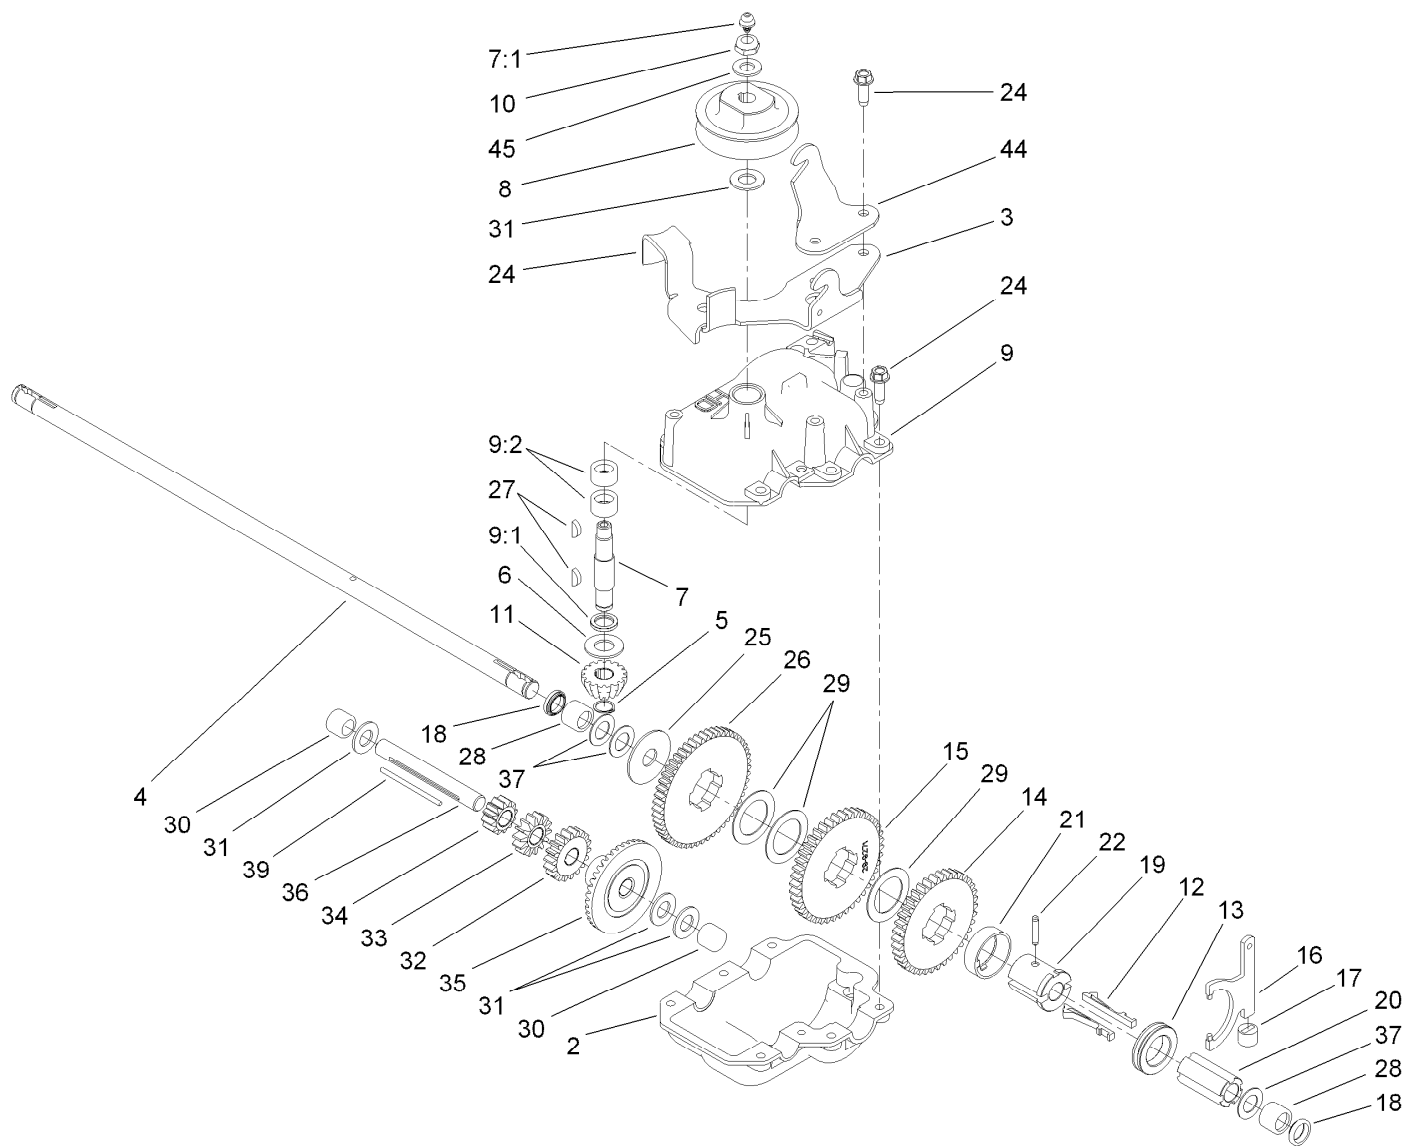

Gear Case Assembly No. 74-1860


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	74-1920	1	Case-Gear, Lower	20	39-6720	1	Sleeve
3	49-8461-03	1	Bracket-Guide, Belt	21	55-8020	1	Retainer-Key
4	74-1890	1	Shaft-Output	22	3285-19	1	Pin-Groove
5	32151-57	1	Ring-Retaining	24	49-2040	8	Screw-HWHTF
6	47-2910	1	Washer-Thrust	25	29-9690	1	Washer
7	13-5149	1	Input Shaft ASM	26	46-3560	1	Gear
7:1	302-63	1	Zerk	27	3257-1	2	Key-Woodruff
8	39-6740	1	Pulley	28	117-3500	2	Bearing-Caged Needle Roller
9	13-9739	1	Upper Gearcase ASM	29	36-4770	3	Washer
9:1	47-7260	1	Seal	30	252-103	2	Bearing-Closed
9:2	47-7270	2	Bearing	31	36-4792	4	Washer-Thrust
10	3296-5	1	Nut-Lock	32	39-6650	1	Gear-18T
11	39-6660	1	Pinion-Bevel	33	46-3550	1	Gear-14T
12	29-9330	2	Key-Shift	34	46-3540	1	Gear-12T
13	29-9340	1	Collar-Shift	35	74-1760	1	Gear-Bevel
14	42-4740	1	Gear-38T	36	53-7950	1	Shaft-Intermediate
15	29-9271	1	Gear-42T	37	36-4780	3	Washer-Plain
16	60-8870	1	Yoke-Shift	39	39-7842	1	Key
17	29-9570	1	Bushing-Yoke	44	74-1750-03	1	Bracket-Engage, Traction
18	47-6730	2	Seal-Oil	45	3256-45	1	Washer-Flat
19	55-8010	1	Sleeve-Gear				

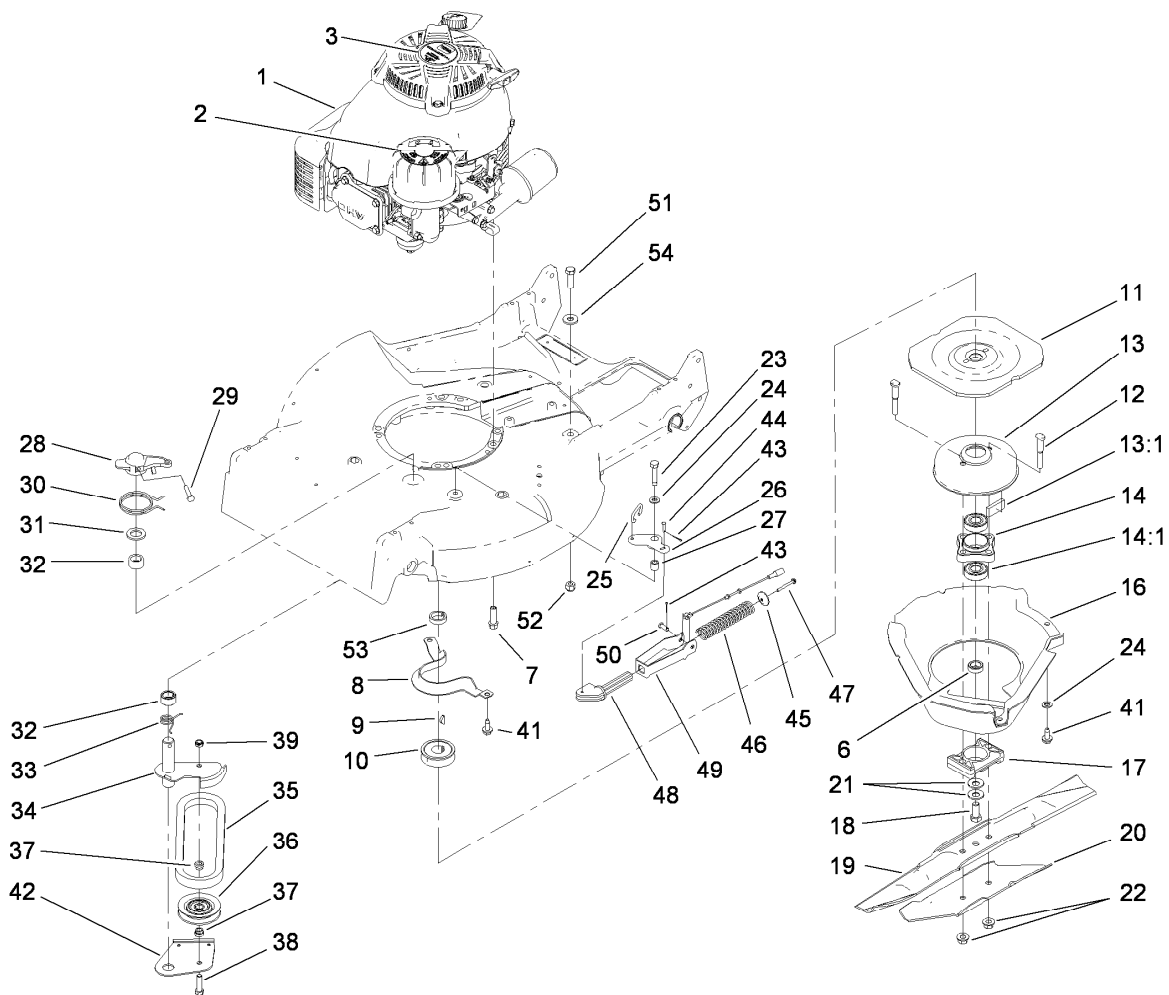

Engine and Blade Assembly


Ref.	Part Number	Qty.	Description
1	110-5048	1	Engine-Kawasaki, Fj180V-As30
2	114-3415	1	Decal-Air Cleaner
3	112-9967	1	Decal
6	107-4058	1	Spacer-Shaft, Output
7	95-1727	4	Screw-Taptite
8	66-0570-03	1	Bracket-Guide, Belt
9	3257-17	1	Key-Woodruff
10	56-6180	1	Pulley-Driver
11	56-6160-03	1	Flywheel-BBC
12	42-3190	2	Bolt-Blade
13	94-9431	1	Brake Drum ASM
13:1	52-3480	2	Dampener-Vibration
14	42-6890	1	Hub ASM
14:1	100-1048	2	Bearing-Ball
16	46-5693	1	Shield
17	107-4275	1	Spacer-Blade
18	3212-4	1	Screw-HH
19	91-2256-03	1	Blade-21 Inch
20	91-2255-03	1	Stiffener-Blade
21	1-603610	2	Washer-Spring
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	3	Washer-Flat
25	49-2810	1	Link-Control
26	49-7960	1	Bellcrank
27	49-7950	1	Sleeve-Bellcrank

Ref.	Part Number	Qty.	Description
28	49-2820	1	Lever
29	32104-96	1	Screw-HH
30	49-7970	1	Spring-Torsion
31	70-1160	1	Washer
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Arm-Idler
35	42-0884	1	V-Belt
36	46-5650	1	Pulley-Idler
37	46-5631	2	Spacer-Pulley, Idler
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock, NI
41	32144-70	3	Screw-HWHTF
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring
47	46-7040	1	Screw-HWHTF
48	106-0842	1	Guide-Spring
49	107-4087-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable
51	323-7	1	Screw-HH
52	3296-39	1	Nut-Lock, NI
53	110-2142	1	Spacer-Pulley
54	80-6990	1	Washer-Hardened

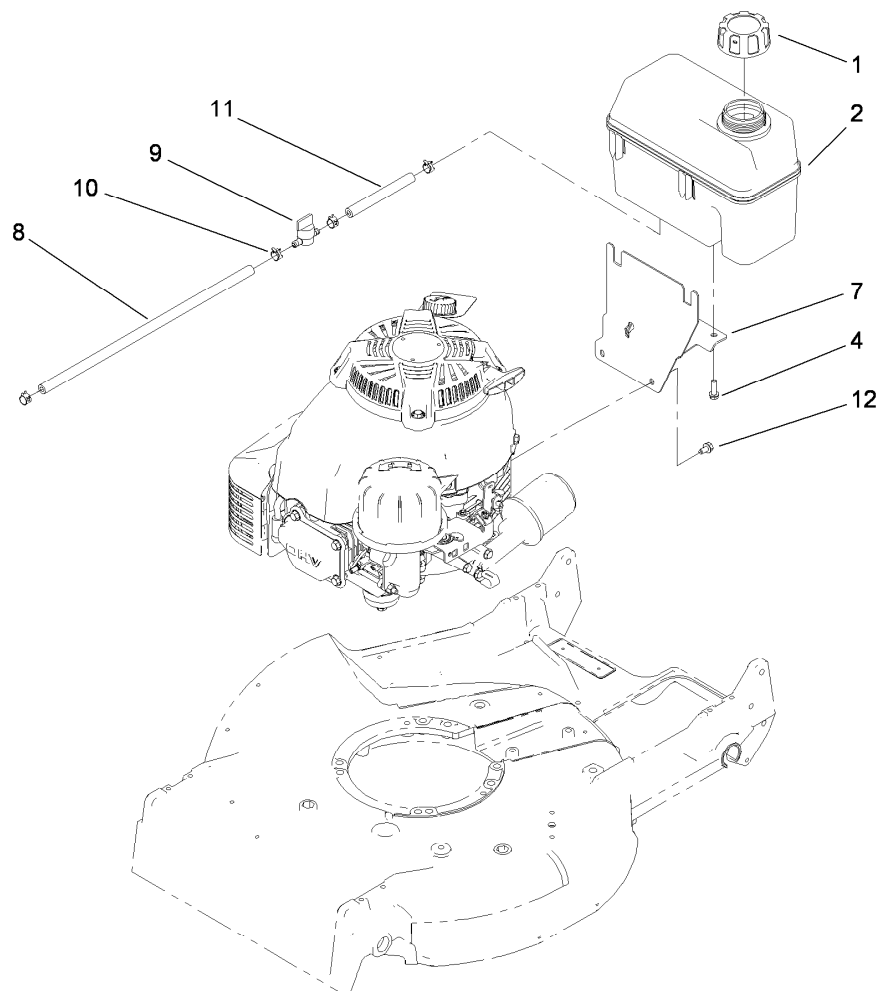


Engine and Tank assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	93-7198	1	Gas Cap ASM
2	106-0625	1	Tank-Fuel
4	46-8091	2	Screw-HWH
7	115-0954-03	1	Tank Mount ASM
8	109-0296	1	Hose-Fuel
9	1-603770	1	Valve-Fuel
10	2412-98	4	Clamp
11	109-0650	1	Hose-Fuel
12	104-2628	3	Screw-HWH

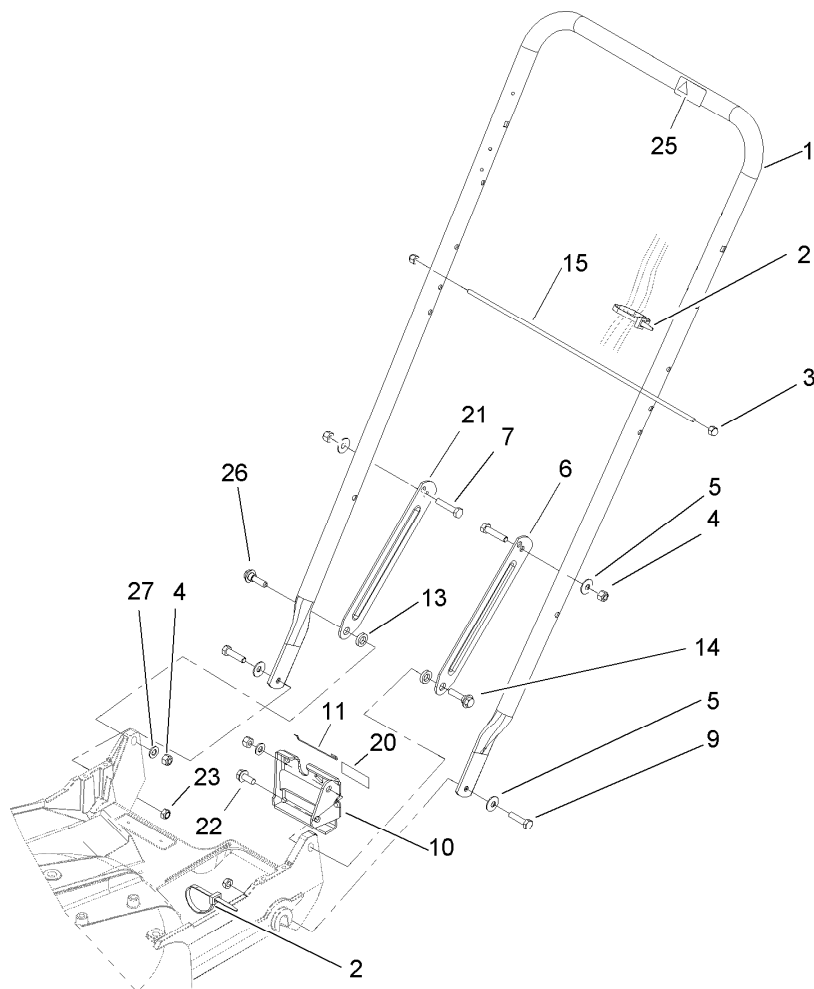

Handle Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	98-2385-03	1	Handle
2	3290-378	3	Cable Tie
3	32111-7	2	Nut-Cap
4	3296-29	4	Nut-Lock, NI
5	3290-456	4	Washer-Belleville
6	100-3298-03	1	Latch-Handle, LH
7	322-7	2	Screw-HH
9	322-6	2	Screw-HH
10	74-1741	1	Bracket-Adjustment, Traction
11	46-7030	1	Retainer-Cable
13	3-3287	2	Spacer-Latch, Handle
14	27-7210	1	Screw-Shoulder
15	48-2810	1	Rod-Support, Bag
20	74-1970	1	Decal-Position, Gear
21	100-3297-03	1	Latch-Handle, RH
22	32144-70	1	Screw-HWHTF
23	3296-47	2	Nut-Lock, NI
25	98-4387	1	Decal-Protection, Ear
26	27-7211	1	Screw-Shoulder
27	3256-23	2	Washer-Flat

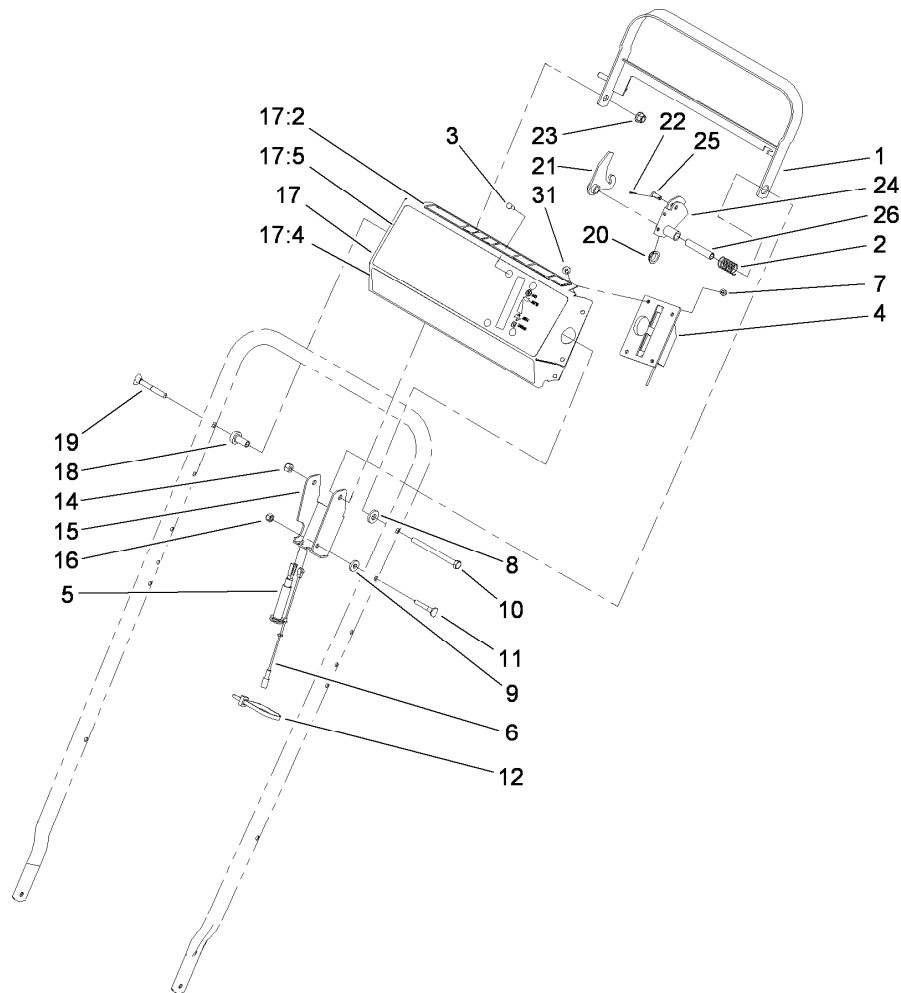

Control Panel Assembly


Ref.	Part Number	Qty.	Description
1	84-8940-03	1	Bar-Control
2	85-6750	1	Spring-Control
3	3250-12	4	Screw-PPH
4	114-3488	1	Control-Throttle
5	84-9120	1	Cable-Traction
6	84-9110	1	Cable-Clutch
7	3296-2	4	Nut-Lock, NI
8	71-9310	1	Spacer
9	71-9320	1	Spacer
10	322-19	1	Screw-HH
11	46-6430	1	Screw-Handle
12	3290-378	1	Cable Tie
14	3296-29	1	Nut-Lock, NI
15	92-1778-03	1	Bracket-Control
16	3296-42	1	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
17	14-7709	1	Panel ASM
17:2	104-8582	1	Decal-Panel, Danger
17:4	106-0771	1	Decal-Panel
17:5	107-4098	1	Decal-Panel
18	49-1631	1	Spacer-Support
19	17-9427	1	Screw
20	86-9320	1	Bushing-Flange
21	84-9000	1	Lever-Traction
22	3272-1	1	Pin-Cotter
23	3296-58	1	Nut-Lock, NI
24	84-8990	1	Lever-BBC
25	84-9040	1	Pin-Cable
26	84-9030	1	Spacer-Bracket, Control
31	32104-76	6	Screw

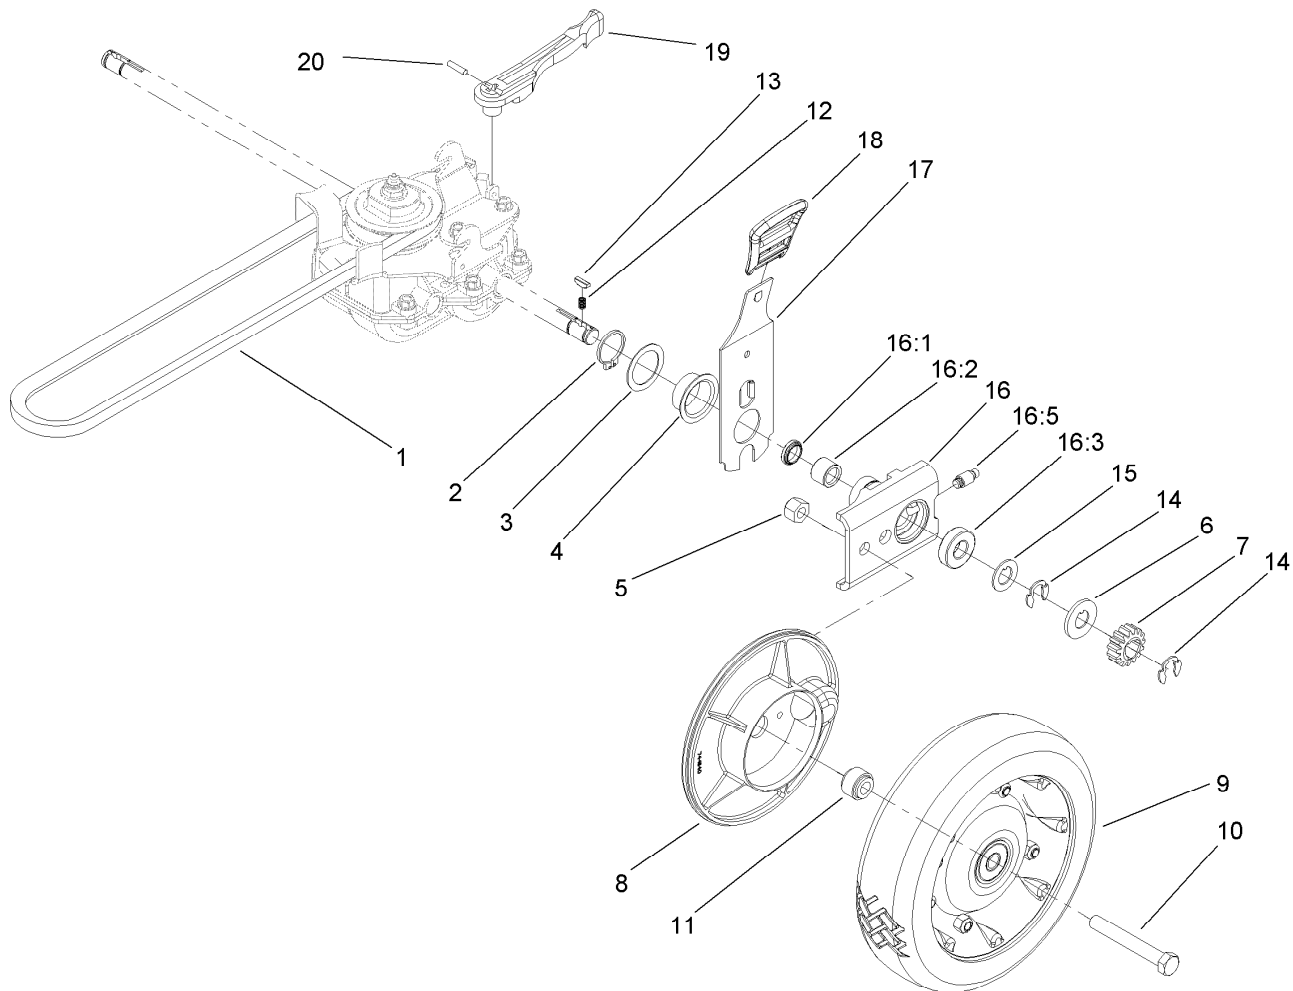

Rear Drive and Wheel Assembly


Ref.	Part Number	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Lock, Cone
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	100-2860	2	Wheel And Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	110-0538	2	Rear Spring Arm ASM
18	110-0549	2	Knob-HOC
19	74-1960	1	Lever-Shift
20	32121-99	1	Pin-Coil

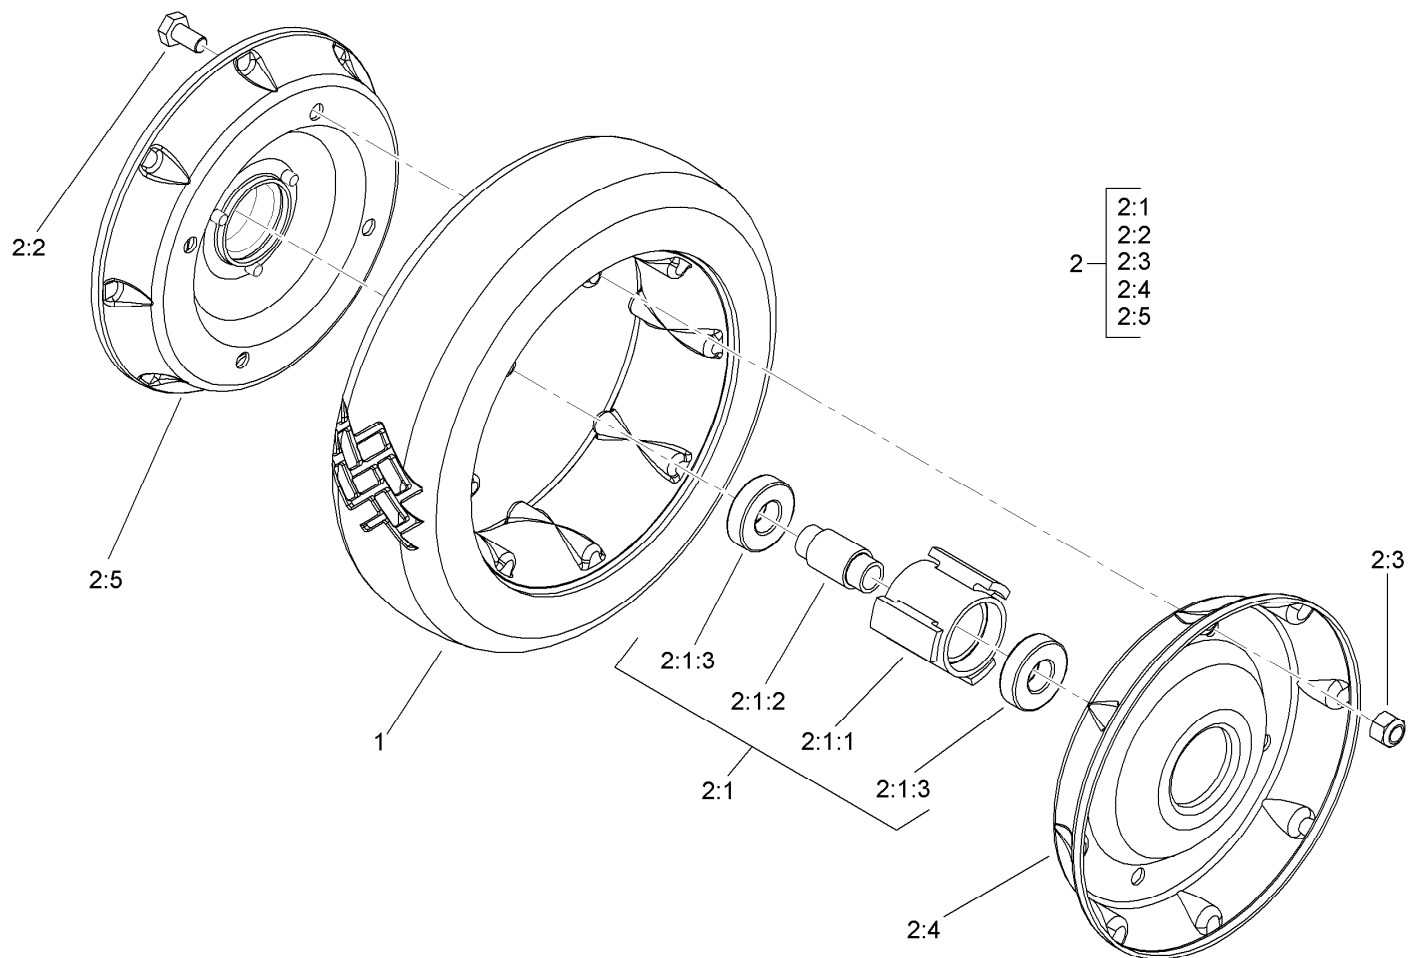

Rear Wheel Assembly No. 100-2860


Ref.	Part Number	Qty.	Description
1	53-7740	1	Tire
2		1	Wheel ASM ●
2:1		1	Hub And Bearing ASM ●
2:1:1	52-2410	1	Hub-Bearing
2:1:2	52-2440	1	Spacer-Bearing
2:1:3	52-2450	2	Bearing-Wheel
2:2	321-2	4	Screw-HH
2:3	3296-42	4	Nut-Lock, NI
2:4	53-7780-06	1	Plate-Wheel, Half
2:5	92-4957-06	1	Wheel Half And Gear ASM

● Not serviced separately

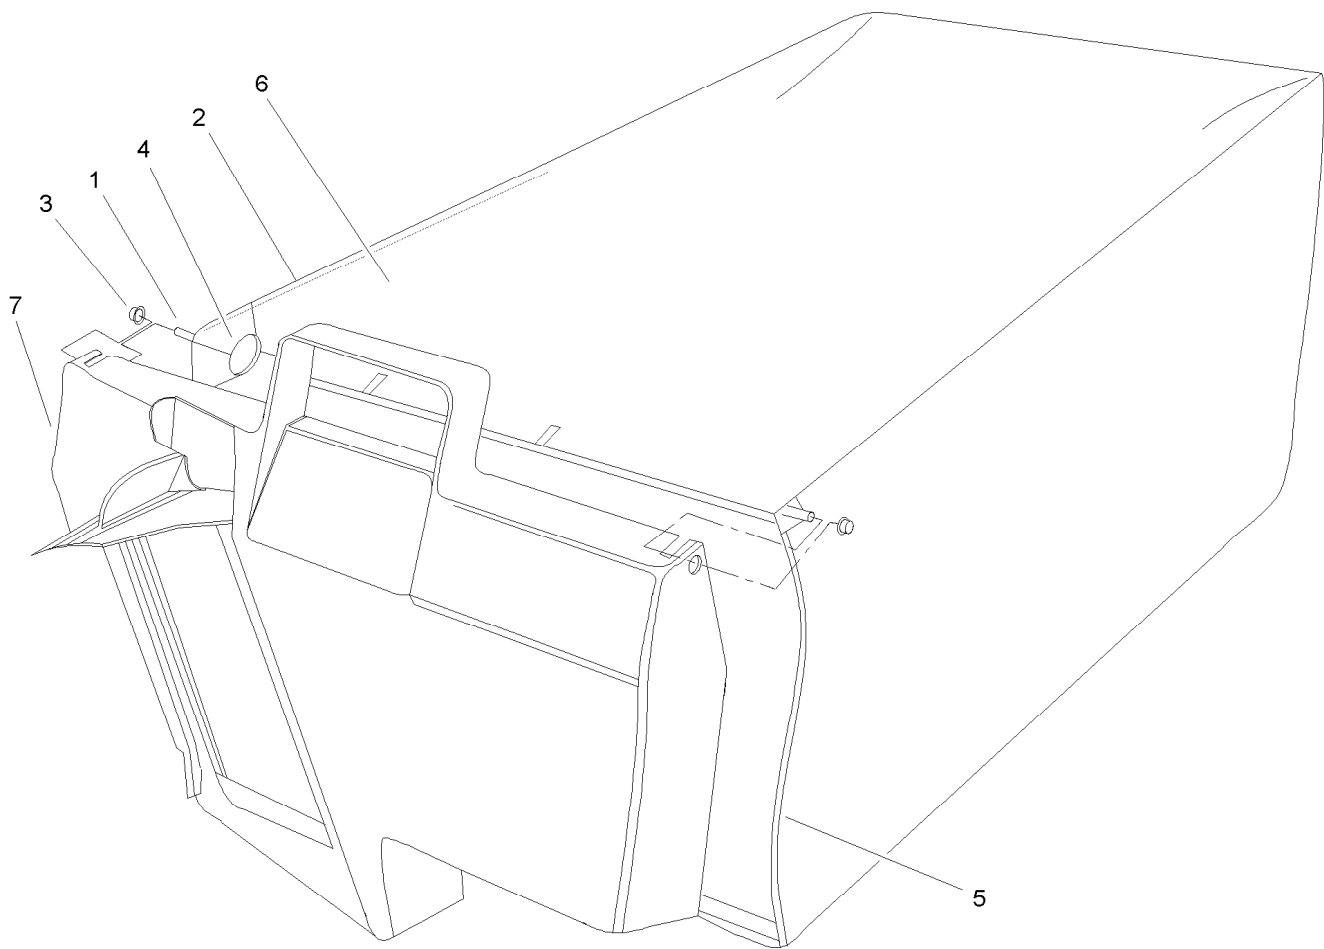

Grass Bag Assembly No. 106-0975


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	33-4820	1	Hinge-Door, Bag
2	42-4030	1	Frame-Bag, Upper
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	106-0926	1	Bag-Grass
7	48-2840	1	Door-Bag, Grass

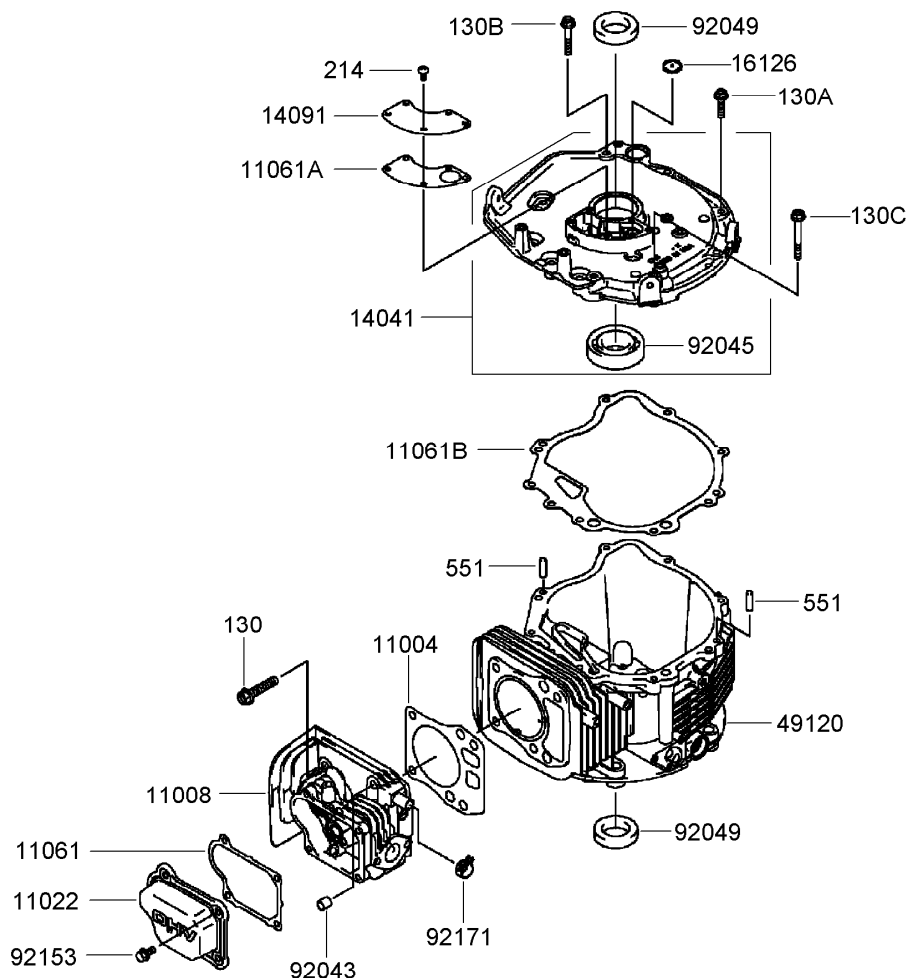

Cylinder and Crankcase Assembly Kawasaki FJ180V-AS30


Ref.	Part Number	Qty.	Description
11004	11004-7020	1	Gasket-Head ●
11008	11008-7025	1	Head-Cylinder ●
11022	11022-7005	1	Case-Rocker ●
11061	11061-7023	1	Gasket-Case, Rocker ●
11061A	11061-7031	1	Gasket-Breather ●
11061B	11061-7060	1	Gasket-Cover, Crankcase ●
14041	14041-7010	1	Cover ●
14091	14091-7010	1	Cover-Breather ●
16126	16126-7014	1	Valve-Breather ●
49120	49120-7082	1	Crankcase ●
92043	92043-7001	2	Pin ●
92045	92045-1207	1	Bearing-Ball (62/28) ●
92049	92049-7008	2	Seal-Oil (28-44-9 T C) ●
92153	92153-7043	4	Bolt (6X12) ●
92171	92171-7024	1	Clamp ●
130	130CA0840	4	Bolt-Flanged (8X40) ●
130A	130G0625	7	Bolt-Flanged (6X25) ●
130B	130G0635	1	Bolt-Flanged (6X35) ●
130C	130G0650	1	Bolt-Flanged,6X50 ●
214	214B0510	5	Screw-Pan (5X10) ●
551	551A0612	2	Pin-Dowel (6X12) ●

● Obtain parts from www.kawpowerepc.com

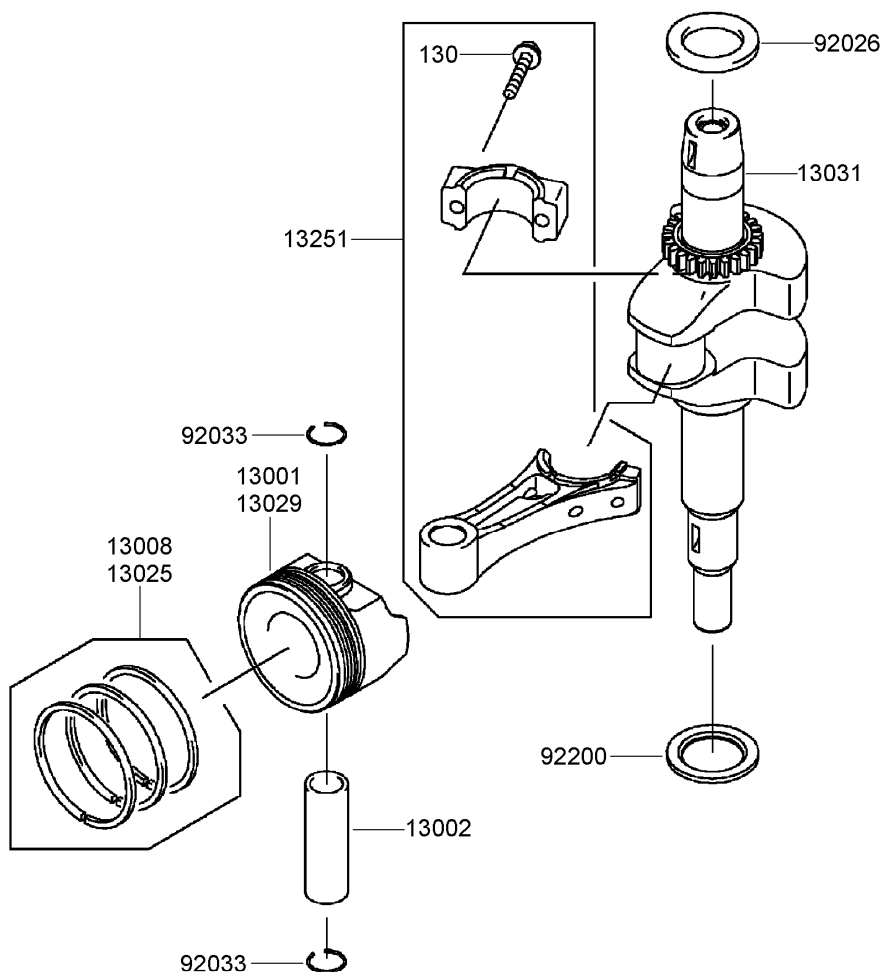


Piston and Crankshaft Assembly Kawasaki FJ180V-AS30

Ref.	Part Number	Qty.	Description
13001	13001-7022	1	Piston-Engine ●
13002	13002-7001	1	Pin-Piston ●
13008	13008-7002	1	Piston Ring Set ●
13025	13025-7006	1	Piston Ring Set (L 0.50) ●
13029	13029-7005	1	Piston-Engine (L 0.50) ●
13031	13031-7077	1	Crankshaft ●
13251	13251-7011	1	Connecting Rod ASM ●
92026	92026-7020	1	Spacer ●
92033	92033-7002	2	Ring-Snap ●
92200	92200-7042	1	Washer (28X41.5X2.5) ●
130	130G0630	2	Bolt-Flanged (6X30) ●

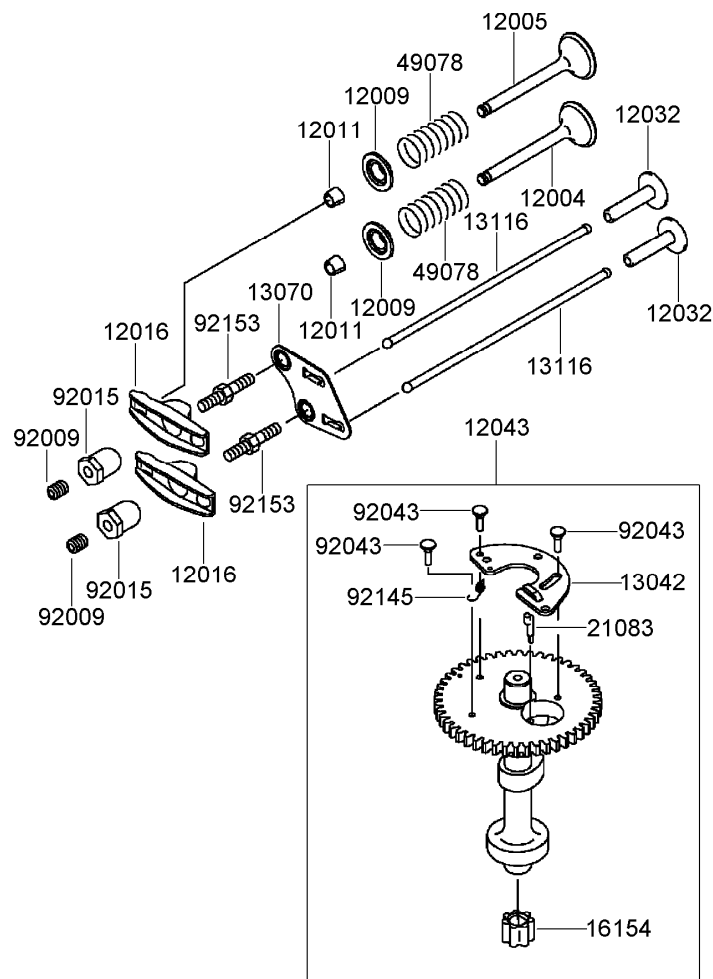

Valve and Camshaft Assembly Kawasaki FJ180V-AS30


Ref.	Part Number	Qty.	Description
12004	12004-7005	1	Valve-Intake ●
12005	12005-7006	1	Valve-Exhaust ●
12009	12009-7001	2	Retainer-Spring, Valve ●
12011	12011-2056	4	Collet ●
12016	12016-7008	2	Arm-Rocker ●
12032	12032-7001	2	Tappet ●
12043	12043-7005	1	Camshaft Valve ASM ●
13042	13042-7006	1	Weight ●
13070	13070-7009	1	Guide ●
13116	13116-7003	2	Rod-Push ●
16154	16154-7004	1	Rotor-Pump ●
21083	21083-7009	1	Arm ●
49078	49078-7001	2	Spring-Valve, Engine ●
92009	92009-2341	2	Screw ●
92015	92015-2253	2	Nut ●
92043	92043-7006	3	Pin ●
92145	92145-7016	1	Spring ●
92153	92153-7019	2	Bolt ●

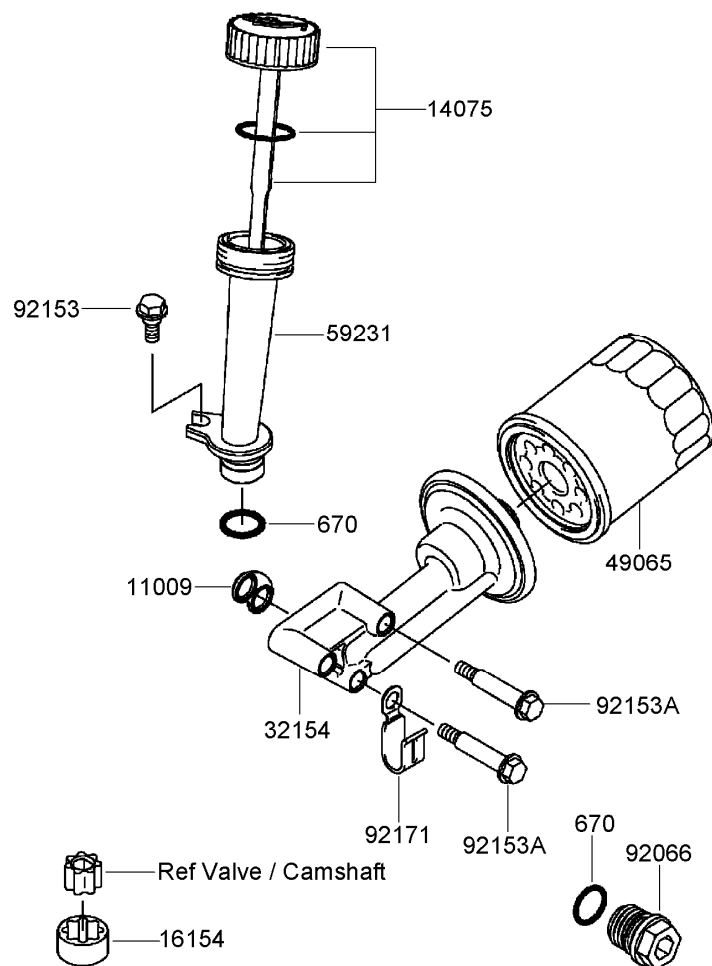

Lubrication Equipment Assembly Kawasaki FJ180V-AS30

Ref.	Part Number	Qty.	Description
11009	11009-2860	1	Gasket ●
14075	14075-7007	1	Cap ASM ●
16154	16154-7002	1	Rotor-Pump ●
32154	32154-7018	1	Pipe ●
49065	49065-2078	1	Filter-Oil ●
59231	59231-7004	1	Filler ●
92066	92066-7003	1	Plug ●
92153	92153-7007	1	Bolt ●
92153A	92153-7028	3	Bolt ●
92171	92171-7008	1	Clamp ●
670	670D2016	2	O-Ring (16Mm) ●

● Obtain parts from www.kawpowerepc.com

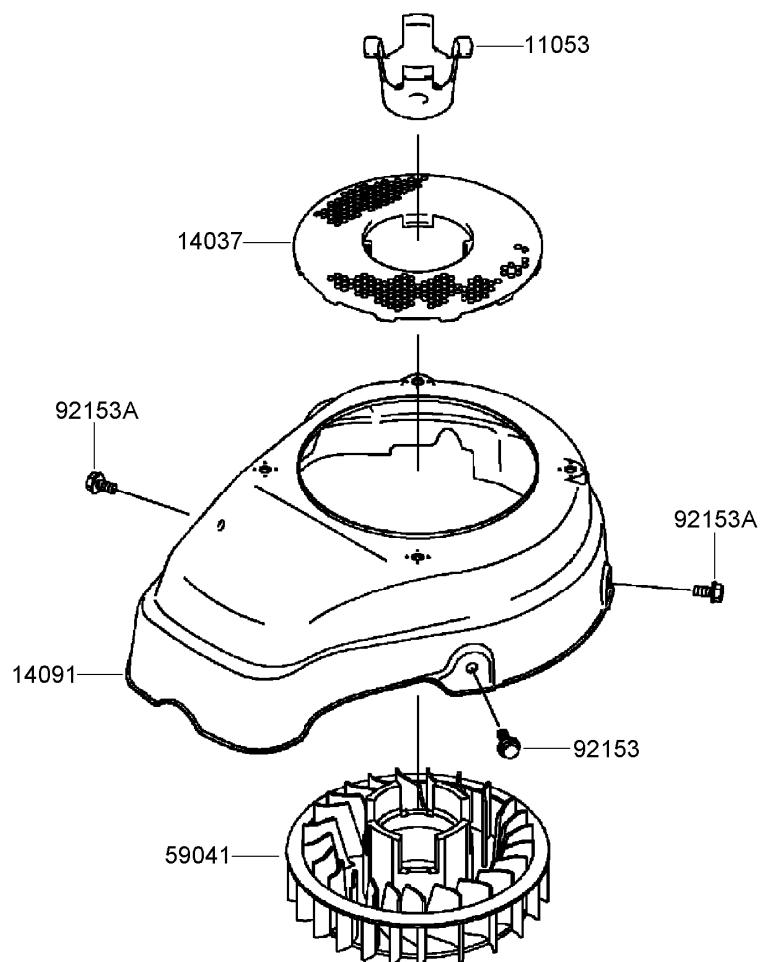


Cooling Equipment Assembly Kawasaki FJ180V-AS30

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11053	11053-7009	1	Bracket-Fan ●
14037	14037-7017	1	Screen ●
14091	14091-7053	1	Cover ●
59041	59041-7009	1	Fan ●
92153	92153-7007	1	Bolt ●
92153A	92153-7043	2	Bolt (6X12) ●

● Obtain parts from www.kawpowerepc.com



- Obtain parts from www.kawpowerepc.com

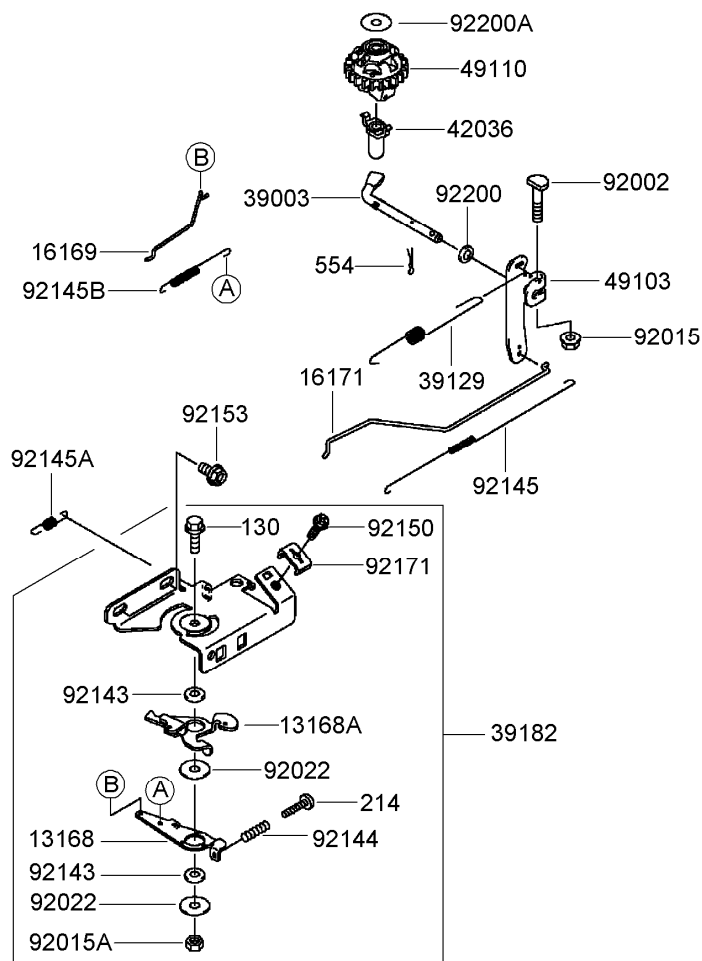


Control Equipment Assembly Kawasaki FJ180V-AS30

Ref.	Part Number	Qty.	Description
13168	13168-7028	1	Lever ●
13168A	13168-7032	1	Lever ●
16169	16169-7015	1	Link-Choke ●
16171	16171-7015	1	Link-Throttle ●
39003	39003-7002	1	Arm-Pivot ●
39129	39129-7014	1	Spring-Governor ●
39182	39182-7007	1	Panel-Assy-Control ●
42036	42036-2051	1	Sleeve ●
49103	49103-7005	1	Arm-Governor ●
49110	49110-7002	1	Governor ASM ●
92002	92002-2269	1	Bolt (6X28) ●
92015	92015-1193	1	Nut ●
92015A	92015-2051	1	Nut ●
92022	92022-2372	2	Washer (6X19X1.2) ●

Ref.	Part Number	Qty.	Description
92143	92143-2135	2	Collar (6X13X2.3) ●
92144	92144-2266	1	Spring ●
92145	92145-7025	1	Spring-Throttle ●
92145A	92145-7032	1	Spring ●
92145B	92145-7043	1	Spring ●
92150	92150-2182	1	Bolt (5X18) ●
92153	92153-7043	2	Bolt (6X12) ●
92171	92171-7016	1	Clamp ●
92200	92200-2029	1	Washer (6.5X11.5X2.0) ●
92200A	92200-2036	1	Washer (6.2X20X0.5) ●
130	130B0618	1	Bolt-Flanged ●
214	214B0420	1	Screw-Pan +- (4X20) ●
554	554A0600	1	Pin-Snap (1.2X21.2) ●


● Obtain parts from www.kawpowerepc.com

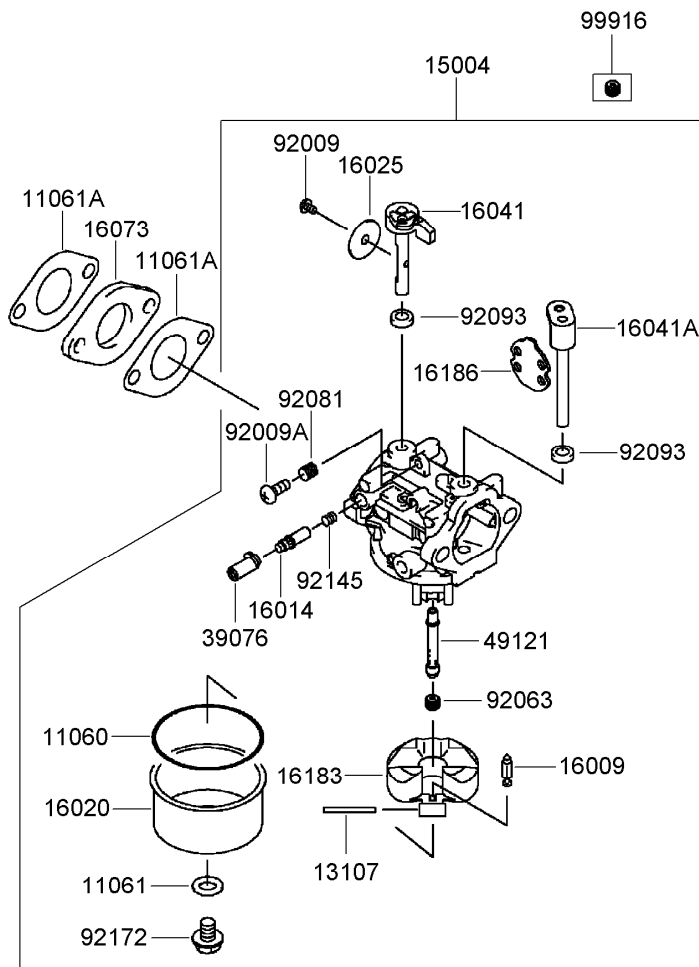

Carburetor Assembly Kawasaki FJ180V-AS30


Ref.	Part Number	Qty.	Description
11060	11060-2190	1	Gasket ●
11061	11061-7010	1	Gasket-Screw ●
11061A	11061-7015	2	Gasket-Insulator ●
13107	13107-7024	1	Shaft ●
15004	15004-7010	1	Carburetor ASM ●
16009	16009-2136	1	Needle-Jet ●
16014	16014-7008	1	Screw-Air, Pilot ●
16020	16020-7004	1	Chamber-Float ●
16025	16025-7007	1	Valve-Throttle ●
16041	16041-7019	1	Shaft-Carburetor ●
16041A	16041-7020	1	Shaft-Carburetor ●
16073	16073-7006	1	Insulator ●
16183	16183-2002	1	Float ASM ●
16186	16186-7003	1	Choke Valve ASM ●
39076	39076-7001	1	Limiter ●
49121	49121-7014	1	Nozzle-Main ●
92009	92009-2083	1	Screw ●
92009A	92009-2349	1	Screw ●
92063	92063-7067	1	Jet-Main (No 70) ●
92081	92081-2234	1	Spring ●
92093	92093-2100	2	Seal ●
92145	92145-7015	1	Spring ●
92172	92172-7002	1	Screw ●
99916	99916-7007	1	Main Jet K H I Parts Kit ●

● Obtain parts from www.kawpowerepc.com

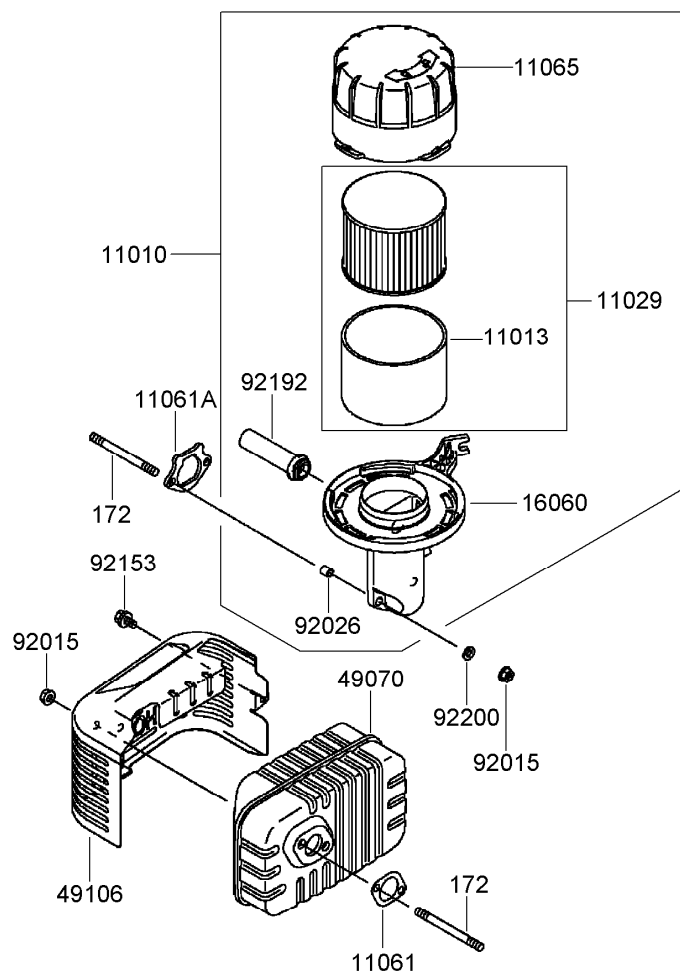

Air Filter and Muffler Assembly Kawasaki FJ180V-AS30

Ref.	Part Number	Qty.	Description
11010	11010-7021	1	Air Filter ASM ●
11013	11013-7037	1	Element-Filter, Air ●
11029	11029-7023	1	Air Filter Element ASM ●
11061	11061-7029	1	Gasket-Muffler ●
11061A	11061-7075	1	Gasket-Pipe, Intake ●
11065	11065-7018	1	Cap ●
16060	16060-7026	1	Pipe-Intake ●
49070	49070-7022	1	Muffler ●
49106	49106-7021	1	Cover-Muffler ●
92015	92015-1193	4	Nut ●
92026	92026-7021	2	Spacer ●
92153	92153-7023	1	Bolt (6X10) ●
92192	92192-7083	1	Tube ●
92200	92200-7022	2	Washer (6.4X12X1.7) ●
172	172G0680	4	Bolt-Stud (6X80) ●

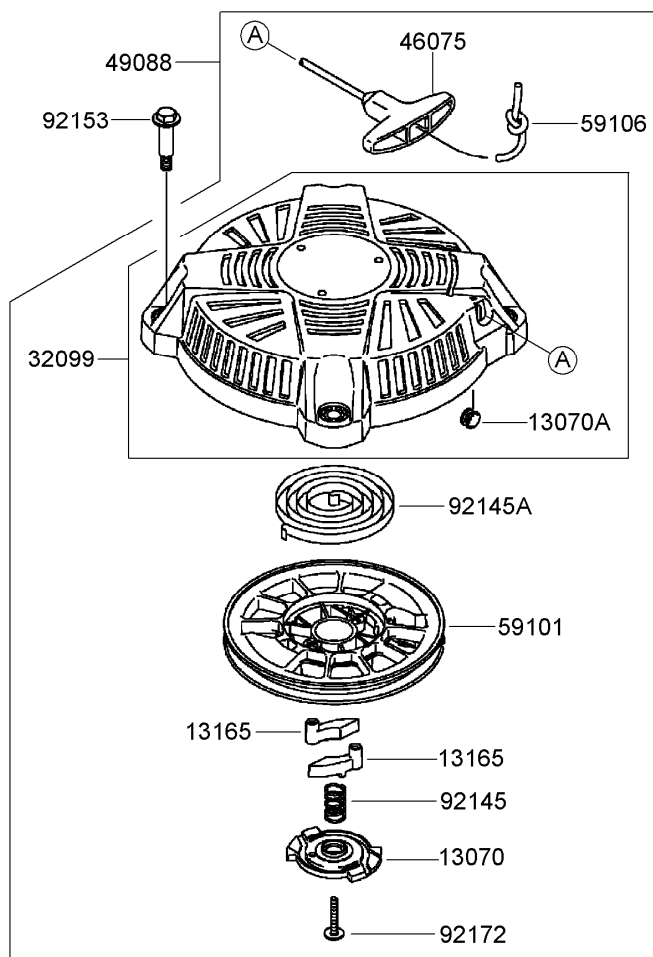

Starter Assembly Kawasaki FJ180V-AS30


Ref.	Part Number	Qty.	Description
13070	13070-7014	1	Guide ●
13070A	13070-7015	1	Guide ●
13165	13165-7002	2	Pawl-Starter, Recoil ●
32099	32099-7004	1	Case-Starter, Recoil ●
46075	46075-7002	1	Grip ●
49088	49088-7024	1	Starter-Recoil ●
59101	59101-7002	1	Reel-Starter, Recoil ●
59106	59106-7006	1	Rope (1500Mm) ●
92145	92145-7052	1	Spring ●
92145A	92145-7053	1	Spring ●
92153	92153-7021	4	Bolt (M6) ●
92172	92172-7030	1	Screw ●

● Obtain parts from www.kawpowerepc.com

56070



56033

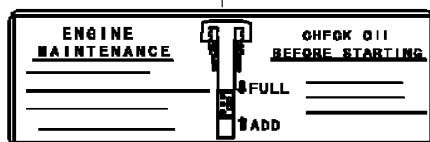

Label Assembly Kawasaki FJ180V-AS30

Ref.	Part Number	Qty.	Description
56033	56033-7003	1	Label-Manual •
56070	56070-7001	1	Label-Warning •

• Obtain parts from www.kawpowerepc.com

Notes:

Notes:



Count on it.