



Count on it.

Form No. 3370-793 Rev A

Parts Catalog

Pro Force Debris Blower

Model No. 44542—Serial No. 312000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Shaft and Rotor Assembly 4

Turbine Assembly..... 5

Hitch, Trailer, Fuel Tank, Hub and Wheel Assembly 6

Hub and Axle Assembly No. 117-8255..... 7


Fuel Tank Assembly No. 117-8455 8

Nozzle, Belt and Guard Assembly 9

Clutch, Battery and Electrical Component Assembly 10


Engine and Muffler Assembly..... 11

Electrical Assembly 12

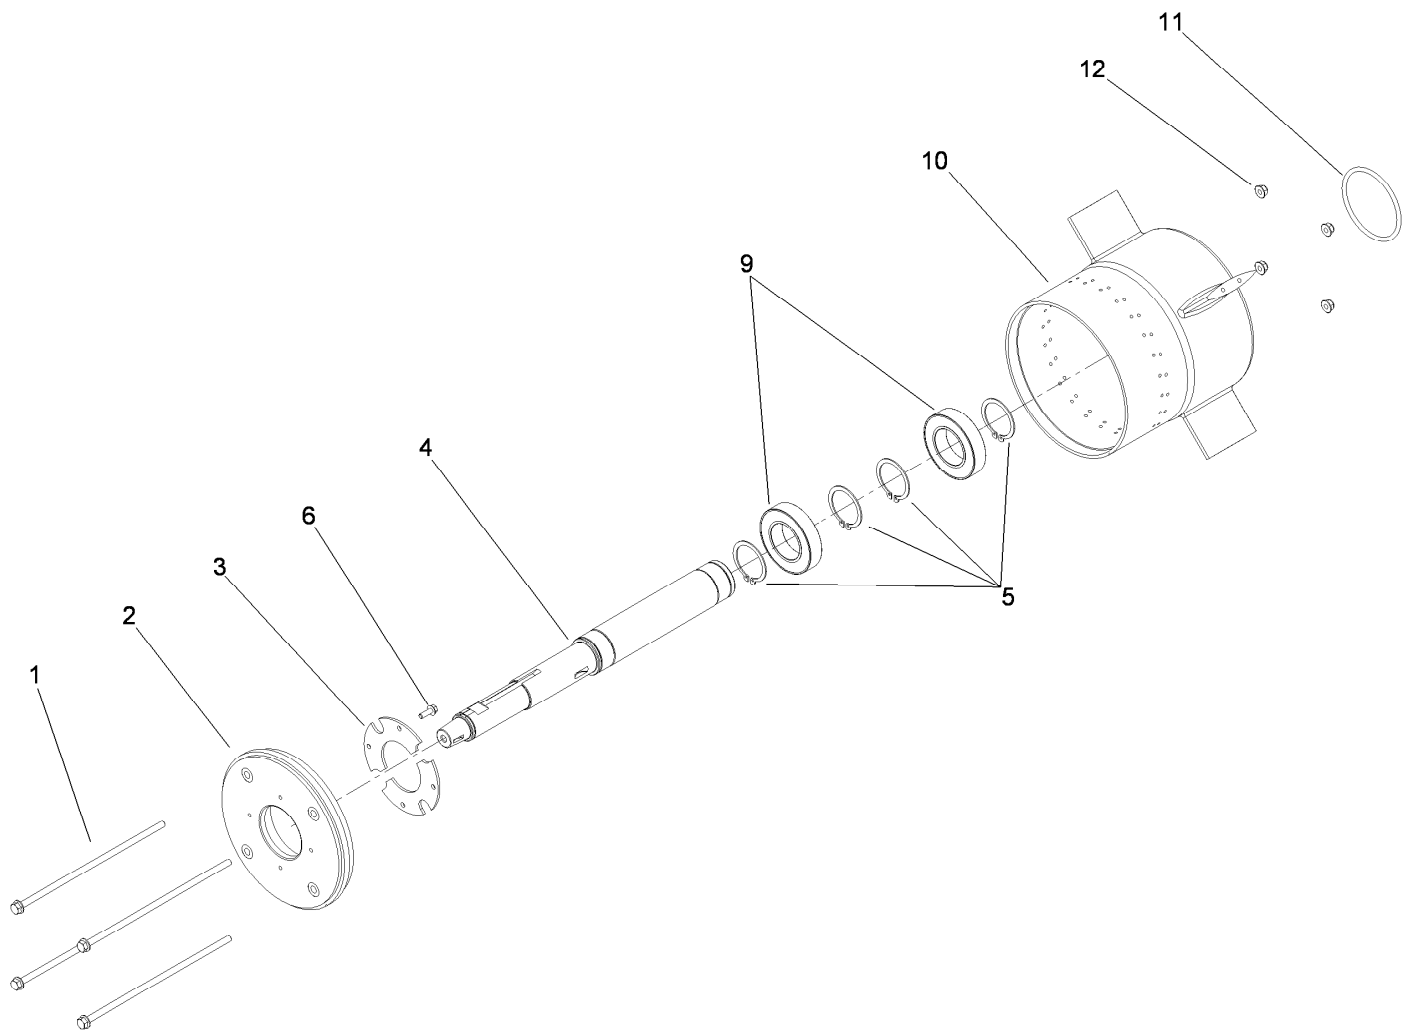

Shaft and Rotor Assembly


Ref.	Part Number	Qty.	Description
1	119-6154	4	Screw-HH
2	119-6161	1	Holder-Bearing
3	119-3019	2	Cap-Bearing, Front
4	115-9075	1	Shaft-Fan
5	112-1951	4	Snap-EXT
6	117-8304	4	Screw-HHF
9	112-6764	2	Bearing-Ball
10	119-6160	1	Housing-Inner
11	92-9533	1	O-Ring
12	104-8300	4	Nut-Flange, NI

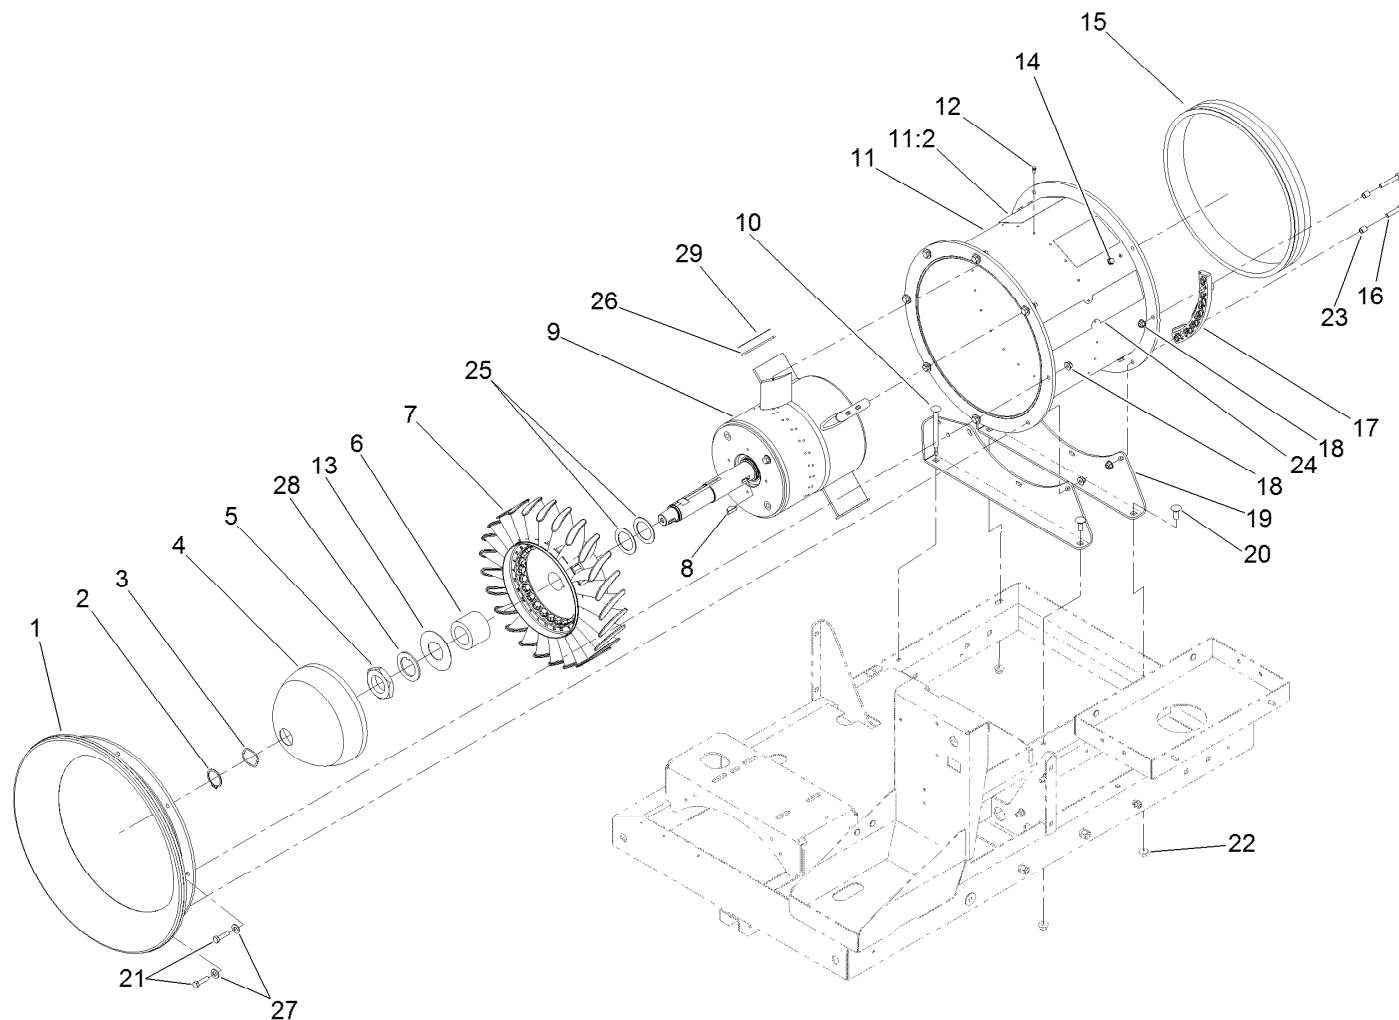

Turbine Assembly

Ref.	Part Number	Qty.	Description
1	117-8329	1	Bell-Inlet
2	112-1952	1	Clip-EXT, Dome
3	93-4632	1	Washer-Wavey
4	117-8328	1	Cap-Front
5	112-1899	1	Nut
6	114-2164	1	Spacer
7	117-8356	1	Rotor ASM
8	3257-42	1	Key-Woodruff
9	112-1871	24	Vane-Stator
10	3231-24	2	Screw-CARR
11	115-5128	1	Housing ASM
11:2	115-5106	2	Decal-Danger
12	117-8303	24	Screw-HHF
13	115-9005	1	Washer-Tab
14	117-8304	8	Screw-HHF


Ref.	Part Number	Qty.	Description
15	112-1874	1	Pulley-Nozzle
16	322-7	6	Screw-HH
17	114-9868	4	Guide-Nozzle
18	104-8300	16	Nut-Flange, NI
19	112-6851-01	2	Mount-Fan
20	3231-2	2	Screw-CARR
21	322-6	8	Screw-HH
22	104-8301	4	Nut-Flange, NI
23	93-6859	8	Spacer
24	115-5102	2	Decal
25	115-5131	2	Washer
26	117-8393	4	Spacer-Fin
27	3256-24	8	Washer-Flat
28	119-6202	1	Washer-Tab
29	119-6207	4	Spacer-Fin

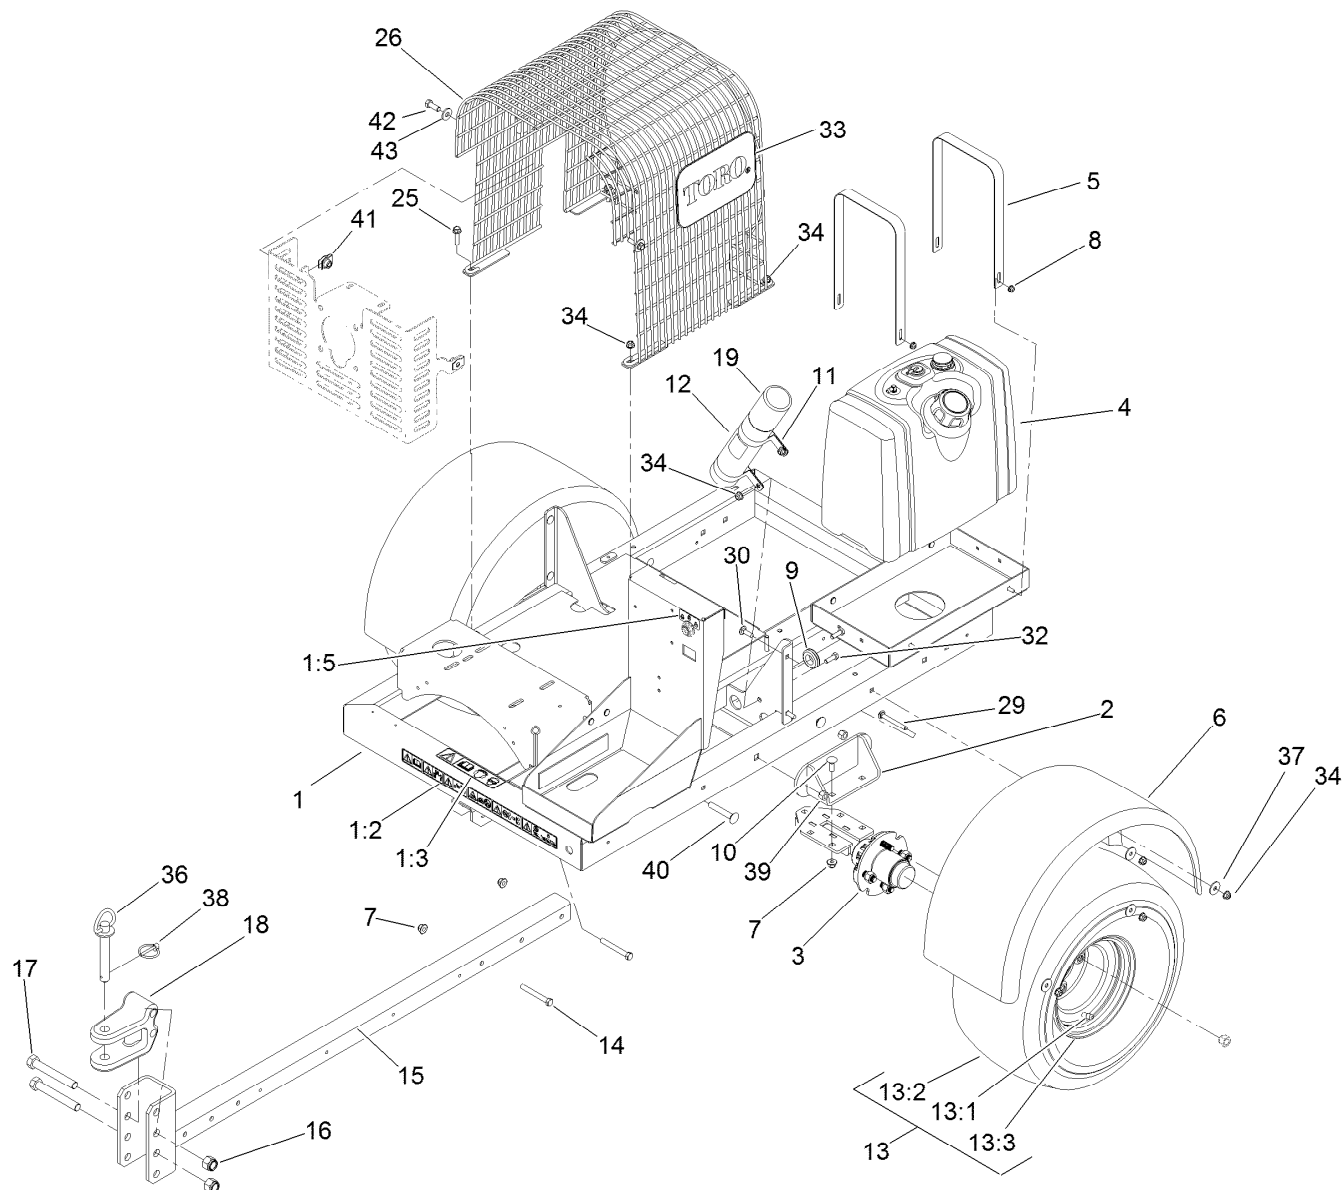

Hitch, Trailer, Fuel Tank, Hub and Wheel Assembly


Ref.	Part Number	Qty.	Description
1	119-2953	1	Frame ASM
1:2	115-5105	1	Decal-Warning
1:3	115-5113	1	Decal-Protection, Eye And Ear
1:5	119-6165	1	Decal-Ignition
2	119-2958-01	2	Axle-Mount
3	117-8255	2	Hub And Axle ASM
4	117-8455	1	Fuel Tank ASM
5	119-6285	2	Strap-Hold Down, Tank
6	112-6852	2	Fender
7	104-8301	8	Nut-Flange, NI
8	104-7201	4	Nut-HF
9	1-543286	2	Grommet
10	3231-2	6	Screw-CARR
11	2412-133	2	R-Clamp
12	104-7050	1	Tube-Manual
13	98-8691	2	Wheel ASM
13:1	232-27	1	Stem-Valve
13:2	99-4506	1	Tire
13:3	99-4507	1	Rim
14	323-14	2	Screw-HH

Ref.	Part Number	Qty.	Description
15	112-6942-01	1	Hitch ASM
16	3296-53	2	Nut-Lock, NI
17	327-23	2	Screw-HH
18	47-3550-01	1	Clevis-Hitch
19	104-7048	1	Cap-Housing
25	112-6913	2	Screw-HHF
26	112-6876	1	Top Grill ASM
29	3230-9	4	Screw-CARR
30	3230-2	4	Bolt-CARR
32	322-5	2	Screw-HH
33	92-1242	2	Decal
34	104-8300	12	Nut-Flange, NI
36	13-6200	1	Pin-Hitch, Pointed
37	3256-82	8	Washer-Flat
38	92-1298	1	Pin-Lynch
39	3296-48	4	Nut-Lock, NI
40	3232-17	4	Screw-CARR
41	105-4886	2	Nut-Tinnerman
42	323-6	2	Screw-HH
43	80-6990	2	Washer-Hardened

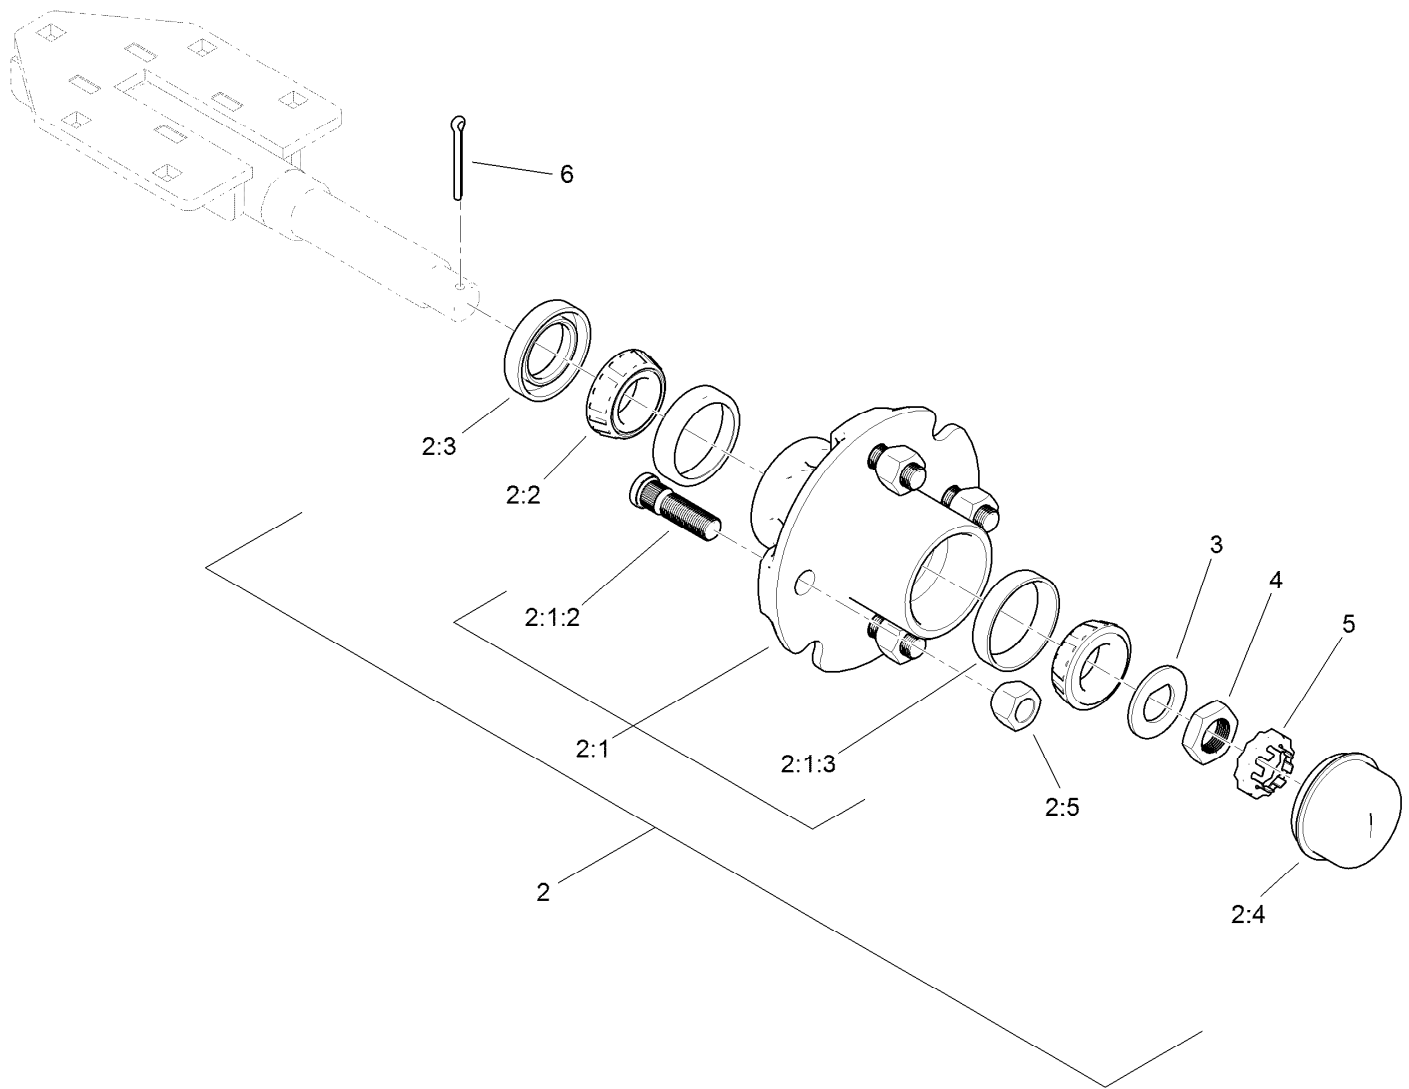


Hub and Axle Assembly No. 117-8255

Ref.	Part Number	Qty.	Description
2	117-5115	2	Hub And Bearing ASM
2:1	117-8251	1	Hub ASM
2:1:2	114-3918	4	Stud-Wheel
2:1:3	254-72	2	Bearing-Cup, Tapered
2:2	254-94	2	Bearing-Cone, Tapered
2:3	112-1690	1	Seal-Oil
2:4	241-119	1	Cap-Dust
2:5	242-50	4	Nut-Lug
3	117-8259	1	Washer-Spindle
4	117-8260	1	Nut
5	93-0307	1	Nut-Lock, Retainer
6	3272-18	1	Pin-Cotter

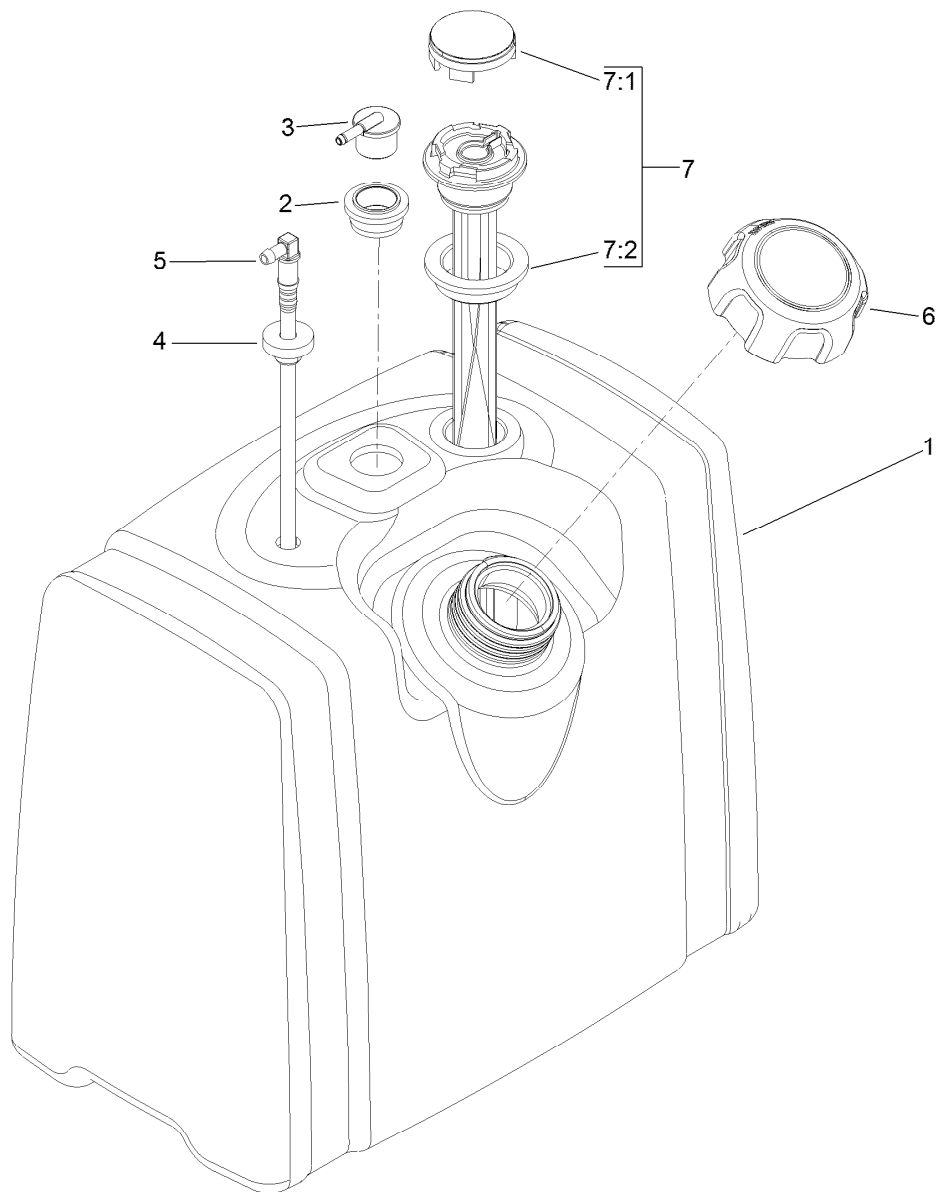

Fuel Tank Assembly No. 117-8455


Ref.	Part Number	Qty.	Description
1	117-8453	1	Tank-Fuel
2	114-0284	1	Grommet
3	114-0285	1	Valve-Rollover
4	46-6560	1	Bushing
5	115-9044	1	Pipe-Stand
6	115-7788	1	Cap-Fuel
7	119-0509	1	Gauge ASM
7:1	117-8404	1	Dial-Gauge
7:2	119-0508	1	Seal

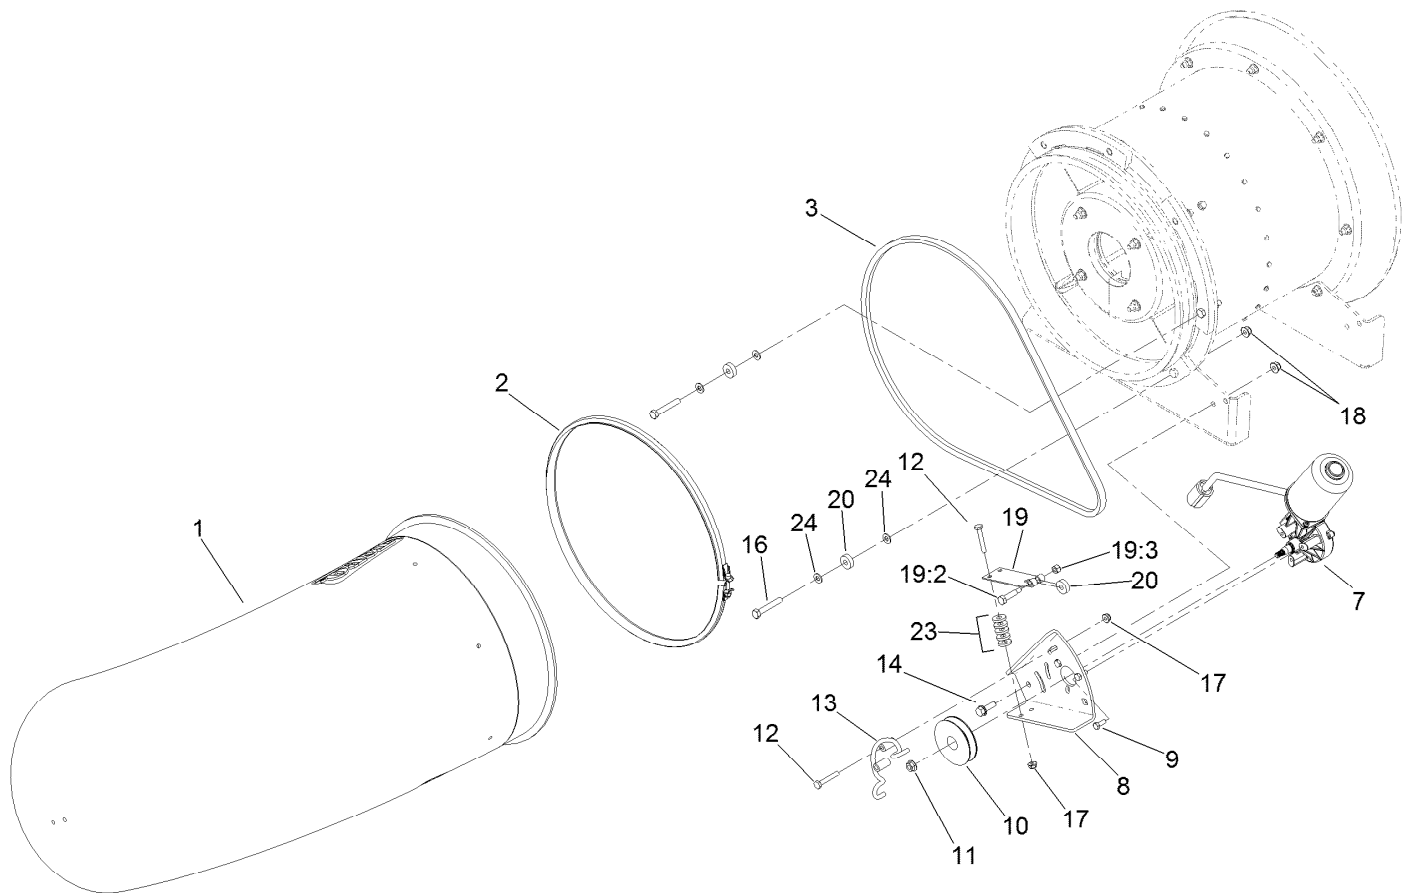

Nozzle, Belt and Guard Assembly

Ref.	Part Number	Qty.	Description
1	119-6287	1	Nozzle
2	112-6899	1	Clamp-Nozzle
3	112-1853	1	Belt-V
7	119-6340	1	Motor-Reversible (Emi)
8	115-5149-01	1	Bracket-Motor
9	33113-016	3	Screw-HH
10	115-5147	1	Pulley
11	98-0668	1	Nut
12	321-37	4	Screw-HH
13	112-6924	1	Guard-Belt, Drive


Ref.	Part Number	Qty.	Description
14	3234-29	2	Screw-HHF
16	322-10	2	Screw-HH
17	104-7201	4	Nut-HF
18	104-8300	2	Nut-Flange, NI
19	110-9650	1	Leaf Spring ASM
19:2	36-2250	1	Bolt-Shoulder
19:3	3296-42	1	Nut-Lock, NI
20	251-259	3	Bearing-Ball
23	88-7200	10	Washer-Flat
24	3256-74	4	Washer-Flat

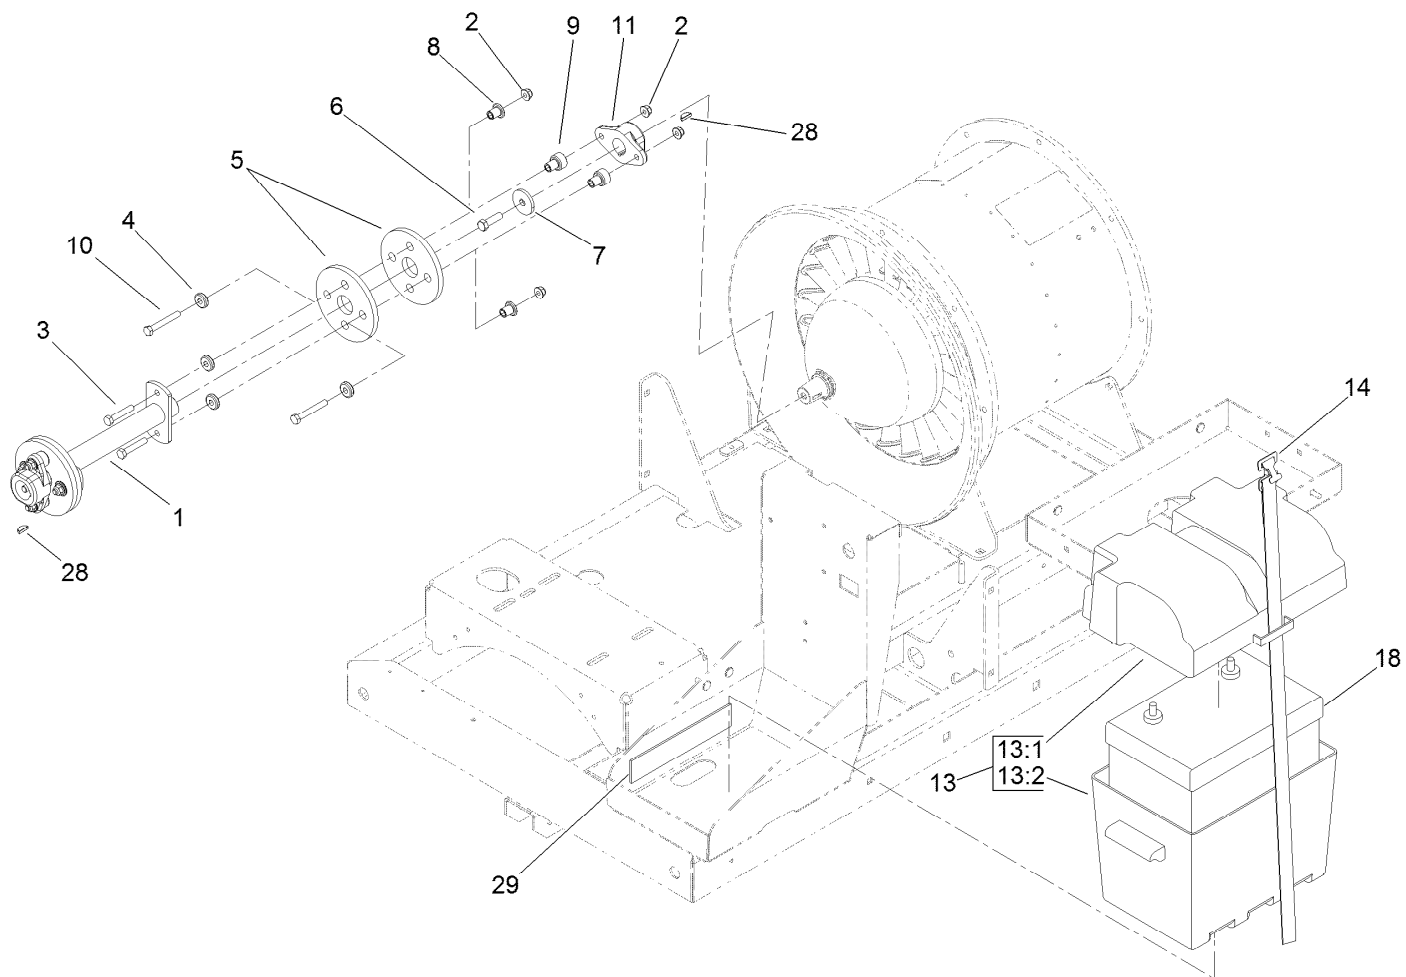

Clutch, Battery and Electrical Component Assembly


Ref.	Part Number	Qty.	Description
1	115-5124-03	1	Drive Shaft ASM
2	104-8300	8	Nut-Flange, NI
3	322-39	4	Screw-HH
4	115-5118	8	Washer
5	115-5129	4	Coupling-Rubber
6	323-7	2	Screw-HH
7	114-2120	2	Washer
8	115-5120	4	Spacer-Coupling, Rubber
9	115-5119	4	Spacer-Coupling, Rubber

Ref.	Part Number	Qty.	Description
10	322-32	4	Screw-HH
11	114-2122	2	Hub-Engine
13	93-7595	1	Battery Box ASM
13:1	105-2914	1	Top-Battery Box
13:2	105-2915	1	Bottom-Battery Box
14	3339-175	1	Strapping-Web, 48 Inch
18	108-1260	1	Battery-Dry
28	3257-5	2	Key-Woodruff
29	104-7102	2	Pad-Battery

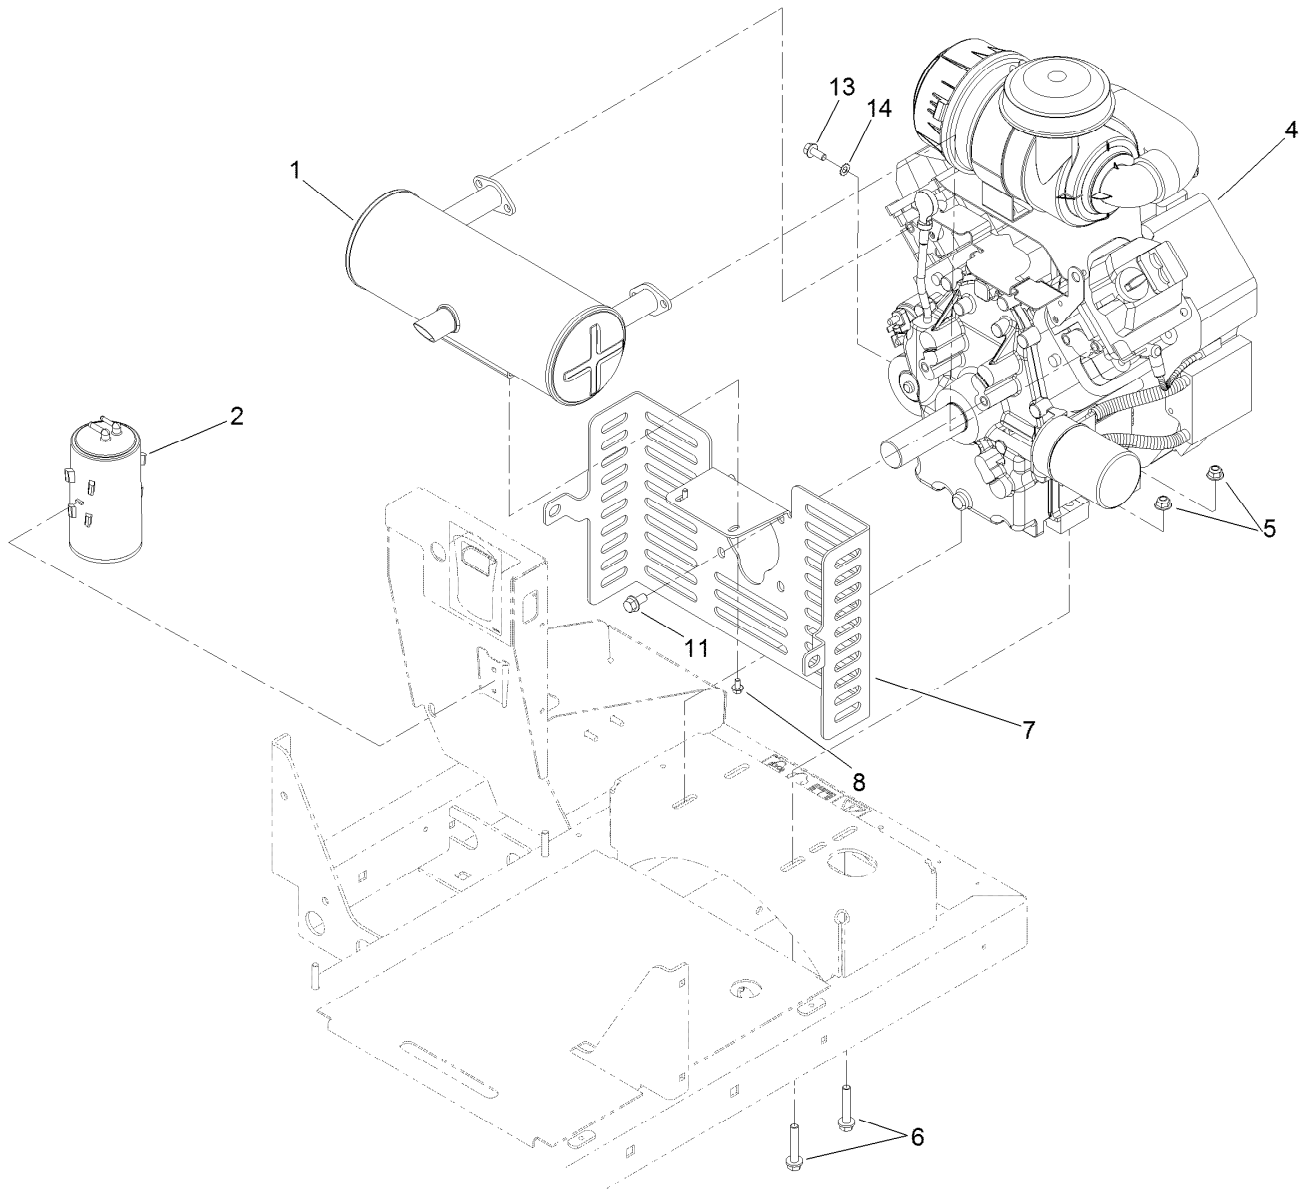

Engine and Muffler Assembly

Ref.	Part Number	Qty.	Description
1	112-6862	1	Muffler
2	115-2251	1	Canister-Carbon
4	117-8428	1	Engine-Kohler, Ch740-3137
5	104-8301	4	Nut-Flange, NI
6	66-9302	4	Screw-HHF, Whiz
7	119-6171-03	1	Mount-Muffler
8	33103-012	2	Screw-HHF
11	110-1718	4	Screw-HHF
13	33104-020	1	Screw-HHF
14	3255-8	1	Washer-Lock

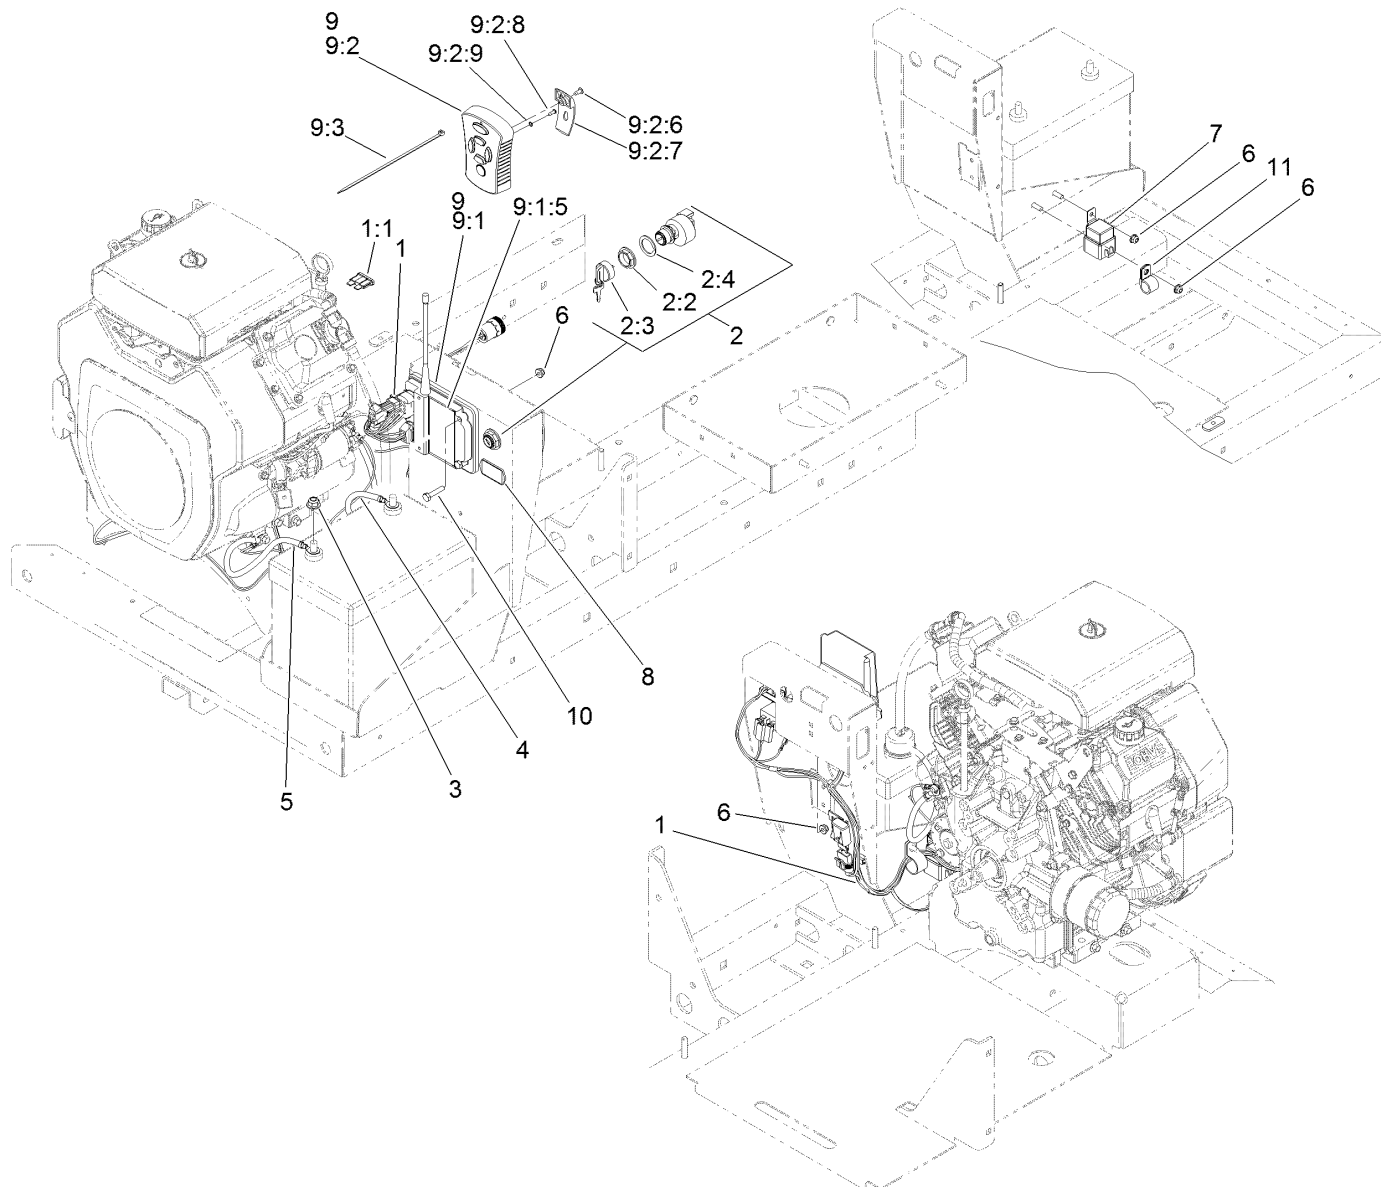

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	119-5760	1	Harness-Wire, Blower
1:1	109355	1	Fuse-Blade, 15 Amp
2	106-5269	1	Ignition Switch ASM
2:2	108-8660	1	Nut-Mounting
2:3	106-5270	1	Ignition Key Set
2:4	108-8659	1	Washer-Backup
3	104-8301	2	Nut-Flange, NI
4	114-9714	1	Cable-Battery, Positive
5	114-9715	1	Cable-Battery, Negative
6	104-7201	5	Nut-HF
7	99-7430	1	Relay
8	1-513374	1	Meter-Hour

Ref.	Part Number	Qty.	Description
9	117-8417	1	Proforce Remote/Transmitter
9:1	115-9550	1	Receiver
9:1:5	119-6290	1	Decal-Twm0315Rx
9:2	115-9551	1	Transmitter
9:2:6	112-6939	6	Screw
9:2:7	102-5934	1	Clip-Belt, Remote
9:2:8	112-6941	1	Screw-PPH
9:2:9	115-5143	6	O-Ring
9:3	3290-378	1	Tie-Cable
10	321-8	3	Screw-HH
11	2412-39	1	R-Clamp

Notes:

Notes:

Notes:



Count on it.