



Count on it.

Parts Catalog

Super Bagger Lawn Mower

Model No. 20197—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head


Contents

| | |
|--|----|
| Housing and Tunnel Assembly..... | 4 |
| Side Discharge, Transmission and Rear Wheel Assembly | 5 |
| Upper Handle Assembly | 6 |
| Lower Handle Assembly | 7 |
| Engine and Blade Assembly | 8 |
| Blade Brake Control Assembly..... | 9 |
| Switch Assembly | 10 |
| Rear Bag Assembly | 11 |
| Attachments and Accessories | 12 |

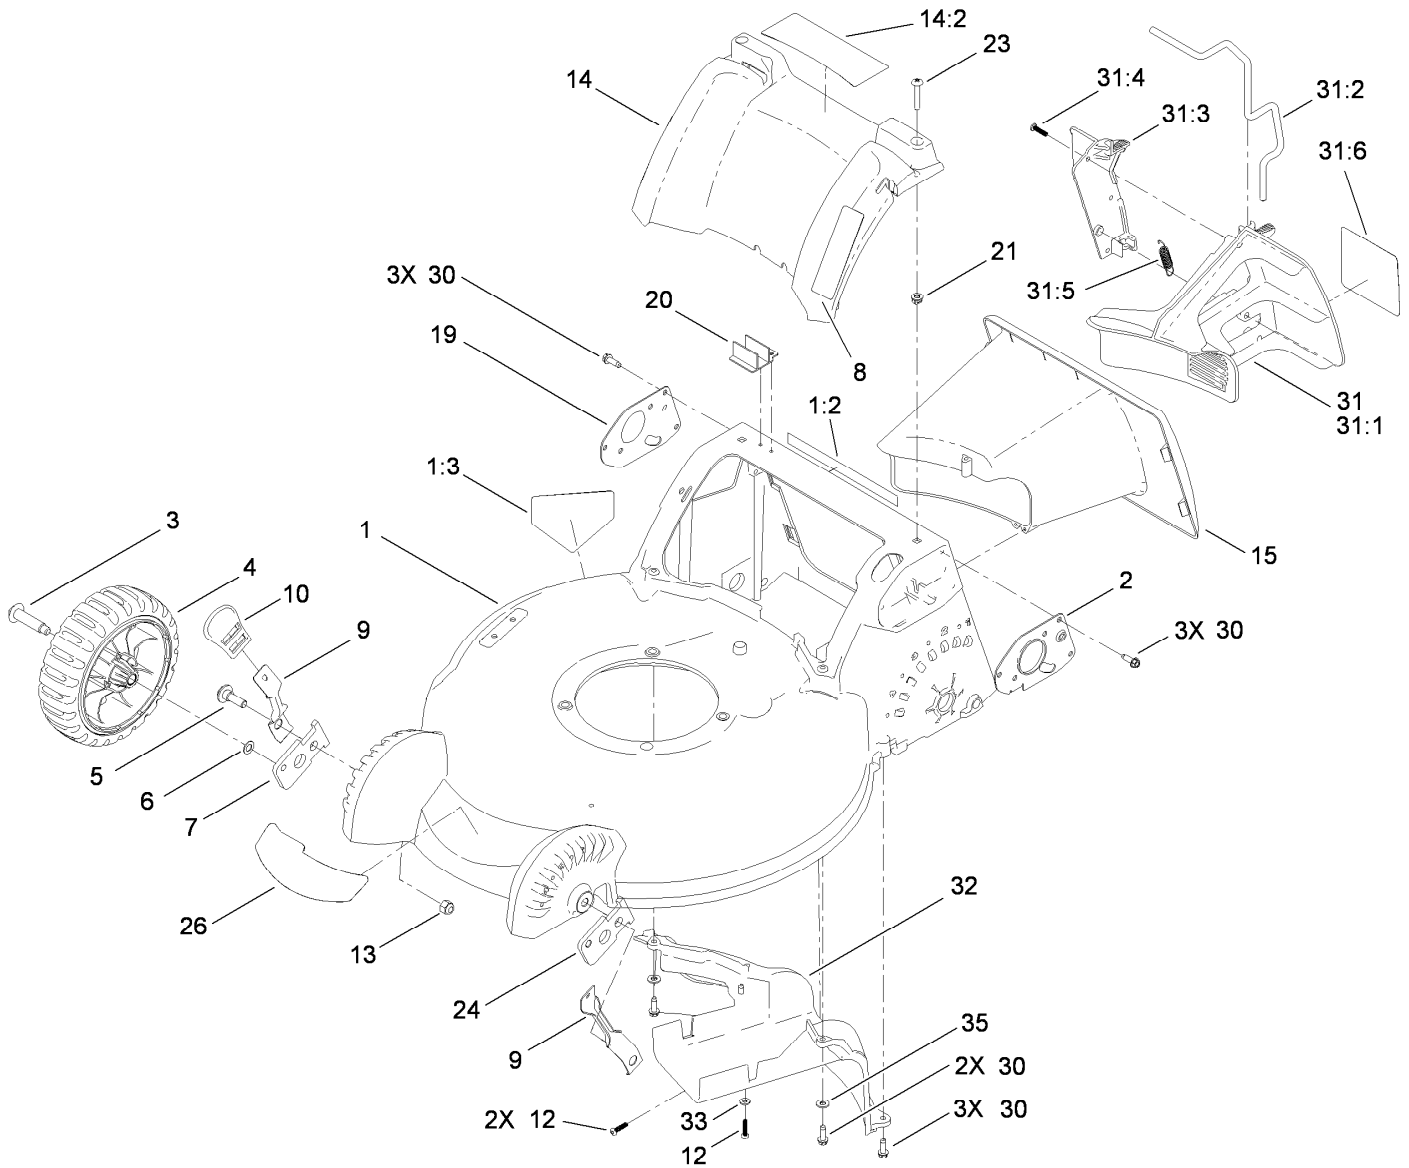


Housing and Tunnel Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------------|------|-------------|------|--------------------|
| 1 | 117-4167 | 1 | Housing ASM | 19 | 110-9416-03 | 1 | Mount-Handle, RH |
| 1:2 | 107-3889 | 1 | Decal-Safety | 20 | 117-5905 | 1 | Module-Switch |
| 1:3 | 94-8072 | 1 | Decal-Danger | 21 | 94-1610 | 2 | Nut-Clip |
| 2 | 110-9415-03 | 1 | Mount-Handle, LH | 23 | 108-0965 | 2 | Screw-PTH |
| 3 | 614650 | 2 | Bolt-Shoulder | 24 | 110-9420 | 1 | Arm-Pivot, LH |
| 4 | 117-4103 | 2 | 8 Inch Wheel ASM | 26 | 117-4164 | 1 | Decal-Super Bagger |
| 5 | 614672 | 2 | Bolt-Shoulder | 30 | 49-2040 | 11 | Screw-HWHTF |
| 6 | 40-1940 | 2 | Washer | 31 | 110-9468 | 1 | Mulch Plug ASM |
| 7 | 110-9421 | 1 | Arm-Pivot, RH | 31:1 | 110-9446 | 1 | Plug-Mulch, LH |
| 8 | 117-5902 | 1 | Decal-Quick Stow | 31:2 | 110-9448 | 1 | Latch-Plug, Mulch |
| 9 | 110-9434 | 2 | Arm-Spring, Front | 31:3 | 110-9447 | 1 | Plug-Mulch, RH |
| 10 | 110-0549 | 2 | Knob-HOC | 31:4 | 108-7476 | 3 | Screw-Plastite |
| 12 | 108-7476 | 6 | Screw-Plastite | 31:5 | 110-9458 | 1 | Spring-Extension |
| 13 | 3296-39 | 2 | Nut-Lock, NI | 31:6 | 110-9457 | 1 | Decal-Plug, Mulch |
| 14 | 115-3177 | 1 | Cover-Rear | 32 | 110-9423 | 1 | Baffle-Rear |
| 14:2 | 114-2820 | 1 | Decal-Warning | 33 | 3256-14 | 1 | Washer-Flat |
| 15 | 110-9455 | 1 | Tunnel | 35 | 3256-22 | 2 | Washer-Flat |

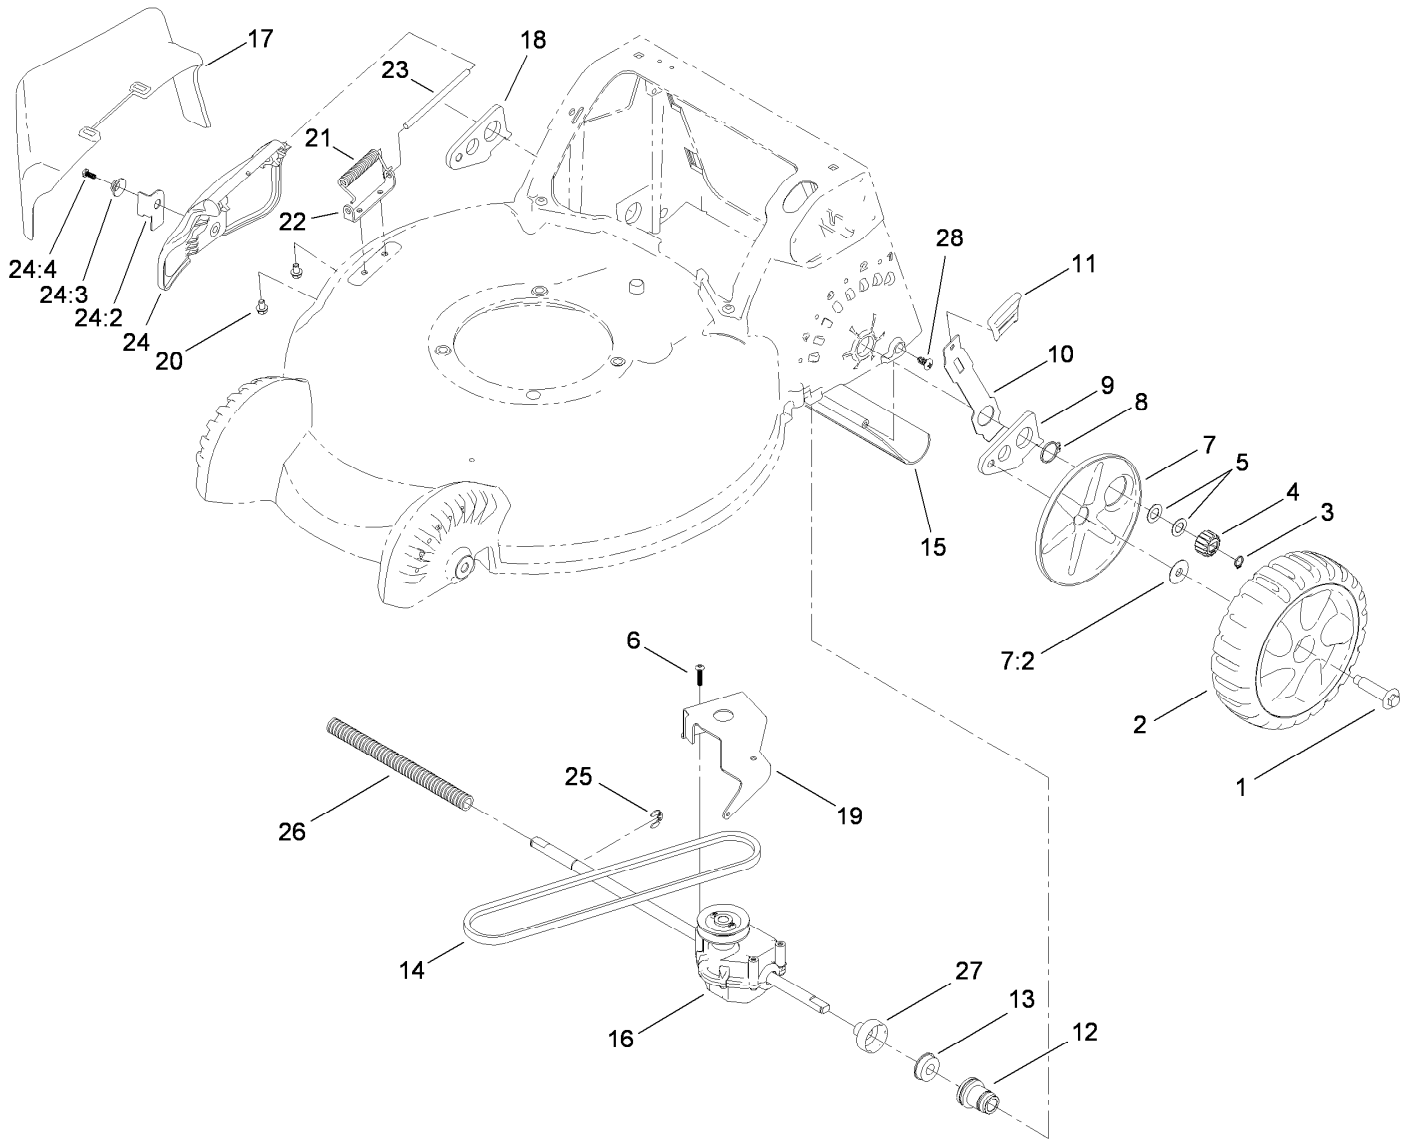


Side Discharge, Transmission and Rear Wheel Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|--------------------|------|-------------|------|--------------------------|
| 1 | 614650 | 2 | Bolt-Shoulder | 16 | 114-2812 | 1 | Transmission ASM |
| 2 | 117-4104 | 2 | Rear Wheel ASM | 17 | 105-3028 | 1 | Chute-Discharge, Side |
| 3 | 32151-61 | 2 | Ring-Retaining | 18 | 108-9343 | 1 | Arm-Rear Pivot, RH |
| 4 | 110-9417 | 2 | Gear-Pinion, 15T | 19 | 114-7977-03 | 1 | Bracket-Transmission |
| 5 | 36-4780 | 2 | Washer-Plain | 20 | 99-8445 | 2 | Screw-HWH, Taptite |
| 6 | 108-7476 | 3 | Screw-Plastite | 21 | 99-5293 | 1 | Spring-Torsion |
| 7 | 117-4197 | 2 | Wheel Cover ASM | 22 | 112-6416 | 1 | Bracket-Cover |
| 7:2 | 614426 | 1 | Washer-Stepped | 23 | 99-5291 | 1 | Rod-Cover |
| 8 | 32151-36 | 2 | Ring-Retaining | 24 | 106-8376 | 1 | Discharge Door ASM |
| 9 | 108-9344 | 1 | Arm-Rear Pivot, LH | 24:2 | 107-0795 | 1 | Latch-Door |
| 10 | 110-9445 | 2 | Arm-Spring, Rear | 24:3 | 107-7456 | 1 | Cap-Door |
| 11 | 110-0549 | 2 | Knob-HOC | 24:4 | 107-7461 | 1 | Screw-Plastite |
| 12 | 110-9422 | 2 | Retainer-Bearing | 25 | 65-2720 | 1 | Ring-Clip, Locking |
| 13 | 104-8699 | 2 | Bearing-Ball | 26 | 24-7922 | 1 | Conduit-Convolute, Split |
| 14 | 110-9429 | 1 | V-Belt | 27 | 114-2755 | 2 | Cap-Bearing |
| 15 | 112-8768 | 1 | Shield-Trailing | 28 | 117-1092 | 2 | Screw-PTH |

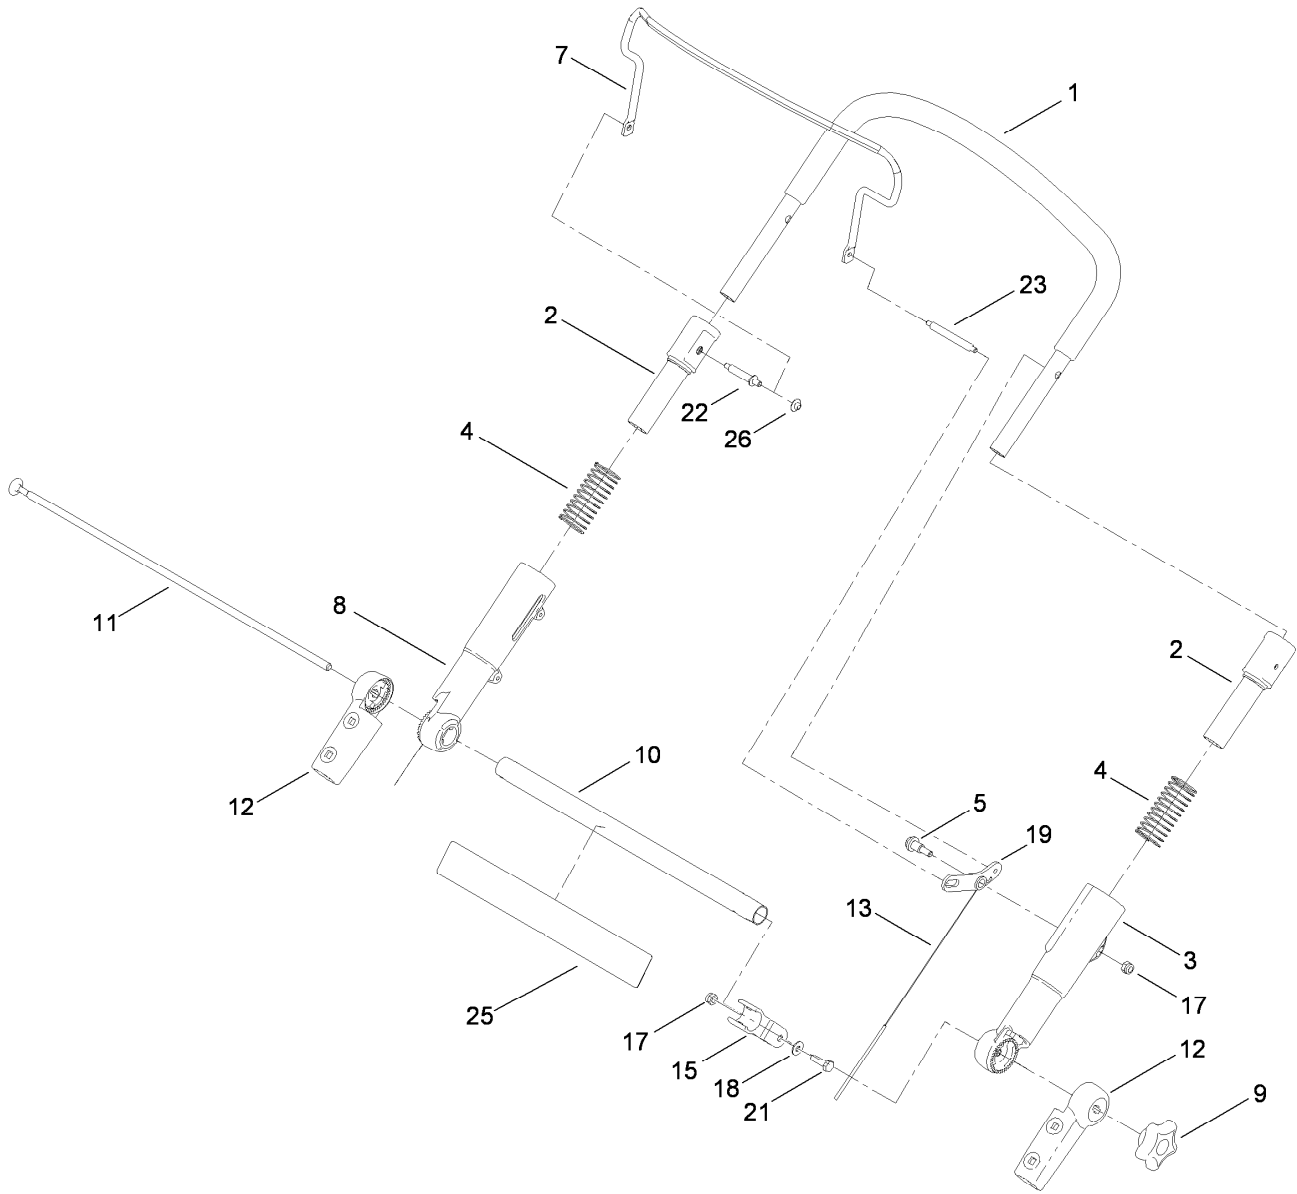


Upper Handle Assembly

| Ref. | Part Number | Qty. | Description | Ref. | Part Number | Qty. | Description |
|------|-------------|------|---------------------|------|-------------|---------------------|------------------|
| 1 | 108-0974 | 1 | Upper Handle ASM | 13 | 110-9465 | 1 | Cable-Traction |
| 2 | 112-8754 | 2 | Sleeve-Inner | 15 | 112-8801 | 1 | Clamp-Cable |
| 3 | 112-1544 | 1 | Sleeve-Outer, LH | 17 | 3296-73 | 2 | Nut-Lock, NI |
| 4 | 107-3869 | 2 | Spring-Compression | 18 | 3256-1 | 1 | Washer-Flat |
| 5 | 104-0858 | 1 | Bolt-Shoulder | 19 | 107-3893 | 1 | Lever-Traction |
| 7 | 110-1819-03 | 1 | Bail-Brake | 21 | 321-5 | 1 | Screw-HH |
| 8 | 112-1545 | 1 | Sleeve-Outer, RH | 22 | 108-0959 | 1 | Pin-Handle |
| 9 | 106-4161 | 1 | Knob-Handle | 23 | 110-1753 | 1 | Pin-Handle, BBC |
| 10 | 107-3867-03 | 1 | Tube-Cross | 25 | 1 | Decal-Personal Pace | |
| 11 | 107-3871 | 1 | Rod-Threaded | 26 | 108-9378 | 1 | Retainer-Push On |
| 12 | 107-3865 | 2 | Mount-Handle, Lower | | | | |

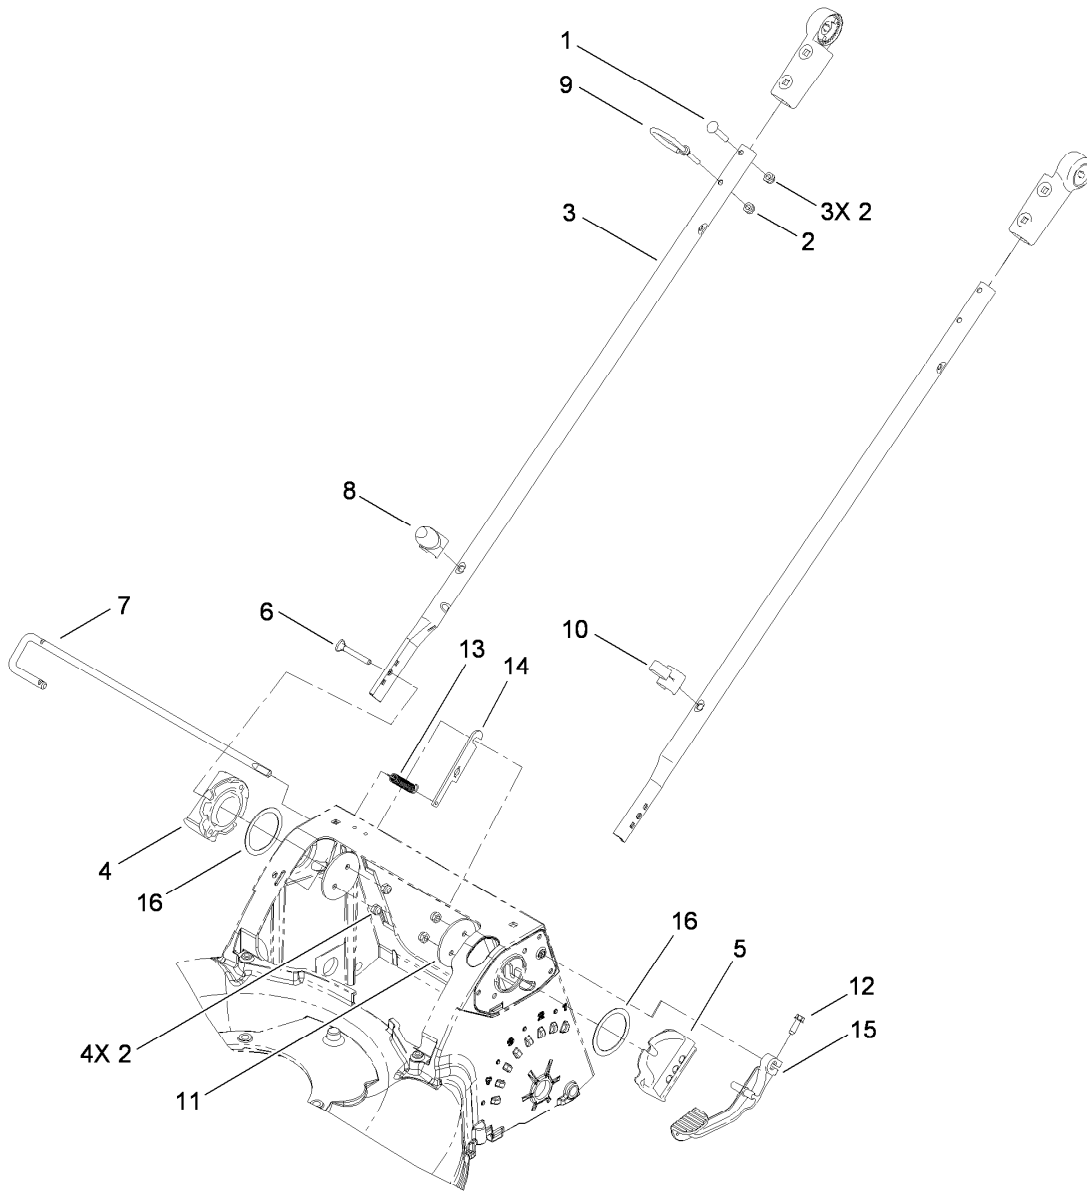

Lower Handle Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1 | 108-0988 | 3 | Screw-CARR | 9 | 107-3908 | 1 | Guide-Rope, Upper |
| 2 | 3296-73 | 8 | Nut-Lock, NI | 10 | 106-6805 | 1 | Guide-Cable |
| 3 | 107-3887-03 | 2 | Tube-Lower | 11 | 107-3944-03 | 2 | Plate |
| 4 | 108-9339-03 | 1 | Mount-Handle, RH | 12 | 49-2040 | 1 | Screw-HWHTF |
| 5 | 108-9340-03 | 1 | Mount-Handle, LH | 13 | 112-1542 | 1 | Spring-Extension |
| 6 | 95-4453 | 4 | Screw | 14 | 112-1539 | 1 | Plate-Rod, Release |
| 7 | 112-8755 | 1 | Rod-Release, Handle | 15 | 110-1823-03 | 1 | Lever-Release |
| 8 | 117-4141 | 1 | Guide-Rope, Lower | 16 | 107-3947 | 2 | Washer-Nylon |

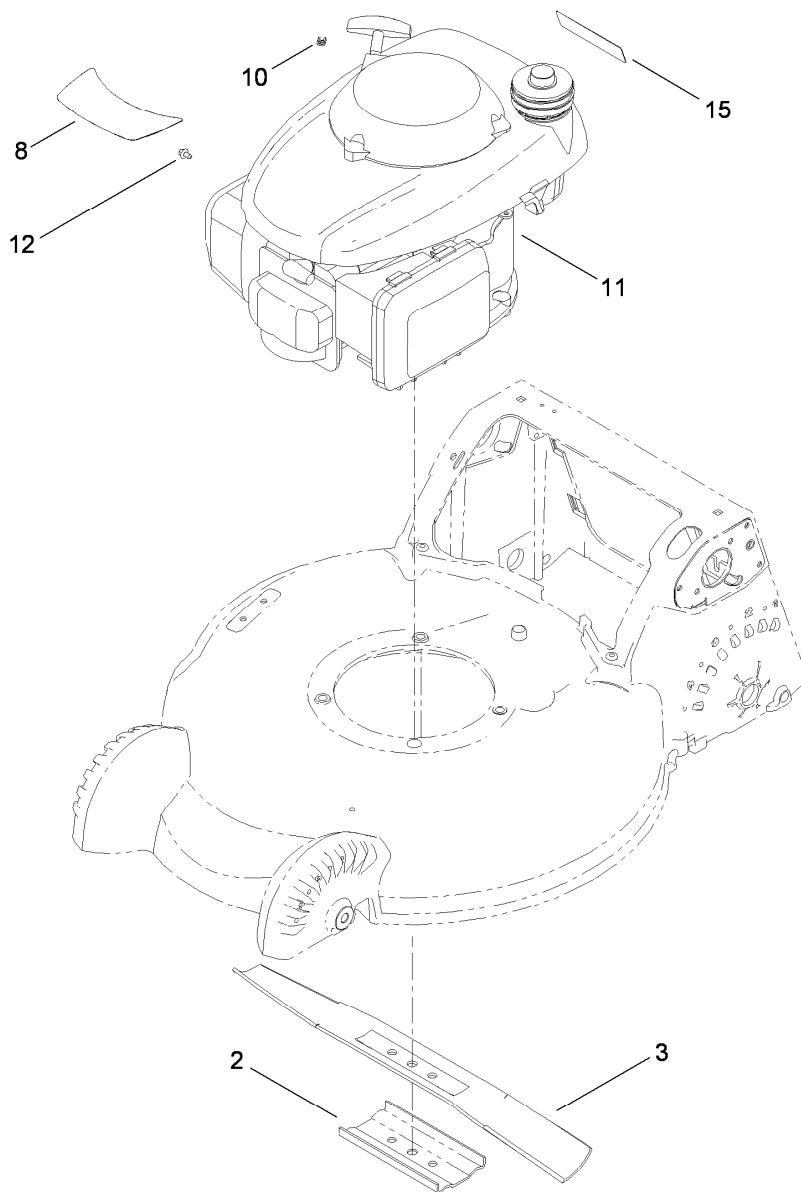


Engine and Blade Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------------------|
| 2 | 108-3766-03 | 1 | Support-Blade |
| 3 | 108-3759-03 | 1 | Blade-Bagging |
| 8 | 117-5955 | 1 | Decal-Engine |
| 10 | 92-1701 | 1 | Stop-Rope |
| 11 | | 1 | Engine-Honda, 654381-Gcv160 ● ■ |
| 12 | 98-1394 | 1 | Screw-HWH |
| 15 | 117-2718 | 1 | Decal-Arrester, Spark |

● Not serviced separately


■ Obtain parts from www.honda-engines.com

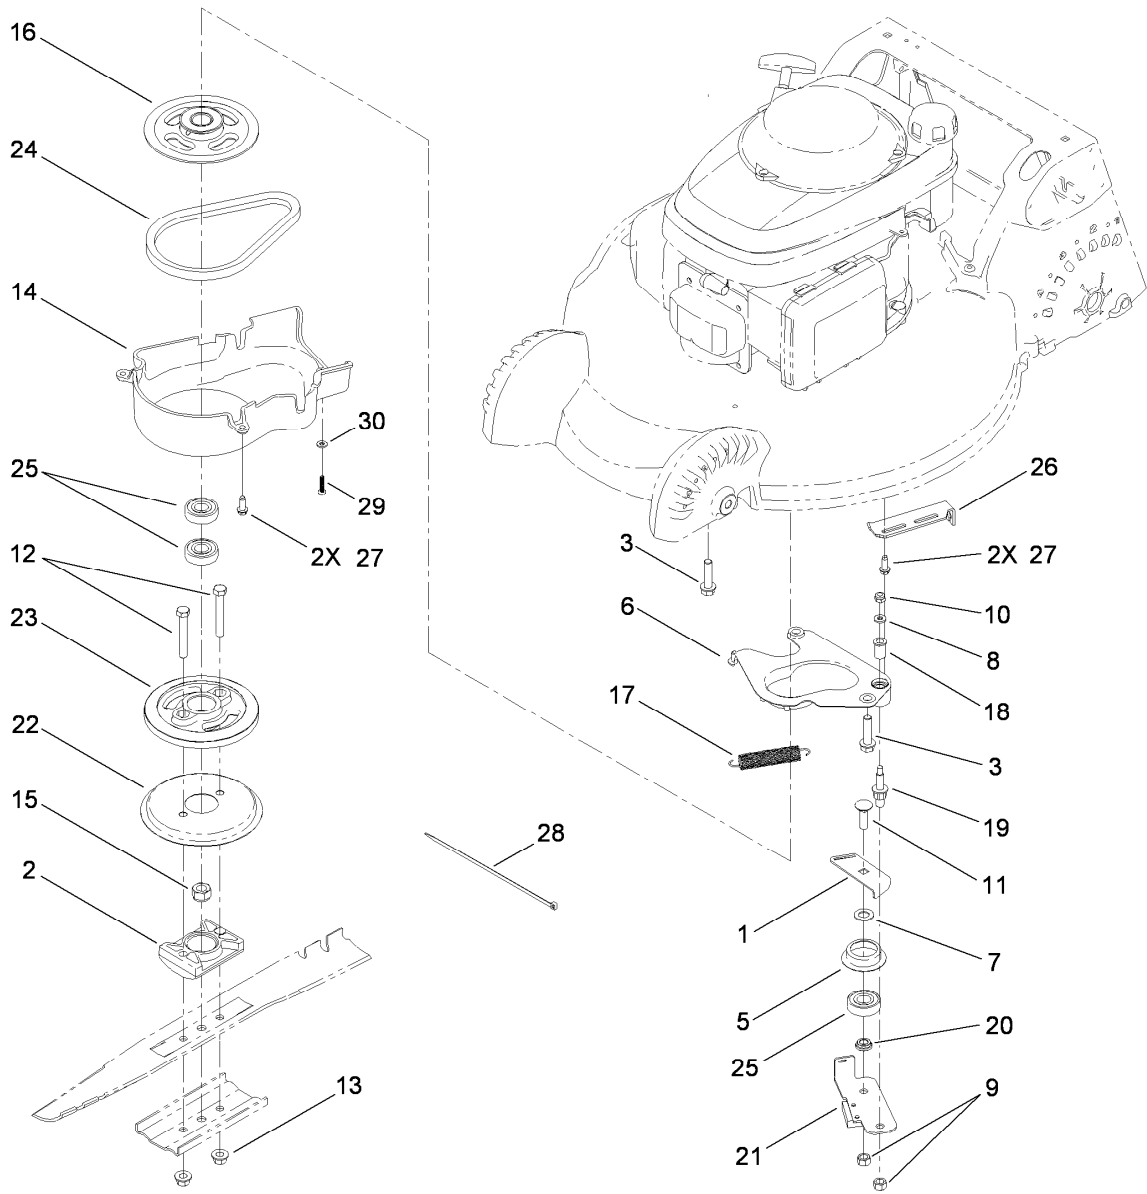

Blade Brake Control Assembly


| Ref. | Part Number | Qty. | Description |
|------|-------------|------|---------------|
| 1 | 107-7471 | 1 | Plate-Guide |
| 2 | 107-7487 | 1 | Support-Blade |
| 3 | 32144-102 | 3 | Screw-HWH |
| 5 | 108-3790 | 1 | Retainer-Belt |
| 6 | 107-0761 | 1 | Plate-Anchor |
| 7 | 605256 | 1 | Washer-Plain |
| 8 | 3256-16 | 1 | Washer-Flat |
| 9 | 603773 | 2 | Nut |
| 10 | 3296-73 | 1 | Nut-Lock, NI |
| 11 | 3231-25 | 1 | Screw-CARR |
| 12 | 3211-42 | 2 | Screw-HH |
| 13 | 54-9190 | 2 | Nut-Lock |
| 14 | 107-7488 | 1 | Cover |
| 15 | 108-9342 | 1 | Nut-Hex |
| 16 | 117-5970 | 1 | Pulley-BBC |

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-----------------------|
| 17 | 108-3792 | 1 | Spring-Tension, Brake |
| 18 | 107-0797 | 1 | Bushing |
| 19 | 107-0759 | 1 | Bolt-Shoulder |
| 20 | 107-0758 | 1 | Spacer-Bearing |
| 21 | 107-7477 | 1 | Brake Arm ASM |
| 22 | 108-3787 | 1 | Disc |
| 23 | 107-0754 | 1 | Drum |
| 24 | 110-1790 | 1 | Belt-BBC |
| 25 | 100-1048 | 3 | Bearing-Ball |
| 26 | 110-9425-03 | 1 | Bracket-Cable |
| 27 | 49-2040 | 4 | Screw-HWHTF |
| 28 | 614249 | 1 | Tie-Cable |
| 29 | 108-7476 | 1 | Screw-Plastite |
| 30 | 3256-14 | 1 | Washer-Flat |

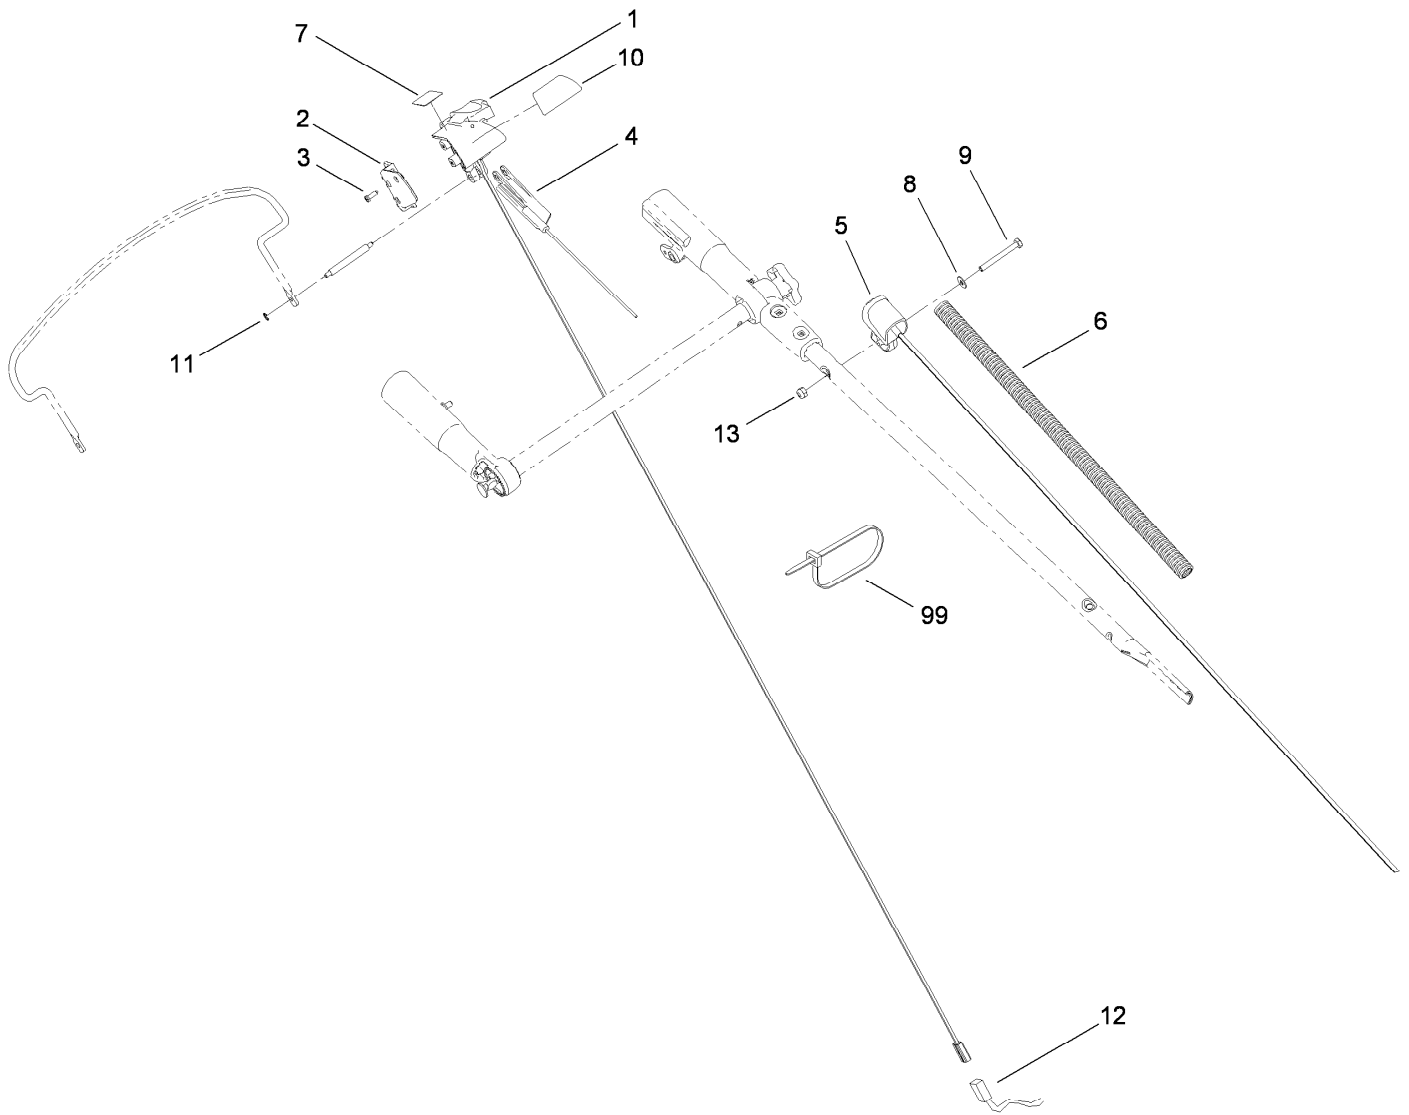

Switch Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|
| 1 | 117-5908 | 1 | Safety Switch ASM |
| 2 | 108-7532 | 1 | Cover-Switch |
| 3 | 32144-111 | 3 | Screw-PPH |
| 4 | 112-1536 | 1 | Cable-Bcs |
| 5 | 117-5975 | 1 | Switch Housing ASM |
| 6 | 119-3778 | 1 | Tube-Loom, Split |
| 7 | 119-3796 | 1 | Decal-Control, Blade |
| 8 | 3256-1 | 1 | Washer-Flat |
| 9 | 321-13 | 1 | Screw-HH |
| 10 | 117-5910 | 1 | Decal-Control, Blade |
| 11 | 110-1758 | 1 | Ring-Retaining |
| 12 | 119-0288 | 1 | Harness-Wire |
| 13 | 3296-73 | 1 | Nut-Lock, NI |
| 99 | 614249 | 2 | Tie-Cable |

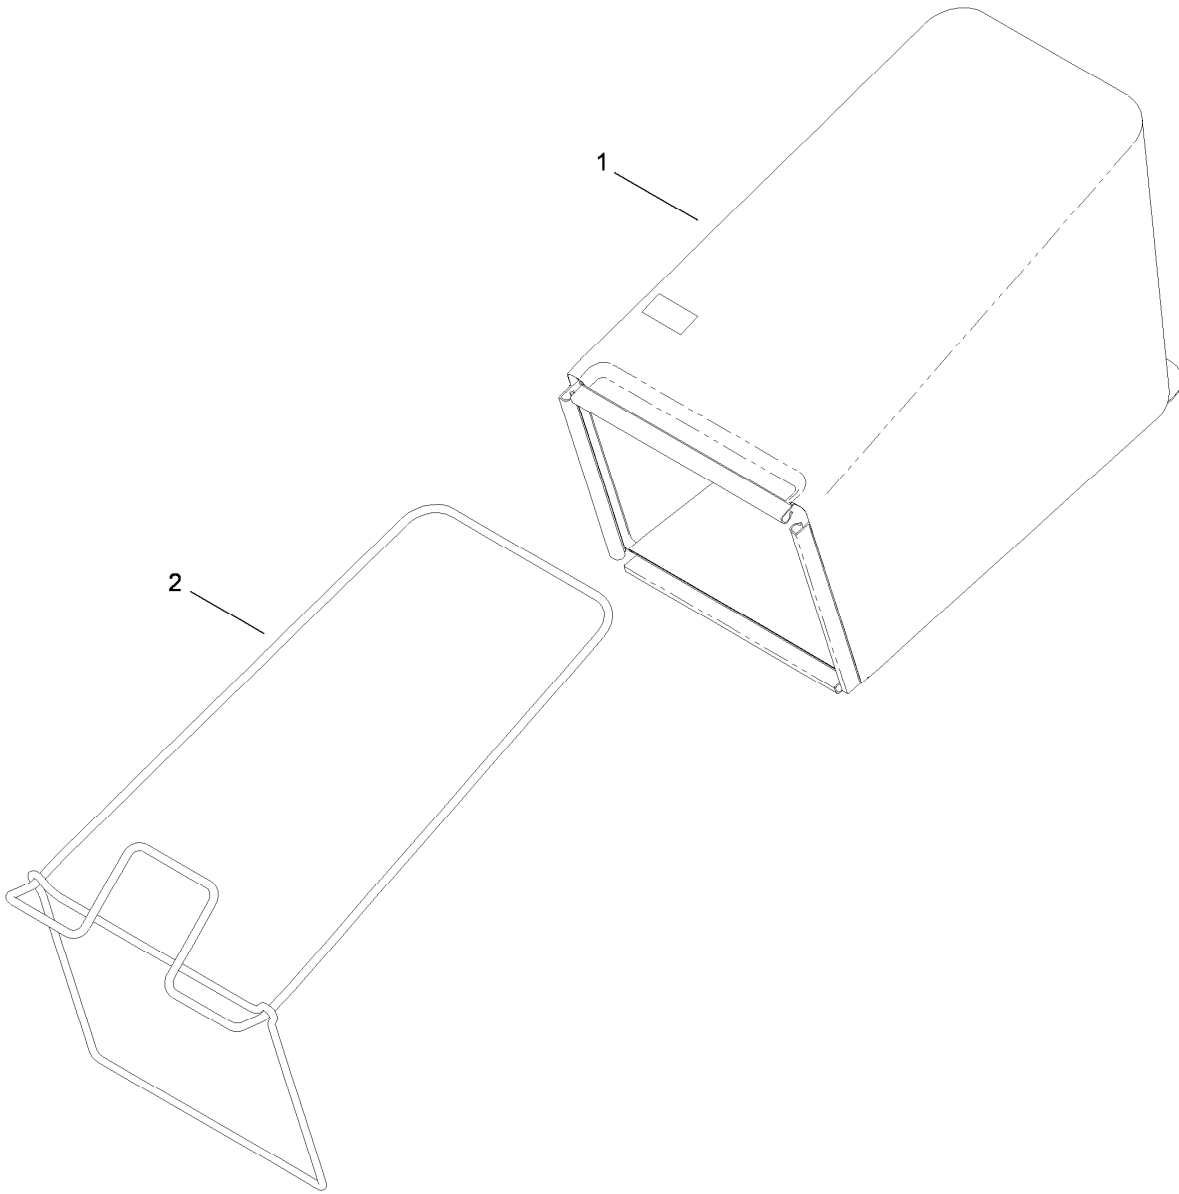

Rear Bag Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1 | 117-4191 | 1 | Grass Bag ASM |
| 2 | 112-8750-03 | 1 | Frame-Bag |

Attachments and Accessories

For 20197 Super Bagger Lawn Mower

| Product Name | Model/Part |
|-------------------------|-------------|
| BLADE-21 INCH..... | 108-0954-03 |
| Cruise Control Kit..... | 89919 |

Notes:

Notes:

Notes:



Count on it.