




PART NO. 54-9820

**INSTALLATION
INSTRUCTIONS****HEADLIGHT KIT****INSTALL LAMP ASSEMBLY**

1. Make sure engine is stopped and key is removed from ignition switch.
2. Remove lower capscrew, washer and locknut securing control panel to right handle.
3. Determine correct set of mounting holes in lamp mount and loosely secure lamp mount to control panel and handle, using lower mounting holes and fasteners previously removed.
4. Remove upper fasteners securing control panel to right handle and secure lamp mount to panel and handle. Tighten all fasteners.
5. Mount U-bracket to lamp mount with a carriage bolt, lockwasher, and nut. Do not over tighten nut or light adjustment will be impaired.
6. Mount lamp assembly bracket to U-bracket with flange head screw, (2) lockwashers, and a flange locknut. Position a washer between the U-bracket and lamp bracket on each side. Do not over tighten.
7. Connect short jumper wire to lamp wire assembly.
8. Plug jumper wire with connector into engine wire on right side of engine.
9. Secure remaining jumper wire, with ring terminal end, to engine block, chassis or handle.

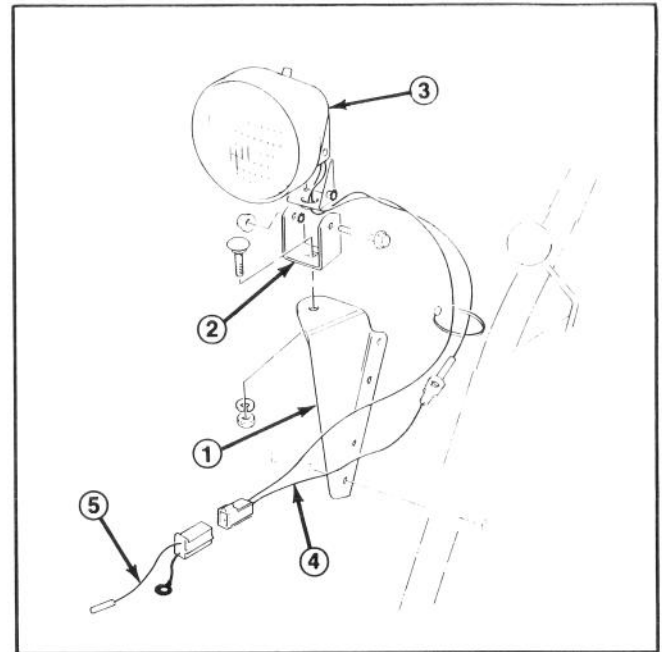

1. Lamp mount
2. U-Bracket
3. Lamp assembly
4. Lamp wire assembly
5. Jumper wire

10. Secure wire harness to handle with tie wraps. Make sure wire harness does not interfere with operation of control levers or linkage.