



**Z-Master**

# **Z320 OFZ Traction Unit**

**Model No. 74180 – 790001 & Up**

---

## **Parts Catalog**

## ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

## Contents

| Description                    | Page | Description                               | Page |
|--------------------------------|------|-------------------------------------------|------|
| Frame & Wheels .....           | 1    | Crankcase .....                           | 14   |
| Frame And Wheel Asm .....      | 2    | Oil Pan / Lubrication .....               | 15   |
| Electrical System .....        | 3    | Head / Valve / Breather .....             | 16   |
| Parking Brake .....            | 4    | Ignition / Electrical .....               | 17   |
| Hydraulic System .....         | 5    | Blower Housing And Baffles .....          | 18   |
| Hydraulic System .....         | 6    | Starter System .....                      | 19   |
| Seat And Fenders .....         | 7    | Fuel System .....                         | 20   |
| Steering Controls .....        | 8    | Engine Controls .....                     | 21   |
| Heat Shields And Exhaust ..... | 9    | Air Intake / Filtration .....             | 22   |
| Drive Systems .....            | 10   | Exhaust .....                             | 23   |
| Electric Schematic .....       | 11   | Gear Box Assembly No. 94–4641 .....       | 24   |
| Hydraulic Schematic .....      | 12   | Hydraulic Pump Assembly No. 98–1957 ..... | 25   |
| Crankshaft .....               | 13   |                                           |      |

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation | Meaning                | Abbreviation | Meaning                           |
|--------------|------------------------|--------------|-----------------------------------|
| AR .....     | as required            | HWHTF .....  | hex washer head<br>thread forming |
| ASM .....    | assembly               | INC .....    | incorporated                      |
| CARR .....   | carriage               | LH .....     | left hand                         |
| DEG .....    | degrees                | PH .....     | pan head                          |
| FH .....     | flat head              | PPH .....    | Phillips pan head                 |
| GA .....     | gauge                  | PTO .....    | power take off                    |
| HF .....     | hex flange             | RH .....     | right hand                        |
| HFV .....    | hex flange washer      | SFH .....    | slotted fillister head            |
| HH .....     | hex head               | SH .....     | square head                       |
| HHF .....    | hex head flange        | SHWH .....   | slotted hex washer head           |
| HHST .....   | hex head self tapping  | SPH .....    | slotted pan head                  |
| HJ .....     | hex jam                | STD .....    | standard                          |
| HOC .....    | height-of-cut          | TAP .....    | self tapping                      |
| HS .....     | hex socket             | TH .....     | truss head                        |
| HSBH .....   | hex socket button head | TTH .....    | Torx truss head                   |
| HSFH .....   | hex socket flat head   | WH .....     | wing head                         |
| HSR .....    | hex socket head        |              |                                   |
| HWH .....    | hex washer head        |              |                                   |

## Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

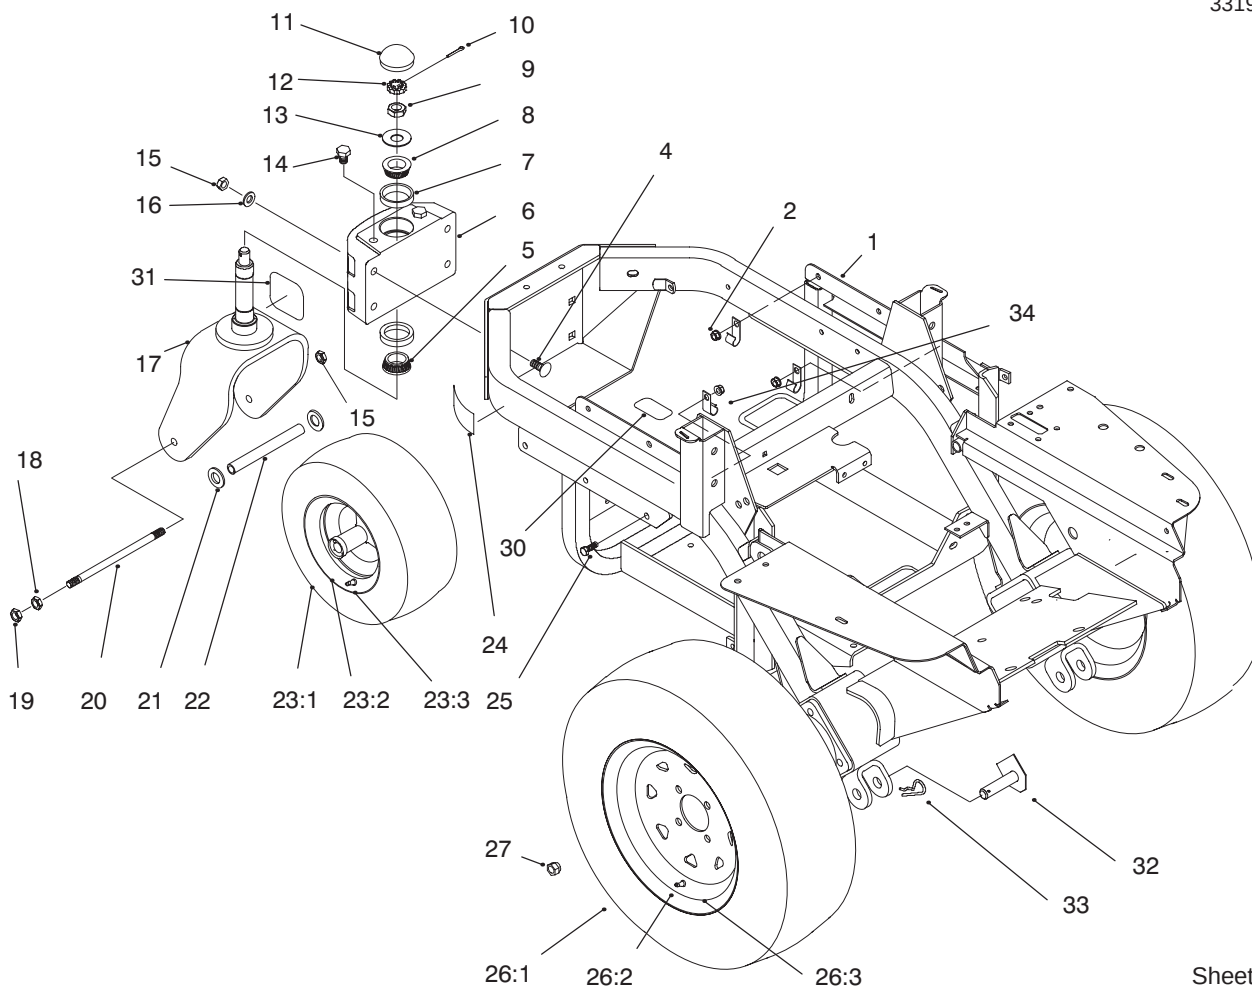


Sheet No.: 2

## Frame & Wheels

| Ref. No. | Part No.   | Qty. | Description           |
|----------|------------|------|-----------------------|
| 1        | 94-4618-03 | 1    | Support-Engine        |
| 2        | 3296-39    | 6    | Nut-Lock              |
| 3        | 94-9598    | 1    | Frame ASM             |
| 4        | 3233-27    | 4    | Screw-CARR            |
| 5        | 254-70     | 1    | Bearing w/Cone & Seal |
| 6        | 94-9489-01 | 1    | Housing-Spindle       |
| 7        | 254-61     | 2    | Cup-Bearing           |
| 8        | 254-62     | 1    | Cone-Bearing          |
| 9        | 3220-7     | 1    | Nut-Jam               |
| 10       | 3272-17    | 1    | Pin-Cotter            |
| 11       | 94-4665    | 1    | Dustcap               |
| 12       | 93-0307    | 1    | Nut-Lock              |
| 13       | 3256-8     | 1    | Washer-Flat           |
| 14       | 325-2      | 2    | Screw                 |
| 15       | 3296-23    | 5    | Nut-Lock              |
| 16       | 3256-26    | 4    | Washer-Flat           |
| 17       | 94-4647-01 | 1    | Castor Fork           |
| 18       | 3217-9     | 1    | Nut-HH                |
| 19       | 3218-5     | 1    | Nut-Jam               |
| 20       | 94-4752    | 1    | Axle-Castor           |
| 21       | 3256-28    | 2    | Washer-Flat           |
| 22       | 94-4753    | 1    | Tube-Spacer           |
| 23:1     | 94-9384    | 1    | Tire                  |
| 23:2     | 94-9383    | 1    | ASM-Wheel             |
| 24       | 93-9198    | 1    | Decal-Warning         |

| Ref. No. | Part No. | Qty. | Description               |
|----------|----------|------|---------------------------|
| 25       | 323-6    | 6    | Screw-HH                  |
| 26:1     | 94-9387  | 2    | Tire                      |
| 26:2     | 232-27   | 2    | Valve Stem & Cap Assembly |
| 26:3     | 94-9386  | 2    | Wheel                     |
| 27       | 242-50   | 8    | Nut-Lug                   |
| 28       | 3269-8   | 2    | Rivet                     |
| 30       | 77-3100  | 1    | Decal-Warning             |
| 31       | 95-1956  | 1    | Decal-Z320                |
| 32       | 94-4755  | 2    | Pivot Pin ASM             |
| 33       | 3290-343 | 2    | Pin-Cotter                |
| 34       | 8830     | 1    | Retainer-"J"              |

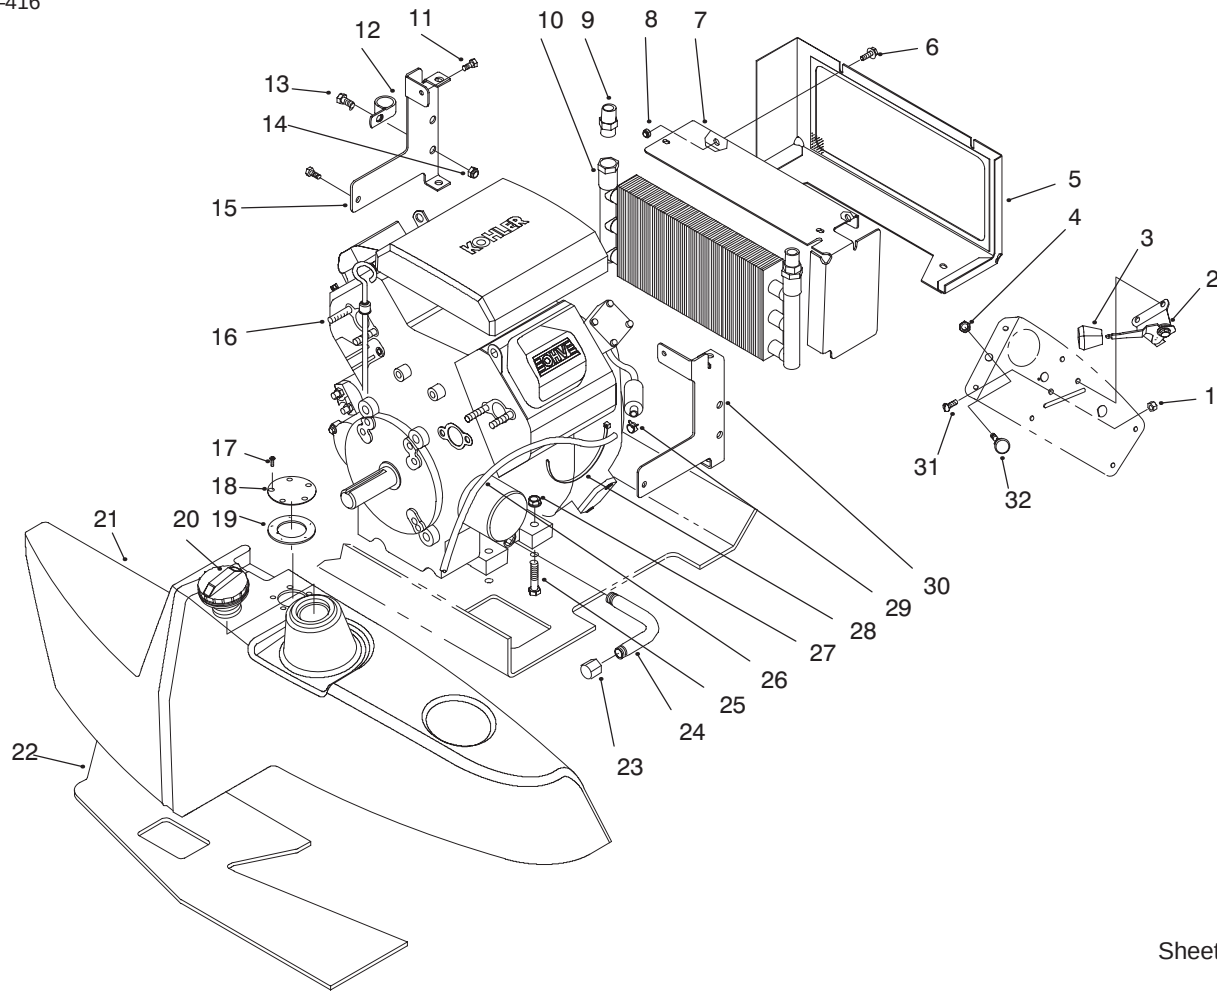


Sheet No.: 3

## Frame And Wheel Asm

| Ref. No. | Part No.   | Qty. | Description                |
|----------|------------|------|----------------------------|
| 1        | 3296-42    | 2    | Nut-Lock                   |
| 2        | 95-1955    | 1    | Control-Throttle           |
| 3        | 66-0120    | 1    | Knob                       |
| 4        | 3220-3     | 1    | Nut-Hex Jam                |
| 5        | 94-9556-03 | 1    | Cooler Shroud ASM          |
| 6        | 3234-4     | 6    | Screw-HH                   |
| 7        | 94-9563-03 | 1    | Bracket-Shroud             |
| 8        | 32148-6    | 6    | Insert                     |
| 9        | 93-5107    | 2    | Fitting-Adapter            |
| 10       | 24-0760    | 1    | Exchanger-Heat             |
| 11       | 32144-10   | 2    | Screw-HH                   |
| 12       | 2412-39    | 4    | R-Clamp                    |
| 13       | 322-3      | 4    | Screw-HH                   |
| 14       | 3296-29    | 4    | Nut-Lock                   |
| 15       | 94-6142    | 1    | Bracket-Cooler             |
| 16       | 94-9461    | 1    | Engine Kohler Ch20         |
| 17       | 3250-29    | 5    | Screw                      |
| 18       | 94-9597-03 | 1    | Cover-Fuel Tank<br>Opening |
| 19       | 62-7650    | 1    | Gasket                     |
| 20       | 93-3101    | 1    | Gas Cap                    |
| 21       | 94-9553    | 1    | Fuel Tank ASM              |
| 22       | 98-1319    | 1    | Foam-Tank                  |
| 23       | 288-4      | 1    | Cap-Pipe                   |
| 24       | 94-9499    | 1    | Tube-Oil Drain             |
| 25       | 323-9      | 4    | Screw-HH                   |

| Ref. No. | Part No.   | Qty. | Description       |
|----------|------------|------|-------------------|
| 26       | 94-9502    | 1    | Hose-Gas          |
| 27       | 3296-39    | 4    | Nut-Lock          |
| 28       | 3290-378   | 1    | Tie-Cable         |
| 29       | 2412-98    | 2    | Clamp-Hose        |
| 30       | 94-6141-03 | 1    | Bracket-Cooler    |
| 31       | 3258-166   | 2    | Screw             |
| 32       | 98-1956    | 1    | Control-Push Pull |

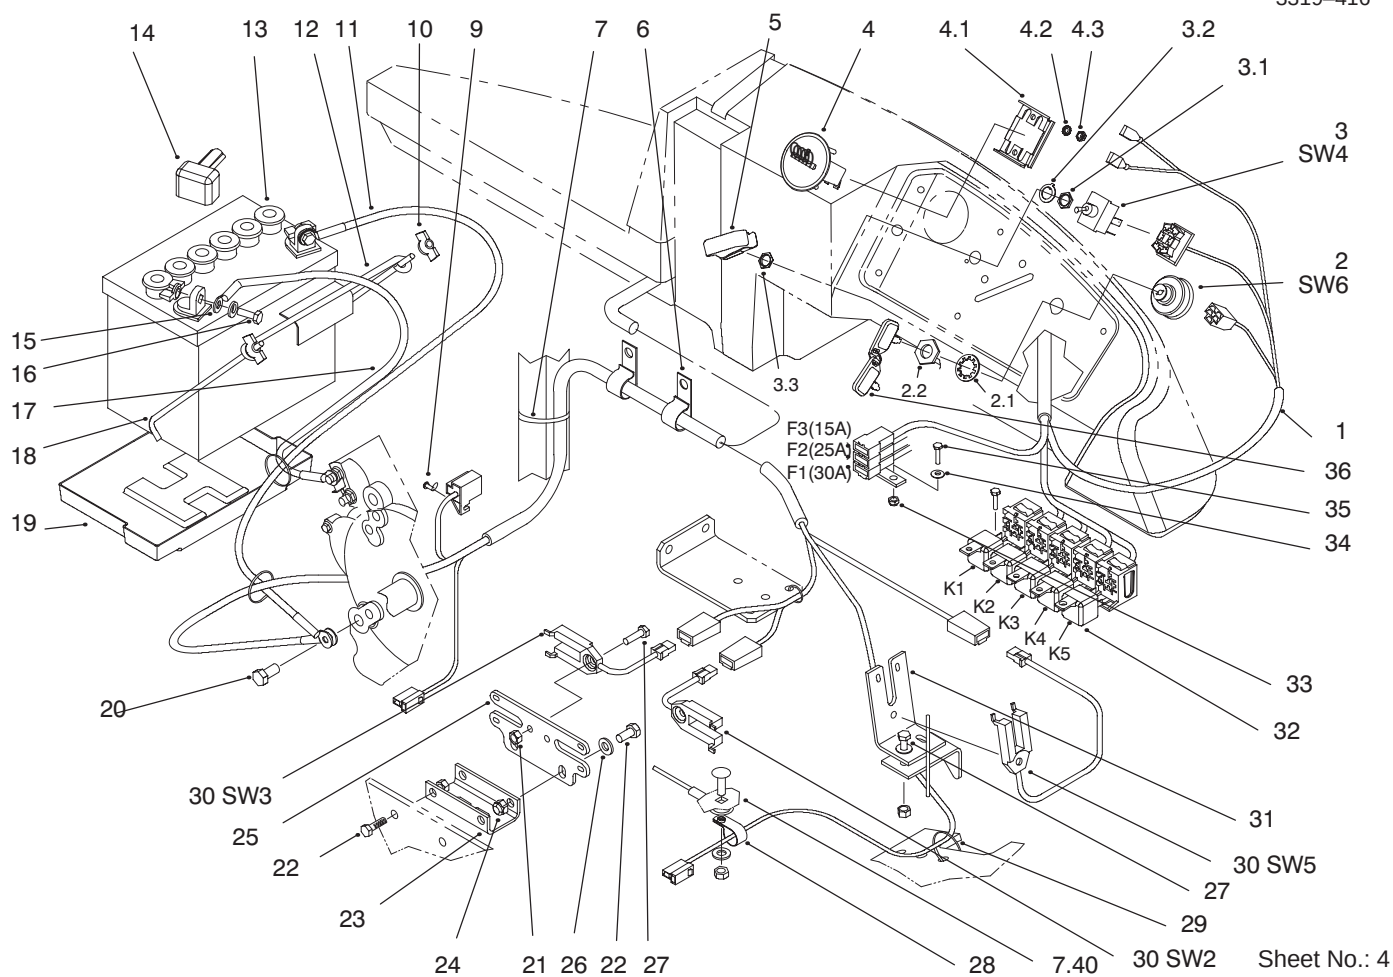


Sheet No.: 4

## Electrical System

| Ref. No. | Part No. | Qty. | Description       |
|----------|----------|------|-------------------|
| 1        | 94-4680  | 1    | Harness—Main      |
| 2        | 111216   | 1    | Switch—Ignition   |
| 2:1      | 101884   | 2    | Nut—Hex           |
| 2:2      | 9201604  | 1    | Washer—Lock       |
| 3        | 92-9811  | 1    | Switch—Toggle     |
| 3:1      | 105805   | 1    | Nut               |
| 3:2      | 102950   | 1    | Washer            |
| 3:3      | 113179   | 1    | Nut               |
| 4        | 78-0020  | 1    | Hourmeter         |
| 4:1      | 78-3320  | 1    | Clamp—Hour Meter  |
| 4:2      | 3255-25  | 2    | Washer—Lock       |
| 4:3      | 3217-27  | 2    | Nut—HH            |
| 5        | 113050   | 1    | Cover—Switch      |
| 6        | 94-9580  | 2    | Clamp—J           |
| 7        | 3290-379 | 1    | Tie—Cable         |
| 9        | 32144-74 | 2    | Screw             |
| 10       | 32103-22 | 4    | Nut—Wing          |
| 11       | 92-6287  | 1    | ASM—Wire (Ground) |
| 12       | 113010   | 1    | Hold Down         |
| 13       | 115877   | 1    | Battery           |
| 14       | 28-8080  | 1    | Boot—Terminal     |
| 15       | 3256-22  | 4    | Washer—Flat       |
| 16       | 321-4    | 2    | Screw—HH          |
| 17       | 28-3893  | 1    | ASM—Wire          |
| 18       | 94-6146  | 2    | Retainer—Battery  |
| 19       | 106948   | 1    | Tray—Battery      |

| Ref. No. | Part No.   | Qty. | Description          |
|----------|------------|------|----------------------|
| 20       | 323-4      | 1    | Screw—HH             |
| 21       | 3296-42    | 5    | Nut—Lock             |
| 22       | 322-3      | 4    | Screw—HH             |
| 23       | 94-4797-03 | 1    | Channel—Mount Switch |
| 24       | 3296-29    | 4    | Nut—Lock             |
| 25       | 94-9460    | 1    | Plate—Switch Mount   |
| 26       | 3256-23    | 2    | Washer—Flat          |
| 27       | 321-5      | 5    | Screw—HH             |
| 28       | 2412-93    | 1    | R—Clamp              |
| 29       | 3290-378   | 5    | Tie—Cable            |
| 30       | 98-1324    | 3    | Switch—Interrupter   |
| 31       | 94-4696    | 1    | Angle—Mount          |
| 32       | 116397     | 5    | Relay                |
| 33       | 3296-2     | 3    | Nut Lock             |
| 34       | 3256-14    | 3    | Washer—Flat          |
| 35       | 32105-13   | 3    | Screw—HH             |
| 36       | 62-7770    | 2    | Key—Ignition         |

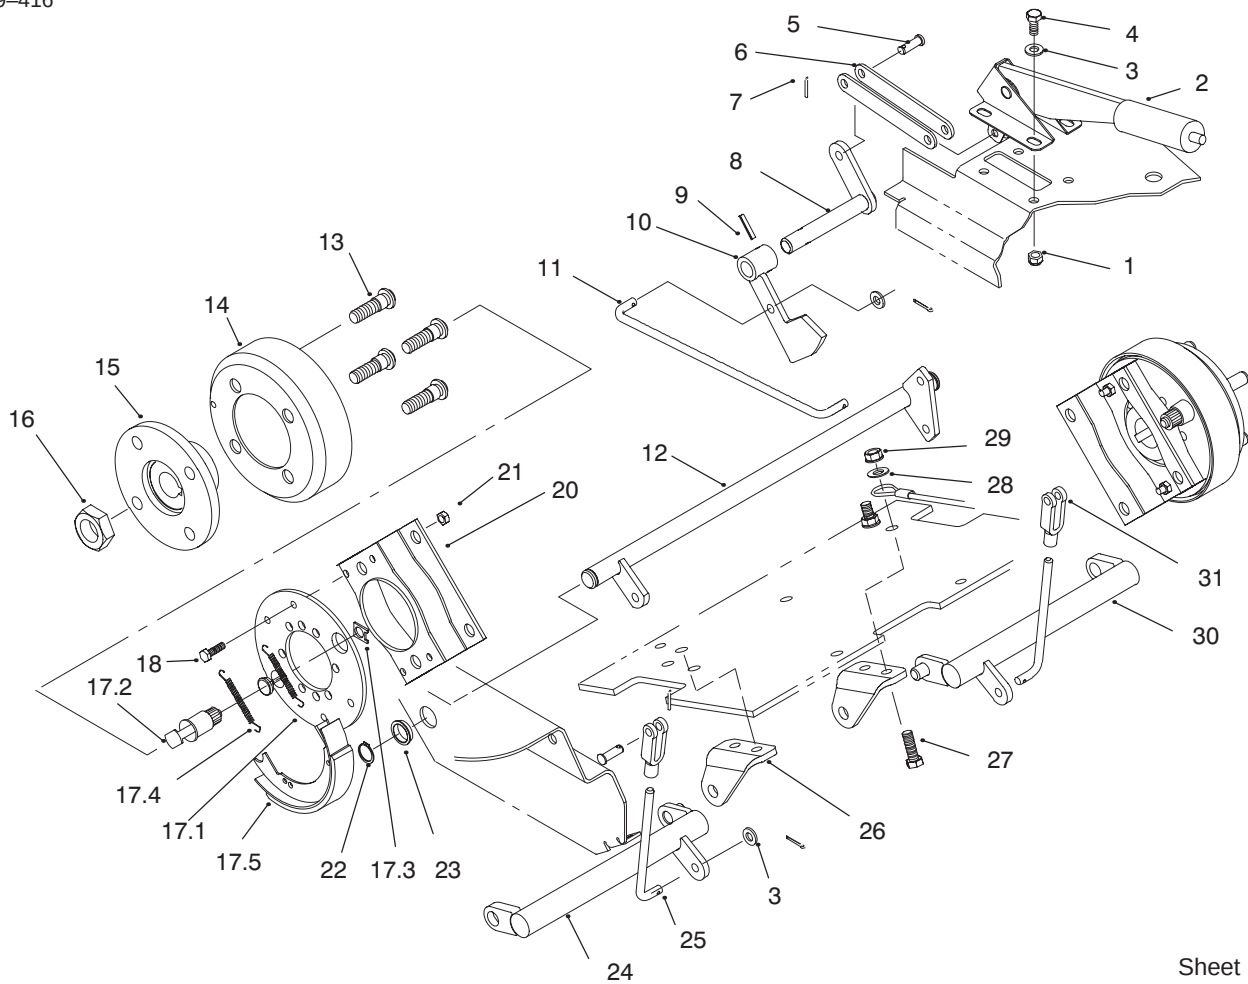


Sheet No.: 5

## Parking Brake

| Ref. No. | Part No. | Qty. | Description    |
|----------|----------|------|----------------|
| 1        | 3296-29  | 4    | Nut-Lock       |
| 2        | 94-4602  | 1    | Lever-Brake    |
| 3        | 3256-23  | 8    | Washer-Flat    |
| 4        | 322-3    | 4    | Screw-HH       |
| 5        | 283-1    | 4    | Pin-Clevis     |
| 6        | 94-9451  | 2    | Link-Brake     |
| 7        | 3272-10  | 8    | Pin-Cotter     |
| 8        | 94-9456  | 1    | Transfer Shaft |
| 9        | 32121-93 | 1    | Pin-Spiral     |
| 10       | 94-9452  | 1    | Brake Hub      |
| 11       | 94-9450  | 1    | Rod-Brake      |
| 12       | 94-4624  | 1    | Torsion Shaft  |
| 13       | 85-6540  | 8    | Stud           |
| 14       | 10-6850  | 2    | Drum Brake     |
| 15       | 10-6870  | 2    | Hub-Wheel      |
| 16       | 26-3790  | 2    | Nut-Lock       |
| 17       | 71-1500  | 2    | Brake ASM      |
| 17:1     | 70-9870  | 2    | Plate-Backing  |
| 17:2     | 70-9860  | 2    | Cam Shaft      |
| 17:4     | 70-9880  | 4    | Spring-Return  |
| 17:5     | 70-9840  | 4    | Brake Shoe     |
| 18       | 321-5    | 8    | Screw-HH       |
| 20       | 84-2000  | 2    | Bracket-Brake  |
| 21       | 3296-42  | 8    | Nut-Lock       |
| 22       | 32120-72 | 2    | Ring-Retaining |
| 23       | 106950   | 2    | Bushing        |

| Ref. No. | Part No.   | Qty. | Description    |
|----------|------------|------|----------------|
| 24       | 94-9392    | 1    | Brake Lever RH |
| 25       | 94-9398    | 2    | Rod-Link       |
| 26       | 94-9573-01 | 2    | Mount-Lever    |
| 27       | 323-18     | 4    | Screw-HH       |
| 28       | 3256-24    | 1    | Washer-Flat    |
| 29       | 3296-39    | 4    | Nut-Lock       |
| 30       | 94-9391    | 1    | Brake Lever LH |
| 31       | 282-2      | 2    | Pin-Clevis     |



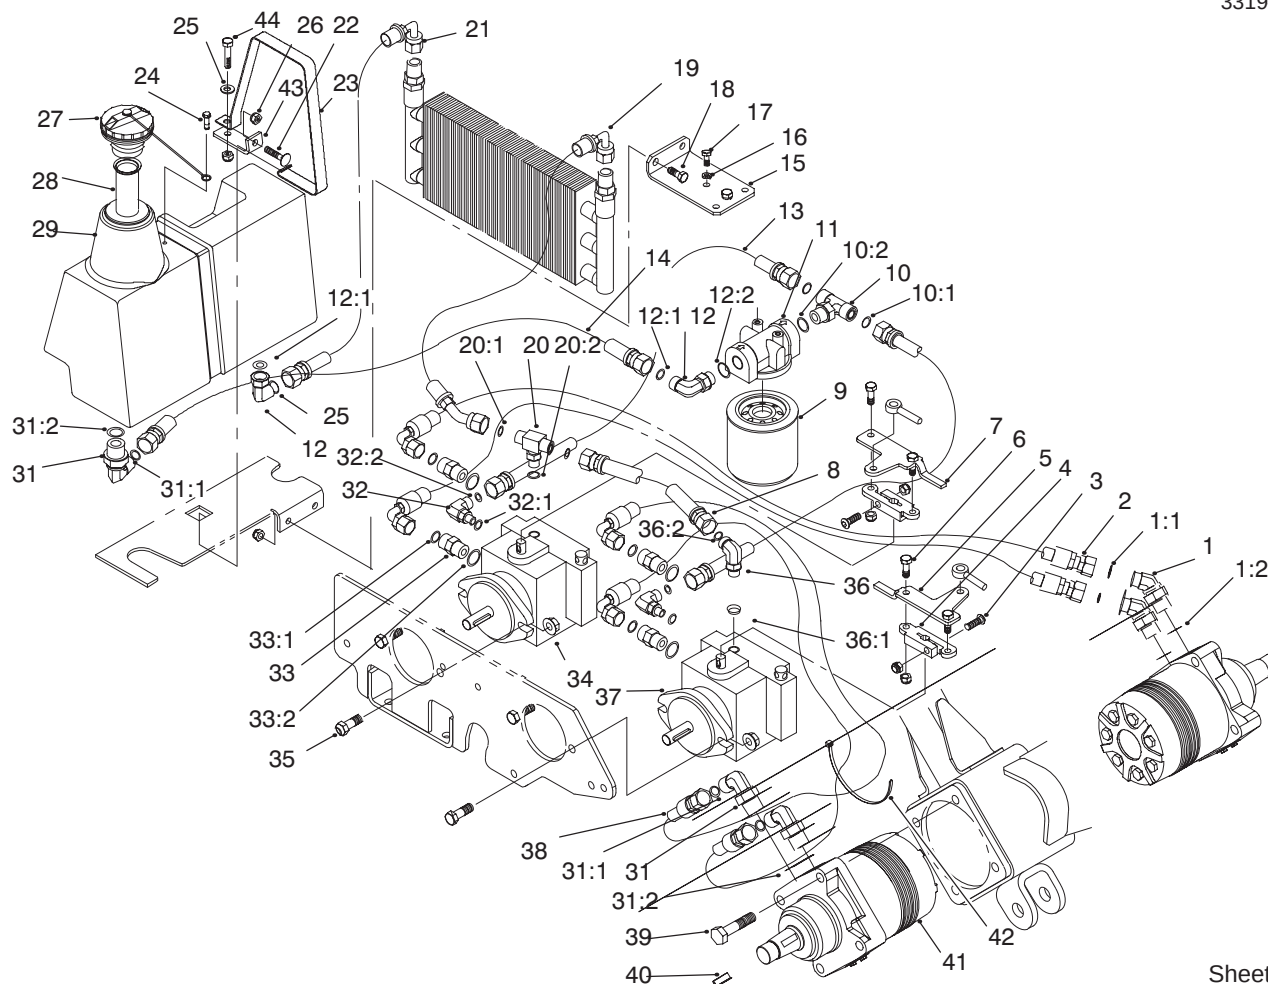


Sheet No.: 6

## Hydraulic System

| Ref. No. | Part No.   | Qty. | Description       | Ref. No. | Part No.   | Qty. | Description          |
|----------|------------|------|-------------------|----------|------------|------|----------------------|
| 1        | 340-89     | 2    | Fitting-Hydraulic | 20:1     | 237-22     | 2    | O-Ring               |
| 1:1      | 237-30     | 2    | O-Ring            | 20:2     | 237-42     | 1    | O-Ring               |
| 1:2      | 237-80     | 2    | O-Ring            | 21       | 94-4709    | 1    | Hose ASM-Hyd         |
| 2        | 94-4714    | 2    | Hose ASM-Hyd      | 22       | 3230-1     | 1    | Bolt-CARR            |
| 3        | 3274-83    | 2    | Screw-HSH         | 23       | 94-4642-03 | 1    | Strap-Hydraulic Tank |
| 4        | 94-4678    | 2    | Arm-Pump Control  | 24       | 57-5420    | 1    | Screw-Shoulder       |
| 5        | 94-4702-03 | 1    | Plate-Control     | 25       | 3256-23    | 1    | Washer-Flat          |
| 6        | 322-5      | 4    | Screw-HH          | 26       | 3296-29    | 10   | Nut-Lock             |
| 7        | 94-4701-03 | 1    | Plate-Control     | 27       | 93-4365    | 1    | Oil Cap              |
| 8        | 94-4712    | 1    | Hose ASM-Hyd      | 28       | 92-1705    | 1    | Screen-Filter        |
| 9        | 67-8110    | 1    | Filter-Oil        | 29       | 94-4700    | 1    | Tank-Hydraulic       |
| 10       | 340-157    | 1    | Fitting-Hydraulic | 31       | 340-105    | 3    | Fitting-Elbow        |
| 10:1     | 237-30     | 1    | O-Ring            | 31:1     | 237-30     | 3    | O-Ring               |
| 10:2     | 237-79     | 1    | O-Ring            | 31:2     | 237-80     | 3    | O-Ring               |
| 11       | 86-9080    | 1    | Head-Filter       | 32       | 340-97     | 2    | Fitting-Hydraulic    |
| 12       | 340-98     | 2    | Fitting-Hydraulic | 32:1     | 237-22     | 2    | O-Ring               |
| 12:1     | 237-30     | 2    | O-Ring            | 32:2     | 237-78     | 2    | O-Ring               |
| 12:2     | 237-79     | 2    | O-Ring            | 33       | 340-4      | 4    | Fitting-Hydraulic    |
| 13       | 94-4711    | 2    | Hose ASM-Hyd      | 33:1     | 237-30     | 4    | O-Ring               |
| 14       | 94-4710    | 1    | Hose ASM-Hyd      | 33:2     | 237-79     | 4    | O-Ring               |
| 15       | 94-9525-03 | 1    | Angle-Mount       | 34       | 32128-42   | 4    | Nut-Hex Flange       |
| 16       | 3253-3     | 2    | Washer-Lock       | 35       | 324-5      | 4    | Screw-HH             |
| 17       | 321-3      | 2    | Screw-HH          | 36       | 340-77     | 1    | Fitting-Hydraulic    |
| 18       | 322-4      | 2    | Screw-HH          | 36:1     | 237-22     | 1    | O-Ring               |
| 19       | 94-4713    | 1    | Hose ASM-Hyd      | 36:2     | 237-42     | 1    | O-Ring               |
| 20       | 340-94     | 1    | Tee               | 37       | 98-1957    | 2    | Pump-Hydraulic       |



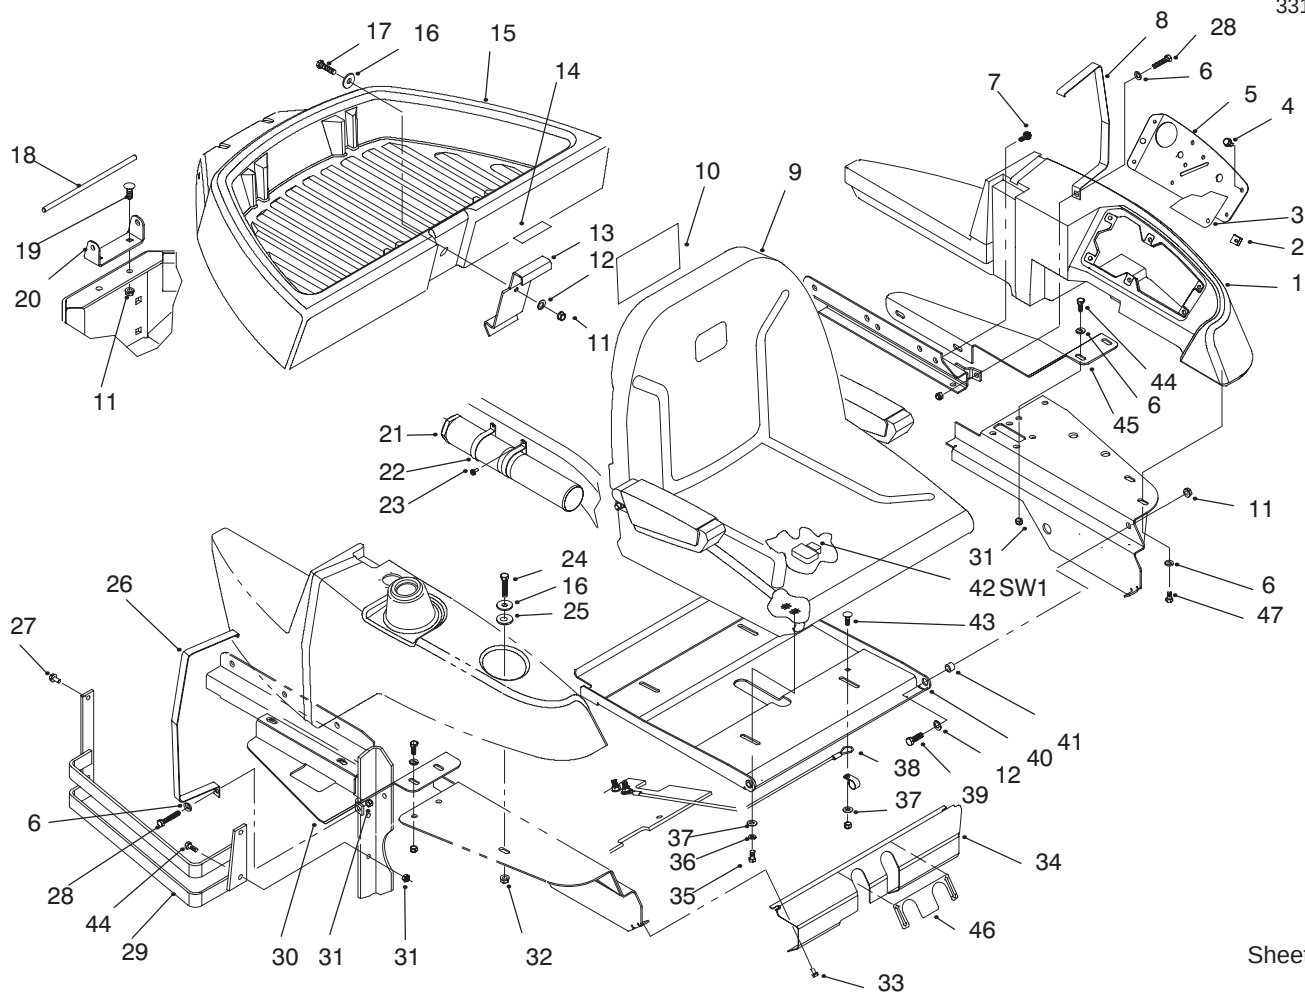


Sheet No.: 7

## Seat And Fenders

| Ref. No. | Part No.   | Qty. | Description       |
|----------|------------|------|-------------------|
| 1        | 94-4698    | 1    | Console           |
| 2        | 95-1962    | 6    | Tinnerman Clip    |
| 3        | 98-0753    | 1    | Decal-Instrument  |
| 4        | 32144-124  | 6    | Screw-PPH         |
| 5        | 94-9350-03 | 1    | Panel-Instrument  |
| 6        | 3256-23    | 8    | Washer-Flat       |
| 7        | 32144-11   | 4    | Screw-TAP         |
| 8        | 94-9488-03 | 1    | Strap-Console     |
| 9        | 94-9567    | 1    | ASM-Seat          |
| 10       | 93-7340    | 1    | Decal-Toro        |
| 11       | 3296-39    | 5    | Nut-Lock          |
| 12       | 3256-24    | 3    | Washer-Flat       |
| 13       | 94-4672-03 | 1    | Latch-Utility Box |
| 14       | 98-1306    | 1    | Decal-No Riders   |
| 15       | 94-4699    | 1    | Box-Utility       |
| 16       | 63-8410    | 2    | Washer-Flat       |
| 17       | 323-8      | 1    | Screw-HH          |
| 18       | 94-9496    | 1    | Pin-Pivot         |
| 19       | 3231-2     | 2    | Screw-CARR        |
| 20       | 94-4721-03 | 1    | Hinge-Utility Box |
| 21       | 74-0720    | 1    | Tube-Manual       |
| 22       | 2412-120   | 2    | Clamp-R           |
| 23       | 32104-76   | 2    | Screw-Self TAP    |
| 24       | 323-9      | 1    | Screw-HH          |
| 25       | 240-11     | 1    | Grommet           |
| 26       | 94-4799-03 | 1    | Strap-Fuel Tank   |

| Ref. No. | Part No.   | Qty. | Description           |
|----------|------------|------|-----------------------|
| 27       | 32144-14   | 2    | Screw-HWH             |
| 28       | 322-10     | 2    | Screw-HH              |
| 29       | 98-1953-03 | 1    | Bumper ASM            |
| 30       | 94-4798-01 | 1    | Plate-Tank Support    |
| 31       | 3296-29    | 9    | Nut-Lock              |
| 32       | 3290-357   | 1    | Nut-Lock Flange       |
| 33       | 32144-4    | 4    | Screw-TAP             |
| 34       | 94-9491-01 | 1    | Plate-Cover           |
| 35       | 322-3      | 4    | Screw-HH              |
| 36       | 3253-4     | 4    | Washer-Lock           |
| 37       | 3256-2     | 5    | Washer-Flat           |
| 38       | 115850     | 1    | Cable-Seat            |
| 39       | 323-7      | 2    | Screw-HH              |
| 40       | 94-9529-01 | 1    | Plate-Seat            |
| 41       | 52-2480    | 2    | Spacer-Wheel          |
| 42       | 38-1420    | 1    | Switch-Seat           |
| 43       | 3230-2     | 1    | Screw-CARR            |
| 44       | 322-4      | 6    | Screw-HH              |
| 45       | 94-4635-01 | 1    | Plate-Console Support |
| 46       | 98-1313    | 1    | Decal-Operation       |
| 47       | 322-2      | 2    | Screw-HH              |

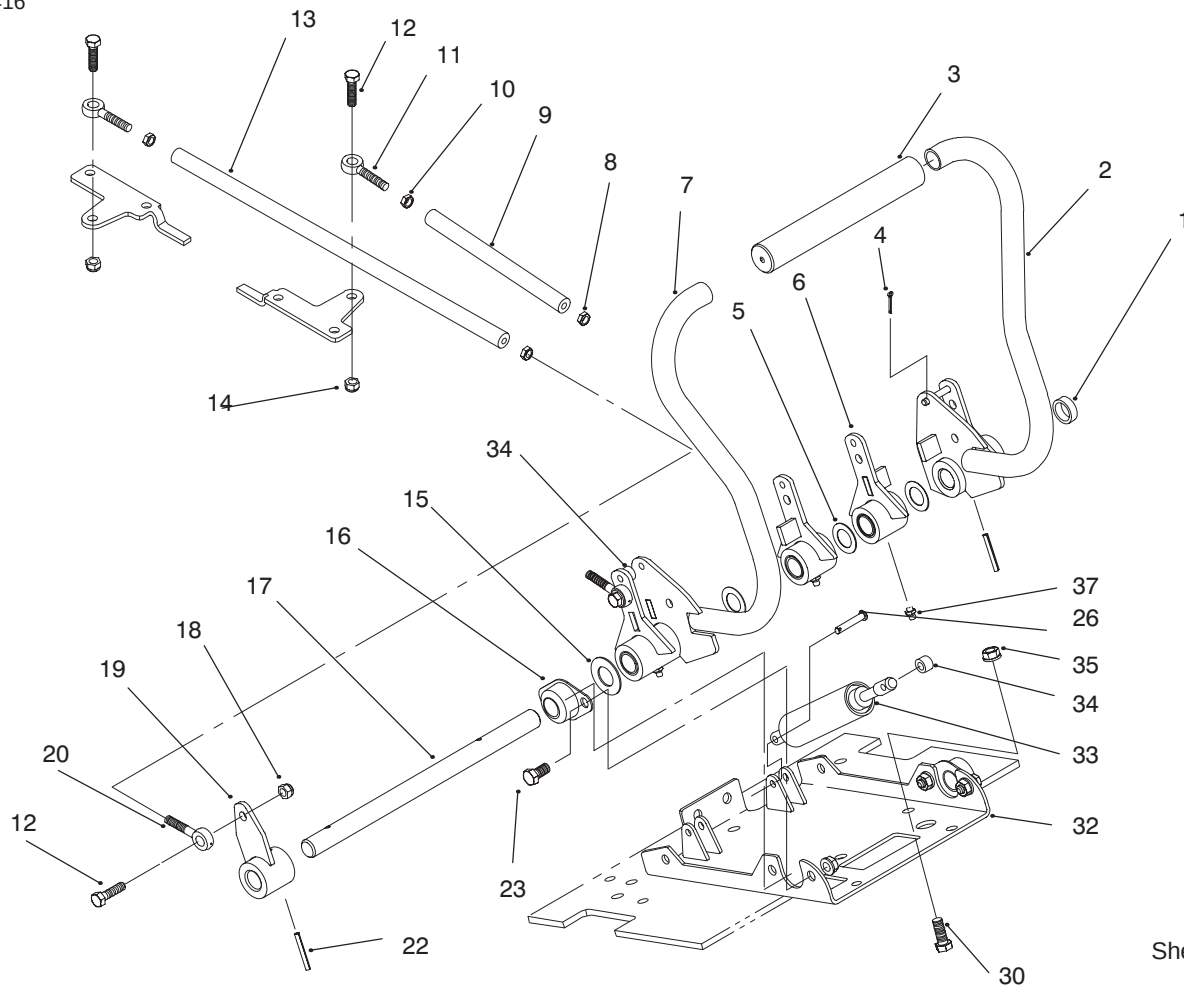


Sheet No.: 8

## Steering Controls

| Ref. No. | Part No.   | Qty. | Description        |
|----------|------------|------|--------------------|
| 1        | 94-9524    | 1    | Spacer-Control     |
| 2        | 94-9517-03 | 1    | Handle-Control LH  |
| 3        | 94-9490    | 2    | Grip-Cushion       |
| 4        | 3272-4     | 4    | Pin-Cotter         |
| 5        | 9202574    | 3    | Washer-Flt         |
| 6        | 94-9552    | 2    | Center Control ASM |
| 7        | 94-9551    | 1    | Handle-Control RH  |
| 8        | 3220-20    | 2    | Nut-Hex Jam        |
| 9        | 94-4717    | 1    | Rod-Control        |
| 10       | 3220-2     | 2    | Nut-Jam            |
| 11       | 2411-52    | 2    | Rod-End RH         |
| 12       | 322-5      | 4    | Screw-HH           |
| 13       | 94-4718    | 1    | Rod-Control        |
| 14       | 3296-29    | 2    | Nut-Lock           |
| 15       | 3256-39    | 1    | Washer-Flat        |
| 16       | 27-2320    | 2    | Bearing            |
| 17       | 94-9515    | 1    | Shaft-Control      |
| 18       | 3296-47    | 2    | Nut-Lock           |
| 19       | 94-9594-03 | 1    | Hub-Control        |
| 20       | 2411-53    | 2    | Rod-End LH         |
| 22       | 32121-103  | 2    | Pin-Spring         |
| 23       | 323-4      | 4    | Screw-HH           |
| 26       | 283-66     | 4    | Pin-Clevis         |
| 30       | 323-6      | 3    | Screw-HH           |
| 32       | 94-9591-03 | 1    | Mount-Channel      |
| 33       | 94-9596    | 2    | Damper-Control     |

| Ref. No. | Part No. | Qty. | Description    |
|----------|----------|------|----------------|
| 34       | 94-9593  | 2    | Spacer-Damper  |
| 35       | 3296-39  | 7    | Nut-Lock       |
| 37       | 302-5    | 3    | Fitting-Grease |

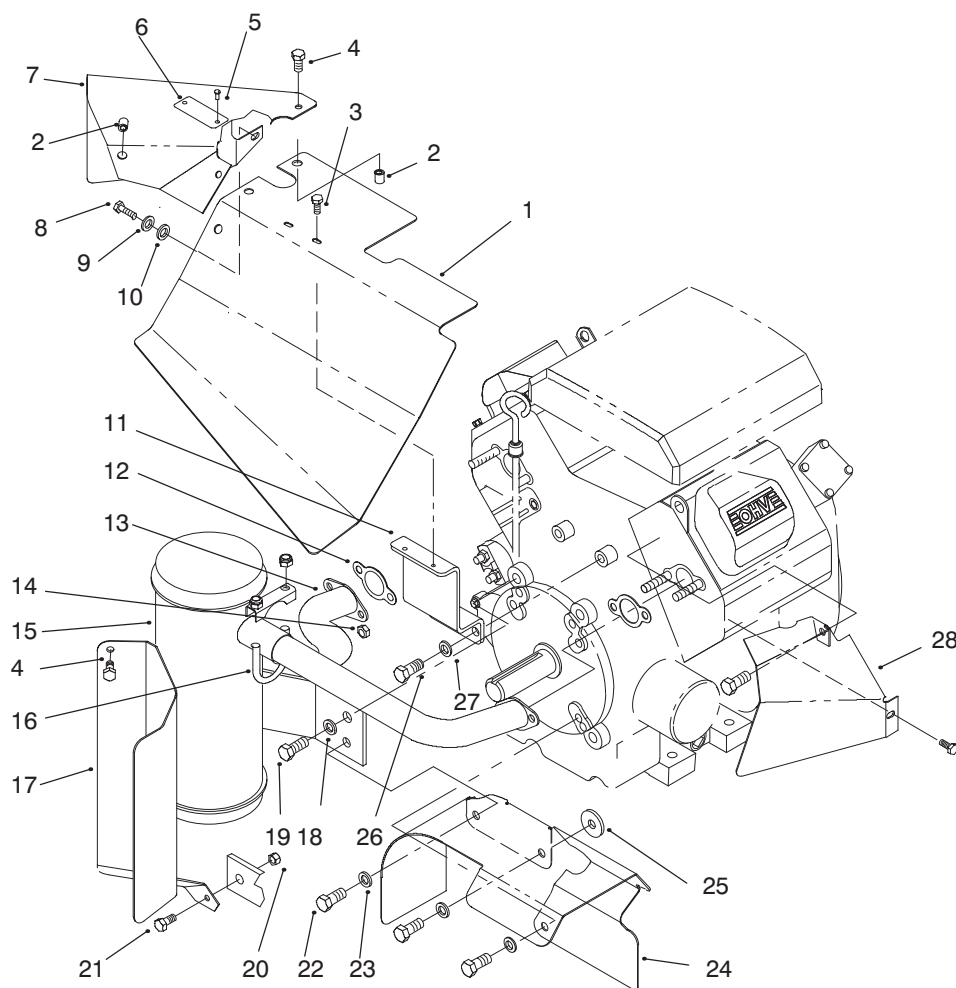


Sheet No.: 9

## Heat Shields And Exhaust

| Ref. No. | Part No.   | Qty. | Description             |
|----------|------------|------|-------------------------|
| 1        | 98-1328    | 1    | Baffle-Heat             |
| 2        | 32148-6    | 4    | Insert                  |
| 3        | 12-5450    | 2    | Screw-Thd Form          |
| 4        | 3234-4     | 4    | Screw-HH                |
| 5        | 3269-8     | 2    | Rivet                   |
| 6        | 80-9350    | 1    | Plate-Hot Surface       |
| 7        | 98-1327    | 1    | Baffle-Heat             |
| 8        | 42-9430    | 1    | Bolt w/Washer           |
| 9        | 48-8020    | 1    | Washer-Spring Lock      |
| 10       | 48-8010    | 1    | Washer-Flat 6.4mm Id    |
| 11       | 94-9561-03 | 1    | Bracket-Manifold Shield |
| 12       | 93-0350    | 2    | Gasket-Exhaust          |
| 13       | 94-9494    | 1    | Manifold                |
| 14       | 92-6780    | 4    | Nut-HHF                 |
| 15       | 94-9495    | 1    | Muffler                 |
| 16       | 2112-11    | 1    | Clamp-Muffler           |
| 17       | 98-1329    | 1    | Baffle-Heat             |
| 18       | 3253-6     | 1    | Washer-Lock             |
| 19       | 324-4      | 1    | Screw-HH                |
| 20       | 3296-42    | 1    | Nut-Lock                |
| 21       | 321-4      | 1    | Screw-HH                |
| 22       | 323-5      | 3    | Screw-HH                |
| 23       | 3253-5     | 3    | Washer-Lock             |
| 24       | 98-1326    | 1    | Baffle-Heat             |
| 25       | 2844       | 1    | Washer-Flat             |

| Ref. No. | Part No.  | Qty. | Description    |
|----------|-----------|------|----------------|
| 26       | 33114-020 | 2    | Screw-HH       |
| 27       | 48-9570   | 2    | Washer-Lock M8 |
| 28       | 98-1349   | 1    | Baffle-Heat    |

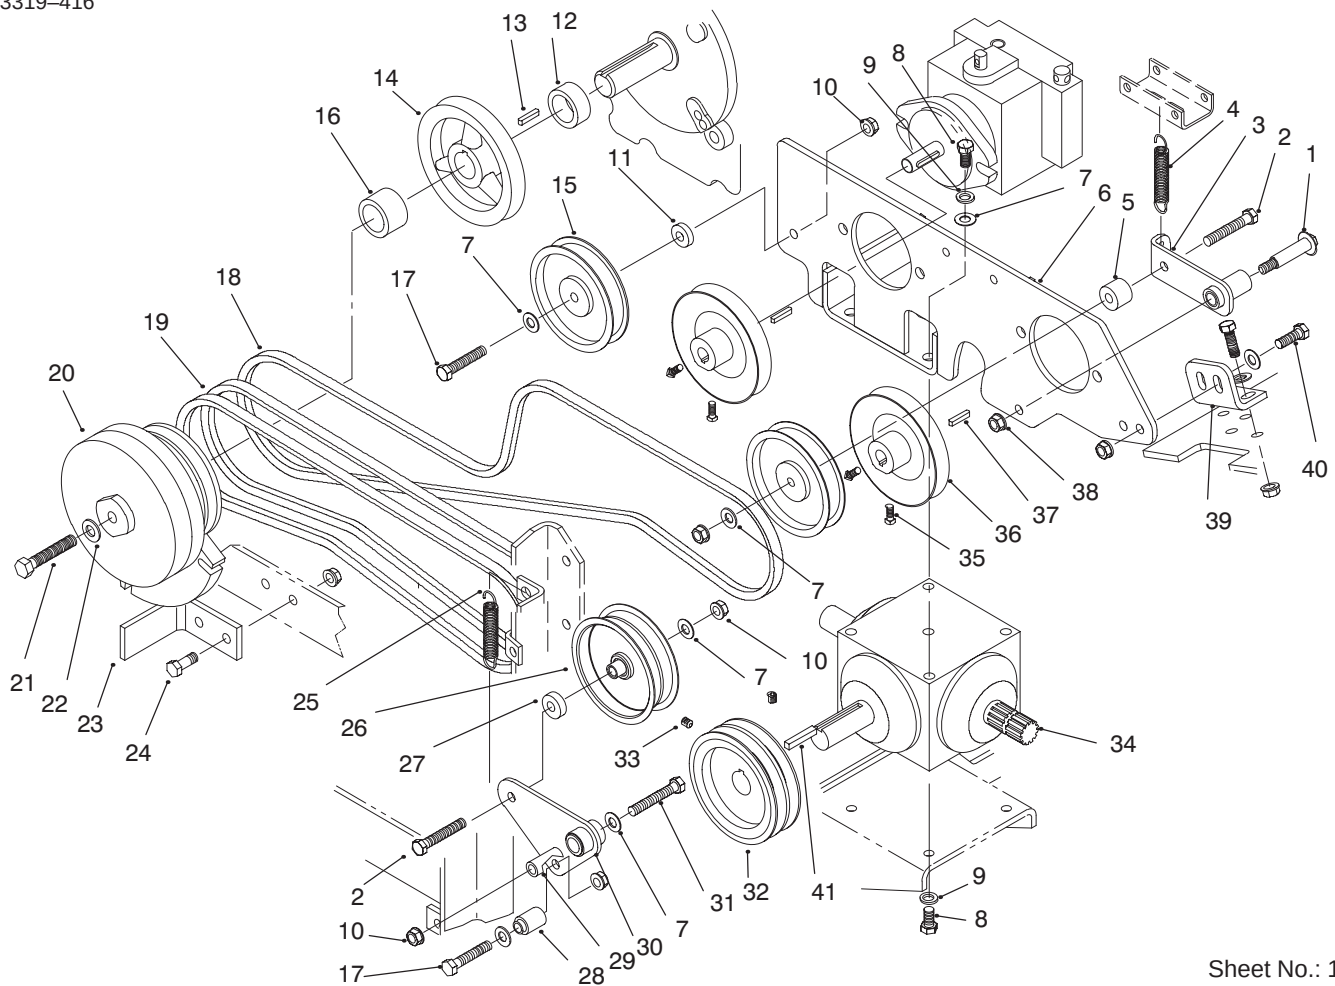

Sheet No.: 10


## Drive Systems

| Ref. No. | Part No.   | Qty. | Description         |
|----------|------------|------|---------------------|
| 1        | 27-6230    | 1    | Bolt-Wheel          |
| 2        | 323-11     | 2    | Screw               |
| 3        | 95-1950    | 1    | Arm ASM             |
| 4        | 94-9599    | 1    | Spring-Extension    |
| 5        | 94-4792    | 1    | Spacer-Idler Arm    |
| 6        | 94-4658-03 | 1    | Pump-Mount          |
| 7        | 3256-24    | 13   | Washer-Flat         |
| 8        | 323-4      | 8    | Screw-HH            |
| 9        | 3253-21    | 8    | Washer-Lock         |
| 10       | 3296-39    | 11   | Nut-Lock            |
| 11       | 9202204    | 1    | Washer              |
| 12       | 94-4688    | 1    | Spacer-Engine Shaft |
| 13       | 5-0698     | 1    | Key                 |
| 14       | 94-4628    | 1    | Engine-Pulley       |
| 15       | 93-1622    | 2    | Pulley-Idler        |
| 16       | 94-4689    | 1    | Spacer-Engine Shaft |
| 17       | 323-10     | 2    | Screw-HH            |
| 18       | 94-4607    | 1    | Belt-Pump Drive     |
| 19       | 94-4608    | 1    | Belt-PTO            |
| 20       | 94-4632    | 1    | Clutch ASM          |
| 21       | 3212-10    | 1    | Screw               |
| 22       | 3256-25    | 1    | Washer-Flat         |
| 23       | 98-1301-03 | 1    | Stop-Clutch         |
| 24       | 323-6      | 2    | Screw-HH            |
| 25       | 88-6460    | 1    | Spring - Extension  |
| 26       | 66-4210    | 1    | Pulley-Idler        |


| Ref. No. | Part No.   | Qty. | Description       |
|----------|------------|------|-------------------|
| 27       | 94-4685    | 1    | Spacer-Idler      |
| 28       | 95-1967    | 1    | Spacer-Spring     |
| 29       | 114511     | 1    | Spacer            |
| 30       | 95-1968    | 1    | Idler Arm ASM     |
| 31       | 323-31     | 1    | Screw-Hhcs        |
| 32       | 94-4629    | 1    | Clutch-Pulley     |
| 33       | 3246-3     | 2    | Screw-HSH         |
| 34       | 94-4641    | 1    | Gearbox-PTO Drive |
| 35       | 3241-5     | 4    | Set Screw         |
| 36       | 80-8170    | 2    | Pulley-Pump       |
| 37       | 80-6090    | 2    | Key-Square        |
| 38       | 3296-6     | 1    | Nut-Lock          |
| 39       | 94-4787-03 | 1    | Mount-Plate       |
| 40       | 323-18     | 4    | Screw-HH          |
| 41       | 67-7490    | 1    | Key               |




# Electric Schematic

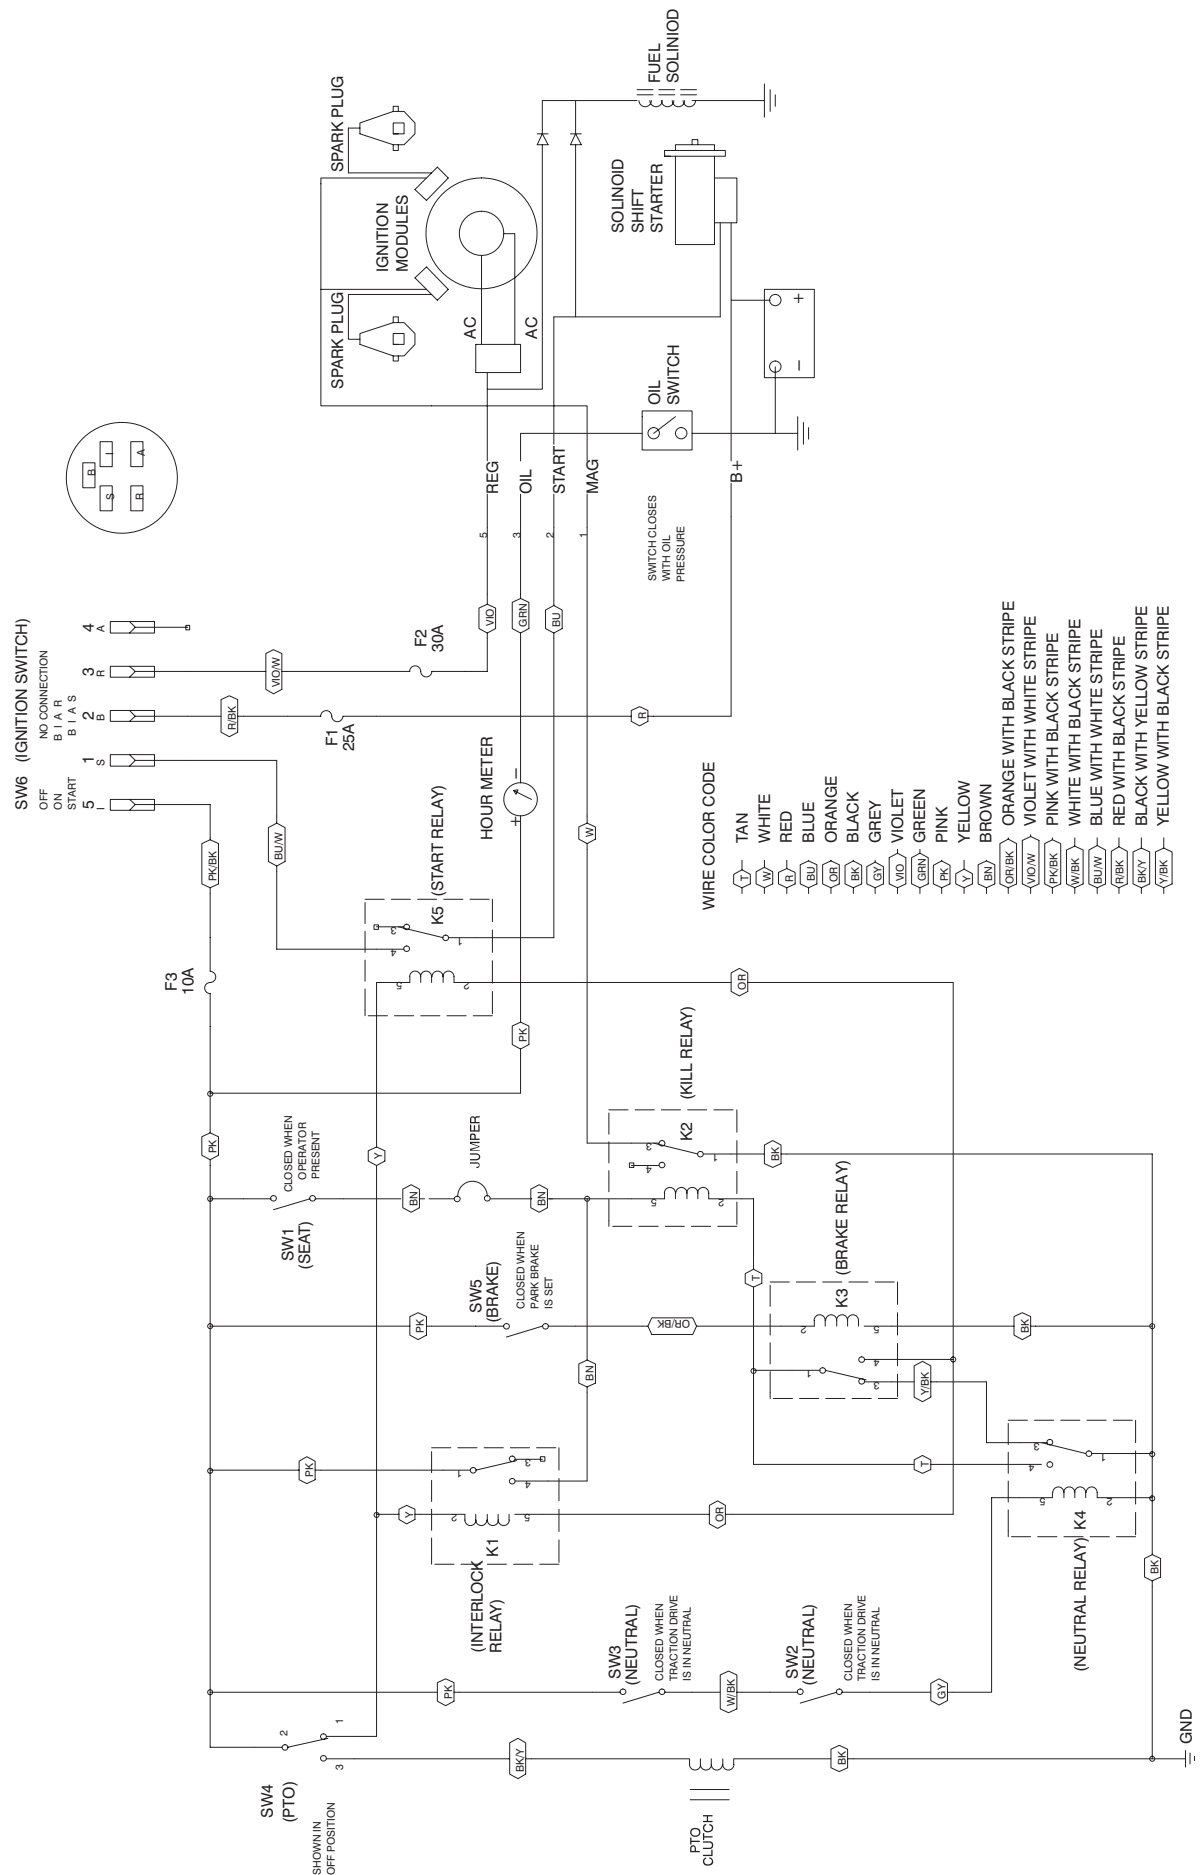

# Hydraulic Schematic

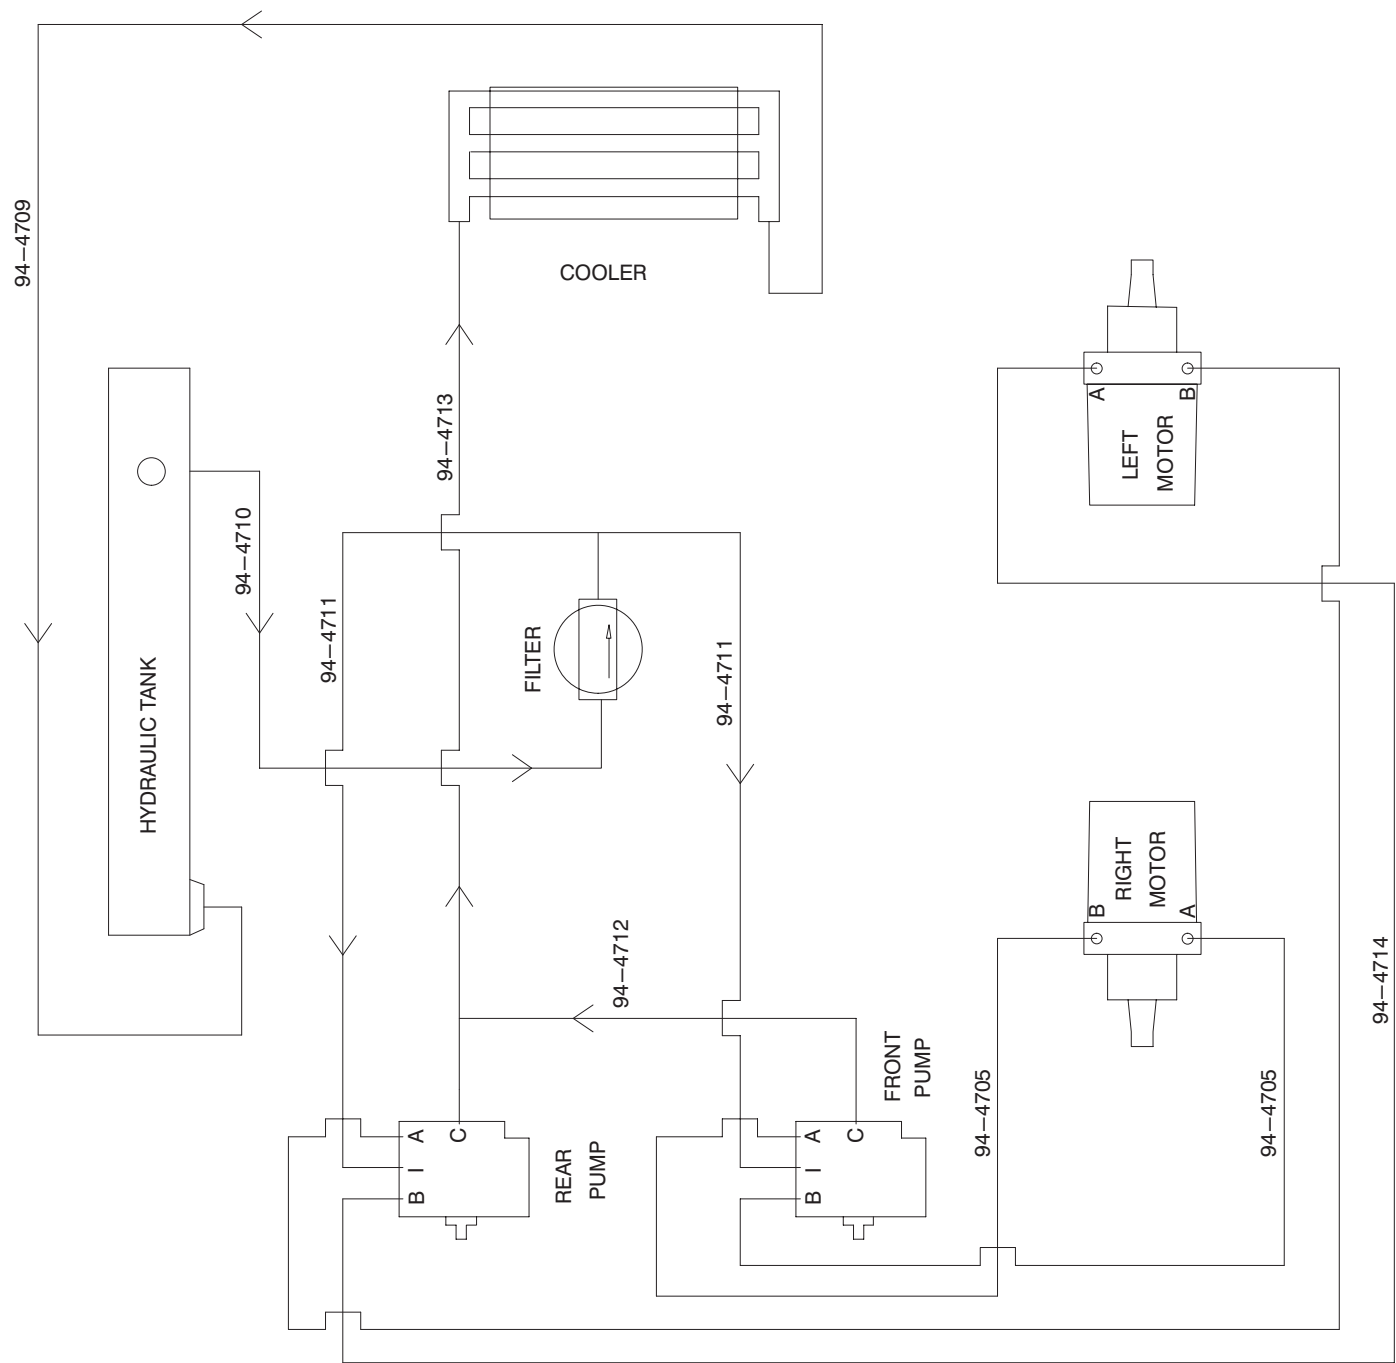



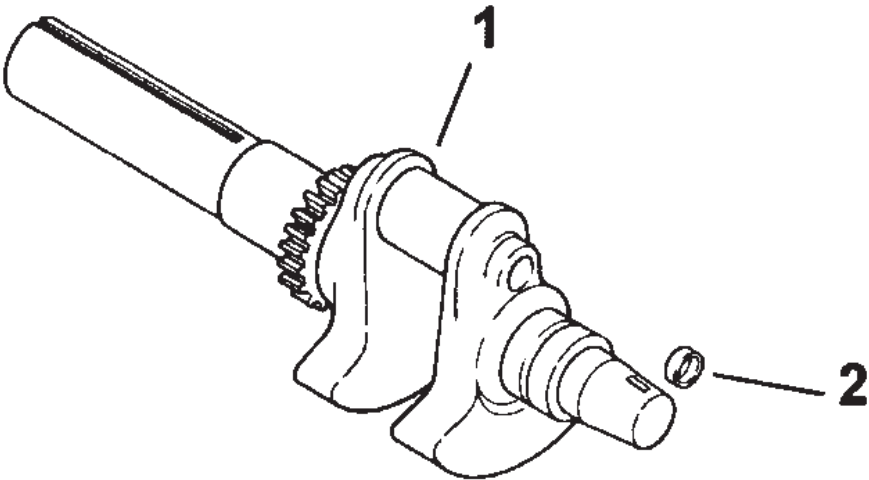


Sheet No.: 2  
T-xxxx

Crankshaft

| Ref. No. | Description          | Part No.  |
|----------|----------------------|-----------|
| 1.       | Crankshaft (Incl. 2) | 24 014 72 |
| 2.       | Plug, cup            | 52 139 09 |

| Ref. No. | Description | Part No. |
|----------|-------------|----------|
|          |             |          |

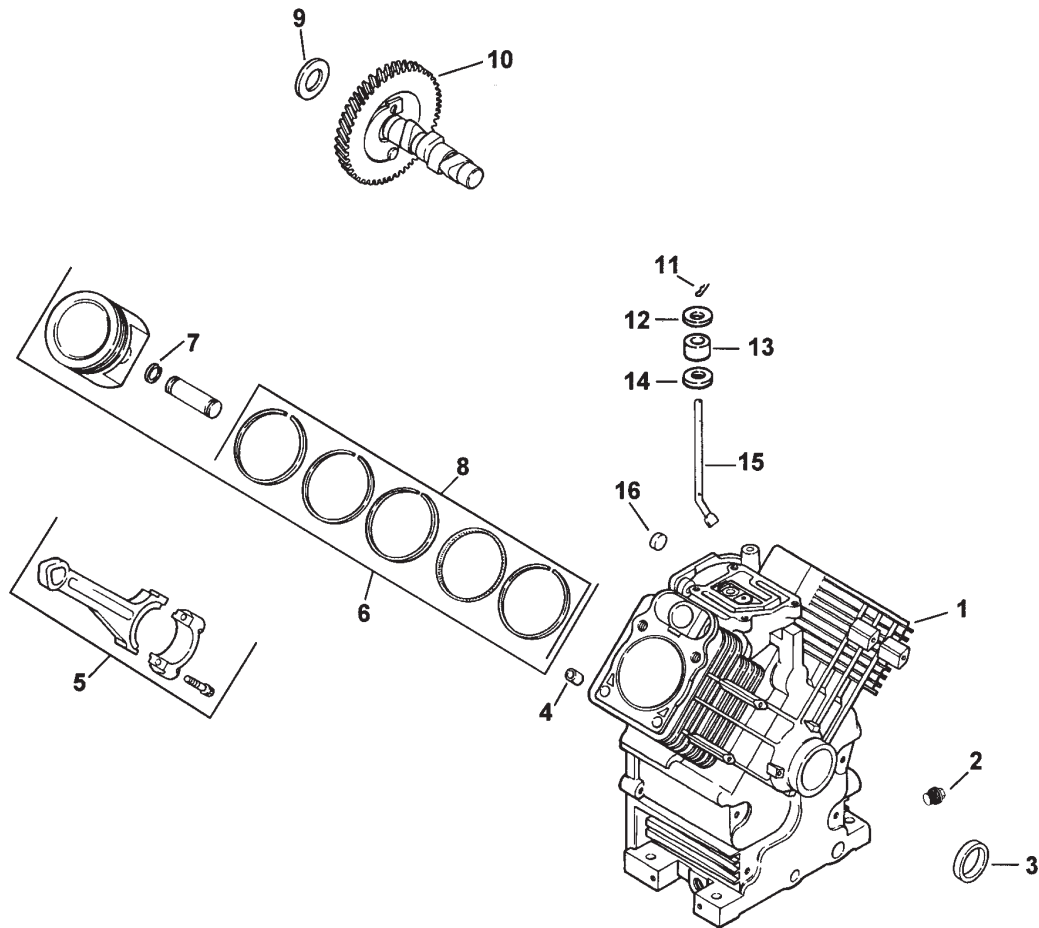


Sheet No.: 3

T-xxxx

## Crankcase

| Ref. No. | Description                     | Part No.  |
|----------|---------------------------------|-----------|
| 1.       | Cylinder Block (USE: Miniblock) | 24 782 01 |
| 2.       | Plug, hex. head 3/8 (2)         | X-75-10   |
| 3.       | Seal, oil front                 | 24 032 01 |
| 4.       | Pin, dowel locating (6)         | 12 380 17 |
| 5.       | Connecting Rod (Std.) (2)       | 24 067 09 |
|          | Connecting Rod (.25) (2)        | 24 067 10 |
| 6.       | Piston w/Ring Set (Std.) (2)    | 24 874 01 |
|          | Piston w/Ring Set (.25) (2)     | 24 874 02 |
|          | Piston w/Ring Set (.50) (2)     | 24 874 03 |
| 7.       | Retainer, piston pin (4)        | 24 018 01 |
| 8.       | Ring Set (Std.) (2)             | 24 108 01 |
|          | Ring Set (.25) (2)              | 24 108 02 |
|          | Ring Set (.50) (2)              | 24 108 03 |
| 9.       | Shim, camshaft (A.R.) red       | 12 422 09 |
|          | Shim, camshaft (A.R.) black     | 12 422 13 |
|          | Shim, camshaft (A.R.) white     | 12 422 07 |
|          | Shim, camshaft (A.R.) blue      | 12 422 08 |
|          | Shim, camshaft - yellow         | 12 422 10 |
|          | Shim, camshaft (A.R.) green     | 12 422 11 |
|          | Shim, camshaft (A.R.) gray      | 12 422 12 |
| 10.      | Camshaft                        | 24 012 05 |
| 11.      | Pin, hitch                      | 12 380 04 |
| 12.      | Washer, flat                    | M-0631005 |
| 13.      | Seal, governor cross shaft      | 12 032 01 |
| 14.      | Washer, plain 1/4               | X-25-102  |


| Ref. No. | Description           | Part No.  |
|----------|-----------------------|-----------|
| 15.      | Shaft, governor cross | 24 144 01 |
| 16.      | Plug, cup             | 52 139 09 |

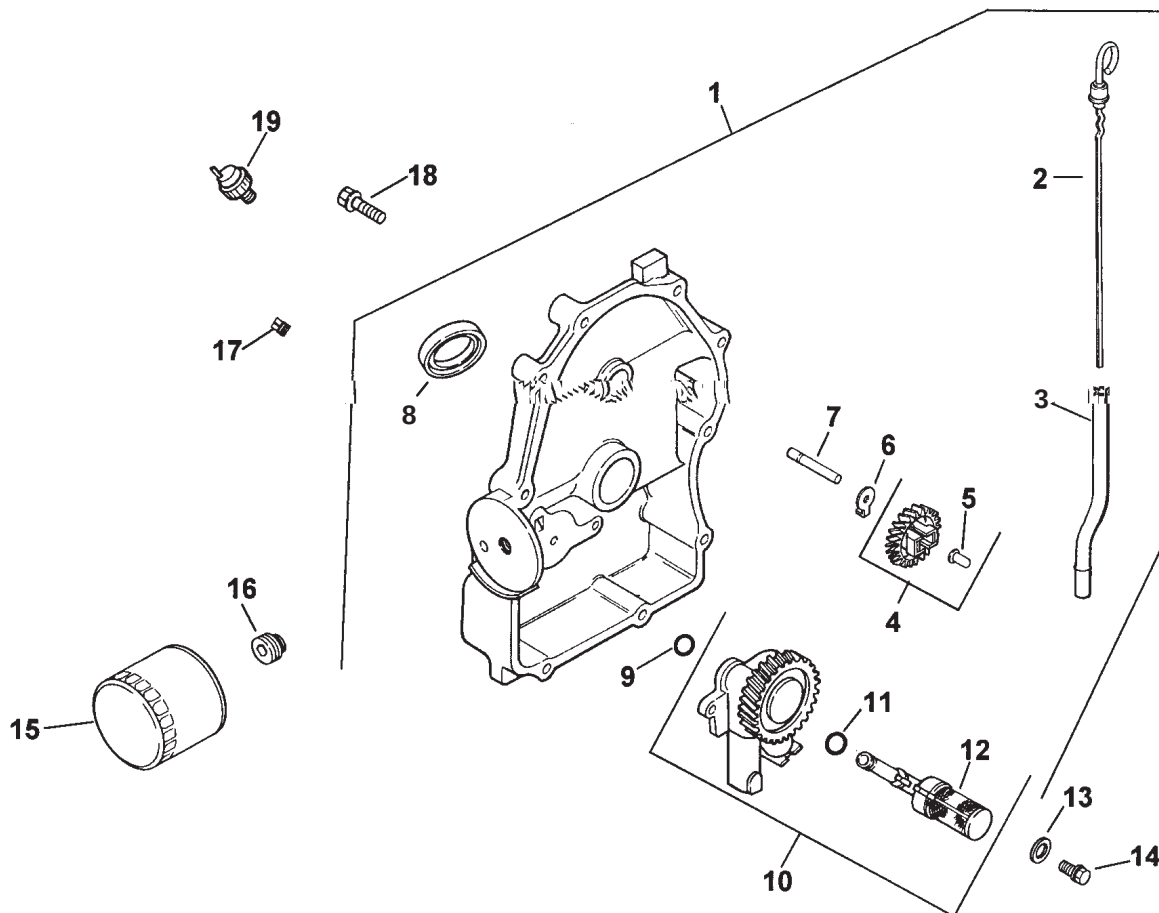

Sheet No.: 4

## Oil Pan / Lubrication

| Ref. No. | Description                           | Part No.               | Ref. No. | Description | Part No. |
|----------|---------------------------------------|------------------------|----------|-------------|----------|
| 1.       | Plate, closure Asm<br>(Inc 2-12)      | 24 009 82              |          |             |          |
| 2.       | Dipstick                              | 24 038 06              |          |             |          |
| 3.       | Tube, dipstick                        | 24 123 08              |          |             |          |
| 4.       | Kit, governor gear<br>(Includes 5)    | 24 043 12              |          |             |          |
| 5.       | Pin, governor regulating              | 12 380 01              |          |             |          |
| 6.       | Tab, locking                          | 52 448 02              |          |             |          |
| 7.       | Shaft, governor gear                  | 12 144 02              |          |             |          |
| 8.       | Seal, oil (PTO end)                   | 52 032 08              |          |             |          |
| 9.       | O-Ring                                | 24 153 08              |          |             |          |
| 10.      | Oil pump Asm (Incl. 11-12)            | 24 393 10              |          |             |          |
| 11.      | O-Ring, oil pick-up                   | 24 153 01              |          |             |          |
| 12.      | Pick-up, oil                          | 24 381 04              |          |             |          |
| 13.      | Washer, plain 6mm (2)                 | M-0631005              |          |             |          |
| 14.      | Screw, hex. flange<br>M6x1.0x25 (2)   | M-0645025              |          |             |          |
| 15.      | Filter, oil                           | 12 050 01              |          |             |          |
| 16.      | Nipple, oil filter                    | 24 136 01              |          |             |          |
| 17.      | Plug, pipe 1/8"                       | X-75-23                |          |             |          |
| 18.      | Screw, hex. flange<br>M8x1.25x45 (10) | 24 086 16              |          |             |          |
| 19.      | Switch, pressure<br>Decal, oil sentry | 52 099 06<br>25 113 05 |          |             |          |

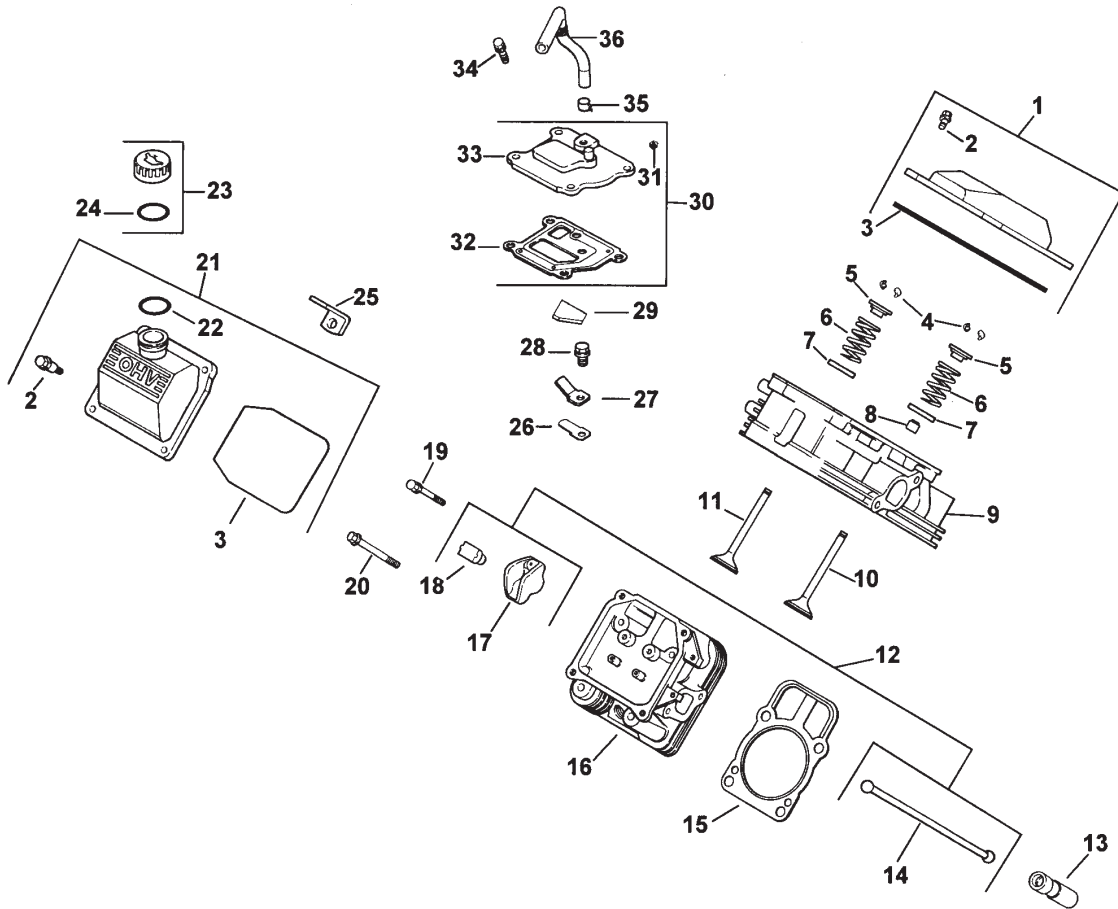


Sheet No.: 5

T-xxxx

## Head / Valve / Breather

| Ref. No. | Description                             | Part No.  |
|----------|-----------------------------------------|-----------|
| 1.       | Kit, valve cover – plain<br>(Incl. 2–3) | 24 755 74 |
| 2.       | Screw, shoulder (4)                     | 24 086 32 |
| 3.       | O–Ring, valve cover                     | 24 153 16 |
| 4.       | Kit, retainer (4)                       | 12 755 03 |
| 5.       | Cap, valve spring (4)                   | 12 173 01 |
| 6.       | Spring, valve (4)                       | 24 089 02 |
| 7.       | Retainer, spring (4)                    | 235011    |
| 8.       | Seal, valve stem (2)                    | 24 032 05 |
| 9.       | Head Asm, #1 cylinder                   | 24 318 09 |
| 10.      | Valve, intake ( Std.) (2)               | 24 017 01 |
|          | Valve, intake (.25) (2)                 | 24 017 02 |
| 11.      | Valve, exhaust (Std.) (2)               | 24 016 01 |
|          | Valve, exhaust (.25) (2)                | 24 016 02 |
| 12.      | Kit, valve train<br>(Incl. 14,17,18)    | 24 755 66 |
| 13.      | Lifter, valve (4)                       | 12 351 02 |
| 14.      | Rod, push (4)                           | 24 411 05 |
| 15.      | Gasket, cylinder head (2)               | 24 041 08 |
| 16.      | Head Asm, #2 cylinder                   | 24 318 10 |
| 17.      | Arm, rocker (4)                         | 25 186 01 |
| 18.      | Pivot, rocker arm (4)                   | 24 599 01 |
| 19.      | Screw, hex. flange<br>M6x1.0x34 (4)     | M–0640034 |
| 20.      | Screw, hex. flange<br>M10x1.5x90 (8)    | 12 086 16 |

| Ref. No. | Description                                   | Part No.  |
|----------|-----------------------------------------------|-----------|
| 21.      | Kit, valve cover – oil fill<br>(Incl. 2,3,22) | 24 755 75 |
| 22.      | O–Ring                                        | 24 153 09 |
| 23.      | Kit, oil fill cap (Incl. 24)                  | 24 755 46 |
| 24.      | O–Ring, oil fill cap                          | 24 153 03 |
| 25.      | Strap, lifting                                | 24 445 01 |
| 26.      | Reed, breather                                | 24 402 03 |
| 27.      | Retainer, breather reed                       | 12 018 01 |
| 28.      | Screw, hex. flange<br>M5x0.8x10               | M–0545010 |
| 29.      | Filter, breather                              | 24 050 01 |
| 30.      | Kit, breather (Incl. 31–33)                   | 24 033 01 |
| 31.      | Plug, allen head 1/8 pipe                     | X–75–23   |
| 32.      | Gasket, breather                              | 24 041 23 |
| 33.      | Cover, breather                               | 24 096 02 |
| 34.      | Screw, hex. flange<br>M6x1.0x20 (4)           | M–0645020 |
| 35.      | Clamp, breather                               | X–426–9   |
| 36.      | Hose, breather                                | 24 326 06 |

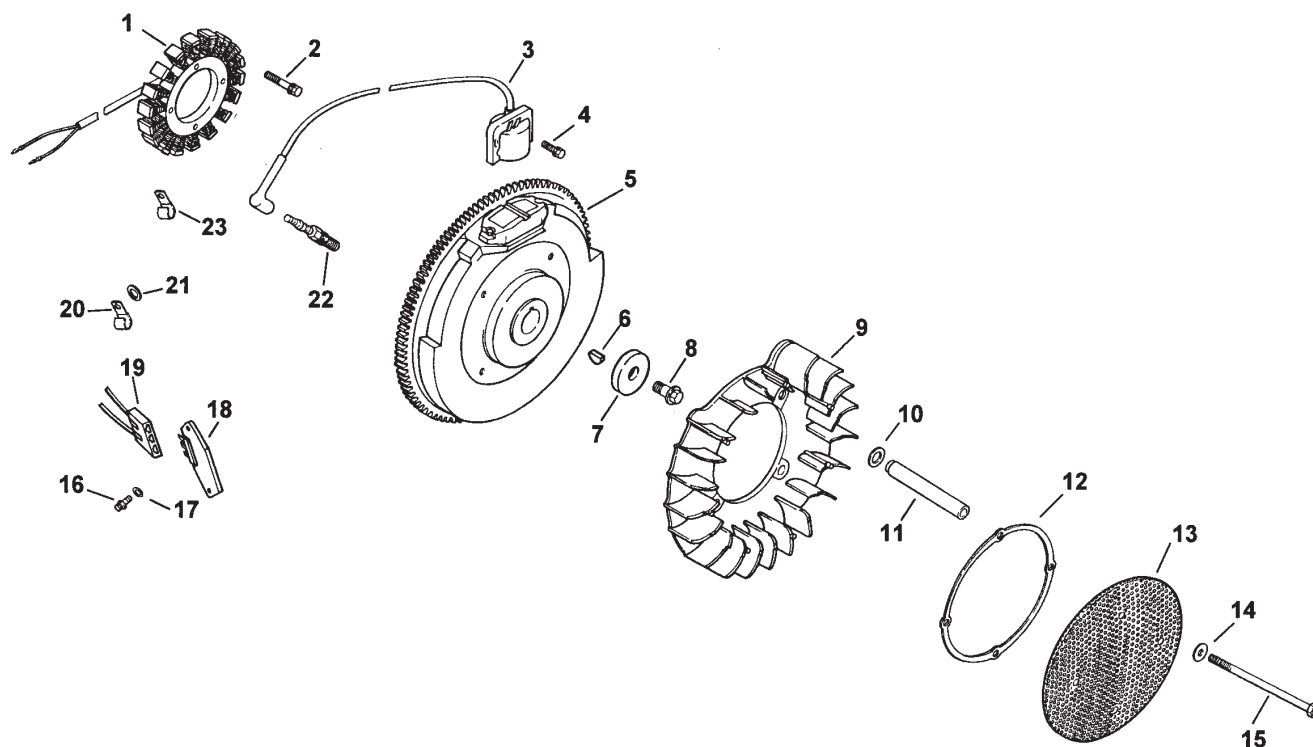


Sheet No.: 6

T-xxxx

## Ignition / Electrical

| Ref. No. | Description                       | Part No.  | Ref. No. | Description                                                                 | Part No.  |
|----------|-----------------------------------|-----------|----------|-----------------------------------------------------------------------------|-----------|
| 1.       | Stator — 15 amp                   | 24 085 03 | 16.      | Screw, phillips hd. 1                                                       |           |
| 2.       | Screw, hex. cap<br>M5x0.8x25 (2)  | M-0548025 | 17.      | 1-16x7/8 (2)                                                                | 24 086 18 |
| 3.       | Module, ignition (2)              | 24 584 01 | 18.      | Washer, plain 3/16 (2)                                                      | X-25-92   |
| 4.       | Screw, hex. flange (4)            | M-0545020 | 19.      | Rectifier-regulator 15 amp                                                  | 25 403 03 |
| 5.       | Flywheel                          | 24 025 01 | 20.      | Connector                                                                   | 236602    |
| 6.       | Key                               | X-42-15   | 21.      | Clip, cable                                                                 | 235173    |
| 7.       | Washer, plain 3/8                 | 12 468 03 | 22.      | Washer, plain 1/4                                                           | X-25-63   |
| 8.       | Screw, hex. flange<br>M10x1.5x46  | 12 086 14 | 23.      | Spark Plug (2)                                                              | 12 132 02 |
| 9.       | Fan                               | 24 157 03 |          | Clip, cable                                                                 | 48 154 02 |
| 10.      | Washer, spring 10 mm (4)          | 24 468 11 |          | Lead, black, (4" — 18 gauge<br>— insulated grip barrel<br>eyelet terminals) | 25 518 28 |
| 11.      | Spacer, grass screen (4)          | 24 112 14 |          | Harness, wiring                                                             | 24 176 40 |
| 12.      | Ring, support                     | 24 141 06 |          | Bracket, stator wire                                                        | 24 126 71 |
| 13.      | Screen, grass                     | 24 162 25 |          | Screw, set (adjusts grass<br>scraper blade)                                 | 25 086 43 |
| 14.      | Washer, plain (4)                 | X-25-53   |          | Washer, plain ground                                                        | X-25-63   |
| 15.      | Screw, hex. cap<br>M6x1.0x100 (4) | M-0603100 |          |                                                                             |           |

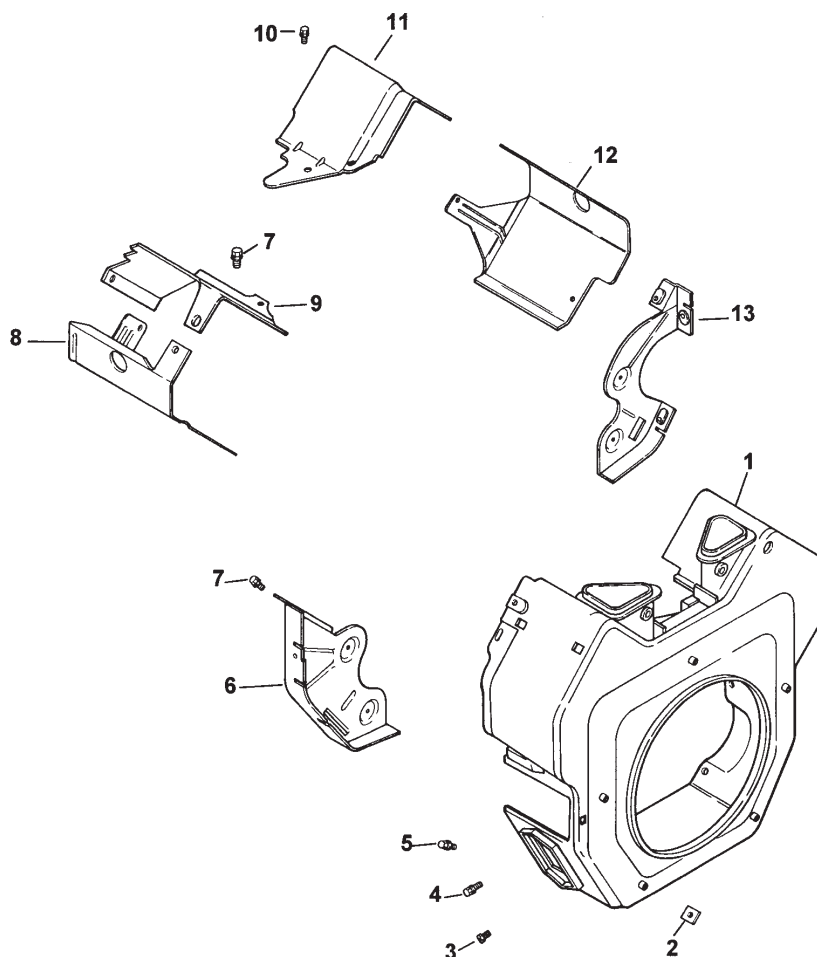


Sheet No.: 7

T-xxxx

## Blower Housing And Baffles
 
| Ref. No. | Description                         | Part No.  |
|----------|-------------------------------------|-----------|
| 1.       | Housing, blower                     | 54 027 03 |
| 2.       | Nut, plastic (2)                    | 24 100 01 |
| 3.       | Screw, hex. flange<br>M5x0.8x16     | M-0551016 |
| 4.       | Screw, hex. flange (5)<br>M5x0.8x16 | M-0545016 |
| 5.       | Screw, hex. flange (2)<br>M5x0.8x20 | M-0545020 |
| 6.       | Plate, backing - #2 side            | 24 146 02 |
| 7.       | Screw, hex. flange<br>M6x1.0x16 (6) | M-0645016 |
| 8.       | Baffle, cyl. barrel-#2 side         | 24 063 20 |
| 9.       | Baffle, valley - #2 side            | 24 063 17 |
| 10.      | Screw, hex. flange<br>M5x0.8x10 (2) | M-0545010 |
| 11.      | Baffle, valley - #1 side            | 24 063 24 |
| 12.      | Baffle, cyl. barrel-#1 side         | 24 063 30 |
| 13.      | Plate, backing - #1 side            | 24 146 08 |
|          | Decal, HP                           | 24 113 12 |

| Ref. No. | Description | Part No. |
|----------|-------------|----------|
|          |             |          |



| Ref. No. | Description                                 | Part No.  |
|----------|---------------------------------------------|-----------|
| 1.       | Nut, hex flange M8x1.25                     | M—0841080 |
| 2.       | Screw, hex. flange<br>M8x1.25x80 (2)        | M—0839080 |
| 3.       | Starter, solenoid shift Asm<br>(Incl. 4—18) | 24 098 01 |
| 4.       | Drive, end cap                              | 24 081 04 |
| 5.       | Nut, starter (2)                            | 52 100 10 |
| 6.       | Lever, starter drive                        | 12 090 10 |
| 7.       | Kit, starter repair                         | 24 755 84 |
| 8.       | Drive, pinion                               | 12 239 01 |
| 9.       | Solenoid                                    | 52 435 02 |
| 10.      | Nut, starter                                | 52 100 09 |
| 11.      | Armature, starter                           | 12 170 04 |
| 12.      | Frame                                       | 12 471 01 |
| 13.      | Kit, brush & spring (Incl. 15)              | 52 221 01 |
| 14.      | Holder, brush                               | 52 323 03 |
| 15.      | Spring, brush (4)                           | 52 089 09 |
| 16.      | Insulator                                   | 52 168 01 |
| 17.      | Bolt, thru (2)                              | 52 211 05 |
| 18.      | Commutator, end cap                         | 24 301 01 |

| Ref. No. | Description | Part No. |
|----------|-------------|----------|
|          |             |          |




T-xxxx

## Fuel System

| Ref. No. | Description                                                                                                 | Part No.   |
|----------|-------------------------------------------------------------------------------------------------------------|------------|
| 1.       | Line, fuel 9" (2)                                                                                           | 25 353 10  |
| 2.       | Clamp, hose (6)                                                                                             | X-426-9    |
| 3.       | Kit, carburetor w/gasket<br>(Incl. 4-6)                                                                     | 24 853 32  |
| 4.       | Gasket, air cleaner base                                                                                    | 24 041 06  |
| 5.       | Carburetor Asm (Incl. 11-31,<br>carburetor repair kit<br>(For information only not<br>available separately) | 24 757 03) |
| 6.       | Gasket, carburetor                                                                                          | 24 053 32  |
| 7.       | Screw, hex. flange (2)                                                                                      | 24 041 17  |
| 8.       | Filter, fuel                                                                                                | M-0651030  |
| 9.       | Nut, plastic (2)                                                                                            | 24 050 02  |
| 10.      | Pump, fuel - pulse                                                                                          | 24 100 01  |
| 11.      | Screw, hex. cap 18 mm (2)                                                                                   | 24 393 04  |
| 12.      | Line, fuel 10"                                                                                              | 24 086 12  |
| 13.      | Screw, hex. flange<br>M6x1.0x10                                                                             | 52 353 20  |
| 14.      | Clip, cable                                                                                                 | M-0650012  |
| 15.      | Kit, choke repair (Incl. 16)                                                                                | 24 154 01  |
| 16.      | Cap, choke lever                                                                                            | 24 757 07  |
| 17.      | Clip, inlet needle valve                                                                                    | 24 173 02  |
| 18.      | Valve, inlet needle                                                                                         | 24 154 01  |
| 19.      | Screw, carburetor body (4)                                                                                  | 24 462 01  |
| 20.      | Gasket, carburetor body                                                                                     | 24 086 09  |
| 21.      | O-Ring, slow jet (2)                                                                                        | 24 041 09  |
|          |                                                                                                             | 24 153 02  |

| Ref. No. | Description                 | Part No.  |
|----------|-----------------------------|-----------|
| 22.      | Jet, slow                   | 24 337 01 |
| 23.      | Kit, float repair           | 24 757 02 |
| 24.      | Jet, main                   | 24 337 02 |
| 25.      | Spring, idle adjust screw   | 24 089 10 |
| 26.      | Screw, idle adjusting       | 24 086 10 |
| 27.      | Kit, solenoid (Incl. 28–33) | 24 757 01 |
| 28.      | O–Ring                      | 24 153 06 |
| 29.      | Seat, solenoid              | 24 521 01 |
| 30.      | O–Ring                      | 24 153 05 |
| 31.      | O–Ring                      | 24 153 04 |
| 32.      | Solenoid                    | 24 435 01 |
| 33.      | Screw, solenoid (2)         | 24 086 07 |
| 34.      | Needle, idle                | 24 368 01 |
| 35.      | Spring, idle needle         | 24 089 11 |
|          | Kit, carburetor repair      | 24 757 03 |




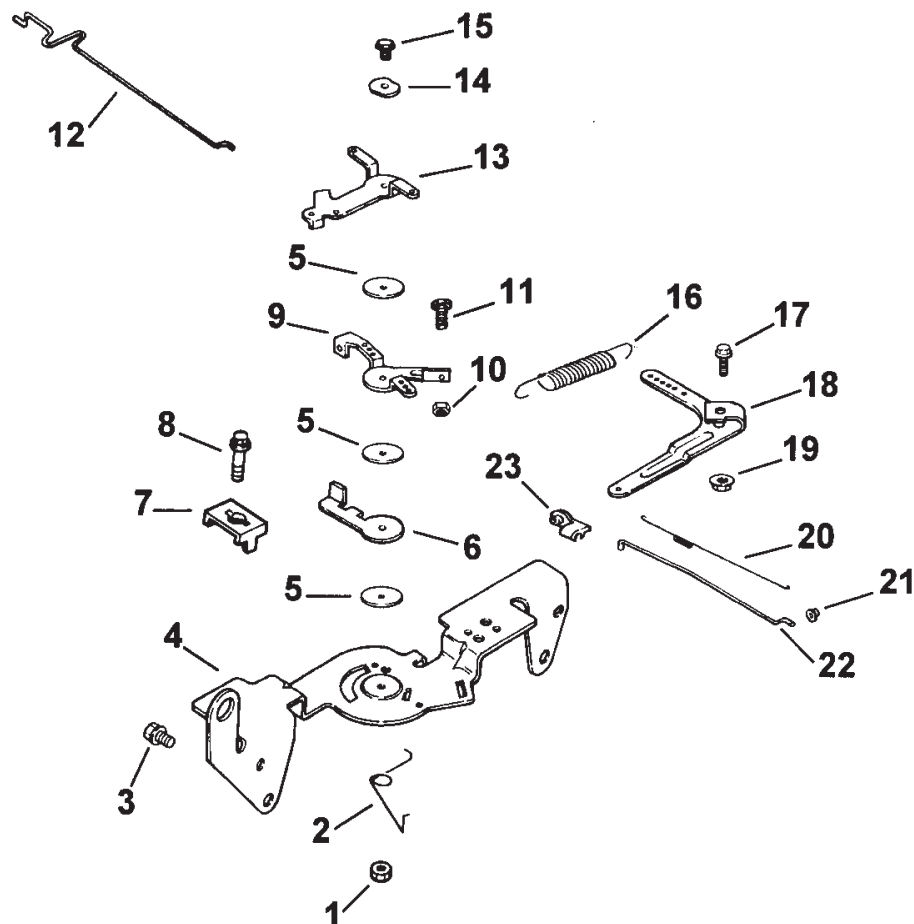


Sheet No.: 10

T-xxxx

## Engine Controls

| Ref. No. | Description                  | Part No.      | Ref. No. | Description | Part No. |
|----------|------------------------------|---------------|----------|-------------|----------|
| 1.       | Nut, hex. lock M5x0.8        | M-0547050     |          |             |          |
| 2.       | Spring, choke return         | 24 089 03     |          |             |          |
| 3.       | Screw, hex. flange M6x1.0x16 | (4) M-0645016 |          |             |          |
| 4.       | Bracket, control             | 24 126 56     |          |             |          |
| 5.       | Washer, plain 5.5mm (3)      | 24 468 01     |          |             |          |
| 6.       | Lever, throttle actuator     | 24 090 07     |          |             |          |
| 7.       | Clamp, cable (2)             | 12 237 01     |          |             |          |
| 8.       | Screw, hex. flange M5x0.8x16 | M-0545016     |          |             |          |
| 9.       | Lever, throttle control      | 24 090 03     |          |             |          |
| 10.      | Nut, hex M4x0.7              | M-0446030     |          |             |          |
| 11.      | Screw, hex. cap M4x0.7x30    | M-0401030     |          |             |          |
| 12.      | Linkage, choke               | 24 079 02     |          |             |          |
| 13.      | Lever, choke                 | 24 090 05     |          |             |          |
| 14.      | Washer, spring 1/4           | 41 468 03     |          |             |          |
| 15.      | Screw, hex. flange M5x0.8x20 | M-0545020     |          |             |          |
| 16.      | Spring, governor             | 24 089 18     |          |             |          |
| 17.      | Screw, hex. flange M6x1.0x25 | SM-064205     |          |             |          |
| 18.      | Lever, governor              | 24 090 14     |          |             |          |
| 19.      | Nut, hex. flange M6x1.0      | M-0641060     |          |             |          |
| 20.      | Spring, linkage              | 24 089 01     |          |             |          |
| 21.      | Bushing, linkage retaining   | 25 158 08     |          |             |          |
| 22.      | Linkage, throttle            | 24 079 01     |          |             |          |
| 23.      | Bushing, linkage retaining   | 25 158 11     |          |             |          |

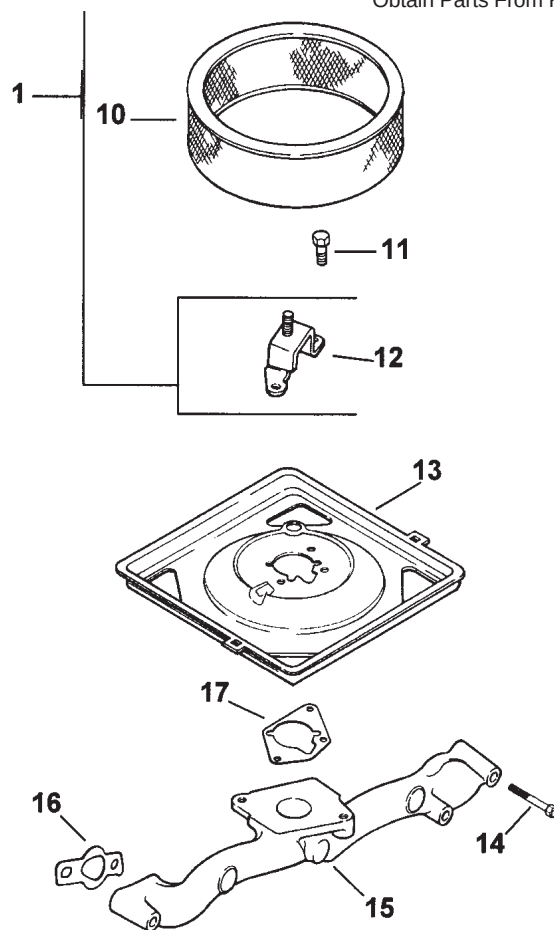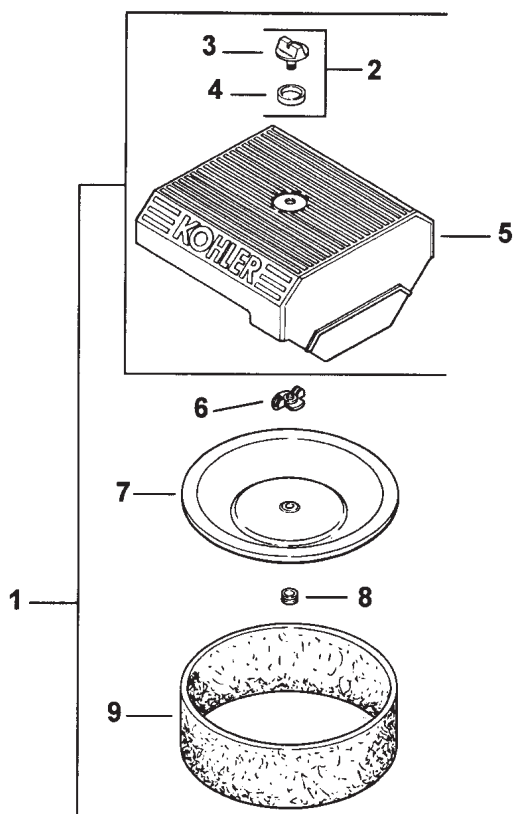


Sheet No.: 11

T-xxxx

## Air Intake / Filtration

| Ref. No. | Description                               | Part No.  |
|----------|-------------------------------------------|-----------|
| 1.       | Kit, air cleaner cover<br>(Incl. 2—5, 12) | 24 743 05 |
| 2.       | Kit, knob with seal (Incl. 3—4)           | 54 755 01 |
| 3.       | Knob, cover                               | 25 341 03 |
| 4.       | Seal, air cleaner cover knob              | 24 153 15 |
| 5.       | Cover, air cleaner                        | 24 096 24 |
| 6.       | Wing Nut                                  | 12 100 01 |
| 7.       | Cover, inner air cleaner                  | 24 096 01 |
| 8.       | Seal, inner air cleaner                   | 24 032 03 |
| 9.       | Precleaner, element                       | 24 083 02 |
| 10.      | Element, air cleaner                      | 47 083 03 |
| 11.      | Screw, hex. flange<br>M6x1.0x16 (3)       | M—0639016 |
| 12.      | Bracket, air cleaner base                 | 24 126 21 |
| 13.      | Base, air cleaner                         | 24 094 03 |
| 14.      | Screw, hex. flange<br>M6x1.0x55 (4)       | M—0651055 |
| 15.      | Manifold, intake                          | 24 164 14 |
| 16.      | Gasket, intake manifold (2)               | 24 041 01 |
| 17.      | Gasket, air cleaner base                  | 24 041 06 |


| Ref. No. | Description | Part No. |
|----------|-------------|----------|
|          |             |          |

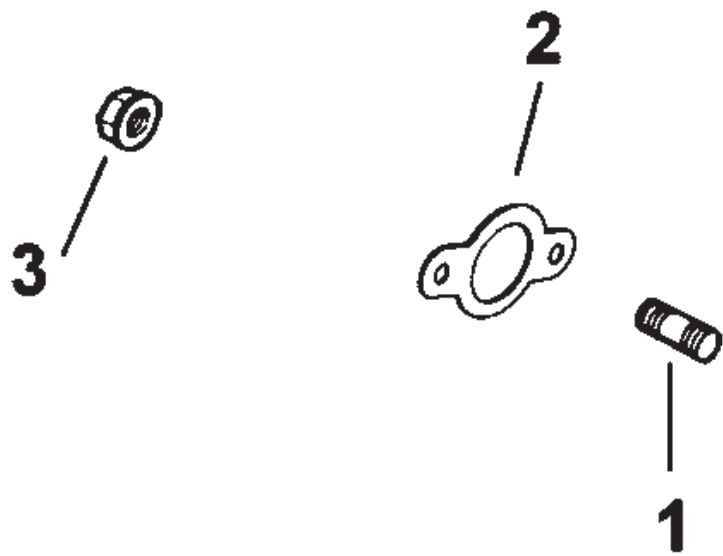

Sheet No.: 11  
T-xxxx

Exhaust

| Ref. No. | Description                  | Part No.  | Ref. No. | Description | Part No. |
|----------|------------------------------|-----------|----------|-------------|----------|
| 1.       | Stud M8x1.25x33 (4)          | M-0829033 |          |             |          |
| 2.       | Gasket, exhaust (2)          | 24 041 02 |          |             |          |
| 3.       | Nut, hex. flange M8x1.25 (4) | M-0841080 |          |             |          |
|          | Miniblock                    | 24 782 01 |          |             |          |
|          | Gasket Set                   | 24 755 03 |          |             |          |

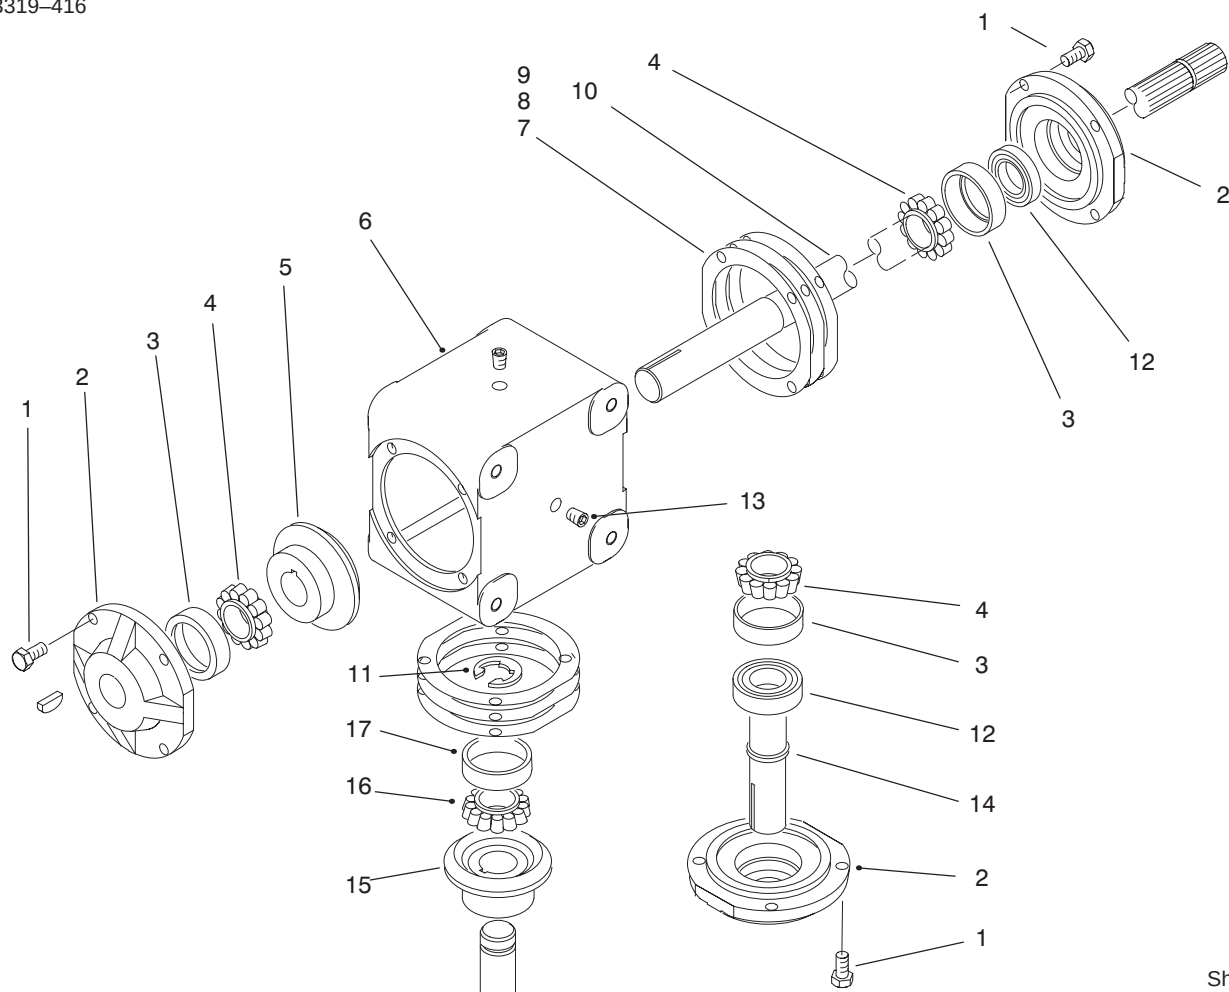


Sheet No.: 100

# Gear Box Assembly No. 94-4641

| Ref. No. | Part No. | Qty. | Description       |
|----------|----------|------|-------------------|
| 1        | 98-1341  | 12   | Screw             |
| 2        | 98-1346  | 3    | Cap               |
| 3        | 62-3340  | 3    | Bearing Cup       |
| 4        | 98-1343  | 3    | Bearing-Cone      |
| 5        | 98-1348  | 1    | Gear LH           |
| 6        | 98-1340  | 1    | Housing           |
| 7        | 62-3420  | A/R  | Gasket (.015)     |
| 8        | 62-3430  | A/R  | Gasket (.005)     |
| 9        | 62-3440  | A/R  | Gasket (.003)     |
| 10       | 98-1962  | 1    | Shaft             |
| 11       | 68-7070  | 1    | Ring-Retaining    |
| 12       | 62-3400  | 3    | Seal              |
| 13       | 62-3490  | 3    | Pipe Plug (Solid) |
| 14       | 98-1960  | 1    | Shaft             |
| 15       | 98-1961  | 1    | Gear RH           |
| 16       | 62-3370  | 1    | Bearing Cone      |
| 17       | 62-3360  | 1    | Bearing Cup       |

| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

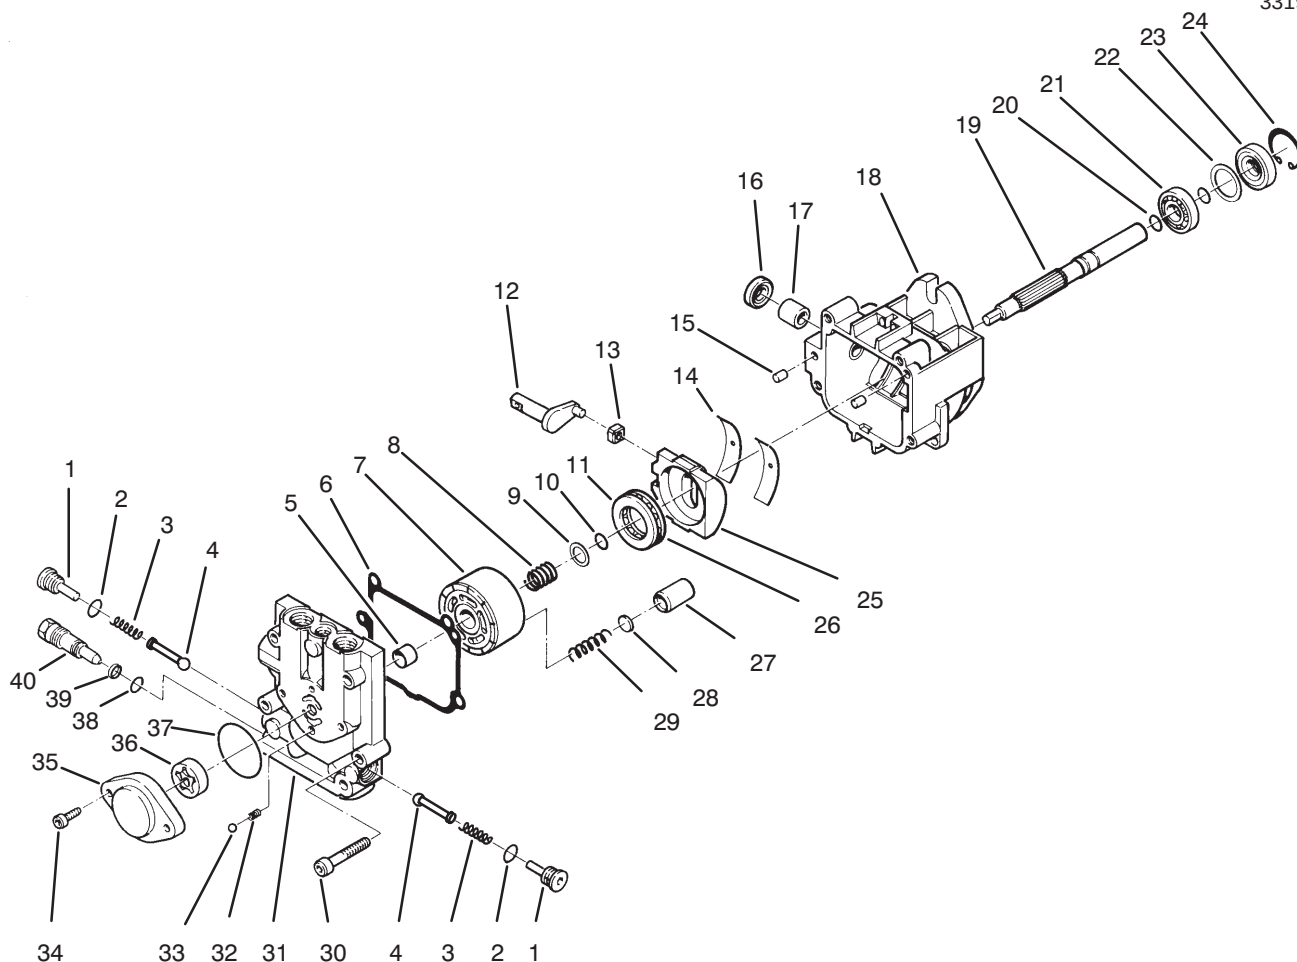

T-1236

## Hydraulic Pump Assembly No. 98-1957

| Ref. No. | Part No. | Qty. | Description                                         | Ref. No. | Part No. | Qty. | Description                                                     |
|----------|----------|------|-----------------------------------------------------|----------|----------|------|-----------------------------------------------------------------|
| 1        | 80-6120  | 1    | Check Valve Kit<br>(Incl. Ref. #2-4)                | 23       |          | 1    | Seal - Lip                                                      |
| 2        |          | 2    | Seal - O-Ring                                       | 24       |          | 1    | Ring - Retaining                                                |
| 3        |          | 2    | Spring                                              | 25       |          | 1    | Swashplate Assembly                                             |
| 4        |          | 2    | Poppet                                              | 26       |          | 1    | Roller - Thrust                                                 |
| 5        |          | 1    | Journal - Bearing                                   | 27       |          | 5    | Piston                                                          |
| 6        |          | 1    | Gasket - End Cap                                    | 28       |          | 5    | Washer - Thrust                                                 |
| 7        |          | 1    | Cylinder Block Kit<br>(Incl. Ref. #8-10<br>& 27-29) | 29       |          | 5    | Spring - Piston                                                 |
| 8        |          | 1    | Spring                                              | 30       |          | 4    | Screw                                                           |
| 9        |          | 1    | Washer                                              | 31       |          | 1    | End Cap Assembly<br>(Incl. Ref. #5)                             |
| 10       |          | 1    | Ring - Retaining                                    | 32       |          | 1    | Ball                                                            |
| 11       |          | 1    | Plate - Thrust                                      | 33       |          | 1    | Spring                                                          |
| 12       |          | 1    | Arm - Trunnion                                      | 34       |          | 2    | Screw                                                           |
| 13       |          | 1    | Guide - Slot                                        | 35       |          | 1    | Housing - Charge<br>Pump                                        |
| 14       |          | 2    | Cradle - Bearing                                    | 36       |          | 1    | Gerotor Assembly                                                |
| 15       |          | 2    | Pin                                                 | 37       |          | 1    | Seal - O-Ring                                                   |
| 16       |          | 1    | Seal - Lip                                          | 38       |          | 1    | Seal - O-Ring                                                   |
| 17       |          | 1    | Journal - Bearing                                   | 39       |          | 1    | Ring - Back-Up                                                  |
| 18       |          | 1    | Housing - Assembly<br>(Incl. Ref. #16 & 17)         | 40       |          | 1    | Valve - Bypass                                                  |
| 19       |          | 1    | Shaft                                               | *        | 80-6110  | 1    | Charge Relief Valve Kit<br>(Incl. Ref. #32-33)                  |
| 20       |          | 2    | Ring - Retaining                                    | *        | 80-6130  | 1    | Overhaul Seal Kit<br>(Incl. Ref. #6, 10, 16,<br>20, 23 & 37-39) |
| 21       |          | 1    | Bearing - Ball                                      |          |          |      |                                                                 |
| 22       |          | 1    | Spacer                                              |          |          |      |                                                                 |

\*Not Illustrated

# Toro Part Number Index

| Part No. | Page No. | Ref. No. | Qty. | Description          |
|----------|----------|----------|------|----------------------|
| 2844     | 9        | 25       | 1    | Washer—Flat          |
| 8830     | 1        | 34       | 1    | Retainer—"J"         |
| 101884   | 3        | 2:1      | 2    | Nut—Hex              |
| 102950   | 3        | 3:2      | 1    | Washer               |
| 105805   | 3        | 3:1      | 1    | Nut                  |
| 106948   | 3        | 19       | 1    | Tray—Battery         |
| 106950   | 4        | 23       | 2    | Bushing              |
| 111216   | 3        | 2        | 1    | Switch—Ignition      |
| 113010   | 3        | 12       | 1    | Hold Down            |
| 113050   | 3        | 5        | 1    | Cover—Switch         |
| 113179   | 3        | 3:3      | 1    | Nut                  |
| 114511   | 10       | 29       | 1    | Spacer               |
| 115850   | 7        | 38       | 1    | Cable—Seat           |
| 115877   | 3        | 13       | 1    | Battery              |
| 116397   | 3        | 32       | 5    | Relay                |
| 9201604  | 3        | 2:2      | 1    | Washer—Lock          |
| 9202204  | 10       | 11       | 1    | Washer               |
| 9202574  | 8        | 5        | 3    | Washer—Flt           |
| 5-0698   | 10       | 13       | 1    | Key                  |
| 10-6850  | 4        | 14       | 2    | Drum Brake           |
| 10-6870  | 4        | 15       | 2    | Hub—Wheel            |
| 12-5450  | 9        | 3        | 2    | Screw—Thd Form       |
| 24-0760  | 2        | 10       | 1    | Exchanger—Heat       |
| 26-3790  | 4        | 16       | 2    | Nut—Lock             |
| 27-2320  | 8        | 16       | 2    | Bearing              |
| 27-6230  | 10       | 1        | 1    | Bolt—Wheel           |
| 28-3893  | 3        | 17       | 1    | ASM—Wire             |
| 28-8080  | 3        | 14       | 1    | Boot—Terminal        |
| 38-1420  | 7        | 42       | 1    | Switch—Seat          |
| 42-9430  | 9        | 8        | 1    | Bolt w/Washer        |
| 48-8010  | 9        | 10       | 1    | Washer—Flat 6.4mm Id |
| 48-8020  | 9        | 9        | 1    | Washer—Spring Lock   |
| 48-9570  | 9        | 27       | 2    | Washer—Lock M8       |
| 52-2480  | 7        | 41       | 2    | Spacer—Wheel         |
| 57-5420  | 5        | 24       | 1    | Screw—Shoulder       |
| 62-3340  | 24       | 3        | 3    | Bearing Cup          |
| 62-3360  | 24       | 17       | 1    | Bearing Cup          |
| 62-3370  | 24       | 16       | 1    | Bearing Cone         |
| 62-3400  | 24       | 12       | 3    | Seal                 |
| 62-3420  | 24       | 7        | A/R  | Gasket (.015)        |
| 62-3430  | 24       | 8        | A/R  | Gasket (.005)        |
| 62-3440  | 24       | 9        | A/R  | Gasket (.003)        |
| 62-3490  | 24       | 13       | 3    | Pipe Plug (Solid)    |
| 62-7650  | 2        | 19       | 1    | Gasket               |
| 62-7770  | 3        | 36       | 2    | Key—Ignition         |
| 63-8410  | 7        | 16       | 2    | Washer—Flat          |
| 66-0120  | 2        | 3        | 1    | Knob                 |
| 66-4210  | 10       | 26       | 1    | Pulley—Idler         |
| 67-7490  | 10       | 41       | 1    | Key                  |
| 67-8110  | 5        | 9        | 1    | Filter—Oil           |
| 68-7070  | 24       | 11       | 1    | Ring—Retaining       |
| 70-9840  | 4        | 17:5     | 4    | Brake Shoe           |
| 70-9860  | 4        | 17:2     | 2    | Cam Shaft            |
| 70-9870  | 4        | 17:1     | 2    | Plate—Backing        |
| 70-9880  | 4        | 17:4     | 4    | Spring—Return        |
| 71-1500  | 4        | 17       | 2    | Brake ASM            |
| 74-0720  | 7        | 21       | 1    | Tube—Manual          |
| 76-0800  | 6        | 45       | 2    | Seal Kit—Wheel Motor |
| 77-3100  | 1        | 30       | 1    | Decal—Warning        |
| 78-0020  | 3        | 4        | 1    | Hourmeter            |
| 78-3320  | 3        | 4:1      | 1    | Clamp—Hour Meter     |
| 80-6090  | 10       | 37       | 2    | Key—Square           |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.   | Page No. | Ref. No. | Qty. | Description           |
|------------|----------|----------|------|-----------------------|
| 80-8170    | 10       | 36       | 2    | Pulley-Pump           |
| 80-9350    | 9        | 6        | 1    | Plate-Hot Surface     |
| 84-2000    | 4        | 20       | 2    | Bracket-Brake         |
| 85-6540    | 4        | 13       | 8    | Stud                  |
| 86-9080    | 5        | 11       | 1    | Head-Filter           |
| 88-6460    | 10       | 25       | 1    | Spring - Extension    |
| 92-1705    | 5        | 28       | 1    | Screen-Filter         |
| 92-6287    | 3        | 11       | 1    | ASM-Wire (Ground)     |
| 92-6780    | 9        | 14       | 4    | Nut-HHF               |
| 92-9811    | 3        | 3        | 1    | Switch-Toggle         |
| 93-0307    | 1        | 12       | 1    | Nut-Lock              |
| 93-0350    | 9        | 12       | 2    | Gasket-Exhaust        |
| 93-1622    | 10       | 15       | 2    | Pulley-Idler          |
| 93-3101    | 2        | 20       | 1    | Gas Cap               |
| 93-4365    | 5        | 27       | 1    | Oil Cap               |
| 93-5107    | 2        | 9        | 2    | Fitting-Adapter       |
| 93-7340    | 7        | 10       | 1    | Decal-Toro            |
| 93-9198    | 1        | 24       | 1    | Decal-Warning         |
| 94-4602    | 4        | 2        | 1    | Lever-Brake           |
| 94-4607    | 10       | 18       | 1    | Belt-Pump Drive       |
| 94-4608    | 10       | 19       | 1    | Belt-PTO              |
| 94-4618-03 | 1        | 1        | 1    | Support-Engine        |
| 94-4624    | 4        | 12       | 1    | Torsion Shaft         |
| 94-4628    | 10       | 14       | 1    | Engine-Pulley         |
| 94-4629    | 10       | 32       | 1    | Clutch-Pulley         |
| 94-4632    | 10       | 20       | 1    | Clutch ASM            |
| 94-4635-01 | 7        | 45       | 1    | Plate-Console Support |
| 94-4640    | 6        | 41       | 2    | Motor-Hyd Wheel       |
| 94-4641    | 10       | 34       | 1    | Gearbox-PTO Drive     |
| 94-4642-03 | 5        | 23       | 1    | Strap-Hydraulic Tank  |
| 94-4647-01 | 1        | 17       | 1    | Castor Fork           |
| 94-4658-03 | 10       | 6        | 1    | Pump-Mount            |
| 94-4665    | 1        | 11       | 1    | Dustcap               |
| 94-4672-03 | 7        | 13       | 1    | Latch-Utility Box     |
| 94-4678    | 5        | 4        | 2    | Arm-Pump Control      |
| 94-4680    | 3        | 1        | 1    | Harness-Main          |
| 94-4685    | 10       | 27       | 1    | Spacer-Idler          |
| 94-4688    | 10       | 12       | 1    | Spacer-Engine Shaft   |
| 94-4689    | 10       | 16       | 1    | Spacer-Engine Shaft   |
| 94-4696    | 3        | 31       | 1    | Angle-Mount           |
| 94-4698    | 7        | 1        | 1    | Console               |
| 94-4699    | 7        | 15       | 1    | Box-Utility           |
| 94-4700    | 5        | 29       | 1    | Tank-Hydraulic        |
| 94-4701-03 | 5        | 7        | 1    | Plate-Control         |
| 94-4702-03 | 5        | 5        | 1    | Plate-Control         |
| 94-4705    | 6        | 38       | 2    | Hose ASM              |
| 94-4709    | 5        | 21       | 1    | Hose ASM-Hyd          |
| 94-4710    | 5        | 14       | 1    | Hose ASM-Hyd          |
| 94-4711    | 5        | 13       | 2    | Hose ASM-Hyd          |
| 94-4712    | 5        | 8        | 1    | Hose ASM-Hyd          |
| 94-4713    | 5        | 19       | 1    | Hose ASM-Hyd          |
| 94-4714    | 5        | 2        | 2    | Hose ASM-Hyd          |
| 94-4717    | 8        | 9        | 1    | Rod-Control           |
| 94-4718    | 8        | 13       | 1    | Rod-Control           |
| 94-4721-03 | 7        | 20       | 1    | Hinge-Utility Box     |
| 94-4752    | 1        | 20       | 1    | Axle-Castor           |
| 94-4753    | 1        | 22       | 1    | Tube-Spacer           |
| 94-4755    | 1        | 32       | 2    | Pivot Pin ASM         |
| 94-4787-03 | 10       | 39       | 1    | Mount-Plate           |
| 94-4792    | 10       | 5        | 1    | Spacer-Idler Arm      |
| 94-4797-03 | 3        | 23       | 1    | Channel-Mount Switch  |
| 94-4798-01 | 7        | 30       | 1    | Plate-Tank Support    |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.   | Page No. | Ref. No. | Qty. | Description             |
|------------|----------|----------|------|-------------------------|
| 94-4799-03 | 7        | 26       | 1    | Strap—Fuel Tank         |
| 94-6141-03 | 2        | 30       | 1    | Bracket—Cooler          |
| 94-6142    | 2        | 15       | 1    | Bracket—Cooler          |
| 94-6146    | 3        | 18       | 2    | Retainer—Battery        |
| 94-9350-03 | 7        | 5        | 1    | Panel—Instrument        |
| 94-9383    | 1        | 23:2     | 1    | ASM—Wheel               |
| 94-9384    | 1        | 23:1     | 1    | Tire                    |
| 94-9386    | 1        | 26:3     | 2    | Wheel                   |
| 94-9387    | 1        | 26:1     | 2    | Tire                    |
| 94-9391    | 4        | 30       | 1    | Brake Lever LH          |
| 94-9392    | 4        | 24       | 1    | Brake Lever RH          |
| 94-9398    | 4        | 25       | 2    | Rod—Link                |
| 94-9450    | 4        | 11       | 1    | Rod—Brake               |
| 94-9451    | 4        | 6        | 2    | Link—Brake              |
| 94-9452    | 4        | 10       | 1    | Brake Hub               |
| 94-9456    | 4        | 8        | 1    | Transfer Shaft          |
| 94-9460    | 3        | 25       | 1    | Plate—Switch Mount      |
| 94-9461    | 2        | 16       | 1    | Engine Kohler Ch20      |
| 94-9488-03 | 7        | 8        | 1    | Strap—Console           |
| 94-9489-01 | 1        | 6        | 1    | Housing—Spindle         |
| 94-9490    | 8        | 3        | 2    | Grip—Cushion            |
| 94-9491-01 | 7        | 34       | 1    | Plate—Cover             |
| 94-9494    | 9        | 13       | 1    | Manifold                |
| 94-9495    | 9        | 15       | 1    | Muffler                 |
| 94-9496    | 7        | 18       | 1    | Pin—Pivot               |
| 94-9499    | 2        | 24       | 1    | Tube—Oil Drain          |
| 94-9502    | 2        | 26       | 1    | Hose—Gas                |
| 94-9515    | 8        | 17       | 1    | Shaft—Control           |
| 94-9517-03 | 8        | 2        | 1    | Handle—Control LH       |
| 94-9524    | 8        | 1        | 1    | Spacer—Control          |
| 94-9525-03 | 5        | 15       | 1    | Angle—Mount             |
| 94-9529-01 | 7        | 40       | 1    | Plate—Seat              |
| 94-9551    | 8        | 7        | 1    | Handle—Control RH       |
| 94-9552    | 8        | 6        | 2    | Center Control ASM      |
| 94-9553    | 2        | 21       | 1    | Fuel Tank ASM           |
| 94-9556-03 | 2        | 5        | 1    | Cooler Shroud ASM       |
| 94-9561-03 | 9        | 11       | 1    | Bracket—Manifold Shield |
| 94-9563-03 | 2        | 7        | 1    | Bracket—Shroud          |
| 94-9567    | 7        | 9        | 1    | ASM—Seat                |
| 94-9573-01 | 4        | 26       | 2    | Mount—Lever             |
| 94-9580    | 3        | 6        | 2    | Clamp—J                 |
| 94-9591-03 | 8        | 32       | 1    | Mount—Channel           |
| 94-9593    | 8        | 34       | 2    | Spacer—Damper           |
| 94-9594-03 | 8        | 19       | 1    | Hub—Control             |
| 94-9596    | 8        | 33       | 2    | Damper—Control          |
| 94-9597-03 | 2        | 18       | 1    | Cover—Fuel Tank Opening |
| 94-9598    | 1        | 3        | 1    | Frame ASM               |
| 94-9599    | 10       | 4        | 1    | Spring—Extension        |
| 95-1950    | 10       | 3        | 1    | Arm ASM                 |
| 95-1955    | 2        | 2        | 1    | Control—Throttle        |
| 95-1956    | 1        | 31       | 1    | Decal—Z320              |
| 95-1962    | 7        | 2        | 6    | Tinnerman Clip          |
| 95-1967    | 10       | 28       | 1    | Spacer—Spring           |
| 95-1968    | 10       | 30       | 1    | Idler Arm ASM           |
| 98-0753    | 7        | 3        | 1    | Decal—Instrument        |
| 98-1301-03 | 10       | 23       | 1    | Stop—Clutch             |
| 98-1306    | 7        | 14       | 1    | Decal—No Riders         |
| 98-1313    | 7        | 46       | 1    | Decal—Operation         |
| 98-1319    | 2        | 22       | 1    | Foam—Tank               |
| 98-1324    | 3        | 30       | 3    | Switch—Interrupter      |
| 98-1326    | 9        | 24       | 1    | Baffle—Heat             |
| 98-1327    | 9        | 7        | 1    | Baffle—Heat             |

\*Not Illustrated



# Toro Part Number Index (cont.)

| Part No.   | Page No. | Ref. No. | Qty. | Description               |
|------------|----------|----------|------|---------------------------|
| 98-1328    | 9        | 1        | 1    | Baffle-Heat               |
| 98-1329    | 9        | 17       | 1    | Baffle-Heat               |
| 98-1340    | 24       | 6        | 1    | Housing                   |
| 98-1341    | 24       | 1        | 12   | Screw                     |
| 98-1343    | 24       | 4        | 3    | Bearing-Cone              |
| 98-1346    | 24       | 2        | 3    | Cap                       |
| 98-1348    | 24       | 5        | 1    | Gear LH                   |
| 98-1349    | 9        | 28       | 1    | Baffle-Heat               |
| 98-1953-03 | 7        | 29       | 1    | Bumper ASM                |
| 98-1954-01 | 6        | 43       | 1    | Mount-Strap               |
| 98-1956    | 2        | 32       | 1    | Control-Push Pull         |
| 98-1957    | 5        | 37       | 2    | Pump-Hydraulic            |
| 98-1960    | 24       | 14       | 1    | Shaft                     |
| 98-1961    | 24       | 15       | 1    | Gear RH                   |
| 98-1962    | 24       | 10       | 1    | Shaft                     |
| 2112-11    | 9        | 16       | 1    | Clamp-Muffler             |
| 232-27     | 1        | 26:2     | 2    | Valve Stem & Cap Assembly |
| 237-22     | 5        | 20:1     | 2    | O-Ring                    |
| 237-22     | 5        | 32:1     | 2    | O-Ring                    |
| 237-22     | 5        | 36:1     | 1    | O-Ring                    |
| 237-30     | 5        | 1:1      | 2    | O-Ring                    |
| 237-30     | 5        | 10:1     | 1    | O-Ring                    |
| 237-30     | 5        | 12:1     | 2    | O-Ring                    |
| 237-30     | 5        | 31:1     | 3    | O-Ring                    |
| 237-30     | 5        | 33:1     | 4    | O-Ring                    |
| 237-42     | 5        | 20:2     | 1    | O-Ring                    |
| 237-42     | 5        | 36:2     | 1    | O-Ring                    |
| 237-78     | 5        | 32:2     | 2    | O-Ring                    |
| 237-79     | 5        | 10:2     | 1    | O-Ring                    |
| 237-79     | 5        | 12:2     | 2    | O-Ring                    |
| 237-79     | 5        | 33:2     | 4    | O-Ring                    |
| 237-80     | 5        | 1:2      | 2    | O-Ring                    |
| 237-80     | 5        | 31:2     | 3    | O-Ring                    |
| 240-11     | 7        | 25       | 1    | Grommet                   |
| 242-50     | 1        | 27       | 8    | Nut-Lug                   |
| 2411-52    | 8        | 11       | 2    | Rod-End RH                |
| 2411-53    | 8        | 20       | 2    | Rod-End LH                |
| 2412-39    | 2        | 12       | 4    | R-Clamp                   |
| 2412-93    | 3        | 28       | 1    | R-Clamp                   |
| 2412-98    | 2        | 29       | 2    | Clamp-Hose                |
| 2412-120   | 7        | 22       | 2    | Clamp-R                   |
| 254-61     | 1        | 7        | 2    | Cup-Bearing               |
| 254-62     | 1        | 8        | 1    | Cone-Bearing              |
| 254-70     | 1        | 5        | 1    | Bearing w/Cone & Seal     |
| 282-2      | 4        | 31       | 2    | Pin-Clevis                |
| 283-1      | 4        | 5        | 4    | Pin-Clevis                |
| 283-66     | 8        | 26       | 4    | Pin-Clevis                |
| 288-4      | 2        | 23       | 1    | Cap-Pipe                  |
| 302-5      | 8        | 37       | 3    | Fitting-Grease            |
| 321-3      | 5        | 17       | 2    | Screw-HH                  |
| 321-4      | 3        | 16       | 2    | Screw-HH                  |
| 321-4      | 9        | 21       | 1    | Screw-HH                  |
| 321-5      | 3        | 27       | 5    | Screw-HH                  |
| 321-5      | 4        | 18       | 8    | Screw-HH                  |
| 322-2      | 7        | 47       | 2    | Screw-HH                  |
| 322-3      | 2        | 13       | 4    | Screw-HH                  |
| 322-3      | 3        | 22       | 4    | Screw-HH                  |
| 322-3      | 4        | 4        | 4    | Screw-HH                  |
| 322-3      | 7        | 35       | 4    | Screw-HH                  |
| 322-4      | 5        | 18       | 2    | Screw-HH                  |
| 322-4      | 7        | 44       | 6    | Screw-HH                  |
| 322-5      | 5        | 6        | 4    | Screw-HH                  |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No. | Page No. | Ref. No. | Qty. | Description  |
|----------|----------|----------|------|--------------|
| 322-5    | 8        | 12       | 4    | Screw—HH     |
| 322-7    | 6        | 44       | 1    | Screw—HH     |
| 322-10   | 7        | 28       | 2    | Screw—HH     |
| 323-4    | 3        | 20       | 1    | Screw—HH     |
| 323-4    | 8        | 23       | 4    | Screw—HH     |
| 323-4    | 10       | 8        | 8    | Screw—HH     |
| 323-5    | 9        | 22       | 3    | Screw—HH     |
| 323-6    | 1        | 25       | 6    | Screw—HH     |
| 323-6    | 8        | 30       | 3    | Screw—HH     |
| 323-6    | 10       | 24       | 2    | Screw—HH     |
| 323-7    | 7        | 39       | 2    | Screw—HH     |
| 323-8    | 7        | 17       | 1    | Screw—HH     |
| 323-9    | 2        | 25       | 4    | Screw—HH     |
| 323-9    | 7        | 24       | 1    | Screw—HH     |
| 323-10   | 10       | 17       | 2    | Screw—HH     |
| 323-11   | 10       | 2        | 2    | Screw        |
| 323-18   | 4        | 27       | 4    | Screw—HH     |
| 323-18   | 10       | 40       | 4    | Screw—HH     |
| 323-31   | 10       | 31       | 1    | Screw—Hhcs   |
| 324-4    | 9        | 19       | 1    | Screw—HH     |
| 324-5    | 5        | 35       | 4    | Screw—HH     |
| 325-2    | 1        | 14       | 2    | Screw        |
| 325-9    | 6        | 39       | 8    | Screw—HH     |
| 3212-10  | 10       | 21       | 1    | Screw        |
| 3217-9   | 1        | 18       | 1    | Nut—HH       |
| 3217-27  | 3        | 4:3      | 2    | Nut—HH       |
| 3218-5   | 1        | 19       | 1    | Nut—Jam      |
| 3220-2   | 8        | 10       | 2    | Nut—Jam      |
| 3220-3   | 2        | 4        | 1    | Nut—Hex Jam  |
| 3220-7   | 1        | 9        | 1    | Nut—Jam      |
| 3220-20  | 8        | 8        | 2    | Nut—Hex Jam  |
| 3230-1   | 5        | 22       | 1    | Bolt—CARR    |
| 3230-2   | 7        | 43       | 1    | Screw—CARR   |
| 3231-2   | 7        | 19       | 2    | Screw—CARR   |
| 3233-27  | 1        | 4        | 4    | Screw—CARR   |
| 3234-4   | 2        | 6        | 6    | Screw—HH     |
| 3234-4   | 9        | 4        | 4    | Screw—HH     |
| 3241-5   | 10       | 35       | 4    | Set Screw    |
| 3246-3   | 10       | 33       | 2    | Screw—HSH    |
| 3250-29  | 2        | 17       | 5    | Screw        |
| 3253-3   | 5        | 16       | 2    | Washer—Lock  |
| 3253-4   | 7        | 36       | 4    | Washer—Lock  |
| 3253-5   | 9        | 23       | 3    | Washer—Lock  |
| 3253-6   | 9        | 18       | 1    | Washer—Lock  |
| 3253-21  | 10       | 9        | 8    | Washer—Lock  |
| 3255-25  | 3        | 4:2      | 2    | Washer—Lock  |
| 3256-2   | 7        | 37       | 5    | Washer—Flat  |
| 3256-8   | 1        | 13       | 1    | Washer—Flat  |
| 3256-14  | 3        | 34       | 3    | Washer—Flat  |
| 3256-22  | 3        | 15       | 4    | Washer—Flat  |
| 3256-23  | 3        | 26       | 2    | Washer—Flat  |
| 3256-23  | 4        | 3        | 8    | Washer—Flat  |
| 3256-23  | 5        | 25       | 1    | Washer—Flat  |
| 3256-23  | 7        | 6        | 8    | Washer—Flat  |
| 3256-24  | 4        | 28       | 1    | Washer—Flat  |
| 3256-24  | 7        | 12       | 3    | Washer—Flat  |
| 3256-24  | 10       | 7        | 13   | Washer—Flat  |
| 3256-25  | 10       | 22       | 1    | Washer—Flat  |
| 3256-26  | 1        | 16       | 4    | Washer—Flat  |
| 3256-28  | 1        | 21       | 2    | Washer—Flat  |
| 3256-39  | 8        | 15       | 1    | Washer—Flat  |
| 3257-42  | 6        | 40       | 2    | Key—Woodruff |

\*Not Illustrated

# Toro Part Number Index (cont.)

| Part No.  | Page No. | Ref. No. | Qty. | Description       |
|-----------|----------|----------|------|-------------------|
| 3258-166  | 2        | 31       | 2    | Screw             |
| 3269-8    | 1        | 28       | 2    | Rivet             |
| 3269-8    | 9        | 5        | 2    | Rivet             |
| 3272-4    | 8        | 4        | 4    | Pin-Cotter        |
| 3272-10   | 4        | 7        | 8    | Pin-Cotter        |
| 3272-17   | 1        | 10       | 1    | Pin-Cotter        |
| 3274-83   | 5        | 3        | 2    | Screw-HSH         |
| 3290-343  | 1        | 33       | 2    | Pin-Cotter        |
| 3290-357  | 7        | 32       | 1    | Nut-Lock Flange   |
| 3290-378  | 2        | 28       | 1    | Tie-Cable         |
| 3290-378  | 3        | 29       | 5    | Tie-Cable         |
| 3290-378  | 6        | 42       | 2    | Tie-Cable         |
| 3290-379  | 3        | 7        | 1    | Tie-Cable         |
| 3296-2    | 3        | 33       | 3    | Nut Lock          |
| 3296-6    | 10       | 38       | 1    | Nut-Lock          |
| 3296-23   | 1        | 15       | 5    | Nut-Lock          |
| 3296-29   | 2        | 14       | 4    | Nut-Lock          |
| 3296-29   | 3        | 24       | 4    | Nut-Lock          |
| 3296-29   | 4        | 1        | 4    | Nut-Lock          |
| 3296-29   | 5        | 26       | 10   | Nut-Lock          |
| 3296-29   | 7        | 31       | 9    | Nut-Lock          |
| 3296-29   | 8        | 14       | 2    | Nut-Lock          |
| 3296-39   | 1        | 2        | 6    | Nut-Lock          |
| 3296-39   | 2        | 27       | 4    | Nut-Lock          |
| 3296-39   | 4        | 29       | 4    | Nut-Lock          |
| 3296-39   | 7        | 11       | 5    | Nut-Lock          |
| 3296-39   | 8        | 35       | 7    | Nut-Lock          |
| 3296-39   | 10       | 10       | 11   | Nut-Lock          |
| 3296-42   | 2        | 1        | 2    | Nut-Lock          |
| 3296-42   | 3        | 21       | 5    | Nut-Lock          |
| 3296-42   | 4        | 21       | 8    | Nut-Lock          |
| 3296-42   | 9        | 20       | 1    | Nut-Lock          |
| 3296-47   | 8        | 18       | 2    | Nut-Lock          |
| 32103-22  | 3        | 10       | 4    | Nut-Wing          |
| 32104-76  | 7        | 23       | 2    | Screw-Self TAP    |
| 32105-13  | 3        | 35       | 3    | Screw-HH          |
| 32120-72  | 4        | 22       | 2    | Ring-Retaining    |
| 32121-93  | 4        | 9        | 1    | Pin-Spiral        |
| 32121-103 | 8        | 22       | 2    | Pin-Spring        |
| 32128-42  | 5        | 34       | 4    | Nut-Hex Flange    |
| 32144-4   | 7        | 33       | 4    | Screw-TAP         |
| 32144-10  | 2        | 11       | 2    | Screw-HH          |
| 32144-11  | 7        | 7        | 4    | Screw-TAP         |
| 32144-14  | 7        | 27       | 2    | Screw-HWH         |
| 32144-74  | 3        | 9        | 2    | Screw             |
| 32144-124 | 7        | 4        | 6    | Screw-PPH         |
| 32148-6   | 2        | 8        | 6    | Insert            |
| 32148-6   | 9        | 2        | 4    | Insert            |
| 33114-020 | 9        | 26       | 2    | Screw-HH          |
| 340-4     | 5        | 33       | 4    | Fitting-Hydraulic |
| 340-77    | 5        | 36       | 1    | Fitting-Hydraulic |
| 340-89    | 5        | 1        | 2    | Fitting-Hydraulic |
| 340-94    | 5        | 20       | 1    | Tee               |
| 340-97    | 5        | 32       | 2    | Fitting-Hydraulic |
| 340-98    | 5        | 12       | 2    | Fitting-Hydraulic |
| 340-105   | 5        | 31       | 3    | Fitting-Elbow     |
| 340-157   | 5        | 10       | 1    | Fitting-Hydraulic |

\*Not Illustrated

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

## PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

**COUNTRIES OTHER THAN THE UNITED STATES OR CANADA**

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

**COUNTRIES OTHER THAN THE UNITED STATES OR CANADA**

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

**COUNTRIES OTHER THAN THE UNITED STATES OR CANADA**

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

[illegible]