



**Count on it.**

# Parts Catalog

## **Z Master® Riding Mower with 72in TURBO FORCE® Side Discharge Mower**

**Model No. 74938—Serial No. 312000001 and Up**

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LP:** Liquid Propane

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

 
**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents


|                                                         |    |
|---------------------------------------------------------|----|
| Frame and Caster Wheel Assembly .....                   | 4  |
| Roll-Over Protection System Assembly No. 116-0231 ..... | 5  |
| Caster Wheel and Fork Assembly .....                    | 6  |
| Hydraulic Pump, Idler and Belt Assembly .....           | 7  |
| Pump Idler Assembly No. 116-1255 .....                  | 8  |
| LH Hydro Assembly No. 116-6409 .....                    | 9  |
| RH Hydro Assembly No. 116-6410 .....                    | 10 |
| Rear Wheel and Park Brake Assembly .....                | 11 |
| Parking Brake Handle Assembly No. 116-6861 .....        | 12 |
| Fuel Tank Mounting Assembly .....                       | 13 |
| Fuel Tank Assembly No. 116-3979 .....                   | 14 |
| Seat Mounting Assembly .....                            | 15 |
| Seat Assembly No. 116-0035 .....                        | 16 |
| Motion Control Assembly .....                           | 17 |
| Fender, Console and Control Assembly .....              | 18 |
| LH Console Assembly No. 115-7401 .....                  | 19 |
| RH Console Assembly No. 115-7400 .....                  | 20 |
| Electrical Assembly .....                               | 21 |
| Deck Lift Assembly .....                                | 22 |
| Height-of-Cut Assembly No. 109-7438 .....               | 24 |
| Engine, Muffler and Clutch Assembly .....               | 25 |
| Deck Assembly .....                                     | 26 |
| Deck Decal Assembly No. 112-4195 .....                  | 28 |
| Idler Assembly .....                                    | 29 |
| Spindle Assembly No. 119-8500 .....                     | 30 |
| Rubber Deflector Assembly No. 108-2792 .....            | 31 |
| Lever Assembly No. 107-1664 .....                       | 32 |
| Attachments and Accessories .....                       | 33 |

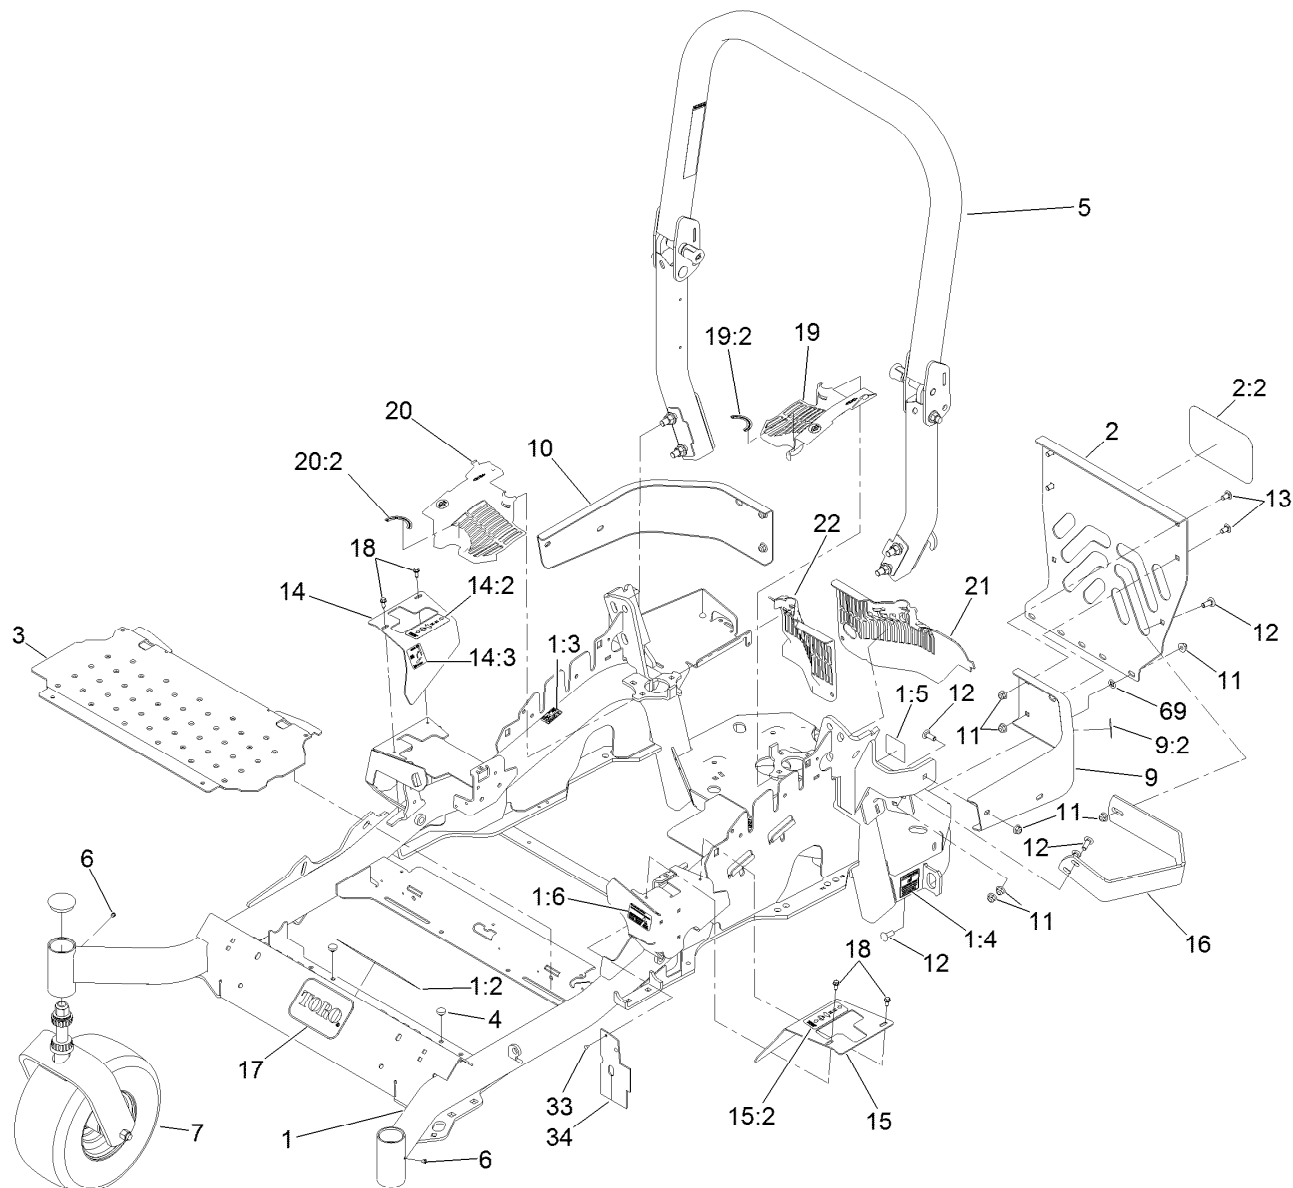

## Frame and Caster Wheel Assembly

| Ref. | Part Number | Qty. | Description          | Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|----------------------|------|-------------|------|-----------------------------|
| 1    | 116-5904    | 1    | Mainframe ASM        | 14   | 116-5899    | 1    | Cover-Motion Control, RH    |
| 1:2  | 103-2076    | 2    | Decal-Caution        | 14:2 | 109-7232    | 1    | Decal-Motion Control        |
| 1:3  | 116-3303    | 1    | Decal-Slope          | 14:3 | 116-5944    | 1    | Decal-Park Brake            |
| 1:4  | 116-0205    | 2    | Decal-Belt Drive     | 15   | 116-0580    | 1    | LH Motion Control Cover ASM |
| 1:5  | 116-4858    | 1    | Decal-Spark Arrester | 15:2 | 109-7232    | 1    | Decal-Motion Control        |
| 1:6  | 116-1654    | 1    | Decal-Fuel Fill      | 16   | 116-0043-03 | 1    | Guard-Muffler               |
| 2    | 115-7410    | 1    | Rear Guard ASM       | 17   | 68-3640     | 1    | Decal                       |
| 2:2  | 67-7320     | 1    | Decal                | 18   | 32144-10    | 4    | Screw-HWH                   |
| 3    | 116-0024-01 | 1    | Floorpan             | 19   | 116-0170    | 1    | LH Hydro Guard ASM          |
| 4    | 1-513658    | 2    | Bumper               | 19:2 | 116-0157    | 1    | Decal-Hydro Oil             |
| 5    | 116-0231    | 1    | ROPS ASM             | 20   | 116-0171    | 1    | RH Hydro Guard ASM          |
| 6    | 1-811010    | 2    | Plug                 | 20:2 | 116-0157    | 1    | Decal-Hydro Oil             |
| 7    |             | 2    | Caster Wheel ASM ●   | 21   | 109-9709    | 1    | Guard,Hydro Rear LH Trim    |
| 9    | 116-0180    | 1    | LH Bumper ASM        | 22   | 109-9058    | 1    | Guard-Hydro, Rear RH        |
| 9:2  | 103-2076    | 1    | Decal-Caution        | 33   | 1-803035    | 2    | Rivet-Pop                   |
| 10   | 116-0057-03 | 1    | Bumper-RH            | 34   | 116-2362    | 1    | Deflector-Air Flow          |
| 11   | 104-8301    | 11   | Nut-Flange, NI       | 69   | 107-3154    | 2    | Nut-Push                    |
| 12   | 3231-22     | 6    | Screw-CARR           |      |             |      |                             |
| 13   | 3231-21     | 4    | Screw-CARR           |      |             |      |                             |


● Not serviced separately

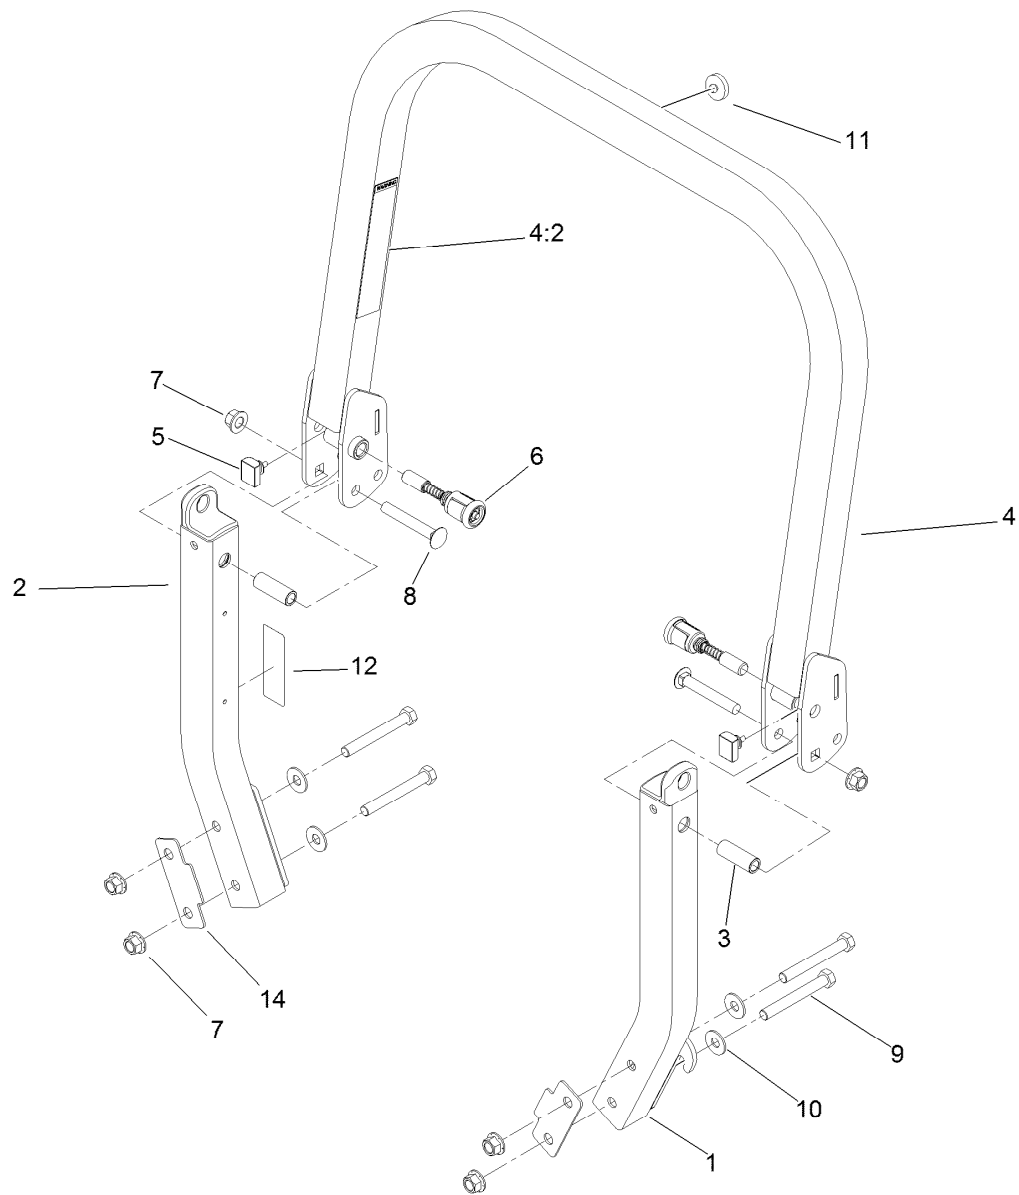

## Roll-Over Protection System Assembly No. 116-0231

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    |             | 1    | LH ROPS Leg ASM ●           |
| 2    |             | 1    | RH ROPS Leg ASM ●           |
| 3    | 109-6653    | 2    | Spacer                      |
| 4    |             | 1    | Upper ROPS ASM ●            |
| 4:2  | 107-2102    | 1    | Decal-Warning, Folding ROPS |
| 5    | 109-5337    | 2    | Bumper-ROPS                 |
| 6    | 116-0104    | 2    | Spring Pin ASM              |
| 7    | 99-5107     | 6    | Nut-Lock                    |
| 8    | 3233-10     | 2    | Screw-CARR                  |
| 9    | 325-17      | 4    | Screw-HH                    |
| 10   | 109-9505    | 4    | Washer-Spring               |
| 11   | 109-9233    | 1    | Bumper-Push-In, Rubber      |
| 12   | 116-0090    | 1    | Decal-Caution               |
| 14   | 116-0960    | 2    | Spacer                      |

● Not serviced separately

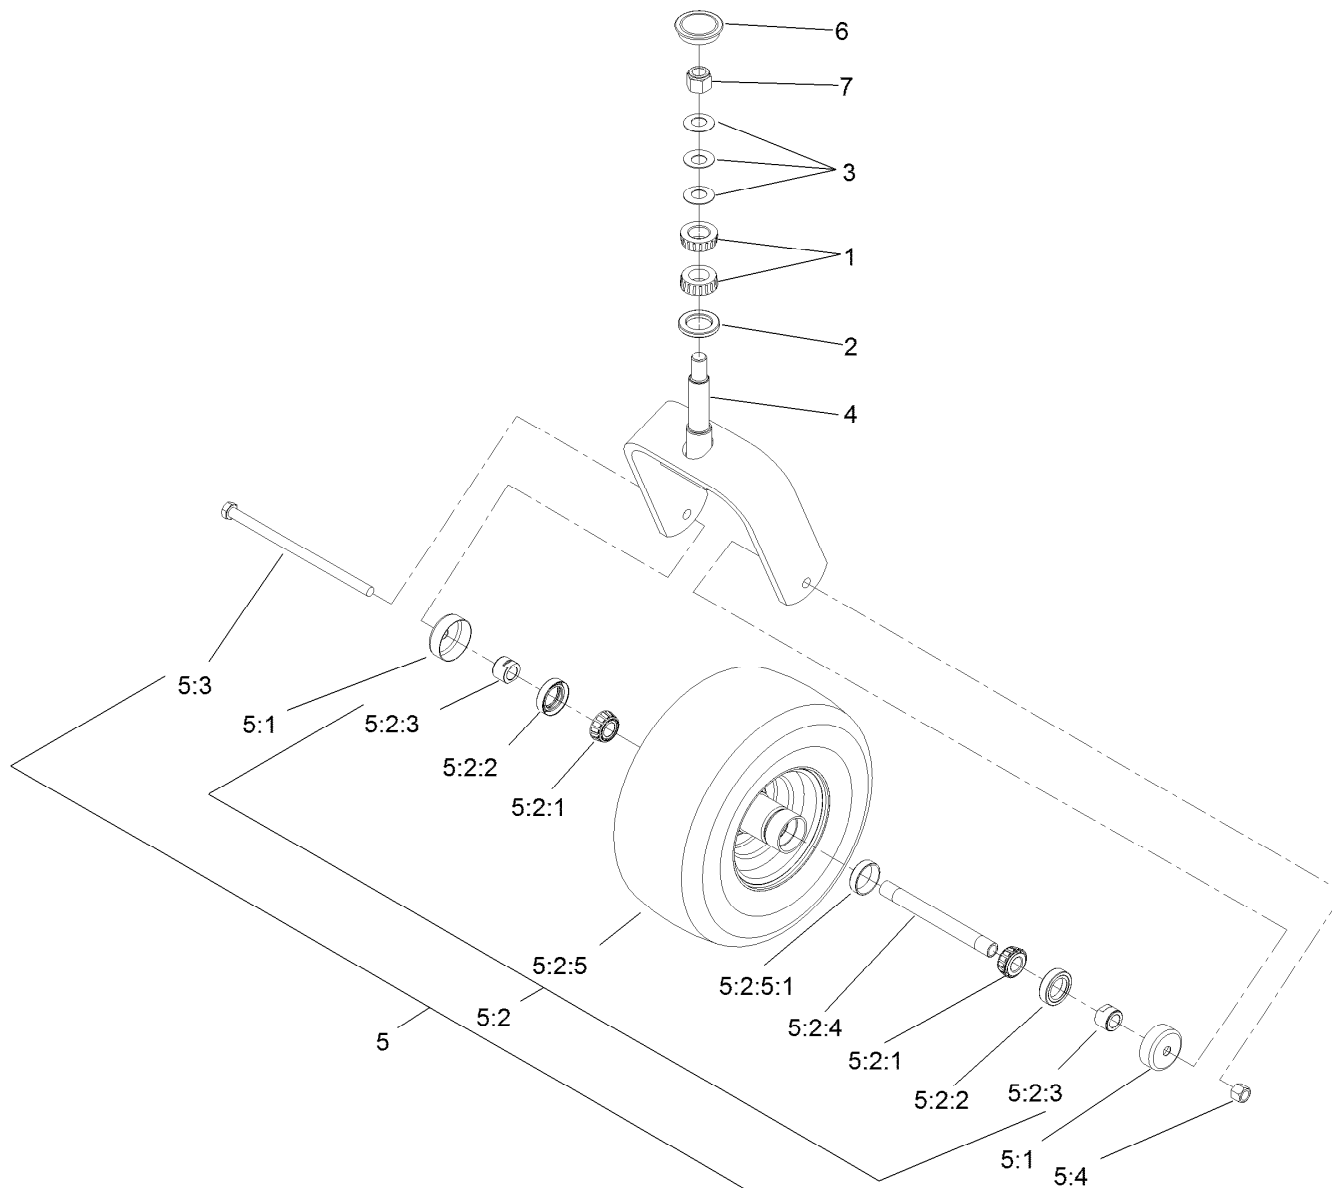


## Caster Wheel and Fork Assembly

| Ref.  | Part Number | Qty. | Description             |
|-------|-------------|------|-------------------------|
| 1     | 1-543509    | 2    | Bearing-Roller, Tapered |
| 2     | 1-543511    | 1    | Seal-Grease             |
| 3     | 1-633508    | 3    | Washer-Bellville        |
| 4     | 103-1474-01 | 1    | Caster-Fork             |
| 5     | 109-9127    | 1    | Wheel And Tire ASM      |
| 5:1   | 103-2768    | 2    | Guard-Seal              |
| 5:2   |             | 1    | Wheel And Tire ASM ●    |
| 5:2:1 | 1-633585    | 2    | Bearing-Cone, Taper     |
| 5:2:2 | 103-0063    | 2    | Seal-Caster             |

| Ref.    | Part Number | Qty. | Description        |
|---------|-------------|------|--------------------|
| 5:2:3   | 103-3051    | 2    | Spacer-Nut ■       |
| 5:2:4   | 103-5156    | 1    | Axle-Caster        |
| 5:2:5   | 109-9124    | 1    | Wheel And Tire ASM |
| 5:2:5:1 | 1-633584    | 1    | Bearing-Cup        |
| 5:3     | 325-39      | 1    | Screw-HH           |
| 5:4     | 3296-23     | 1    | Nut-Lock, NI       |
| 6       | 103-4882    | 1    | Cap-Grease         |
| 7       | 3296-51     | 1    | Nut-Lock, NI       |

● Not serviced separately


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

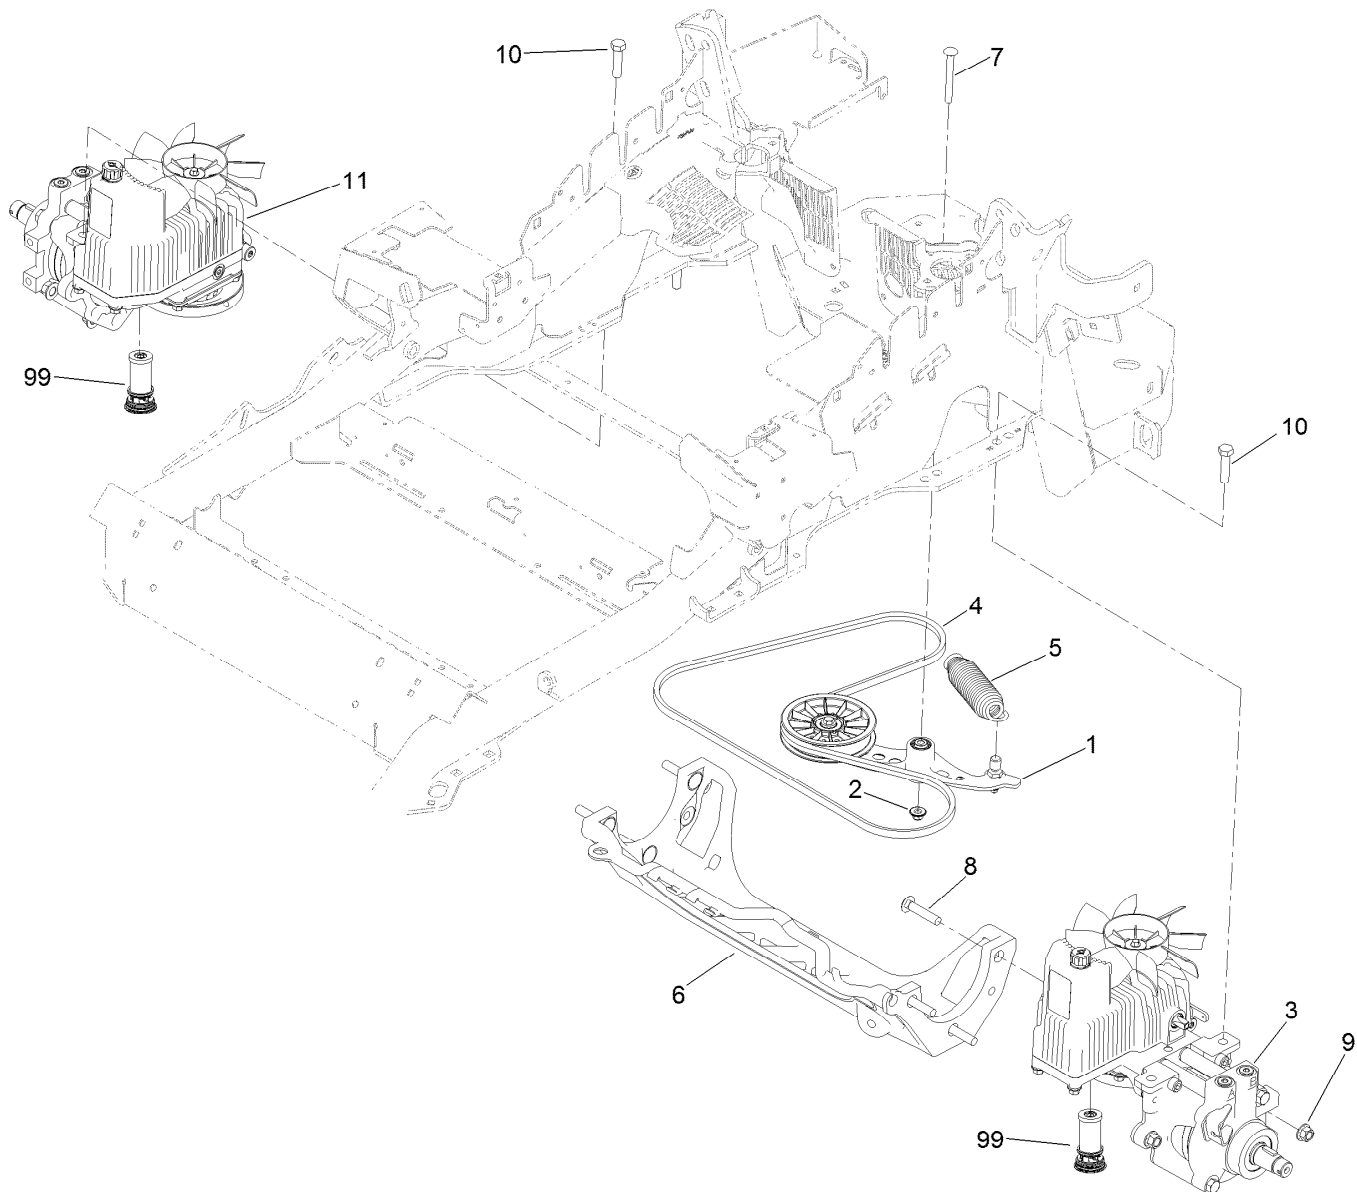

## Hydraulic Pump, Idler and Belt Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 116-1255    | 1    | Pump Idler ASM              |
| 2    | 109-6658    | 1    | Nut-Flange, NI              |
| 3    | 116-6409    | 1    | LH Hydro ASM (16Cc W/Shock) |
| 4    | 109-3388    | 1    | Belt                        |
| 5    | 116-0133    | 1    | Extension-Spring            |
| 6    | 109-9375    | 1    | Cradle-Hydro                |
| 7    | 116-1502    | 1    | Bolt-Shoulder, Carriage     |
| 8    | 3233-34     | 6    | Screw-CARR                  |
| 9    | 99-5107     | 6    | Nut-Lock                    |
| 10   | 325-8       | 4    | Screw-HH                    |
| 11   | 116-6410    | 1    | RH Hydro ASM (16Cc W/Shock) |
| 99   | 114-4713    | 1    | Hypr-Oil 500 (Quart) ●      |
| 99   | 114-4714    | 1    | Hypr-Oil 500 (Gallon) ●     |
| 99   | 114-4715    | 1    | Hypr-Oil 500-5 (5 Gallon) ● |
| 99   | 117-0390    | 1    | Filter-Hydro                |


● Not illustrated

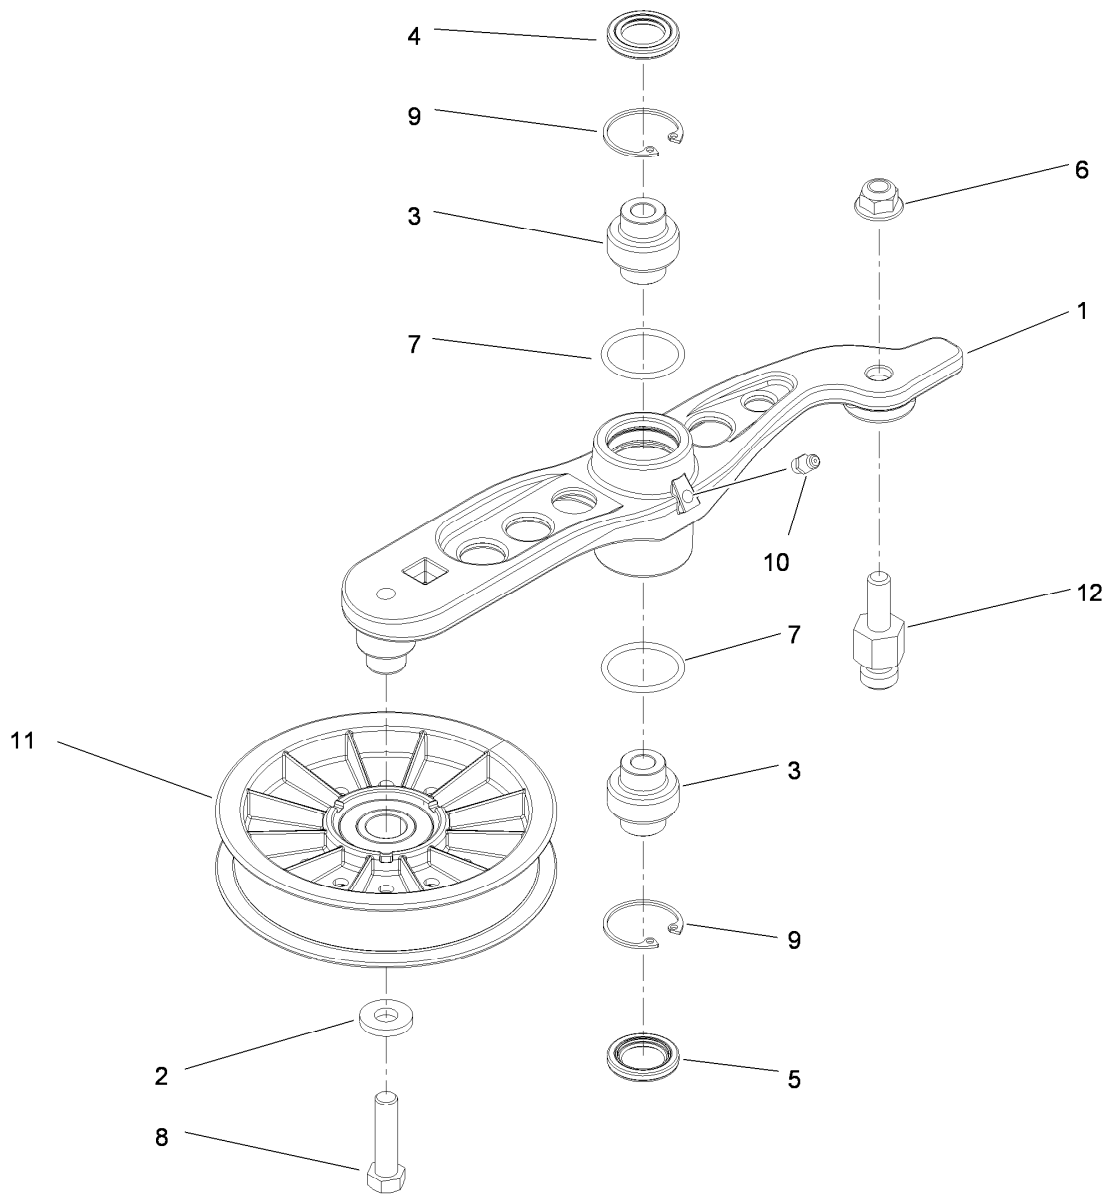

## Pump Idler Assembly No. 116-1255

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    |             | 1    | Arm-Pump, Idler ●  |
| 2    | 43-0940     | 1    | Spacer             |
| 3    | 103-3504    | 2    | Bearing-Spherical  |
| 4    | 103-3505    | 1    | Seal-Double Lip    |
| 5    | 103-3506    | 1    | Seal-Single Lip    |
| 6    | 109-6658    | 1    | Nut-Flange, NI     |
| 7    | 106-7159    | 2    | O-Ring             |
| 8    | 323-8       | 1    | Screw-HH           |
| 9    | 32120-10    | 2    | Ring-Snap          |
| 10   | 302-19      | 1    | Fitting-Grease     |
| 11   | 109-8076    | 1    | Pulley-Idler       |
| 12   | 116-3467    | 1    | Pin-Spring, Anchor |

 ● Not serviced separately

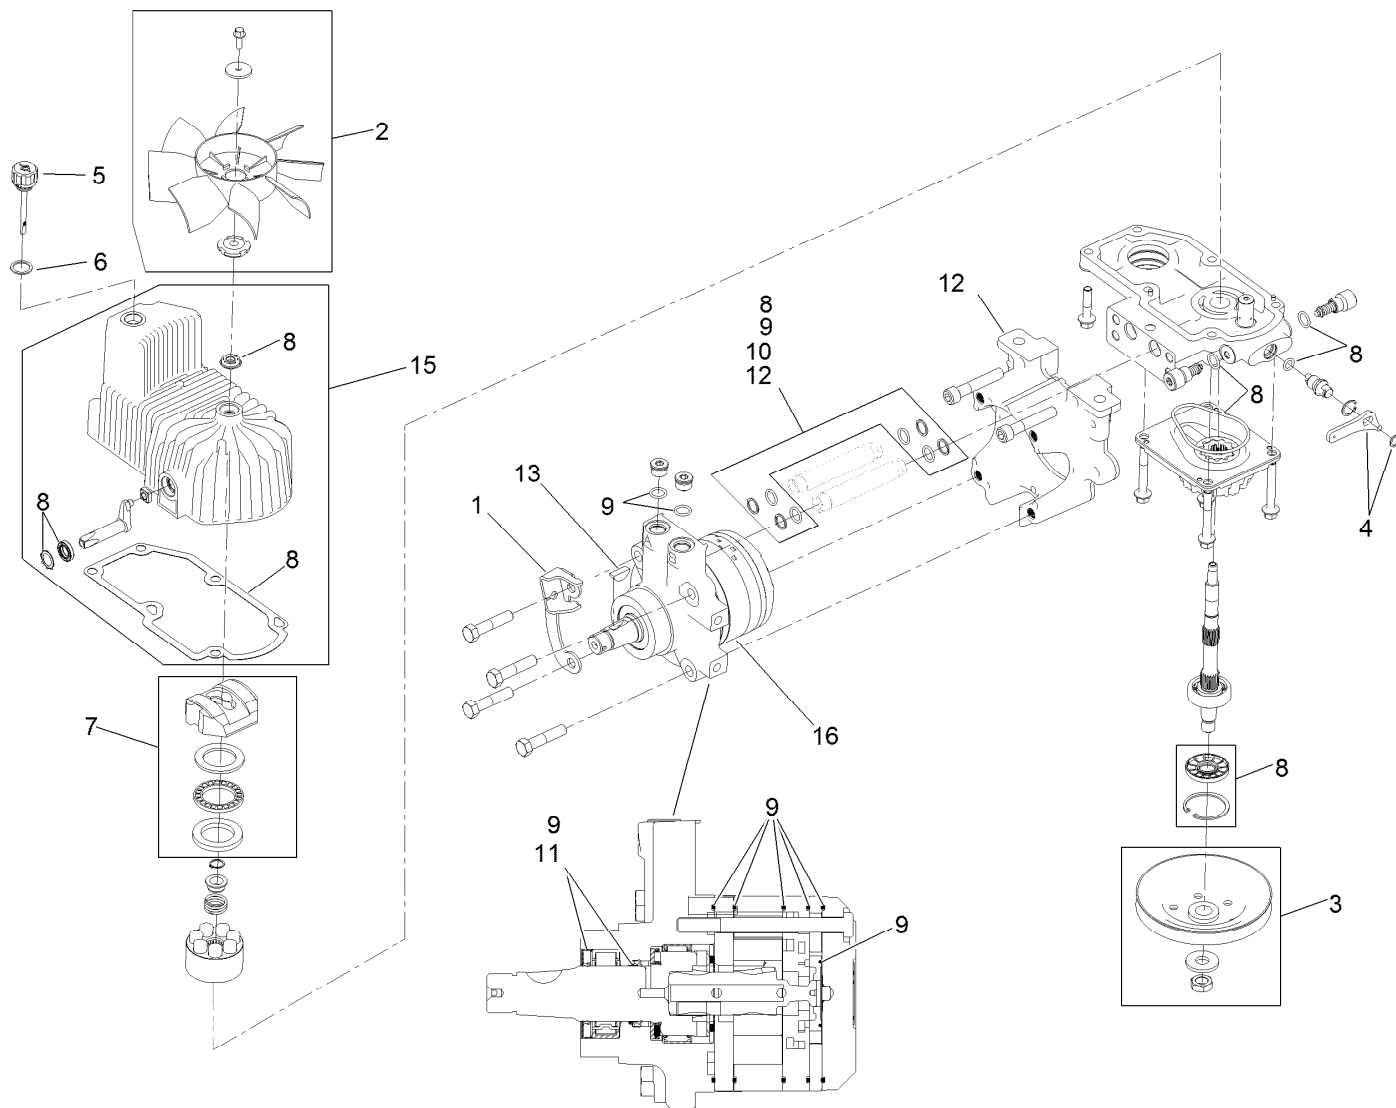


## LH Hydro Assembly No. 116-6409

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 116-6859    | 1    | Bracket-Anchor, Cable      |
| 2    | 116-0233    | 1    | Fan Kit                    |
| 3    | 116-0234    | 1    | Pulley Kit                 |
| 4    | 116-0235    | 1    | Handle-Bypass Valve, Hydro |
| 5    | 116-0236    | 1    | Dipstick-Hydro W/Gasket    |
| 6    | 116-0237    | 1    | Gasket-Dipstick, Hydro     |
| 7    | 116-1367    | 1    | Swash Block Kit            |
| 8    | 116-1368    | 1    | Pump Seal Kit              |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 9    | 116-1369    | 1    | Motor Seal Kit           |
| 10   | 116-1370    | 1    | Tube Seal Kit            |
| 11   | 116-1371    | 1    | Output Shaft Seal Kit    |
| 12   | 116-5469    | 1    | Nose Cup-Uht             |
| 13   | 3257-42     | 1    | Key-Woodruff             |
| 15   | 116-3287    | 1    | Housing-Hydro, LH        |
| 16   | 116-5467    | 1    | Motor-Hydraulic LH 280Cc |
| 99   | 116-1373    | 1    | Flow Test Kit ●          |

 ● Not illustrated

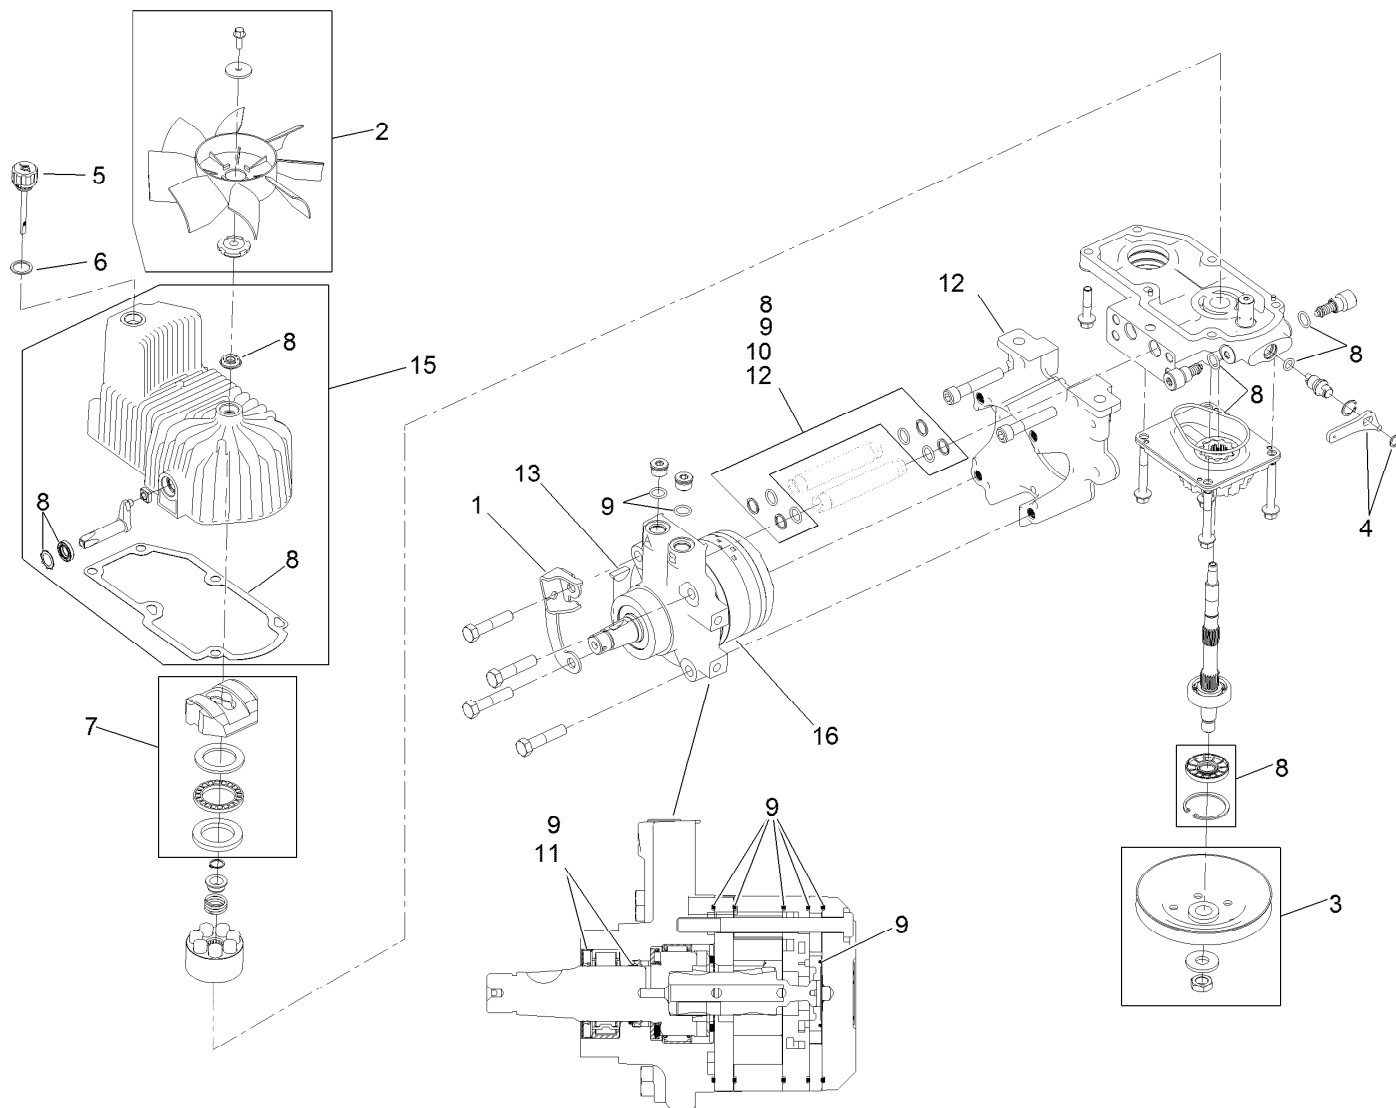


## RH Hydro Assembly No. 116-6410

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 116-6859    | 1    | Bracket-Anchor, Cable      |
| 2    | 116-0233    | 1    | Fan Kit                    |
| 3    | 116-0234    | 1    | Pulley Kit                 |
| 4    | 116-0235    | 1    | Handle-Bypass Valve, Hydro |
| 5    | 116-0236    | 1    | Dipstick-Hydro W/Gasket    |
| 6    | 116-0237    | 1    | Gasket-Dipstick, Hydro     |
| 7    | 116-1367    | 1    | Swash Block Kit            |
| 8    | 116-1368    | 1    | Pump Seal Kit              |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 9    | 116-1369    | 1    | Motor Seal Kit           |
| 10   | 116-1370    | 1    | Tube Seal Kit            |
| 11   | 116-1371    | 1    | Output Shaft Seal Kit    |
| 12   | 116-5469    | 1    | Nose Cup-Uht             |
| 13   | 3257-42     | 1    | Key-Woodruff             |
| 15   | 116-3288    | 1    | Housing-Hydro, RH        |
| 16   | 116-5468    | 1    | Motor-Hydraulic RH 280Cc |
| 99   | 116-1373    | 1    | Flow Test Kit ●          |

 
● Not illustrated

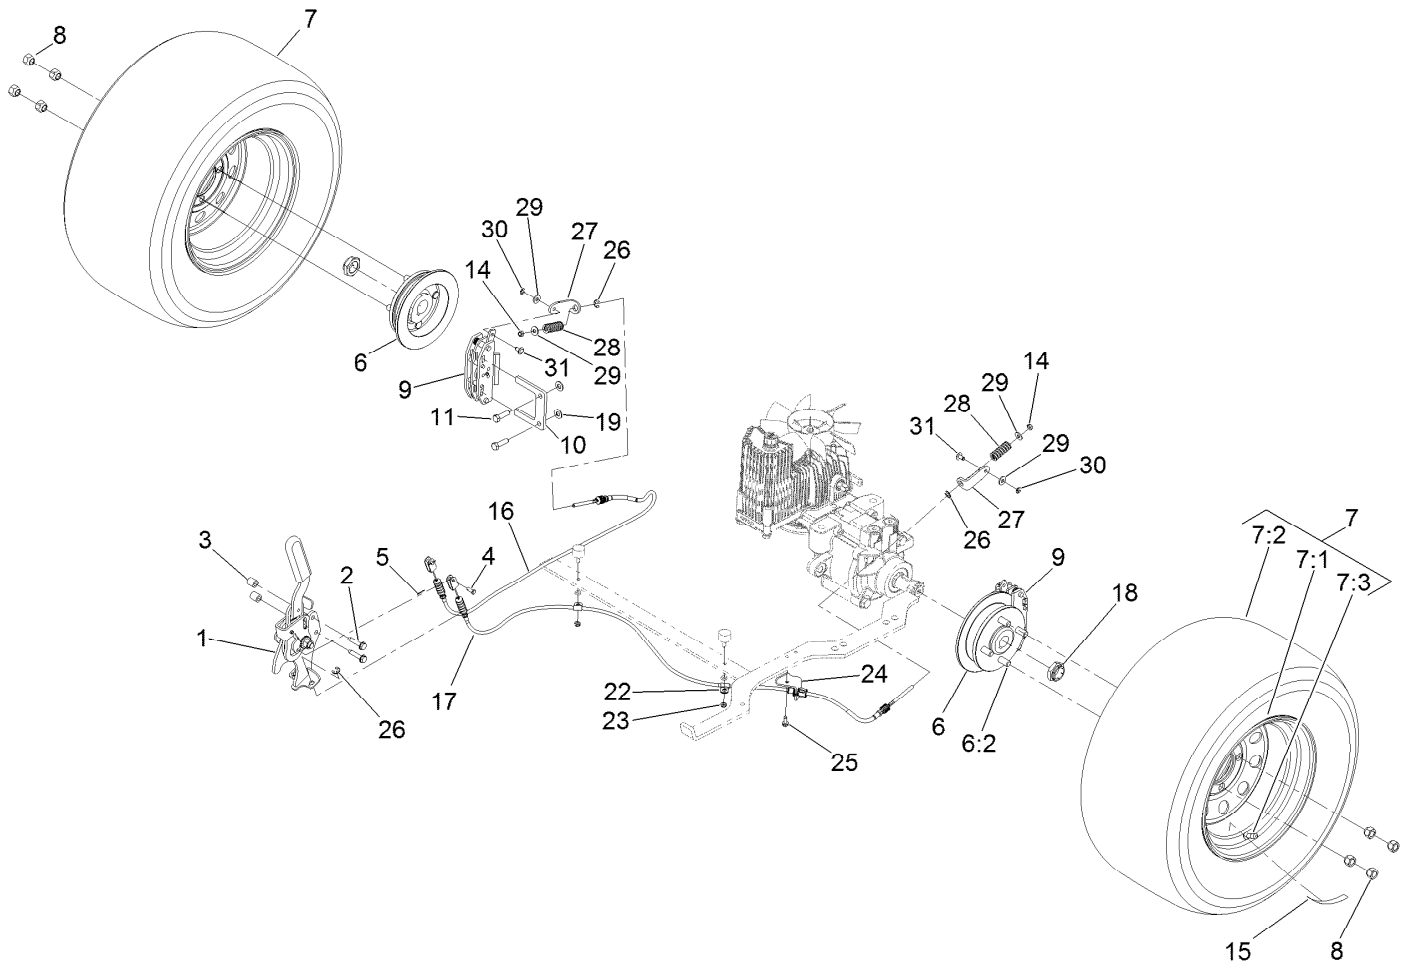

## Rear Wheel and Park Brake Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 116-6861    | 1    | Brake Handle ASM   |
| 2    | 32144-57    | 2    | Screw              |
| 3    | 82-6840     | 2    | Spacer             |
| 4    | 60-1730     | 2    | Pin-Clevis         |
| 5    | 3272-1      | 2    | Pin-Cotter         |
| 6    | 116-1746    | 2    | Wheel Hub ASM      |
| 6:2  | 116-1696    | 4    | Stud-Wheel         |
| 7    | 109-3158    | 2    | Wheel And Tire ASM |
| 7:1  | 109-3156    | 1    | Rim ASM            |
| 7:2  | 103-2744    | 1    | Tire               |
| 7:3  | 232-27      | 1    | Stem-Valve         |
| 8    | 242-50      | 8    | Nut-Lug            |
| 9    | 109-2889    | 2    | Caliper-Brake      |
| 10   | 109-0958    | 2    | Plate-Mount, Brake |
| 11   | 92-5727     | 4    | Screw-Lock, Patch  |
| 14   | 3296-13     | 2    | Nut-Lock, NI       |


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 15   | 116-2643    | 2    | Decal-Wheel Nut Torque |
| 16   | 116-6364    | 1    | Cable-Park Brake, RH   |
| 17   | 116-6365    | 1    | Cable-Park Brake, LH   |
| 18   | 116-1399    | 2    | Locknut                |
| 19   | 3256-24     | 4    | Washer-Flat            |
| 22   | 88-7970     | 2    | Clip                   |
| 23   | 3296-56     | 2    | Nut-Lock, NI           |
| 24   | 116-6397    | 1    | Bracket, Cable         |
| 25   | 32144-10    | 1    | Screw-HWH              |
| 26   | 32120-18    | 4    | E-Ring                 |
| 27   | 116-6182    | 2    | Bracket-Brake-L        |
| 28   | 116-6347    | 2    | Spring-Die             |
| 29   | 3256-22     | 4    | Washer-Flat            |
| 30   | 32151-86    | 2    | E-Ring                 |
| 31   | 116-6348    | 2    | Pin-Brake              |

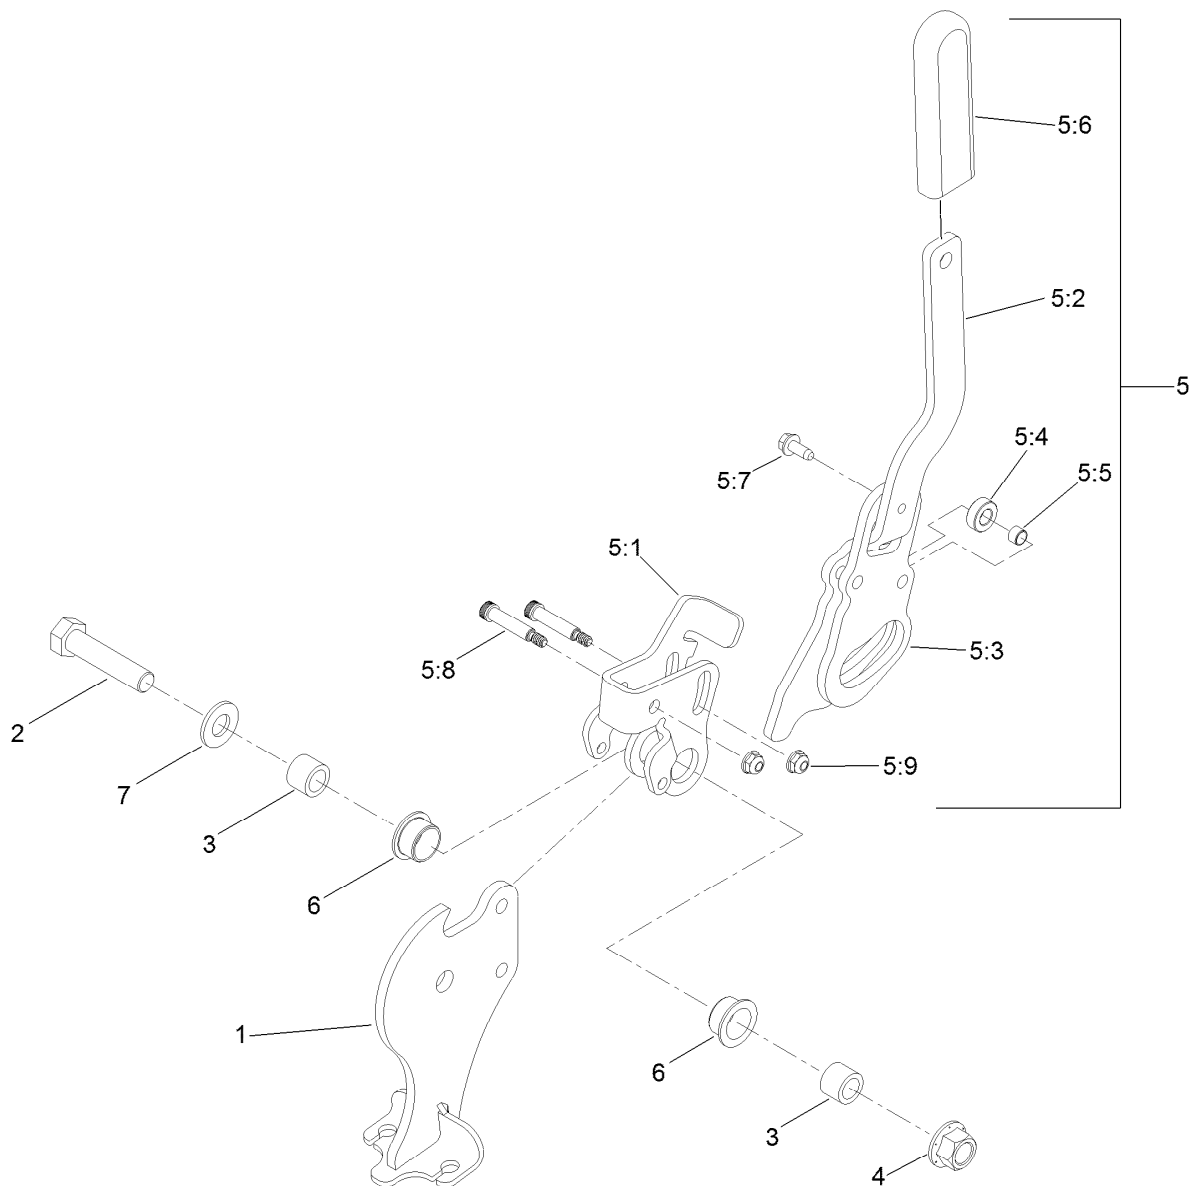

## Parking Brake Handle Assembly No. 116-6861


| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 116-6855    | 1    | Brake Pivot ASM |
| 2    | 325-9       | 1    | Screw-HH        |
| 3    | 116-5384    | 2    | Spacer          |
| 4    | 99-5107     | 1    | Nut-Lock        |
| 5    | 116-6860    | 1    | Handle ASM      |
| 5:1  | 116-6856    | 1    | Bellcrank-Brake |
| 5:2  | 116-6857    | 1    | Handle-Brake    |
| 5:3  | 116-6858    | 1    | Plate-Handle    |

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 5:4  | 116-6846    | 1    | Roller-Brake   |
| 5:5  | 116-6852    | 1    | Bearing-Sleeve |
| 5:6  | 1-633268    | 1    | Grip-Lever     |
| 5:7  | 32144-10    | 1    | Screw-HWH      |
| 5:8  | 116-6876    | 2    | Screw-Shoulder |
| 5:9  | 104-7201    | 2    | Nut-HF         |
| 6    | 109-8054    | 2    | Bushing-Flange |
| 7    | 3256-26     | 1    | Washer-Flat    |

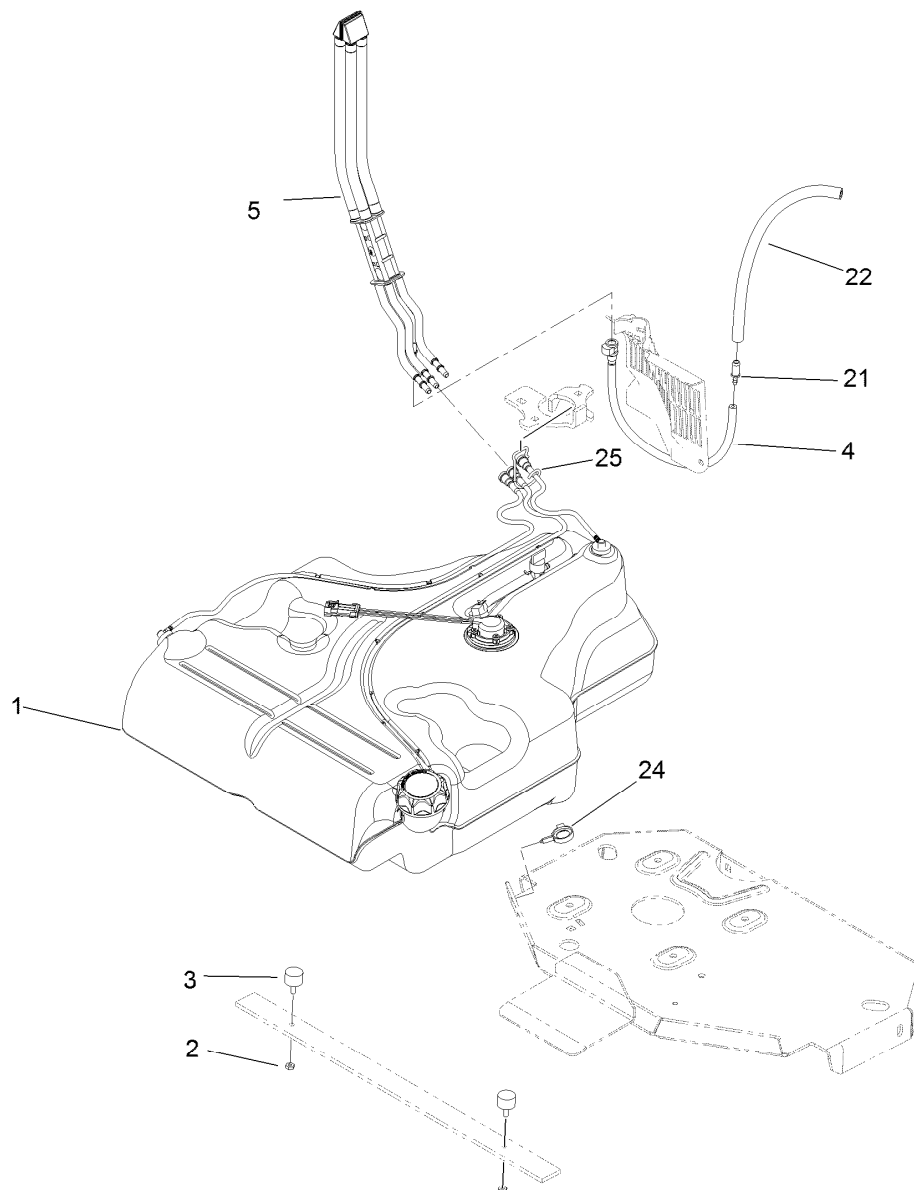



## Fuel Tank Mounting Assembly
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 116-3979    | 1    | Fuel Tank ASM           |
| 2    | 3218-1      | 2    | Nut-Jam                 |
| 3    | 116-6380    | 2    | Bumper, Rubber, W/ Stud |
| 4    | 116-3977    | 1    | Hose ASM                |
| 5    | 109-9491    | 1    | Fuel Manifold Vent ASM  |
| 21   | 98-2952     | 1    | Fitting-Straight        |
| 22   | 116-5087    | 1    | Hose-Fuel               |
| 24   | 105-1853    | 1    | Clamp-Hose              |
| 25   | 116-6005    | 1    | Retainer-Vapor Line     |

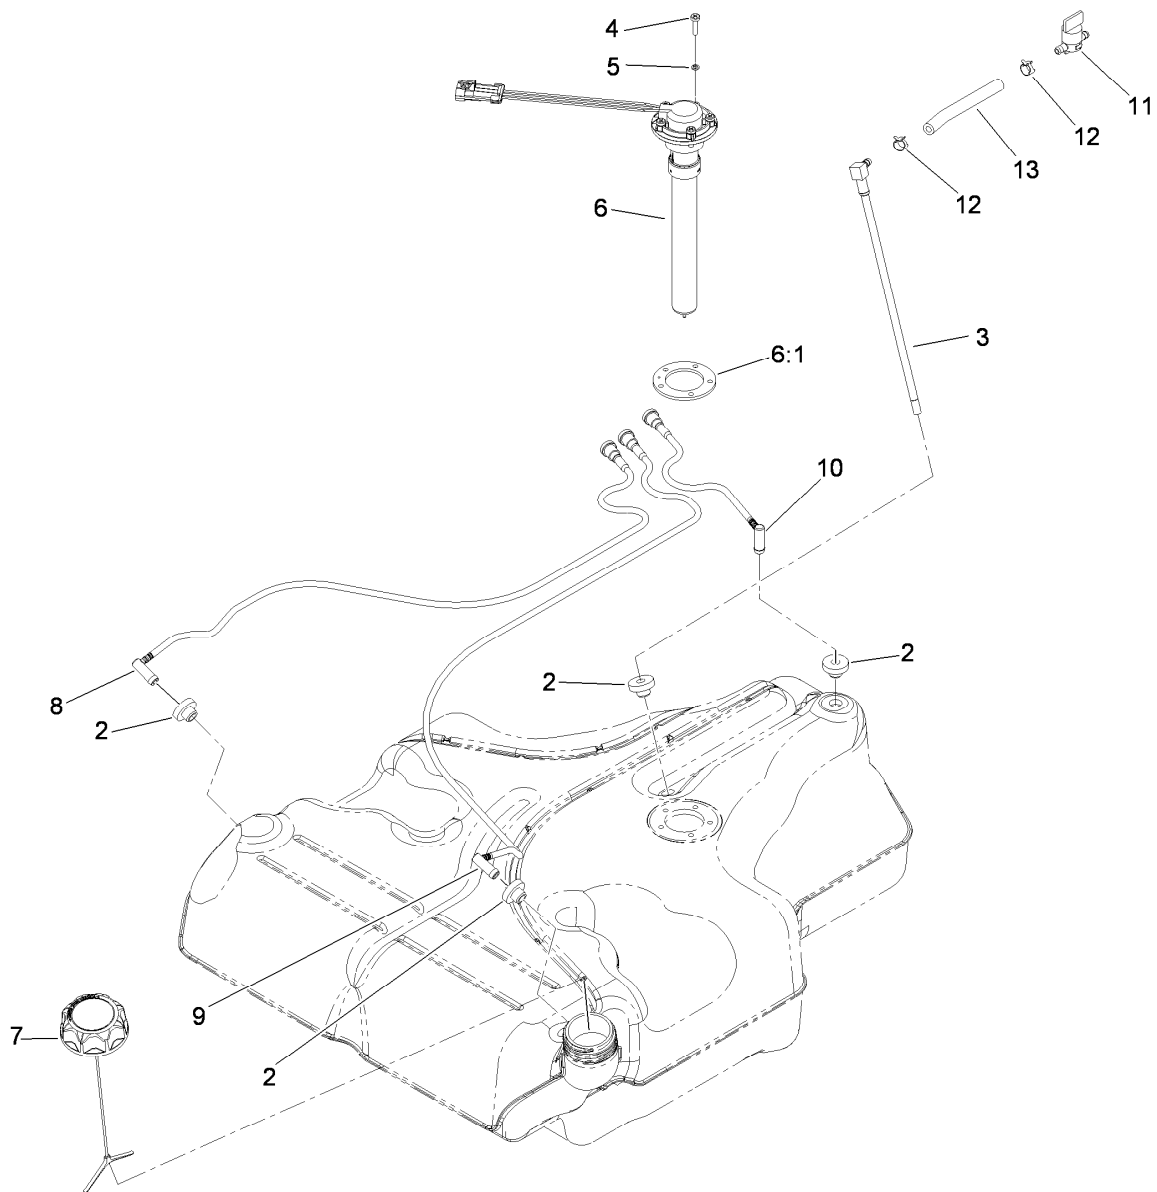

## Fuel Tank Assembly No. 116-3979

  
| Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 2    | 46-6560     | 4    | Bushing                           |
| 3    | 116-2459    | 1    | Fuel Line Kit (With Grommet)      |
| 4    | 9107944     | 5    | Screw-Pan                         |
| 5    | 3253-17     | 5    | Washer-Lock                       |
| 6    | 116-0003    | 1    | Sender-Fuel Level                 |
| 6:1  | 109-9620    | 1    | Gasket-Sender, Fuel               |
| 7    | 116-1704    | 1    | Cap-Fuel, Ratcheting              |
| 8    | 116-2460    | 1    | RH Vent Line Kit (With Grommet)   |
| 9    | 116-2461    | 1    | LH Vent Line Kit (With Grommet)   |
| 10   | 116-2462    | 1    | Rear Vent Line Kit (With Grommet) |
| 11   | 1-603770    | 1    | Valve-Fuel                        |
| 12   | 2412-98     | 2    | Clamp-Hose                        |
| 13   | 109-0650    | 1    | Hose-Fuel                         |

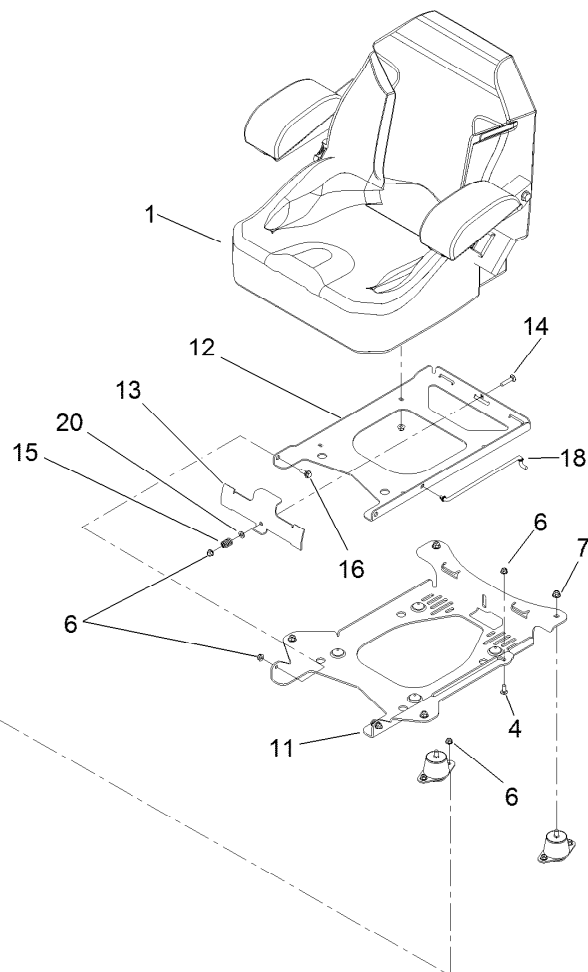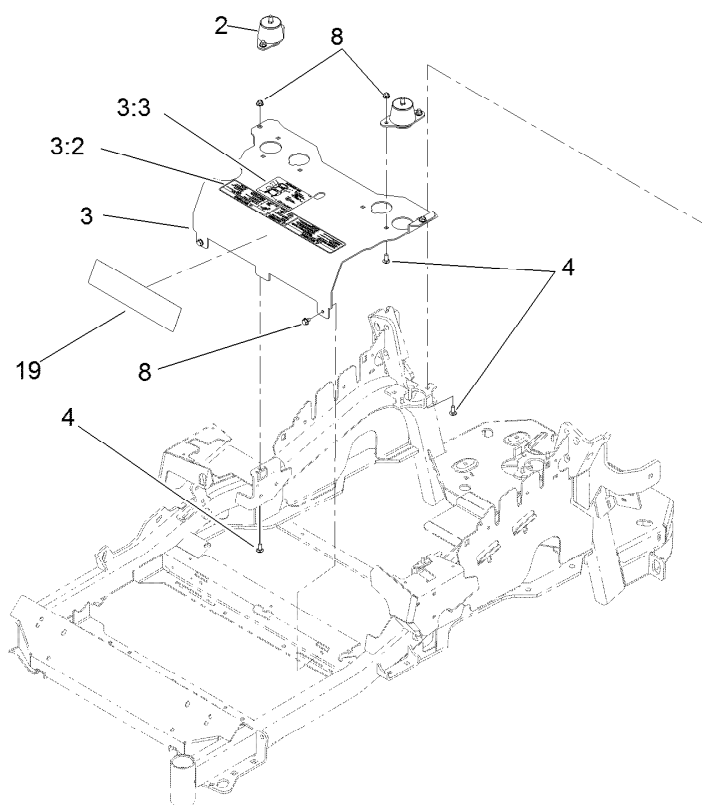

## Seat Mounting Assembly


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 116-0035    | 1    | Seat-Standard     |
| 2    | 109-9034    | 4    | Isolator-Seat     |
| 3    | 116-2323    | 1    | Mount-Seat        |
| 3:2  | 109-7069    | 1    | Decal-Console     |
| 3:3  | 116-0211    | 1    | Decal-Service Aid |
| 4    | 3230-23     | 11   | Screw-CARR        |
| 6    | 104-8300    | 18   | Nut-Flange, NI    |
| 7    | 104-8301    | 4    | Nut-Flange, NI    |
| 8    | 9266934     | 2    | Screw             |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 11   | 116-3860-03 | 1    | Plate-Tilt, Seat Support |
| 12   | 116-3859-03 | 1    | Plate-Seat, Frame        |
| 13   | 109-9881-03 | 1    | Plate-Latch, Seat        |
| 14   | 3230-4      | 1    | Screw-CARR               |
| 15   | 107-3017    | 1    | Spring-Compression       |
| 16   | 116-1297    | 2    | Screw-Shoulder           |
| 18   | 116-0070    | 1    | Rod-Prop                 |
| 19   | 120-5893    | 1    | Decal                    |
| 20   | 3256-23     | 1    | Washer-Flat              |

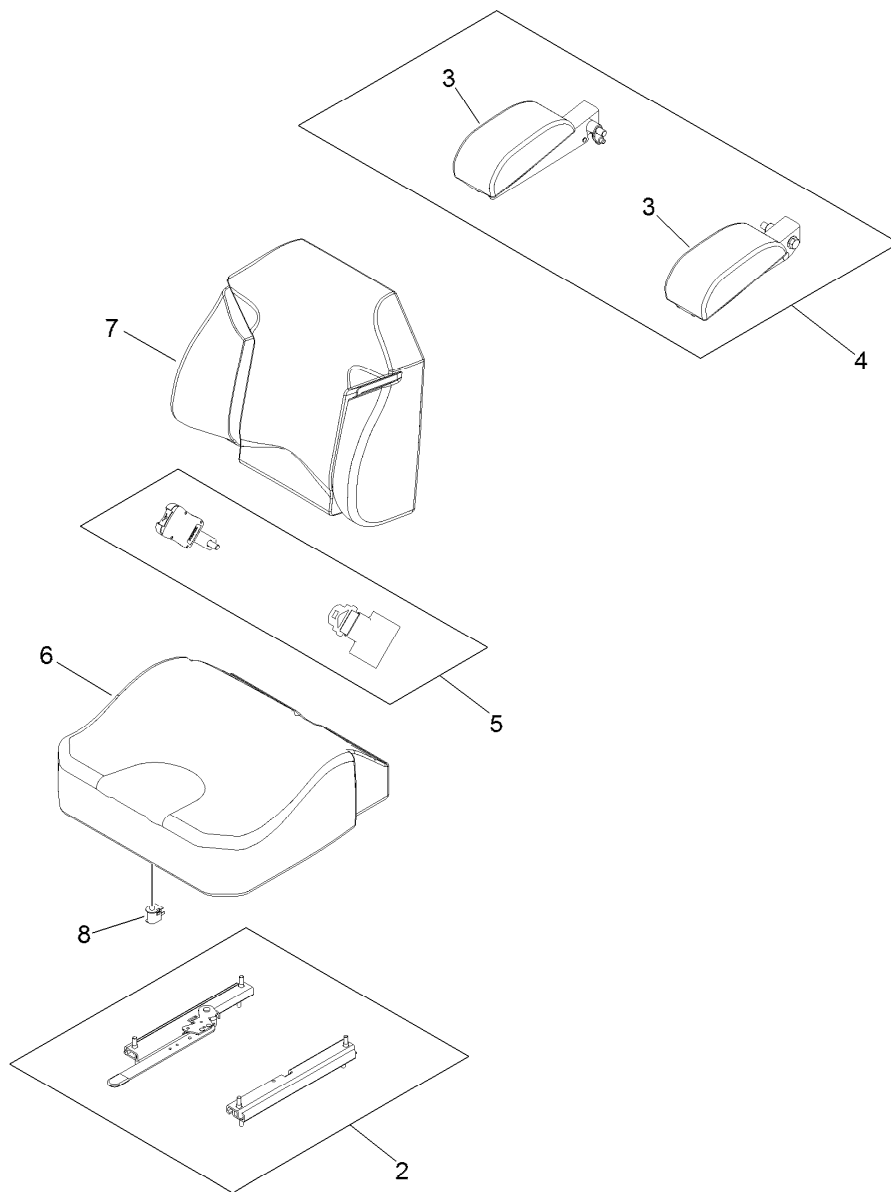

## Seat Assembly No. 116-0035
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 109-9801           | 1           | Seat Track Set     |
| 3           | 109-9802           | 1           | Arm Rest Pad Set   |
| 4           | 109-9803           | 1           | Arm Rest Set       |
| 5           | 109-9805           | 1           | Seat Belt Kit      |
| 6           | 109-9806           | 1           | Cover-Cushion      |
| 7           | 109-9808           | 1           | Cover-Back         |
| 8           | 82-2190            | 1           | Switch-Bail        |

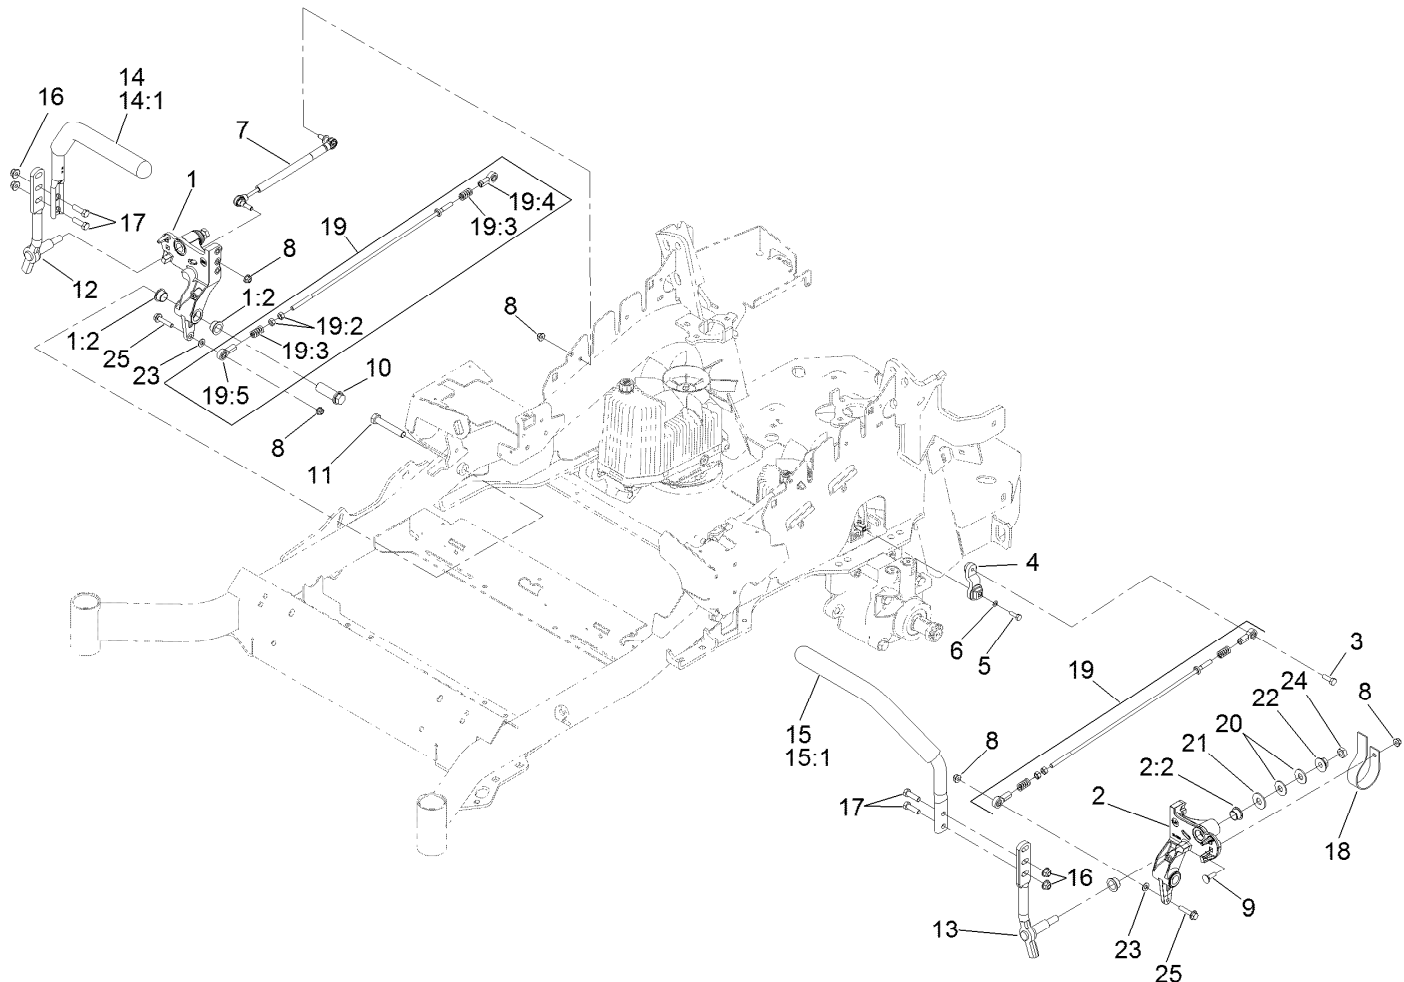


## Motion Control Assembly

| Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 1    | 116-0880    | 1    | RH Motion Control And Bushing ASM |
| 1:2  | 109-8054    | 4    | Bushing-Flange                    |
| 2    | 116-0881    | 1    | LH Motion Control And Bushing ASM |
| 2:2  | 109-8054    | 4    | Bushing-Flange                    |
| 3    | 116-0648    | 2    | Screw-HH, Thread Locking          |
| 4    | 109-4581    | 2    | Arm-Control, Pump                 |
| 5    | 9080046     | 2    | Screw-HH ●                        |
| 6    | 1-303435    | 2    | Washer-Spring                     |
| 7    | 116-0027    | 2    | Damper-Control, Motion            |
| 8    | 104-8300    | 8    | Nut-Flange, NI                    |
| 9    | 3230-2      | 2    | Bolt-CARR                         |
| 10   | 109-5891    | 2    | Hub-Threaded                      |
| 11   | 325-12      | 2    | Screw-HH                          |
| 12   | 116-0039    | 1    | Lever-Control Motion, RH          |
| 13   | 116-0040    | 1    | Lever-Control Motion, LH          |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 14   | 109-6591    | 1    | RH Steering Handle ASM |
| 14:1 | 106-9987    | 1    | Grip-Control, Motion   |
| 15   | 109-6592    | 1    | LH Steering Handle ASM |
| 15:1 | 106-9987    | 1    | Grip-Control, Motion   |
| 16   | 104-8301    | 4    | Nut-Flange, NI         |
| 17   | 323-7       | 4    | Screw-HH               |
| 18   | 109-5575    | 2    | Spring-Leaf            |
| 19   | 109-8106    | 2    | Front Pump Linkage ASM |
| 19:2 | 3219-2      | 2    | Nut-Hex                |
| 19:3 | 1-323245    | 2    | Spring-Compression     |
| 19:4 | 1-633152    | 1    | Balljoint-LH           |
| 19:5 | 1-543017    | 1    | Balljoint-RH           |
| 20   | 109-9505    | 4    | Washer-Spring          |
| 21   | 3256-6      | 2    | Washer-Flat            |
| 22   | 32128-56    | 2    | Nut-HF                 |
| 23   | 3256-23     | 2    | Washer-Flat            |
| 24   | 3218-5      | 2    | Nut-Jam                |
| 25   | 115-1794    | 2    | Screw-HHF              |

 
● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

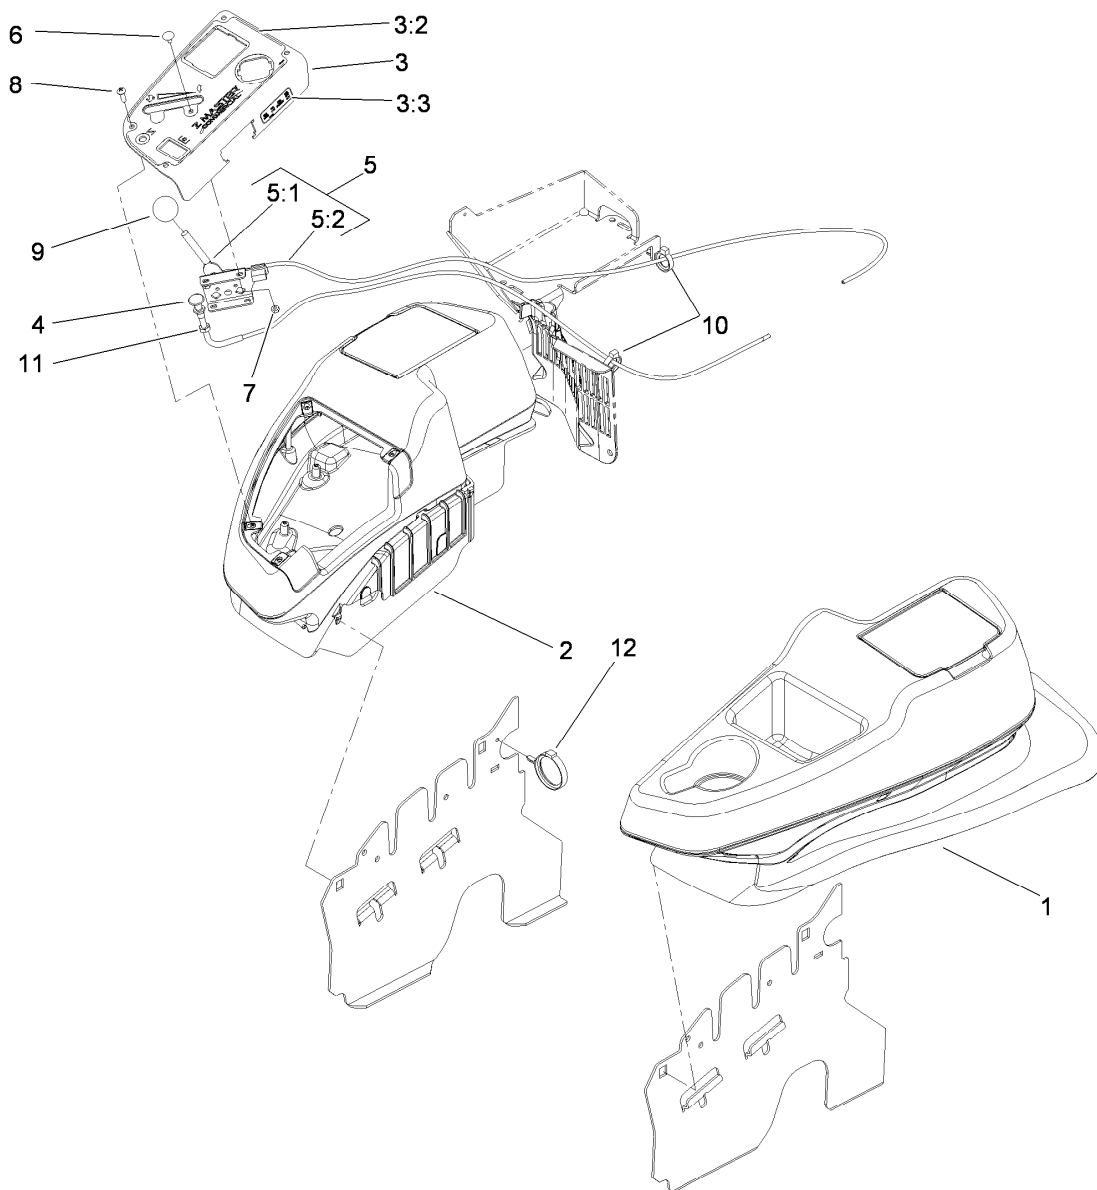

## Fender, Console and Control Assembly


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 115-7401    | 1    | LH Wide Fender/Console ASM |
| 2    | 115-7400    | 1    | RH Wide Fender/Console ASM |
| 3    | 114-9836    | 1    | Control Panel ASM          |
| 3:2  | 120-5897    | 1    | Decal-Control Panel        |
| 3:3  | 114-4466    | 1    | Decal-Fuses                |
| 4    | 115-2756    | 1    | Choke Control ASM          |
| 5    | 110-5727    | 1    | Throttle Control ASM       |
 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 5:1  | 112-2334    | 1    | Lever-Throttle |
| 5:2  | 110-5728    | 1    | Cable-Throttle |
| 6    | 1-807513    | 2    | Bolt-CARR      |
| 7    | 3296-2      | 2    | Nut-Lock, NI   |
| 8    | 32105-15    | 4    | Screw          |
| 9    | 1-603175    | 1    | Knob-Ball      |
| 10   | 105-1853    | 1    | Clamp-Hose     |
| 11   | 3220-3      | 1    | Nut-HJ         |
| 12   | 117-7817    | 1    | Clamp-Harness  |

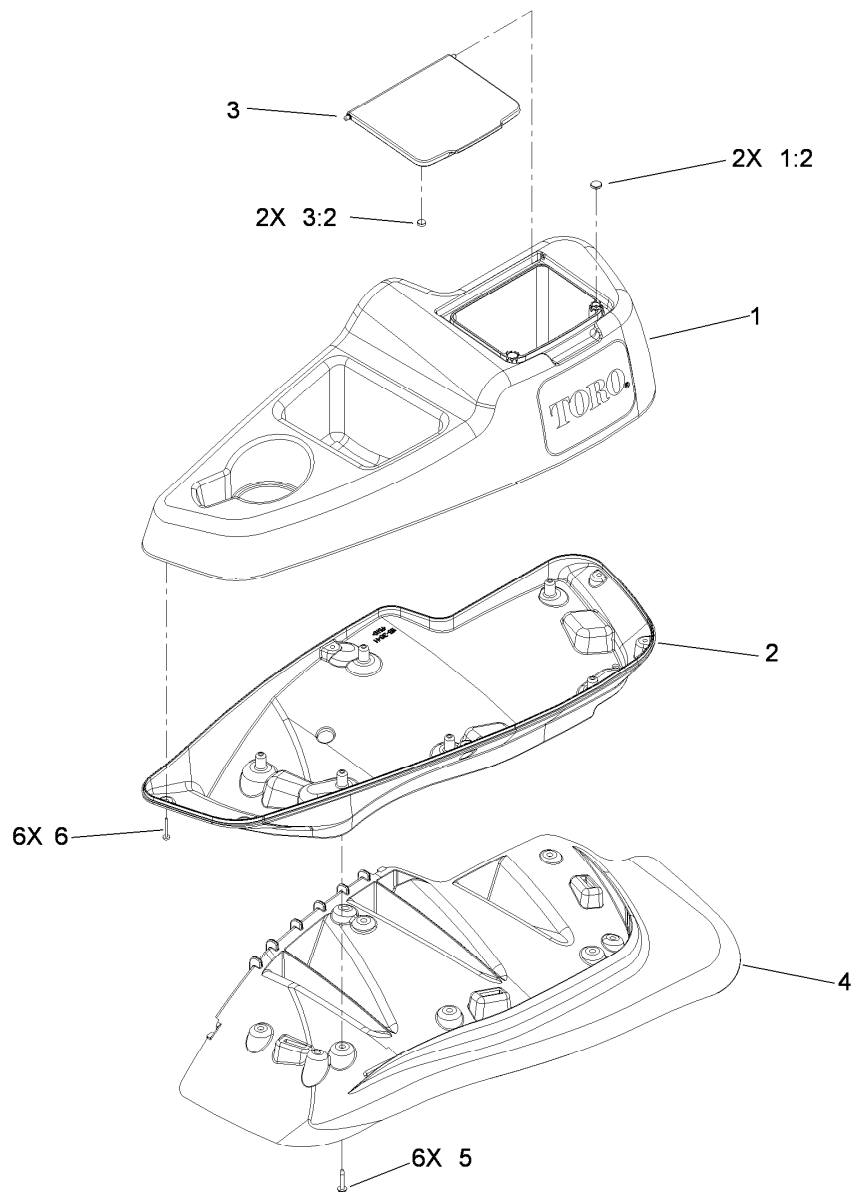


## LH Console Assembly No. 115-7401
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 114-1539    | 1    | LH Wide Console Top ASM |
| 1:2  | 117-0883    | 2    | Puck                    |
| 2    | 115-3641    | 1    | Console-Lower, LH Wide  |
| 3    | 114-1537    | 1    | Wide Lid ASM            |
| 3:2  | 114-5896    | 2    | Magnet                  |
| 4    | 109-9085    | 1    | Fender-Wide, LH         |
| 5    | 32144-89    | 6    | Screw-Thread Forming    |
| 6    | 117-0347    | 6    | Screw-Fillister Head    |

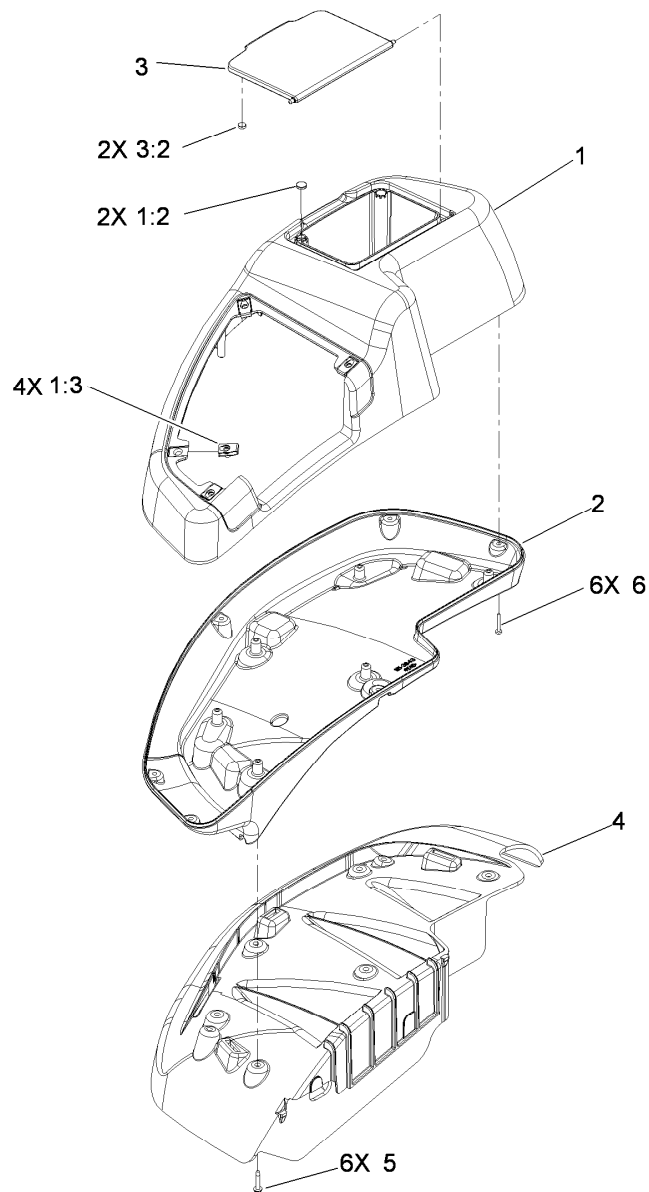

## RH Console Assembly No. 115-7400
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 114-1538    | 1    | RH Wide Top Console ASM |
| 1:2  | 117-0883    | 2    | Puck                    |
| 1:3  | 107069      | 4    | Clip                    |
| 2    | 115-3643    | 1    | Console-Lower, RH Wide  |
| 3    | 114-1537    | 1    | Wide Lid ASM            |
| 3:2  | 114-5896    | 2    | Magnet                  |
| 4    | 109-9083    | 1    | Fender-Wide, RH         |
| 5    | 32144-89    | 6    | Screw-Thread Forming    |
| 6    | 117-0347    | 6    | Screw-Fillister Head    |

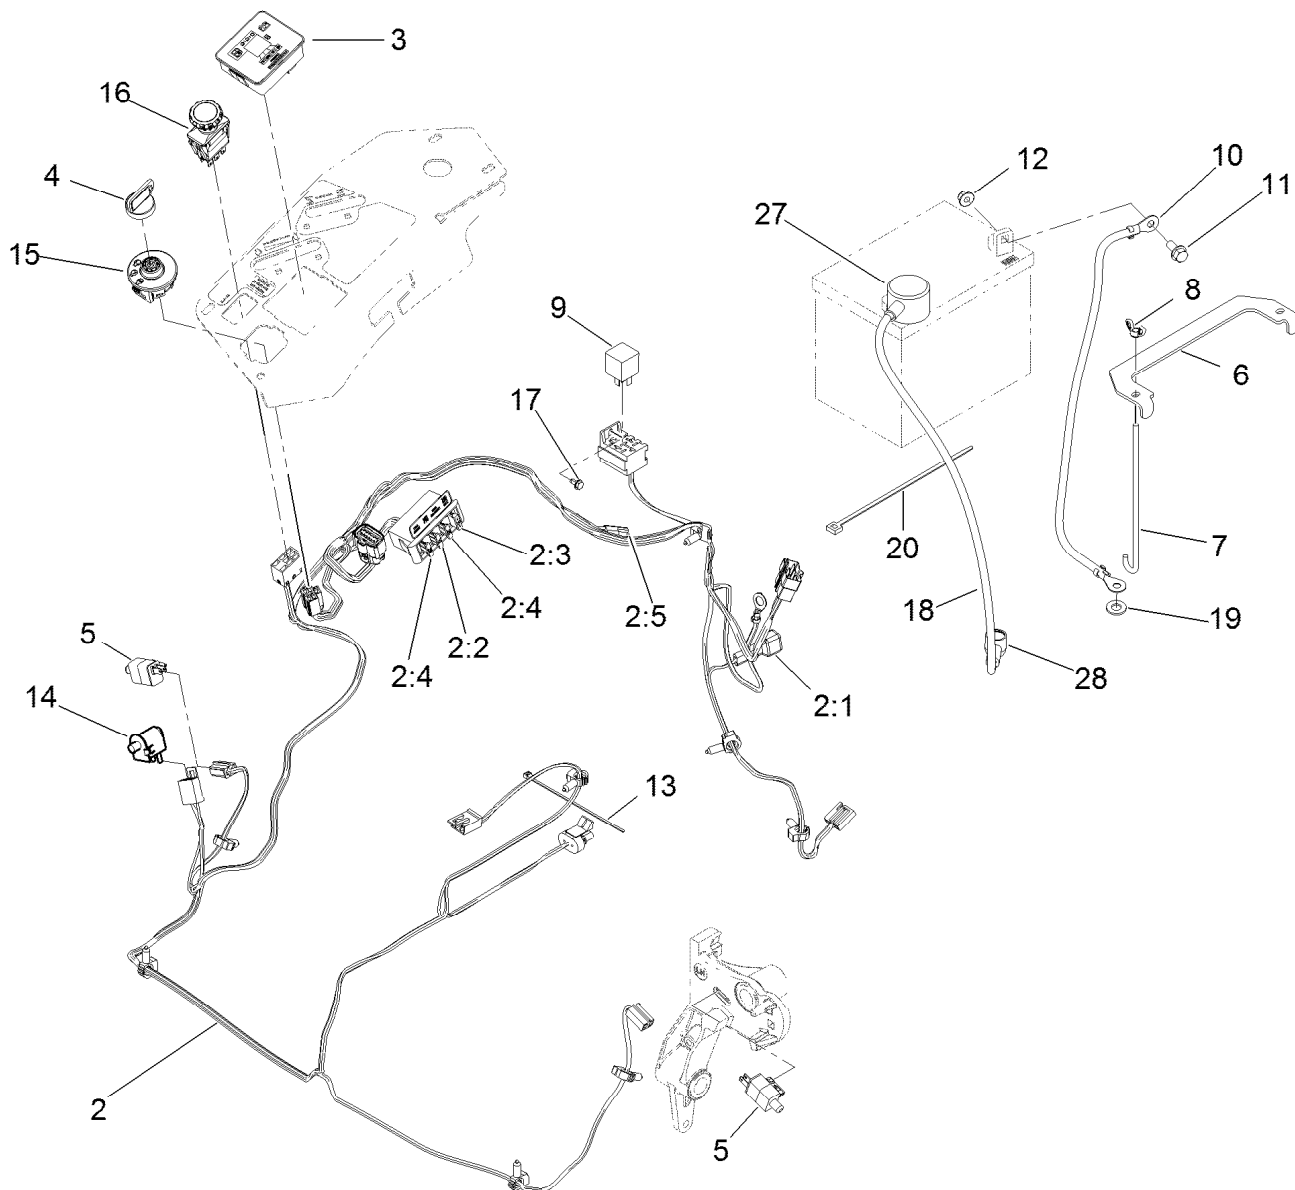


## Electrical Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 2    | 116-6009    | 1    | Harness-Wire, Main ●    |
| 2:1  | 103-3895    | 1    | Diode-Tvs               |
| 2:2  | 218-578     | 1    | Fuse-Blade, 10 Amp      |
| 2:3  | 109355      | 1    | Fuse-Blade, 15 Amp      |
| 2:4  | 109102      | 2    | Fuse-Blade, 25 Amp      |
| 2:5  | 116-0053    | 1    | Cap-Plug                |
| 3    | 117-3882    | 1    | Fuel/Hour Meter ASM     |
| 4    | 63-8360     | 1    | Key-Ignition            |
| 5    | 110-6765    | 2    | Switch-Single Pole No   |
| 6    | 116-0042-03 | 1    | Strap-Tie Down, Battery |
| 7    | 1-633651    | 2    | Bolt-Holddown           |
| 8    | 1-543792    | 2    | Wingnut                 |
| 9    | 1-643275    | 1    | Relay                   |

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 10   | 114-1218    | 1    | Cable-Battery, Negative |
| 11   | 3234-5      | 2    | Screw-HHF               |
| 12   | 104-8300    | 2    | Nut-Flange, NI          |
| 13   | 1-303287    | 3    | Tie-Cable               |
| 14   | 82-2190     | 1    | Switch-Bail             |
| 15   | 117-2221    | 1    | Switch-Ignition         |
| 16   | 116-0124    | 1    | Switch-PTO, 10A         |
| 17   | 104-2065    | 1    | Screw-HWH               |
| 18   | 115-3864    | 1    | Cable-Battery, Positive |
| 19   | 3256-24     | 1    | Washer-Flat             |
| 20   | 1-303335    | 1    | Tie-Plastic             |
| 27   | 109-2407    | 1    | Insulator-Battery       |
| 28   | 1-543393    | 1    | Insulator-Solenoid      |


● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

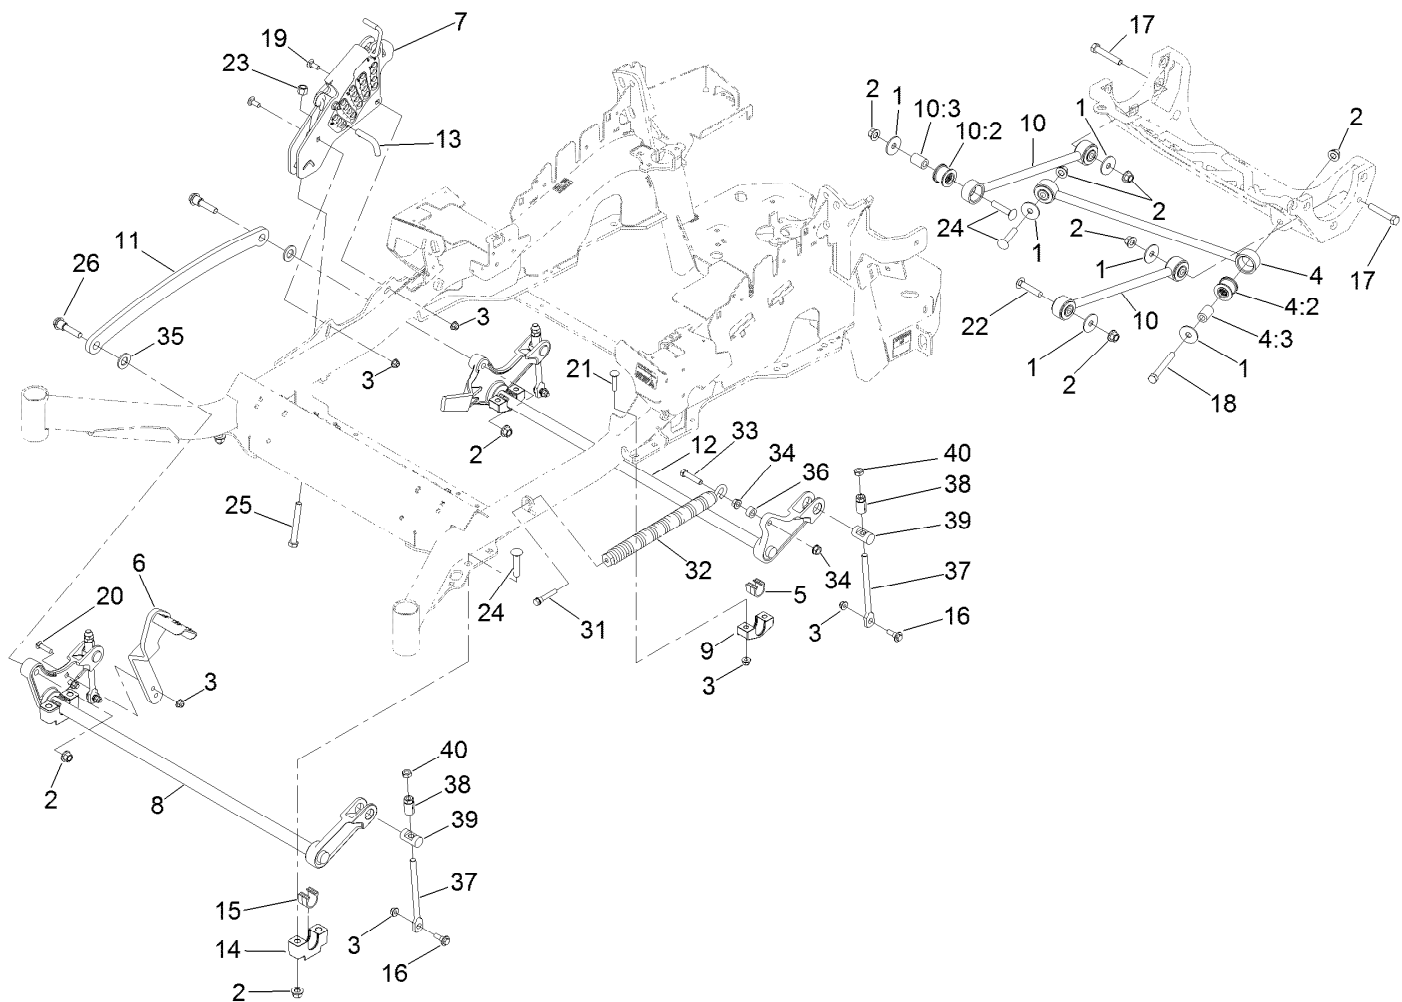

## Deck Lift Assembly

| Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 1    | 86-1990     | 6    | Washer                            |
| 2    | 99-5107     | 12   | Nut-Lock                          |
| 3    | 104-8301    | 12   | Nut-Flange, NI                    |
| 4    | 109-5013    | 1    | Panhard Rod ASM                   |
| 4:2  | 109-5009    | 2    | Bushing-Suspension, Rubber        |
| 4:3  | 109-5010    | 2    | Spacer                            |
| 5    | 109-7173    | 2    | Bearing-Cross, Rear Shaft         |
| 6    | 116-1919-01 | 1    | Lever-Foot                        |
| 7    | 109-7438    | 1    | HOC ASM                           |
| 8    | 116-1771-03 | 1    | Deck Lift-Front                   |
| 9    | 116-0818-03 | 2    | Support-Bearing, Cross Shaft Rear |
| 10   | 109-7952    | 2    | Deck Strut ASM                    |
| 10:2 | 109-5009    | 2    | Bushing-Suspension, Rubber        |
| 10:3 | 109-5010    | 2    | Spacer                            |
| 11   | 116-0797-03 | 1    | Link-Lift, Deck                   |
| 12   | 116-2645-03 | 1    | Lift-Deck, Rear                   |
| 13   | 116-5584    | 1    | Pin-HOC                           |

 
| Ref. | Part Number | Qty. | Description                        |
|------|-------------|------|------------------------------------|
| 14   | 109-9409    | 2    | Support-Cross Shaft, Bearing Front |
| 15   | 109-9410    | 2    | Bearing-Shaft Front, Cross         |
| 16   | 109-9840    | 4    | Screw-Shoulder, HHF                |
| 17   | 325-12      | 2    | Screw-HH                           |
| 18   | 325-17      | 1    | Screw-HH                           |
| 19   | 3231-2      | 2    | Screw-CARR                         |
| 20   | 3231-4      | 2    | Screw-CARR                         |
| 21   | 3231-5      | 4    | Screw-CARR                         |
| 22   | 3233-34     | 3    | Screw-CARR                         |
| 23   | 3296-23     | 1    | Nut-Lock, NI                       |
| 24   | 116-1700    | 4    | Bolt-CARR                          |
| 25   | 116-0559    | 1    | Bolt-TAP                           |
| 26   | 116-2022    | 2    | Screw-HHF, Shoulder                |
| 31   | 92-7674     | 1    | Bolt-Shoulder                      |
| 32   | 116-0000    | 1    | Extension Spring ASM               |
| 33   | 109-9065    | 1    | Screw-HH                           |
| 34   | 32128-37    | 2    | Nut-HF                             |
| 35   | 3256-28     | 2    | Washer-Flat                        |
| 36   | 116-2695    | 1    | Spacer                             |
| 37   | 109-8007    | 4    | Link-Adjuster, Deck Lift           |

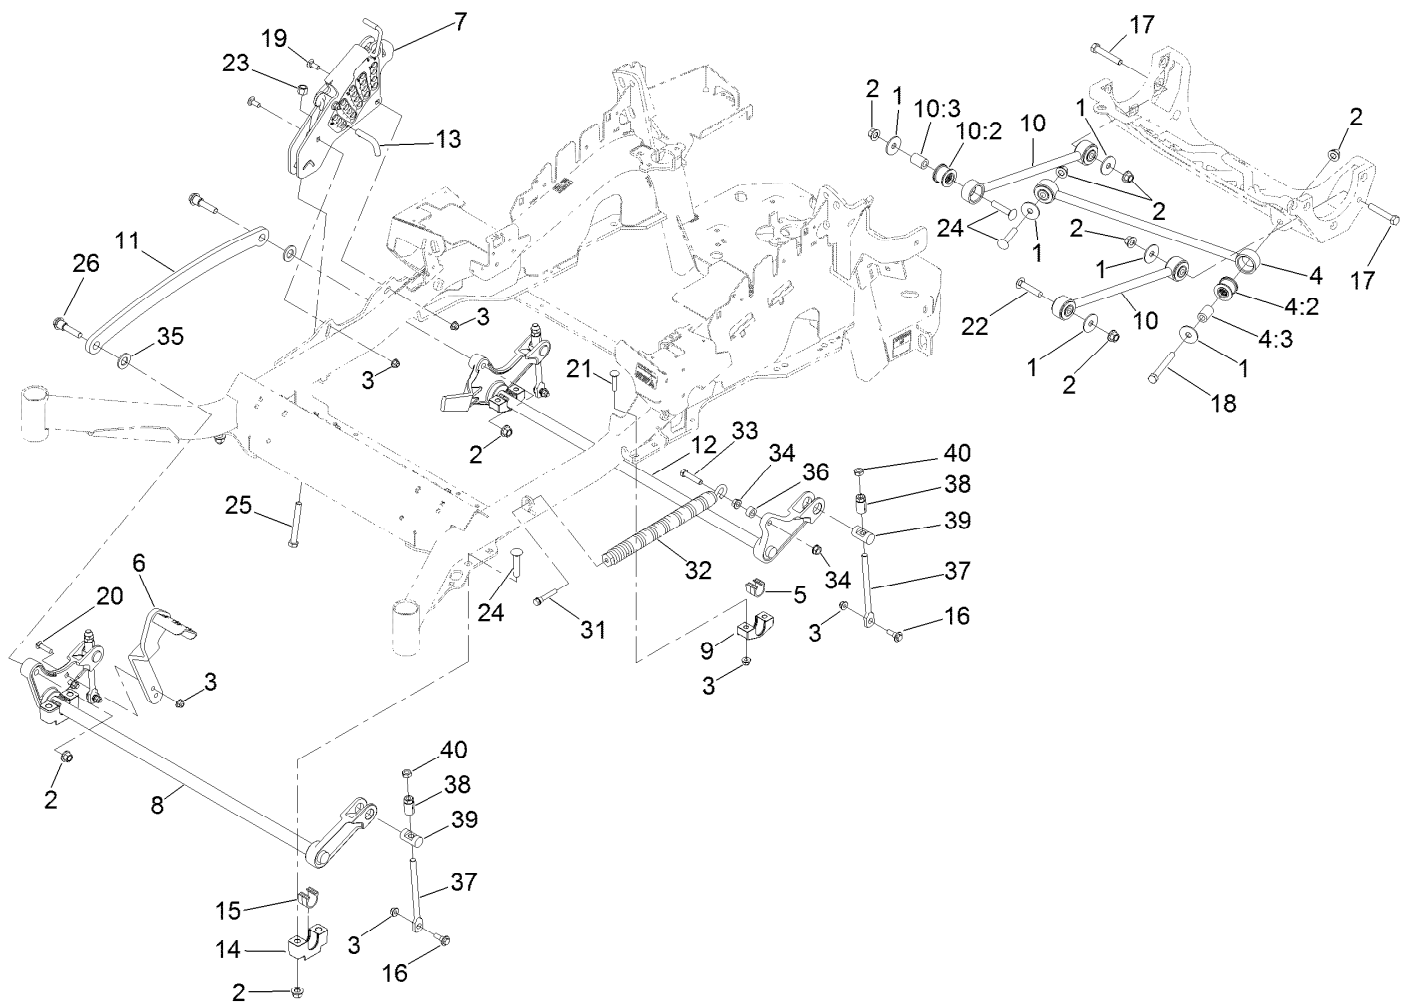

## Deck Lift Assembly (continued)


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 38   | 109-7840    | 4    | Adjuster-Lift, Deck |
 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 39   | 109-8353    | 4    | Trunnion    |
| 40   | 3218-5      | 4    | Nut-Jam     |

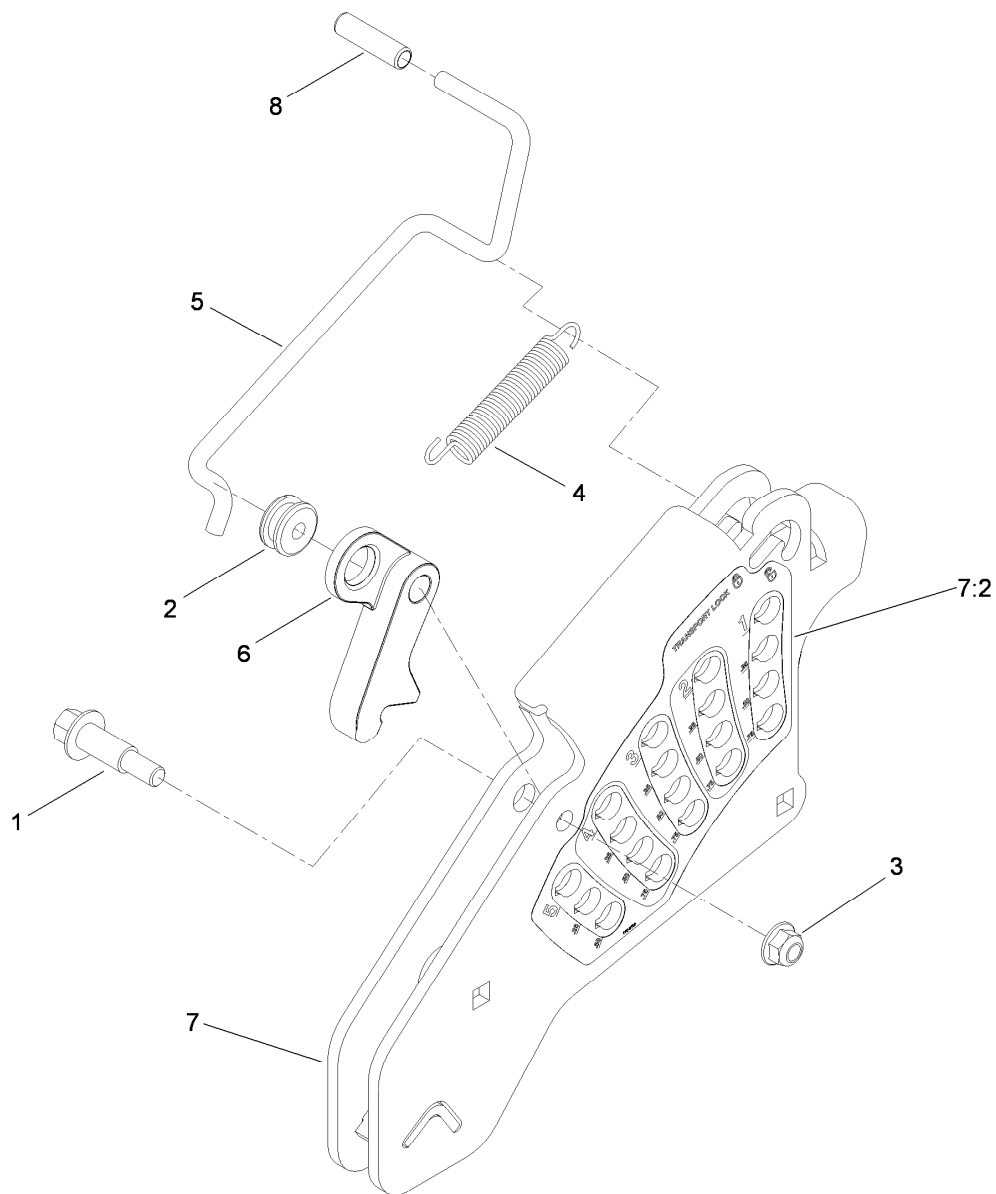

## Height-of-Cut Assembly No. 109-7438
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 62-1330     | 1    | Bolt-Shoulder       |
| 2    | 109-7130    | 1    | Grommet             |
| 3    | 104-8301    | 1    | Nut-Flange, NI      |
| 4    | 109-7124    | 1    | Spring-Extension    |
| 5    | 109-7128    | 1    | Rod-Lock, Transport |
| 6    | 116-0118    | 1    | Pawl-Transport, HOC |
| 7    | 109-7335    | 1    | HOC Plate ASM       |
| 7:2  | 116-0752    | 1    | Decal-HOC           |
| 8    | 109-8250    | 1    | Grip-Lever          |

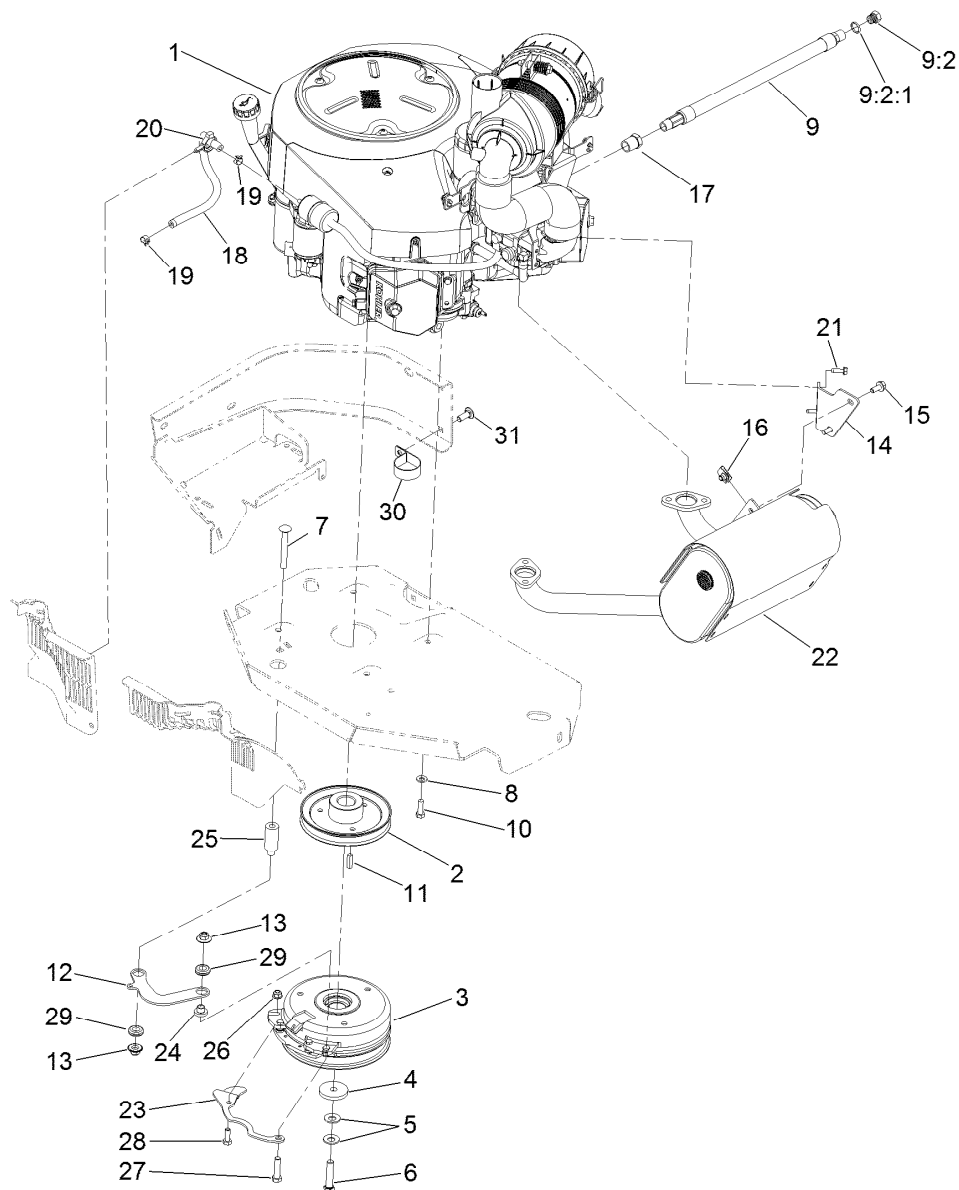

## Engine, Muffler and Clutch Assembly

 
| Ref.  | Part Number | Qty. | Description                     |
|-------|-------------|------|---------------------------------|
| 1     |             | 1    | Engine-Kohler, Ps-Cv940-2010 ●■ |
| 2     | 109-9905    | 1    | Sheave                          |
| 3     | 116-1621    | 1    | Clutch Kit                      |
| 4     | 109-6919    | 1    | Washer-Clutch                   |
| 5     | 1-603610    | 2    | Washer-Spring                   |
| 6     | 109-9762    | 1    | Screw-HH W/Loctite ▲            |
| 7     | 3231-42     | 1    | Screw-CARR                      |
| 8     | 1-303334    | 4    | Washer-Spring                   |
| 9     | 116-5316    | 1    | Oil Drain Hose ASM              |
| 9:2   | 353-508     | 1    | Plug-HH                         |
| 9:2:1 | 237-42      | 1    | O-Ring                          |
| 10    | 33114-025   | 4    | Screw-HH                        |
| 11    | 1-807259    | 1    | Key                             |
| 12    | 116-3317-01 | 1    | Link-Anchor, Clutch             |
| 13    | 109-6658    | 2    | Nut-Flange, NI                  |
| 14    | 109-9218    | 1    | Bracket-Muffler                 |

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 15   | 3234-5      | 2    | Screw-HHF      |
| 16   | 94-2413     | 2    | U-Nut          |
| 17   | 103-1390    | 1    | Bushing        |
| 18   | 109-0305    | 1    | Hose-Fuel      |
| 19   | 2412-98     | 2    | Clamp-Hose     |
| 20   | 105-1853    | 1    | Clamp-Hose     |
| 21   | 110-3986    | 2    | Screw          |
| 22   | 109-9880    | 1    | Muffler        |
| 23   | 116-3331-01 | 1    | Belt-Guide     |
| 24   | 116-3318    | 1    | Spacer         |
| 25   | 116-3319    | 1    | Spacer         |
| 26   | 104-8300    | 1    | Nut-Flange, NI |
| 27   | 323-8       | 1    | Screw-HH       |
| 28   | 322-4       | 1    | Screw-HH       |
| 29   | 93-5108     | 2    | Grommet-Rubber |
| 30   | 2412-147    | 1    | Clamp          |
| 31   | 3231-22     | 1    | Screw-CARR     |

● Not serviced separately

▲ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


■ Obtain parts from [www.kohlerplus.com](http://www.kohlerplus.com)

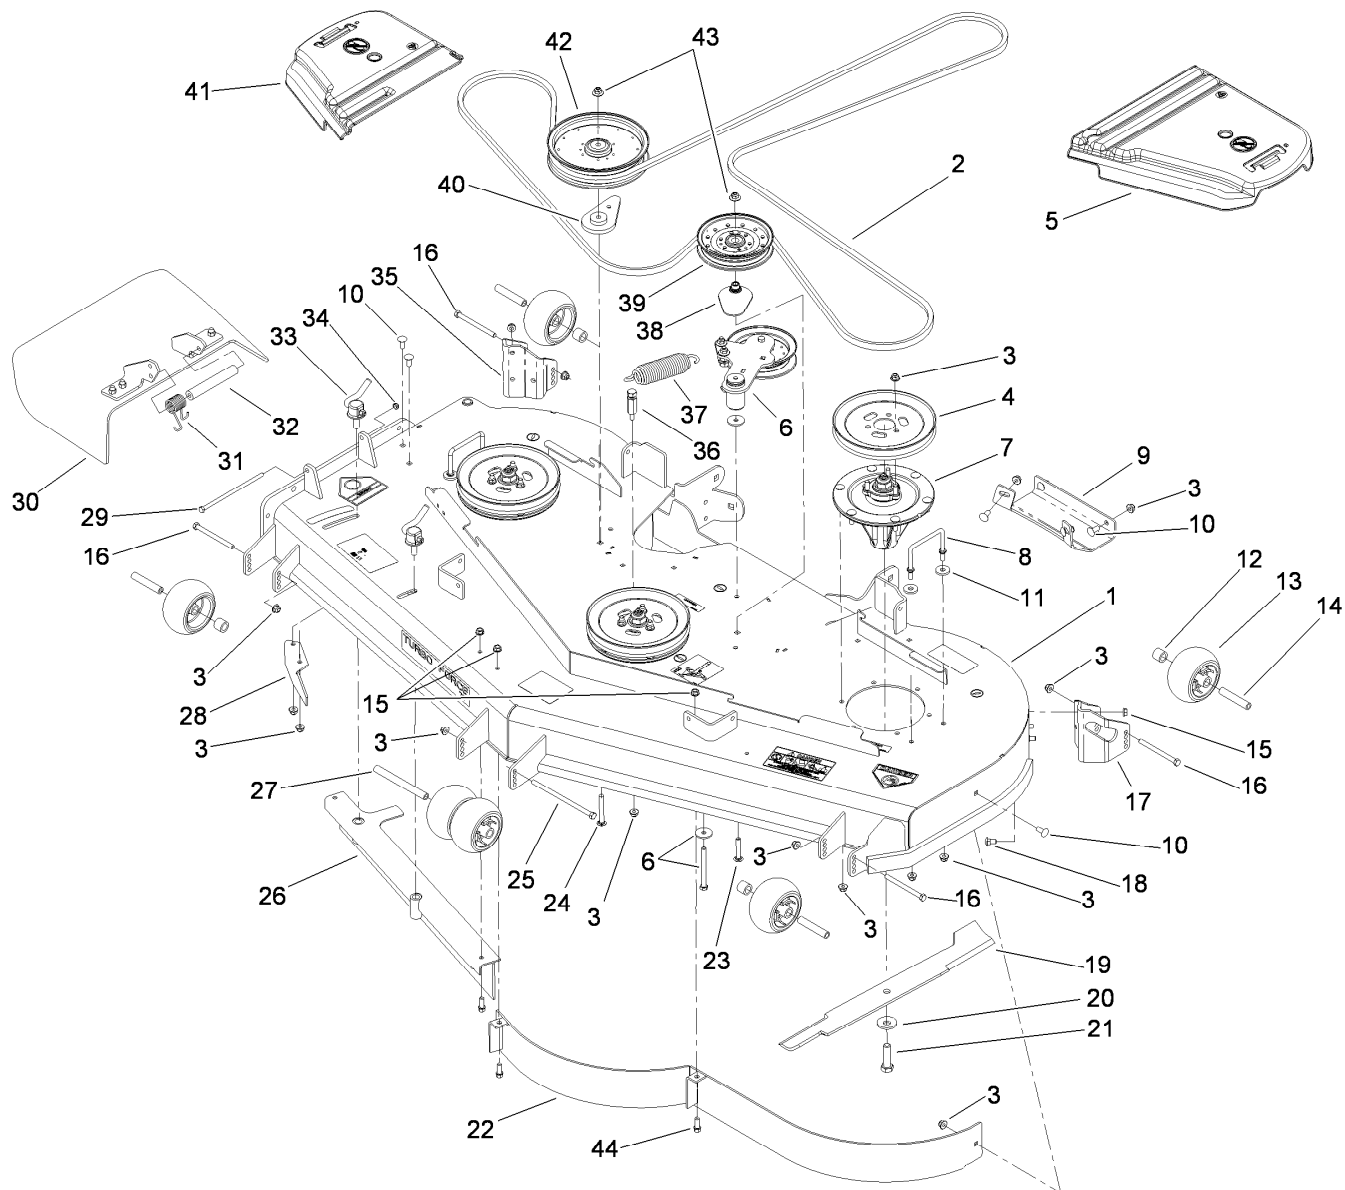

## Deck Assembly

| Ref. | Part Number | Qty. | Description        | Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------|------|-------------|------|--------------------------|
| 1    | 112-4195    | 1    | Deck Decal ASM     | 19   | 105-7784-03 | 3    | Blade-Hi Flow, 24.5 Inch |
| 2    | 114-5859    | 1    | Belt-V             | 20   | 103-0865    | 3    | Washer-Blade Bolt, Heavy |
| 3    | 104-8301    | 44   | Nut-Flange, NI     | 21   | 51-4060     | 3    | Screw-Blade              |
| 4    | 105-7733    | 3    | Pulley             | 22   | 114-5843-01 | 1    | Baffle ASM               |
| 5    | 109-6938    | 1    | Cover-Belt, LH     | 23   | 3231-40     | 1    | Bolt-CARR                |
| 6    |             | 1    | Idler Arm ASM ●    | 24   | 3231-42     | 1    | Screw-CARR               |
| 7    | 119-8500    | 3    | Spindle ASM        | 25   | 108-5388    | 1    | Screw-HH                 |
| 8    | 109-6982    | 2    | Wireform-Cover     | 26   | 105-7669-01 | 1    | Baffle ASM               |
| 9    | 112-4230-01 | 1    | Plate-Skid         | 27   | 98-5967     | 1    | Spacer-Wheel             |
| 10   | 3231-27     | 7    | Screw-CARR         | 28   | 106-3216-01 | 1    | Baffle-Discharge         |
| 11   | 1-373034    | 4    | Washer             | 29   | 322-50      | 1    | Screw-HH                 |
| 12   | 98-7913     | 4    | Tube-Spacer        | 30   | 108-2792    | 1    | Rubber Deflector ASM     |
| 13   | 1-603299    | 6    | Roller-Scalp, Anti | 31   | 108-4052    | 1    | Spring-Torsion           |
| 14   | 98-7912     | 4    | Tube-Spanner       | 32   | 105-4622    | 1    | Spacer                   |
| 15   | 3290-357    | 9    | Nut-HHF, Whiz      | 33   | 107-1664    | 2    | Lever ASM                |
| 16   | 323-23      | 4    | Screw-HH           | 34   | 3296-47     | 1    | Nut-Lock, NI             |
| 17   | 106-7354-01 | 1    | Mount-Wheel, LH    | 35   | 106-7355-01 | 1    | Mount-Wheel, RH          |
| 18   | 3231-1      | 6    | Screw-CARR         | 36   | 114-5867    | 1    | Anchor-Spring, Tall      |

 ● Not serviced separately

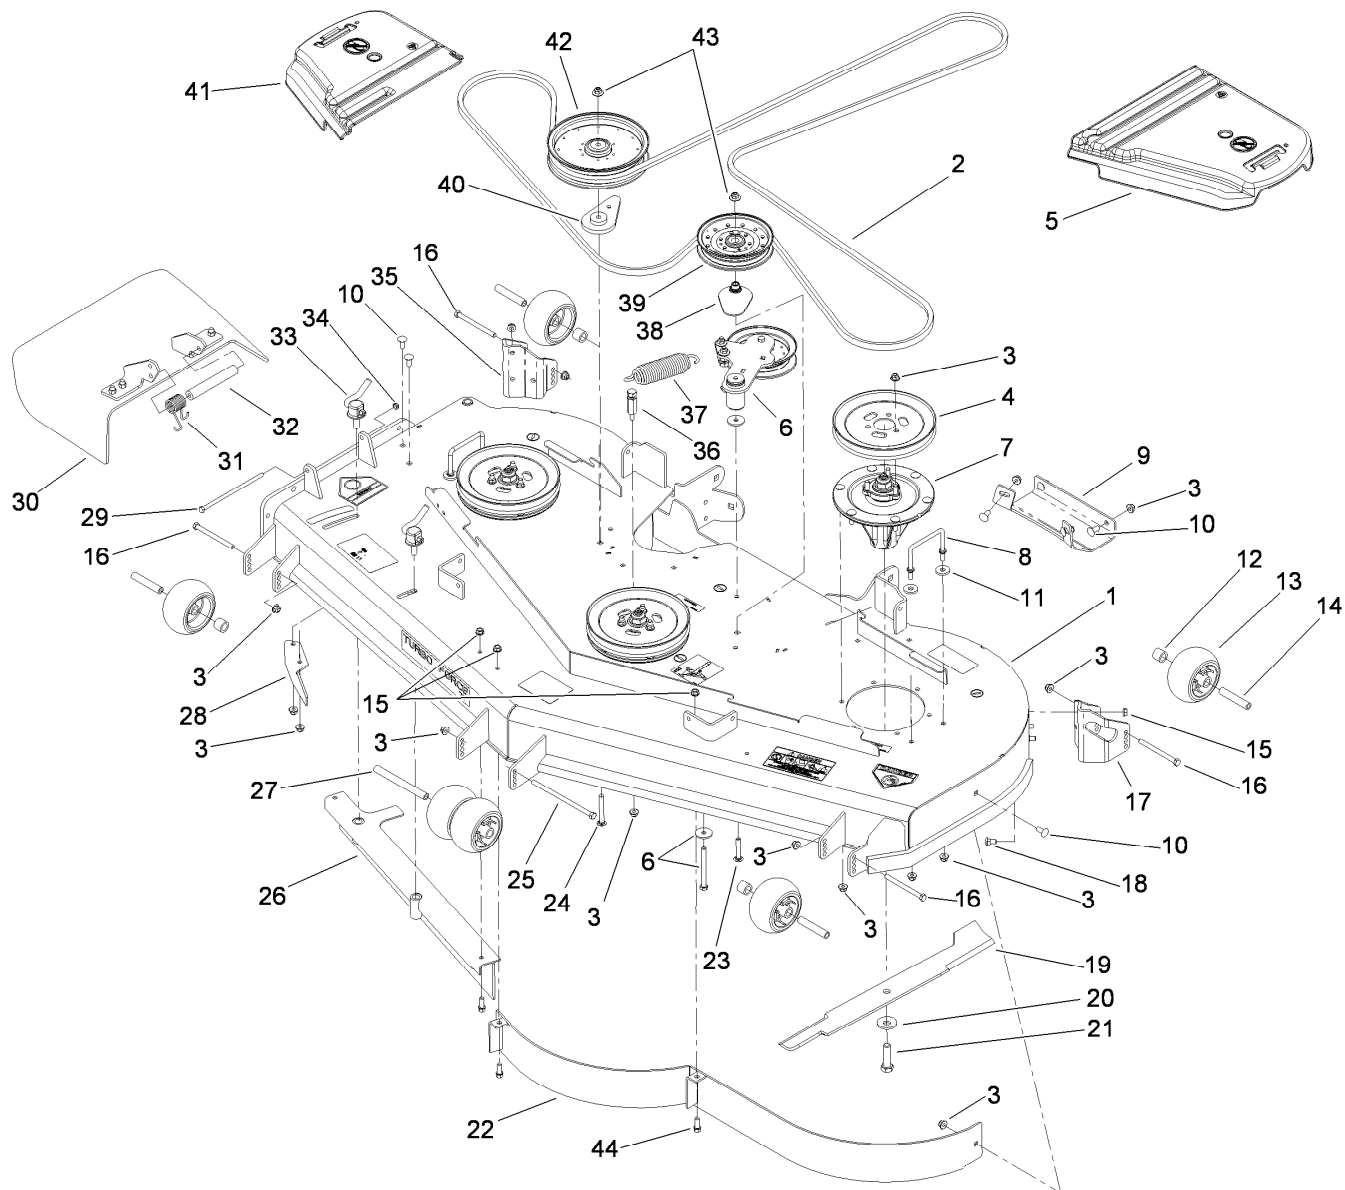


## Deck Assembly (continued)

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 37   | 116-0133    | 1    | Extension-Spring   |
| 38   | 109-2872    | 1    | Spacer-Pulley      |
| 39   | 116-4670    | 1    | Idler-Pulley, Flat |
| 40   | 109-9416    | 1    | Spacer-Idler       |


| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 41   | 116-0094    | 1    | Cover-Belt, RH |
| 42   | 109-8590    | 1    | Pulley-Idler   |
| 43   | 109-6658    | 2    | Nut-Flange, NI |
| 44   | 92-1624     | 3    | Screw-HWH      |

 ● Not serviced separately

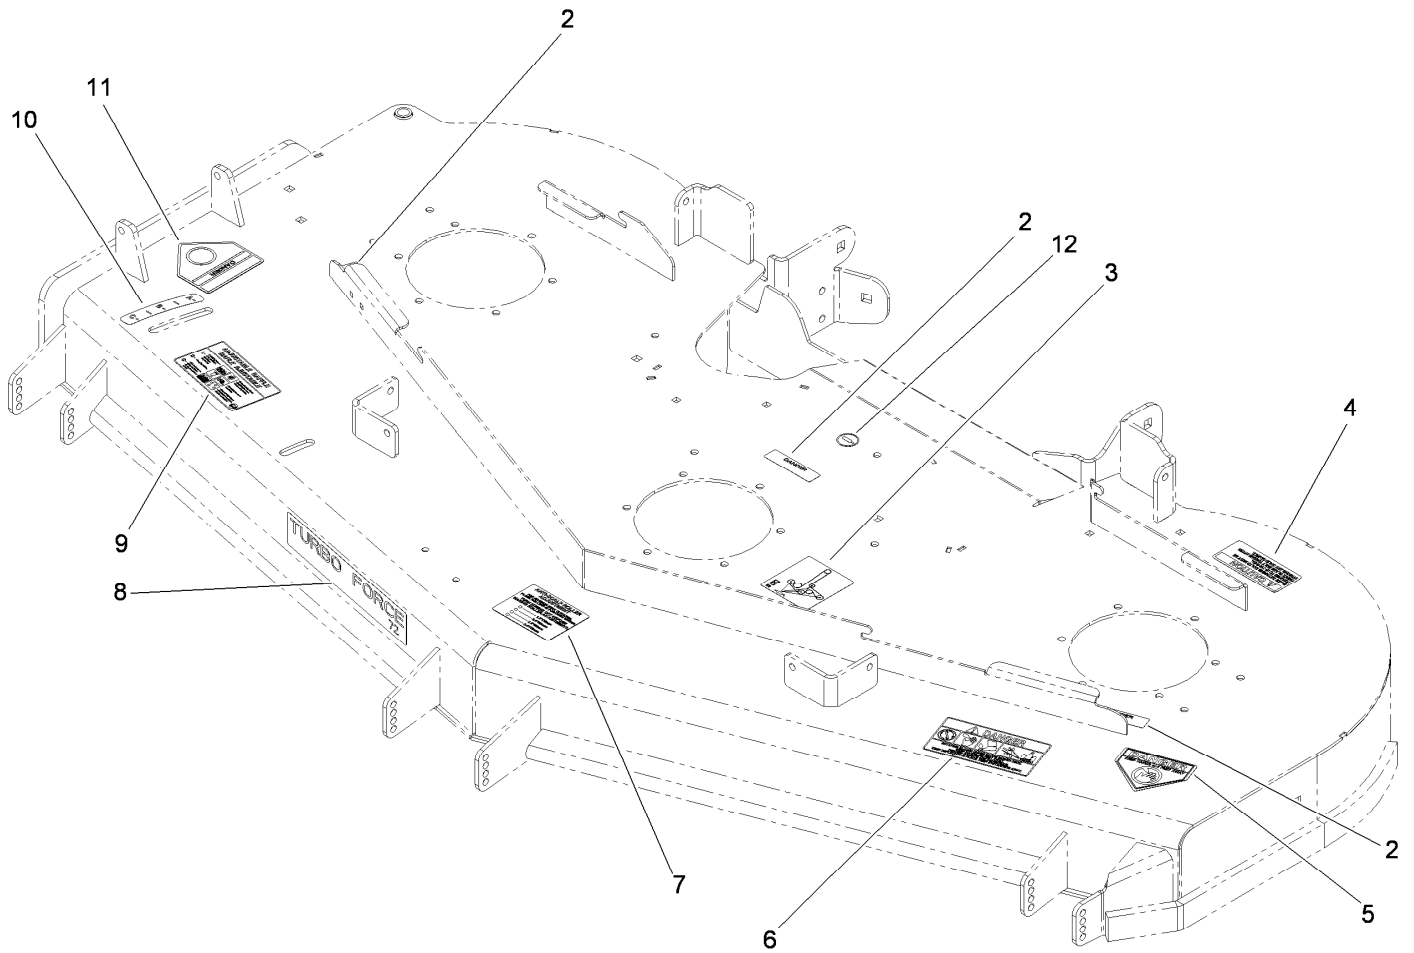


## Deck Decal Assembly No. 112-4195
 
| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 2    | 98-5954     | 3    | Decal-Cover, Missing        |
| 3    | 115-7445    | 1    | Decal-Routing, Deck Belt    |
| 4    | 68-8340     | 1    | Decal-Torque                |
| 5    | 1-403005    | 1    | Decal-Danger                |
| 6    | 66-1340     | 1    | Decal-Danger, Thrown Object |
| 7    | 105-7798    | 1    | Decal-Scalp, Anti           |
| 8    | 107-1620    | 1    | Decal                       |
| 9    | 110-2068    | 1    | Decal-Adjustment, Baffle    |
| 10   | 110-2067    | 1    | Decal-Setting, Baffle       |
| 11   | 54-9220     | 1    | Decal-Danger                |
| 12   | 58-6520     | 1    | Decal-Grease                |

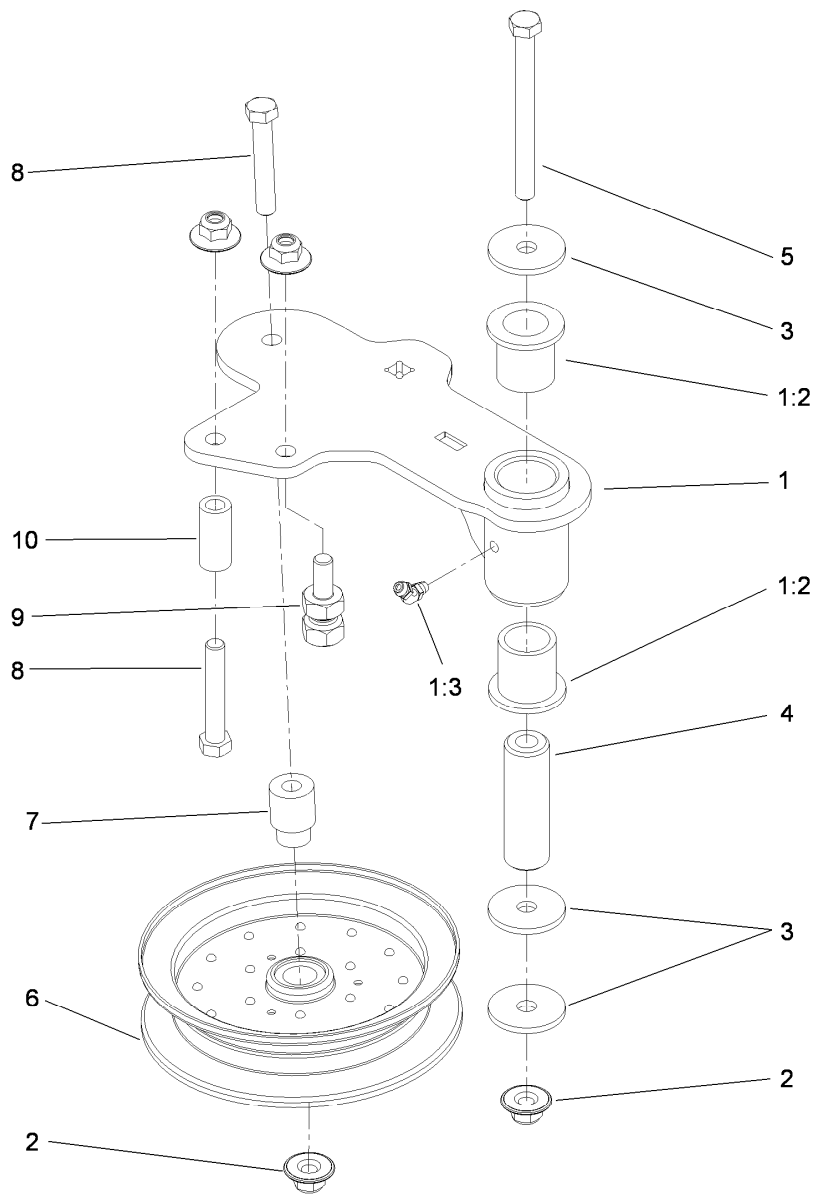

## Idler Assembly

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 114-5870    | 1    | Idler Arm ASM         |
| 1:2  | 1-303514    | 2    | Bearing-Flanged       |
| 1:3  | 1481        | 1    | Fitting-Grease        |
| 2    | 109-6658    | 4    | Nut-Flange, NI        |
| 3    | 1-213069    | 3    | Washer                |
| 4    | 114-5848    | 1    | Spacer-Plain          |
| 5    | 98-5961     | 1    | Screw-HH              |
| 6    | 116-4668    | 1    | Idler-Pulley, Flanged |
| 7    | 112-4212    | 1    | Mount-Pulley          |
| 8    | 323-11      | 2    | Screw-HH              |
| 9    | 114-5866    | 1    | Anchor-Spring, Short  |
| 10   | 104-0151    | 1    | Spacer                |

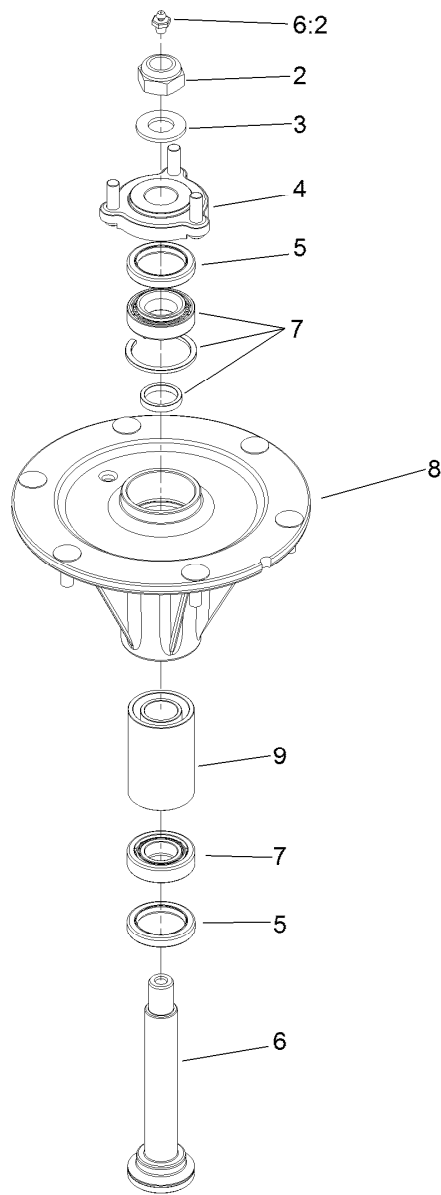

## Spindle Assembly No. 119-8500


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 2    | 3296-67     | 1    | Nut-Lock, NI               |
| 3    | 92-5836     | 1    | Washer                     |
| 4    | 117-6172    | 1    | Spindle Hub ASM            |
| 5    | 253-133     | 2    | Seal-Oil                   |
| 6    | 119-8527    | 1    | Spindle Shaft And Zerk ASM |
| 6:2  | 302-2       | 1    | Fitting-Grease             |
| 7    | 119-8531    | 1    | Trb Set                    |
| 8    |             | 1    | Housing-Spindle ●          |
| 9    | 117-6185    | 1    | Spacer Set                 |

 ● Not serviced separately

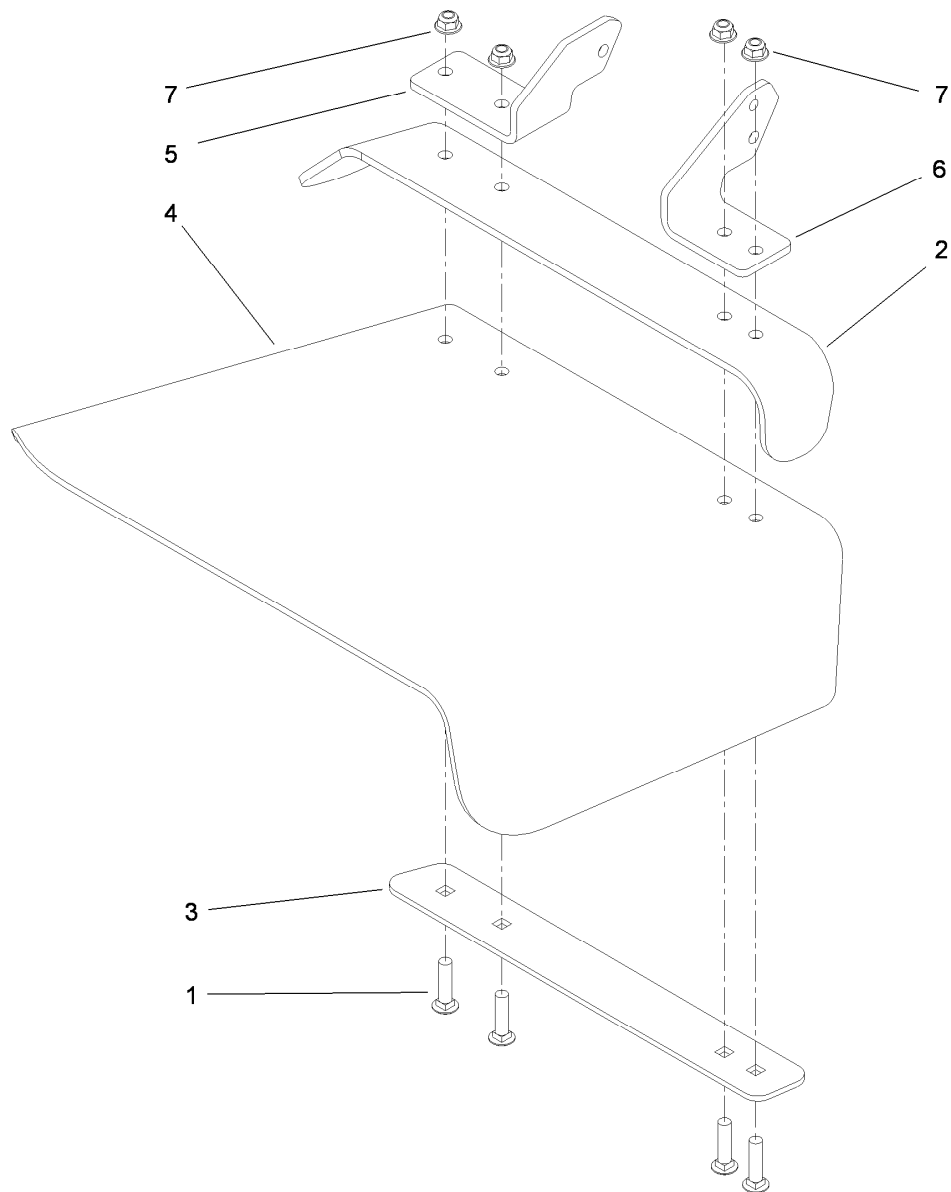

## Rubber Deflector Assembly No. 108-2792
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 3231-4      | 4    | Screw-CARR         |
| 2    | 106-3246-01 | 1    | Deflector          |
| 3    | 106-3248-03 | 1    | Strap-Discharge    |
| 4    | 108-5029    | 1    | Deflector-Rubber   |
| 5    | 108-4059-01 | 1    | Plate-Hinge, Rear  |
| 6    | 106-3253-01 | 1    | Plate-Hinge, Front |
| 7    | 104-8301    | 4    | Nut-Flange, NI     |

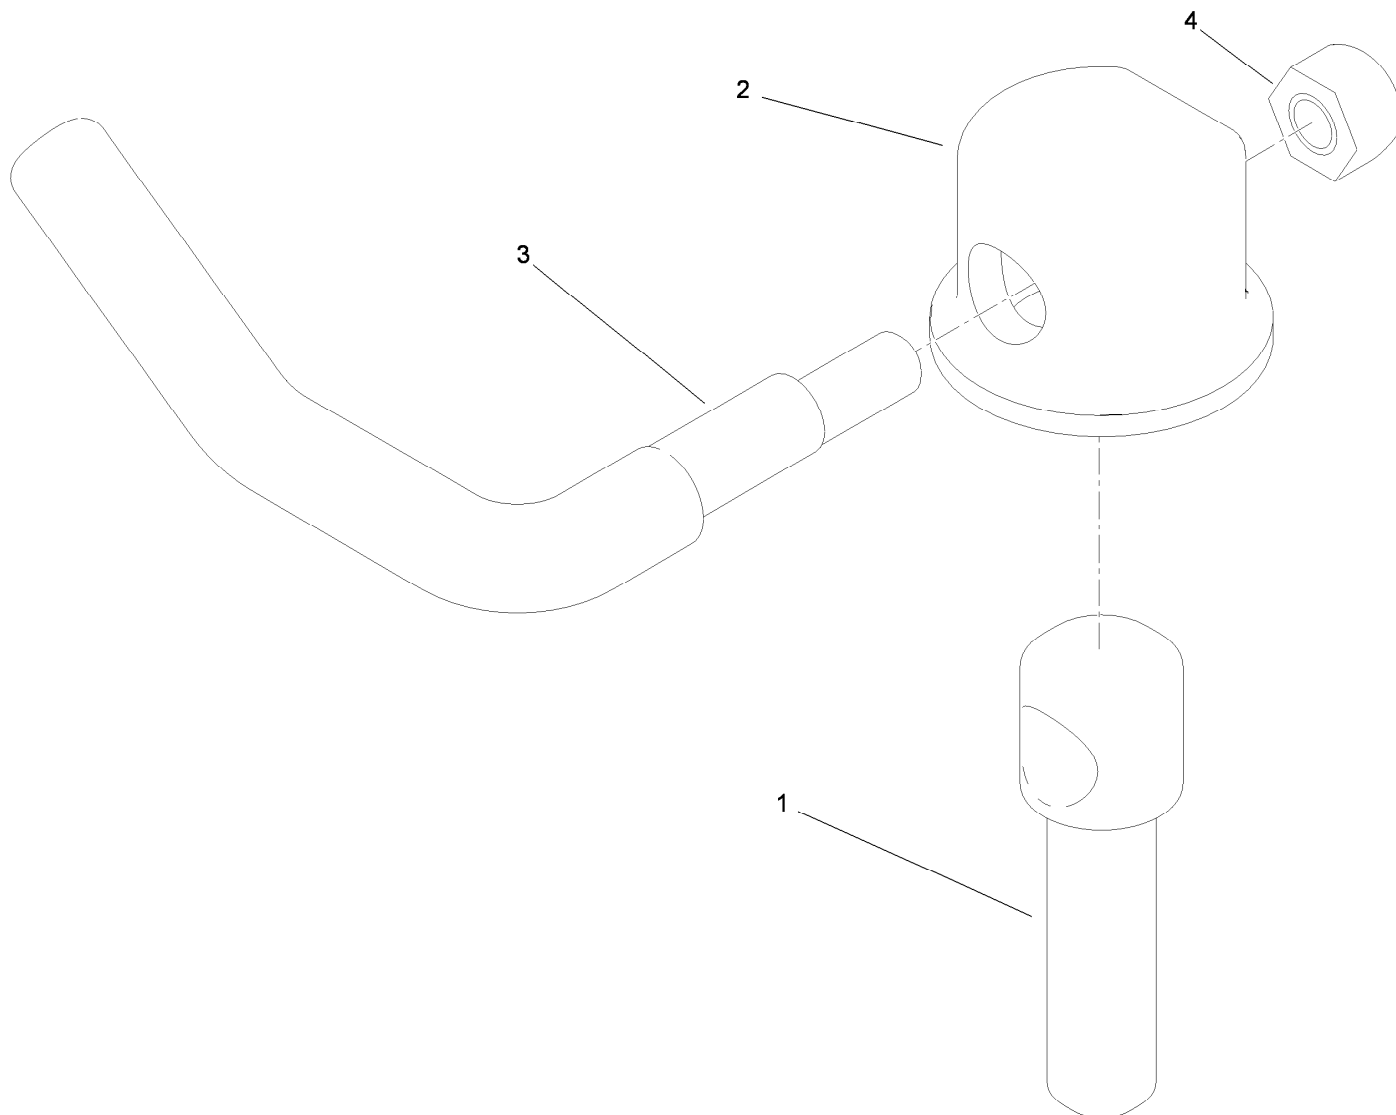

## Lever Assembly No. 107-1664

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 106-3239           | 1           | Screw-Lock         |
| 2           | 107-1644           | 1           | Cap-Lock           |
| 3           | 106-3241           | 1           | Lever-Lock         |
| 4           | 3296-29            | 1           | Nut-Lock, NI       |

# Attachments and Accessories

## For 74938 Z Master Riding Mower with 72in TURBO FORCE Side Discharge Mower

| Product Name                                  | Model/Part  |
|-----------------------------------------------|-------------|
| Blower and Drive Kit .....                    | 78554       |
| E-Z Vac Triple Bagging System .....           | 78564       |
| E-Z Vac DFS Collection System .....           | 78568       |
| Deluxe Suspension Seat Kit .....              | 117-6174    |
| Recycler Kit .....                            | 115-7469    |
| Operator-Controlled Discharge Chute Kit ..... | 117-3600    |
| Bimini Folding Shade Assembly .....           | 115-4510    |
| Z Stand Kit .....                             | 117-0354    |
| Light Kit.....                                | 116-1154    |
| Hitch Kit .....                               | 109-9487    |
| Trash Holder Kit.....                         | TC26        |
| Hypr-Oil 500 (quart) .....                    | 114-4713    |
| Hypr-Oil 500 (gallon).....                    | 114-4714    |
| Hypr-Oil 500-5 (5 gallon).....                | 114-4715    |
| Blade-Hi Flow, 24.5in.....                    | 105-7784-03 |
| Blade-Recycler, 24.5in .....                  | 105-7778-03 |
| Blade-Mid Flow, 24.5in .....                  | 105-7711-03 |
| Blade-Lo Flow, 24.5in .....                   | 105-7712-03 |
| Blade-Atomic, 24.5in .....                    | 105-7719-03 |
| 6 Pack Blade, 24.5in Hi-Flow .....            | 108-1120    |
| 6 Pack Blade, 24.5in Atomic .....             | 108-1126    |
| 6 Pack-Blade, 24.5in Mid-Flow .....           | 110-0404    |
| 6 Pack-Blade, 24.5in Lo-Flow .....            | 110-0410    |
| 6 Pack-Blade, 24.5in Recycler.....            | 110-0411    |
| Roller Striper Kit.....                       | 115-7480    |
| Filter Minder Gauge .....                     | 99-4664     |
| Toro Deluxe Rider Cover.....                  | 490-7319    |
| Spark Arrestor Screen .....                   | 75-6880     |

**Notes:**

**Notes:**



**Count on it.**