




MODEL NO. 30162 - 0000001 & UP

PARTS CATALOG

62" SIDE DISCHARGE DECK

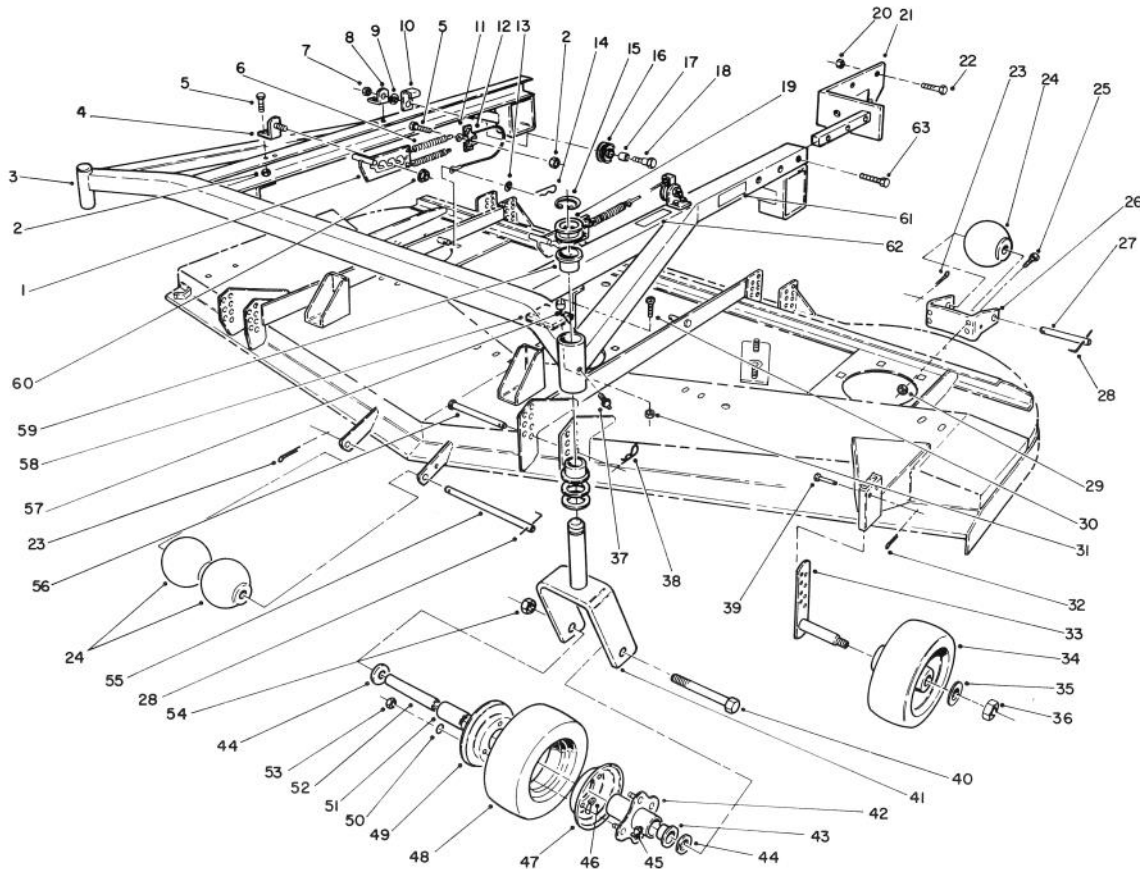


C-0618-90

62" SIDE DISCHARGE DECK

Ref. No.	Part No.	Description	No. Used
1	56-3330	Tension Adjusting Control	2
2	3296-42	Nut - Lock	9
3	76-3151	Carrier Frame Assembly (Incl. Decal 14-1529)	1
4	56-3340	Bracket - Tension Adjusting	2
5	321-4	Screw - Hex. Hd. Cap	9
6	56-2770	Spring - Extension	3
7	3296-42	Nut - Lock	2
8	56-3360	Bracket - Pulley	2
9	252-98	Washer - Thrust	3
10	56-2780	Retainer - Cable	2
11	59-5390	Bracket - Spring	2
12	56-3350	Cable	2
13	3256-1	Washer - Flat	2
14	3290-307	Pin - Cotter	2
15	32151-91	Ring - Retaining	2

Ref. No.	Part No.	Description	No. Used
16	3-8775	Pulley Assembly (Incl. Ref.#17)	2
17	256-159	Bushing	2
18	59-5400	Bolt - Shoulder	2
19	3-6787	Washer - Thrust	8
20	32128-23	Nut - Lock	6
21	74-1220	Lift Arm Assembly L.H.	1
	* 74-1210	Lift Arm Assembly R.H.	1
22	3234-6	Screw - Hex. Flange Hd.	6
23	3272-11	Pin - Cotter	2
24	29-4820	Roller	3
25	323-6	Screw - Hex. Hd. Cap	2
26	57-0580	Bracket - Roller	1
27	57-0680	Shaft - Roller	1
28	57-0690	Pin - Special	2

*Not Illustrated

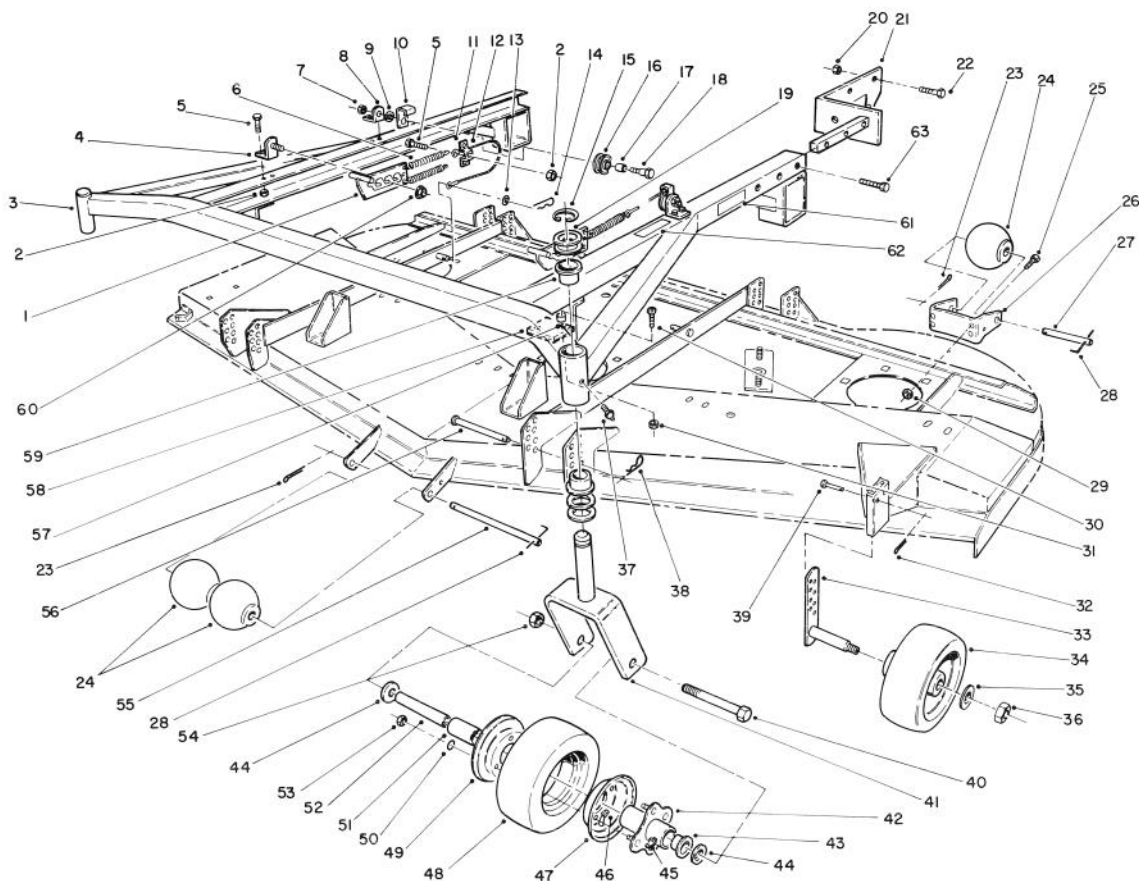


C-0618-90

62" SIDE DISCHARGE DECK (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
29	3290-357	Nut - Flange Lock	2	47	68-8920	Wheel - Half, Male	2
30	32122-28	Screw - Hex. Hd. Mach.	4	48	68-8960	Tire	2
31	3296-2	Nut - Lock	4	49	68-8930	Wheel - Half, Female	2
32	3290-467	Pin - Cotter	1	50	3253-4	Washer - Lock	8
33	68-2350	Plate - Gauge Wheel	1	51	62-5570	Bearing - Roller	2
34	68-2730	Wheel - Gauge	1	52	68-8980	Bushing - Spanner	2
35	3256-24	Washer - Flat	1	53	3217-6	Nut	8
36	3296-39	Nut - Lock	1	54	32153-5	Nut - Lock	2
37	302-5	Fitting - Grease	2	55	40-6400	Shaft - Roller	1
38	3290-355	Pin -Cotter	4	56	235-55	Pin - Clevis	4
39	283-2	Pin - Clevis	1	57	40-9520	Spacer	4
40	325-19	Bolt - Wheel	1	58	40-0330	Cushion - Rubber	2
41	74-0250	Fork - Castor	2	59	28-9290	Bushing - Special	4
42	68-8940	Hub - Castor Wheel	2	60	32128-13	Nut - Lock	2
43	62-5580	Bushing	4	61	68-3860	Decal - H.O.C.	1
44	3256-6	Washer - Thrust	4	62	55-4300	Decal - Warning	2
45	302-61	Fitting - Grease	2	63	3325-32	Screw -Hex. Hd. Cap	6
46	68-8950	Tube w/Valve & Cap	2				

*Not Illustrated

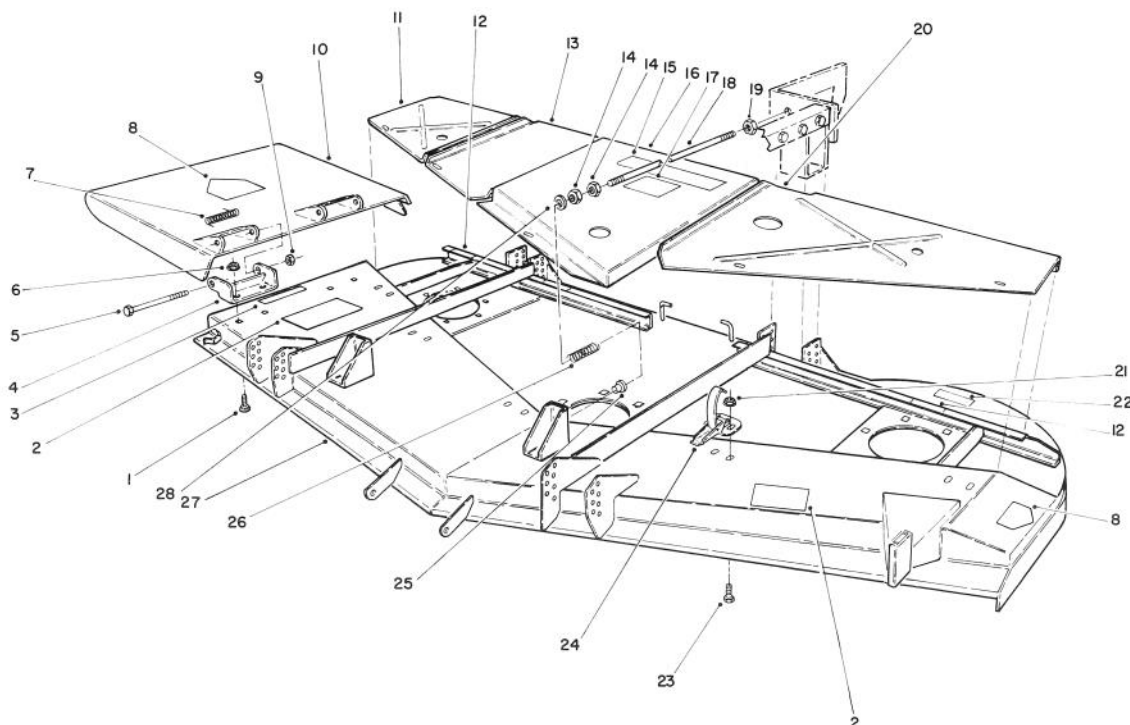


C-0619-90

62" SIDE DISCHARGE DECK (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3231-27	Bolt - Carriage	4	15	74-2080	Decal - Proline	1
2	66-1340	Decal - Danger	2	16	74-1320	Cover - Deck, Center L.H.	1
3	66-6380	Decal - Deflector Missing	1	17	66-1630	Decal - 62"	1
4	51-1530	Bracket - Hinge	2	18	74-0311	Shaft - Adjusting	2
5	325-17	Screw - Hex. Hd. Cap	2	19	3296-45	Nut - Lock	2
6	3290-357	Nut - Flange Lock	4	20	44-6291	Cover - Deck L.H.	1
7	51-1550	Spring	2	21	32128-17	Nut - Lock	10
8	43-8480	Decal - Danger	2	22	68-8340	Decal - Blade Torque	1
9	32153-5	Nut - Lock	2	23	3290-321	Screw - Hex. Hd. Mach.	10
10	52-5790	Deflector Assembly	1	24	249-21	Latch - Draw	5
11	63-9830	Cover - Deck R.H.	1	25	256-156	Bushing	2
12	67-5360	Decal - Shield Missing	4	26	74-0290	Spring - Compression	2
13	74-1310	Cover - Deck, Center R.H.	1	27	74-1300	Deck Assembly	1
14	3218-5	Nut - Lock	4	28	41-8440	Spacer - Hardened	2

*Not Illustrated

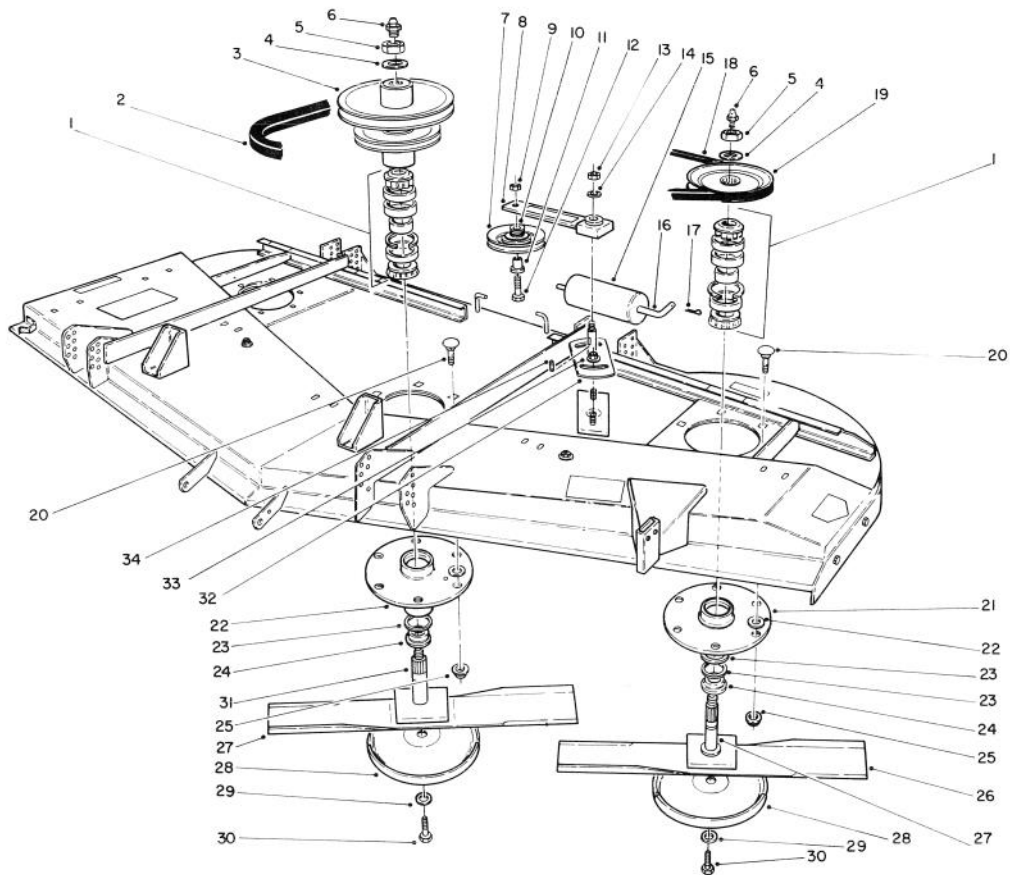

C-0620-90

62" SIDE DISCHARGE DECK (Continued)

Ref. No.	Part No.	Description	No. Used
1	46-8530	Bearing Assembly	3
2	74-1330	V-Belt - Deck Drive	1
3	74-1200	Pulley & Hub Assembly	1
4	7-4150	Washer - Thrust	3
5	32146-20	Nut - Lock	1
6	302-2	Fitting - Grease	3
7	65-5940	Pulley - Idler	1
8	27-8580	Idler Socket Assembly	1
9	3296-1	Nut - Lock	1
10	7-0081	Washer - Special	1
11	65-5950	Bushing - Pulley	1
12	3211-8	Screw - Hex. Hd. Cap	1
13	3296-71	Nut - Lock	1
14	3256-27	Washer - Flat	1
15	36-1740	Roller - Deck, rear	2
16	40-0340	Shaft - Roller	2
17	3272-11	Pin - Cotter	1
18	44-6260	V-Belt - Deck	1
19	44-6340	Pulley Hub Assembly	2
20	3231-22	Bolt - Carriage	18

Ref. No.	Part No.	Description	No. Used
21	61-4160	Spindle	3
*	44-6370	Spindle Housing Assembly (Incl. Ref.#1, 4 - 6, & 21-23)	
22	3256-24	Washer - Flat	2
23	253-139	Seal - Wave	A/R
24	27-0950	Spacer - Spindle Bearing	6
25	32128-21	Nut - Lock	3
26	44-6250	Blade	18
27	27-0920	Shaft - Spindle	3
28	72-9360	Cup - Anti Scalp	2
29	67-5770	Washer - Flat	3
30	44-2200	Screw - Blade	3
31	51-3551	Shaft - Spindle	1
32	44-6301	Plate Assembly Idler	1
33	3290-357	Nut - Flange Lock	1
34	5-1077	Key - Square	1
*	54-7782	Spindle Housing Assembly (Incl. Ref.#1, 3-6 21 - 25, & 31)	1

*Not Illustrated

LTS 005477