



314-8 GT-CLASSIC
GARDEN TRACTOR

Model No. 73402 – 6900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood And Grille	1	Transmission 8—Speed 8 Pinion	19
Frame Steering	2	Transmission 8—Speed 8 Pinion (Continued)	20
Hoodstand Console	3	Air Cleaner	21
Footrests	4	Carburetor	22
Gages, Throttle	5	Governor Linkage	23
Manual Lift System	6	Fuel Pump	24
Clutch	7	Baffles And Shrouds	25
Brake	8	Breather And Vent	26
Fender, Seat	9	Flywheel	27
PTO Clutch Pulley	10	Ignition System	28
PTO Clutch Linkage	11	Crankcase And Cylinder Head	29
Engine	12	Camshaft, Crankshaft And Valves	30
Transmission	13	Piston And Rings	31
Wheels And Tires	14	Oil Pan And Dipstick	32
Hitches	15	Starter	33
Battery	16	314—8 Wire Harness	34
Fuel Tank	17	314—8 Wire Harness	35
Front Plate. Relays	18	Toro Part Number Index	36

Note:

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head
ASM	assembly		thread forming
CARR	carriage	INC	incorporated
DEG	degrees	LH	left hand
FH	flat head	PH	pan head
GA	gauge	PPH	Phillips pan head
HF	hex flange	PTO	power take off
HFW	hex flange washer	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SH	square head
HHST	hex head self tapping	SHWH	slotted hex washer head
HJ	hex jam	SPH	slotted pan head
HOC	height-of-cut	STD	standard
HS	hex socket	TAP	self tapping
HSBH	hex socket button head	TH	truss head
HSFH	hex socket flat head	TTH	Torx truss head
HSH	hex socket head	WH	wing head
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

3318-519




1

Ref. No.	Part No.	Qty.	Description

Part Identified in illustration but not in part list are not used on this model

3318-519

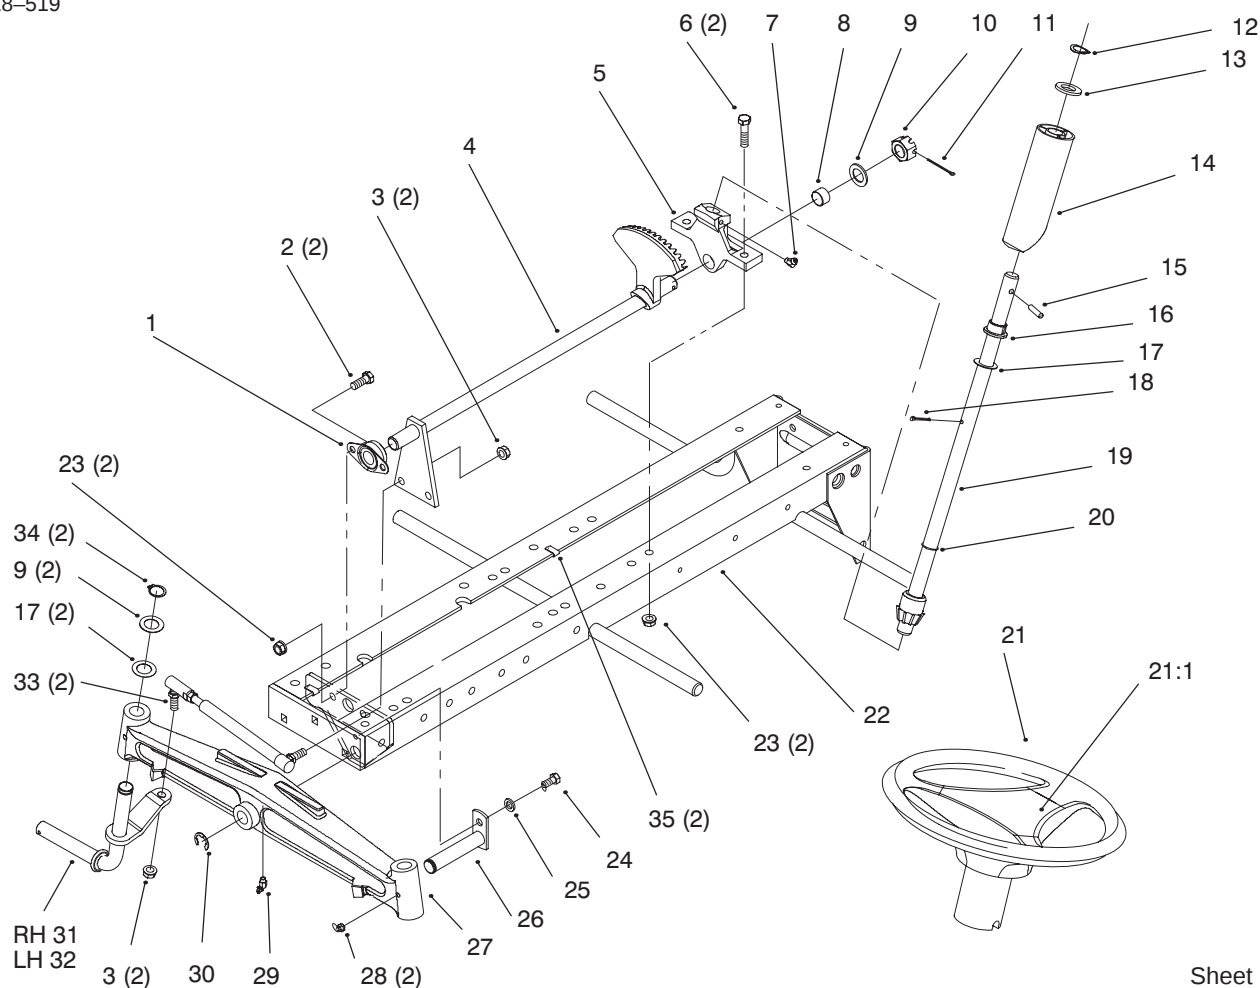


Sheet No.: 3

Frame Steering

Ref. No.	Part No.	Qty.	Description
1	6472	1	Bearing-Flanged
2	323-6	2	Screw-HH
3	3296-6	4	Nut-Lock
4	78-2880	1	Lower Steering
5	88-2710	1	Support-Lower Steering
6	323-8	2	Screw-HH
7	1481	2	Fitting-Grease
8	6397	1	Bearing-Bronze
9	1278	3	Washer-Shim
10	32136-5	1	Nut-Slotted
11	3272-19	1	Pin-Cotter
12	7896	1	Washer-Bowed
13	109262	2	Washer-
14	113443	1	Tube-Steering Shaft
15	32121-111	1	Pin-Spiral
16	109189	1	Bearing-Flange
17	3272-21	1	Pin-Cotter
17	5210	14	Washer-Shim
19	92-4987	1	Steering Shaft
20	237-69	1	O-Ring
21	94-3519	1	Steering Wheel 15"
21:1	88-3870	1	Cover-Steering Wheel
22	94-3715-01	1	Frame
23	3296-39	4	Nut-Lock
24	322-1	1	Screw-HH

Ref. No.	Part No.	Qty.	Description
25	3253-4	1	Washer-Lock
26	6216	1	Pin
27	5638	1	Axle-Front
28	302-5	2	Fitting-Grease
30	5618	1	Ring-Retaining
31	113382	1	Spindle
32	113381	1	Spindle
33	78-2900	2	ASM-Tie Rod
34	32120-93	2	Snap Ring
35	8519	2	Clip-Wire

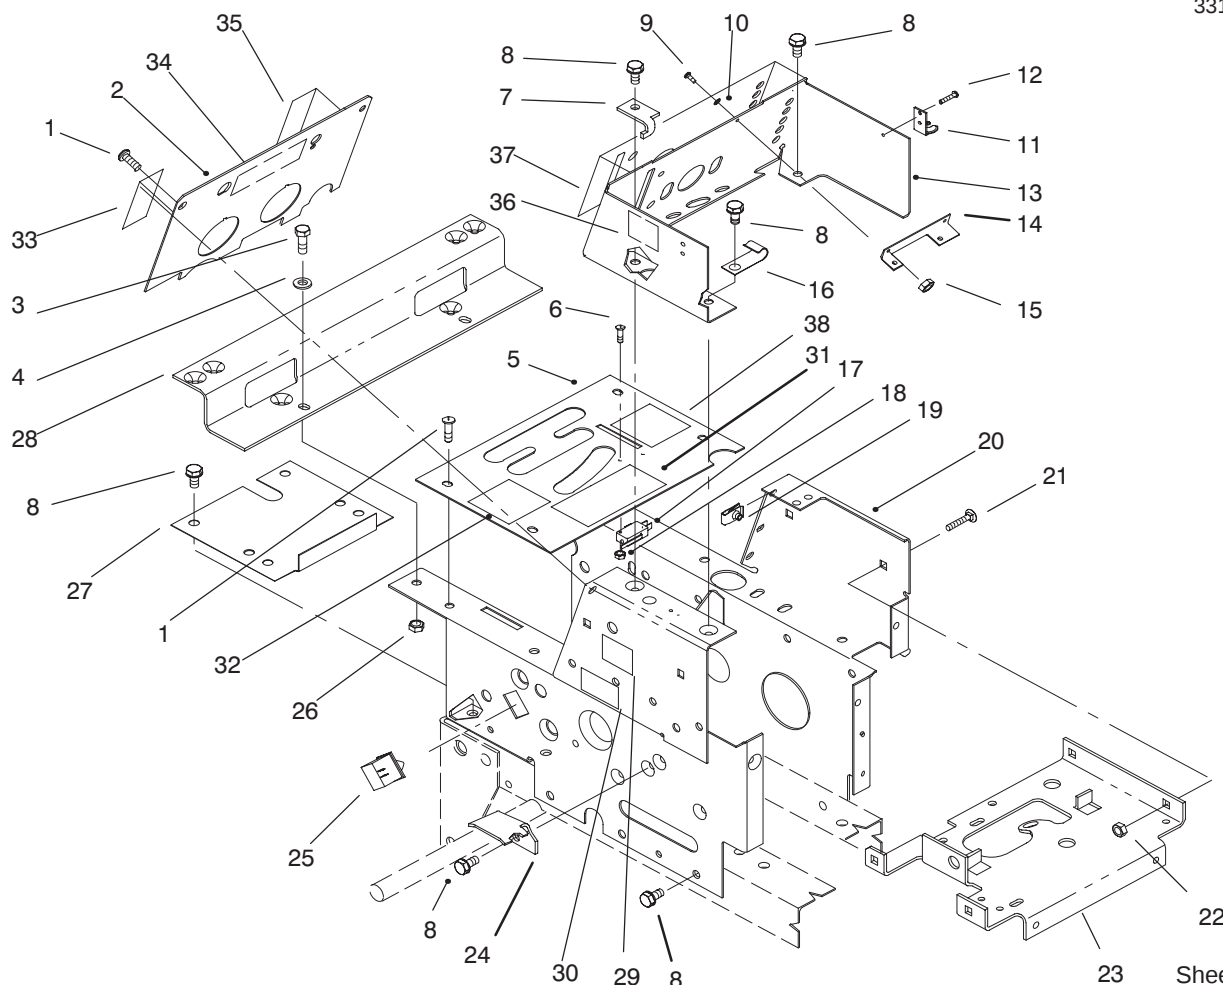

Sheet No.: 6

Hoodstand Console

Ref. No.	Part No.	Qty.	Description
1	9108372	6	Screw-Phcr
2	94-1809	1	Plate-Hoodstand
3	322-5	2	Screw-HH
4	3256-23	2	Washer-Flat
5	111386	1	Plate-Shift Pattern
6	9109482	2	Screw-Phcr
7	112415	1	Stop-PTO
8	9266944	11	Screw-HH
9	9107622	2	Screw Phc
10	9201504	2	Washer-Lock
11	117343	2	Latch-Hood
12	117431	4	Poprivet
13	111271	1	Console
14	112506	1	Bracket
15	9159604	2	Nut-Hex
16	111392	1	Retainer-Offset"j"
17	111332	1	Switch-Interlock
18	9157324	2	Nut-Lock
19	107069	4	Nut-Speed
20	92-1525	1	Hoodstand
21	117371	4	Screw-CARR
22	9151126	4	Nut-HH
23	78-3010	1	Bracket-Battery Support
24	88-2170	1	Bracket-Belt
25	103480	1	Switch-Interlock

Ref. No.	Part No.	Qty.	Description
26	3296-29	2	Nut-Lock
27	106250	1	Cover-Dust
28	107951	1	Bracket-Fender Front
30	94-6338	2	Decal-Model 314-8
31	92-8946	1	Decal-Danger
32	111534	1	Decal-Shift Pattern
33	111960	1	Decal-PTO Clutch
34	79-2470	1	Decal-Back Plate
35	112168	1	Decal-Lift
36	111926	1	Decal-Elec System
37	119190	1	Decal-Lower Dash
38	111510	1	Decal-Parking Brake



Ref. No.	Part No.	Qty.	Description
1	94-3710	1	Mat-Foot RH
2	94-3712	1	Mat-Foot LH
3	3290-479	16	Fastener-Panel
4	518211	A/R	Bumper-Rubber
5	107069	6	Nut-Speed
6	113935	1	Cover-Side LH
7	9108372	2	Screw-Phcr
8	116000	6	Screw-CARR
9	94-3522	1	Footrest LH
10	7456	4	Clamp
11	3296-29	7	Nut-Lock
12	3230-1	1	Screw-CARR
13	106352	1	Guard-Lower Belt
14	108457	1	Nut-Push On
15	9266944	1	Screw-HH
16	94-3724-01	1	Belt Guard
17	94-3521	1	Footrest RH

4

3318-519




Gages, Throttle

Ref. No.	Part No.	Qty.	Description
1	9157404	2	Nut
2	120590	1	Stop-Throttle
3	9107562	2	Screw-Phcr
4	116723	1	Harness-P C Board
5	9157324	2	Nut-Lock
6	66-0120	1	Knob
7	9107922	2	Screw-Phcr
8	111343	5	Lens & Bushing ASM
9	112214	1	Control-Choke
10	62-7770	2	Key-Ignition
11	94-3723	1	Hourmeter
12	79-0060	1	Voltmeter
13	102138	1	ASM-Switch
14	116338	1	ASM-Switch
15	116796	1	Switch-Button
16	114825	1	Pc Board & Schematic
17	115854	1	Control-Throttle
18	9202624	1	Washer-Flat
19	3256-37	1	Washer-Flat
20	109530	1	Nut-Hex
21	9202594	1	Washer

Ref. No.	Part No.	Qty.	Description

Part Identified in illustration but not in part list are not used on this model

3318-519

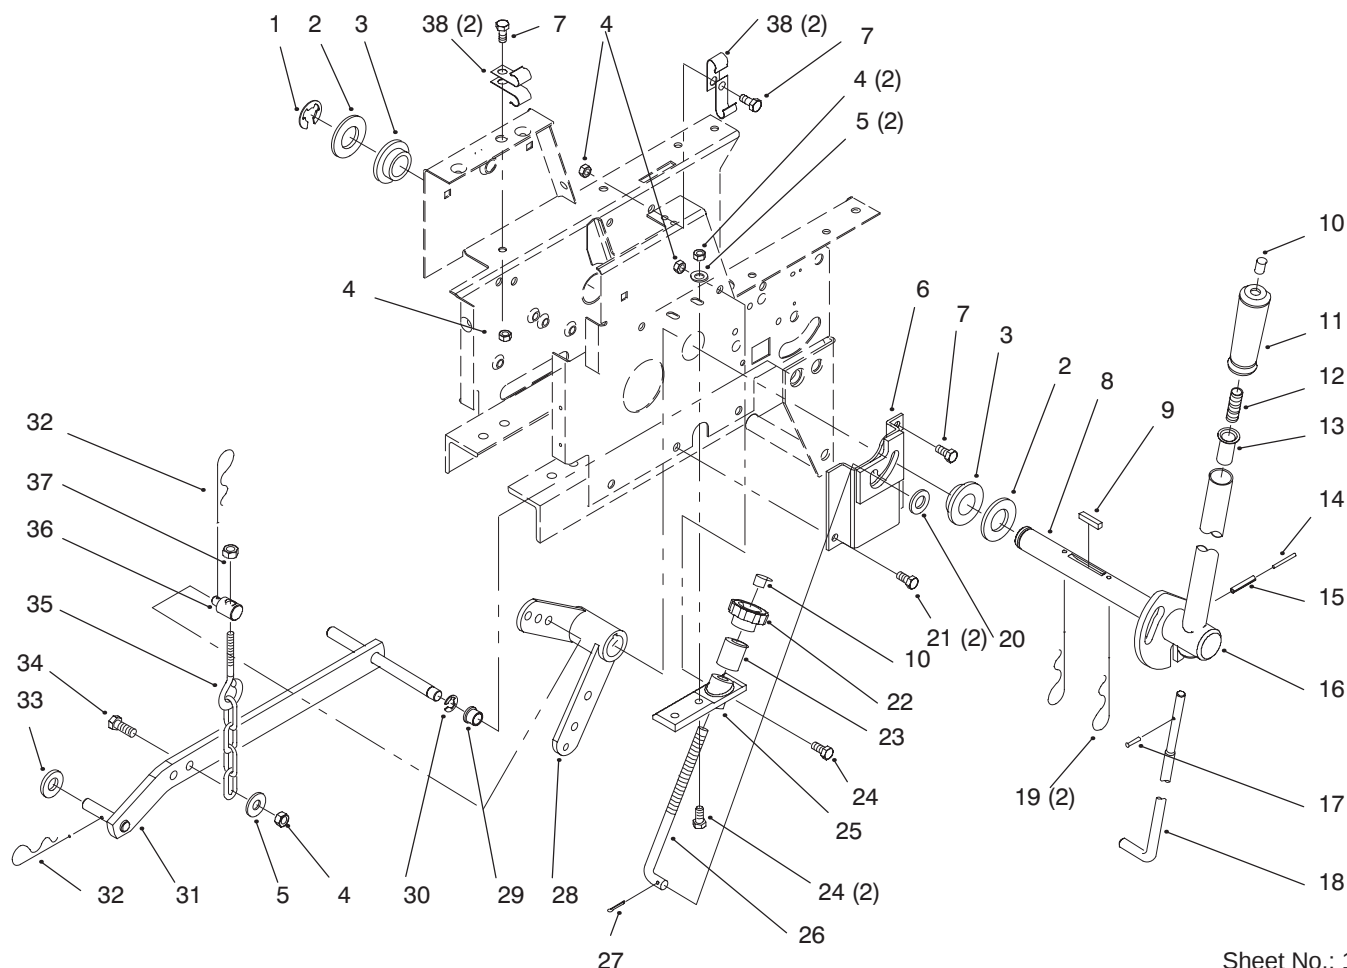


Sheet No.: 13

Manual Lift System

Ref. No.	Part No.	Qty.	Description
1	32151-91	1	Ring-Retaining
2	3256-62	2	Washer-Flat
3	106269	2	Bearing-Flange
4	3296-29	6	Nut-Lock
5	3256-23	3	Washer-Flat
6	106411	1	ASM-Lift Hgt Cont Bkt
7	9266944	1	Screw-HH
8	108565	1	Shaft-Lift Lever
9	1121	1	Key
10	105316	2	Cap-Rod
11	92-6710	1	Grip-Handle
12	3624	1	Spring-Compression
13	8130	1	Retainer-Spring
14	32121-103	1	Pin-Spring
15	32121-25	1	Pin-Roll
16	108563	1	ASM-Lift Lever
17	933148	1	Pin-Spirol
18	106257	1	Rod-Latch
19	9335074	2	Cotter-Hairpin
20	3256-5	1	Washer-Flat
21	9266964	2	Screw-HH
22	5280	1	Knob-Height Control
23	106258	1	Sleeve
24	322-5	3	Screw-HH
25	106345	1	Casting-Lift Lever

Ref. No.	Part No.	Qty.	Description
26	110653	1	Rod-Height Control
27	3272-10	1	Pin-Cotter
28	78-1550	1	Lift Lever
29	6229	1	Bearing
30	32120-47	1	Ring-Retaining
31	113445	1	ASM-Lift Bar
32	9335054	2	Hairpin
33	3256-25	1	Washer-Flat
34	322-6	1	Screw-HH
35	106522	1	Chain-Lift
36	6739	1	Trunnion
37	3296-39	1	Nut-Lock
38	8830	4	Retainer-"j"
39	322-2	2	Screw-HH

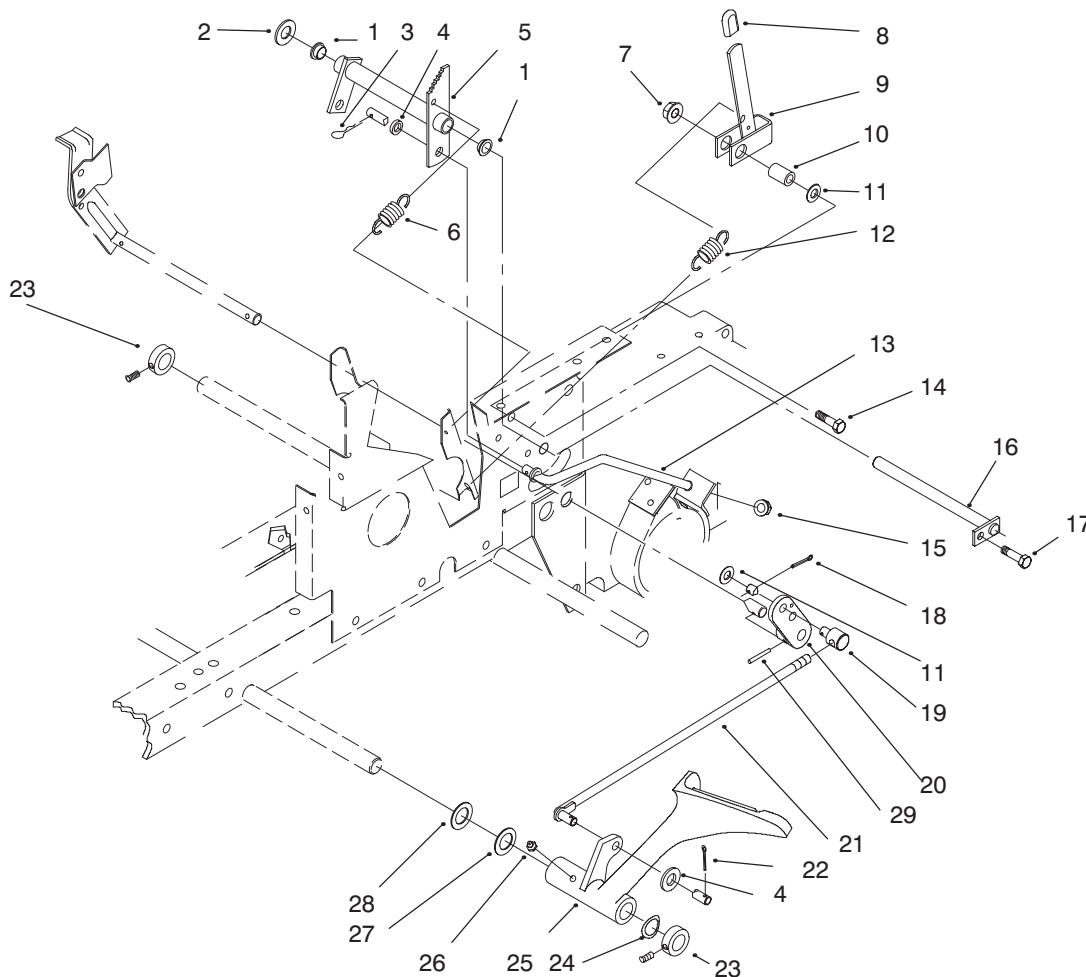

Sheet No.: 18

Clutch

Ref. No.	Part No.	Qty.	Description
1	7879	2	Bushing
2	3256-26	1	Washer-Flat
3	9335054	1	Hairpin
4	920248	2	Washer-Nylon
5	103543	1	ASM-Brake Bellcrank
6	103628	1	Spring-Extension
7	102809	1	Nut-Hex Lock
8	6820	1	Grip
9	106451	1	ASM-Parking Brake
10	102025	1	Spacer
11	3256-24	2	Washer-Flat
12	107677	1	Spring-Extension
13	105900	1	Rod-Brake Rear
14	323-9	1	Screw-HH
15	3296-39	1	Nut-Lock
16	106417	1	ASM-Rod
17	9266944	1	Screw-HH
18	3272-6	1	Pin-Cotter
19	101161	1	Trunion
20	105896	1	Arm-Clutch Rod
21	103347	1	Rod-Clutch
22	3272-10	1	Pin-Cotter
23	111383	2	Collar W/Set Screw
24	7896	1	Washer-Bowed
25	94-3703	1	Pedal-Clutch
26	302-5	1	Fitting-Grease


Ref. No.	Part No.	Qty.	Description
27	1278	1	Washer-Shim
28	9202254	1	Washer-Special
29	933190	1	Pin-Spring
30	108035	A/R	Spring-Clutch

3318-519



Ref. No.	Part No.	Qty.	Description
1	93-9808	1	V-Belt Single
2	106193	1	Screw-HH
3	7451	1	Pulley-V
4	3296-42	2	Nut-Lock
5	78-2970	1	ASM-Clutch Idler Arm
6	32146-2	1	Nut-Lock
7	321-31	1	Screw-HH
8	3765	1	Washer-Shim
14	78-3250	1	Spacer-Shoulder
15	92-6849	1	Rod-Brake Front
16	112841	1	Cap-
17	111242	1	Wire-Belt Guide
18	3256-25	1	Washer-Flat
19	3253-6	1	Washer-Lock
20	324-5	1	Screw-HH
21	94-3706	1	Pedal-Brake
22	302-5	1	Fitting-Grease
23	111383	1	Collar W/Set Screw
24	3272-10	2	Pin-Cotter
25	920248	1	Washer-Nylon
26	78-3240	1	Absorber-Gas Spring
27	321-9	1	Screw-HH
28	3256-22	1	Washer-Flat
29	78-3260	1	Spacer-Shoulder
30	933267	1	Pin-Spring

8

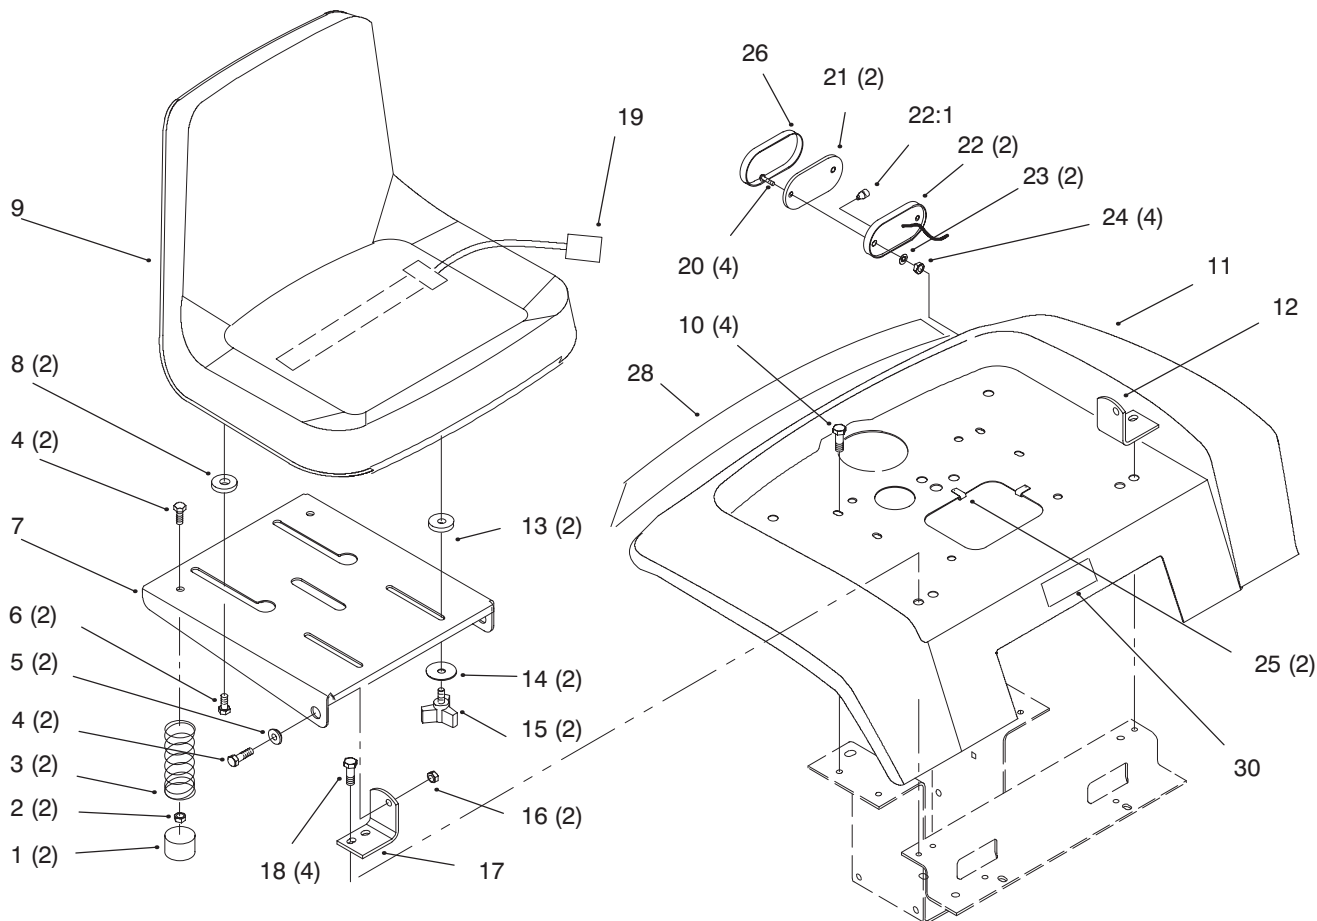

Sheet No.: 20


Fender, Seat

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	3296-58	2	Nut-Flange
3	92-7054	2	Spring-Compression
4	322-5	4	Screw-HH
5	105503	2	Bushing
6	92-6986	2	Bolt-Shoulder
7	92-6972-03	1	Support-Seat
8	92-6750	2	Spacer-Nylon
9	92-6511	1	Seat
10	9266944	4	Screw-HH
11	94-3722-01	1	Fender
12	79-0970-03	1	Bracket-Pivot LH
13	109989	2	Spacer
14	94-2869	2	Washer-Flat
15	700806	2	Knob
16	3296-29	2	Nut-Lock
17	79-0950-03	1	Bracket-Pivot RH
18	9266974	4	Screw-HH
19	38-1420	1	Switch-Seat
20	3250-31	4	Screw-Phcr
22	105202	2	Base-Light
23	3254-1	4	Washer-Lock
24	3296-27	4	Nut-Lock
25	3023	2	Clip
26	112564	2	Lens-Light
28	94-6334	1	Decal-Rear Fender

Ref. No.	Part No.	Qty.	Description
30	94-6331	1	Decal-Wheelhorse USA

Part Identified in illustration but not in part list are not used on this model

3318-519

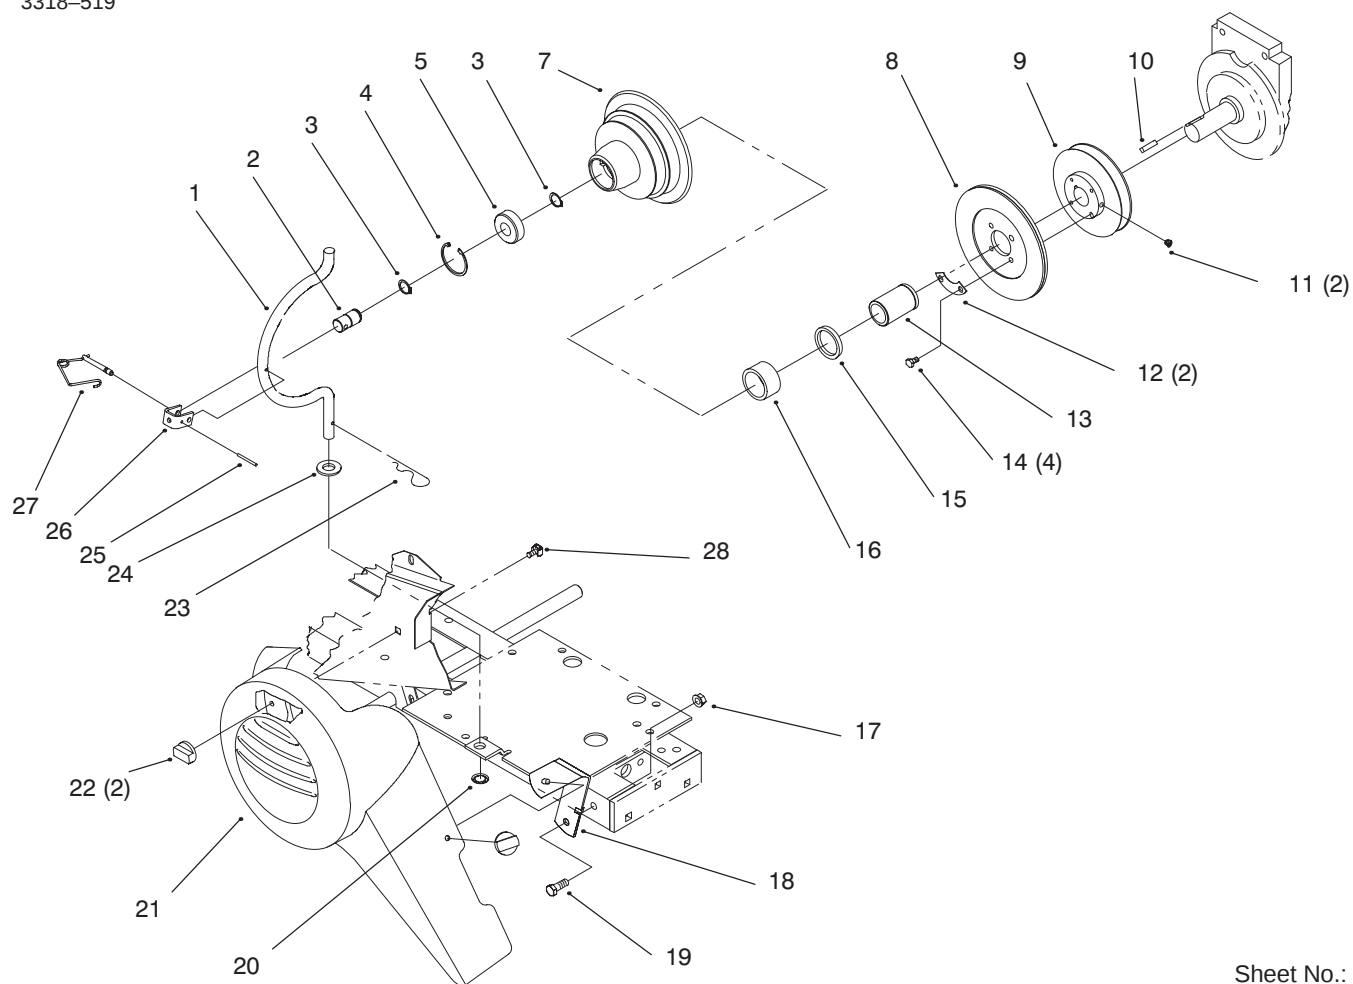

Sheet No.: 22

PTO Clutch Pulley

Ref. No.	Part No.	Qty.	Description
1	113108	1	Rod-PTO Housing
2	102872	1	Shaft-PTO
3	32120-72	2	Ring-Retaining
4	32120-62	1	Ring-Retain
5	109842	1	Bearing-Ball
7	103478	1	Housing-Clutch
8	114881	A/R	ASM-PTO Clutch Plate
8	94-6650	1	ASM-Plate
9	7466	1	Pulley-Engine
10	105453	1	Key-Sq
11	3246-2	2	Screw-HSH Set
12	6659	2	Retainer
13	6658	1	Race-Bearing
14	9080026	4	Screw-Lock
15	6663	1	Seal-Oil
16	6662	1	Bearing-Needle
17	32128-40	1	Nut-Lock
18	94-3726	1	Bracket
19	323-6	1	Screw-HH
20	106695	1	Ring-Push On
21	94-3704	1	Belt Cover-PTO
22	94-3735	2	Nut-Wing
23	9335064	1	Hairpin
24	3256-27	1	Washer-Flat
25	933274	1	Pin-Spirol

Ref. No.	Part No.	Qty.	Description
26	113107	1	Clevis
27	111314	1	ASM-Pin
28	94-3729	1	Retainer-Bolt


3318-519



PTO Clutch Linkage

Ref. No.	Part No.	Qty.	Description
1	94-3727	1	Knob
2	94-3701	1	PTO Clutch Lever
3	32151-11	1	Ring-Grip
4	5666	1	Bushing-Nyliner
5	3272-10	3	Pin-Cotter
6	5983	1	Bushing
7	103125	1	Spring-Extension
8	3765	1	Washer-Shim
9	9335054	1	Hairpin
10	323-7	1	Screw-HH
11	110669	1	Plate-PTO
12	110656	1	Trunnion
13	111240	1	Bracket
14	3256-25	2	Washer-Flat
15	3253-6	2	Washer-Lock
16	324-5	2	Screw-HH
17	3296-39	1	Nut-Lock
18	104859	1	Spacer-Link
19	3229-25	2	Screw-CARR
20	110665	A/R	ASM-Bracket
20	94-6652	1	ASM-Brake
21	3256-22	2	Washer-Flat
22	3253-3	2	Washer-Lock
23	3218-1	2	Nut-Jam
24	111052	1	Rod-PTO Clutch

Ref. No.	Part No.	Qty.	Description

 

Engine

Ref. No.	Part No.	Qty.	Description
1	94-3739	1	Muffler
2	322-7	1	Screw-HH
3	3253-4	1	Washer-Lock
4	3256-23	1	Washer-Flat
5	6876	1	Spacer
6	3296-39	2	Nut-Lock
7	323-6	2	Screw-HH
8	3253-21	2	Washer-Spring Lock
9	323-8	2	Screw-HH
10	92-1532	1	Engine-14 Hp Kohler
11	106858	1	Clamp
12	94-3738	1	Shield-Heat
13	9103312	4	Screw
14	109910	1	Wire-Ground
15	3255-9	1	Washer-Lock

Ref. No.	Part No.	Qty.	Description

3318-519



Transmission

Ref. No.	Part No.	Qty.	Description
1	83-2710	1	Knob
2	110725	1	ASM-Rod
3	108758	1	Knob
4	101847	1	Dipstick
5	102703	1	Trans Nipple
6	92-8708	1	Trans ASM 8 Pin 8 Spd
7	321-3	2	Screw-HH
8	3253-3	2	Washer-Lock
9	9598	1	Plate-Stop
10	9593	1	Band-Brake
11	106719	1	Drum-Brake
12	2844	1	Washer-Flat
13	110234	1	Screw-HH
14	323-5	4	Screw-HH
15	3253-21	4	Washer-Spring Lock
16	3217-5	1	Nut-Hex
17	1239	1	Set Screw
18	937221	1	Key-Woodruff
19	106165	1	Pulley Trans
20	3242-2	1	Screw Set-SH
21	3577	1	Dust Cover
22	933184	1	Pin-Spirol
23	110727	1	ASM Shift Rod
24	94-1834	1	Decal-Unidrive

Ref. No.	Part No.	Qty.	Description




Ref. No.	Part No.	Qty.	Description
2	83-2720	10	Bolt-Lug
3		2	ASM-Wheel & Tire
3:1	111516	2	Wheel
3:2	116744	2	Tire
3:3	5108	2	Valve-Tire Tubeless
7	3272-17	2	Pin-Cotter
10	93-9800	2	ASM-Wheel & Tire
*	109500	1	Fitting-Grease
10:2	110513	2	Bearing-Ball
10:3	5108	1	Valve Tubeless Tire
10:4	117127	1	Tire
12	111951	2	Cap-Hub
13	111952	2	Washer-Hub Cap
14	1278	4	Washer-Shim
15	5210	2	Washer-Shim

14

Part Identified in illustration but not in part list are not used on this model

3318-519

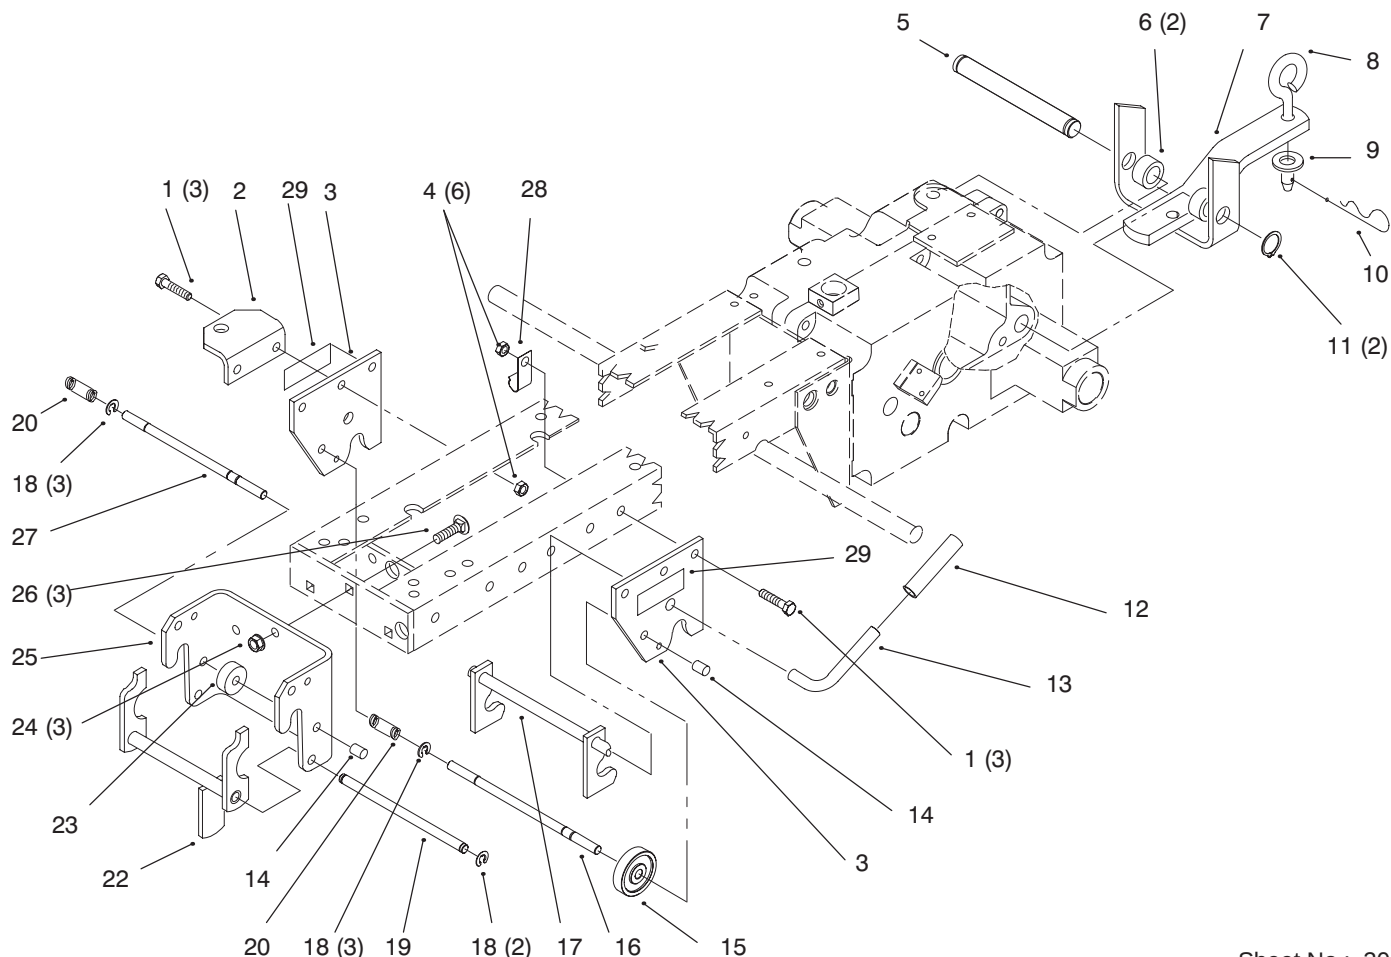

Sheet No.: 30

Hitches

Ref. No.	Part No.	Qty.	Description
1	323-44	6	Screw-HH
2	102870	1	Bracket-PTO Support
3	102644	2	Plate-Hitch
4	3296-39	6	Nut-Lock
5	105269	1	Pin-Drawbar Hitch
6	9791204	2	Spacer
7	1644	1	ASM-Drawbar Hitch
8	106634	1	Pin-Tool
9	3256-26	1	Washer-Flat
10	9335054	1	Hairpin
11	5618	2	Ring-Retaining
12	9038	1	Grip
14	105316	2	Cap-Rod
15	101017	1	Lock-Hitch
16	83-6520	1	Rod-Lock
17	117930	1	ASM-Latch
18	105797	8	Ring-Ext Ret
19	101750	1	Rod-Latch Pivot
20	8616	2	Spring
22	93-1613	1	Latch
23	101707	1	Lock-Attachment
24	3296-39	3	Nut-Lock
25	101711	1	Plate-Front Hitch
26	3231-25	3	Screw-CARR
27	101751	1	Rod-Lock

Ref. No.	Part No.	Qty.	Description
28	8830	1	Retainer-"J"
29	94-6330	2	Decal-Attach A Matic



Battery

Ref. No.	Part No.	Qty.	Description

3318-519



Ref. No.	Part No.	Qty.	Description
1	106234	1	ASM–Tank
7	55–3570	1	ASM–Cap
8	9266974	2	Screw–HH
9	3256–4	2	Washer–Flat
10	3235–22	2	Screw–HH Lock
11	8830	1	Retainer–"j"
12	108464	1	Support–Fuel Tank LH
13	3296–29	4	Nut–Lock
14	3253–4	2	Washer–Lock
15	322–2	2	Screw–HH
16	519337	1	Clip
17	322–3	4	Screw–HH
18	106236	1	Support–Fuel Tank RH
19	79–4990	1	Bracket–Fender Support
20	92–9511	1	Line–Fuel 62"
21	2412–98	2	Clamp–Hose

Ref. No.	Part No.	Qty.	Description


3318-519



Front Plate. Relays

Ref. No.	Part No.	Qty.	Description
1	9157324	2	Nut—Lock
2	115411	1	Bracket—Switch
3	111642	2	Barrier—Switch
4	111332	2	Switch—Interlock
5	9104784	2	Screw
6	9266714	1	Screw—HWHTF
8	9107944	2	Screw—Phcr
9	79—3590	1	Wiring—Harness & Dia
9:1	120930	1	Fuse Holder
10	3296—42	4	Nut—Lock
11	117331	1	Bracket—Fuse Holder
12	9157404	2	Nut
13	9601524	4	Screw
14	3217—5	2	Nut—Hex
15	92—9845	1	Solenoid
16	3255—7	2	Washer—Lock
17	116397	2	Relay
18	109554	1	Bracket—Belt Guard
19	321—3	2	Screw—HH
20	9266944	5	Screw—HH
21	8830	1	Retainer—"j"
22	78—3020	1	Plate—Front
23	111069	1	Cable—Battery

Ref. No.	Part No.	Qty.	Description

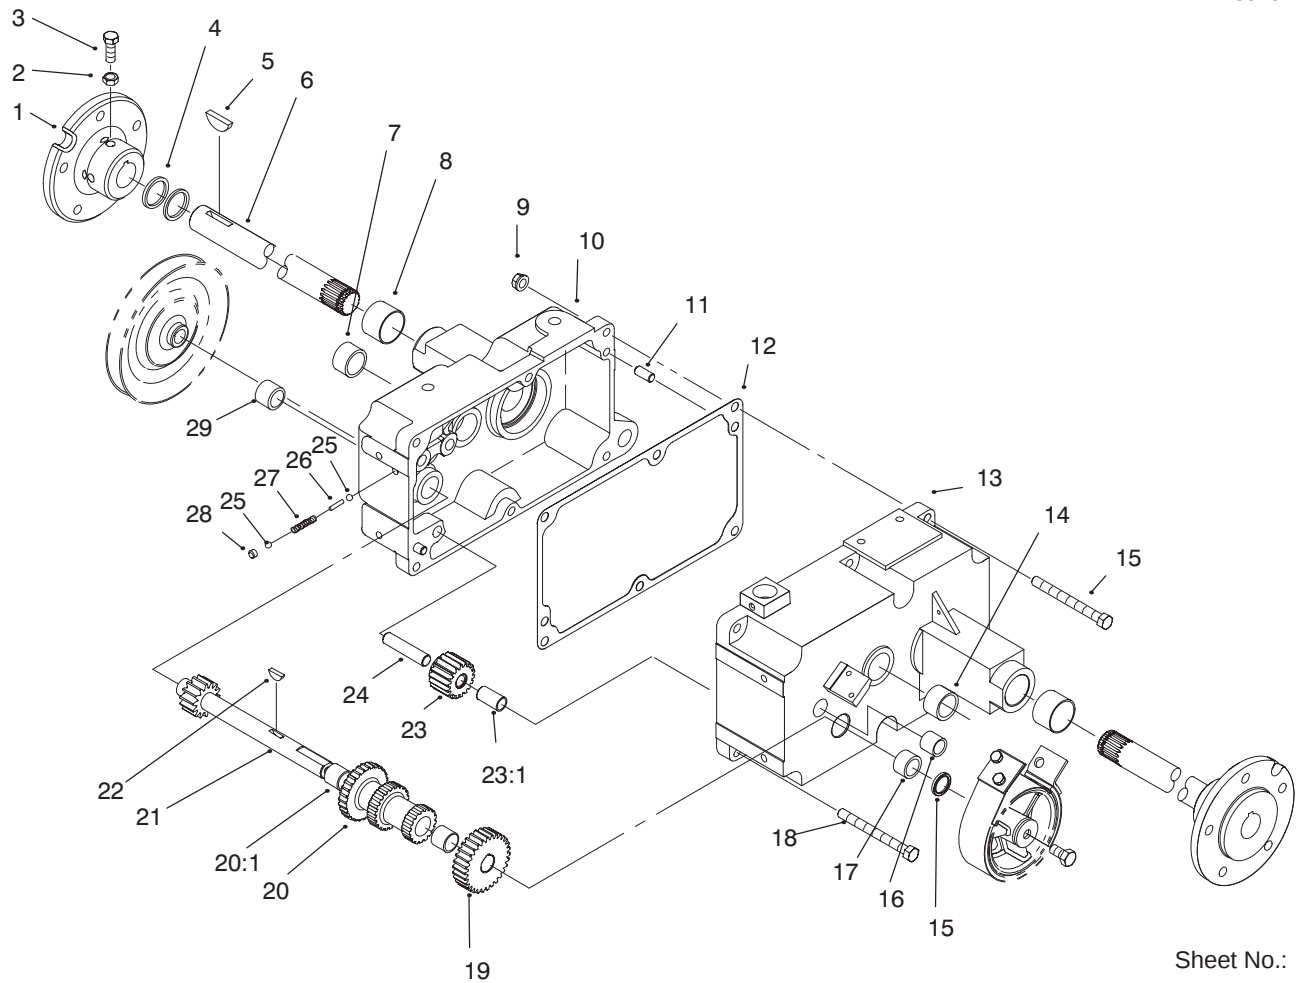


Sheet No.: 104

Transmission 8-Speed 8 Pinion

Ref. No.	Part No.	Qty.	Description
1	105763	2	Hub-Wheel
2	3218-3	4	Nut-HJ
3	3243-5	4	Screw-Set
4	100443	4	Oil Seal
5	937108	2	Woodruff Key
6	105875	2	Axle-Rear
7	1532	2	Bearing-Needle
8	9416	2	Bearing
9	3296-39	6	Nut-Lock
10	111200	1	Case Trans RH
11	3915	2	Dowel Pin
12	3912	1	Gasket Transmission
13	111198	1	Case Trans LH
14	323-16	1	Screw-HH
15	100441	1	Seal-Oil
16	323-11	5	Screw
16	83-2890	1	Bearing-Needle
17	1523	1	Needle Bearing
19	116636	1	ASM Shift Fork
19	3527	1	Gear Cluster Shaft
19:	7209	1	Fork ASM Shift
20	7269	1	ASM Cluster Gear
20:1	1504	2	Bushing Bronze
21	83-3530	1	Shaft-Cluster
23	4204	1	ASM-Reverse Idler Gear

Ref. No.	Part No.	Qty.	Description
23:1	1516	1	Bushing
23:	92-6649	1	Gear-Spur
24	3909	1	Differential Pin
26	5614	1	Shift Pin
27	106030	2	Spring-Shift Stop
28	1243	1	Plug Cup
29	1529	1	Bearing-Needle

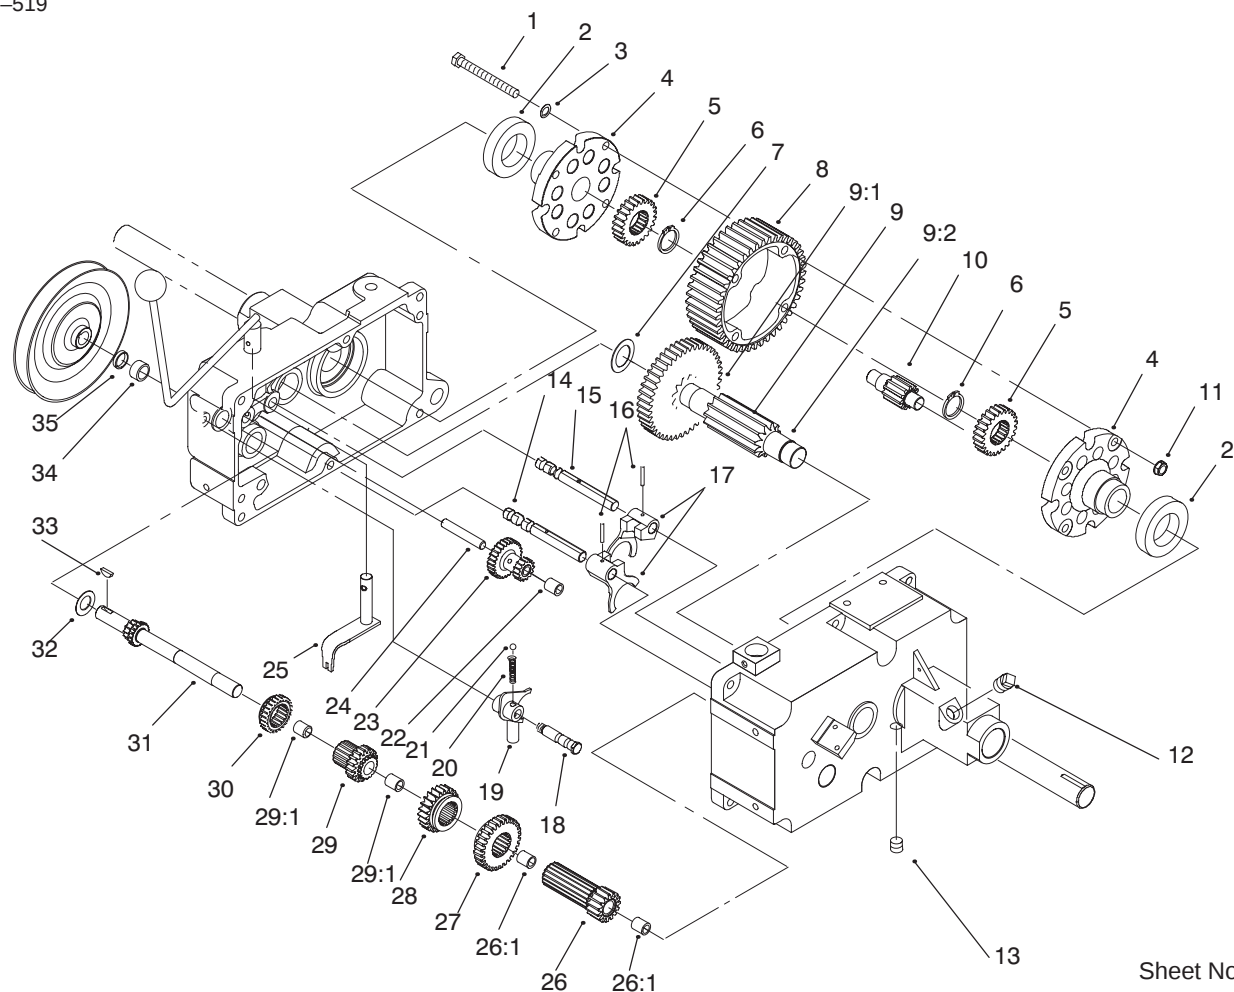


Sheet No.: 105

Transmission 8-Speed 8 Pinion (Continued)

Ref. No.	Part No.	Qty.	Description
1	911423	4	Bolt-Hex
2	111199	2	Bearing Ball
3	107374	4	Washer
4	111196	2	End Cap-Differential
5	101889	2	Axle Diff Gear
6	105876	2	Snap Ring
8	105061	1	Gear Diff Bull 43t
9	102974	1	Assy-Gear (Press)
9:9	101625	1	Pinion Shaft
9:9	101626	1	Gear-44t
10	101623	8	Pinion Gear 11t
11	108881	4	Nut-Hex
12	281-2	1	Plug-Pipe
13	281-10	1	Plug-Pipe
14	5615	1	Shift Rail
14	7208	1	Shaft Reduction Gear
15	5616	1	Shift Rail Rear
16	933156	2	Pin-Hd Spirol
17	3503	2	Shift Fork
18	7213	1	Bolt Detent
21	3517	3	Ball-Detent
22	7207	2	Needle Bearing
23	7206	1	Reduction Gear
24	7214	1	ASM Shift Lever
24:1	7215	1	Shift Lever
24:2	7216	1	Shaft Shift Lever

Ref. No.	Part No.	Qty.	Description
26	111099	1	Gear
26	5175	1	ASM Gear
26:1	1518	2	Needle Bearing
27	5174	1	Gear-Low And Reverse
28	5173	1	Gear-Hi And 2nd
29	111096	1	Gear
29	7204	1	ASM Gear
29:1	1518	2	Needle Bearing
31	7201	1	Input Shaft
32	7418	1	Washer
33	937089	1	Key-Woodruff
34	1542	1	Needle Bearing
35	100442	1	Oil Seal
56	7205	1	Sliding Gear

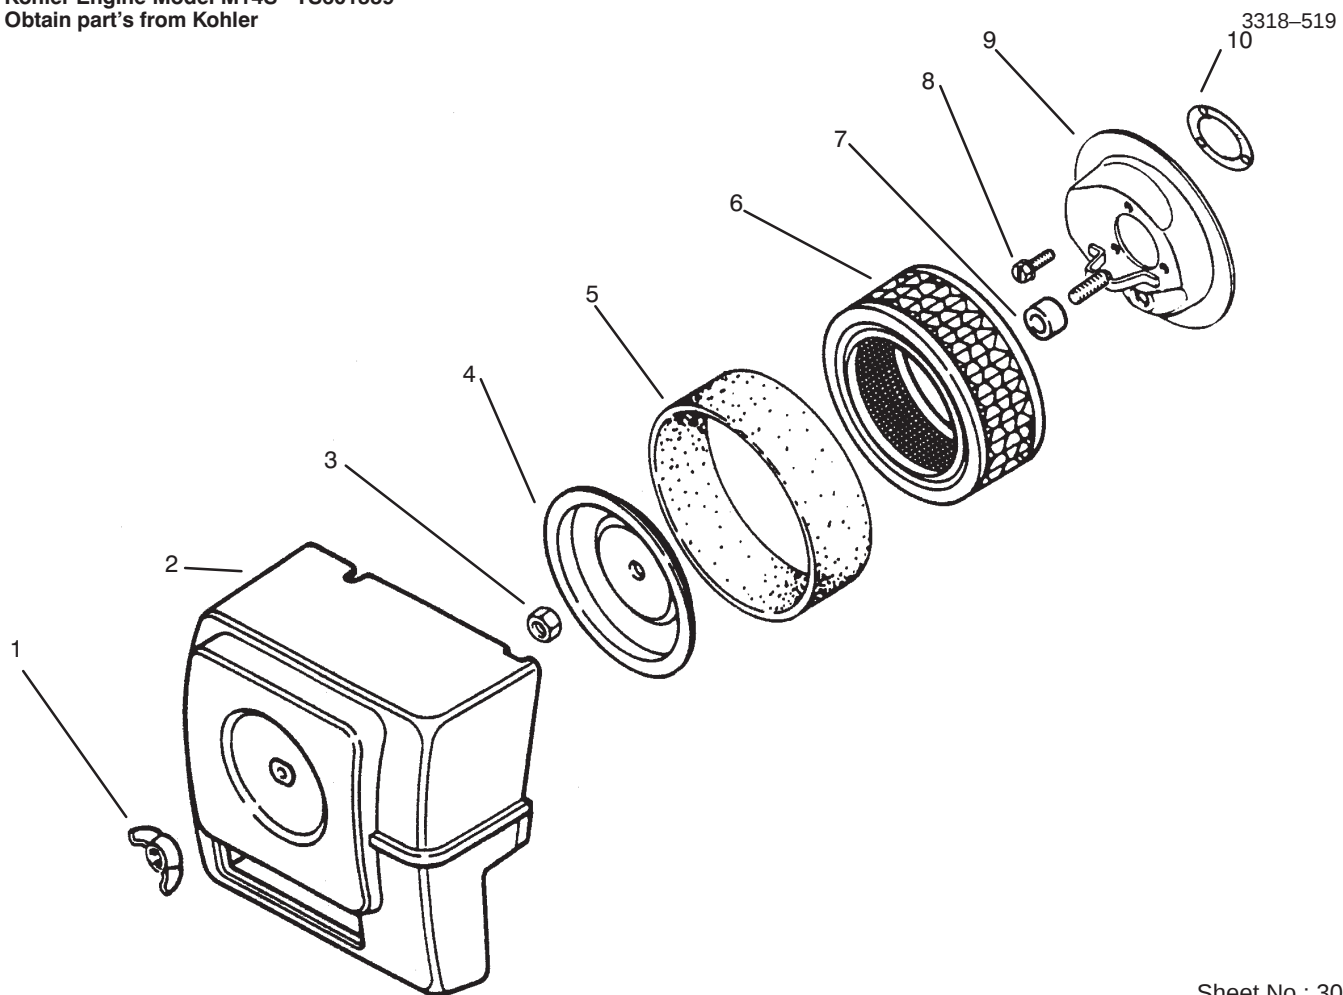

Sheet No.: 301

Air Cleaner


Ref. No.	Part No.	Qty.	Description
1	X-276-7	1	Nut-Wing
2	47-096-10	1	Cover
3	41-100-04	1	Nut
4	52-082-04	1	Cover-Air Clean Element
5	45-083-01	1	Element-Precleaner
6	45-083-02	1	Element
7	231032	1	Seal
8	X-67-65	3	Screw
9	47-094-20	1	Base-Air Cleaner
10	45-041-07	1	Gasket
	41-113-02	1	Decal-Air Cleaner

Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description
1	25-100-05	1	Screw
2	25-041-03	1	Gasket
3	25-104-01	1	Bowl-Fuel Incl Pin
4	25-757-09	1	Kit-Float Incl 5
6	254-041-04	1	Gasket
7	25-194-01	1	Ball
8	25-089-03	1	Spring
10	47-853-20	1	Carburetor ASM Incl 5-8
10	47-853-29	1	Carburetor Complete
12	14-144-25	1	Shaft Lever/Seal Incl 11
12	457-144-21	1	Shaft Lever & Seal
13	47-146-10	1	Plate-Throttle
14	25-086-27	4	Screw
15	25-368-01	1	Needle-Idle Fuel Adj
16	25-089-02	1	Spring-Idle Fuel
17	25-368-03	1	Main-Needle
18	25-089-04	1	Spring-Adj
19	25-086-26	1	Screw-Idle Speed Adj
20	47-090-38	1	Shaft-Choke
21	47-146-08	1	Plate-Choke

22

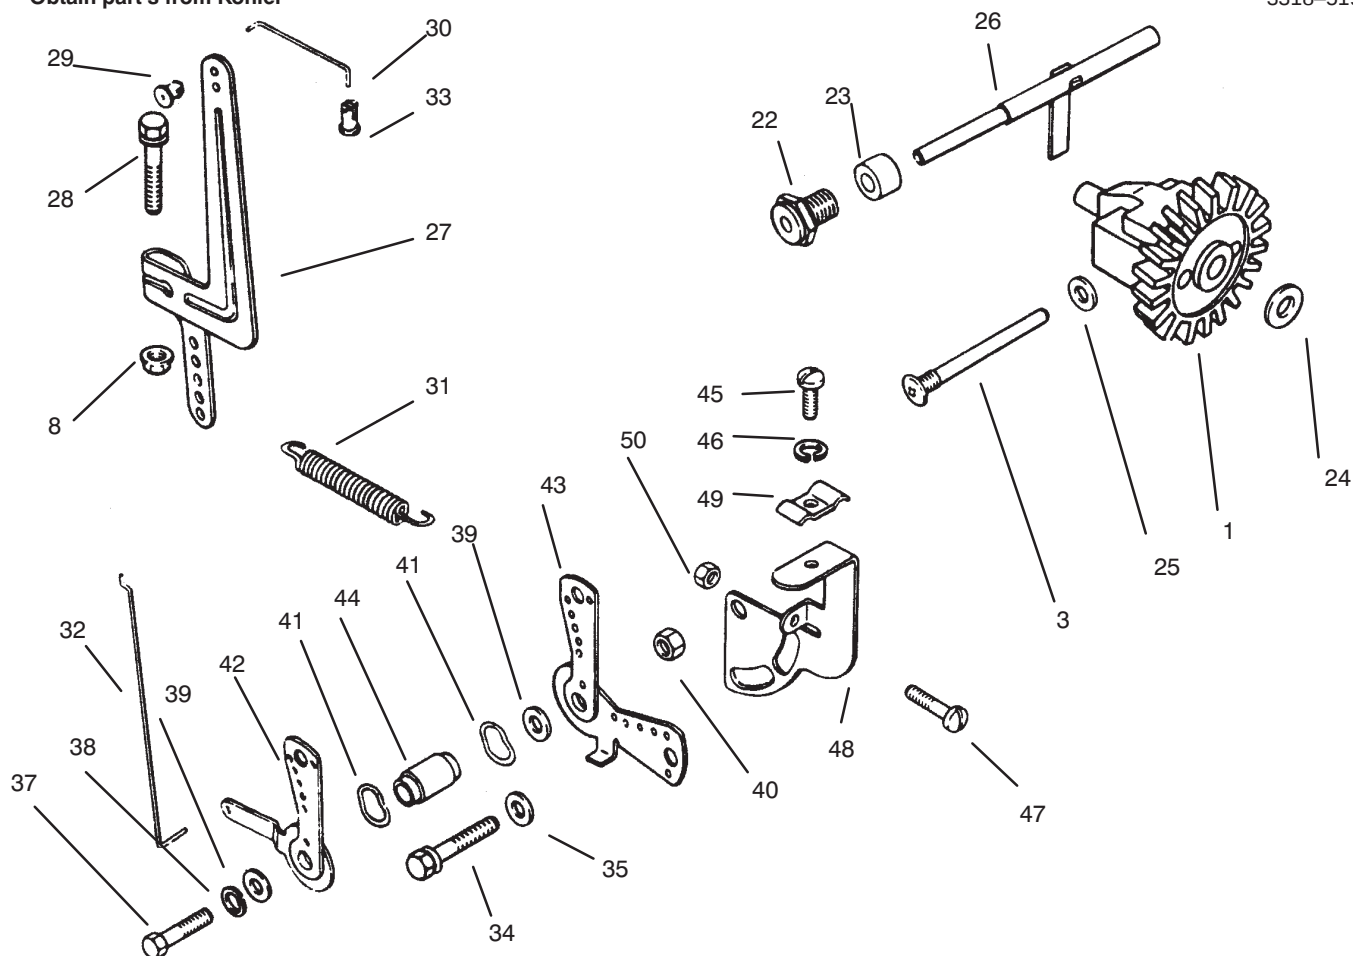

Sheet No.: 303

Governor Linkage


Ref. No.	Part No.	Qty.	Description
1	A-235743-5	1	Kit—Governor Gear INC 24
3	231355	1	Pin—Governor Stop
8	X-799-1	1	Nut—Pal
22	235476	1	Bushing
23	X-400-80	1	Spacer
24	237022	1	Washer
25	25-468-01	1	Washer
26	A-235256-S	1	Kit—Governor Cross Shaft
27	47-090-20	1	Lever—Governor
28	X-776-1	1	Screw
29	47-158-07	1	Bushing
30	47-079-10	1	Linkage
31	47-091-01	1	Spring
32	47-079-01	1	Linkage—Choke
33	25-158-09	1	Bushing
33	25-158-11	1	Bushing
34	X-132-6	1	Screw
35	X-25-72	1	Washer
37	X-5-26	1	Screw
38	X-20-1	1	Washer—Lock
39	X-25-63	1	Washer—Flat
40	X-76-2	1	Nut
41	275690	2	Washer
42	47-090-07	1	Lever—Choke Control

Ref. No.	Part No.	Qty.	Description
43	47-090-08	1	Lever—Throttle Control
44	47-112-02	1	Spacer
45	X-67-51	1	Screw
46	25-468-04	1	Washer
47	232556	1	Screw
48	47-126-09	1	Bracket—Clutch Contro;
49	47-237-02	1	Clamp
50	X-72-4	1	Nut
	47-087-03	1	Choke Lver ASM INC 37-44



Ref. No.	Part No.	Qty.	Description
1	25-353-01	1	Line-Fuel
2	X-426-9	2	Clamp-Hose
3	25-155-02	2	Connector-90 DEG
4	47-559-08	1	Pump ASM-Fuel INC 5 & 7
5	25-041-05	1	Gasket
6	X-25-63	2	Washer-Flat
7	X-174-2	2	Screw-Pozidrive

 24




Ref. No.	Part No.	Qty.	Description
1	52-086-11	6	Screw-Hex Hd
2	47-086-06	1	Baffle-Side Air
3	45-063-08	1	Baffle-Head
4	X-25-53	1	Washer
5	47-086-08	3	Screw-Pozidrive TH
6	47-063-10	1	Baffle-Cylinder
7	47-063-07	1	Baffle-Inner
8	47-027-42	1	Housing-Blower
9	47-113-36	1	Decal-14hp

Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description
1	236765	1	Gasket
2	235631	1	Plate
3	235047	1	Reed
4	270146	1	Baffle
5	47-050-01	1	Filter
6	231032	1	Seal
7	275144	1	Gasket
8	47-096-01	1	Cover
9	275220	1	Stud
10	X-799-1	1	Nut-Pal
11	47-326-03	1	Hose

Ref. No.	Part No.	Qty.	Description

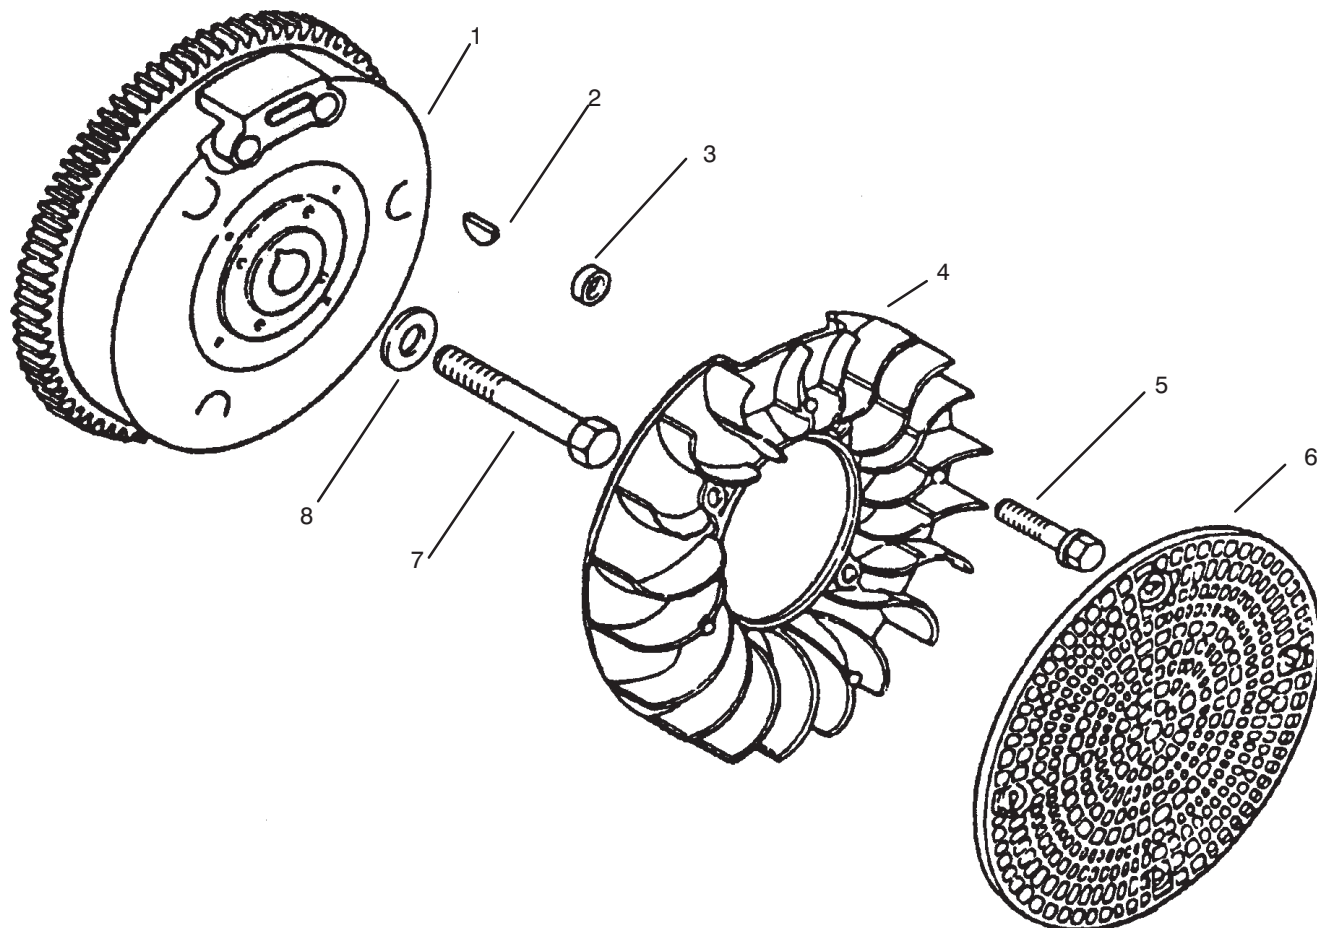


Flywheel

Ref. No.	Part No.	Qty.	Description
1	47-025-53	1	Flywheel
2	X-46-3	1	Key-Woodruff
3	41-100-01	1	Spacer
4	25-157-01	1	Fan
5	25-086-21	4	Screw-Hex Hd
6	24-162-01	1	Screen
7	25-086-24	1	Screw
8	52-468-15	1	Washer



Ref. No.	Part No.	Qty.	Description
1	47-584-02	1	Module-Ignition
2	X-25-79	2	Washer
3	X-156-1	2	Screw
4	X-67-59	1	Screw-Hex Hd
5	X-728-1	1	Clip-Kill Lead
6	X-67-83	1	Screw
7	X-25-72	1	Washer
8	255173	1	Clip
9	237878	1	Kit-Starter 15amp INC 8
10	X-67-51	4	Screw
11	48-155-01	1	Connector
12	8830	1	Retainer-"j"
13	321-2	1	Screw-HH
14	25-755-03	2	Regulator-Recifier
14	41-403-05	2	Regulator-Recifier
15	X-132-4	2	Screw
15	X-132-5	2	Screw
16	236602	1	Connector-Regulator
17	235041-2	1	Plug-Spark
18	210281	1	Clip-Hi Tension
	47-518-36	1	Lead-Regulator
	47-518-43	1	Lead Wire

28

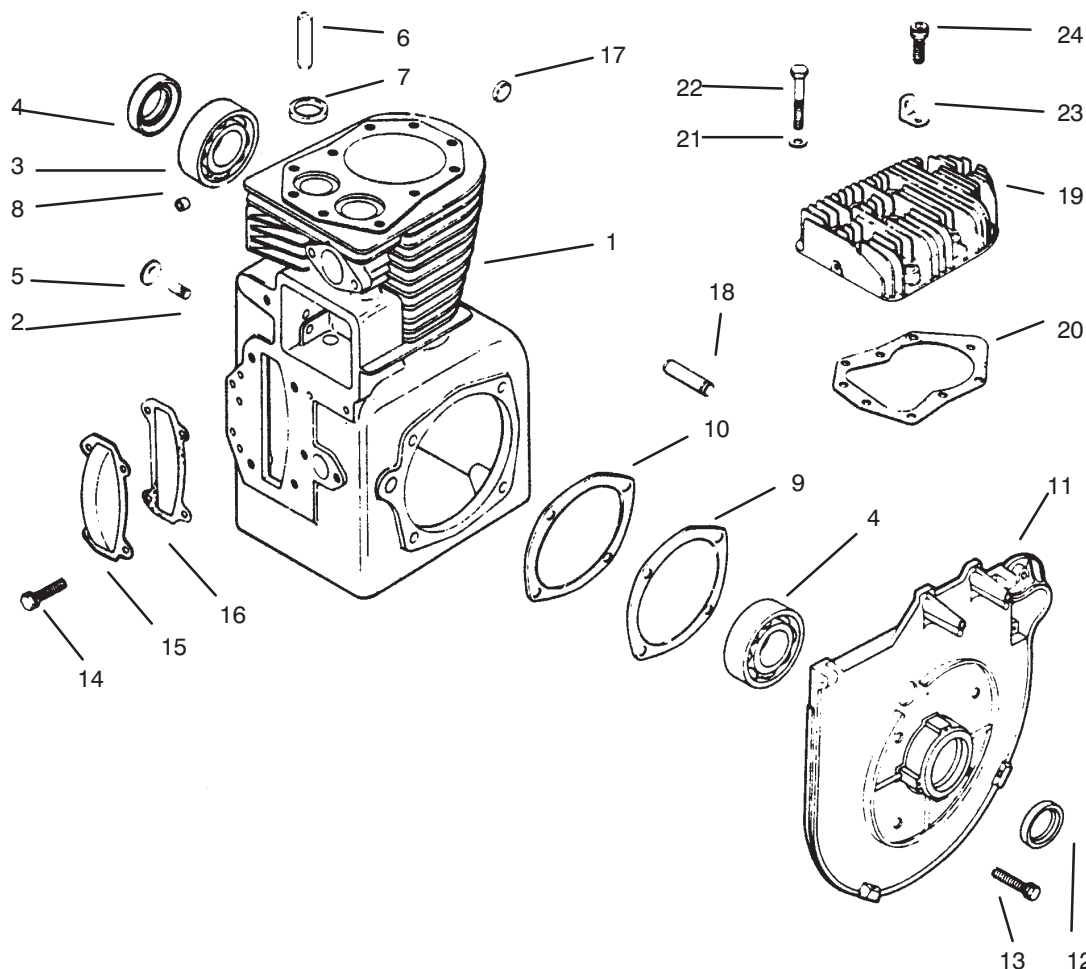

Sheet No.: 309

Crankcase And Cylinder Head

Ref. No.	Part No.	Qty.	Description
1	47—782—67	1	Short Block 14hp
1	47—782—80	1	Miniblock W/Out Crank
2	235125—S	1	Shaft—Governor Gear 14hp
3	235376	2	Ball Bearing
4	47—032—07	1	Seal
5	X—230—11	1	Plug
6	235007—s	2	Guide—Valve 14hp
7	230265	1	Insert—Exh Valve 14hp
8	234866	1	Bearing
9	47—041—09	1	Gasket
10	47—522—05	1	Gasket
11	47—146—11	1	Plate—Bearing
12	47—032—06	1	Seal
13	X—159—2	4	Screw
14	X—132—6	4	Screw
15	235026	1	Cover
16	235025	1	Gasket
18	236559	1	Shaft—Balance Gear
19	47—015—06	1	Head—Cylinder
20	47—041—15	1	Gasket
21	270889	9	Washer
22	270158	8	Screw
23	47—455—02	1	Strap—Lifting
24	47—086—17	1	Screw

Ref. No.	Part No.	Qty.	Description
	47—004—02	1	Set—Gasket W/o Seals
	47—755—27	1	Set—Gasket W/Seals



Ref. No.	Part No.	Qty.	Description
1	47-010-11	1	Camshaft ASM INC 2
2	47-089-01	1	Spring
3	275066	1	Spacer .005
4	47-380-09	1	Pin-Camshaft
5	237672	1	Valve-Exhaust
6	235582	1	Valve-Intake
7	235011	2	Retainer-Spring
8	235010	1	Spring
10	41-755-10	2	Kit-Retainer
12	D-235327	2	Tappet-Valve
13	52-413-01	2	Rotator-Valve
14	235168	1	Spring
15	X-702-3	1	Plug-Cup
16	45-142-21	1	Kit-Crankshaft
19	47-755-01	2	Kit-Spacer
20	X-269-34	1	Retainer
	275067	1	Spacer .010

30



Ref. No.	Part No.	Qty.	Description
1	47-108-05	1	Set-Ring STD .003 14hp
*	47-108-06	1	Set-Ring .010
*	47-108-07	1	Set-Ring .020
*	47-108-08	1	Set-Ring .030
2	47-874-21	1	Piston-Ring Set STD 14hp
*	47-874-22	1	Piston-Ring Set .003
*	47-874-23	1	Piston-Ring Set .010
*	47-874-24	1	Piston-Ring Set .020
*	47-874-25	1	Piston-Ring Set .030
3	47-018-01	2	Retainer-Piston Pin
4	45-067-24	1	Rod-Connecting STD
*	25-468-04	1	Rod-Connecting .010

Ref. No.	Part No.	Qty.	Description

31




Ref. No.	Part No.	Qty.	Description
1	47-038-27	1	Dipstick
2	41-153-01	1	O-Ring
4	47-029-06	1	Adapter-Oil Fill
5	X-131-2	3	Screw
6	237064	1	Gasket
7	45-199-05	1	Pan-Oil
8	235057	1	Gasket
9	X-159-3	4	Screw
10	X-75-10	4	Plug-SH 3/8 NPTF
11	25-704-04	1	Kit-Float Switch
12	25-431-02	1	Sleeve
	25-113-05	1	Decal-Float Switch
	48-155-01	1	Connector

Ref. No.	Part No.	Qty.	Description




Ref. No.	Part No.	Qty.	Description
1	41-098-04	1	Starter ASM INC 9-13
2	45-126-17	1	Brace-Starter Tail
3	X-67-62	1	Screw-Hex Hd
4	X-67-83	1	Screw
5	47-126-29	1	Bracket-Solenoid
6	X-159-2	2	Screw
7	41-086-19	2	Bolt
8	41-227-04	1	End Cap ASM-INC 9
9	52-755-15	1	Kit-Brush
10	47-170-02	1	Armature
11	41-227-03	1	Cap-Drive End
12	47-755-07	1	Kit-Drive INC 13
13	7-755-13	1	Kit-Drive Parts
	47-126-29	1	Bracket-Solenoid
	X-159-2	1	Screw

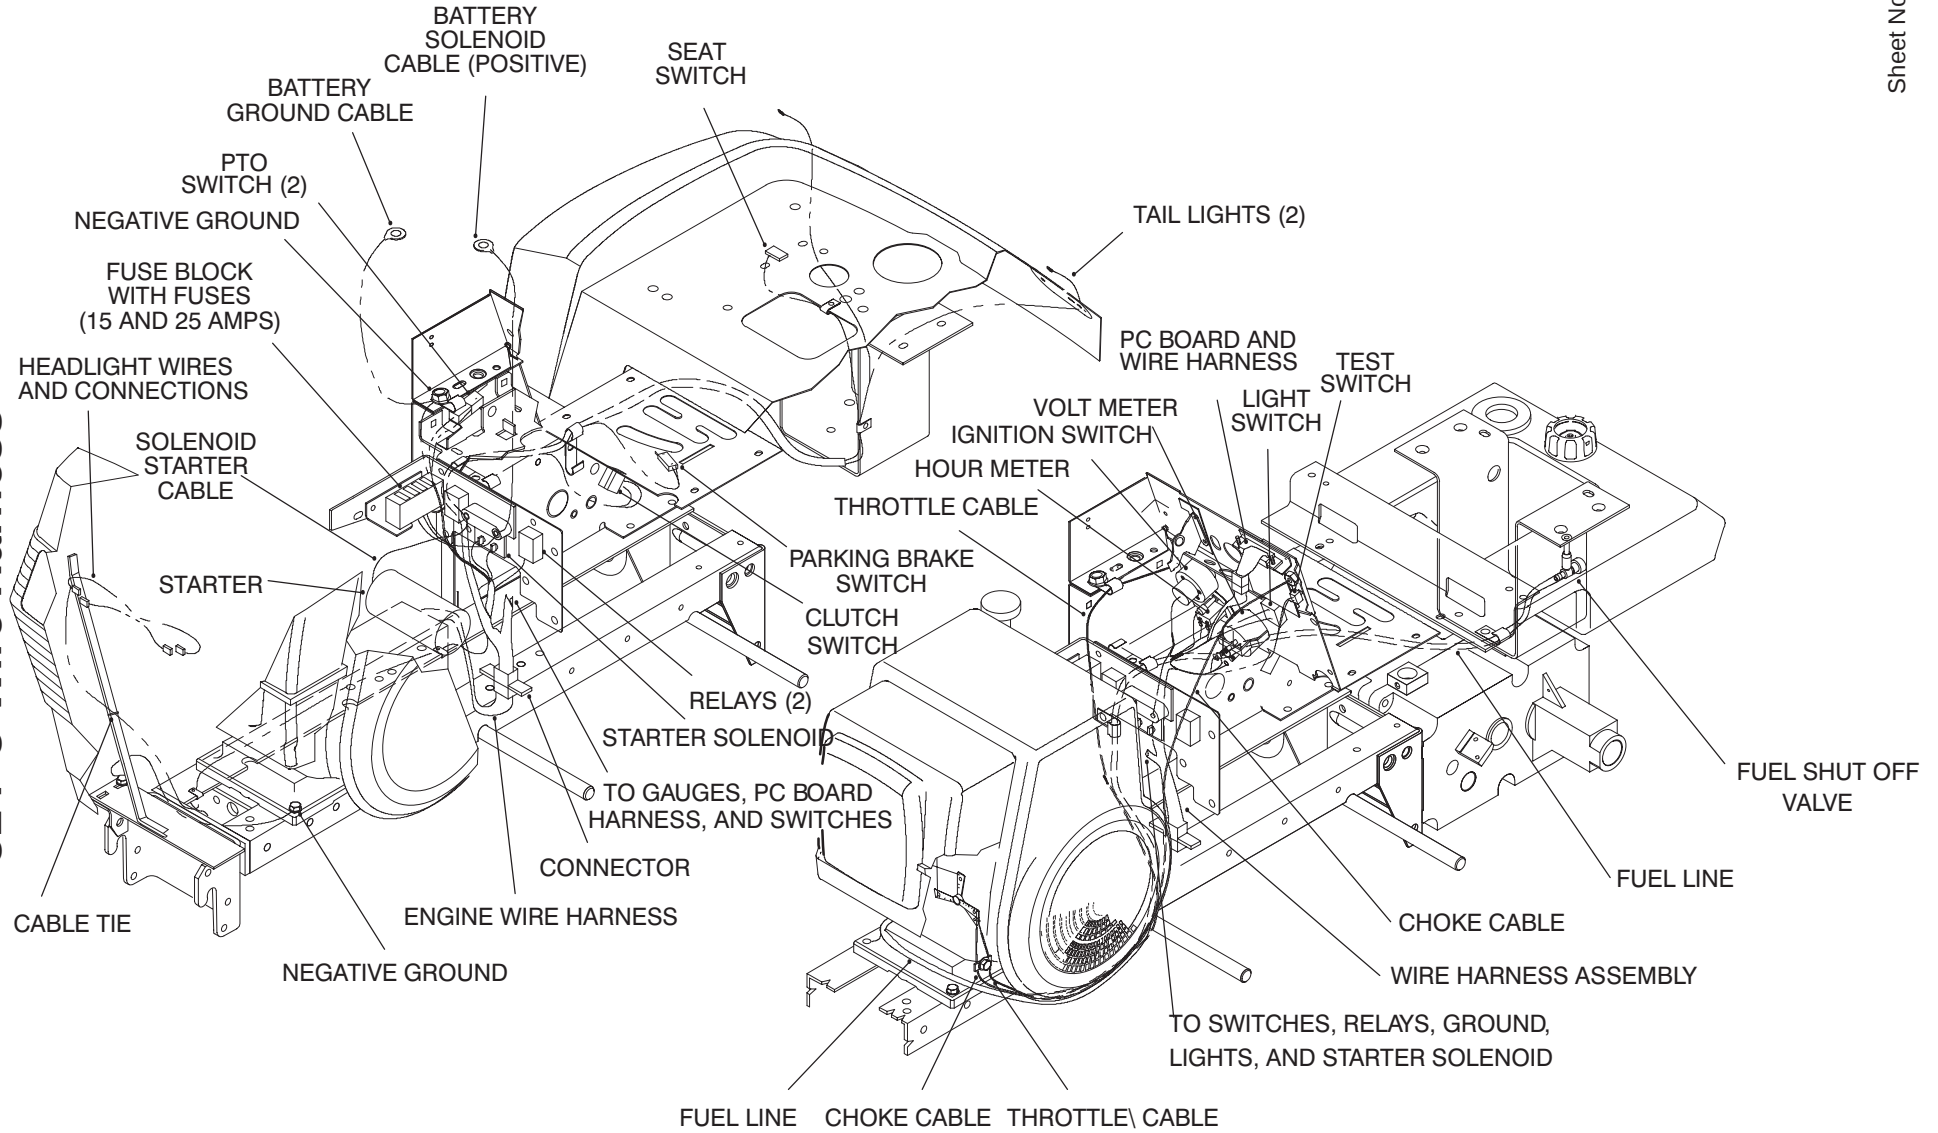

314-8 WIRE HARNESS, CABLE, AND TUBE ROUTING SINGLE CYLINDER

314-8 Wire Harness

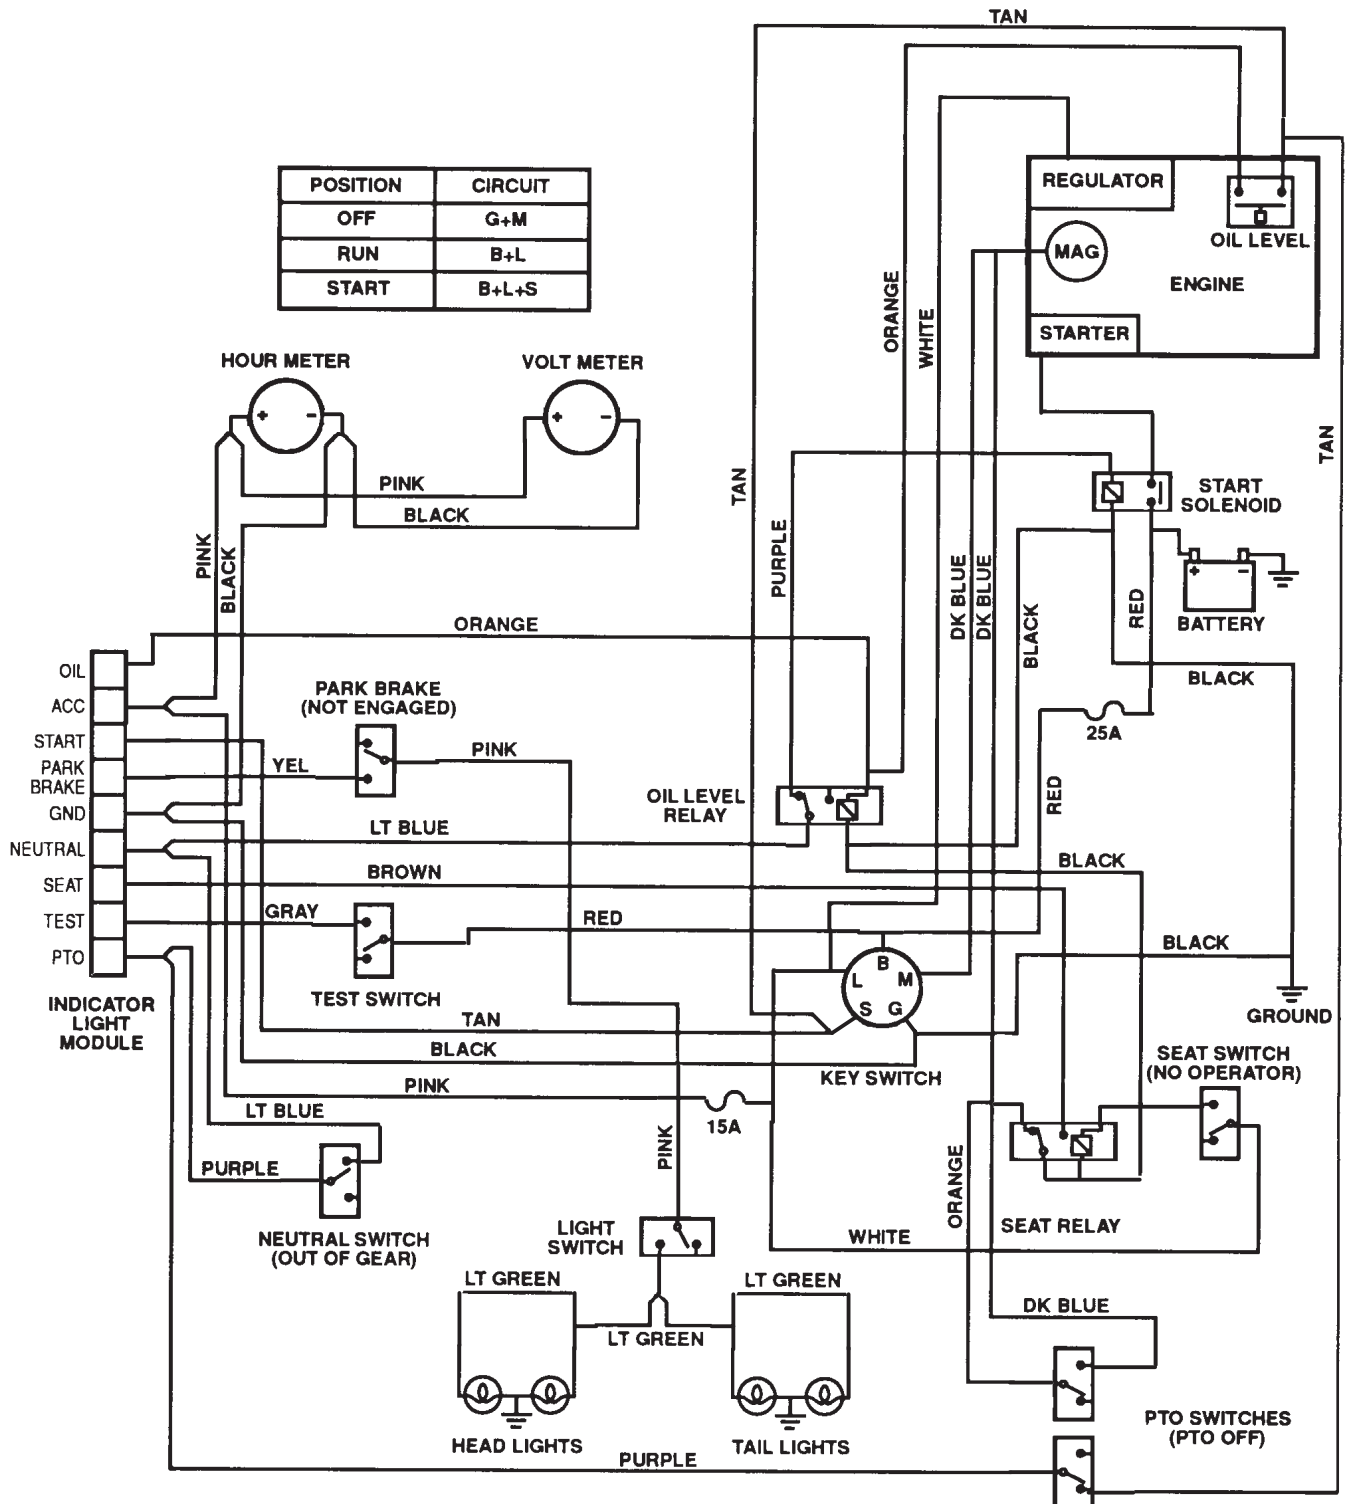

1142

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1121	6	9	1	Key
1239	13	17	1	Set Screw
1243	19	28	1	Plug Cup
1278	2	9	3	Washer—Shim
1278	7	27	1	Washer—Shim
1278	14	14	4	Washer—Shim
1481	2	7	2	Fitting—Grease
1504	19	20:1	2	Bushing Bronze
1516	19	23:1	1	Bushing
1518	20	26:1	2	Needle Bearing
1518	20	29:1	2	Needle Bearing
1523	19	17	1	Needle Bearing
1529	19	29	1	Bearing—Needle
1532	19	7	2	Bearing—Needle
1542	20	34	1	Needle Bearing
1644	15	7	1	ASM—Drawbar Hitch
2844	13	12	1	Washer—Flat
3023	9	25	2	Clip
3503	20	17	2	Shift Fork
3517	20	21	3	Ball—Detent
3527	19	19	1	Gear Cluster Shaft
3577	13	21	1	Dust Cover
3624	6	12	1	Spring—Compression
3765	8	8	1	Washer—Shim
3765	11	8	1	Washer—Shim
3909	19	24	1	Differential Pin
3912	19	12	1	Gasket Transmission
3915	19	11	2	Dowel Pin
4204	19	23	1	ASM—Reverse Idler Gear
5108	14	3:3	2	Valve—Tire Tubeless
5173	20	28	1	Gear—Hi And 2nd
5174	20	27	1	Gear—Low And Reverse
5175	20	26	1	ASM Gear
5210	2	17	14	Washer—Shim
5210	14	15	2	Washer—Shim
5280	6	22	1	Knob—Height Control
5614	19	26	1	Shift Pin
5615	20	14	1	Shift Rail
5616	20	15	1	Shift Rail Rear
5618	2	30	1	Ring—Retaining
5618	15	11	2	Ring—Retaining
5638	2	27	1	Axle—Front
5666	11	4	1	Bushing—Nyliner
5979	1	17	2	Bushing—Nyliner
5983	11	6	1	Bushing
6216	2	26	1	Pin
6229	6	29	1	Bearing
6397	2	8	1	Bearing—Bronze
6472	2	1	1	Bearing—Flanged
6658	10	13	1	Race—Bearing
6659	10	12	2	Retainer
6662	10	16	1	Bearing—Needle
6663	10	15	1	Seal—Oil
6739	6	36	1	Trunnion
6820	7	8	1	Grip
6876	12	5	1	Spacer
7201	20	31	1	Input Shaft
7204	20	29	1	ASM Gear
7205	20	56	1	Sliding Gear
7206	20	23	1	Reduction Gear
7207	20	22	2	Needle Bearing
7208	20	14	1	Shaft Reduction Gear

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
7209	19	19:	1	Fork ASM Shift
7213	20	18	1	Bolt Detent
7214	20	24	1	ASM Shift Lever
7215	20	24:1	1	Shift Lever
7216	20	24:2	1	Shaft Shift Lever
7269	19	20	1	ASM Cluster Gear
7418	20	32	1	Washer Thr
7451	8	3	1	Pulley—V
7456	4	10	4	Clamp
7466	10	9	1	Pulley—Engine
7879	7	1	2	Bushing
7896	2	12	1	Washer—Bowed
7896	7	24	1	Washer—Bowed
8130	6	13	1	Retainer—Spring
8519	2	35	2	Clip—Wire
8616	15	20	2	Spring
8830	6	38	4	Retainer—"J"
8830	15	28	1	Retainer—"J"
8830	17	11	1	Retainer—"J"
8830	18	21	1	Retainer—"J"
9038	15	12	1	Grip
9416	19	8	2	Bearing
9593	13	10	1	Band—Brake
9598	13	9	1	Plate—Stop
100441	19	15	1	Seal—Oil
100442	20	35	1	Oil Seal
100443	19	4	4	Oil Seal
101017	15	15	1	Lock—Hitch
101161	7	19	1	Trunion
101623	20	10	8	Pinion Gear 11t
101625	20	9:9	1	Pinion Shaft
101626	20	9:9	1	Gear—44t
101707	15	23	1	Lock—Attachment
101711	15	25	1	Plate—Front Hitch
101750	15	19	1	Rod—Latch Pivot
101751	15	27	1	Rod—Lock
101847	13	4	1	Dipstick
101850	1	15	1	Rod—Hood Stop
101889	20	5	2	Axle Diff Gear
102025	7	10	1	Spacer
102138	5	13	1	ASM—Switch
102644	15	3	2	Plate—Hitch
102703	13	5	1	Trans Nipple
102809	7	7	1	Nut—Hex Lock
102870	15	2	1	Bracket—PTO Support
102872	10	2	1	Shaft—PTO
102881	1	3	2	Headlamp
102974	20	9	1	Assy—Gear (Press)
103125	11	7	1	Spring—Extension
103347	7	21	1	Rod—Clutch
103478	10	7	1	Housing—Clutch
103480	3	25	1	Switch—Interlock
103543	7	5	1	ASM—Brake Bellcrank
103628	7	6	1	Spring—Extension
104859	11	18	1	Spacer—Link
104962	16	5	1	Battery
105061	20	8	1	Gear Diff Bull 43t
105202	9	22	2	Base—Light
105260	19	82	0.02	Anti Rust Lubricant
105269	15	5	1	Pin—Drawbar Hitch
105316	6	10	2	Cap—Rod
105316	15	14	2	Cap—Rod

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
105453	10	10	1	Key—Sq
105503	9	5	2	Bushing
105763	19	1	2	Hub—Wheel
105797	1	18	2	Ring—Ext Ret
105797	15	18	8	Ring—Ext Ret
105875	19	6	2	Axle—Rear
105876	20	6	2	Snap Ring
105896	7	20	1	Arm—Clutch Rod
105900	7	13	1	Rod—Brake Rear
106030	19	27	2	Spring—Shift Stop
106165	13	19	1	Pulley Trans
106193	8	2	1	Screw—HH
106234	17	1	1	ASM—Tank
106236	17	18	1	Support—Fuel Tank RH
106250	3	27	1	Cover—Dust
106257	6	18	1	Rod—Latch
106258	6	23	1	Sleeve
106269	6	3	2	Bearing—Flange
106345	6	25	1	Casting—Lift Lever
106352	4	13	1	Guard—Lower Belt
106411	6	6	1	ASM—Lift Hgt Cont Bkt
106417	7	16	1	ASM—Rod
106451	7	9	1	ASM—Parking Brake
106522	6	35	1	Chain—Lift
106634	15	8	1	Pin—Tool
106695	10	20	1	Ring—Push On
106719	13	11	1	Drum—Brake
106858	12	11	1	Clamp—
106948	16	8	1	Tray—Battery
107069	3	19	4	Nut—Speed
107069	4	5	6	Nut—Speed
107374	20	3	4	Washer
107677	7	12	1	Spring—Extension
107951	3	28	1	Bracket—Fender Front
108035	7	30	A/R	Spring—Clutch
108130	1	4	1	Wire— Ground
108457	4	14	1	Nut—Push On
108464	17	12	1	Support—Fuel Tank LH
108563	6	16	1	ASM—Lift Lever
108565	6	8	1	Shaft—Lift Lever
108758	13	3	1	Knob
108881	20	11	4	Nut—Hex
109189	2	16	1	Bearing—Flange
109262	2	13	2	Washer—3/4 X .12
109459	1	5	2	Clamp—Headlight
109494	1	2	1	Bezel—RH Headlight
109495	1	1	1	Bezel—LH Headlight
109530	5	20	1	Nut—Hex Palnut
109553	16	2	1	Boot—Battery Cable
109554	18	18	1	Bracket—Belt Guard
109842	10	5	1	Bearing—Ball
109910	12	14	1	Wire—Ground
109989	9	13	2	Spacer
110234	13	13	1	Screw—HH
110653	6	26	1	Rod—Height Control
110656	11	12	1	Trunnion
110665	11	20	A/R	ASM—Bracket
110669	11	11	1	Plate—PTO
110725	13	2	1	ASM—Rod
110727	13	23	1	ASM Shift Rod
111052	11	24	1	Rod—PTO Clutch
111069	16	6	1	Cable—Battery

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
111069	18	23	1	Cable—Battery
111074	16	1	1	Cable—Battery
111096	20	29	1	Gear
111099	20	26	1	Gear
111196	20	4	2	End Cap—Differential
111198	19	13	1	Case Trans LH
111199	20	2	2	Bearing Ball
111200	19	10	1	Case Trans RH
111240	11	13	1	—Bracket
111242	8	17	1	Wire—Belt Guide
111271	3	13	1	Console
111314	10	27	1	ASM—Pin
111332	3	17	1	Switch—Interlock
111332	18	4	2	Switch—Interlock
111343	5	8	5	Lens & Bushing ASM
111383	7	23	2	Collar W/Set Screw
111383	8	23	1	Collar W/Set Screw
111386	3	5	1	Plate—Shift Pattern
111392	3	16	1	Retainer—Offset”j”
111510	3	38	1	Decal—Parking Brake
111516	14	3:1	2	Wheel
111534	3	32	1	Decal—Shift Pattern
111642	18	3	2	Barrier—Switch
111757	1	7	1	Edging
111926	3	36	1	Decal—Elec System
111951	14	12	2	Cap—Hub
111952	14	13	2	Washer—Hub Cap
111960	3	33	1	Decal—PTO Clutch
112168	3	35	1	Decal—Lift
112214	5	9	1	Control—Choke
112358	1	8	1	ASM—Hood & Grill
112415	3	7	1	Stop—PTO
112506	3	14	1	Bracket
112564	9	26	2	Lens—Light
112841	8	16	1	Cap
113010	16	10	1	—Hold Down
113107	10	26	1	Clevis
113108	10	1	1	Rod—PTO Housing
113381	2	32	1	Spindle
113382	2	31	1	Spindle
113443	2	14	1	Tube—Steering Shaft
113445	6	31	1	ASM—Lift Bar
113935	4	6	1	Cover—Side LH
113969	16	9	2	Hook—Retainer
114720	16	7	1	Tube—Battery Drain
114825	5	16	1	Pc Board & Schematic
114881	10	8	A/R	ASM—PTO Clutch Plate
115411	18	2	1	Bracket—Switch
115854	5	17	1	Control—Throttle
116000	4	8	6	Screw—CARR
116338	5	14	1	ASM—Switch
116397	18	17	2	Relay
116636	19	19	1	ASM Shift Fork
116723	5	4	1	Harness—P C Board
116744	14	3:2	2	Tire
116745	1	19	1	Rod—Grill Pivot
116746	1	20	1	Bracket—Grill RH
116747	1	13	1	Bracket—Grill LH
116796	5	15	1	Switch—Button
117331	18	11	1	Bracket—Fuse Holder
117343	3	11	2	Latch—Hood
117344	1	10	2	Handle—Latch

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
117371	3	21	4	Screw—CARR
117431	3	12	4	Poprivet
117432	1	9	4	Poprivet
117930	15	17	1	ASM—Latch
119190	3	37	1	Decal—Lower Dash
120590	5	2	1	Stop—Throttle
120930	18	9:1	1	Fuse Holder
518211	4	4	A/R	Bumper—Rubber
519337	17	16	1	Clip
700806	9	15	2	Knob
701178	9	1	2	Cap—Protector
911423	20	1	4	Bolt—Hex
920248	7	4	2	Washer—Nylon
920248	8	25	1	Washer—Nylon
933148	6	17	1	Pin—Spirol
933156	20	16	2	Pin—Hd Spirol
933184	13	22	1	Pin—Spirol
933190	7	29	1	Pin—Spring
933267	8	30	1	Pin—Spring
933274	10	25	1	Pin—Spirol
937089	20	33	1	Key—Woodruff
937108	19	5	2	Woodruff Key
937221	13	18	1	Key—Woodruff
9080026	10	14	4	Screw—Lock
9103312	12	13	4	Screw—
9104784	18	5	2	Screw
9107562	5	3	2	Screw—Phcr
9107622	3	9	2	Screw Phcr
9107922	5	7	2	Screw—Phcr
9107944	18	8	2	Screw—Phcr
9108372	3	1	6	Screw—Phcr
9108372	4	7	2	Screw—Phcr
9109482	3	6	2	Screw—Phcr
9151126	3	22	4	Nut—HH
9157324	3	18	2	Nut—Lock
9157324	5	5	2	Nut—Lock
9157324	18	1	2	Nut—Lock
9157404	5	1	2	Nut
9157404	18	12	2	Nut
9159604	3	15	2	Nut—Hex
9201504	3	10	2	Washer—Lock
9202254	7	28	1	Washer—Special
9202594	5	21	1	Washer
9202624	5	18	1	Washer—Flat
9266714	1	6	2	Screw—HWHTF
9266714	18	6	1	Screw—HWHTF
9266944	3	8	11	Screw—HH
9266944	4	15	1	Screw—HH
9266944	6	7	1	Screw—HH
9266944	7	17	1	Screw—HH
9266944	9	10	4	Screw—HH
9266944	18	20	5	Screw—HH
9266964	6	21	2	Screw—HH
9266974	9	18	4	Screw—HH
9266974	17	8	2	Screw—HH
9335054	6	32	2	Hairpin
9335054	7	3	1	Hairpin
9335054	11	9	1	Hairpin
9335054	15	10	1	Hairpin
9335064	10	23	1	Hairpin
9335074	6	19	2	Cotter—Hairpin
9601524	18	13	4	Screw

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
9791204	15	6	2	Spacer
38-1420	9	19	1	Switch-Seat
55-3570	17	7	1	ASM-Cap
62-7770	5	10	2	Key-Ignition
66-0120	5	6	1	Knob
78-1550	6	28	1	Lift Lever
78-2880	2	4	1	Lower Steering
78-2900	2	33	2	ASM-Tie Rod
78-2970	8	5	1	ASM-Clutch Idler Arm
78-3010	3	23	1	Bracket-Battery Support
78-3020	18	22	1	Plate-Front
78-3240	8	26	1	Absorber-Gas Spring
78-3250	8	14	1	Spacer-Shoulder
78-3260	8	29	1	Spacer-Shoulder
79-0060	5	12	1	Voltmeter
79-0950-03	9	17	1	Bracket-Pivot RH
79-0970-03	9	12	1	Bracket-Pivot LH
79-2470	3	34	1	Decal-Back Plate
79-3590	18	9	1	Wiring-Harness & Dia
79-4990	17	19	1	Bracket-Fender Support
83-2710	13	1	1	Knob
83-2720	14	2	10	Bolt-Lug
83-2890	19	16	1	Bearing-Needle
83-3530	19	21	1	Shaft-Cluster
83-6520	15	16	1	Rod-Lock
88-2170	3	24	1	Bracket-Belt
88-2710	2	5	1	Support-Lower Steering
88-3870	2	21:1	1	Cover-Steering Wheel
92-1525	3	20	1	W/A-Hoodstand
92-1532	12	10	1	Engine-14 Hp Kohler
92-4987	2	19	1	Steering Shaft
92-6511	9	9	1	Seat
92-6649	19	23:	1	Gear-Spur
92-6710	6	11	1	Grip-Handle
92-6750	9	8	2	Spacer-Nylon
92-6849	8	15	1	Rod-Brake Front
92-6972-03	9	7	1	Support-Seat
92-6986	9	6	2	Bolt-Shoulder
92-7054	9	3	2	Spring-Compression
92-8708	13	6	1	Trans ASM 8 Pin 8 Spd
92-8946	3	31	1	Decal-Danger
92-9511	17	20	1	Line-Fuel 62"
92-9826	1	24	1	Decal-Front Hood
92-9837	1	26	1	Decal-Danger
92-9845	18	15	1	Solenoid
93-1613	15	22	1	Latch
93-9800	14	10	2	ASM-Wheel & Tire
93-9808	8	1	1	V-Belt Single
94-1809	3	2	1	Plate-Hoodstand
94-1834	13	24	1	Decal-Unidrive
94-2869	9	14	2	Washer-Flat
94-3519	2	21	1	Steering Wheel 15"
94-3521	4	17	1	Footrest RH
94-3522	4	9	1	Footrest LH
94-3701	11	2	1	PTO Clutch Lever
94-3703	7	25	1	Pedal-Clutch
94-3704	10	21	1	Belt Cover-PTO
94-3706	8	21	1	Pedal-Brake
94-3709	1	23	1	Horse Head Logo
94-3710	4	1	1	Mat-Foot RH (Gear)
94-3712	4	2	1	Mat-Foot LH
94-3715-01	2	22	1	Frame

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94–3722–01	9	11	1	Fender
94–3723	5	11	1	Hourmeter
94–3724–01	4	16	1	Belt Guard (Single)
94–3726	10	18	1	–Bracket
94–3727	11	1	1	Knob
94–3729	10	28	1	Retainer–Bolt
94–3735	10	22	2	Nut–Wing
94–3738	12	12	1	Shield–Heat
94–3739	12	1	1	Muffler
94–6330	15	29	2	Decal–Attach A Matic
94–6331	9	30	1	Decal–Wheelhorse USA
94–6332	1	27	1	Decal–Hood LH Top
94–6333	1	25	1	Decal–Hood RH Top
94–6334	9	28	1	Decal–Rear Fender
94–6338	3	30	2	Decal–Model 314–8
94–6650	10	8	1	ASM–Plate
94–6652	11	20	1	ASM–Brake
237–69	2	20	1	O–Ring
2412–98	17	21	2	Clamp–Hose
281–2	20	12	1	Plug–Pipe
281–10	20	13	1	Plug–Pipe
302–5	2	28	2	Fitting–Grease
302–5	7	26	1	Fitting–Grease
302–5	8	22	1	Fitting–Grease
321–3	13	7	2	Screw–HH
321–3	18	19	2	Screw–HH
321–4	16	3	2	Screw–HH
321–9	8	27	1	Screw–HH
321–31	8	7	1	Screw–HH
322–1	2	24	1	Screw–HH
322–2	6	39	2	Screw–HH
322–2	17	15	2	Screw–HH
322–3	17	17	4	Screw–HH
322–5	3	3	2	Screw–HH
322–5	6	24	3	Screw–HH
322–5	9	4	4	Screw–HH
322–6	6	34	1	Screw–HH
322–7	12	2	1	Screw–HH
323–5	13	14	4	Screw–HH
323–6	2	2	2	Screw–HH
323–6	10	19	1	Screw–HH
323–6	12	7	2	Screw–HH
323–7	11	10	1	Screw–HH
323–8	2	6	2	Screw–HH
323–8	12	9	2	Screw–HH
323–9	7	14	1	Screw–HH
323–11	19	16	5	Screw
323–16	19	14	1	Screw–HH
323–44	15	1	6	Screw–HH
324–5	8	20	1	Screw–HH
324–5	11	16	2	Screw–HH
3217–5	13	16	1	Nut–Hex
3217–5	18	14	2	Nut–Hex
3218–1	11	23	2	Nut–Jam
3218–3	19	2	4	Nut–HJ
3229–25	1	14	4	Screw–CARR
3229–25	11	19	2	Screw–CARR
3230–1	4	12	1	Screw–CARR
3231–25	15	26	3	Screw–CARR
3235–22	17	10	2	Screw–HH Lock
3242–2	13	20	1	Screw Set–SH
3243–5	19	3	4	Screw–Set

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3246-2	10	11	2	Screw-HSH Set
3250-31	9	20	4	Screw-Phcr
3253-3	11	22	2	Washer-Lock
3253-3	13	8	2	Washer-Lock
3253-3	16	13	2	Washer-Lock
3253-4	2	25	1	Washer-Lock
3253-4	12	3	1	Washer-Lock
3253-4	17	14	2	Washer-Lock
3253-6	8	19	1	Washer-Lock
3253-6	11	15	2	Washer-Lock
3253-21	12	8	2	Washer-Spring Lock
3253-21	13	15	4	Washer-Spring Lock
3254-1	9	23	4	Washer-Lock
3254-2	1	21	1	Washer-Lock
3255-7	18	16	2	Washer-Lock
3255-9	12	15	1	Washer-Lock
3256-4	17	9	2	Washer-Flat
3256-5	6	20	1	Washer-Flat
3256-22	1	12	3	Washer-Flat
3256-22	8	28	1	Washer-Flat
3256-22	11	21	2	Washer-Flat
3256-22	16	4	4	Washer-Flat
3256-23	3	4	2	Washer-Flat
3256-23	6	5	3	Washer-Flat
3256-23	12	4	1	Washer-Flat
3256-24	7	11	2	Washer-Flat
3256-25	6	33	1	Washer-Flat
3256-25	8	18	1	Washer-Flat
3256-25	11	14	2	Washer-Flat
3256-26	7	2	1	Washer-Flat
3256-26	15	9	1	Washer-Flat
3256-27	10	24	1	Washer-Flat
3256-37	5	19	1	Washer-Flat
3256-62	6	2	2	Washer-Flat
3272-1	1	16	2	Pin-Cotter
3272-6	7	18	1	Pin-Cotter
3272-10	6	27	1	Pin-Cotter
3272-10	7	22	1	Pin-Cotter
3272-10	8	24	2	Pin-Cotter
3272-10	11	5	3	Pin-Cotter
3272-17	14	7	2	Pin-Cotter
3272-19	2	11	1	Pin-Cotter
3272-21	2	17	1	Pin-Cotter
3290-479	4	3	16	Fastener-Panel
3296-6	2	3	4	Nut-Lock
3296-27	9	24	4	Nut-Lock
3296-29	3	26	2	Nut-Lock
3296-29	4	11	7	Nut-Lock
3296-29	6	4	6	Nut-Lock
3296-29	9	16	2	Nut-Lock
3296-29	17	13	4	Nut-Lock
3296-39	2	23	4	Nut-Lock
3296-39	6	37	1	Nut-Lock
3296-39	7	15	1	Nut-Lock
3296-39	11	17	1	Nut-Lock
3296-39	12	6	2	Nut-Lock
3296-39	15	4	6	Nut-Lock
3296-39	15	24	3	Nut-Lock
3296-39	19	9	6	Nut-Lock
3296-42	1	11	4	Nut-Lock
3296-42	8	4	2	Nut-Lock
3296-42	16	12	2	Nut-Lock

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296-42	18	10	4	Nut—Lock
3296-58	9	2	2	Nut—Flange
32103-22	16	11	2	Nut—Wing
32120-47	6	30	1	Ring—Retaining
32120-62	10	4	1	Ring—Retain
32120-72	10	3	2	Ring—Retaining
32120-93	2	34	2	Snap Ring
32121-25	6	15	1	Pin—Roll
32121-103	6	14	1	Pin—Spring
32121-111	2	15	1	Pin—Spiral
32128-40	10	17	1	Nut—Lock
32136-5	2	10	1	Nut—Slotted
32146-2	8	6	1	Nut—Lock
32151-11	11	3	1	Ring—Grip
32151-91	6	1	1	Ring—Retaining
505-27	19	83	0.01	Compound—Lock