



520-He GT Int'l
Garden Tractor

Model No. 73521 – 6900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Hood Assembly	1	Eaton Hydrostatic Transmission #110–062	25
Frame Axle and Steering System	2	Starter	26
Hoodstand, Console	3	Engine Housing	27
Footrest & Hoodstand Side Covers	4	Flywheel	28
Gauges, Warning Lights & Controls	5	Cam & Crankshafts	29
Hydraulic Lift System	6	Oil Fill Tube & Base	30
Hydraulic Lift System	7	Oil Filter	31
Hydro Controls, Brake System	8	Gear Case & Ignition Controls	32
Hydro Drive, Parking Brake	9	Ignition Electronics	33
Fender, Seat & Tail Lights	10	Air Cleaner	34
PTO Clutch And Cover	11	Governor	35
PTO Clutch System	12	Intake Manifold & Carburetor	36
Engine Assembly	13	Choke Control	37
Transmission Control & Filter Assembly	14	Fuel Filter & Pump	38
Transmission Control & Filter Assembly	15	This Page Intentionally Left Blank	39
Wheel Assemblies	16	Engine Cylinder Block	40
Hitch Assembly	17	Engine Cylinder Block	41
Battery Assembly	18	Wire Harness & Cable Routing	42
Fuel Tank & Hydro Fan Control Assembly 500	19	Electric Schematic	43
Hoodstand Electrical Housing & Wire Harness	20	520–Wire Harness Attachment & Component's	44
Hydrostatic Transmission	21	520–Wire Harness Attachment & Component's	45
Hydrostatic Transmission (Continued)	22	Engine Wire Harness	46
This Page Intentionally Left Blank	23		
Eaton Hydrostatic Transmission #110–062	24		

Note:

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HSBH	hex socket button head
ASM	assembly	HSFH	hex socket flat head
CARR	carriage	HSH	hex socket head
DEG	degrees	HWH	hex washer head
FH	flat head	HWHTF	hex washer head thread forming
GA	gauge	INC	incorporated
HF	hex flange	LH	left hand
HFW	hex flange washer	PH	pan head
HH	hex head	PPH	Phillips pan head
HHF	hex head flange	PTO	power take off
HHST	hex head self tapping	RH	right hand
HJ	hex jam	SFH	slotted fillister head
HOC	height-of-cut	SH	square head
HS	hex socket		

SHWH slotted hex washer head
 SPH slotted pan head
 STD standard
 TAP self tapping

TH truss head
 TTH Torx truss head
 WH wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y*. *X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.


For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

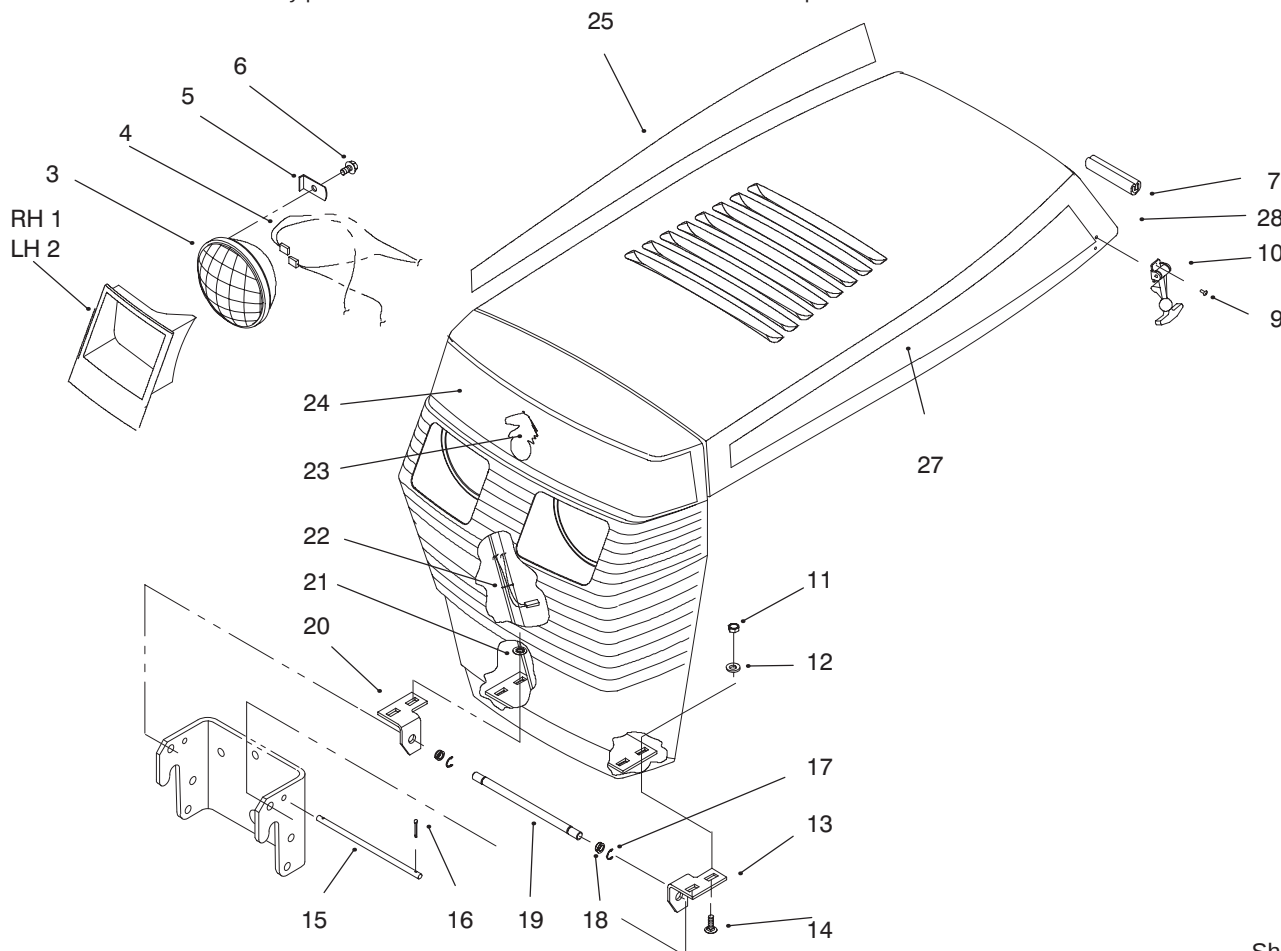

Sheet No.: 2

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	109495	1	Bezel-LH Headlight
2	109494	1	Bezel-RH Headlight
3	102881	2	Headlamp
4	114052	1	Wire Harness
5	109459	2	Clamp-Headlight
6	9266714	2	Screw-HWHTF
7	9080356	1	Screw-HH
9	117432	4	Poprivet
9	8830	1	Retainer-"J"
10	117344	2	Handle-Latch
11	3296-42	4	Nut-Lock
12	3256-22	3	Washer-Flat
13	116747	1	Bracket-Grill LH
14	3229-25	4	Screw-CARR
15	101850	1	Rod-Hood Stop
16	3272-1	2	Pin-Cotter
17	5979	2	Bushing-Nyliner
18	105797	2	Ring-Retaining
19	116745	1	Rod-Grill Pivot
20	116746	1	Bracket-Grill RH
22	3290-378	1	Tie-Cable
23	94-3736	1	Plate-Logo
24	92-9826	1	Decal-Front Hood
25	92-9835	1	Decal-Hood RH
27	92-9834	1	Decal-Hood LH
28	112358	1	Hood & Grill Asm

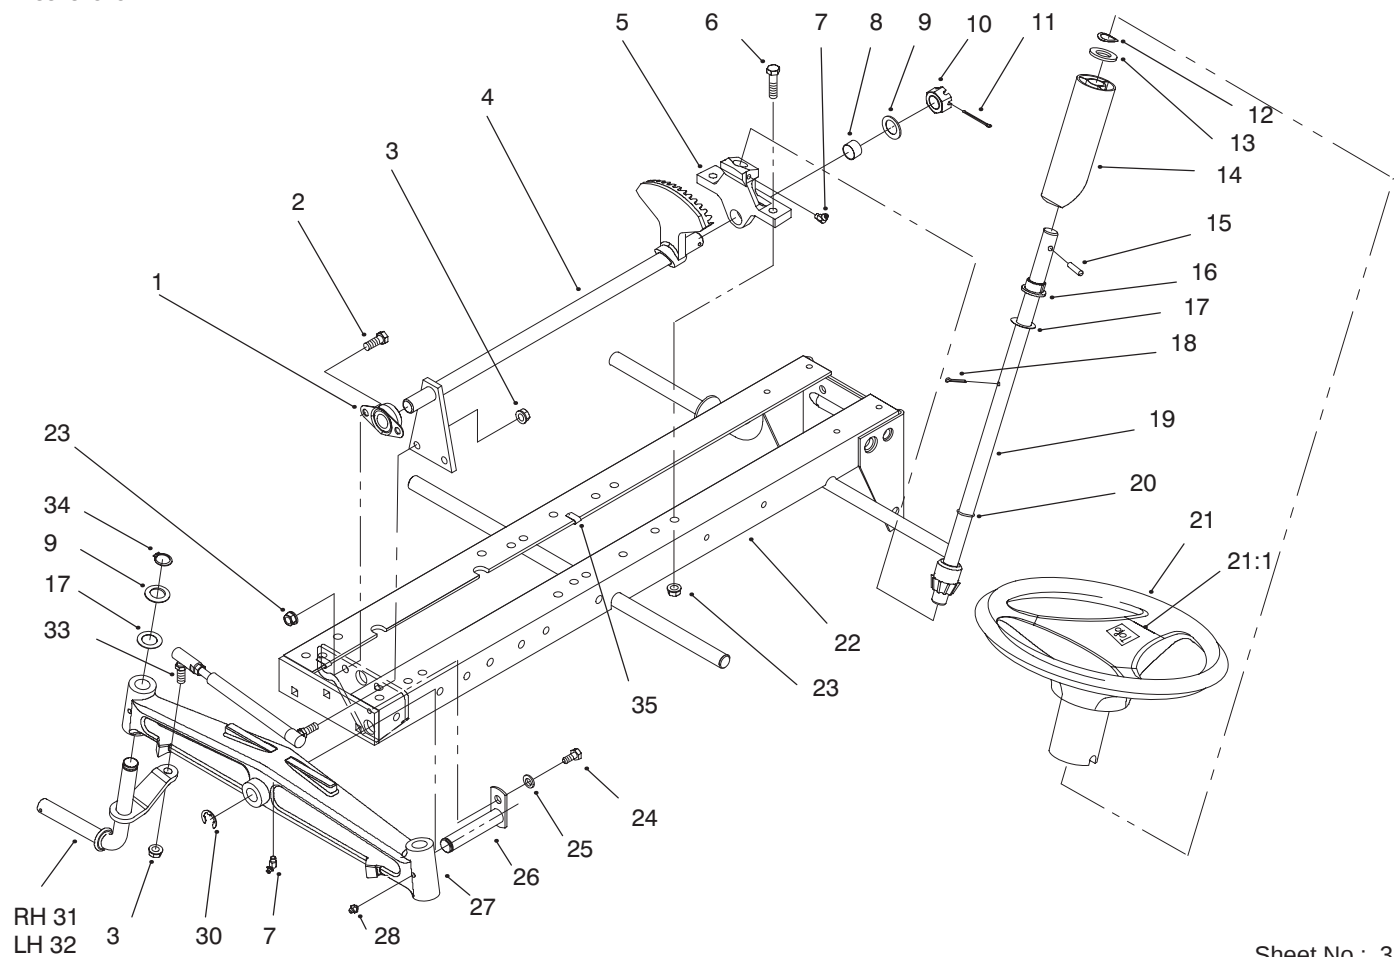 


Sheet No.: 3

Frame Axle and Steering System

Ref. No.	Part No.	Qty.	Description
1	6472	1	Bearing-Flanged
2	323-6	2	Screw-HH
3	3296-6	4	Nut-Lock
4	78-2880-01	1	Shaft-Steering
5	88-2710-01	1	Support-Lower Steering
6	323-8	2	Screw-HH
7	302-11	2	Fitting-Grease
8	6397	1	Bearing-Bronze
9	1278	3	Washer-Shim
10	32136-5	1	Nut-Slotted
11	3272-19	1	Pin-Cotter
15	32121-111	1	Pin-Spiral
16	109189	1	Bearing-Flange
17	5210	14	Washer-Shim
18	3272-21	1	Pin-Cotter
19	92-3129	1	Shaft-Steering
20	237-69	1	O-Ring
21	94-3519	1	Wheel-Steering
21:1	88-3870	1	Cover-Steering Wheel
22	94-6673-01	1	Frame
23	3296-39	4	Nut-Lock
24	322-1	1	Screw-HH
25	3253-4	1	Washer-Lock
26	6216	1	Pin-Pivot
27	5638-01	1	Axle-Front

Ref. No.	Part No.	Qty.	Description
28	302-5	2	Fitting-Grease
30	5618	1	Ring-Retaining
31	113382-01	1	Spindle-RH
32	113381-01	1	Spindle-LH
33	78-2900	2	ASM-Rod
34	32120-93	2	Snap Ring

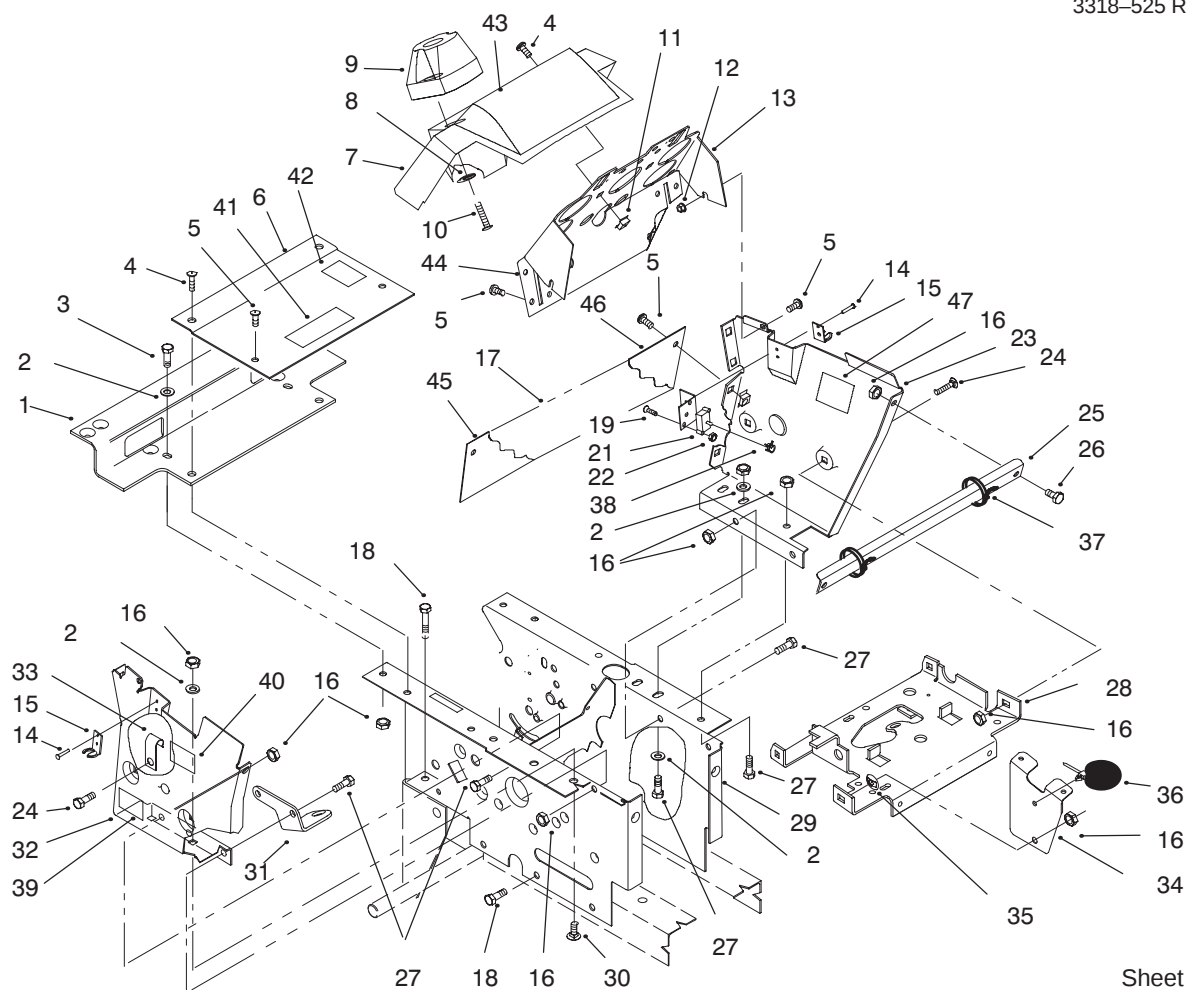 


Sheet No.: 8

Hoodstand, Console

Ref. No.	Part No.	Qty.	Description
1	113023-03	1	Bracket-Fender
2	3256-23	8	Washer-Flat
3	322-5	2	Screw-HH
4	9108392	6	Screw-Phcr
5	9108372	12	Screw-Phcr
6	79-6770-03	1	Plate-Top Hoodstand
7	115620	1	Cover-Console 5-Gage
8	9202704	4	Washer-Flat
9	118410	1	Cover-Steering Shaft
10	118780	4	Screw
11	32115-5	12	Nut-Retainer
12	32128-33	2	Nut-Hex Flange
13	117267-03	1	Panel ASM
14	117433	2	Rivet-Pop
15	117343	2	Latch-Hood
16	3296-29	18	Nut-Lock
17	113928-03	1	Plate-Hoodstand
18	9266944	10	Screw-HH
19	9109484	2	Screw-Phcr
20	114628	1	Bracket-Switch
21	94-1839	1	Sensor-Air Clnr Vacuum
22	9157324	2	Nut-Lock
23	79-4890-03	1	Panel-Side LH
24	116000	4	Screw-CARR

Ref. No.	Part No.	Qty.	Description
25	113932-03	1	Stiffener-Panel
26	322-2	2	Screw-HH
27	322-3	8	Screw-HH
28	116309-03	1	ASM-Support
29	79-5120-03	1	ASM-Hoodstand
30	9000369	2	Bolt-CARR
31	78-1540-03	1	Bracket-Control
32	113962-03	1	Panel-Side
33	8830	1	Retainer-"J"
34	117191-03	1	Bracket-Holder
35	108457	1	Nut-Push On
36	117257	1	Tie- Snap In
37	3290-378	2	Tie-Cable
38	114767	1	Clamp-Hose.32d X.31w Blk
39	92-9833	2	Decal-520 Hydro
40	114621	1	Decal-Noise
41	93-7314	1	Decal-Danger
42	93-9351	1	Decal-Brake
43	93-7338	1	Decal-Lights
44	93-9396	1	Decal-Dash
45	93-7847	1	Decal-Clutch
46	93-7337	1	Decal-Danger
47	93-7846	1	Decal-System
48	117432	2	Poprivet

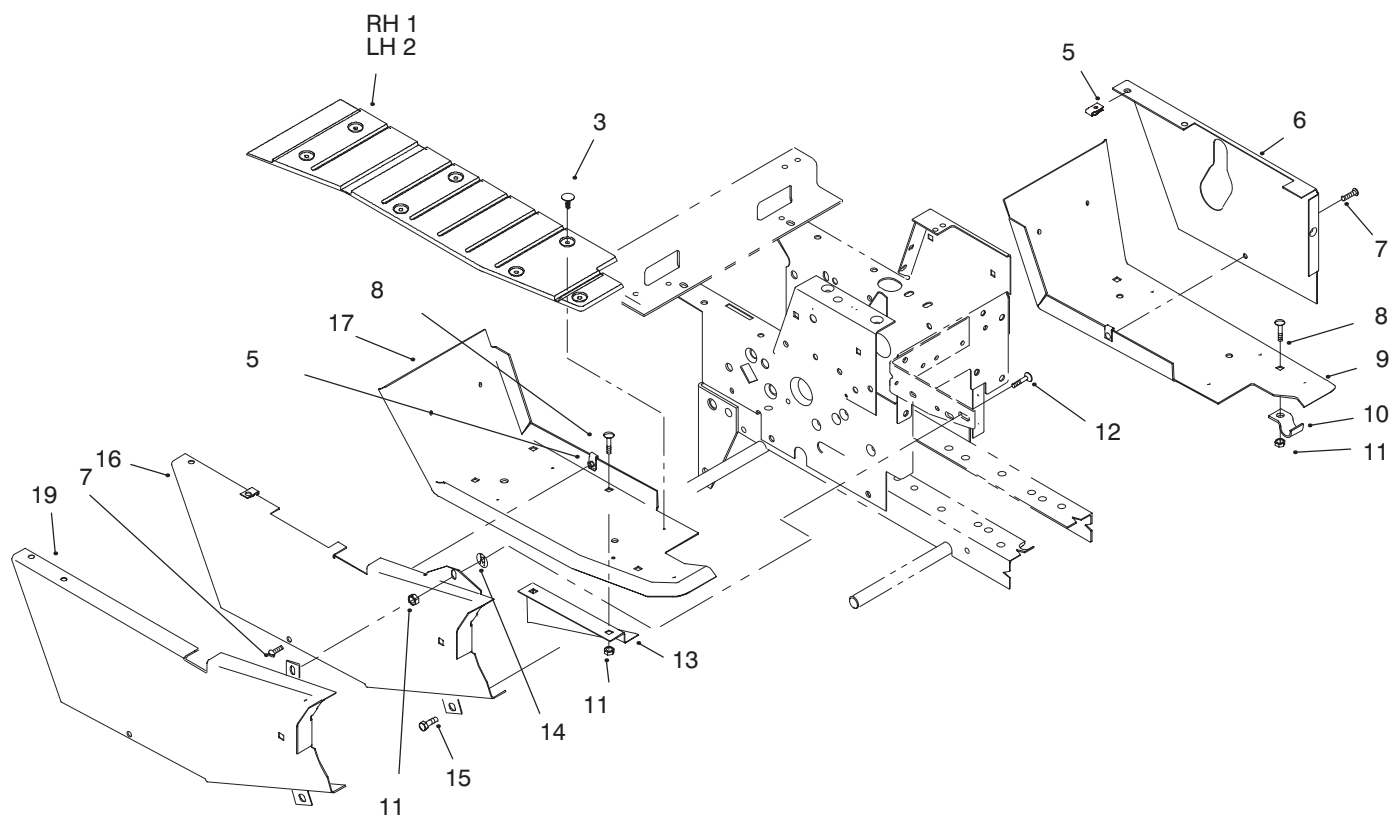 


Sheet No.: 9

Footrest & Hoodstand Side Covers

Ref. No.	Part No.	Qty.	Description
1	94-3710	1	Mat-Foot RH
2	94-3712	1	Mat-Foot LH
3	3290-479	16	Fastener-Panel
5	107069	6	Nut-Retainer
6	79-5130-01	1	Cover-Side LH
7	9108372	2	Screw-Phcr
8	116000	4	Screw-CARR
9	94-3522-01	1	Footrest LH
10	7456	4	Clamp
11	3296-29	5	Nut-Lock
12	3230-1	1	Bolt-CARR
14	108457	1	Nut-Push On
15	9266944	1	Screw-HH
16	94-3725-01	1	Belt-Guard
17	94-3521-01	1	Footrest RH

Ref. No.	Part No.	Qty.	Description

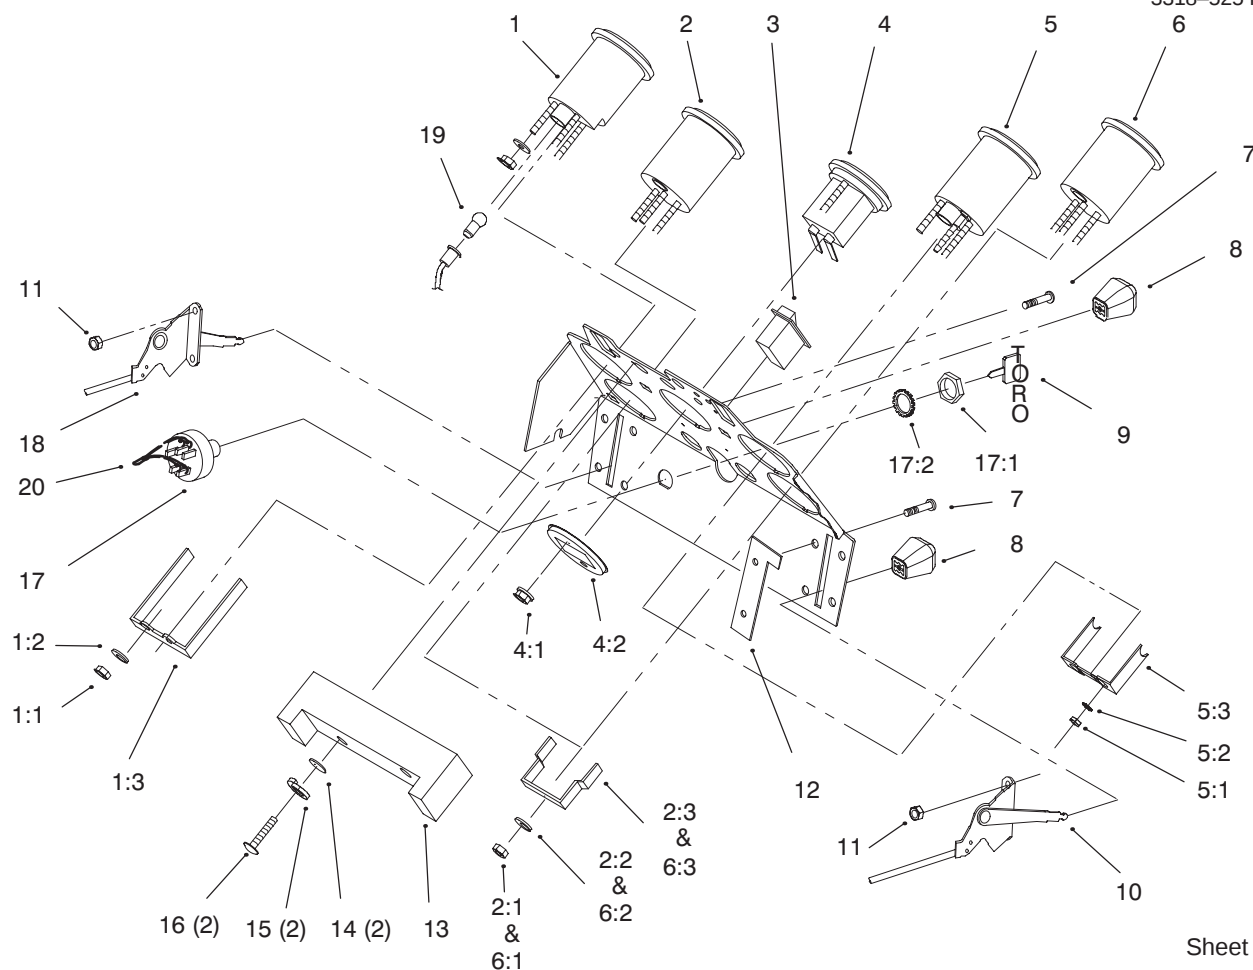 


Sheet No.: 12

Gauges, Warning Lights & Controls

Ref. No.	Part No.	Qty.	Description
1	78-0060	1	Tachometer
1:1	3217-27	3	Nut-HH
1:2	3255-25	3	Washer-Lock
1:3	78-0090	1	Bracket-Mounting
2	78-0040	1	Gauge-Fuel
2:1	3217-27	3	Nut-HH
2:2	3255-25	3	Washer-Lock
2:3	78-0080	1	Bracket-Mounting
3	92-9844	1	Switch-Light
4	94-3723	1	Hourmeter
4:1	32149-9	2	Nut/Washer-Lock
4:2	94-1849	1	Cup-Retainer
5	79-2660	1	Gauge-Vacuum
5:1	3217-27	2	Nut-HH
5:2	3255-25	2	Washer-Lock
5:3	78-0100	1	Bracket-Mounting
6	78-0030	1	Voltmeter
6:1	3217-27	1	Nut-HH
6:2	3255-25	1	Washer-Lock
6:3	78-0080	1	Bracket-Mounting
7	9107922	4	Screw-Phcr
8	66-0120	2	Knob
9	62-7770	2	Key-Ignition
10	114027	1	Control-Choke
11	9157404	4	Nut
12	114641-03	1	Stop-Choke

Ref. No.	Part No.	Qty.	Description
13	79-2130	1	Circuit Board-8 Light
14	3256-21	2	Washer-Flat
15	3253-15	2	Washer-Lk
16	9107834	2	Screw-Phcr
17	111216	1	Switch-Ignition
17:1	101884	1	Nut-Hex
17:2	9201604	1	Washer-Lock
18	115392	1	Control-Throttle
19	79-0450	4	Lamp-Mini

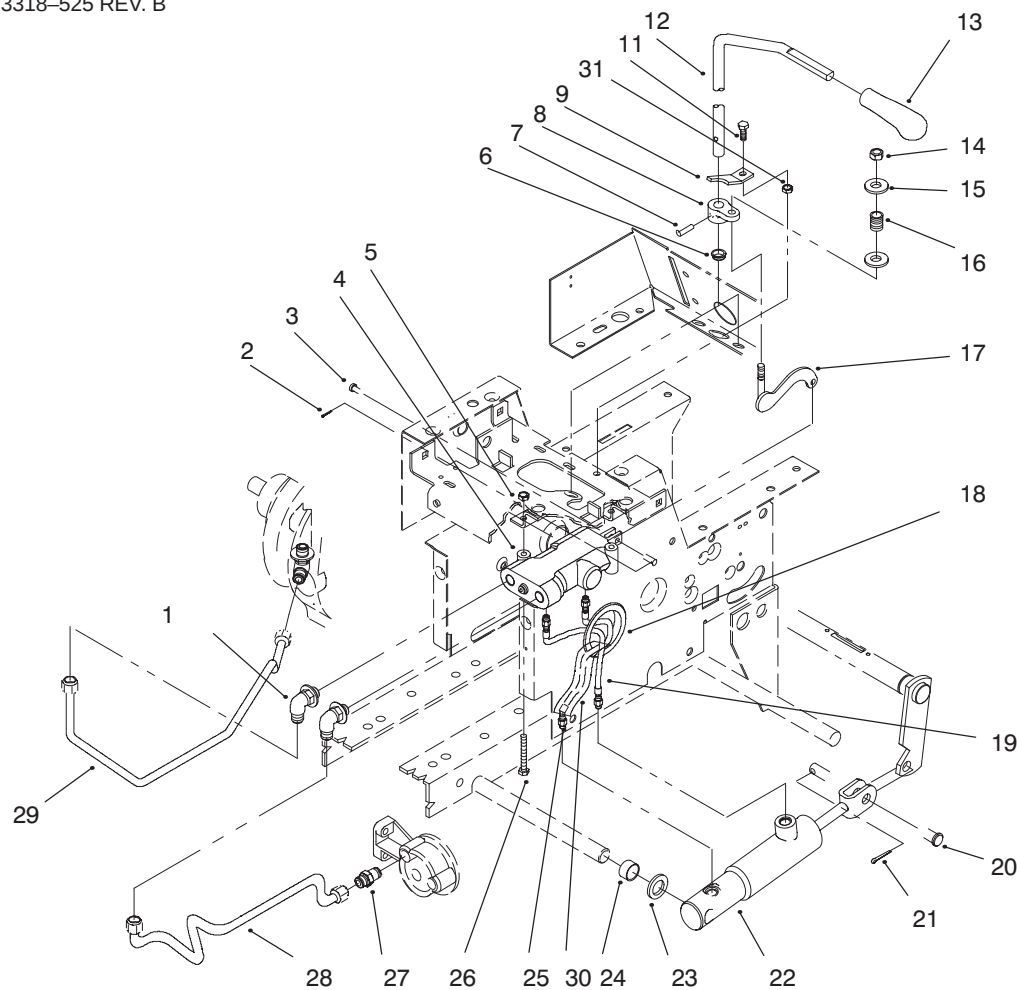 


Sheet No.: 14

Hydraulic Lift System

Ref. No.	Part No.	Qty.	Description
1	108365	2	Fitting-Tube
2	3272-1	1	Pin-Cotter
3	9321204	1	Pin-Clevis
4	114000	1	Valve ASM - Hyd
5	3296-42	2	Nut-Lock
6	5983	1	Bushing
7	933198	1	Pin-Spirol
8	116302	1	Arm-Control
9	116305-03	1	Bracket-Control
11	321-4	1	Screw-HH
12	117328	1	Rod-Lift Control
13	94-3700	1	Knob-Lift
14	3296-29	2	Nut-Lock
15	3256-23	2	Washer-Flat
16	104841	1	Spring
17	78-5640	1	Valve Actuator Bar ASM
18	106267	1	Grommet
19	110125	1	Hose ASM-Hydraulic
20	9329974	1	Pin-Clevis
21	3272-11	1	Pin-Cotter
22	119340	1	Cylinder-Hydraulic
23	9202324	1	Washer-10 GA
24	101757	1	Spacer
25	110124	1	Hose ASM-Hydraulic
26	321-11	2	Screw-HH


Ref. No.	Part No.	Qty.	Description
27	102628	1	Fitting-Tube
28	94-1802	1	Tube ASM-Hyd Return
30	94-1576	1	Sleeve-Protective
31	3296-8	1	Nut-Lock

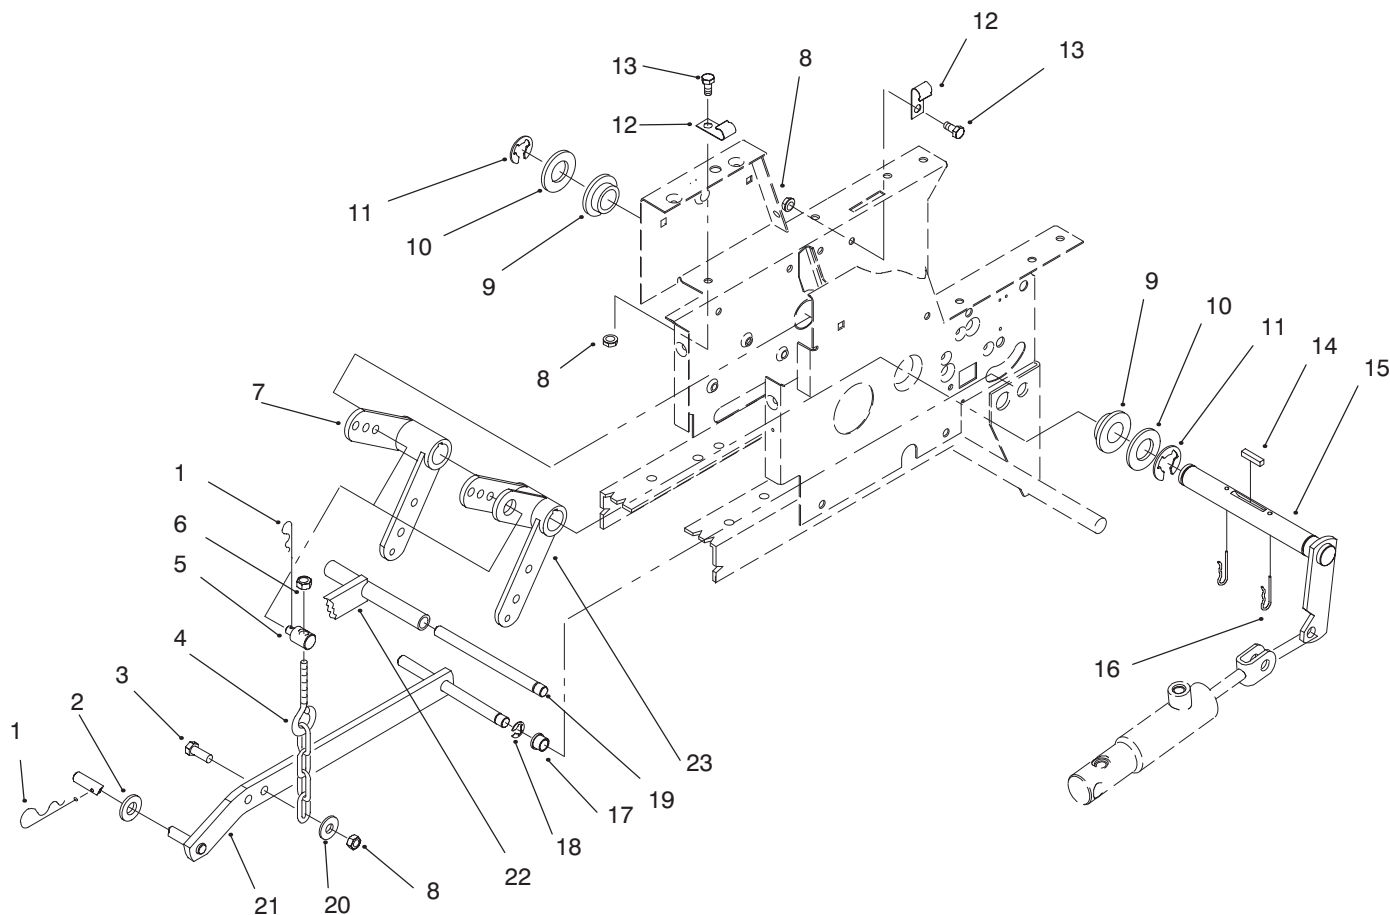 

Sheet No.: 15

Hydraulic Lift System

Ref. No.	Part No.	Qty.	Description
1	9335054	2	Hairpin
2	3256-26	1	Washer-Flat
3	322-6	1	Screw-HH
4	106522	1	Chain-Lift
5	6739	1	Trunnion
6	3296-39	1	Nut-Lock
7	78-1550	1	Lever-Lift
8	3296-29	2	Nut-Lock
9	106269	2	Bearing-Flange
10	3256-62	2	Washer-Flat
11	32151-91	2	Ring-Retaining
12	8830	1	Retainer-"J"
13	322-2	1	Screw-HH
14	1121	1	Key
15	121100	1	Lift Arm ASM
16	9335074	2	Cotter-Hairpin
17	6229	1	Bearing
18	32120-47	1	Ring-Retaining
20	3256-23	1	Washer-Flat
21	113445-01	1	Bar-Lift

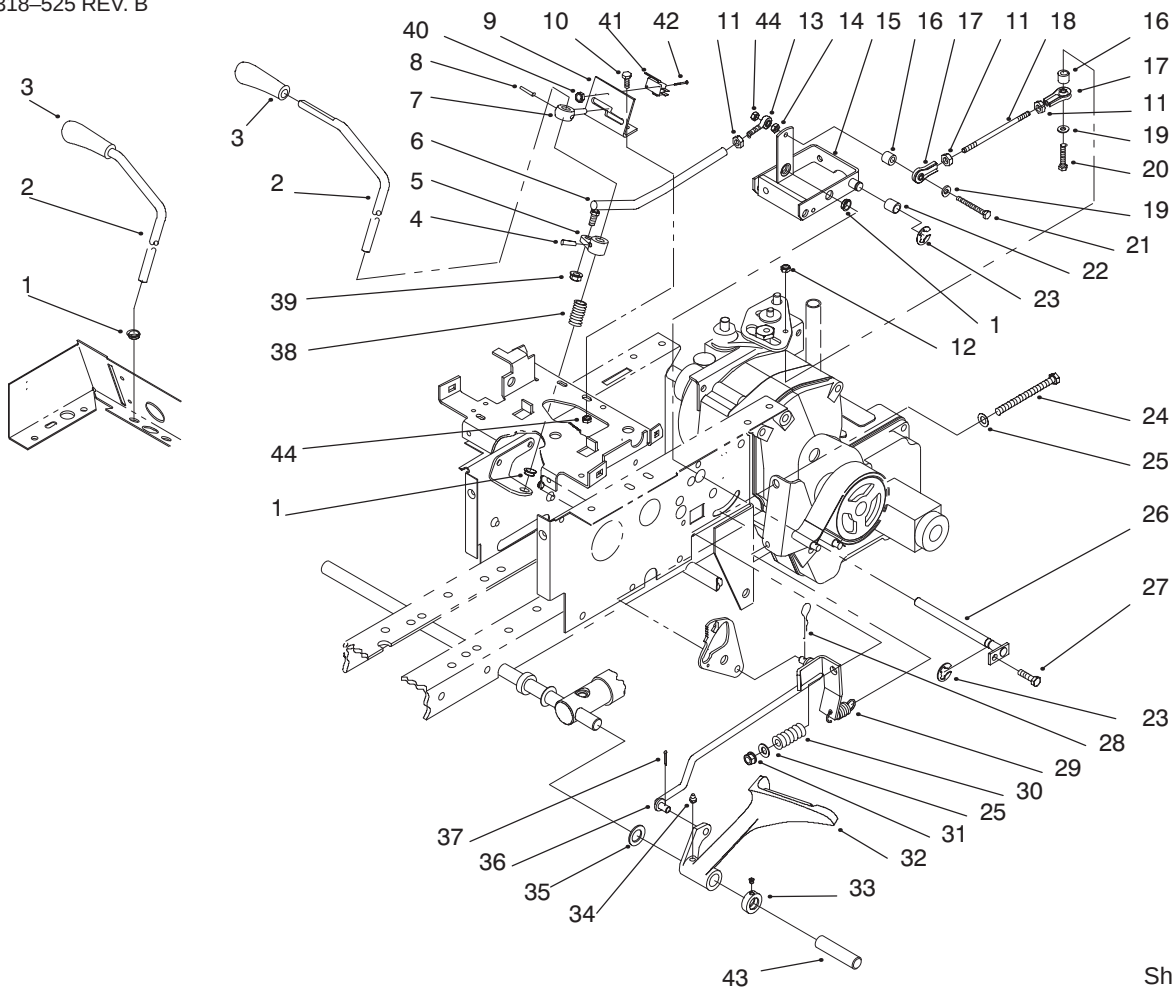 


Sheet No.: 16

Hydro Controls, Brake System

Ref. No.	Part No.	Qty.	Description
1	5983	3	Bushing
2	117329	1	Rod-Control
3	94-6668	1	Knob-Control
4	933198	1	Pin-Spirol
5	116321	1	Arm-Control
6	116324	1	Rod & Balljoint ASM
7	118660	1	Guide-Control
8	32121-94	1	Pin-Spirol
9	78-5711	1	Bracket-Control
10	321-4	2	Screw-HH
11	3220-1	3	Nut-HH
12	3296-42	1	Nut-Lock
13	116407	1	Rod End
14	3217-5	1	Nut-Hex
15	113454-03	1	ASM-Cam Control
16	100304	2	Bearing-Cam Roller
17	110189	2	Rod End ASM
18	108904	1	Rod-Control
19	3256-22	2	Washer-Flat
20	321-9	1	Screw-HH
21	9114584	1	Screw-HH
22	100656	1	Bearing-Cam Return
23	32120-47	3	Ring-Retaining
24	323-23	1	Screw-HH
25	3256-24	2	Washer-Flat
26	108496	1	Wa-Pivot

Ref. No.	Part No.	Qty.	Description
27	9266944	1	Screw-HH
28	9335044	1	Hairpin
29	103125	1	Spring-Extension
30	108680	1	Spring-Compression
31	3296-39	1	Nut-Lock
32	94-3707-01	1	Pedal-Brake
33	111383	1	Collar w/Set Screw
33:1	3245-32	1	Screw-Set
34	302-5	1	Fitting-Grease
35	1278	1	Washer-Shim
36	94-6654-01	1	Rod-Brake
37	3272-10	1	Pin-Cotter
38	101853	1	Spring-Compression
39	3296-4	1	Nut-Lock
40	9157324	2	Nut-Lock
41	115230	1	Switch-Clutch
42	9109484	2	Screw-Phcr
43	94-6683	1	Sleeve-Protective
44	3296-8	3	Nut-Lock

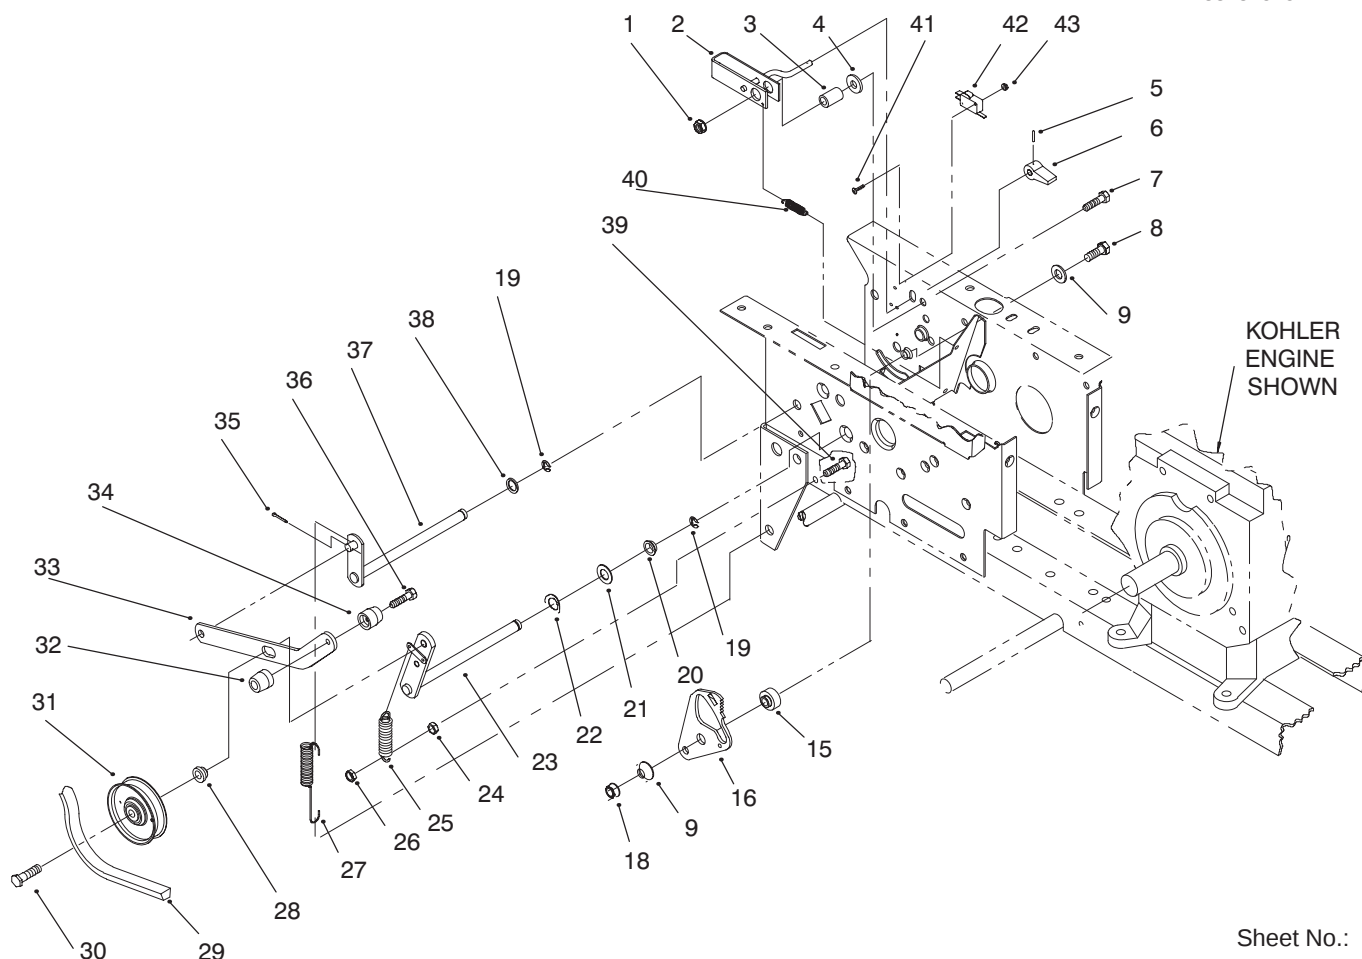 


Sheet No.: 17

Hydro Drive, Parking Brake

Ref. No.	Part No.	Qty.	Description
1	32128-19	1	Nut-Lock
2	78-8500-03	1	Pawl-Parking Brake
3	102025	1	Spacer
4	9202414	1	Washer-Flat
5	933135	1	Pin-Spirol
6	118860	1	Knob-Parking Brake
7	323-9	1	Screw-HH
8	323-8	1	Screw-HH
9	3256-4	2	Washer-Flat
15	108717	1	Spacer-Cam Plate
16	108716-03	1	Plate-Neutral Cam
18	3296-39	1	Nut-Lock
19	32120-47	1	Ring-Retaining
20	7879	1	Bushing
21	3765	1	Washer-Shim
22	114823	1	Washer-Curved Spring
23	78-6020	1	Idler Arm ASM
24	3217-5	1	Nut-Hex
25	107938	1	Spring-Extension
26	3296-42	1	Nut-Lock
29	114895	1	Belt-Hydro Drive
30	323-8	1	Screw-HH
31	112791	1	Pulley-Idler
39	321-6	1	Screw-HH
40	83-2820	1	Spring-Extension

Ref. No.	Part No.	Qty.	Description
41	9109484	2	Screw-Phcr
42	111332	1	Switch-Interlock
43	9157324	2	Nut-Lock

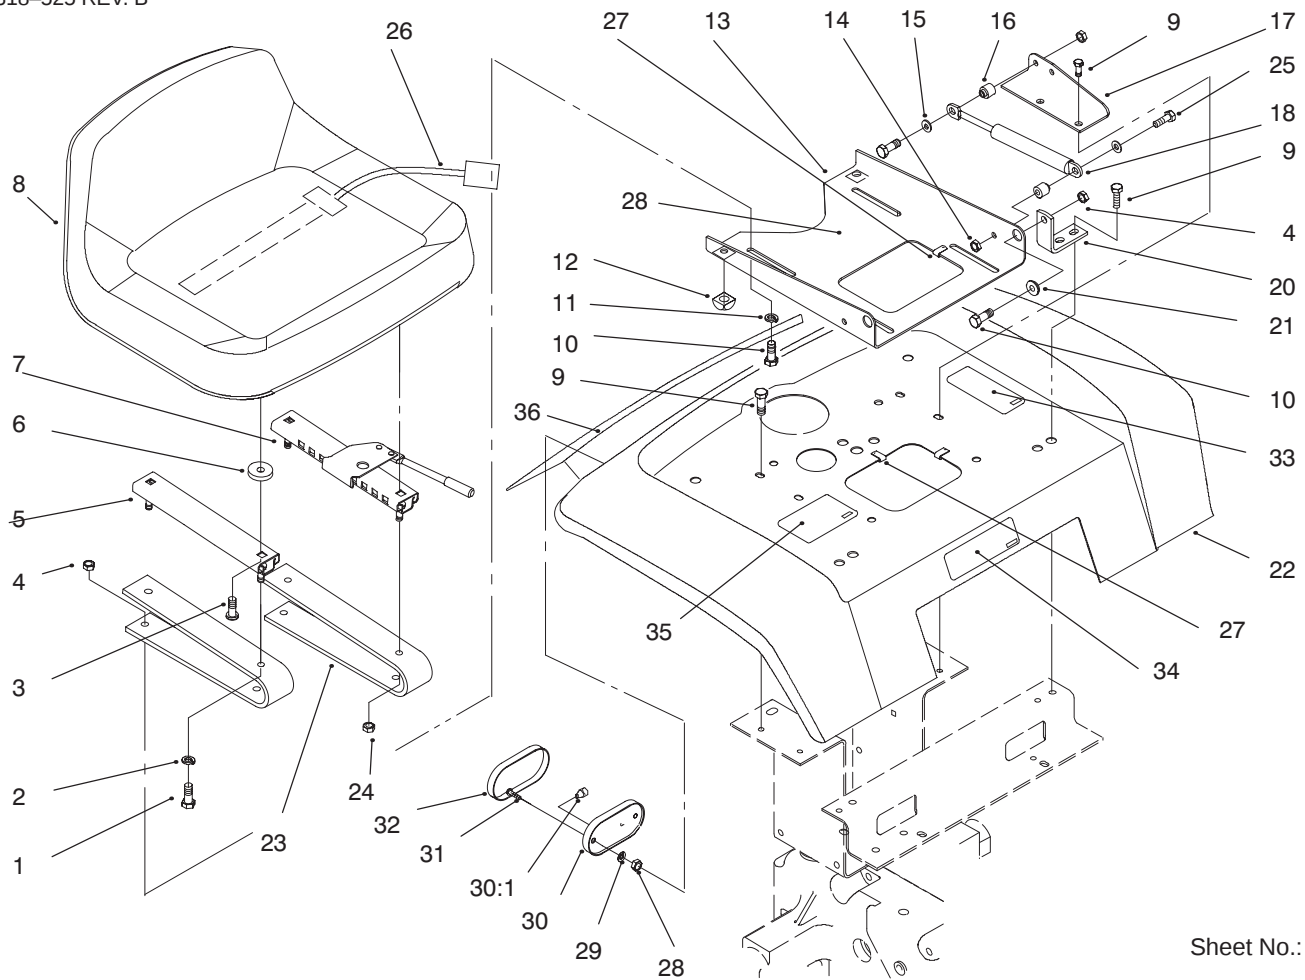 


Sheet No.: 21

Fender, Seat & Tail Lights

Ref. No.	Part No.	Qty.	Description
1	322-5	4	Screw-HH
2	3253-4	4	Washer-Lock
4	3296-29	6	Nut-Lock
6	109989	4	Spacer
8	94-3518	1	Seat V-811
9	9266944	10	Screw-HH
10	322-4	6	Screw-HH
11	3256-23	4	Washer-Flat
12	111071	2	Bumper-Rubber
13	78-2990-03	1	Plate-Seat Pivot
14	3296-8	2	Nut-Lock
15	3256-22	2	Washer-Flat
16	114344	2	Spacer
17	114345-01	1	Bracket-Gas Spring
18	114343	1	Spring-Gas
20	105524	2	Bracket-Pivot
21	105503	2	Bushing
22	94-3722-01	1	Fender
23	110920-03	2	Spring-Seat
25	321-8	2	Screw-HH
26	38-1420	1	Switch-Seat
27	3023	3	Clip
28	3296-27	4	Nut-Lock
29	3254-1	4	Washer-Lock
30	105202	2	Base-Light
30:1	109045	2	Lamp-Wedge

Ref. No.	Part No.	Qty.	Description
31	3250-31	4	Screw-Phcr
32	112564	2	Lens-Light
35	93-7849	1	Decal-Do Not Tow
36	92-9827	1	Decal-Fender

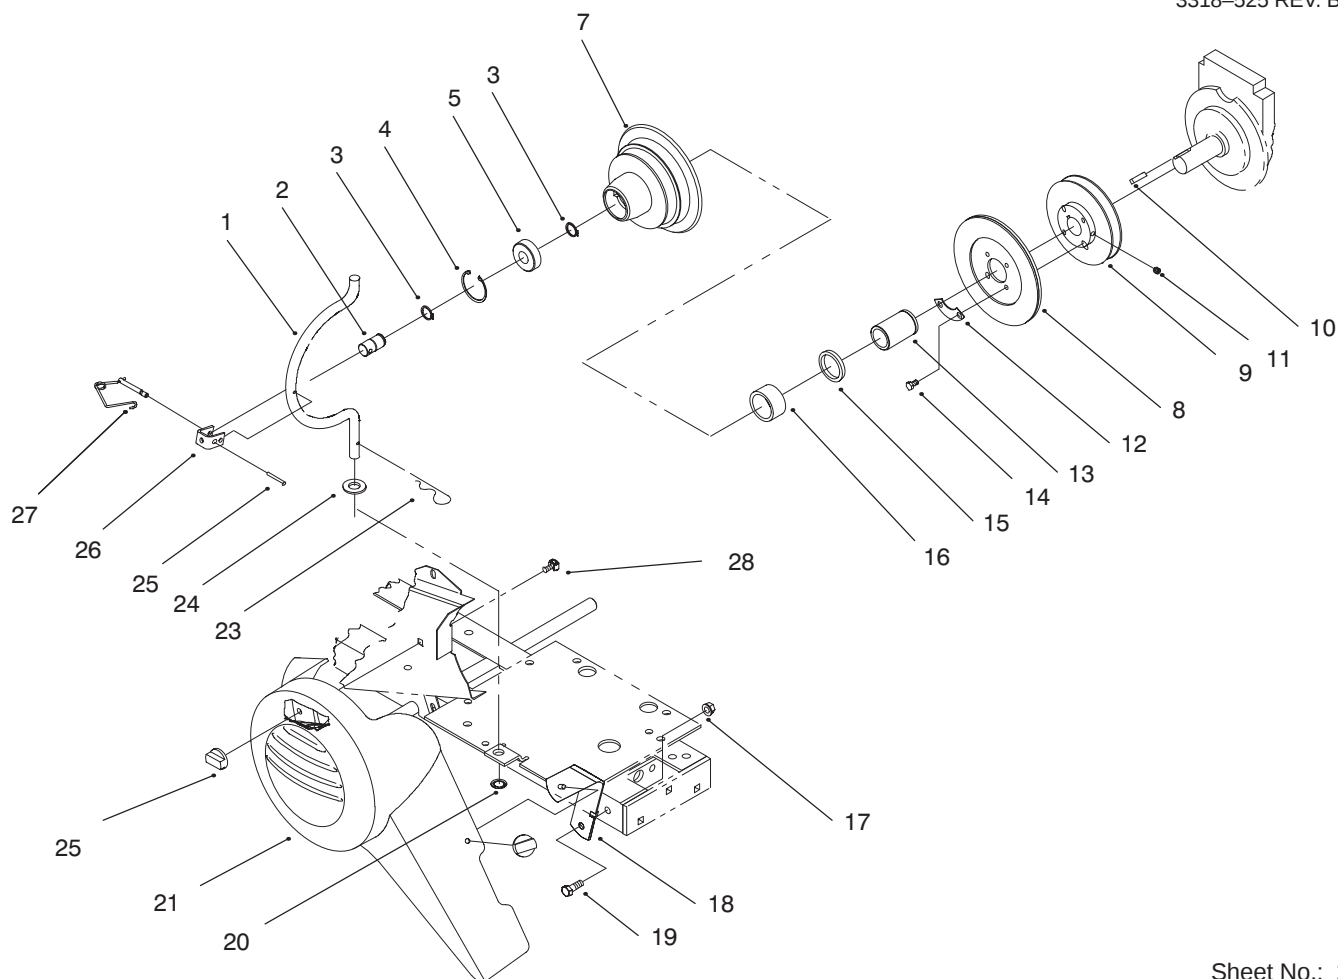 


Sheet No.: 22

PTO Clutch And Cover

Ref. No.	Part No.	Qty.	Description
1	113108	1	Rod-PTO Housing
2	102872	1	Shaft-PTO
3	32120-72	2	Ring-Retaining
4	32120-62	1	Ring-Retaining
5	109842	1	Bearing-Ball
7	103478-01	1	Housing-Clutch
8	94-6650	1	ASM-Plate
9	7443	1	Pulley-Engine
10	105453	1	Key-Sq
11	3246-2	2	Screw-HSH Set
12	6659	2	Retainer
13	6658	1	Race-Bearing
14	9080026	4	Screw-Lock
15	6663	1	Seal-Oil
16	6662	1	Bearing-Needle
17	32128-40	1	Nut-Lock
18	94-3726-01	1	Wa-Bracket
19	323-6	1	Screw-HH
20	106695	1	Ring-Push On
21	94-3704	1	Belt Cover-PTO
22	94-3735	2	Nut-Wing
23	9335064	1	Hairpin
24	3256-27	1	Washer-Flat
25	933274	1	Pin-Spirol
26	113107	1	Clevis

Ref. No.	Part No.	Qty.	Description
27	111314	1	Lock Pin ASM
28	94-3729	1	Retainer-Bolt

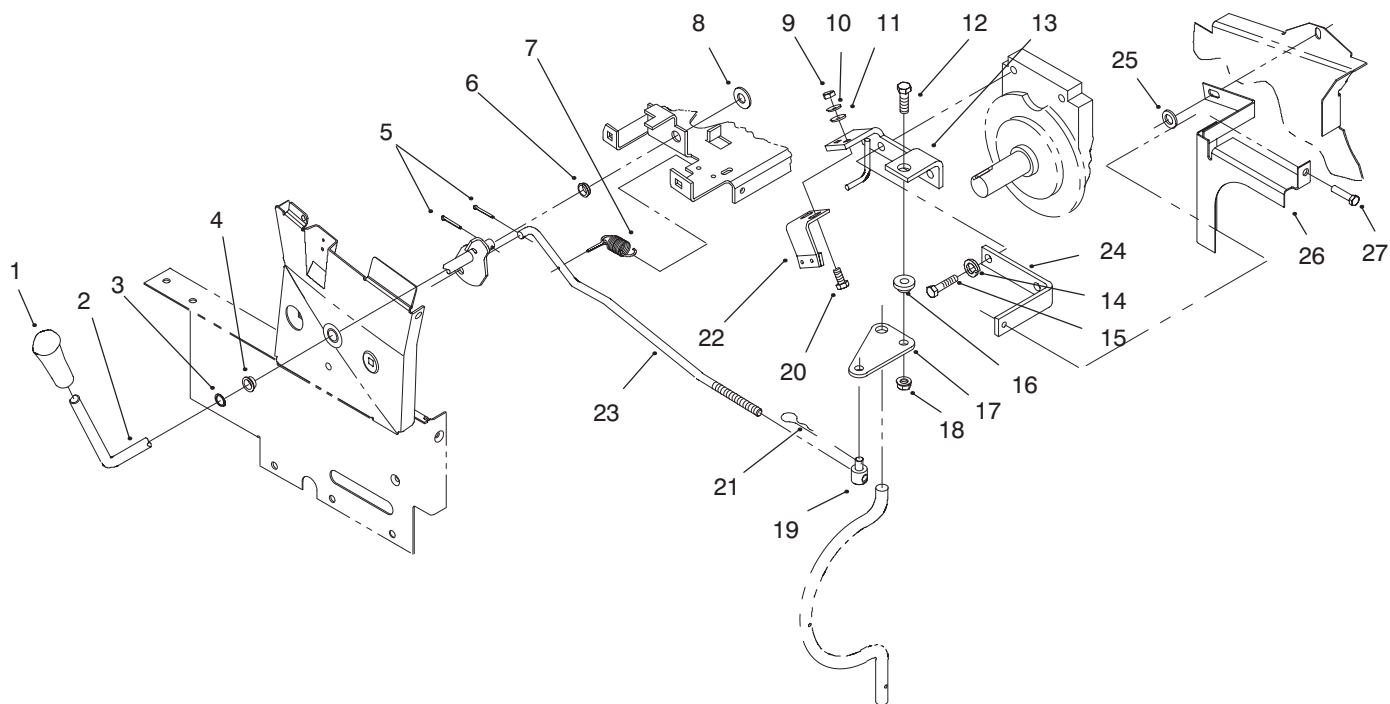 


Sheet No.: 24

PTO Clutch System

Ref. No.	Part No.	Qty.	Description
1	94-3727	1	Knob
2	94-3701	1	Rod-PTO Control
3	32151-11	1	Ring-Grip
4	5666	1	Bushing-Nyliner
5	3272-10	3	Pin-Cotter
6	5983	1	Bushing
7	103125	1	Spring-Extension
8	3765	1	Washer-Shim
9	3218-1	2	Nut-Jam
10	3253-3	2	Washer-Lock
11	3256-22	2	Washer-Flat
13	113874-03	1	Bracket-PTO
14	3253-21	2	Washer-Lock
15	323-7	2	Screw-HH
16	104859	1	Spacer-Link
17	110669	1	Plate-PTO
18	3296-59	1	Nut-Lock
19	110656	1	Trunnion
20	3229-25	2	Screw-CARR
21	9335054	1	Hairpin
22	94-6652	1	ASM-Brake
23	111052	1	Rod-PTO Clutch
24	94-1584-03	2	Bar-Support
25	3256-23	1	Washer-Flat
26	94-1587-03	1	Wa-Guard
27	9266944	1	Screw-HH


Ref. No.	Part No.	Qty.	Description

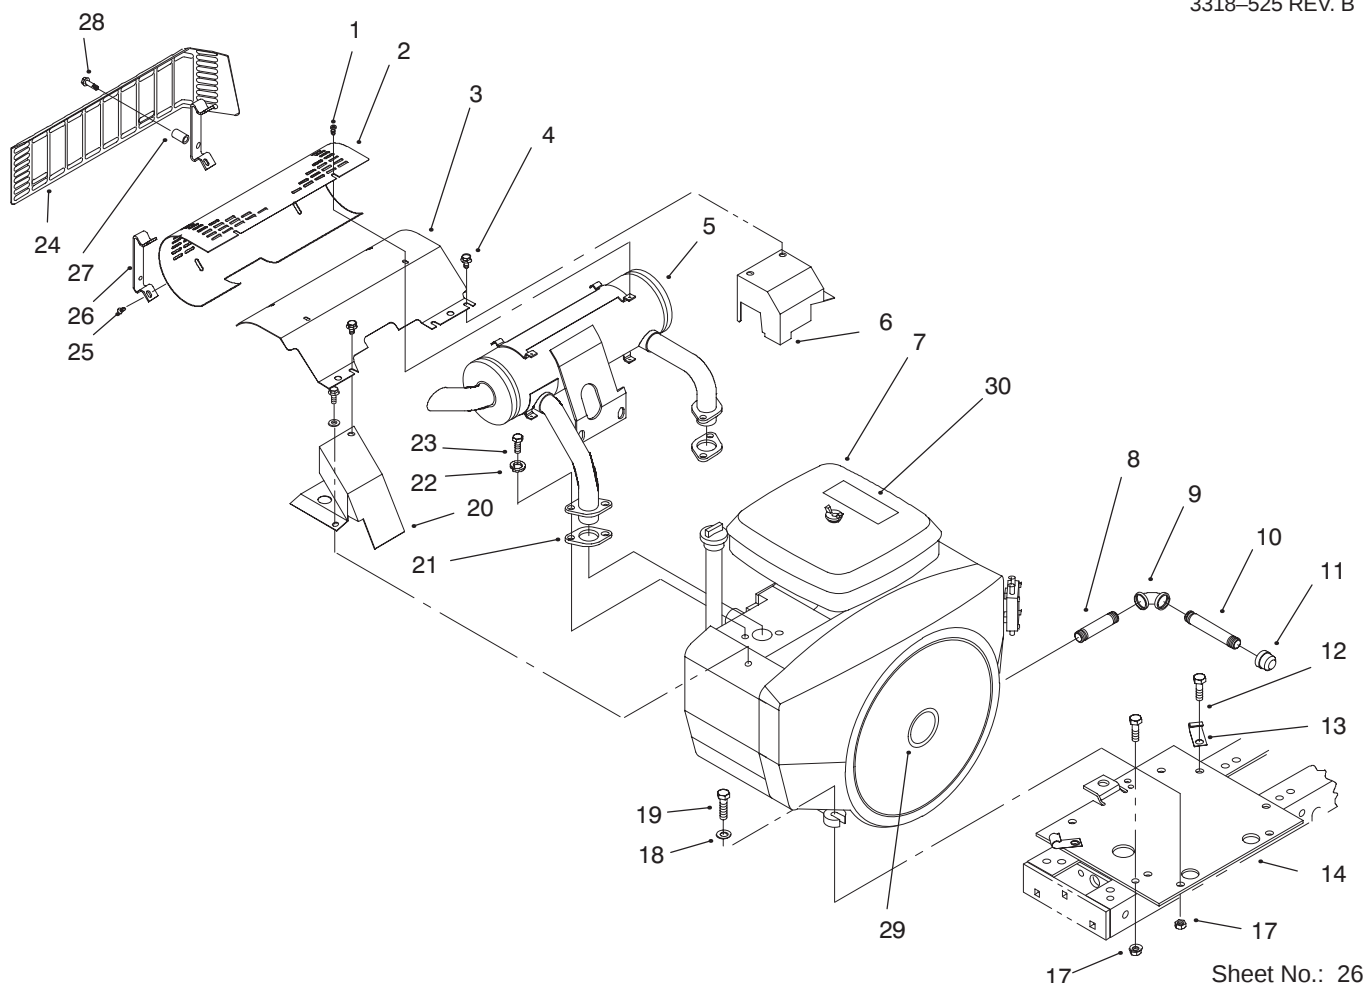 

Sheet No.: 26

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	114888	2	Screw	29	118530	1	Name Plate-Toro Logo
2	94-6664	1	Shield-Heat	30	118560	1	Decal-Power Plus 20
3	94-1803-03	1	Baffle-Deflector				
4	49-2040	3	Screw-HH				
5	116471	1	Muffler				
6	114216-03	1	Cover-Exhaust Rear				
7	94-1811	1	Engine-Onan				
8	114636	1	Nipple				
9	114764	1	Elbow-90°				
10	114763	1	Nipple				
11	288-4	1	Cap-Pipe				
12	323-6	4	Screw-HH				
13	8830	2	Retainer-J				
14	116609-03	1	Plate-Engine				
17	3296-39	8	Nut-Lock				
18	3256-24	4	Washer-Flat				
19	323-8	4	Screw-HH				
20	114215-03	1	Cover-Exhaust Front				
21	57-9210	2	Gasket-Manifold				
22	3253-4	4	Washer-Lock				
23	322-3	4	Screw-HH				
24	94-9700-03	1	Shield-Heat				
25	32144-28	4	Screw-Phcr				
26	93-9287-03	2	Bar-Guard				
27	94-9701	4	Spacer				
28	32144-110	4	Screw-HWHTF				

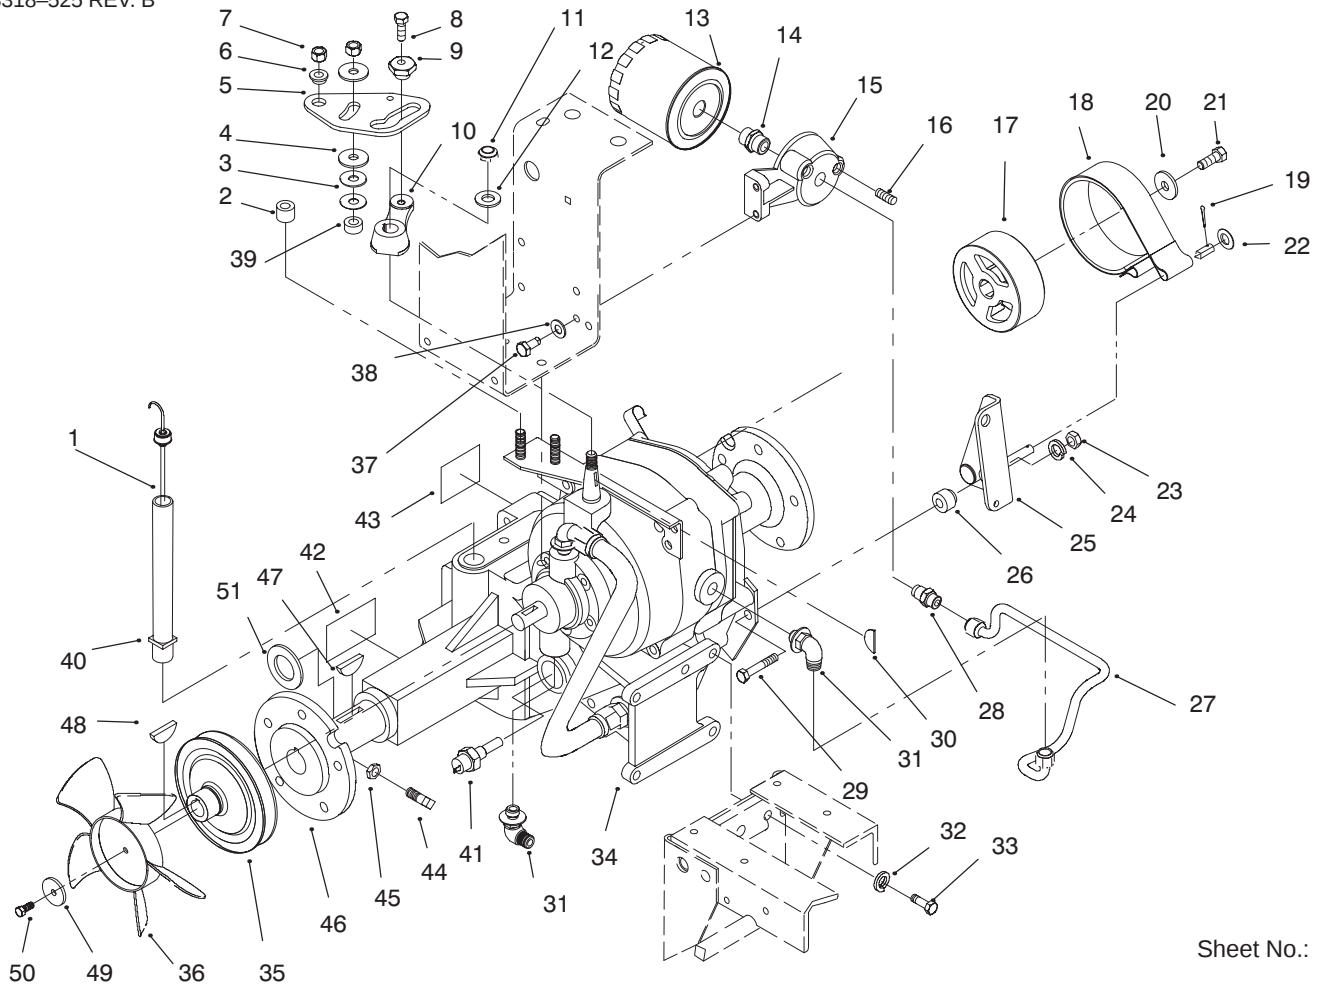 


Sheet No.: 28

Transmission Control & Filter Assembly

Ref. No.	Part No.	Qty.	Description
1	110768-03	1	Dipstick
2	108326-03	1	Spacer-Pivot
3	100365	2	Washer-Spring Disc
4	100305	2	Washer-Friction
5	108333	1	Plate-Cam
6	100309	1	Bushing-Cam Pivot
7	108881	2	Nut-Hex
8	9080196	1	Screw-HH
9	106661	1	Cam-Eccentric
10	108325	1	Arm-Speed Control
11	3296-45	1	Nut
12	3256-26	1	Washer-Flat
13	79-5270	1	Filter-Oil
14	5991	1	Fitting-Filter
15	108323	1	Base-Filter
17	106719	1	Drum-Brake
18	109371	1	Brake Band
19	3272-6	2	Pin-Cotter
20	2844	1	Washer-Flat
21	3235-22	1	Screw-HH
22	3256-24	2	Washer-Flat
23	3296-39	1	Nut-Lock
24	3256-4	1	Washer-Flat
25	78-7740-01	1	Pivot Arm-Brake
26	109356	1	Bushing-Pivot

Ref. No.	Part No.	Qty.	Description
27	79-5020	1	Tube Cmplt- Flatr To Pump
28	102628	1	Fitting-Tube
29	323-9	1	Screw-HH
30	3257-24	1	Key-Woodruff
31	108365	2	Fitting-Tube
32	3253-21	4	Washer-Lock
33	323-7	4	Screw-HH
33	94-6672	1	Transaxle ASM
34	94-6679	1	Transaxle/Intl Decal
35	108316	1	Pulley-Hydro
36	108393	1	Fan-Hydro
37	322-3	2	Screw-HH
38	3253-4	2	Washer-Lock
39	108327	1	Spacer-Pivot
40	106448	1	Nipple-Trans Filler
41	113193	1	Sensor-Hydro Oil Temp
42	94-5592	1	Decal-Danger
43	94-1834	1	Decal-Unidrive
44	3243-5	4	Screw-Set
45	3218-3	4	Nut-HJ
46	105763-03	2	Hub-Wheel
47	937108	2	Key-Woodruff
48	937089	2	Key-Woodruff

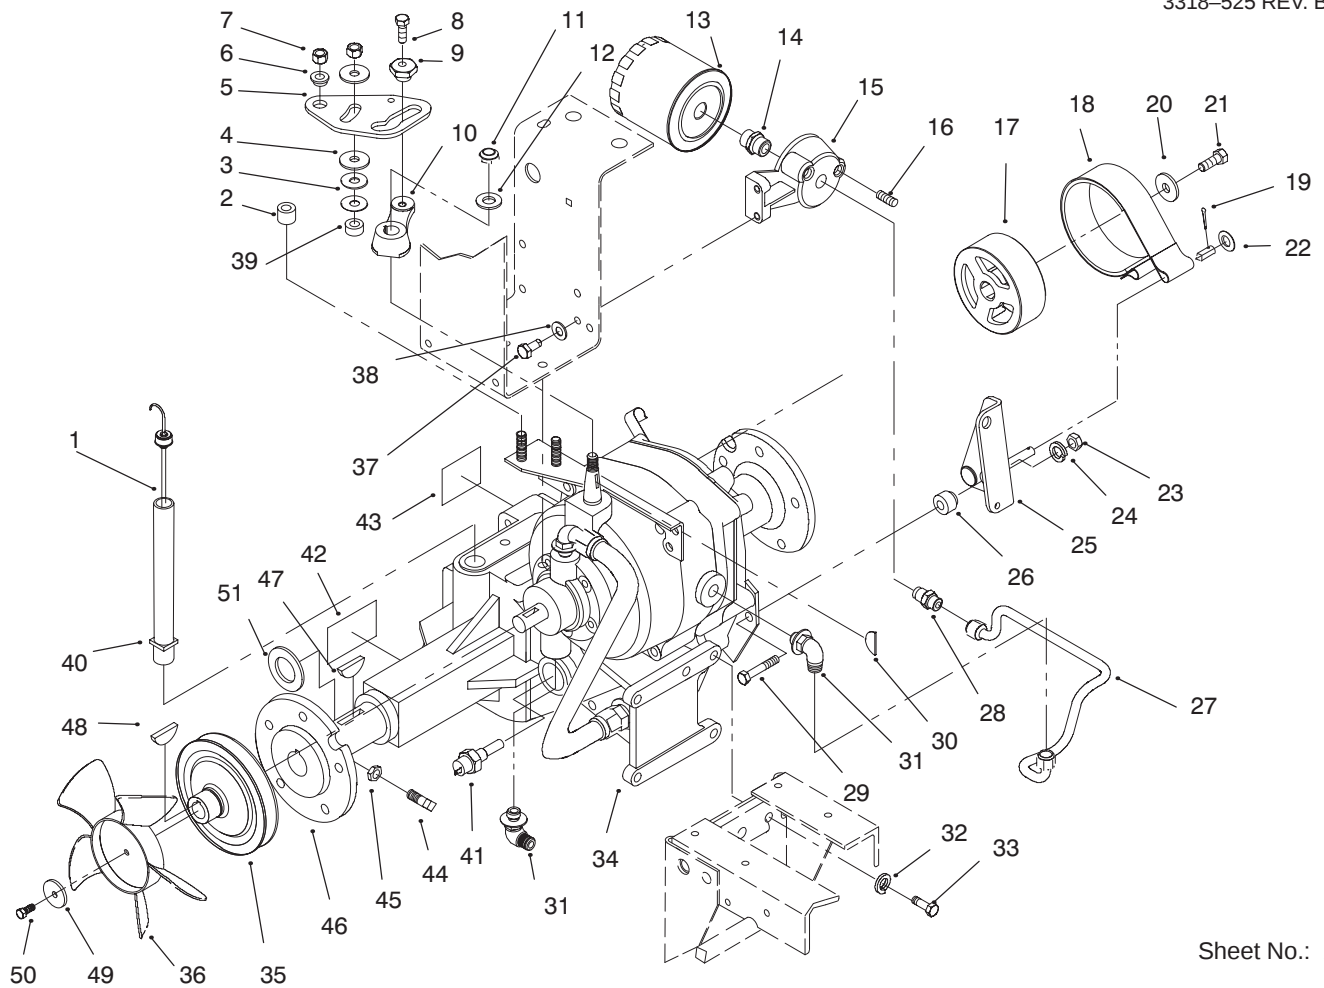 


Sheet No.: 28

Transmission Control & Filter Assembly

Ref. No.	Part No.	Qty.	Description
49	103995	1	Washer
50	9080026	1	Screw-Lock
51	106826	2	Washer-Thrust

Ref. No.	Part No.	Qty.	Description

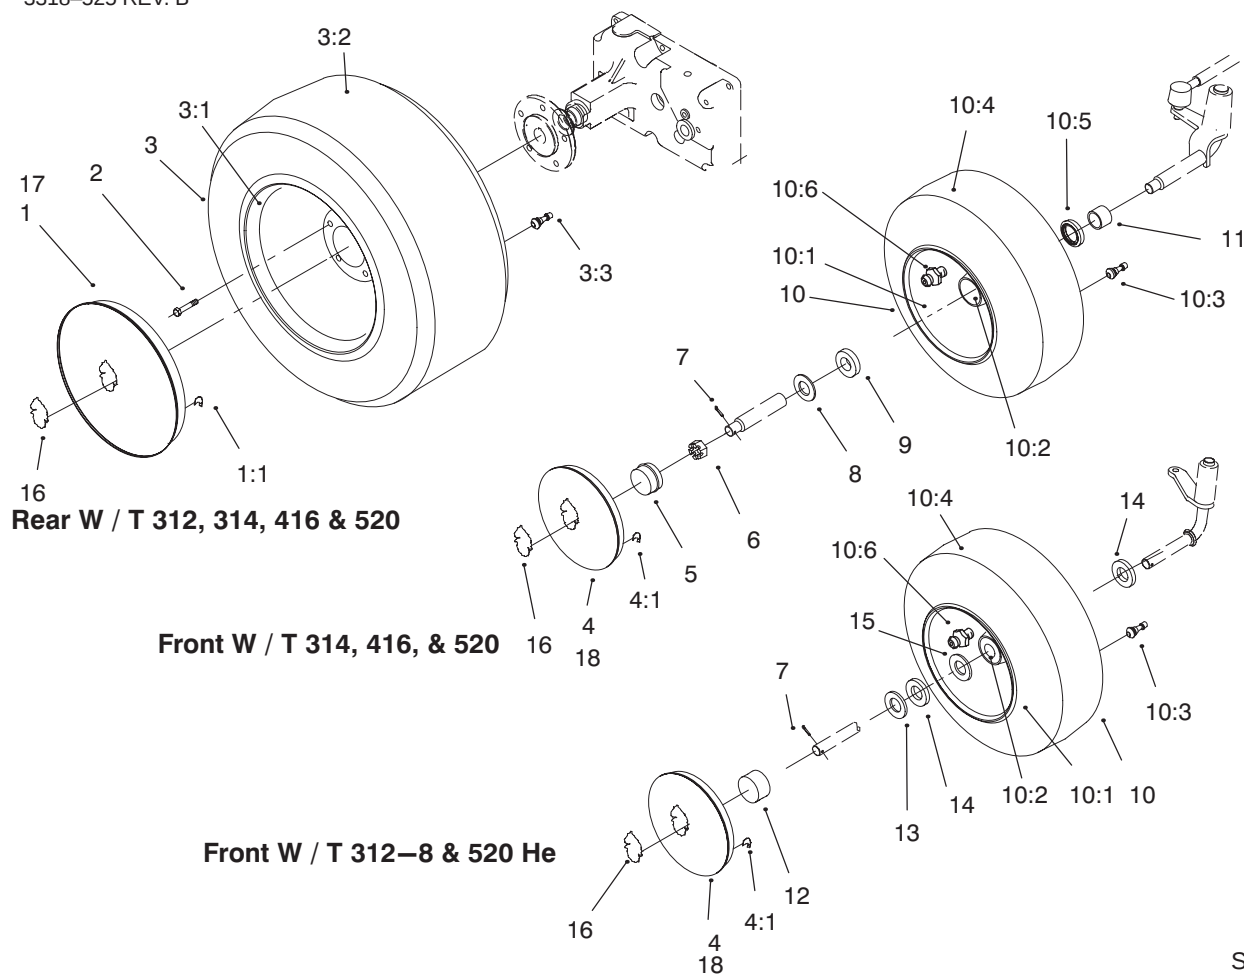 

Sheet No.: 29

Wheel Assemblies


Ref. No.	Part No.	Qty.	Description
2	83-2720	10	Bolt-Lug
3		2	ASM-Wheel & Tire
3:1	111516	2	Wheel
3:2	116744	2	Tire
3:3	5108	2	Valve-Tire Tubeless
7	3272-17	2	Pin-Cotter
10	93-9800	2	ASM-Wheel & Tire
10:1	93-9801	2	ASM-Wheel w/Zerk
10:2	110513	4	Bearing-Wheel
10:3	5108	2	Valve-Tire Tubeless
10:4	117127	2	Tire
10:6	109500	2	Fitting-Grease
12	111951	2	Cap-Hub
13	111952	2	Washer
14	1278	4	Washer-Shim
15	5210	2	Washer-Shim

Ref. No.	Part No.	Qty.	Description

Sheet No.: 30

Hitch Assembly

Ref. No.	Part No.	Qty.	Description
1	323-44	6	Screw-HH
3	102644-01	2	Plate-Hitch
4	108881	6	Nut-Hex
5	105269	1	Pin-Drawbar Hitch
6	9791204	2	Spacer
7	1644-01	1	Hitch ASM
8	106634	1	Pin-Tool
9	3256-26	1	Washer-Flat
10	9335054	1	Hairpin
11	5618	2	Ring-Retaining
12	9038	1	Grip
14	105316	2	Cap-Rod
15	101017	1	Lock-Hitch
16	83-6520	1	Rod-Lock
17	117930	1	Latch ASM-Mid
18	105797	8	Ring-Retaining
19	101750	1	Rod-Latch Pivot
20	8616	2	Spring
22	93-1613	1	Latch-Front
23	101707	1	Lock-Attachment
24	3296-39	3	Nut-Lock
25	101711-01	1	Plate-Front Hitch
26	3231-25	3	Screw-CARR
27	101751	1	Rod-Lock
28	8830	1	Retainer-"J"
29	92-8747	2	Decal-Attach A Matic

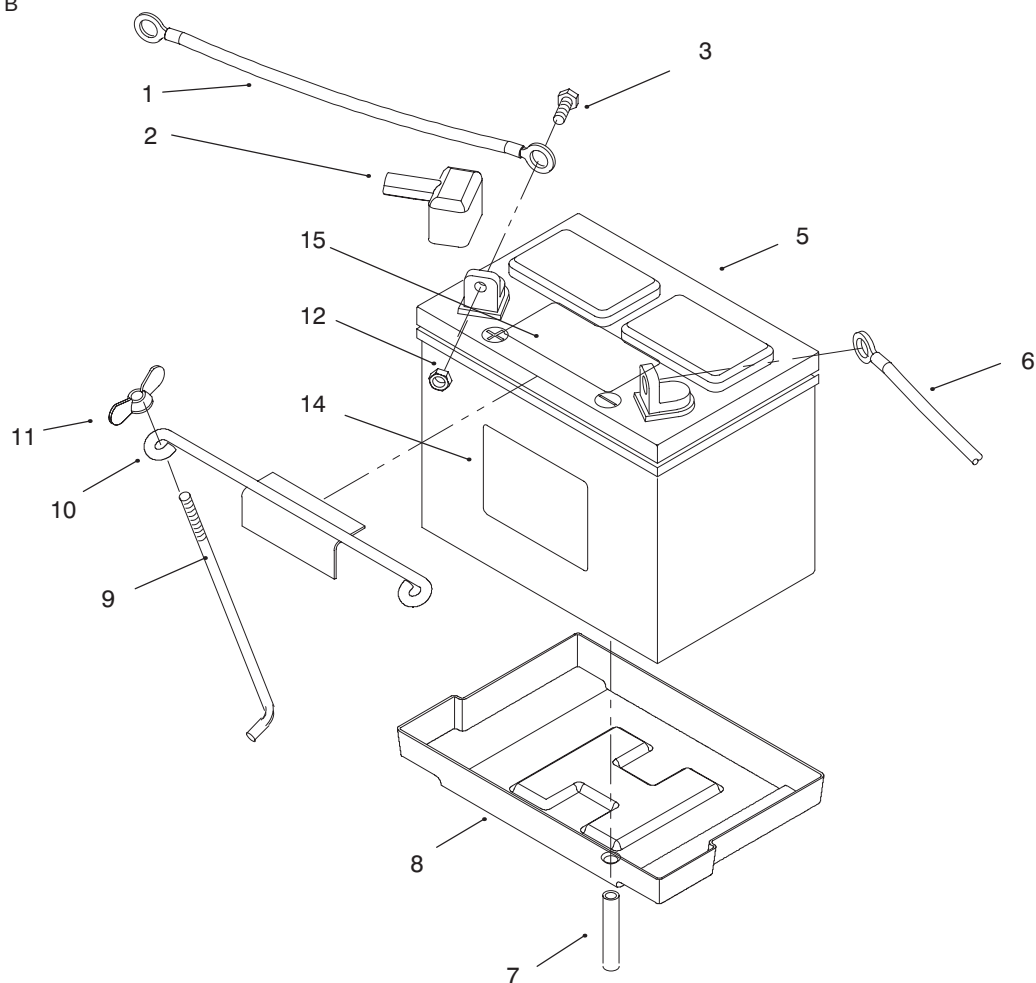 


Sheet No.: 31

Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	113925	1	Cable—40" Lg
2	28—8080	1	Boot—Battery Terminal
3	321—4	2	Screw—HH
5	94—6666	1	ASM—Battery/Decal
6	114210	1	Cable—24" Lg
7	114720	1	Tube—Battery Drain
8	106948	1	Tray—Battery
9	113969	2	Hook—Retainer
10	113010	1	Hold Down
11	32103—22	2	Nut—Wing
12	3296—42	2	Nut—Lock
14	93—6668	1	Decal—Instruct
15	93—7276	1	Decal—Danger


Ref. No.	Part No.	Qty.	Description

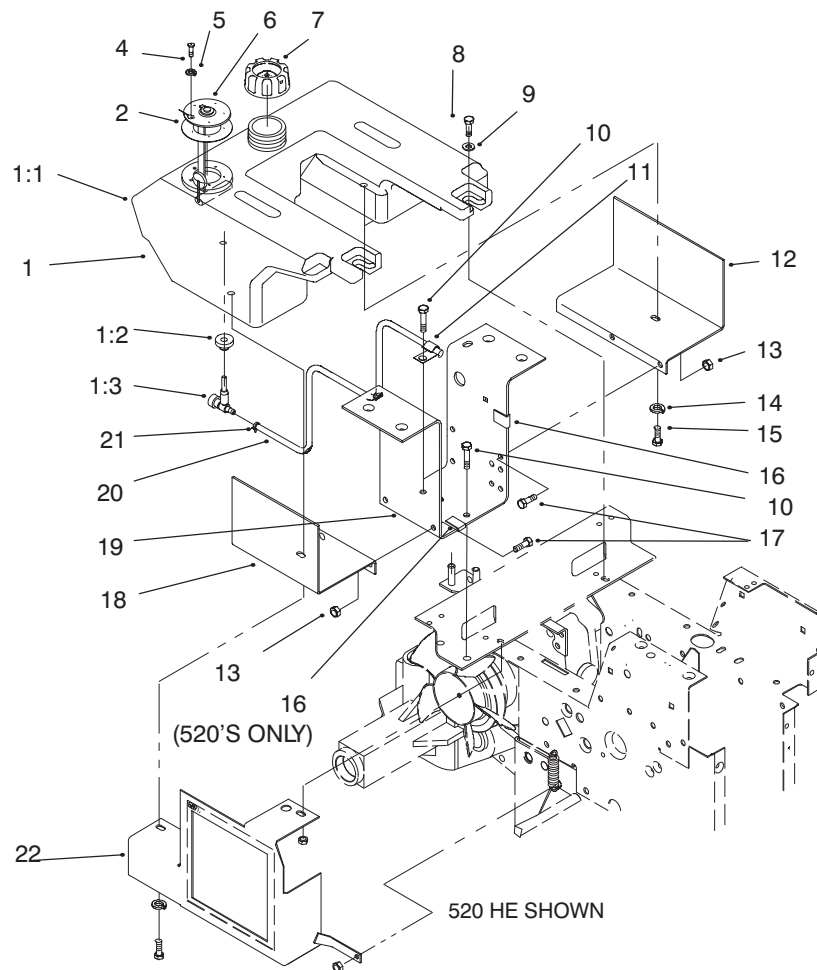 

Sheet No.: 32

Fuel Tank & Hydro Fan Control Assembly 500

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	113372	1	Gasket-Fuel Sender				
4	9108074	5	Screw-Machine				
5	3253-17	5	Washer-Lock				
6	113358	1	Sender-Fuel Level				
7	55-3570	1	Cap-Fuel				
8	9266974	2	Screw-HH				
9	3256-4	2	Washer-Flat				
10	3235-22	2	Screw-HH				
11	8830	1	Retainer-"J"				
12	94-6693-01	1	Bracket-Support				
13	3296-29	4	Nut-Lock				
14	3253-4	2	Washer-Lock				
15	322-2	2	Screw-HH				
16	519337	2	Clip				
17	322-3	4	Screw-HH				
18	94-6692-01	1	Bracket-Support				
19	79-4990-01	1	Bracket-Fender Support				
20	92-9513	1	Line-Fuel 47"				
21	2412-98	2	Clamp-Hose				
22	94-6661-03	1	Guard-Fan				

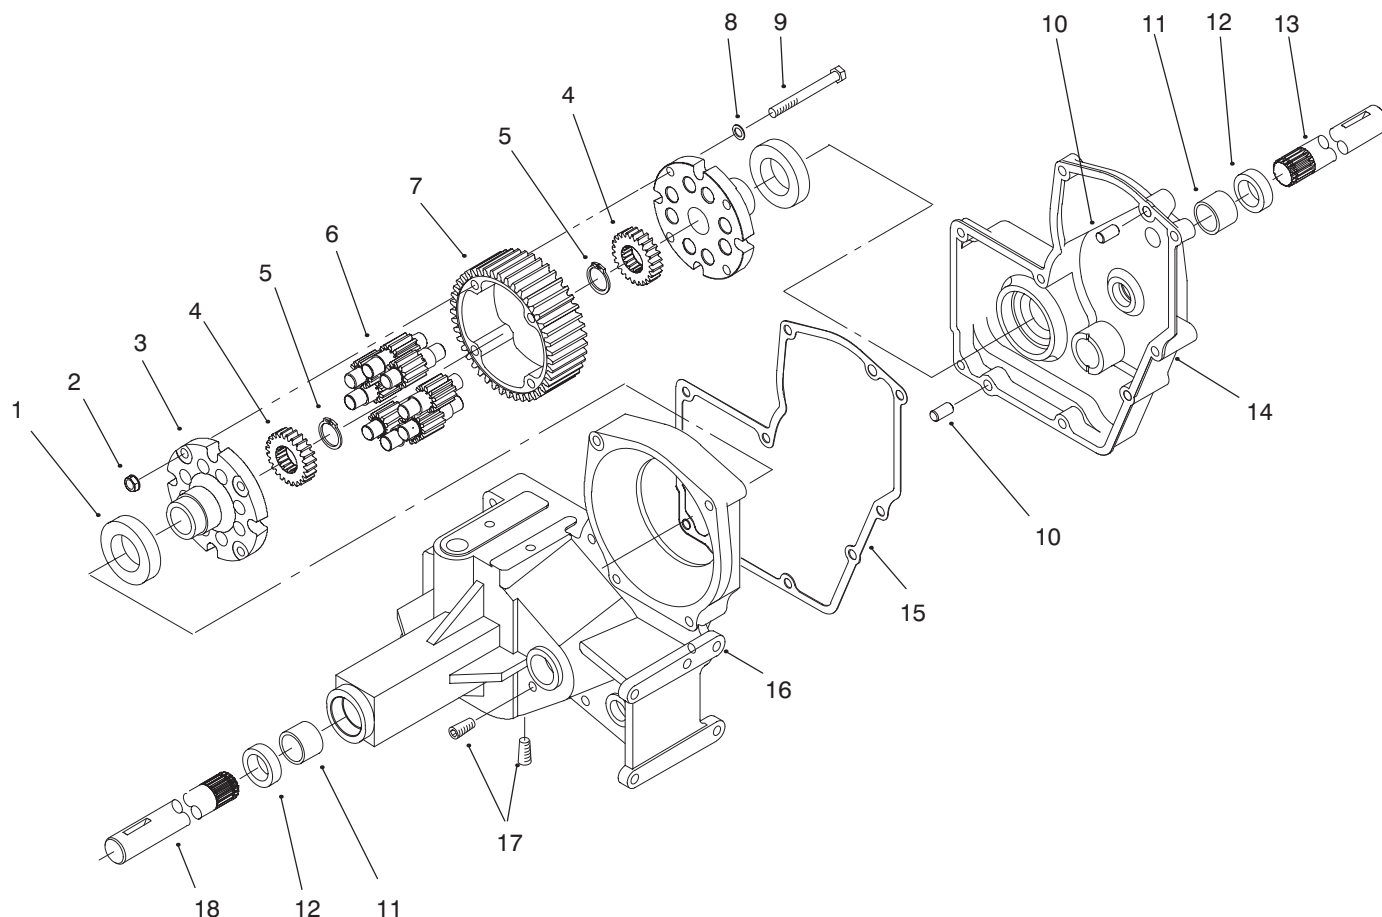 


Sheet No.: 201

Hydrostatic Transmission

Ref. No.	Part No.	Qty.	Description
1	111199	2	Bearing-Ball
2	108881	4	Nut-Hex
3	111196	2	Cap-End
4	101889	2	Gear-Axle
5	105876	2	Ring-Retaining
6	101623	8	Gear-Pinion
7	105061	1	Gear-Differential
8	107374	4	Washer-Flat
9	911423	4	Screw-HH
10	108363	2	Pin-Locating
11	9416	2	Bearing-Needle
12	6449	2	Seal-Oil
13	108361	1	Axle-Rear
14	111201-01	1	Case-Transaxle
15	108312	1	Gasket-Transaxle
16	113927-01	1	Case-Transaxle
16	92-7298	1	Casehalf Decal ASM
16:1	113927-01	1	Case-Transaxle
16:2	88-2790	1	Decal-Danger
17	281-10	2	Plug-Pipe
18	108362	1	Axle-Rear

Ref. No.	Part No.	Qty.	Description

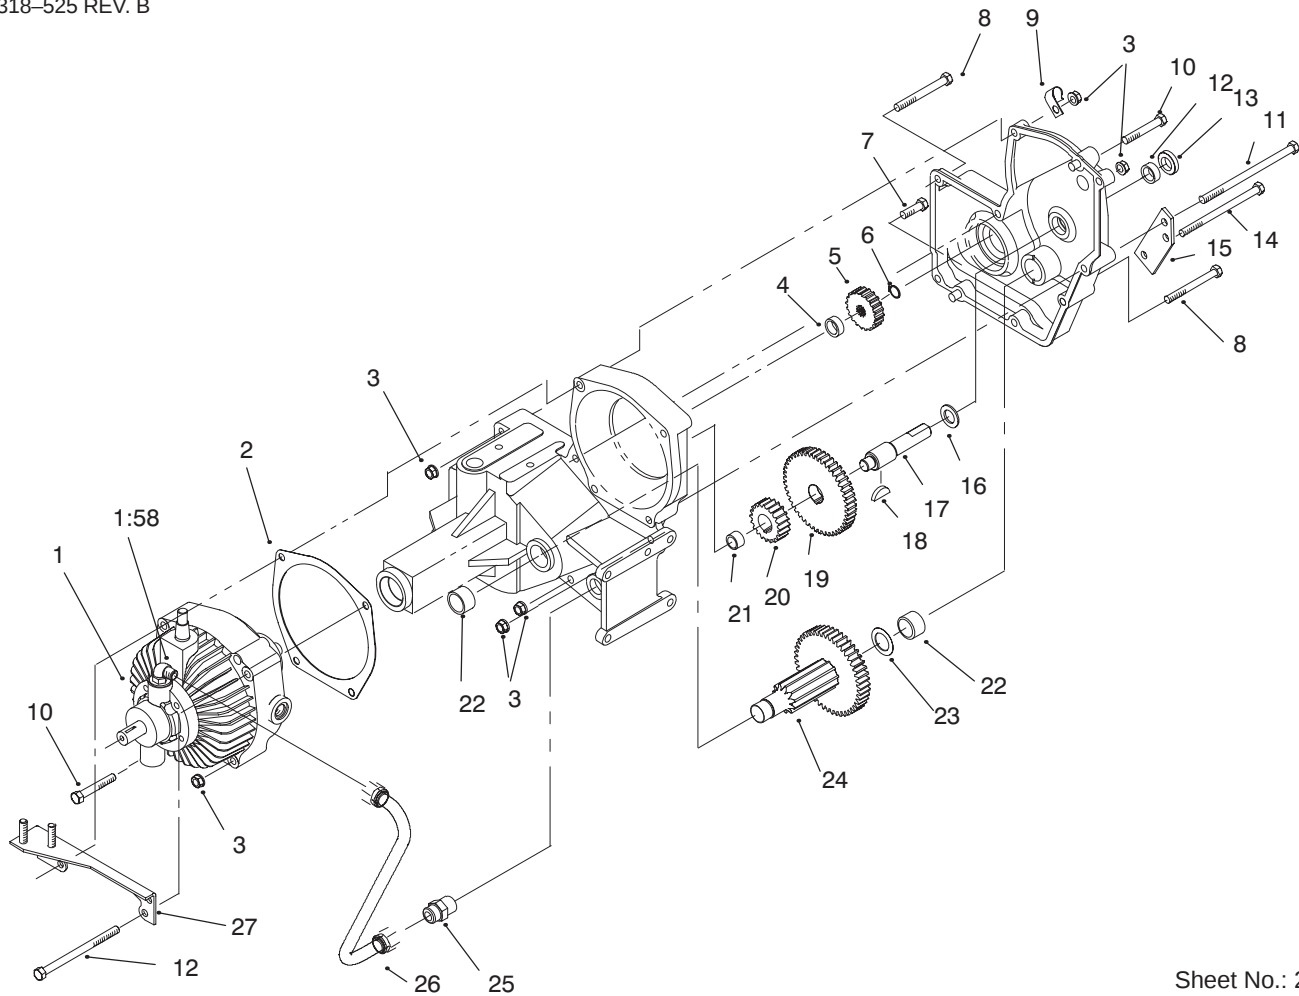 

Sheet No.: 202

Hydrostatic Transmission (Continued)


Ref. No.	Part No.	Qty.	Description
1	92-9848	1	Trans-Hydro (Service)
2	108319	1	Gasket-Transmission
3	3296-39	6	Nut-Lock
4	108366	1	Spacer-Gear
5	109751	1	Gear-20t
6	32120-64	1	Ring-Retaining
7	9080356	1	Screw-HH
8	323-15	2	Screw-HH
9	8830	1	Retainer-"J"
10	9080406	2	Screw-HH
11	323-26	1	Screw-HH
12	1538	1	Bearing-Needle
13	108357	1	Seal-Oil
14	323-25	3	Screw-HH
15	109367-03	1	Bracket-Brake
16	7956	1	Washer-Thrust
17	109370	1	Shaft-Brake
18	937099	1	Key-Woodruff
19	109752	1	Gear-46t
20	109742	1	Gear-20t
21	1518	1	Bearing-Needle
22	1532	2	Bearing-Needle
23	9547	1	Washer-Thrust
24	109703	1	ASM-Gear
25	108364	1	Fitting-Hyd

Ref. No.	Part No.	Qty.	Description
26	111217	1	Tube-Suction
27	108329-03	1	Plate-Control

This Page Intentionally Left Blank

3318-525 REV. B

 
Eaton Hydrostatic Transmission #110-062

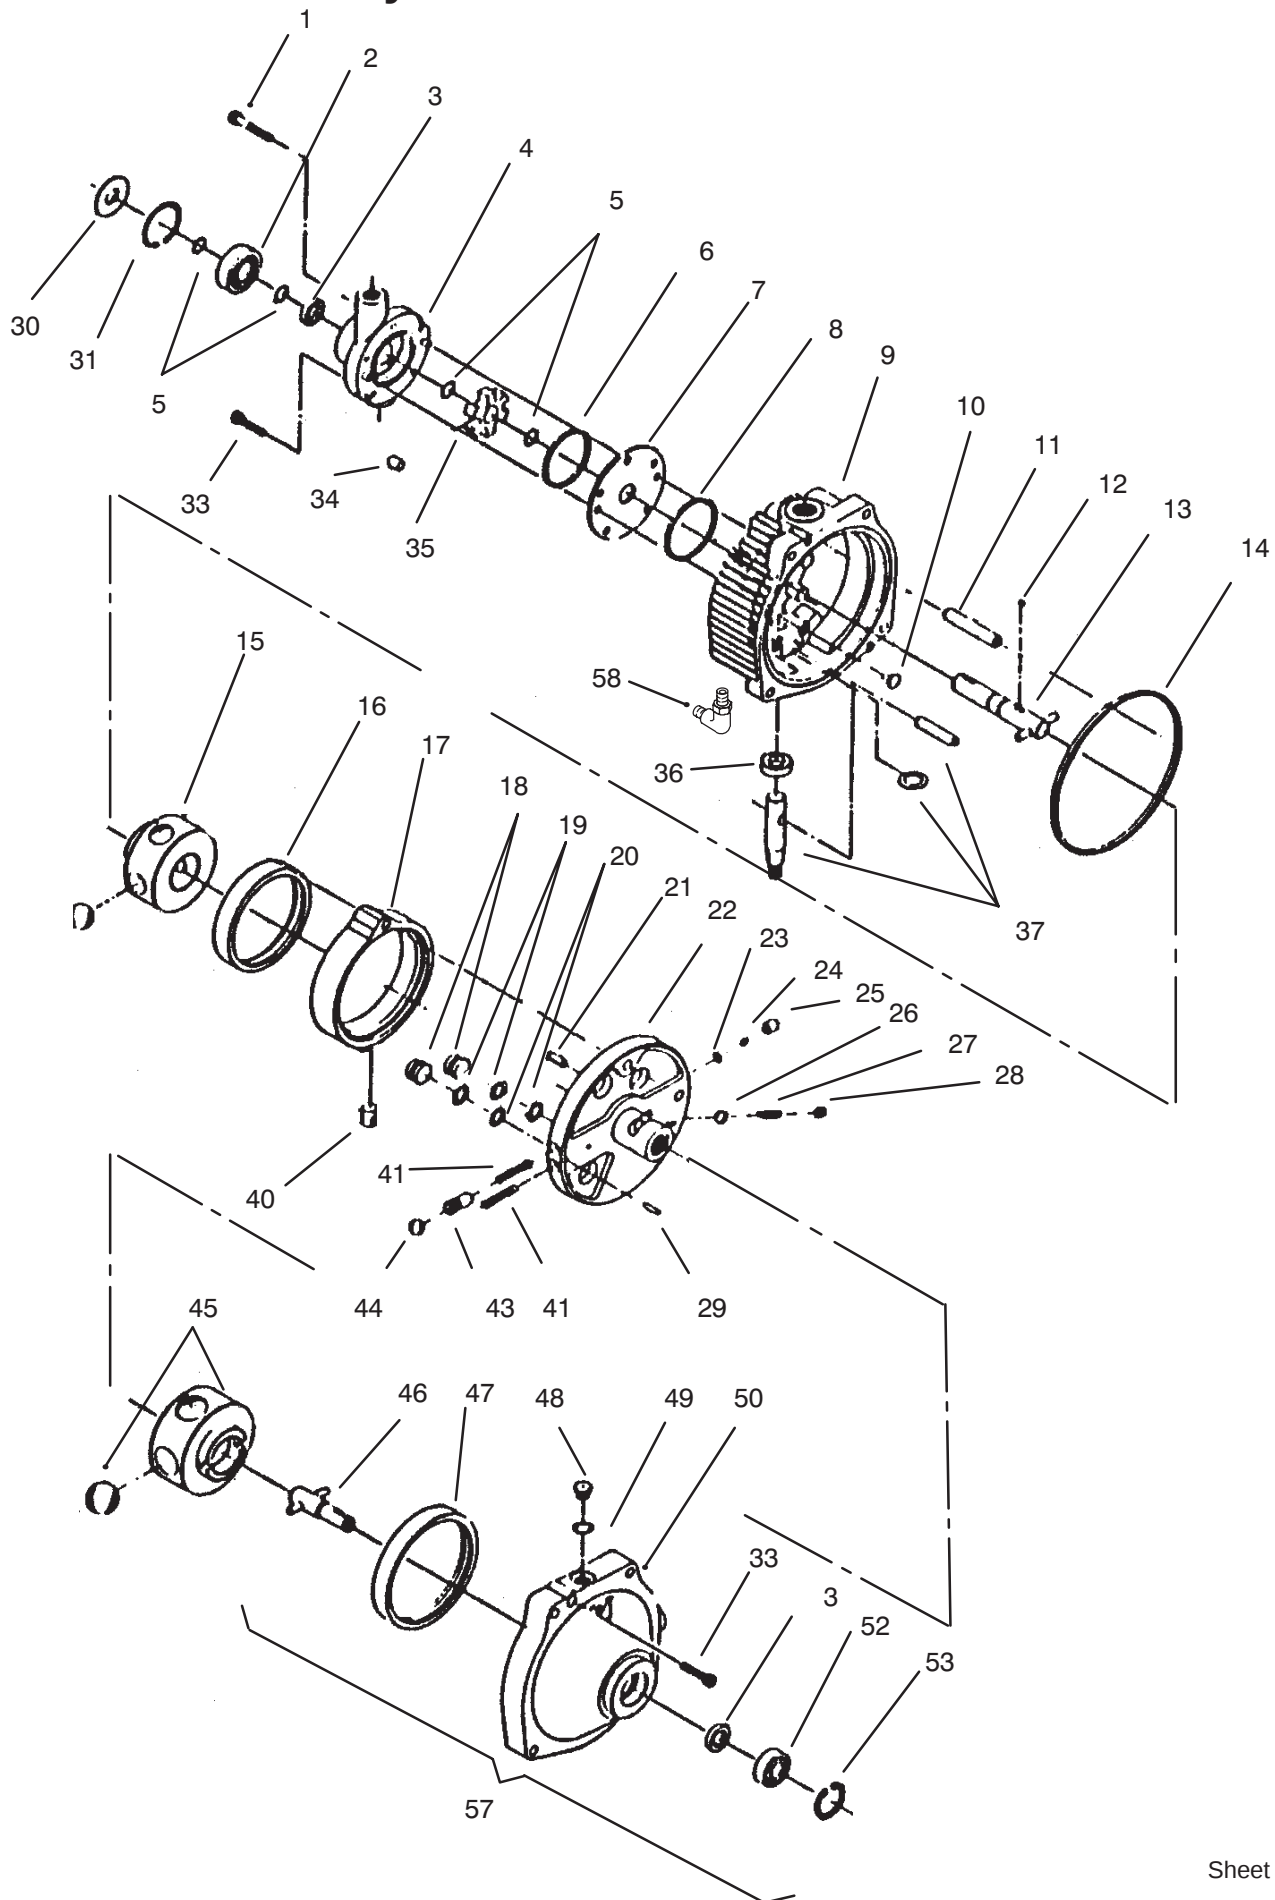

Eaton Hydrostatic Transmission #110-062

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	56-2800	1	Screw-HH Socket				
2	56-2810	1	Bearing-Ball				
3	56-2820	2	Seal-Oil				
4	112637	1	ASM-Pump				
5	56-3090	4	Ring-Retaining				
6	56-2850	1	Ring-Seal				
7	56-2860	1	Plate-Pump				
8	56-2870	1	Ring-Seal				
9	112641	1	ASM-Cover				
10	56-2880	2	Button				
11	56-2890	1	Pin-Dowel				
12	56-2900	1	Pin-Drive				
13	56-2910	1	Shaft-Input				
14	56-2920	1	Ring-Seal				
15	56-2930	1	Rotor/Ball-Pump				
16	113136	1	Race-Pump				
17	93-9810	1	Ring-Cam				
18	56-2950	2	Piston				
19	56-2960	2	Ring-Backup				
20	56-2970	2	O-Ring				
21	56-2980	1	Pin-Coil				
22	56-2990	1	ASM-Pintle				
23	56-3000	2	Ring-Retaining				
24	56-3010	2	Ball-.313 Dia				
25	56-3020	2	Body-Valve				
26	56-3030	1	Ball-.438 Dia				
27	56-3040	1	Spring-Valve				
28	56-3050	1	Plug-Valve				
29	56-3060	1	Pin-Dowel				
30	112652	1	Shield-Grass				
31	112653	1	Ring-Retaining				
33	56-3100	6	Screw-Socket Hd				
34	56-3110	6	Roller				
35	56-3120	1	Carrier				
36	56-3130	1	Seal-Oil				
37	56-3140	1	Kit-Shaft				
40	56-3170	1	Insert-Ring				
41	56-3180	1	Spring-Valve				
43	56-3200	2	Body-Valve				
44	56-3210	2	Ball-.625 Dia				
45	56-3220	1	Rotor/Ball-Motor				
46	56-3230	1	Shaft-Output				
47	56-3240	1	Race-Motor				
48	56-3250	1	ASM-Plug				
49	56-3260	1	O-Ring				
50	93-9811	1	Body				
52	56-3280	1	Bearing-Ball				
53	56-3290	1	Ring-Retaining				
*55	56-3310	1	Kit-Seal				
			Incl.3 6 14 12 19 20 49				
56	56-2940	1	ASM-Ring				
57	93-9812	1	ASM-Body				
58	93-9813	1	Fitting-Hydraulic				

 * Not Illustrated




Starter

Ref. No.	Part No.	Qty.	Description
1	62-2760	1	Kit-Starter Hardware
2	71-6040	1	Starter Incl 1-13
3	57-9770	2	Washer-Flat
4	79-6580	2	Screw-Cap
5	72-3950	1	Seal-Dust
6	72-3940	1	Clutch-Starter
7	62-2770	1	Kit-Starter Shift Lever
8	72-3930	1	Kit-Starter Solenoid
9	NN10930	1	Cap-Starter Solenoid
10	92-5935	1	Nut
11	62-2740	1	Starter Brush Kit
12	NN10929	1	Kit-Mounting Bracket
13	62-2730	1	Kit-Bushing

Ref. No.	Part No.	Qty.	Description

 
3318-525 REV. B



Engine Housing

Ref. No.	Part No.	Qty.	Description
1	92-0920	1	Housing-Cylinder Air LH
2	82-1600	2	Screw-Cap Hex Flg Hd
3	59-0580	1	Clamp-Wire
4	59-0980	2	Screw TAP Washer Hd
5	59-0830	6	Washer-Flat
6	59-0970	2	Screw TAP Flg Hd
7	71-6220	1	Clip-Wire
8	82-1540	1	Bolt-Hex Hd
9	59-1080	4	Screw-Cap Flg Hd
10	71-6080	2	Bracket-Lift
12	92-0921	1	Housing-Cylinder Air RH
16	59-0820	4	Washer-Flat
17	NN10769	1	Housing-Blower
18	82-0620	1	Guard-Stationary
19	118530	1	Name Plate-Toro Logo
20	82-1590	4	Screw-PH Torx
21	59-1100	2	Screw-Lock Hd
22	NN10832	1	Bracket-Governor Adjust

Ref. No.	Part No.	Qty.	Description

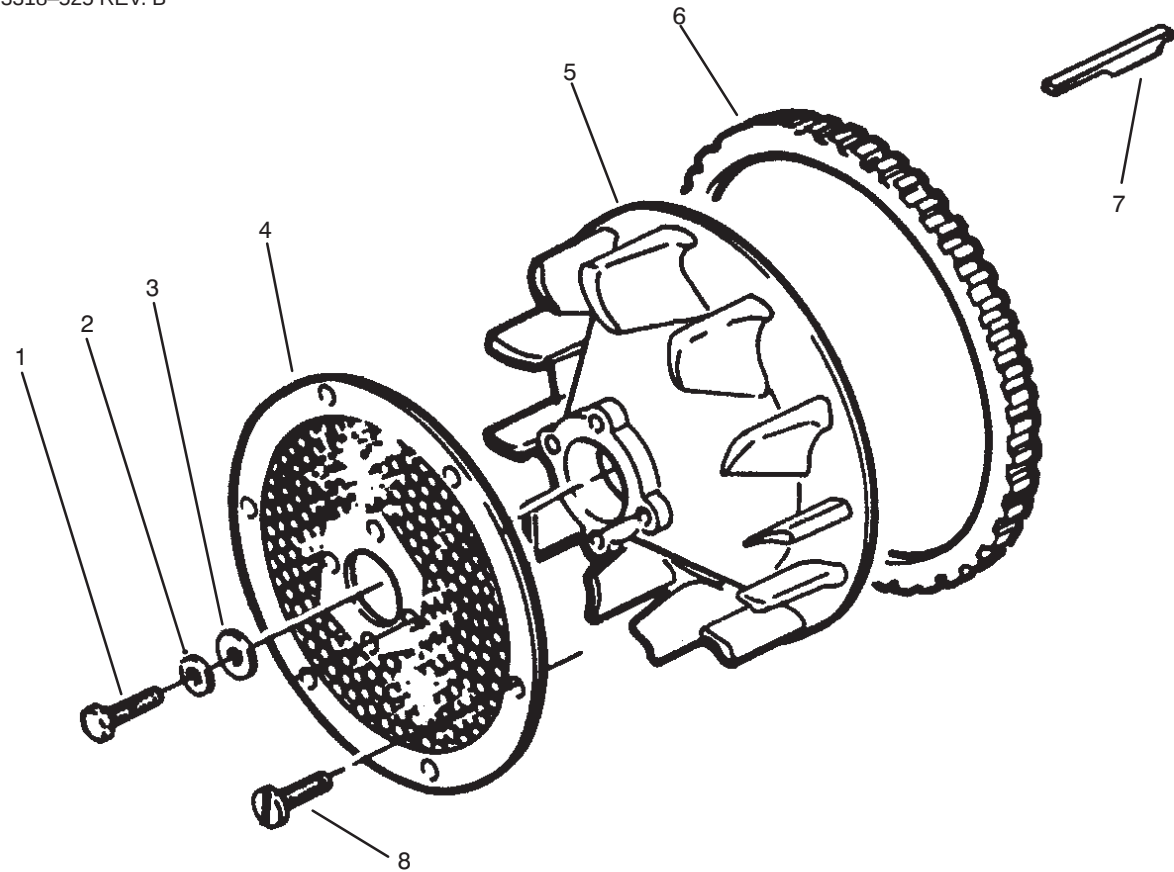 


Sheet No.: 403

Flywheel

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	57-8150	1	Screw-Cap Hex Hd				
2	82-1320	1	Washer-Flat				
3	59-0810	1	Washer-Flat				
4	79-6440	1	Screen-Air Inlet				
5	71-5920	1	Flywheel Incl 6				
6	57-8180	1	Gear-Ring				
7	71-6190	1	Key-Flywheel				
8	71-6340	6	Spring-Compression				

Part Identified in illustration but not in part list are not used on this model

 3318-525 REV. B

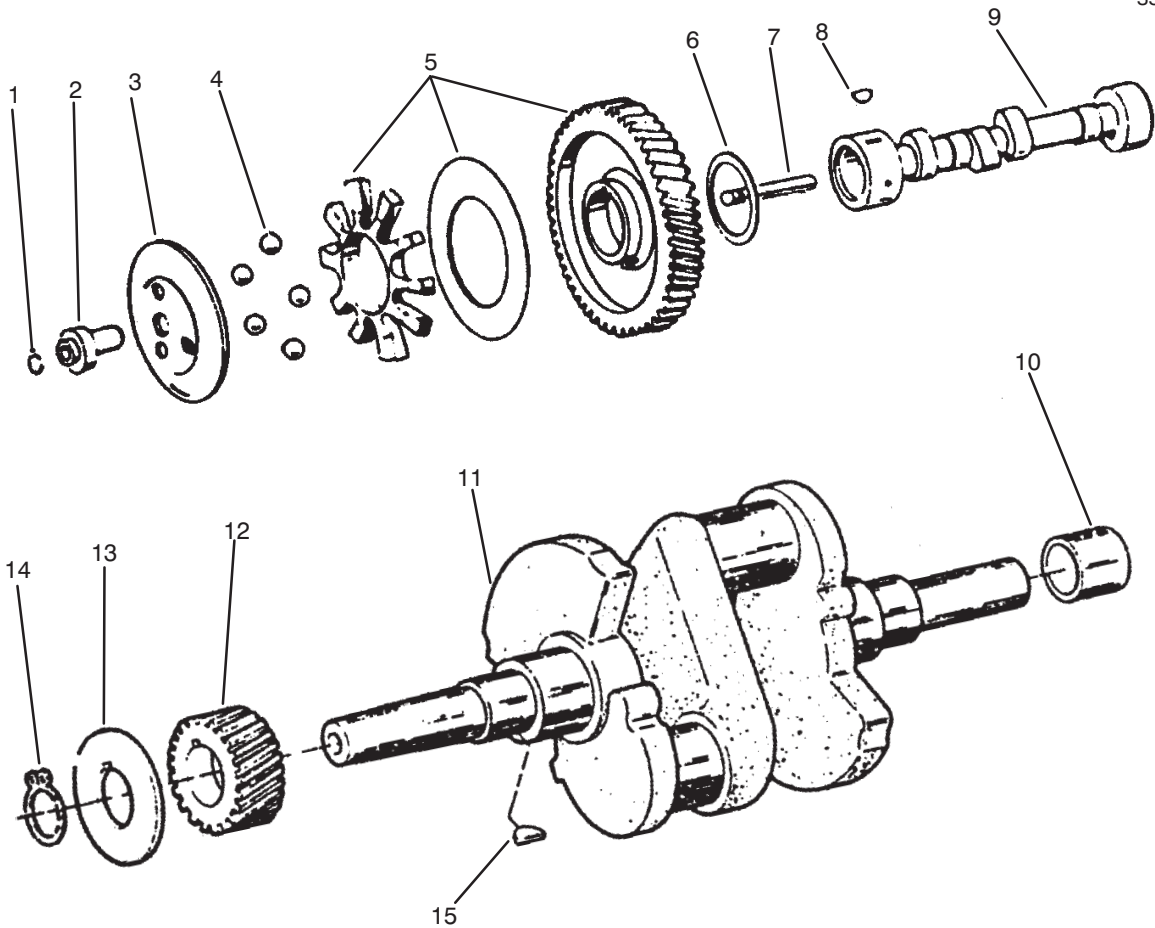

Sheet No.: 404

T-xxxx

Cam & Crankshafts

Ref. No.	Part No.	Qty.	Description
1	57-9090	1	Ring-Retaining
2	57-9130	1	Hub-Governor Cup
3	59-0450	1	Cup-Governor
4	57-9640	1	Ball-Governor
5	57-8210	1	Gear-Camshaft
6	57-8230	1	Washer-Thrust
7	59-0400	1	Pin-Center
8	57-9660	1	Key-Woodruff
9	71-6320	1	Camshaft (220)
10	92-0911	1	Sleeve-Bearing
11	NN10773	1	Crankshaft (220)
12	57-8130	1	Gear-Crankshaft
13	57-8140	1	Washer-Gear
14	57-9710	1	Ring-Retaining
15	57-9660	1	Key-Woodruff

Ref. No.	Part No.	Qty.	Description



Ref. No.	Part No.	Qty.	Description
1	82-1560	1	Screw
2	79-6460	1	Bracket-Fill Tube
3	82-1700	1	Nut-Speed
4	57-8490	1	Cup-Intake
5	57-8090	1	Gasket-Base
6	82-1310	4	Washer-Flat
7	NN10379	4	Screw-Cap Hex Hd
8	71-5730	1	Base-Oil
9	71-6170	1	Seal-Oil
10	82-1130	2	Plug-Square Head
11	NN10448	1	Tube-Oil Fill
12	57-9610	1	O Ring-Cap
13	NN10159	1	Cap-Indicator Oil Fill

30

3318-525 REV. B




Oil Filter

Ref. No.	Part No.	Qty.	Description
1	79-6470	1	Gasket-Adapter
2	82-0500	1	Adapter-Oil Filter
3	57-9750	2	Washer-Flat
4	NN10373	2	Screw-Cap Hex Hd
5	59-0640	1	Elbow-Street 45 Degree
6	94-1845	1	Switch-Pressure
6	94-1845	1	Switch-Pressure
7	NN10143	1	Filter-Oil
8	82-0680	1	Filter-Gasket Oil
9	NN10894	1	Drain-Oil Filter
10	82-1510	2	Screw-Hex Hd

Ref. No.	Part No.	Qty.	Description

Part Identified in illustration but not in part list are not used on this model

 3318-525 REV. B

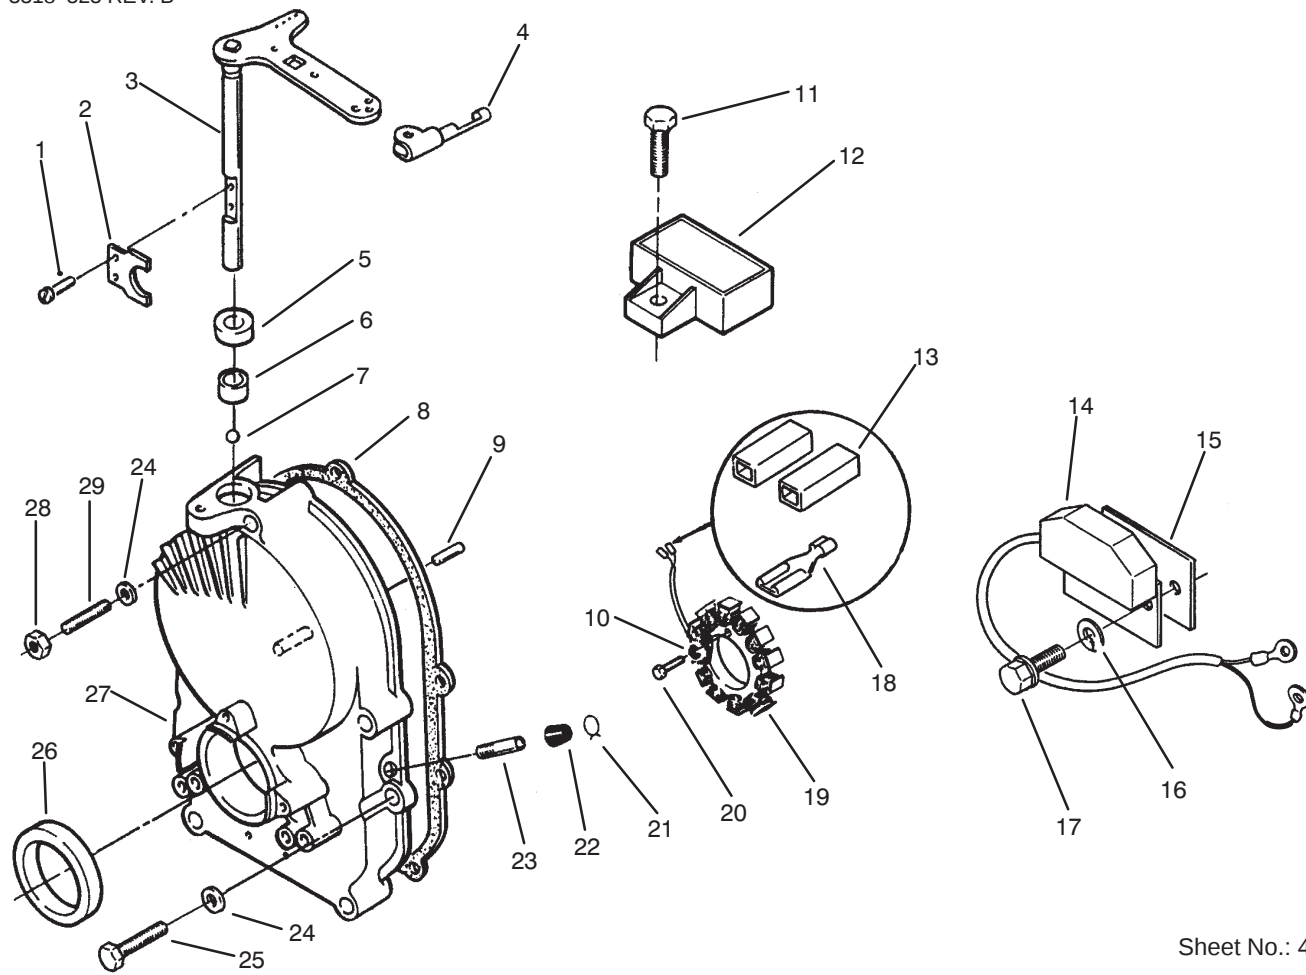


Sheet No.: 407

Gear Case & Ignition Controls

Ref. No.	Part No.	Qty.	Description
1	59-0950	2	Screw-Mach Pan Hd
2	59-0420	1	Yoke-Governor
3	NN10826	1	Shaft & Arm Governor
4	94-6680	1	Clip-Retaining New
5	57-9570	1	Seal-Oil
6	57-9650	1	Bearing-Govenor
7	57-9630	1	Shaft Bearing-Ball Gov
8	71-6360	1	Gasket-Mntg
9	59-0740	1	Pin-Dowel
10	3253-2	3	Washer-Lock #10
11	59-1080	1	Screw-Cap Flg Hd
12	57-9430	1	Regulator-Voltage 20 Amp
13	82-1000	2	Body-Term Conn Kit
14	71-6380	1	Control-Ignition
15	71-6410	1	Insulator-Ignition
16	82-1660	2	Washer-Lock
17	NN10394	2	Screw-Hex Washer Hd
18	59-0590	2	Terminal-Stator Leads
19	92-0967	1	Stator
20	82-1500	3	Screw-Mach Hex Hd
21	57-9550	1	Clamp-Vacuum Port Cap

Ref. No.	Part No.	Qty.	Description
22	59-0370	1	Cap-Vacuum Port
23	59-0360	1	Tube-Vacuum Port
24	57-9750	5	Washer-Flat
25	NN10545	4	Screw-Hex Hd
26	57-9580	1	Seal-Oil
27	NN10825	1	Kit-Gearcase
28	59-1130	1	Nut-Hex
29	59-0790	1	Stud-Gear Cover

 3318-525 REV. B



Ignition Electronics

Ref. No.	Part No.	Qty.	Description
1	71-5990	1	Cover-Plunger
2	82-1340	2	Washer
3	82-1360	2	Screw-Hex Hd
4	71-6440	1	Nut-Hex Flg Hd
5	71-6430	1	Nut-Hex Flg Hd
6	71-6460	2	Screw-Hex Washer Hd
7	71-6000	1	Coil-Battery Ignition
8	57-9340	2	Plug-Spark
9	NN10253	1	Cable-Spark Plug 9"
9	NN10254	1	Cable-Spark Plug 18.5"
10	71-6060	1	Clip-Wire
11	71-6220	2	Clip-Wire
12	NN10545	1	Screw-Hex Hd
13	71-6010	1	Rotor-Ignition
14	79-6490	1	Gasket-Plate

Ref. No.	Part No.	Qty.	Description


3318-525 REV. B



Air Cleaner

Ref. No.	Part No.	Qty.	Description
1	NN10774	1	Element–Air Cleaner
2	NN10176	1	Wrapper–Element
3	79–6510	1	Spacer–Stud
4	79–6520	1	Spacer–Nylon
5	82–1670	1	Nut–Wing
6	94–1840	1	Cover–Cleaner
6	NN10446	1	Cover–Air Cleaner
8	82–0650	1	Cover–Inner
9	82–1550	2	Screw–Hex Washer Hd
10	92–0915	2	Screw–Mach Hex Hd
11	79–6330	1	Housing–Air Cleaner
12	79–6340	1	Support–Air Cleaner
13	NN10390	1	Screw–Hex Washer Hd
14	59–1180	1	Capacitor
15	82–1690	1	Nut–Hex Washer Hd
16	71–6140	1	Grommer–Rubber
17	NN10187	1	Tube–Air Intake
18	82–1070	1	Fitting–Barbed
19	NN10190	1	Gasket
20	NN10132	1	Nut P220g
22	NN10447	1	Hose

Ref. No.	Part No.	Qty.	Description

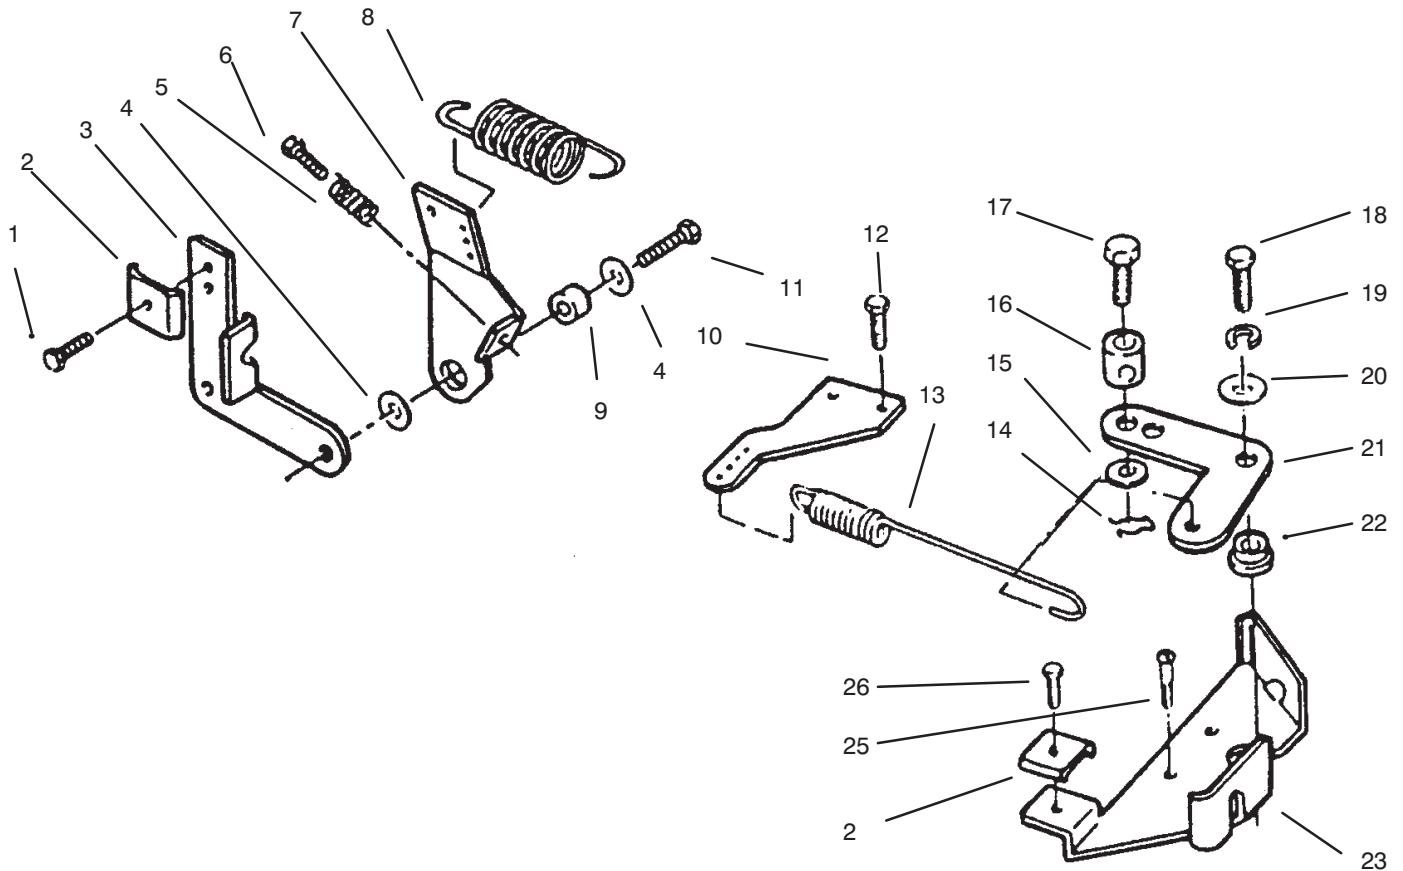 

Sheet No.:410


Governor

Ref. No.	Part No.	Qty.	Description
1	72-3900	1	Screw-Tapping Hex Hd
2	57-9190	2	Clamp-Cable
3	79-6360	1	Bracket-Cable
4	59-0830	2	Washer-Flat
5	59-0430	1	Spring-Idle Setting
6	59-1030	1	Screw-Tapping Hex Hd
7	92-0922	1	Arm-Govenor Control
8	57-9100	1	Spring-Governor
9	57-9120	1	Bushing-Control Arm
10	79-6420	1	Adapter-Governor Arm
11	59-1100	1	Screw-Lock Hd
12	NN10403	1	Screw-Self TAP Flg Hd
13	NN10932	1	Spring-Governor
14	59-0720	1	Pin-Cotter
15	201270	1	Washer
16	57-9120	1	Bushing-Control Arm
17	72-3890	1	Screw-Hex Hd
18	82-1370	1	Screw-Hex Hd
19	82-1620	1	Washer-Lock
20	59-0830	1	Washer-Flat
21	201256	1	Link-Governor Control

Ref. No.	Part No.	Qty.	Description
22	79-6400	1	Bushing-Governor Cont
23	79-6390	1	Bracket-Governor Cont
25	201327	1	Screw-Self TAP Flg Hd
26	59-1000	3	Screw

Part Identified in illustration but not in part list are not used on this model

 3318-525 REV. B

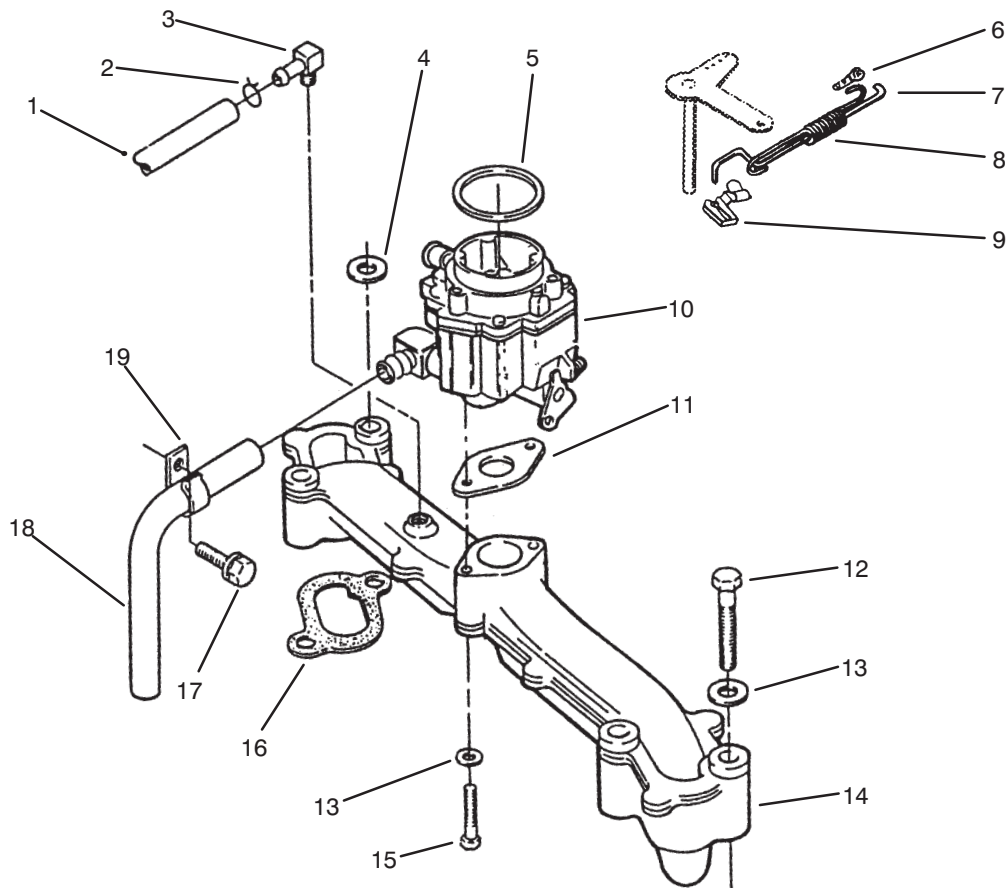


Sheet No.: 411

Intake Manifold & Carburetor

Ref. No.	Part No.	Qty.	Description
1	82-1120	1	Hose-Breather
2	82-1080	2	Clamp-Hose .50" Dia
2	82-1090	1	Clamp-Hose .44" Dia
3	82-1070	1	Fitting-Barbed
4	NN10362	1	Washer-Flat
5	57-9620	1	O Ring
6	57-9700	1	Clip-Retaining
7	92-0919	1	Rod-Governor Control
8	82-1740	1	Spring-Governor Rod
9	94-6680	1	Clip-Retaining New
10	94-1843	1	Kit-Repair
10	94-1844	1	Kit-Repair
10	94-1847	1	Kit-Carburetor (220)
10	94-1848	1	Jet-Altitude
11	82-0850	1	Gasket-Carb/Manifold
12	NN10375	4	Screw-Hex Hd
13	82-1350	6	Washer
14	92-0918	1	Manifold-Intake (220)
15	NN10545	2	Screw-Hex Hd
16	71-5980	2	Gasket-Manifold
17	82-1540	1	Bolt-Hex Hd
18	NN10306	1	Hose-Fuel 30"
19	71-6220	1	Clip-Wire
	94-1806	1	Decal-Ident
	94-1843	1	Kit-Repair
	94-1844	1	Kit-Repair

Ref. No.	Part No.	Qty.	Description
	94-1846	1	Harness-Wire
	94-1848	1	Jet-Altitude

 3318-525 REV. B



Choke Control

Ref. No.	Part No.	Qty.	Description
1	59-0470	1	Bracket-Choke Cable
2	72-3880	1	Screw-Cap Flg Hd
3	57-9180	1	Link-Choke
4	57-9190	1	Clamp-Cable
5	72-3900	1	Screw-Tapping Hex Hd
6	92-0916	1	Screw-Shoulder
7	NN10830	1	Plug-Cap
8	72-3890	1	Screw-Hex Hd
9	57-9170	1	Swivel-Choke Lever
10	59-0720	1	Pin-Cotter
11	NN10233	1	Lever-Choke
12	59-0850	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description




Fuel Filter & Pump

Ref. No.	Part No.	Qty.	Description
1	82-1080	6	Clamp-Hose .50" Dia
2	71-5960	1	Filter-Fuel
3	NN10790	1	Line-Fuel 12"
4	NN10302	1	Line-Fuel 7"
5	57-9080	1	Pump-Fuel
6	950154	2	Clamp-Corbin
7	59-1050	2	Screw St Pan Hd
8	NN10211	1	Cap-Fuel Fitting
9	NN10048	1	Clamp

Ref. No.	Part No.	Qty.	Description

 Engine Cylinder Block

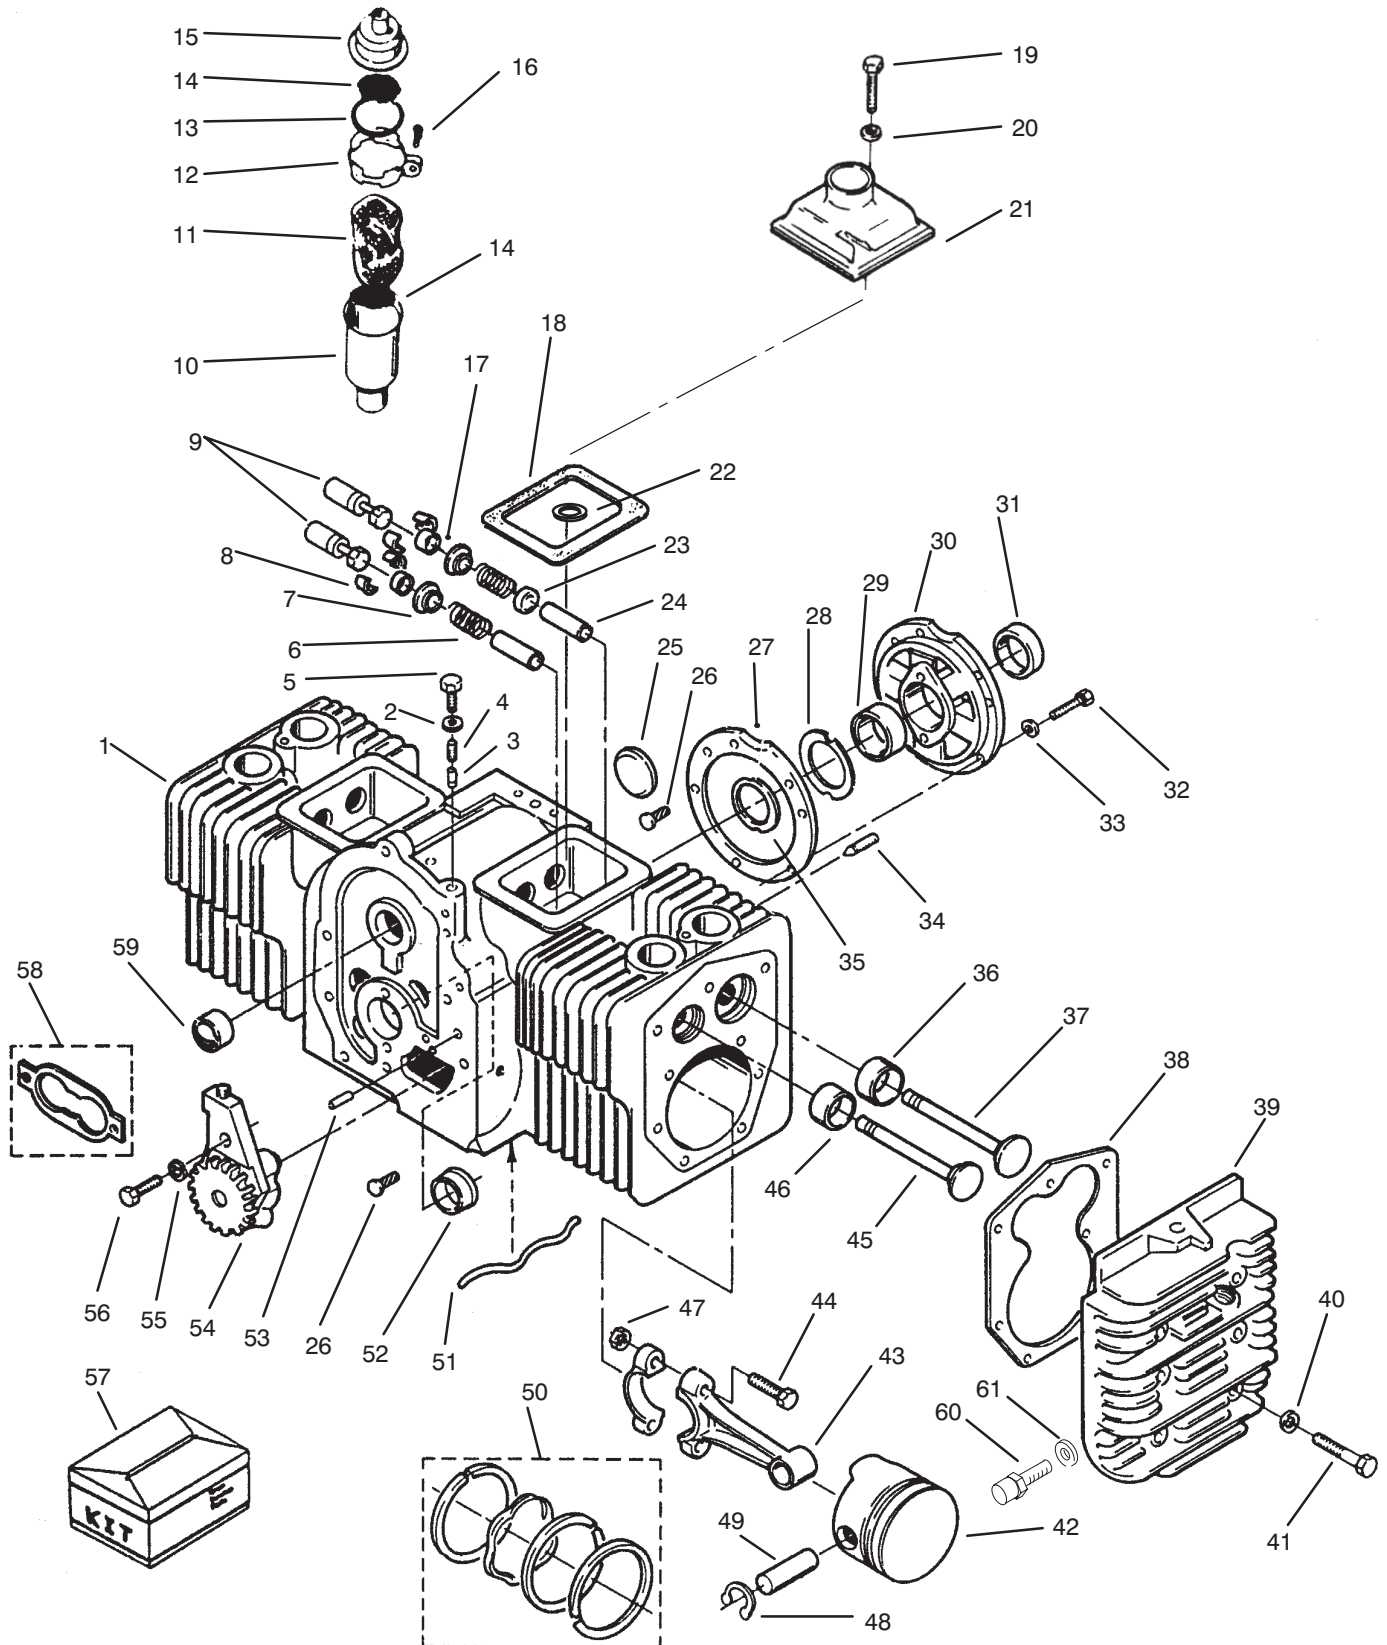


Part Identified in illustration but not in part list are not used on this model

3318-%@% REV. B


Engine Cylinder Block

Ref. No.	Part No.	Qty.	Description
1	92-0900	1	Block-Cylinder (Short)
2	57-9760	1	Washer-Flat
3	57-8470	1	Plunger-Bypass Valve
4	59-0280	1	Spring-Bypass Valve
5	59-0910	1	Screw-Cap Hex Hd
6	71-5790	4	Spring-Valve
7	71-5800	4	Washer-Valve Spring
8	NN10082	8	Lock-Valve Spring
9	57-8450	4	Tappet-Valve STD
9	59-0260	4	.002" Oversize
10	82-0540	1	Tube-Breather
11	57-8580	1	Baffle-Breather Tube
12	82-0530	1	Clamp-Tube
13	82-0570	1	O-Ring-Cap
14	82-0560	2	Screen-Tube
15	82-0550	1	Cap & Valve-Breather
16	82-1480	1	Screw-TAP Round Hd
17	71-5830	4	Cap-Valve
18	57-8280	2	Gasket-Cover
19	NN10370	2	Screw-Cap Hex Hd
20	57-9740	2	Washer-Flat
21	NN10821	1	Cover-Valve
22	59-0820	1	Washer-Flat
23	71-6180	2	Seal-Valve
24	71-6250	2	Guide-Valve
24	71-6260	2	Guide-Valve
25	57-9690	1	Plug-Welch
26	59-0730	4	Pin-Drive
27	57-8010	1	Gasket-Bearing Plate
28	57-8170	A/R	Shim-Crankshaft .005"
29	57-8050	1	Bearing-Crankshaft Rear
29	57-8060	1	.010" Undersize
29	57-8060	1	.010" Undersize
29	59-0020	1	.002" Undersize
29	59-0030	1	.020" Undersize
29	59-0040	1	.030" Undersize
30	82-0020	1	Plate-Bearing
31	57-9590	1	Seal-Oil
32	59-0880	5	Scw-Cap Flg Hd
33	3253-5	5	Washer-Lock
33	82-1310	5	Washer-Flat
34	3247-4	2	Screw-HS
35	57-8160	2	Washer-Thrust
36	59-0050	2	Insert-Valve Seat Intake
36	59-0080	2	.010" Oversize
37	71-5770	2	Valve-Intake
38	57-8330	2	Gasket-Head
39	59-0180	1	Head-Cylinder RH
39	71-5810	1	Head-Cylinder LH
40	57-9770	18	Washer-Flat
41	59-0900	18	Screw-Cap Hex Hd
42	82-1800	2	Piston STD INC 48-49
42	92-0902	2	.010" Oversize
42	92-0903	2	.020" Oversize
42	92-0904	2	.030" Oversize
43	57-8420	2	Rod-Conn STD INC 44 & 47


Ref. No.	Part No.	Qty.	Description
43	57-8430	2	.010" Undersize
43	57-8440	2	.020" Undersize
43	59-0250	2	.030" Undersize
44	57-8410	4	Bolt-Connecting Rod
45	71-5780	2	Spring-Clutch
46	59-0100	2	Insert-Valve Seat Exh
46	59-0110	2	.002" Oversize
46	59-0120	2	.005" Oversize
46	59-0130	2	.010" Oversize
46	59-0140	2	.025" Oversize
47	57-9790	4	Nut
48	57-9720	4	Ring-Retaining
49	71-6310	2	Pin-Piston
50	92-0905	2	Kit-Ring Piston STD
50	92-0906	2	.005" Oversize
50	92-0907	2	.010" Oversize
50	92-0908	2	.020" Oversize
50	92-0909	2	.030" Oversize
51	59-0290	1	Tube-Oil
52	57-8020	1	Bearing-Crankshaft
52	57-8030	1	.010" Undersize
52	57-9360	1	.002" Undersize
52	57-9800	1	.020" Undersize
52	59-0010	1	.030" Undersize
53	59-0750	2	Pin Align
54	57-8480	1	Pump-Oil
55	82-1340	2	Washer
56	82-1370	2	Screw-Hex Hd
57	71-6290	1	Kit-Gasket Complete
58	57-8460	1	Kit-Gasket
59	57-8000	2	Bearing-Camshaft
60	NN10274	1	Switch-High Temp
61	NN10924	1	Washer-Lock

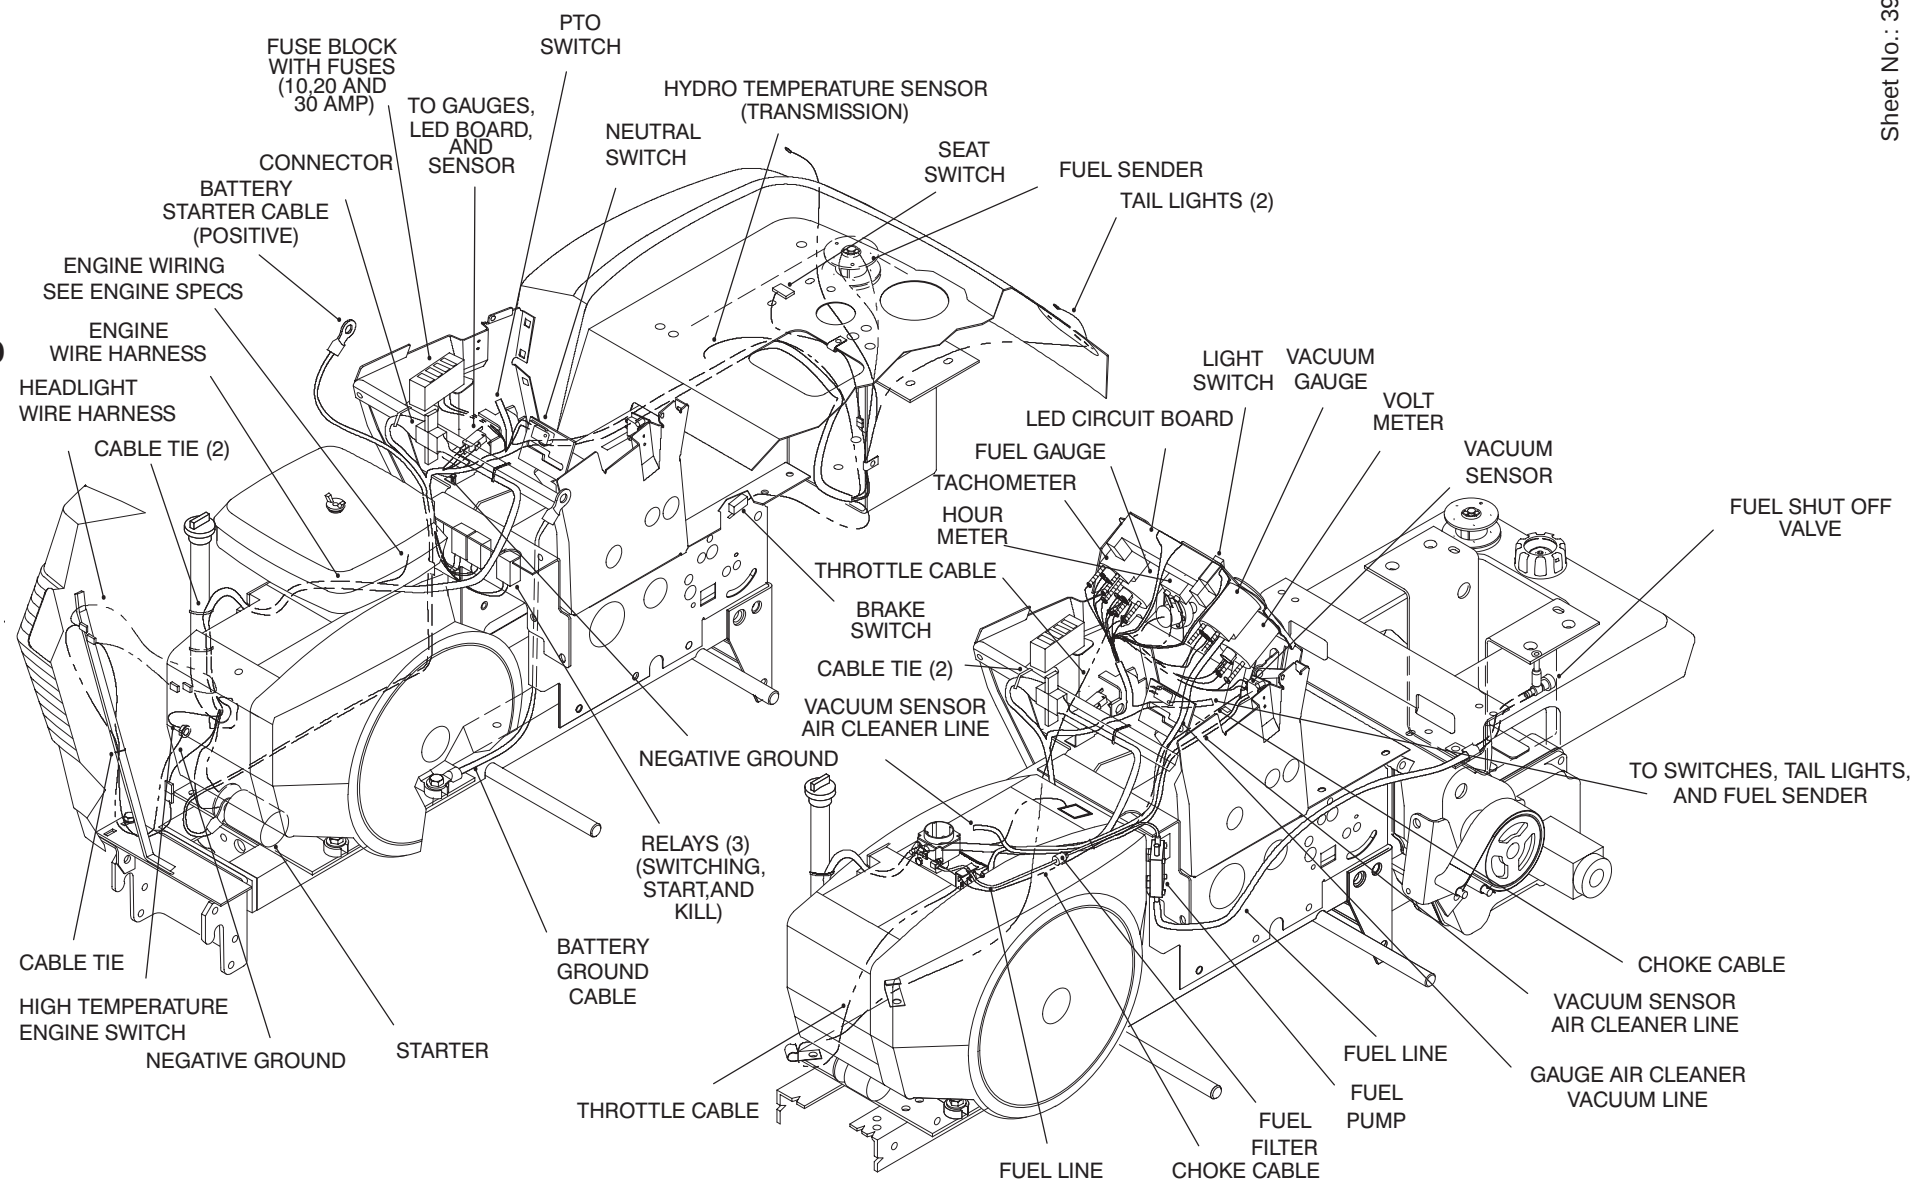 

Electric Schematic

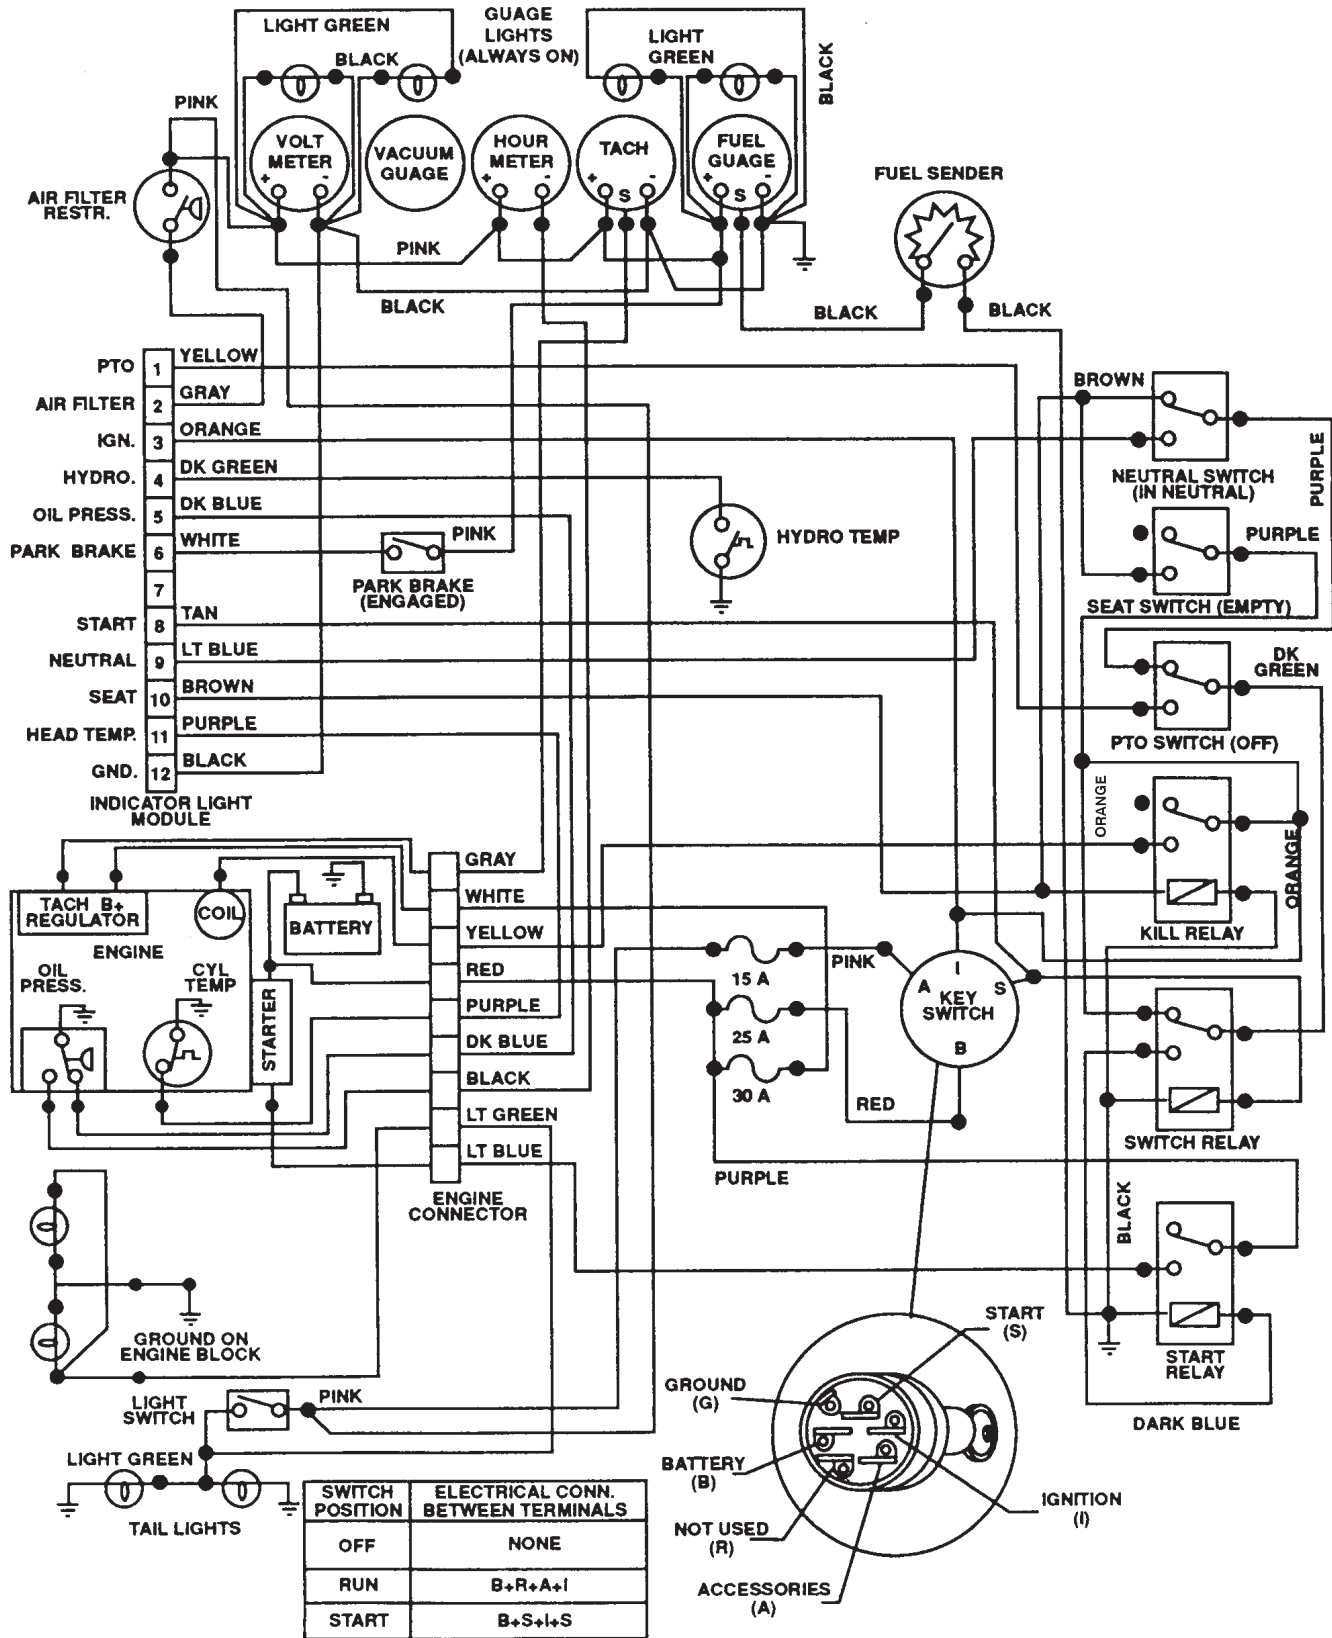 

 
520-Wire Harness Attachment & Component's

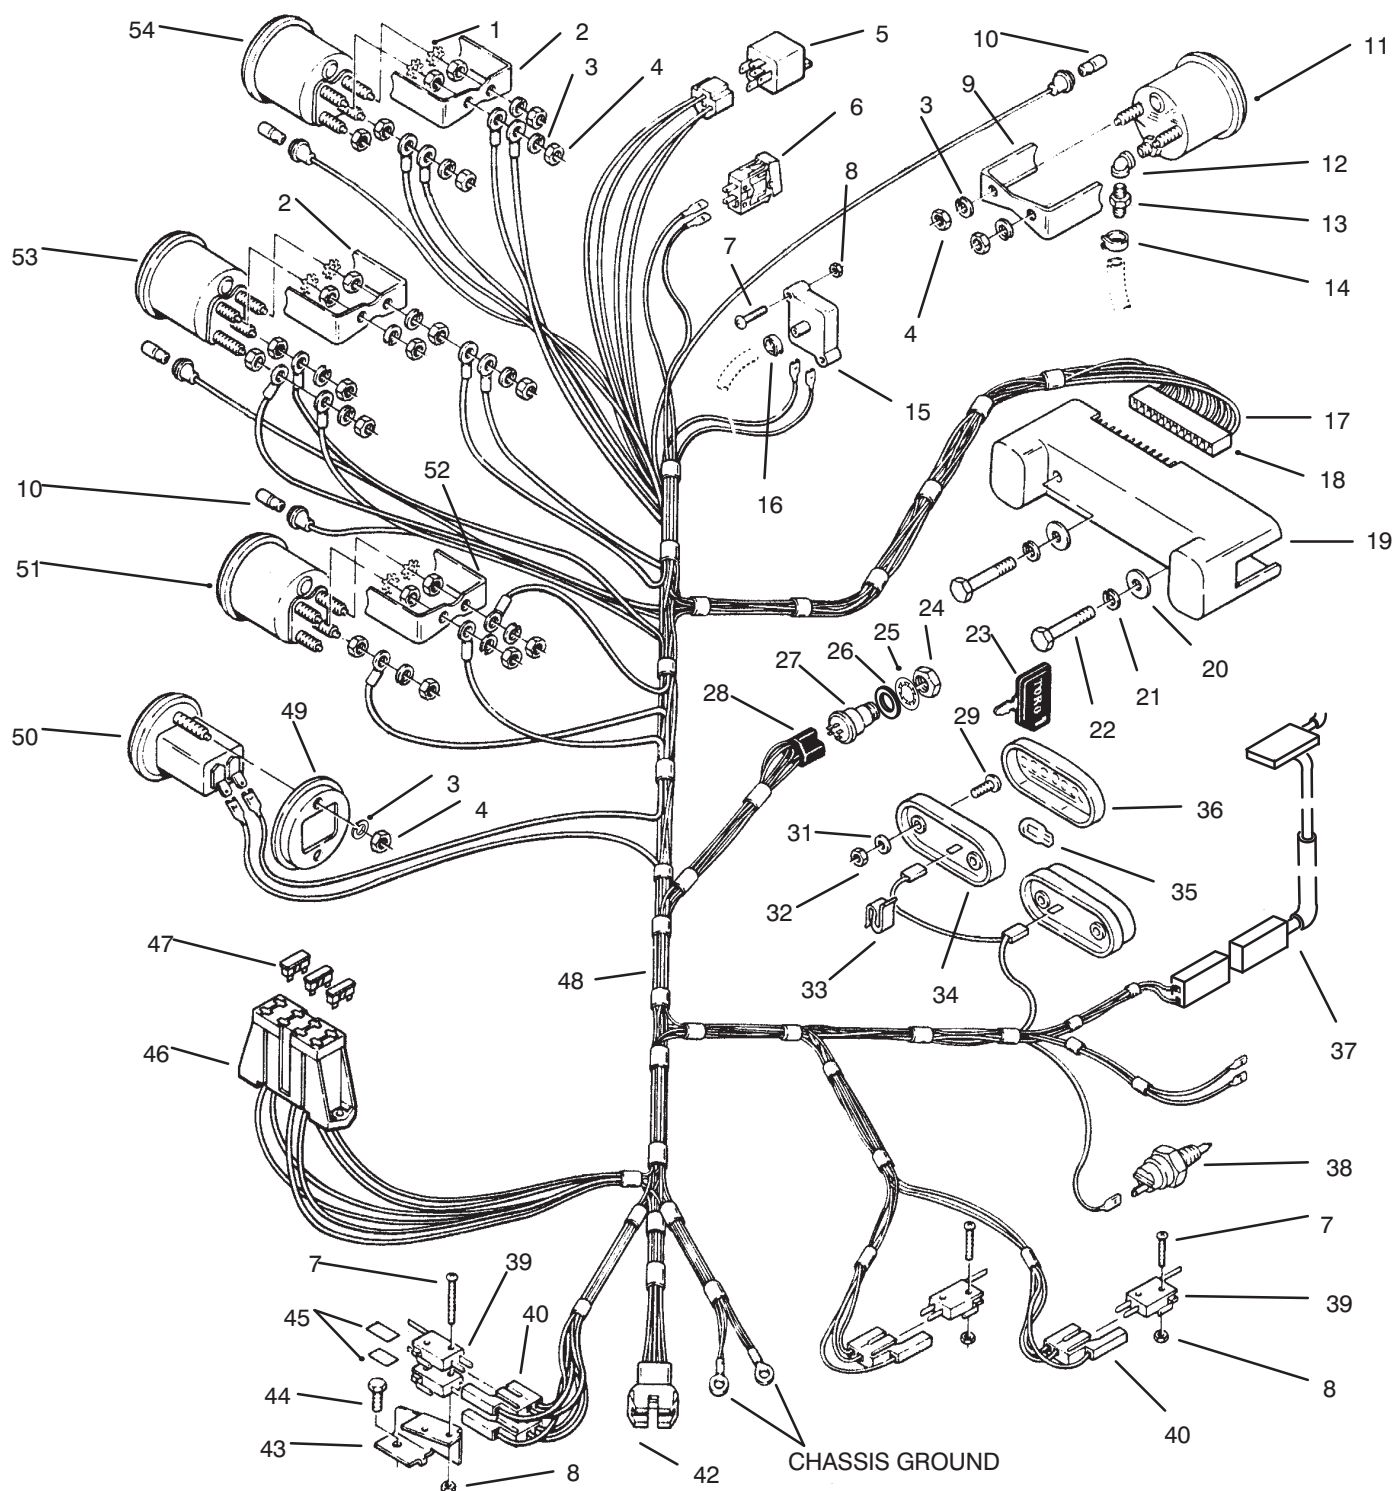

520-Wire Harness Attachment & Component's

Ref. No.	Part No.	Qty.	Description
1	3253-17	8	Washer - Lock
2	78-0080	2	Bracket - Mounting
3	3255-25	2	Washer - Lock
4	3217-27	A/R	Nut - Hex.
5	116397	3	Relay
6	92-9844	1	Switch - Light
7	910948	4	Screw
8	915732	6	Nut - Elastic
9	78-0100	2	Bracket - Mounting
10	79-0450	4	Lamp - .938" Long
11	79-2660	1	Gauge - Vacuum (Incl. Ref. #3-4 & 9)
12	943021	1	Elbow
13	105076	1	Fitting - Straight
14	950154	1	Clamp - Corbin
15	94-1836	1	Sensor - Air Cleaner
16	114767	1	Clamp
17	114633	12	Terminal
18	114632	1	Connector - Male
19	79-2130	1	Board - Light Circ
20	3256-21	2	Washer - Flat
21	3253-15	2	Washer - Lock
22	910783	2	Screw
23	62-7770	2	Key - Padded Ignition
24	101884	1	Nut - Special
25	9201604	1	Washer - Lock
26	920262	1	Washer
27	111216	1	Switch - Ignition (Incl. Ref. #24-26)
28	105302	1	Connector Ignition Switch (Ref. Item #48)
29	910809	4	Screw
31	3254-1	4	Washer - Lock
32	3219-14	4	Nut
33	3023	2	Clip - Speed
34	105202	2	Base - Taillight w/Bulb
35	109045	2	Bulb - Light
36	112564	2	Lens - Taillight
37	38-1420	1	Switch - Seat
38	113193	1	Switch - Oil Temp
39	111332	2	Switch - Interlock
40	111498	5	Connector
42	113119	1	Connector - Fem
43	111488	1	Support - Switch
44	926671	3	Bolt
45	111642	2	Barrier - Switch Insulator
46	120930	1	Body - Fuse (Ref. Item #48)
47	218-578	1	Fuse - 10 Am
	109101	1	Fuse - 20 Amp
	NN10277	1	Fuse - 30 Amp
48	79-3630	1	Wire Harness
49	78-3220	1	Bracket - Mountin
50	78-0020	1	Hourmeter (Incl. Ref. #3-4 & 49)
51	78-0060	1	Tachometer (Incl. Ref. #1, 3-4 & 5 52)
52	114018	1	Bracket - Mounting
53	78-0040	1	Gauge - Fuel

Ref. No.	Part No.	Qty.	Description
54	78-0030	1	(Incl. Ref. #1-4) Voltmeter
*	117257	1	(Incl. Ref. #1-4) Tie - Snap In

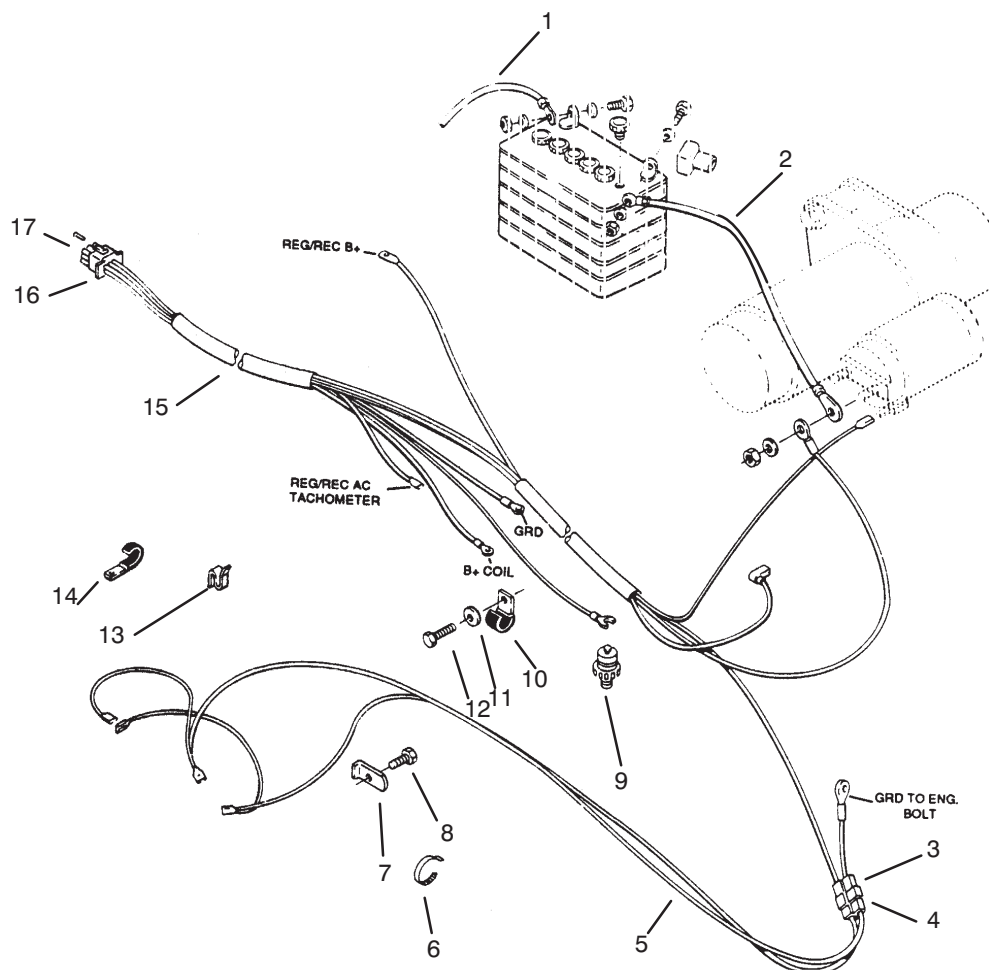 

Sheet No.:
C-1673

Engine Wire Harness

Ref. No.	Part No.	Qty.	Description
1		1	Cable – Battery–
2		1	Cable – Battery (+)
3	NN10278	1	Connector
4	109357	1	Connector
5	114052	1	Harness – Headlight
6	100571	1	Tie – Cable
7	109459	2	Clamp
8	926671	2	Bolt – Hex
9	94–1845	1	Switch – Low Oil
10	NN10348	1	Clip
11	NN10425	1	Washer – Lock
12	82–1540	1	Screw
13	3023	1	Clip – Small
14	8830	1	Clip
15	94–1846	1	Harness–Eng Wiring
16	NN10281	1	Connector
17	NN10279	1	Contact – Socket

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1121	7	14	1	Key
1278	2	9	3	Washer—Shim
1278	8	35	1	Washer—Shim
1278	16	14	4	Washer—Shim
1518	22	21	1	Bearing—Needle
1532	22	22	2	Bearing—Needle
1538	22	12	1	Bearing—Needle
2844	14	20	1	Washer—Flat
3023	10	27	3	Clip
3765	9	21	1	Washer—Shim
3765	12	8	1	Washer—Shim
5108	16	3:3	2	Valve—Tire Tubeless
5108	16	10:3	2	Valve—Tire Tubeless
5210	2	17	14	Washer—Shim
5210	16	15	2	Washer—Shim
5618	2	30	1	Ring—Retaining
5618	17	11	2	Ring—Retaining
5666	12	4	1	Bushing—Nyliner
5979	1	17	2	Bushing—Nyliner
5983	6	6	1	Bushing
5983	8	1	3	Bushing
5983	12	6	1	Bushing
5991	14	14	1	Fitting—Filter
6216	2	26	1	Pin—Pivot
6229	7	17	1	Bearing
6397	2	8	1	Bearing—Bronze
6449	21	12	2	Seal—Oil
6472	2	1	1	Bearing—Flanged
6658	11	13	1	Race—Bearing
6659	11	12	2	Retainer
6662	11	16	1	Bearing—Needle
6663	11	15	1	Seal—Oil
6739	7	5	1	Trunnion
7443	11	9	1	Pulley—Engine
7456	4	10	4	Clamp
7879	9	20	1	Bushing
7956	22	16	1	Washer—Thrust
8616	17	20	2	Spring
8830	1	9	1	Retainer—"J"
8830	3	33	1	Retainer—"J"
8830	7	12	1	Retainer—"J"
8830	13	13	2	Retainer—"J"
8830	17	28	1	Retainer—"J"
8830	19	11	1	Retainer—"J"
8830	20	21	1	Retainer—"J"
8830	22	9	1	Retainer—"J"
9038	17	12	1	Grip
9416	21	11	2	Bearing—Needle
9547	22	23	1	Washer—Thrust
100304	8	16	2	Bearing—Cam Roller
100305	14	4	2	Washer—Friction
100309	14	6	1	Bushing—Cam Pivot
100365	14	3	2	Washer—Spring Disc
100656	8	22	1	Bearing—Cam Return
101017	17	15	1	Lock—Hitch
101623	21	6	8	Gear—Pinion
101707	17	23	1	Lock—Attachment
101750	17	19	1	Rod—Latch Pivot
101751	17	27	1	Rod—Lock
101757	6	24	1	Spacer
101850	1	15	1	Rod—Hood Stop
101853	8	38	1	Spring—Compression

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
101884	5	17:1	1	Nut—Hex
101889	21	4	2	Gear—Axle
102025	9	3	1	Spacer
102628	6	27	1	Fitting—Tube
102628	14	28	1	Fitting—Tube
102872	11	2	1	Shaft—PTO
102881	1	3	2	Headlamp
103125	8	29	1	Spring—Extension
103125	12	7	1	Spring—Extension
103995	15	49	1	Washer—.281x1.25x.120
104841	6	16	1	Spring
104859	12	16	1	Spacer—Link
105061	21	7	1	Gear—Differential
105202	10	30	2	Base—Light
105269	17	5	1	Pin—Drawbar Hitch
105316	17	14	2	Cap—Rod
105453	11	10	1	Key—Sq
105503	10	21	2	Bushing
105524	10	20	2	Bracket—Pivot
105797	1	18	2	Ring—Retaining
105797	17	18	8	Ring—Retaining
105876	21	5	2	Ring—Retaining
106267	6	18	1	Grommet
106269	7	9	2	Bearing—Flange
106448	14	40	1	Nipple—Trans Filler
106522	7	4	1	Chain—Lift
106634	17	8	1	Pin—Tool
106661	14	9	1	Cam—Eccentric
106695	11	20	1	Ring—Push On
106719	14	17	1	Drum—Brake
106826	15	51	2	Washer—Thrust
106948	18	8	1	Tray—Battery
107069	4	5	6	Nut—Retainer
107374	21	8	4	Washer—Flat
107938	9	25	1	Spring—Extension
108312	21	15	1	Gasket—Transaxle
108316	14	35	1	Pulley—Hydro
108319	22	2	1	Gasket—Transmission
108323	14	15	1	Base—Filter
108325	14	10	1	Arm—Speed Control
108327	14	39	1	Spacer—Pivot
108333	14	5	1	Plate—Cam
108357	22	13	1	Seal—Oil
108361	21	13	1	Axle—Rear
108362	21	18	1	Axle—Rear
108363	21	10	2	Pin—Locating
108364	22	25	1	Fitting—Hyd
108365	6	1	2	Fitting—Tube
108365	14	31	2	Fitting—Tube
108366	22	4	1	Spacer—Gear
108393	14	36	1	Fan—Hydro
108457	3	35	1	Nut—Push On
108457	4	14	1	Nut—Push On
108496	8	26	1	Wa—Pivot
108680	8	30	1	Spring—Compression
108717	9	15	1	Spacer—Cam Plate
108881	14	7	2	Nut—Hex
108881	17	4	6	Nut—Hex
108881	21	2	4	Nut—Hex
108904	8	18	1	Rod—Control
109045	10	30:1	2	Lamp—Wedge
109102	20	9:2	1	Fuse—25 Amp

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
109189	2	16	1	Bearing—Flange
109355	20	9:2	1	Fuse—15 Amp
109356	14	26	1	Bushing—Pivot
109370	22	17	1	Shaft—Brake
109371	14	18	1	Brake Band
109459	1	5	2	Clamp—Headlight
109494	1	2	1	Bezel—RH Headlight
109495	1	1	1	Bezel—LH Headlight
109500	16	10:6	2	Fitting—Grease
109703	22	24	1	ASM—Gear
109742	22	20	1	Gear—20t
109751	22	5	1	Gear—20t
109752	22	19	1	Gear—46t
109842	11	5	1	Bearing—Ball
109989	10	6	4	Spacer
110124	6	25	1	Hose ASM—Hydraulic
110125	6	19	1	Hose ASM—Hydraulic
110189	8	17	2	Rod End ASM
110513	16	10:2	4	Bearing—Wheel
110656	12	19	1	Trunnion
110669	12	17	1	Plate—PTO
111052	12	23	1	Rod—PTO Clutch
111071	10	12	2	Bumper—Rubber
111196	21	3	2	Cap—End
111199	21	1	2	Bearing—Ball
111216	5	17	1	Switch—Ignition
111217	22	26	1	Tube—Suction
111314	11	27	1	Lock Pin ASM
111332	9	42	1	Switch—Interlock
111332	20	4	1	Switch—Interlock
111383	8	33	1	Collar w/Set Screw
111516	16	3:1	2	Wheel
111951	16	12	2	Cap—Hub
111952	16	13	2	Washer
112564	10	32	2	Lens—Light
112637	25	4	1	ASM—Pump
112637	25	4	1	ASM—Pump
112641	25	9	1	ASM—Cover
112641	25	9	1	ASM—Cover
112652	25	30	1	Shield—Grass
112652	25	30	1	Shield—Grass
112653	25	31	1	Ring—Retaining
112653	25	31	1	Ring—Retaining
112791	9	31	1	Pulley—Idler
113010	18	10	1	Hold Down
113107	11	26	1	Clevis
113108	11	1	1	Rod—PTO Housing
113136	25	16	1	Race—Pump
113136	25	16	1	Race—Pump
113193	14	41	1	Sensor—Hydro Oil Temp
113358	19	6	1	Sender—Fuel Level
113372	19	2	1	Gasket—Fuel Sender
113925	18	1	1	Cable—40" Lg
113969	18	9	2	Hook—Retainer
114000	6	4	1	Valve ASM — Hyd
114027	5	10	1	Control—Choke
114052	1	4	1	Wire Harness
114210	18	6	1	Cable—24" Lg
114343	10	18	1	Spring—Gas
114344	10	16	2	Spacer
114621	3	40	1	Decal—Noise
114628	3	20	1	Bracket—Switch

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
114636	13	8	1	Nipple
114720	18	7	1	Tube—Battery Drain
114763	13	10	1	Nipple
114764	13	9	1	Elbow—90 DEG
114767	3	38	1	Clamp—Hose.32d X.31w Blk
114823	9	22	1	Washer—Curved Spring
114888	13	1	2	Screw
114895	9	29	1	Belt—Hydro Drive
115230	8	41	1	Switch—Clutch
115392	5	18	1	Control—Throttle
115411	20	2	1	Bracket—Switch
115620	3	7	1	Cover—Console 5—Gage
116000	3	24	4	Screw—CARR
116000	4	8	4	Screw—CARR
116302	6	8	1	Arm—Control
116321	8	5	1	Arm—Control
116324	8	6	1	Rod & Balljoint ASM
116397	20	17	3	Relay
116407	8	13	1	Rod End
116471	13	5	1	Muffler
116744	16	3:2	2	Tire
116745	1	19	1	Rod—Grill Pivot
116746	1	20	1	Bracket—Grill RH
116747	1	13	1	Bracket—Grill LH
117127	16	10:4	2	Tire
117257	3	36	1	Tie— Snap In
117328	6	12	1	Rod—Lift Control
117329	8	2	1	Rod—Control
117343	3	15	2	Latch—Hood
117344	1	10	2	Handle—Latch
117432	1	9	4	Poprivet
117432	3	48	2	Poprivet
117433	3	14	2	Rivet—Pop
117930	17	17	1	Latch ASM—Mid
118410	3	9	1	Cover—Steering Shaft
118530	13	29	1	Name Plate—Toro Logo
118530	27	19	1	Name Plate—Toro Logo
118560	13	30	1	Decal—Power Plus 20
118660	8	7	1	Guide—Control
118780	3	10	4	Screw
118860	9	6	1	Knob—Parking Brake
119340	6	22	1	Cylinder—Hydraulic
120930	20	9:1	1	Fuse Holder
121100	7	15	1	Lift Arm ASM
201256	35	21	1	Link—Governor Control
201270	35	15	1	Washer
201327	35	25	1	Screw—Self TAP Flg Hd
519337	19	16	2	Clip
911423	21	9	4	Screw—HH
933135	9	5	1	Pin—Spirol
933198	6	7	1	Pin—Spirol
933198	8	4	1	Pin—Spirol
933274	11	25	1	Pin—Spirol
937089	14	48	2	Key—Woodruff
937099	22	18	1	Key—Woodruff
937108	14	47	2	Key—Woodruff
950154	38	6	2	Clamp—Corbin
9000369	3	30	2	Bolt—CARR
9080026	11	14	4	Screw—Lock
9080026	15	50	1	Screw—Lock
9080196	14	8	1	Screw—HH
9080356	1	7	1	Screw—HH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
9080356	22	7	1	Screw—HH
9080406	22	10	2	Screw—HH
9104784	20	5	2	Screw
9107834	5	16	2	Screw—Phcr
9107922	5	7	4	Screw—Phcr
9107944	20	8	2	Screw—Phcr
9108074	19	4	5	Screw—Machine
9108372	3	5	12	Screw—Phcr
9108372	4	7	2	Screw—Phcr
9108392	3	4	6	Screw—Phcr
9109484	3	19	2	Screw—Phcr
9109484	8	42	2	Screw—Phcr
9109484	9	41	2	Screw—Phcr
9114584	8	21	1	Screw—HH
9157324	3	22	2	Nut—Lock
9157324	8	40	2	Nut—Lock
9157324	9	43	2	Nut—Lock
9157324	20	1	2	Nut—Lock
9157404	5	11	4	Nut
9157404	20	12	2	Nut
9201604	5	17:2	1	Washer—Lock
9202324	6	23	1	Washer—10 GA
9202414	9	4	1	Washer—Flat
9202704	3	8	4	Washer—Flat
9266714	1	6	2	Screw—HWHTF
9266714	20	6	4	Screw—HWHTF
9266944	3	18	10	Screw—HH
9266944	4	15	1	Screw—HH
9266944	8	27	1	Screw—HH
9266944	10	9	10	Screw—HH
9266944	12	27	1	Screw—HH
9266944	20	20	4	Screw—HH
9266974	19	8	2	Screw—HH
9321204	6	3	1	Pin—Clevis
9329974	6	20	1	Pin—Clevis
9335044	8	28	1	Hairpin
9335054	7	1	2	Hairpin
9335054	12	21	1	Hairpin
9335054	17	10	1	Hairpin
9335064	11	23	1	Hairpin
9335074	7	16	2	Cotter—Hairpin
9791204	17	6	2	Spacer
NN10048	38	9	1	Clamp
NN10082	41	8	8	Lock—Valve Spring
NN10132	34	20	1	Nut P220g
NN10143	31	7	1	Filter—Oil
NN10159	30	13	1	Cap—Indicator Oil Fill
NN10176	34	2	1	Wrapper—Element
NN10187	34	17	1	Tube—Air Intake
NN10190	34	19	1	Gasket
NN10211	38	8	1	Cap—Fuel Fitting
NN10233	37	11	1	Lever—Choke
NN10253	33	9	1	Cable—Spark Plug 9"
NN10254	33	9	1	Cable—Spark Plug 18.5"
NN10274	41	60	1	Switch—High Temp
NN10277	20	9:2	1	Fuse—30 Amp
NN10302	38	4	1	Line—Fuel 7"
NN10306	36	18	1	Hose—Fuel 30"
NN10362	36	4	1	Washer—Flat
NN10370	41	19	2	Screw—Cap Hex Hd
NN10373	31	4	2	Screw—Cap Hex Hd
NN10375	36	12	4	Screw—Hex Hd

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
NN10379	30	7	4	Screw—Cap Hex Hd
NN10390	34	13	1	Screw—Hex Washer Hd
NN10394	32	17	2	Screw—Hex Washer Hd
NN10403	35	12	1	Screw—Self TAP Flg Hd
NN10446	34	6	1	Cover—Air Cleaner
NN10447	34	22	1	Hose
NN10448	30	11	1	Tube—Oil Fill
NN10545	32	25	4	Screw—Hex Hd
NN10545	33	12	1	Screw—Hex Hd
NN10545	36	15	2	Screw—Hex Hd
NN10769	27	17	1	Housing—Blower
NN10773	29	11	1	Crankshaft (220)
NN10774	34	1	1	Element—Air Cleaner
NN10790	38	3	1	Line—Fuel 12"
NN10821	41	21	1	Cover—Valve
NN10825	32	27	1	Kit—Gearcase
NN10826	32	3	1	Shaft & Arm Governor
NN10830	37	7	1	Plug—Cap
NN10832	27	22	1	Bracket—Governor Adjust
NN10894	31	9	1	Drain—Oil Filter
NN10924	41	61	1	Washer—Lock
NN10929	26	12	1	Kit—Mounting Bracket
NN10930	26	9	1	Cap—Starter Solenoid
NN10932	35	13	1	Spring—Governor
28-8080	18	2	1	Boot—Battery Terminal
38-1420	10	26	1	Switch—Seat
49-2040	13	4	3	Screw—HH
55-3570	19	7	1	Cap—Fuel
56-2800	25	1	1	Screw—HH Socket
56-2800	25	1	1	Screw—hh Socket
56-2810	25	2	1	Bearing—Ball
56-2810	25	2	1	Bearing—Ball
56-2820	25	3	2	Seal—Oil
56-2820	25	3	2	Seal—Oil
56-2850	25	6	1	Ring—Seal
56-2850	25	6	1	Ring—Seal
56-2860	25	7	1	Plate—Pump
56-2860	25	7	1	Plate—Pump
56-2870	25	8	1	Ring—Seal
56-2870	25	8	1	Ring—Seal
56-2880	25	10	2	Button
56-2880	25	10	2	Button
56-2890	25	11	1	Pin—Dowel
56-2890	25	11	1	Pin—Dowel
56-2900	25	12	1	Pin—Drive
56-2900	25	12	1	Pin—Drive
56-2910	25	13	1	Shaft—Input
56-2910	25	13	1	Shaft—Input
56-2920	25	14	1	Ring—Seal
56-2920	25	14	1	Ring—Seal
56-2930	25	15	1	Rotor/Ball—Pump
56-2930	25	15	1	Rotor/Ball—Pump
56-2940	25	56	1	ASM—Ring
56-2940	25	56	1	ASM—Ring
56-2950	25	18	2	Piston
56-2950	25	18	2	Piston
56-2960	25	19	2	Ring—Backup
56-2960	25	19	2	Ring—Backup
56-2970	25	20	2	O—Ring
56-2970	25	20	2	O—Ring
56-2980	25	21	1	Pin—Coil
56-2980	25	21	1	Pin—Coil

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
56-2990	25	22	1	ASM—Pintle
56-2990	25	22	1	ASM—Pintle
56-3000	25	23	2	Ring—Retaining
56-3000	25	23	2	Ring—Retaining
56-3010	25	24	2	Ball—.313 Dia
56-3010	25	24	2	Ball—.313 Dia
56-3020	25	25	2	Body—Valve
56-3020	25	25	2	Body—Valve
56-3030	25	26	1	Ball—.438 Dia
56-3030	25	26	1	Ball—.438 Dia
56-3040	25	27	1	Spring—Valve
56-3040	25	27	1	Spring—Valve
56-3050	25	28	1	Plug—Valve
56-3050	25	28	1	Plug—Valve
56-3060	25	29	1	Pin—Dowel
56-3060	25	29	1	Pin—Dowel
56-3090	25	5	4	Ring—Retaining
56-3090	25	5	4	Ring—Retaining
56-3100	25	33	6	Screw—Socket Hd
56-3100	25	33	6	Screw—Socket Hd
56-3110	25	34	6	Roller
56-3110	25	34	6	Roller
56-3120	25	35	1	Carrier
56-3120	25	35	1	Carrier
56-3130	25	36	1	Seal—Oil
56-3130	25	36	1	Seal—Oil
56-3140	25	37	1	Kit—Shaft
56-3140	25	37	1	Kit—Shaft
56-3170	25	40	1	Insert—Ring
56-3170	25	40	1	Insert—Ring
56-3180	25	41	1	Spring—Valve
56-3180	25	41	1	Spring—Valve
56-3200	25	43	2	Body—Valve
56-3200	25	43	2	Body—Valve
56-3210	25	44	2	Ball—.625 Dia
56-3210	25	44	2	Ball—.625 Dia
56-3220	25	45	1	Rotor/Ball—Motor
56-3220	25	45	1	Rotor/Ball—Motor
56-3230	25	46	1	Shaft—Output
56-3230	25	46	1	Shaft—Output
56-3240	25	47	1	Race—Motor
56-3240	25	47	1	Race—Motor
56-3250	25	48	1	ASM—Plug
56-3250	25	48	1	ASM—Plug
56-3260	25	49	1	O—Ring
56-3260	25	49	1	O—Ring
56-3280	25	52	1	Bearing—Ball
56-3280	25	52	1	Bearing—Ball
56-3290	25	53	1	Ring—Retaining
56-3290	25	53	1	Ring—Retaining
56-3310	25	55	1	Kit—Seal
56-3310	25	55	1	Kit—Seal
57-8000	41	59	2	Bearing—Camshaft
57-8010	41	27	1	Gasket—Bearing Plate
57-8020	41	52	1	Bearing—Crankshaft
57-8030	41	52	1	.010" Undersize
57-8050	41	29	1	Bearing—Crankshaft Rear
57-8060	41	29	1	.010" Undersize
57-8060	41	29	1	.010" Undersize
57-8090	30	5	1	Gasket—Base
57-8130	29	12	1	Gear—Crankshaft
57-8140	29	13	1	Washer—Gear

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
57-8150	28	1	1	Screw—Cap Hex Hd
57-8160	41	35	2	Washer—Thrust
57-8170	41	28	A/R	Shim—Crankshaft .005"
57-8180	28	6	1	Gear—Ring
57-8210	29	5	1	Gear—Camshaft
57-8230	29	6	1	Washer—Thrust
57-8280	41	18	2	Gasket—Cover
57-8330	41	38	2	Gasket—Head
57-8410	41	44	4	Bolt—Connecting Rod
57-8420	41	43	2	Rod—Conn STD INC 44 & 47
57-8430	41	43	2	.010" Undersize
57-8440	41	43	2	.020" Undersize
57-8450	41	9	4	Tappet—Valve STD
57-8460	41	58	1	Kit—Gasket
57-8470	41	3	1	Plunger—Bypass Valve
57-8480	41	54	1	Pump—Oil
57-8490	30	4	1	Cup—Intake
57-8580	41	11	1	Baffle—Breather Tube
57-9080	38	5	1	Pump—Fuel
57-9090	29	1	1	Ring—Retaining
57-9100	35	8	1	Spring—Governor
57-9120	35	9	1	Bushing—Control Arm
57-9120	35	16	1	Bushing—Control Arm
57-9130	29	2	1	Hub—Governor Cup
57-9170	37	9	1	Swivel—Choke Lever
57-9180	37	3	1	Link—Choke
57-9190	35	2	2	Clamp—Cable
57-9190	37	4	1	Clamp—Cable
57-9210	13	21	2	Gasket—Manifold
57-9340	33	8	2	Plug—Spark
57-9360	41	52	1	.002" Undersize
57-9430	32	12	1	Regulator—Voltage 20 Amp
57-9550	32	21	1	Clamp—Vacuum Port Cap
57-9570	32	5	1	Seal—Oil
57-9580	32	26	1	Seal—Oil
57-9590	41	31	1	Seal—Oil
57-9610	30	12	1	O Ring—Cap
57-9620	36	5	1	O Ring
57-9630	32	7	1	Bearing—Ball Gov Shaft
57-9640	29	4	1	Ball—Governor
57-9650	32	6	1	Bearing—Governor Shaft
57-9660	29	8	1	Key—Woodruff
57-9660	29	15	1	Key—Woodruff
57-9690	41	25	1	Plug—Welch
57-9700	36	6	1	Clip—Retaining
57-9710	29	14	1	Ring—Retaining
57-9720	41	48	4	Ring—Retaining
57-9740	41	20	2	Washer—Flat
57-9750	31	3	2	Washer—Flat
57-9750	32	24	5	Washer—Flat
57-9760	41	2	1	Washer—Flat
57-9770	26	3	2	Washer—Flat
57-9770	41	40	18	Washer—Flat
57-9790	41	47	4	Nut
57-9800	41	52	1	.020" Undersize
59-0010	41	52	1	.030" Undersize
59-0020	41	29	1	.002" Undersize
59-0030	41	29	1	.020" Undersize
59-0040	41	29	1	.030" Undersize
59-0050	41	36	2	Insert—Valve Seat Intake
59-0080	41	36	2	.010" Oversize
59-0100	41	46	2	Insert—Valve Seat Exh

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
59-0110	41	46	2	.002" Oversize
59-0120	41	46	2	.005" Oversize
59-0130	41	46	2	.010" Oversize
59-0140	41	46	2	.025" Oversize
59-0180	41	39	1	Head—Cylinder RH
59-0250	41	43	2	.030" Undersize
59-0260	41	9	4	.002" Oversize
59-0280	41	4	1	Spring—Bypass Valve
59-0290	41	51	1	Tube—Oil
59-0360	32	23	1	Tube—Vacuum Port
59-0370	32	22	1	Cap—Vacuum Port
59-0400	29	7	1	Pin—Center
59-0420	32	2	1	Yoke—Governor
59-0430	35	5	1	Spring—Idle Setting
59-0450	29	3	1	Cup—Governor
59-0470	37	1	1	Bracket—Choke Cable
59-0580	27	3	1	Clamp—Wire
59-0590	32	18	2	Terminal—Stator Leads
59-0640	31	5	1	Elbow—Street 45 Degree
59-0720	35	14	1	Pin—Cotter
59-0720	37	10	1	Pin—Cotter
59-0730	41	26	4	Pin—Drive
59-0740	32	9	1	Pin—Dowel
59-0750	41	53	2	Pin Align
59-0790	32	29	1	Stud—Gear Cover
59-0810	28	3	1	Washer—Flat
59-0820	27	16	4	Washer—Flat
59-0820	41	22	1	Washer—Flat
59-0830	27	5	6	Washer—Flat
59-0830	35	4	2	Washer—Flat
59-0830	35	20	1	Washer—Flat
59-0850	37	12	1	Washer—Flat
59-0880	41	32	5	ScREW—Cap Flg Hd
59-0900	41	41	18	Screw—Cap Hex Hd
59-0910	41	5	1	Screw—Cap Hex Hd
59-0950	32	1	2	Screw—Mach Pan Hd
59-0970	27	6	2	Screw TAP Flg Hd
59-0980	27	4	2	Screw TAP Washer Hd
59-1000	35	26	3	Screw
59-1030	35	6	1	Screw—Tapping Hex Hd
59-1050	38	7	2	Screw St Pan Hd
59-1080	27	9	4	Screw—Cap Flg Hd
59-1080	32	11	1	Screw—Cap Flg Hd
59-1100	27	21	2	Screw—Lock Hd
59-1100	35	11	1	Screw—Lock Hd
59-1130	32	28	1	Nut—Hex
59-1180	34	14	1	Capacitor
62-2730	26	13	1	Kit—Bushing
62-2740	26	11	1	Starter Brush Kit
62-2760	26	1	1	Kit—Starter Hardware
62-2770	26	7	1	Kit—Starter Shift Lever
62-7770	5	9	2	Key—Ignition
66-0120	5	8	2	Knob
71-5730	30	8	1	Base—Oil
71-5770	41	37	2	Valve—Intake
71-5780	41	45	2	Spring—Clutch
71-5790	41	6	4	Spring—Valve
71-5800	41	7	4	Washer—Valve Spring
71-5810	41	39	1	Head—Cylinder LH
71-5830	41	17	4	Cap—Valve
71-5920	28	5	1	Flywheel Incl 6
71-5960	38	2	1	Filter—Fuel

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
71-5980	36	16	2	Gasket—Manifold
71-5990	33	1	1	Cover—Plunger
71-6000	33	7	1	Coil—Battery Ignition
71-6010	33	13	1	Rotor—Ignition
71-6040	26	2	1	Starter Incl 1-13
71-6060	33	10	1	Clip—Wire
71-6080	27	10	2	Bracket—Lift
71-6140	34	16	1	Grommer—Rubber
71-6170	30	9	1	Seal—Oil
71-6180	41	23	2	Seal—Valve
71-6190	28	7	1	Key—Flywheel
71-6220	27	7	1	Clip—Wire
71-6220	33	11	2	Clip—Wire
71-6220	36	19	1	Clip—Wire
71-6250	41	24	2	Guide—Valve
71-6260	41	24	2	Guide—Valve
71-6290	41	57	1	Kit—Gasket Complete
71-6310	41	49	2	Pin—Piston
71-6320	29	9	1	Camshaft (220)
71-6340	28	8	6	Spring—Compression
71-6360	32	8	1	Gasket—Mntg
71-6380	32	14	1	Control—Ignition
71-6410	32	15	1	Insulator—Ignition
71-6430	33	5	1	Nut—Hex Flg Hd
71-6440	33	4	1	Nut—Hex Flg Hd
71-6460	33	6	2	Screw—Hex Washer Hd
72-3880	37	2	1	Screw—Cap Flg Hd
72-3890	35	17	1	Screw—Hex Hd
72-3890	37	8	1	Screw—Hex Hd
72-3900	35	1	1	Screw—Tapping Hex Hd
72-3900	37	5	1	Screw—Tapping Hex Hd
72-3930	26	8	1	Kit—Starter Solenoid
72-3940	26	6	1	Clutch—Starter
72-3950	26	5	1	Seal—Dust
78-0030	5	6	1	Voltmeter
78-0040	5	2	1	Gauge—Fuel
78-0060	5	1	1	Tachometer
78-0080	5	2:3	1	Bracket—Mounting
78-0080	5	6:3	1	Bracket—Mounting
78-0090	5	1:3	1	Bracket—Mounting
78-0100	5	5:3	1	Bracket—Mounting
78-1540-03	3	31	1	Bracket—Control
78-1550	7	7	1	Lever—Lift
78-2880-01	2	4	1	Shaft—Steering
78-2900	2	33	2	ASM—Rod
78-2990-03	10	13	1	Plate—Seat Pivot
78-5640	6	17	1	Valve Actuator Bar ASM
78-5711	8	9	1	Bracket—Control
78-6020	9	23	1	Idler Arm ASM
78-7740-01	14	25	1	Pivot Arm—Brake
78-8500-03	9	2	1	Pawl—Parking Brake
79-0450	5	19	4	Lamp—Mini
79-2130	5	13	1	Circuit Board—8 Light
79-2660	5	5	1	Gauge—Vacuum
79-3630	20	9	1	Wire Harness
79-4020-03	20	22	1	Plate—Front
79-4890-03	3	23	1	Panel—Side LH
79-4990-01	19	19	1	Bracket—Fender Support
79-5020	14	27	1	Tube Cmplt— Flatr To Pump
79-5120-03	3	29	1	ASM—Hoodstand
79-5130-01	4	6	1	Cover—Side LH
79-5270	14	13	1	Filter—Oil

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
79-6330	34	11	1	Housing—Air Cleaner
79-6340	34	12	1	Support—Air Cleaner
79-6360	35	3	1	Bracket—Cable
79-6390	35	23	1	Bracket—Governor Cont
79-6400	35	22	1	Bushing—Governor Cont
79-6420	35	10	1	Adapter—Governor Arm
79-6440	28	4	1	Screen—Air Inlet
79-6460	30	2	1	Bracket—Fill Tube
79-6470	31	1	1	Gasket—Adapter
79-6490	33	14	1	Gasket—Plate
79-6510	34	3	1	Spacer—Stud
79-6520	34	4	1	Spacer—Nylon
79-6580	26	4	2	Screw—Cap
79-6770-03	3	6	1	Plate—Top Hoodstand
82-0020	41	30	1	Plate—Bearing
82-0500	31	2	1	Adapter—Oil Filter
82-0530	41	12	1	Clamp—Tube
82-0540	41	10	1	Tube—Breather
82-0550	41	15	1	Cap & Valve—Breather
82-0560	41	14	2	Screen—Tube
82-0570	41	13	1	O—Ring—Cap
82-0620	27	18	1	Guard—Stationary
82-0650	34	8	1	Cover—Inner
82-0680	31	8	1	Filter—Gasket Oil
82-0850	36	11	1	Gasket—Carb/Manifold
82-1000	32	13	2	Body—Term Conn Kit
82-1070	34	18	1	Fitting—Barbed
82-1070	36	3	1	Fitting—Barbed
82-1080	36	2	2	Clamp—Hose .50" Dia
82-1080	38	1	6	Clamp—Hose .50" Dia
82-1090	36	2	1	Clamp—Hose .44" Dia
82-1120	36	1	1	Hose—Breather
82-1130	30	10	2	Plug—Square Head
82-1310	30	6	4	Washer—Flat
82-1310	41	33	5	Washer—Flat
82-1320	28	2	1	Washer—Flat
82-1340	33	2	2	Washer
82-1340	41	55	2	Washer
82-1350	36	13	6	Washer
82-1360	33	3	2	Screw—Hex Hd
82-1370	35	18	1	Screw—Hex Hd
82-1370	41	56	2	Screw—Hex Hd
82-1480	41	16	1	Screw—TAP Round Hd
82-1500	32	20	3	Screw—Mach Hex Hd
82-1510	31	10	2	Screw—Hex Hd
82-1540	27	8	1	Bolt—Hex Hd
82-1540	36	17	1	Bolt—Hex Hd
82-1550	34	9	2	Screw—Hex Washer Hd
82-1560	30	1	1	Screw
82-1590	27	20	4	Screw—PH Torx
82-1600	27	2	2	Screw—Cap Hex Flg Hd
82-1620	35	19	1	Washer—Lock
82-1660	32	16	2	Washer—Lock
82-1670	34	5	1	Nut—Wing
82-1690	34	15	1	Nut—Hex Washer Hd
82-1700	30	3	1	Nut—Speed
82-1740	36	8	1	Spring—Governor Rod
82-1800	41	42	2	Piston STD INC 48-49
83-2720	16	2	10	Bolt—Lug
83-2820	9	40	1	Spring—Extension
83-6520	17	16	1	Rod—Lock
88-2710-01	2	5	1	Support—Lower Steering

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
88-2790	21	16:2	1	Decal—Danger
88-3870	2	21:1	1	Cover—Steering Wheel
92-0900	41	1	1	Block—Cylinder (Short)
92-0902	41	42	2	.010" Oversize
92-0903	41	42	2	.020" Oversize
92-0904	41	42	2	.030" Oversize
92-0905	41	50	2	Kit—Ring Piston STD
92-0906	41	50	2	.005" Oversize
92-0907	41	50	2	.010" Oversize
92-0908	41	50	2	.020" Oversize
92-0909	41	50	2	.030" Oversize
92-0911	29	10	1	Sleeve—Bearing
92-0915	34	10	2	Screw—Mach Hex Hd
92-0916	37	6	1	Screw—Shoulder
92-0918	36	14	1	Manifold—Intake (220)
92-0919	36	7	1	Rod—Governor Control
92-0920	27	1	1	Housing—Cylinder Air LH
92-0921	27	12	1	Housing—Cylinder Air RH
92-0922	35	7	1	Arm—Governor Control
92-0967	32	19	1	Stator
92-3129	2	19	1	Shaft—Steering
92-5935	26	10	1	Nut
92-7298	21	16	1	Casehalf Decal ASM
92-8747	17	29	2	Decal—Attach A Matic
92-9513	19	20	1	Line—Fuel 47"
92-9826	1	24	1	Decal—Front Hood
92-9827	10	36	1	Decal—Fender
92-9833	3	39	2	Decal—520 Hydro
92-9834	1	27	1	Decal—Hood LH
92-9835	1	25	1	Decal—Hood RH
92-9844	5	3	1	Switch—Light
92-9848	22	1	1	Trans—Hydro
93-1613	17	22	1	Latch—Front
93-6668	18	14	1	Decal—Instruct
93-7276	18	15	1	Decal—Danger
93-7314	3	41	1	Decal—Danger
93-7337	3	46	1	Decal—Danger
93-7338	3	43	1	Decal—Lights
93-7846	3	47	1	Decal—System
93-7847	3	45	1	Decal—Clutch
93-7849	10	35	1	Decal—Do Not Tow
93-9287-03	13	26	2	Bar—Guard
93-9351	3	42	1	Decal—Brake
93-9396	3	44	1	Decal—Dash
93-9800	16	10	2	ASM—Wheel & Tire
93-9801	16	10:1	2	ASM—Wheel w/Zerk
93-9810	25	17	1	Ring—Cam
93-9810	25	17	1	Ring—Cam
93-9811	25	50	1	Body
93-9811	25	50	1	Body
93-9812	25	57	1	ASM—Body
93-9812	25	57	1	ASM—Body
93-9813	25	58	1	Fitting—Hydraulic
93-9813	25	58	1	Fitting—Hydraulic
94-1576	6	30	1	Sleeve—Protective
94-1584-03	12	24	2	Bar—Support
94-1587-03	12	26	1	Wa—Guard
94-1802	6	28	1	Tube ASM—Hyd Return
94-1803-03	13	3	1	Baffle—Deflector
94-1806	36		1	Decal—Ident
94-1811	13	7	1	Engine—Onan
94-1834	14	43	1	Decal—Unidrive

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
94-1839	3	21	1	Sensor—Air Clnr Vacuum
94-1840	34	6	1	Cover—Cleaner
94-1843	36		1	Kit—Repair
94-1843	36	10	1	Kit—Repair
94-1844	36		1	Kit—Repair
94-1844	36	10	1	Kit—Repair
94-1845	31	6	1	Switch—Pressure
94-1845	31	6	1	Switch—Pressure
94-1846	36		1	Harness—Wire
94-1847	36	10	1	Kit—Carburetor (220)
94-1848	36		1	Jet—Altitude
94-1848	36	10	1	Jet—Altitude
94-1849	5	4:2	1	Cup—Retainer
94-3518	10	8	1	Seat V-811
94-3519	2	21	1	Wheel—Steering
94-3521-01	4	17	1	Footrest RH
94-3522-01	4	9	1	Footrest LH
94-3700	6	13	1	Knob—Lift
94-3701	12	2	1	Rod—PTO Control
94-3704	11	21	1	Belt Cover—PTO
94-3707-01	8	32	1	Pedal—Brake
94-3710	4	1	1	Mat—Foot RH
94-3712	4	2	1	Mat—Foot LH
94-3722-01	10	22	1	Fender
94-3723	5	4	1	Hourmeter
94-3725-01	4	16	1	Belt—Guard
94-3726-01	11	18	1	Wa—Bracket
94-3727	12	1	1	Knob
94-3729	11	28	1	Retainer—Bolt
94-3735	11	22	2	Nut—Wing
94-3736	1	23	1	Plate—Logo
94-5592	14	42	1	Decal—Danger
94-6650	11	8	1	ASM—Plate
94-6652	12	22	1	ASM—Brake
94-6654-01	8	36	1	Rod—Brake
94-6661-03	19	22	1	Guard—Fan
94-6664	13	2	1	Shield—Heat
94-6666	18	5	1	ASM—Battery/Decal
94-6668	8	3	1	Knob—Control
94-6672	14	33	1	Transaxle ASM
94-6673-01	2	22	1	Frame
94-6679	14	34	1	Transaxle/Intl Decal
94-6680	32	4	1	Clip—Retaining New
94-6680	36	9	1	Clip—Retaining New
94-6683	8	43	1	Sleeve—Protective
94-6692-01	19	18	1	Bracket—Support
94-6693-01	19	12	1	Bracket—Support
94-9700-03	13	24	1	Shield—Heat
94-9701	13	27	4	Spacer
101711-01	17	25	1	Plate—Front Hitch
102644-01	17	3	2	Plate—Hitch
103478-01	11	7	1	Housing—Clutch
105763-03	14	46	2	Hub—Wheel
108326-03	14	2	1	Spacer—Pivot
108329-03	22	27	1	Plate—Control
108716-03	9	16	1	Plate—Neutral Cam
109367-03	22	15	1	Bracket—Brake
109554-03	20	18	1	Bracket—Guard
110768-03	14	1	1	Dipstick
110920-03	10	23	2	Spring—Seat
111201-01	21	14	1	Case—Transaxle
113023-03	3	1	1	Bracket—Fender

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
113381—01	2	32	1	Spindle—LH
113382—01	2	31	1	Spindle—RH
113445—01	7	21	1	Bar—Lift
113454—03	8	15	1	ASM—Cam Control
113874—03	12	13	1	Bracket—PTO
113927—01	21	16	1	Case—Transaxle
113927—01	21	16:1	1	Case—Transaxle
113928—03	3	17	1	Plate—Hoodstand
113932—03	3	25	1	Stiffener—Panel
113962—03	3	32	1	Panel—Side
114215—03	13	20	1	Cover—Exhaust Front
114216—03	13	6	1	Cover—Exhaust Rear
114345—01	10	17	1	Bracket—Gas Spring
114641—03	5	12	1	Stop—Choke
116305—03	6	9	1	Bracket—Control
116309—03	3	28	1	ASM—Support
116609—03	13	14	1	Plate—Engine
117191—03	3	34	1	Bracket—Holder
117267—03	3	13	1	Panel ASM
1644—01	17	7	1	Hitch ASM
237—69	2	20	1	O—Ring
2412—98	19	21	2	Clamp—Hose
281—10	21	17	2	Plug—Pipe
288—4	13	11	1	Cap—Pipe
302—5	2	28	2	Fitting—Grease
302—5	8	34	1	Fitting—Grease
302—11	2	7	2	Fitting—Grease
321—4	6	11	1	Screw—HH
321—4	8	10	2	Screw—HH
321—4	18	3	2	Screw—HH
321—6	9	39	1	Screw—HH
321—8	10	25	2	Screw—HH
321—9	8	20	1	Screw—HH
321—11	6	26	2	Screw—HH
322—1	2	24	1	Screw—HH
322—2	3	26	2	Screw—HH
322—2	7	13	1	Screw—HH
322—2	19	15	2	Screw—HH
322—3	3	27	8	Screw—HH
322—3	13	23	4	Screw—HH
322—3	14	37	2	Screw—HH
322—3	19	17	4	Screw—HH
322—4	10	10	6	Screw—HH
322—5	3	3	2	Screw—HH
322—5	10	1	4	Screw—HH
322—6	7	3	1	Screw—HH
323—6	2	2	2	Screw—HH
323—6	11	19	1	Screw—HH
323—6	13	12	4	Screw—HH
323—7	12	15	2	Screw—HH
323—7	14	33	4	Screw—HH
323—8	2	6	2	Screw—HH
323—8	9	8	1	Screw—HH
323—8	9	30	1	Screw—HH
323—8	13	19	4	Screw—HH
323—9	9	7	1	Screw—HH
323—9	14	29	1	Screw—HH
323—15	22	8	2	Screw—HH
323—23	8	24	1	Screw—HH
323—25	22	14	3	Screw—HH
323—26	22	11	1	Screw—HH
323—44	17	1	6	Screw—HH

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3217-5	8	14	1	Nut—Hex
3217-5	9	24	1	Nut—Hex
3217-27	5	1:1	3	Nut—HH
3217-27	5	2:1	3	Nut—HH
3217-27	5	5:1	2	Nut—HH
3217-27	5	6:1	1	Nut—HH
3218-1	12	9	2	Nut—Jam
3218-3	14	45	4	Nut—HJ
3220-1	8	11	3	Nut—HH
3229-25	1	14	4	Screw—CARR
3229-25	12	20	2	Screw—CARR
3230-1	4	12	1	Bolt—CARR
3231-25	17	26	3	Screw—CARR
3235-22	14	21	1	Screw—HH
3235-22	19	10	2	Screw—HH
3243-5	14	44	4	Screw—Set
3245-32	8	33:1	1	Screw—Set
3246-2	11	11	2	Screw—HSH Set
3247-4	41	34	2	Screw—HS
3250-31	10	31	4	Screw—Phcr
3253-2	32	10	3	Washer—Lock #10
3253-3	12	10	2	Washer—Lock
3253-4	2	25	1	Washer—Lock
3253-4	10	2	4	Washer—Lock
3253-4	13	22	4	Washer—Lock
3253-4	14	38	2	Washer—Lock
3253-4	19	14	2	Washer—Lock
3253-5	41	33	5	Washer—Lock
3253-15	5	15	2	Washer—Lk
3253-17	19	5	5	Washer—Lock
3253-21	12	14	2	Washer—Lock
3253-21	14	32	4	Washer—Lock
3254-1	10	29	4	Washer—Lock
3255-25	5	1:2	3	Washer—Lock
3255-25	5	2:2	3	Washer—Lock
3255-25	5	5:2	2	Washer—Lock
3255-25	5	6:2	1	Washer—Lock
3256-4	9	9	2	Washer—Flat
3256-4	14	24	1	Washer—Flat
3256-4	19	9	2	Washer—Flat
3256-21	5	14	2	Washer—Flat
3256-22	1	12	3	Washer—Flat
3256-22	8	19	2	Washer—Flat
3256-22	10	15	2	Washer—Flat
3256-22	12	11	2	Washer—Flat
3256-23	3	2	8	Washer—Flat
3256-23	6	15	2	Washer—Flat
3256-23	7	20	1	Washer—Flat
3256-23	10	11	4	Washer—Flat
3256-23	12	25	1	Washer—Flat
3256-24	8	25	2	Washer—Flat
3256-24	13	18	4	Washer—Flat
3256-24	14	22	2	Washer—Flat
3256-26	7	2	1	Washer—Flat
3256-26	14	12	1	Washer—Flat
3256-26	17	9	1	Washer—Flat
3256-27	11	24	1	Washer—Flat
3256-62	7	10	2	Washer—Flat
3257-24	14	30	1	Key—Woodruff
3272-1	1	16	2	Pin—Cotter
3272-1	6	2	1	Pin—Cotter
3272-6	14	19	2	Pin—Cotter

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3272—10	8	37	1	Pin—Cotter
3272—10	12	5	3	Pin—Cotter
3272—11	6	21	1	Pin—Cotter
3272—17	16	7	2	Pin—Cotter
3272—19	2	11	1	Pin—Cotter
3272—21	2	18	1	Pin—Cotter
3290—378	1	22	1	Tie—Cable
3290—378	3	37	2	Tie—Cable
3290—479	4	3	16	Fastener—Panel
3296—4	8	39	1	Nut—Lock
3296—6	2	3	4	Nut—Lock
3296—8	6	31	1	Nut—Lock
3296—8	8	44	3	Nut—Lock
3296—8	10	14	2	Nut—Lock
3296—27	10	28	4	Nut—Lock
3296—29	3	16	18	Nut—Lock
3296—29	4	11	5	Nut—Lock
3296—29	6	14	2	Nut—Lock
3296—29	7	8	2	Nut—Lock
3296—29	10	4	6	Nut—Lock
3296—29	19	13	4	Nut—Lock
3296—39	2	23	4	Nut—Lock
3296—39	7	6	1	Nut—Lock
3296—39	8	31	1	Nut—Lock
3296—39	9	18	1	Nut—Lock
3296—39	13	17	8	Nut—Lock
3296—39	14	23	1	Nut—Lock
3296—39	17	24	3	Nut—Lock
3296—39	22	3	6	Nut—Lock
3296—42	1	11	4	Nut—Lock
3296—42	6	5	2	Nut—Lock
3296—42	8	12	1	Nut—Lock
3296—42	9	26	1	Nut—Lock
3296—42	18	12	2	Nut—Lock
3296—45	14	11	1	Nut
3296—59	12	18	1	Nut—Lock
32103—22	18	11	2	Nut—Wing
32115—5	3	11	12	Nut—Retainer
32120—47	7	18	1	Ring—Retaining
32120—47	8	23	3	Ring—Retaining
32120—47	9	19	1	Ring—Retaining
32120—62	11	4	1	Ring—Retaining
32120—64	22	6	1	Ring—Retaining
32120—72	11	3	2	Ring—Retaining
32120—93	2	34	2	Snap Ring
32121—94	8	8	1	Pin—Spirol
32121—111	2	15	1	Pin—Spiral
32128—19	9	1	1	Nut—Lock
32128—33	3	12	2	Nut—Hex Flange
32128—40	11	17	1	Nut—Lock
32136—5	2	10	1	Nut—Slotted
32144—28	13	25	4	Screw—Phcr
32144—110	13	28	4	Screw—HWHTF
32149—9	5	4:1	2	Nut/Washer—Lock
32151—11	12	3	1	Ring—Grip
32151—91	7	11	2	Ring—Retaining
5638—01	2	27	1	Axle—Front

*Not Illustrated

MAINTENANCE RECORD

[illegible]

