




MODEL NO. 30941-690001 & UP

PARTS CATALOG

POWER BLOWER

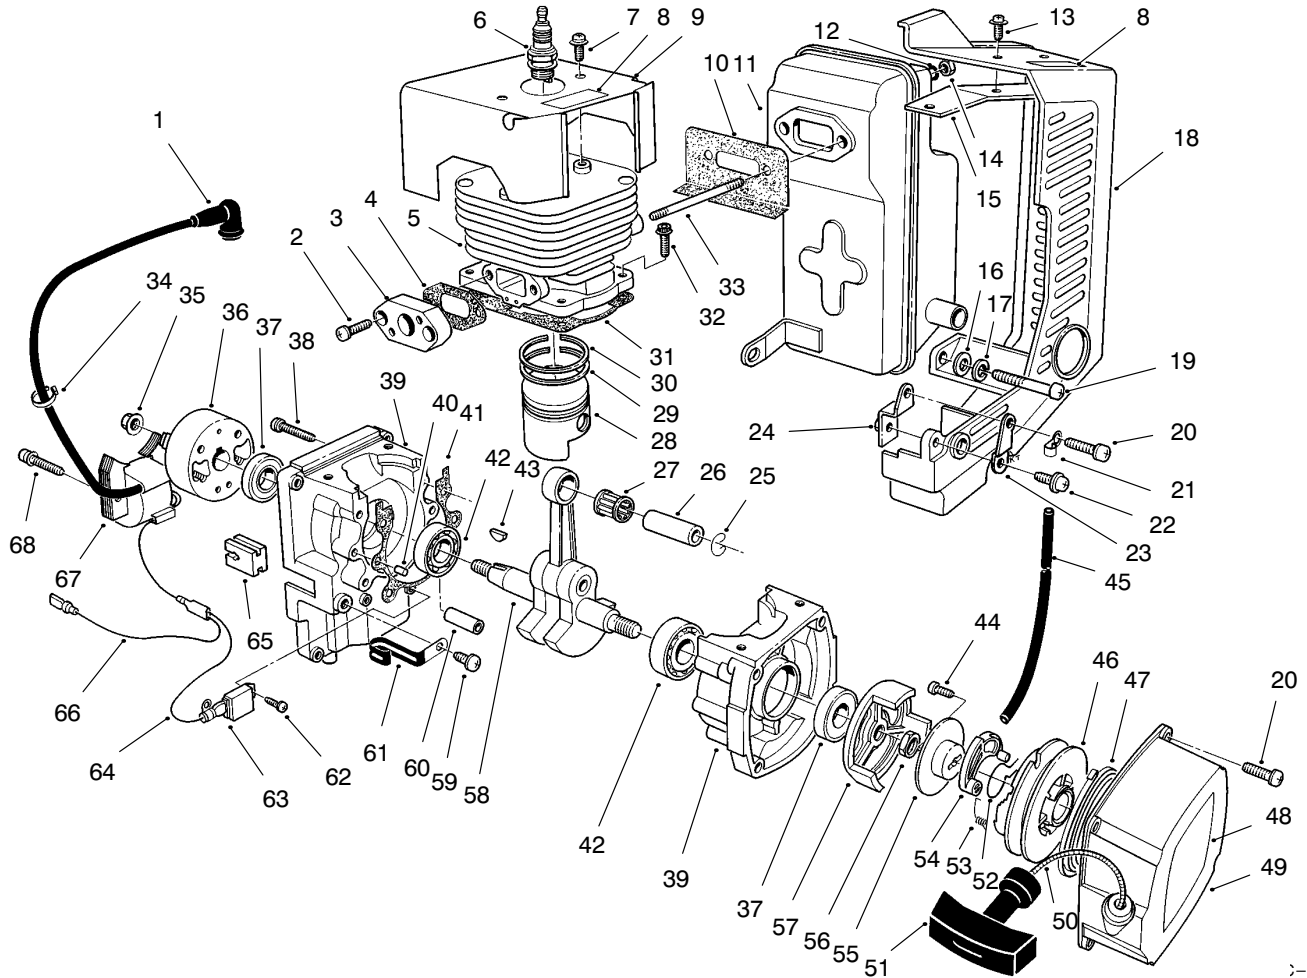


-0487

ENGINE & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	54-4730	Cap - Plug	1
2	56-8350	Screw	2
3	56-8420	Flange	1
4	56-8430	Gasket	1
5	56-8180	Cylinder	1
6	95-0670	Spark Plug (NGK BPM8Y)	1
7	54-6890	Screw/Washer	2
8	65-2690	Decal - Hot Surface	2
9	56-8160	Cover - Cylinder	1
10	56-8740	Gasket - Muffler	1
11	56-8750	Muffler	1
12	56-8760	Washer - Lock	2
13	56-8790	Screw	2
14	56-8770	Nut	2
15	56-8780	Bracket	1
16	56-8810	Washer	1

Ref. No.	Part No.	Description	No. Used
17	56-8820	Washer - Lock	1
18	56-8800	Cover - Muffler	1
19	56-8830	Screw	1
20	56-8880	Screw	4
21	56-8890	Clamp	1
22	56-8840	Screw	1
23	56-8850	Bracket	1
24	56-8860	Bracket	1
25	56-8230	Clip - Piston Pin	2
26	56-8260	Pin - Piston	1
27	56-8270	Bearing - Needle	1
28	56-8240	Piston (Incl. Ref.#26)	1
29	56-8220	Ring	1
30	56-8210	Ring	1
31	56-8200	Gasket - Cylinder	1
32	56-8190	Bolt - Flange	4

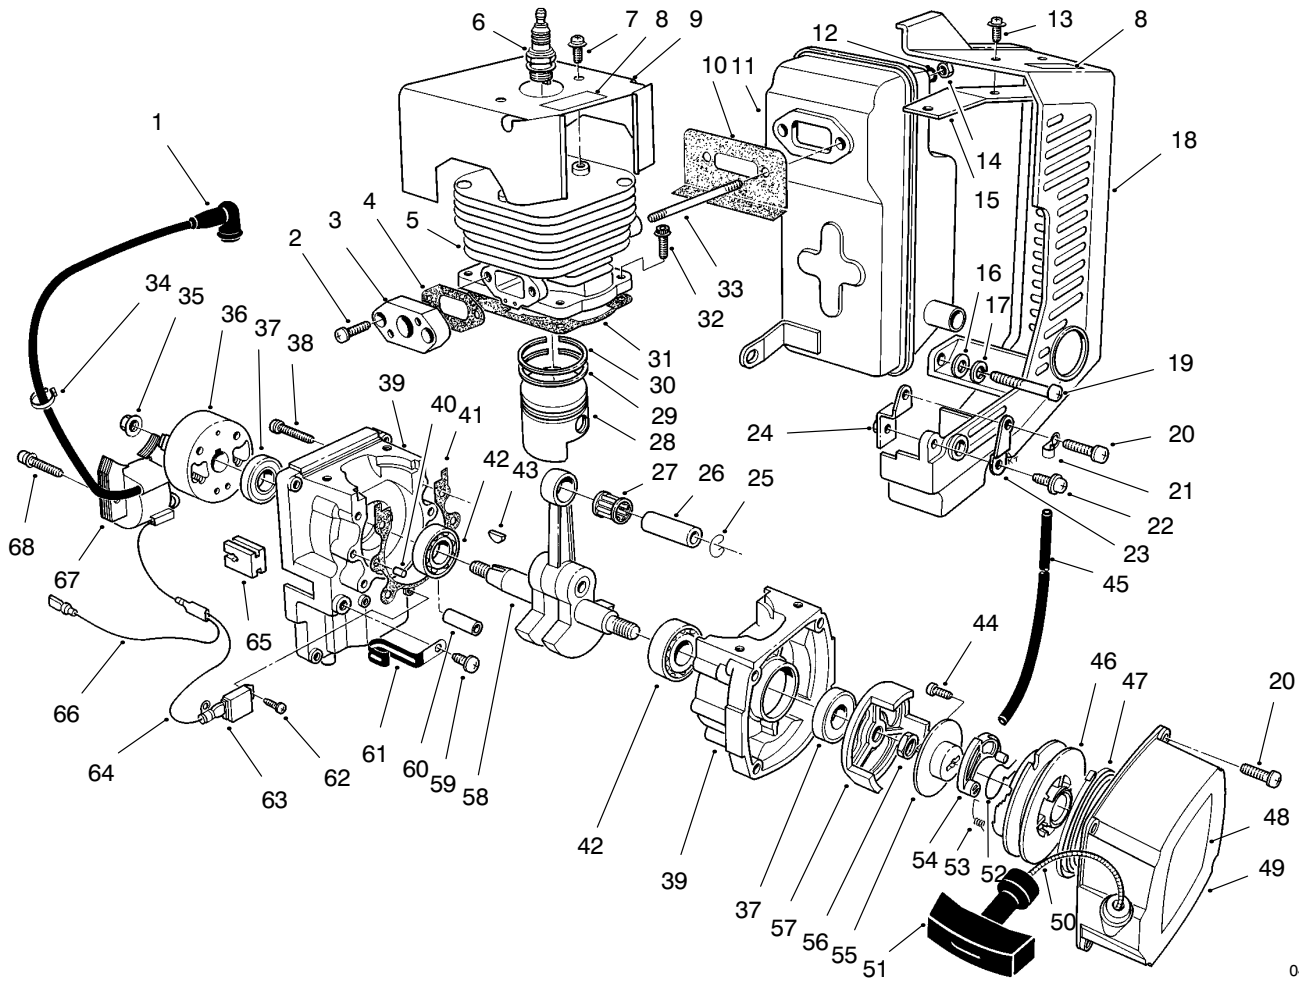

0487


ENGINE & MUFFLER ASSEMBLY(Continued)

Ref. No.	Part No.	Description	No. Used
33	56-8170	Bolt - Stud	2
34	54-5990	Cable Tie	1
35	54-4670	Nut	1
36	56-8300	Rotor	1
37	56-8120	Seal - Oil	2
38	54-5760	Screw	4
39	56-8110	Crankcase Assembly (Incl. Ref. #38, 40)	2
40	54-4510	Pin - Dowel	2
41	56-8150	Gasket - Crankcase	1
42	84-8450	Bearing - Ball	2
43	56-8250	Key - Woodruff	1
44	88-0200	Screw	1
45	56-8380	Tube - Fuel	1
46	56-8950	Reel	1
47	56-8960	Spring	1
48	63-9430	Decal - 41CC Power Blower	1
49	88-0210	Case - Starter	1
50	56-8980	Rope - Starter	1
51	56-8970	Knob - Starter	1
52	54-6320	Spring - Friction	1

Ref. No.	Part No.	Description	No. Used
53	54-6330	Spring - Return	1
54	56-8940	Ratchet	1
55	56-8930	Plate - Friction	1
56	56-8910	Nut	1
57	56-8920	Pulley - Starter	1
58	56-8280	Crankshaft	1
59	56-8140	Screw	1
60	56-8870	Pipe	1
61	56-8130	Clamp	1
62	54-4610	Screw	2
63	56-8320	Transistor - Unit	1
64	56-8330	Wire - Lead	1
65	56-8340	Grommet	1
66	56-9300	Wire - Lead	1
67	56-8310	Coil - Ignition	1
68	54-4790	Bolt	2
*	56-8900	Recoil Assembly(Incl. Ref.# 44,46-48,50-55 & 57)	1
+	61-4330	Spark Arrester Muffler Assembly	1

*Not Illustrated

+ See Page 6

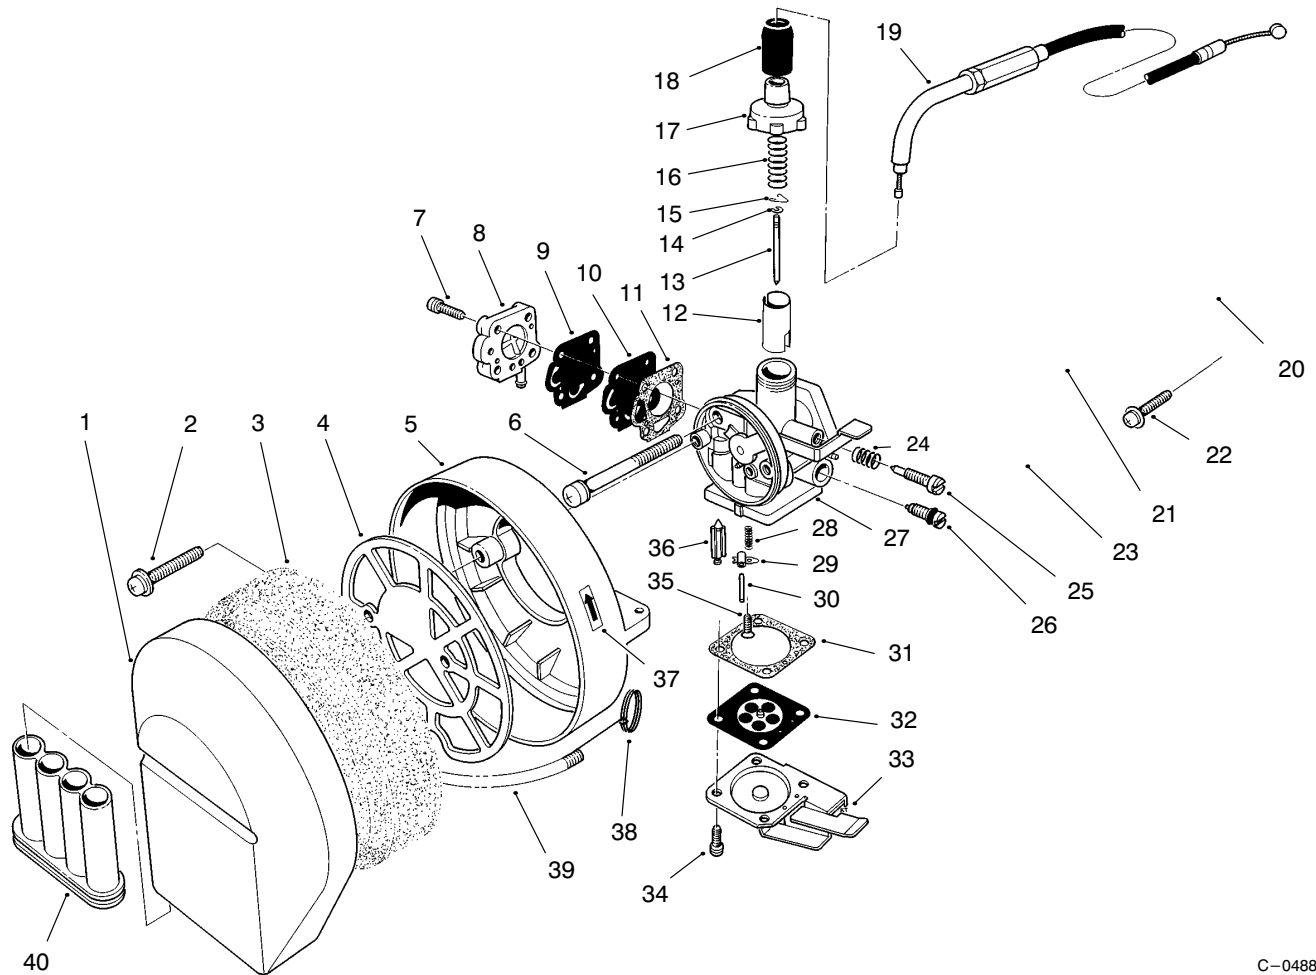


C-0488

CARBURETOR & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	56-8690	Cover - Air Cleaner	1	24	56-8580	Spring - Adjustment Screw	1
2	56-8720	Screw	2	25	56-8590	Screw - Adjustment	1
3	56-8700	Element - Air Cleaner	1	26	56-8600	Needle - Main Jet	1
4	56-8710	Grid	1	27	56-8370	Carburetor Assembly (Incl. Ref. #7-18, 24-26, & 28-36)	1
5	56-8730	Case - Air Cleaner	1	28	56-8610	Spring - Inlet Valve	1
6	56-8360	Screw	2	29	56-8490	Arm - Float	1
7	56-8440	Screw	4	30	56-8500	Pin - Float	1
8	56-8450	Cover - Pump	1	31	56-8620	Gasket - Main Diaphragm	1
9	56-8460	Diaphragm	1	32	56-8630	Diaphragm - Main	1
10	56-8470	Valve - Check	1	33	56-8510	Cover - Diaphragm	1
11	56-8480	Gasket - Pump Cover	1	34	54-5110	Screw	4
12	56-8570	Valve - Throttle	1	35	54-5080	Screw - Float	1
13	56-8560	Needle - Jet	1	36	54-5050	Valve - Float	1
14	56-8550	Retainer - Spring	1	37	54-5170	Decal - Choke	1
15	56-8540	Clip - Needle	1	38	56-8660	Spring	2
16	56-8530	Spring - Throttle	1	39	56-8670	Spring	1
17	56-8520	Cap - Mixing Chamber	1	40	56-8680	Cap	1
18	54-4900	Cap - Rubber	1	*	56-8650	Air Cleaner Assembly (Incl. Ref. #1, 3-5, 37-40)	1
19	56-8640	Wire - Throttle	1	*	77-1010	Carburetor Repair Kit	1
20	56-8410	Gasket - Insulator	1				
21	56-8400	Insulator	1				
22	56-8350	Screw	2				
23	95-0671	Gasket - Carburetor	1				

*Not Illustrated

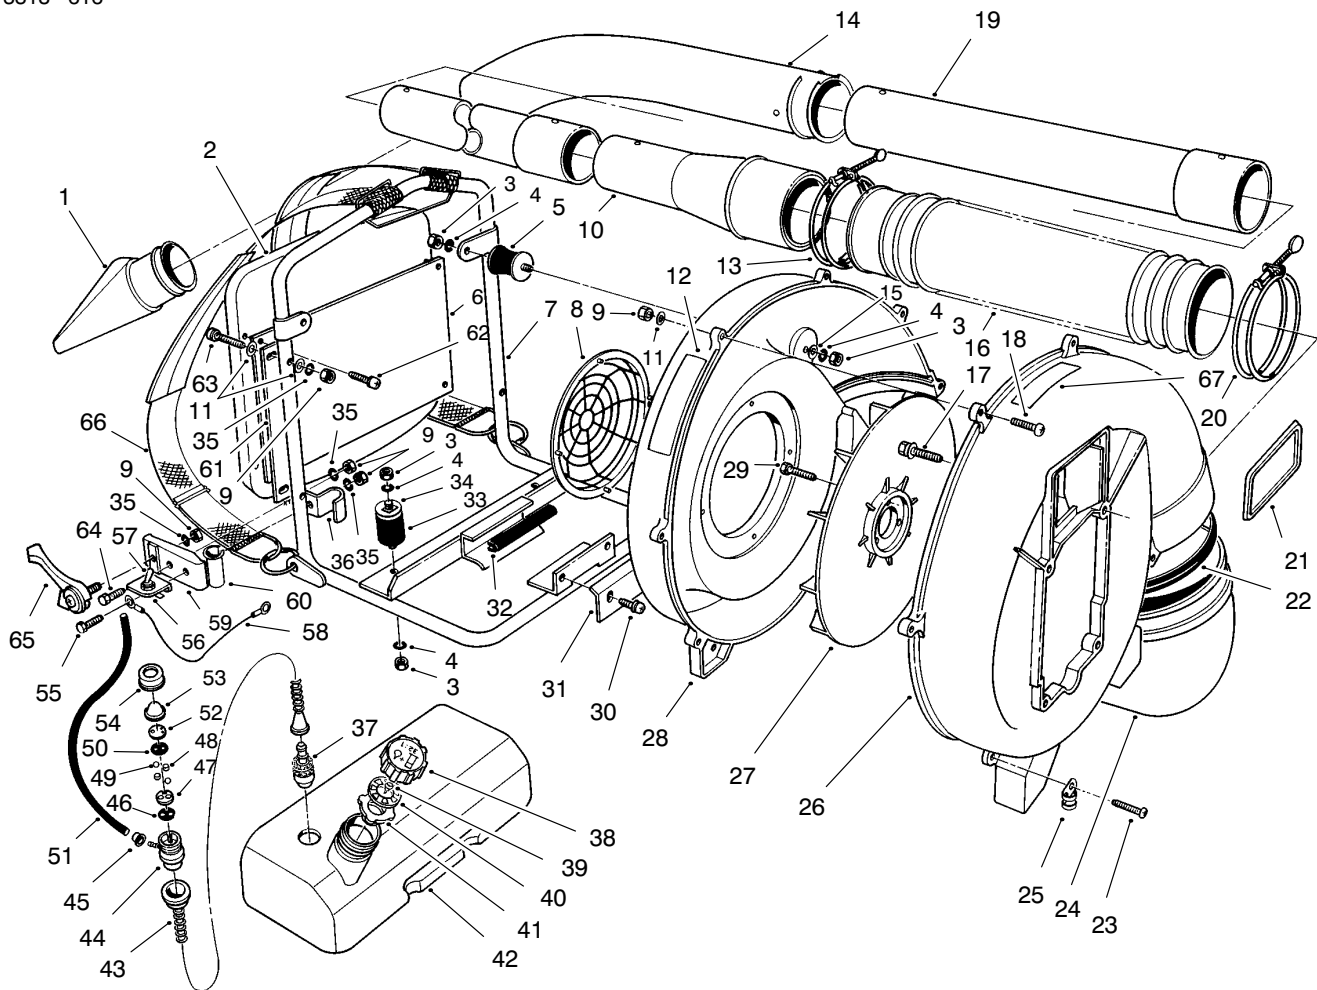


489

BLOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	56-9080	Nozzle	1
2	56-9330	Pad	1
3	56-9120	Nut	8
4	45-9130	Washer - Lock	8
5	56-9360	Cushion - Rubber	2
6	56-9340	Plate	1
7	56-9420	Frame	1
8	56-9160	Cover - Fan	1
9	56-9090	Nut	15
10	56-9050	Hose	1
11	56-9430	Washer	16
12	82-5670	Decal - Warning	1
13	56-9040	Band - Wire	1
14	56-9070	Hose	1
15	56-9140	Washer	2
16	57-5640	Hose - Flexible	1
17	56-9210	Bolt	4
18	56-9150	Screw	7
19	56-9060	Hose	2
20	56-9020	Band - Wire	1
21	46-8290	Plate - Toro	1
22	56-9180	Ring - Dust Seal	1
23	56-9470	Screw	1

Ref. No.	Part No.	Description	No. Used
24	56-9190	Elbow	1
25	56-9220	Clamp	1
26	56-9100	Case - Fan	1
27	56-9200	Fan	1
28	56-9170	Case - Fan	1
29	56-9110	Bolt	3
30	56-9410	Bolt	2
31	56-9400	Stopper	1
32	56-9390	Cushion - Rubber	2
33	56-9380	Cushion - Rubber	2
34	56-9370	Holder - Cushion	2
35	56-9260	Washer - Lock	7
36	57-5690	Clamp - Stopper	1
37	57-5520	Filter - Fuel	1
38	95-0674	Gas Cap Assembly (Incl. Ref. #39-41)	1
39		Valve - Breather	1
40		Holder	1
41		Gasket	1
42	56-9010	Fuel Tank Assembly (Incl. Ref. #37-41, 43, 44, 46-50, &52-54)	1

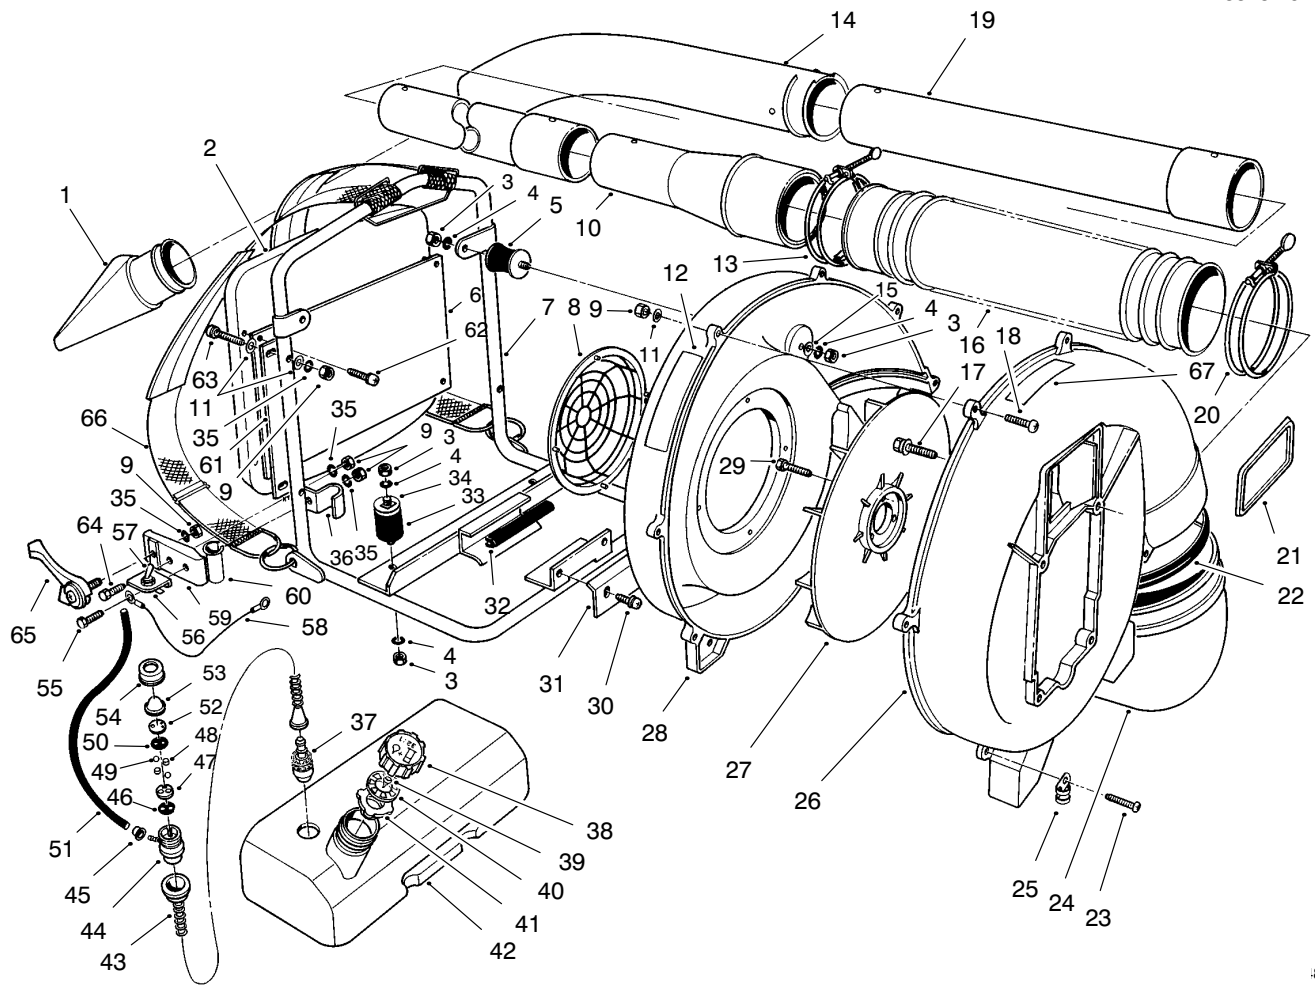


.89

BLOWER ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used
43	54-7050	Hose - Suction	1
44	95-0672	Primer - Pump (Incl. Ref. #47-54)	1
45	54-5550	Clip	2
46	54-5500	Gasket	1
47	54-5490	Seat - Valve	1
48	95-0673	Sponge	2
49	54-5480	Ball	2
50	54-5460	Gasket	1
51	56-9000	Tube - Fuel	1
52	54-5530	Seat - Valve	1
53	54-5520	Cap	1
54	54-5510	Cap - Pump	1
55	56-9230	Bolt	1

Ref. No.	Part No.	Description	No. Used
56	56-9310	Bracket - Switch	1
57	56-9240	Switch - Stop	1
58	56-9290	Wire - Lead	1
59	57-5700	Bracket	1
60	57-5650	Bushing	1
61	56-9350	Plate	2
62	56-9450	Screw	4
63	56-9440	Screw	4
64	57-5530	Screw - Hex. Hd. Cap	1
65	56-9250	Lever - Throttle	1
66	56-9460	Harness - Shoulder	2
67	82-5710	Decal - Sound Level	1
*	44-7400	Ear Plug Kit	1

*Not Illustrated

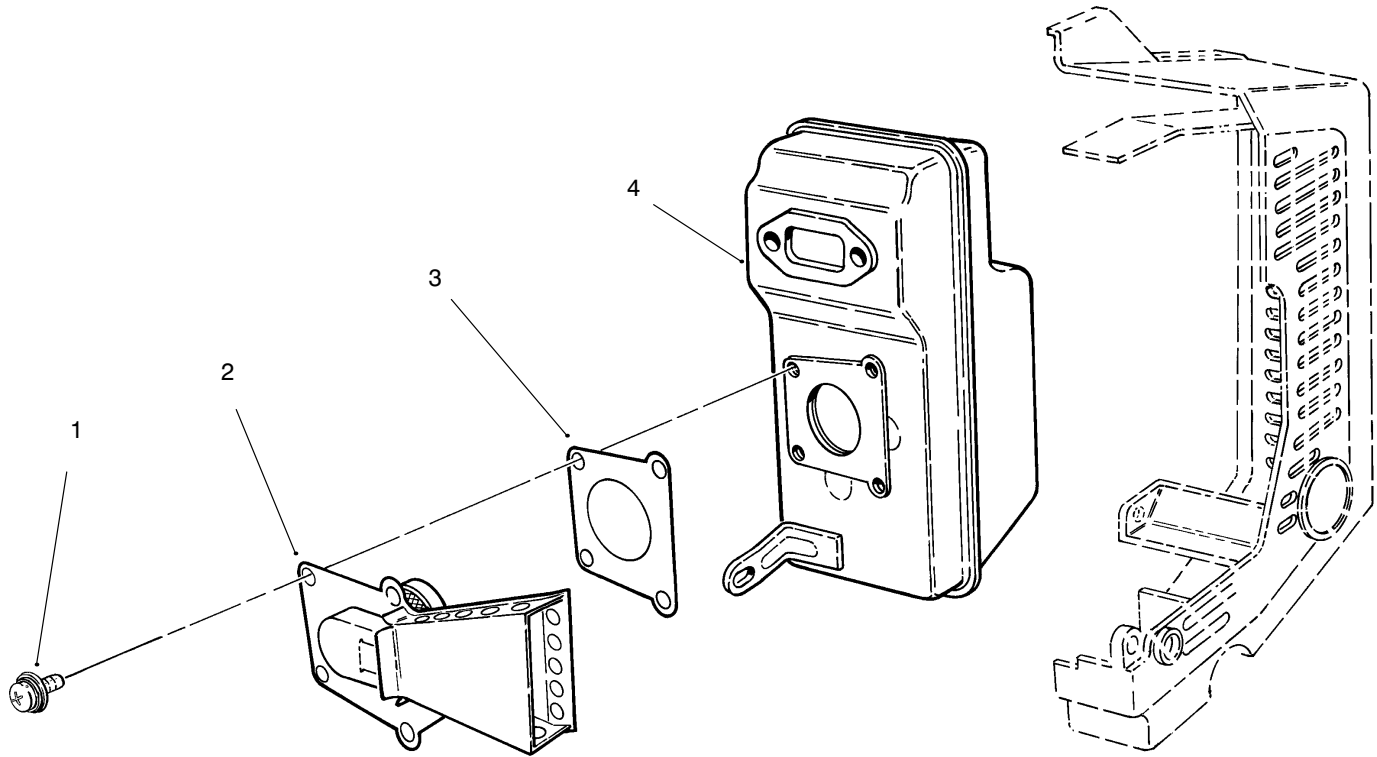

C-0490

SPARK ARRESTER MUFFLER KIT NO. 61-4330 (Optional)

Ref. No.	Part No.	Description	No. Used
1	61-4380	Screw/ Washer	4
2	61-4370	Spark Arrester	1

Ref. No.	Part No.	Description	No. Used
3	61-4360	Gasket	1
4	61-4350	Muffler	1

PROTOTYPE

TORO PART NUMBER INDEX

3318-616

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
44-7400	Ear Plug Kit	5	*	1	56-8570	Valve - Throttle	3	12	1
45-9130	Washer - Lock	4	4	8	56-8580	Spring - Adjustment Screw	3	24	1
46-8290	Plate - Toro	4	21	1	56-8590	Screw - Adjustment	3	25	1
54-4510	Pin - Dowel	2	40	2	56-8600	Needle - Main Jet	3	26	1
54-4610	Screw	2	62	2	56-8610	Spring - Inlet Valve	3	28	1
54-4670	Nut	2	35	1	56-8620	Gasket - Main Diaphragm	3	31	1
54-4730	Cap - Plug	1	1	1	56-8630	Diaphragm - Main	3	32	1
54-4790	Bolt	2	68	2	56-8640	Wire - Throttle	3	19	1
54-4900	Cap - Rubber	3	18	1	56-8650	Air Cleaner Assembly	3	*	1
54-5050	Valve - Float	3	36	1	56-8660	Spring	3	38	2
54-5080	Screw - Float	3	35	1	56-8670	Spring	3	39	1
54-5110	Screw	3	34	4	56-8680	Cap	3	40	1
54-5170	Decal - Choke	3	37	1	56-8690	Cover - Air Cleaner	3	1	1
54-5460	Gasket	5	50	1	56-8700	Element - Air Cleaner	3	3	1
54-5480	Ball	5	49	2	56-8710	Grid	3	4	1
54-5490	Seat - Valve	5	47	1	56-8720	Screw	3	2	2
54-5500	Gasket	5	46	1	56-8730	Case - Air Cleaner	3	5	1
54-5510	Cap - Pump	5	54	1	56-8740	Gasket - Muffler	1	10	1
54-5520	Cap	5	53	1	56-8750	Muffler	1	11	1
54-5530	Seat - Valve	5	52	1	56-8760	Washer - Lock	1	12	2
54-5550	Clip	5	45	2	56-8770	Nut	1	14	2
54-5760	Screw	2	38	4	56-8780	Bracket	1	15	1
54-5990	Cable Tie	2	34	1	56-8790	Screw	1	13	2
54-6320	Spring - Friction	2	52	1	56-8800	Cover - Muffler	1	18	1
54-6330	Spring - Return	2	53	1	56-8810	Washer	1	16	1
54-6890	Screw/Washer	1	7	2	56-8820	Washer - Lock	1	17	1
54-7050	Hose - Suction	5	43	1	56-8830	Screw	1	19	1
56-8110	Crankcase Assembly	2	39	2	56-8840	Screw	1	22	1
56-8120	Seal - Oil	2	37	2	56-8850	Bracket	1	23	1
56-8130	Clamp	2	61	1	56-8860	Bracket	1	24	1
56-8140	Screw	2	59	1	56-8870	Pipe	2	60	1
56-8150	Gasket - Crankcase	2	41	1	56-8880	Screw	1	20	4
56-8160	Cover - Cylinder	1	9	1	56-8890	Clamp	1	21	1
56-8170	Bolt - Stud	2	33	2	56-8900	Recoil Assembly	2	*	1
56-8180	Cylinder	1	5	1	56-8910	Nut	2	56	1
56-8190	Bolt - Flange	1	32	4	56-8920	Pulley - Starter	2	57	1
56-8200	Gasket - Cylinder	1	31	1	56-8930	Plate - Friction	2	55	1
56-8210	Ring	1	30	1	56-8940	Ratchet	2	54	1
56-8220	Ring	1	29	1	56-8950	Reel	2	46	1
56-8230	Clip - Piston Pin	1	25	2	56-8960	Spring	2	47	1
56-8240	Piston	1	28	1	56-8970	Knob - Starter	2	51	1
56-8250	Key - Woodruff	2	43	1	56-8980	Rope - Starter	2	50	1
56-8260	Pin - Piston	1	26	1	56-9000	Tube - Fuel	5	51	1
56-8270	Bearing - Needle	1	27	1	56-9010	Fuel Tank Assembly	4	42	1
56-8280	Crankshaft	2	58	1	56-9020	Band - Wire	4	20	1
56-8300	Rotor	2	36	1	56-9040	Band - Wire	4	13	1
56-8310	Coil - Ignition	2	67	1	56-9050	Hose	4	10	1
56-8320	Transistor - Unit	2	63	1	56-9060	Hose	4	19	2
56-8330	Wire - Lead	2	64	1	56-9070	Hose	4	14	1
56-8340	Grommet	2	65	1	56-9080	Nozzle	4	1	1
56-8350	Screw	1	2	2	56-9090	Nut	4	9	15
56-8350	Screw	3	22	2	56-9100	Case - Fan	4	26	1
56-8360	Screw	3	6	2	56-9110	Bolt	4	29	3
56-8370	Carburetor Assembly	3	27	1	56-9120	Nut	4	3	8
56-8380	Tube - Fuel	2	45	1	56-9140	Washer	4	15	2
56-8400	Insulator	3	21	1	56-9150	Screw	4	18	7
56-8410	Gasket - Insulator	3	20	1	56-9160	Cover - Fan	4	8	1
56-8420	Flange	1	3	1	56-9170	Case - Fan	4	28	1
56-8430	Gasket	1	4	1	56-9180	Ring - Dust Seal	4	22	1
56-8440	Screw	3	7	4	56-9190	Elbow	4	24	1
56-8450	Cover - Pump	3	8	1	56-9200	Fan	4	27	1
56-8460	Diaphragm	3	9	1	56-9210	Bolt	4	17	4
56-8470	Valve - Check	3	10	1	56-9220	Clamp	4	25	1
56-8480	Gasket - Pump Cover	3	11	1	56-9230	Bolt	5	55	1
56-8490	Arm - Float	3	29	1	56-9240	Switch - Stop	5	57	1
56-8500	Pin - Float	3	30	1	56-9250	Lever - Throttle	5	65	1
56-8510	Cover - Diaphragm	3	33	1	56-9260	Washer - Lock	4	35	7
56-8520	Cap - Mixing Chamber	3	17	1	56-9290	Wire - Lead	5	58	1
56-8530	Spring - Throttle	3	16	1	56-9300	Wire - Lead	2	66	1
56-8540	Clip - Needle	3	15	1	56-9310	Bracket - Switch	5	56	1
56-8550	Retainer - Spring	3	14	1	56-9330	Pad	4	2	1
56-8560	Needle - Jet	3	13	1	56-9340	Plate	4	6	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
56-9350	Plate	5	61	2	61-4330	Spark Arrestor	2	+	1
56-9360	Cushion - Rubber	4	5	2	61-4350	Muffler	6	4	1
56-9370	Holder - Cushion	4	34	2	61-4360	Gasket	6	3	1
56-9380	Cushion - Rubber	4	33	2	61-4370	Spark Arrestor	6	2	1
56-9390	Cushion - Rubber	4	32	2	61-4380	Screw/ Washer	6	1	4
56-9400	Stopper	4	31	1	63-9430	Decal - 41CC Power Blower	2	48	1
56-9410	Bolt	4	30	2	65-2690	Decal - Hot Surface	1	8	2
56-9420	Frame	4	7	1	77-1010	Carburetor Repair Kit	3	*	1
56-9430	Washer	4	11	16	82-5670	Decal - Warning	4	12	1
56-9440	Screw	5	63	4	82-5710	Decal - Sound Level	5	67	1
56-9450	Screw	5	62	4	84-8450	Bearing - Ball	2	42	2
56-9460	Harness - Shoulder	5	66	2	88-0200	Screw	2	44	1
56-9470	Screw	4	23	1	88-0210	Case - Starter	2	49	1
57-5520	Filter - Fuel	4	37	1	95-0670	Spark Plug (NGK BPM8Y)	1	6	1
57-5530	Screw - Hex. Hd. Cap	5	64	1	95-0671	Gasket - Carburetor	3	23	1
57-5640	Hose - Flexible	4	16	1	95-0672	Primer - Pump	5	44	1
57-5650	Bushing	5	60	1	95-0673	Sponge	5	48	2
57-5690	Clamp - Stopper	4	36	1	95-0674	Gas Cap Assembly	4	38	1
57-5700	Bracket	5	59	1					

PROTOTYPE