


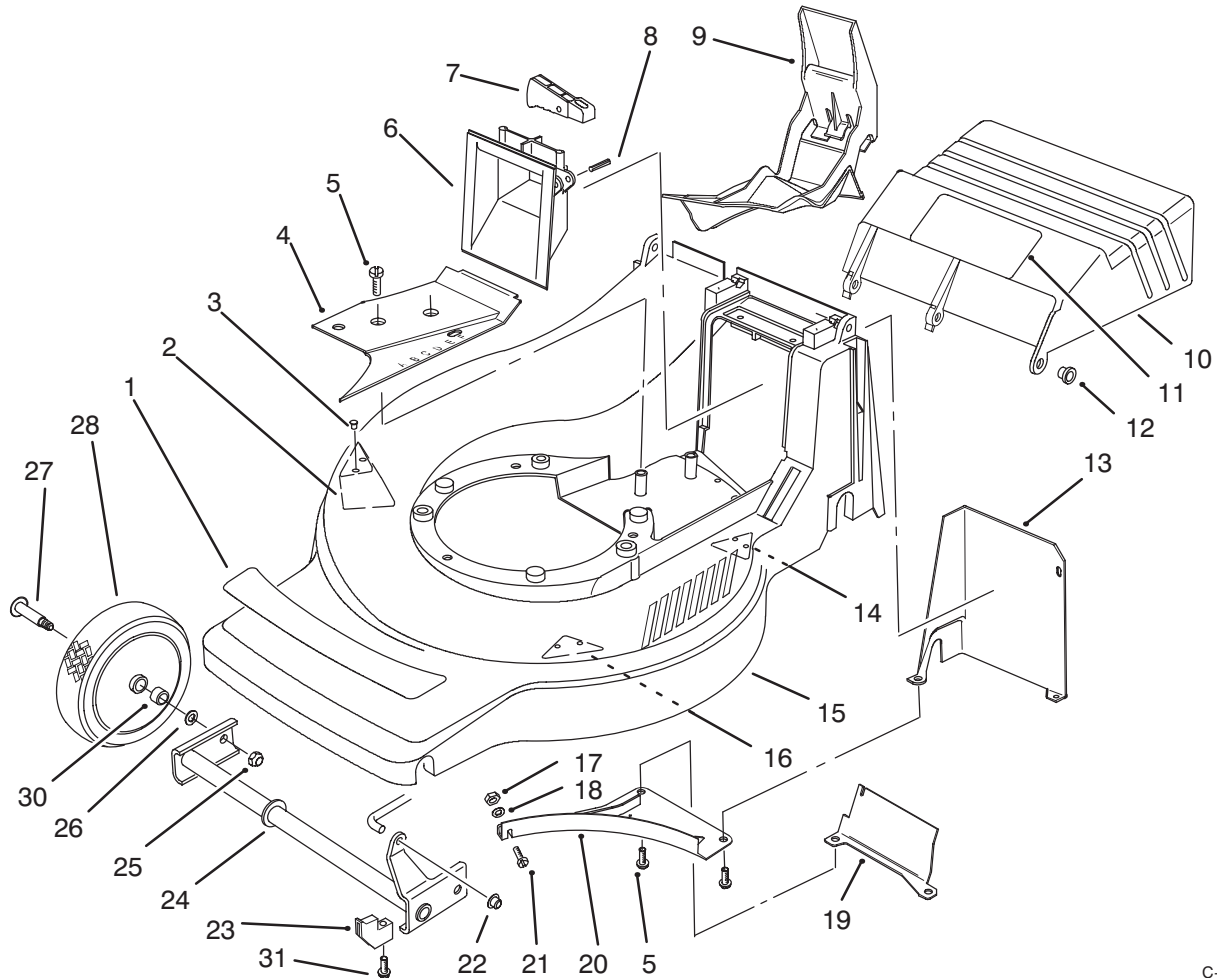

MODEL NO. 21010-5900001 & UP


**PARTS
CATALOG**
43cm RECYCLER[®] MOWER


C-2107

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4351	Decal - Deck	1
2	93-3730	Kicker - Front Right	1
3	32144-111	Screw - Phillips Head	6
4	93-3782	Cover - Belt	1
5	93-4095	Screw	5
6	71-7870	Grip - Lower	1
7	71-7930	Trigger - H.O.C.	1
8	3284-5	Pin - Groove	1
9	93-3790	Plug - Mulch	1
10	93-4055	Door - Discharge	1
11	93-4105	Decal	1
12	93-3794	Bushing - Door	1
13	93-3781	Cover - Shield	1
14	93-3750	Kicker - Rear Left	1
15	16-8919	Housing - Deck (Incl. Ref.# 2, 3, 14 & 16)	1

Ref. No.	Part No.	Description	No. Used
16	93-3740	Kicker - Front Left	1
17	3296-2	Nut	1
18	3256-21	Washer	1
19	93-4110	Baffle	1
20	93-3720	Baffle - Mulch	1
21	3250-13	Screw	1
22	32112-11	Nut - Push	1
23	93-4064	Retainer - Axle	2
24	93-4080	Axle - Front	1
25	3296-6	Nut - Lock	2
26	40-1940	Washer	2
27	27-6231	Bolt - Wheel	2
28	93-4081	Wheel & Tire Assembly 7"	2
30	93-7024	Bushing	4
31	93-3793	Screw - Retainer	2

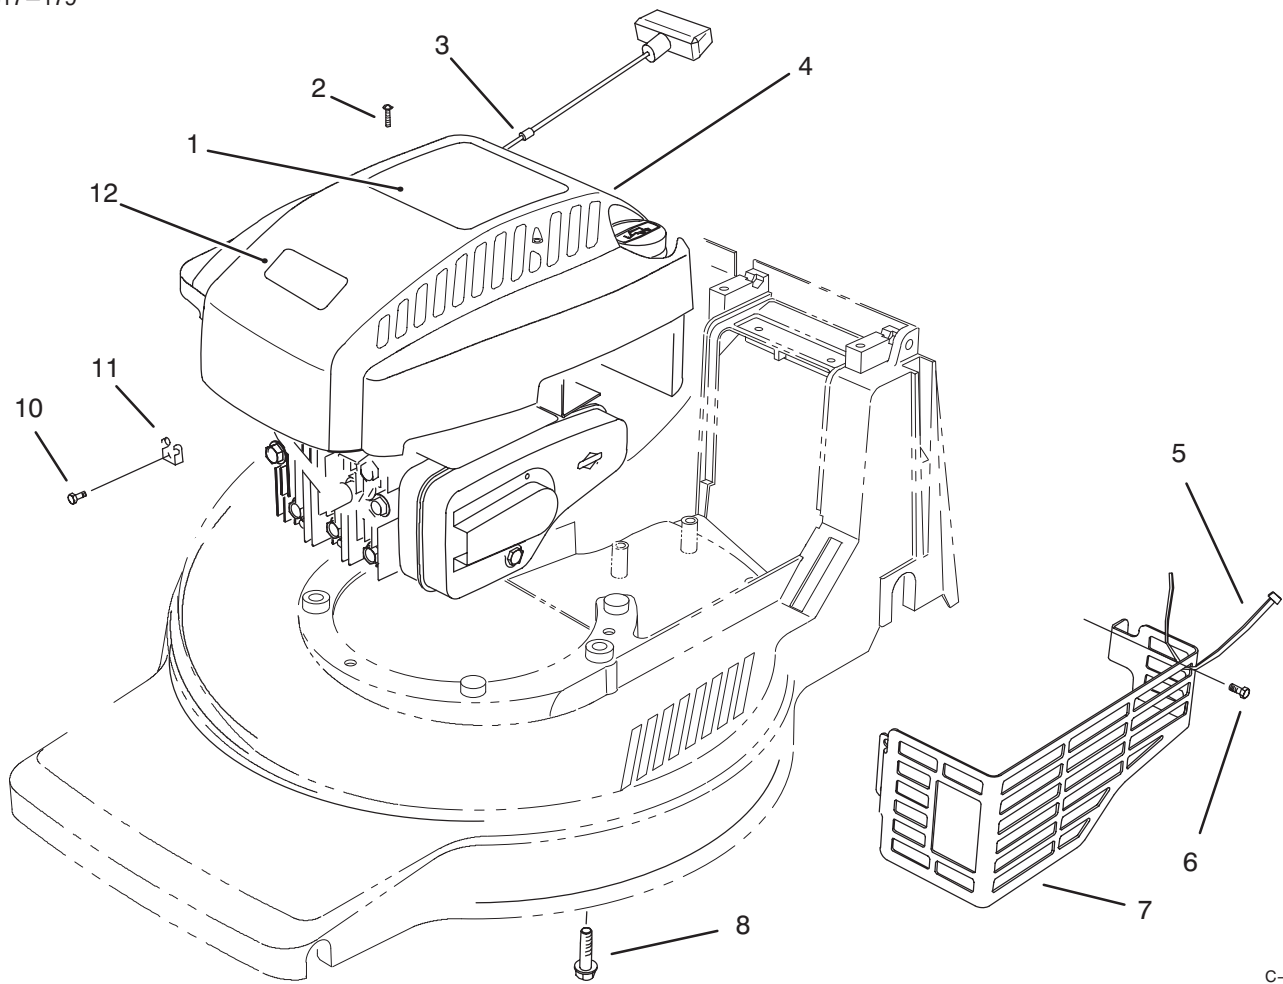


C-2108

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4352	Decal - Shroud	1
2	32144-121	Screw - Mounting	2
3	2210-316	Stop - Rope	1
4	93-0243	Shroud - Engine	1
5	3290-378	Tie - Cable	1
6	32144-73	Screw - Hex Washer Hd. Thread Forming	3

Ref. No.	Part No.	Description	No. Used
7	82-8550	Shield - Muffler	1
8	32144-102	Screw - Engine	3
10	93-8470	Screw - Clamp	1
11	2210-249	Clamp - Casing	1
12	92-2289	Plate - Logo Toro	1

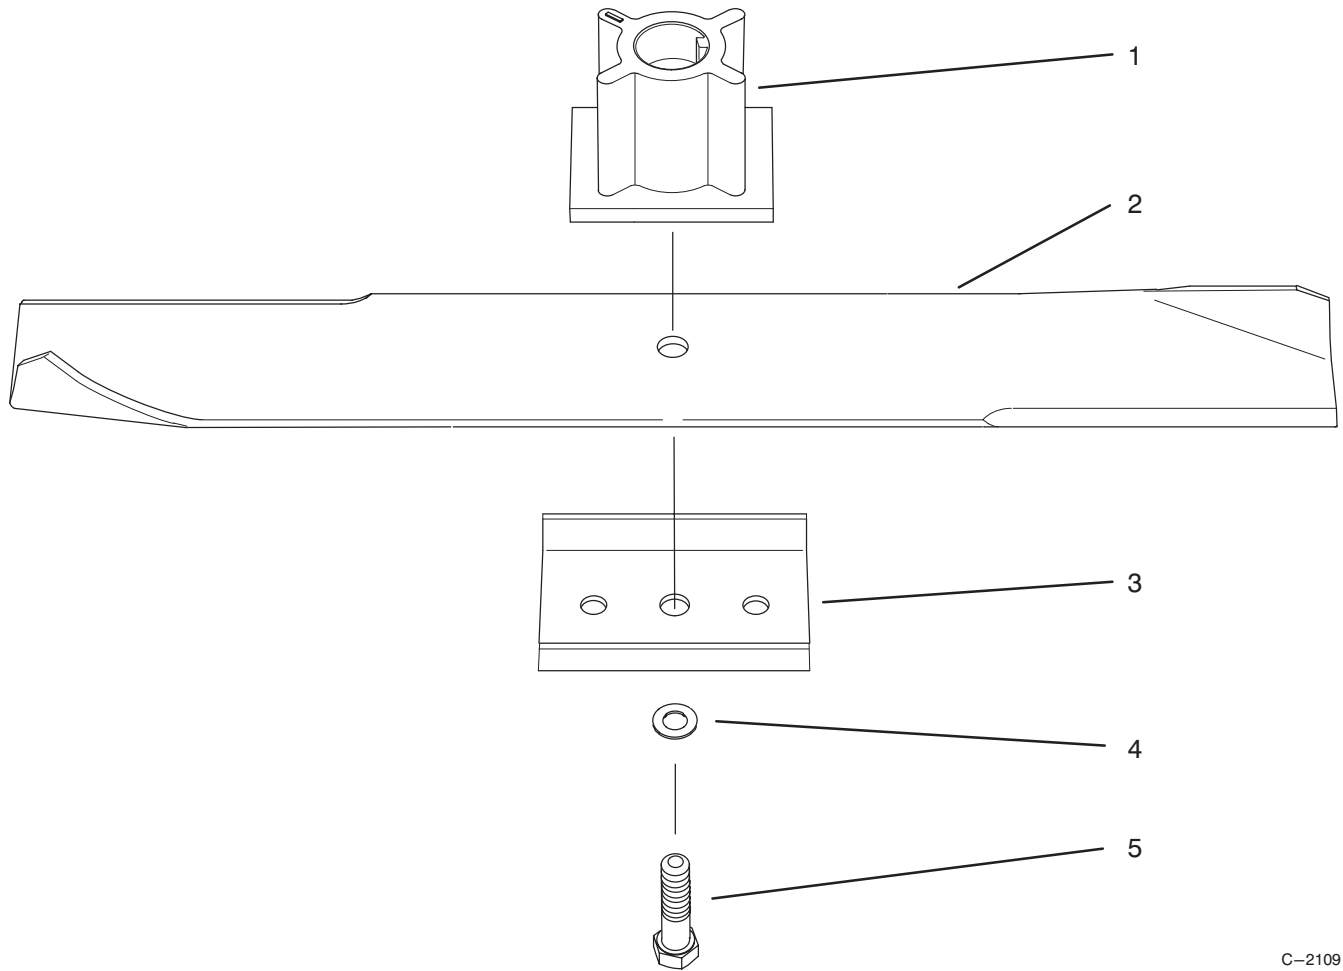


C-2109

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4091	Retainer - Blade	1
2	93-3760	Blade - 43cm	1
3	93-8731	Stiffener - Blade	1

Ref. No.	Part No.	Description	No. Used
4	3253-22	Washer - Lock	1
5	26-0672	Bolt - Blade	1

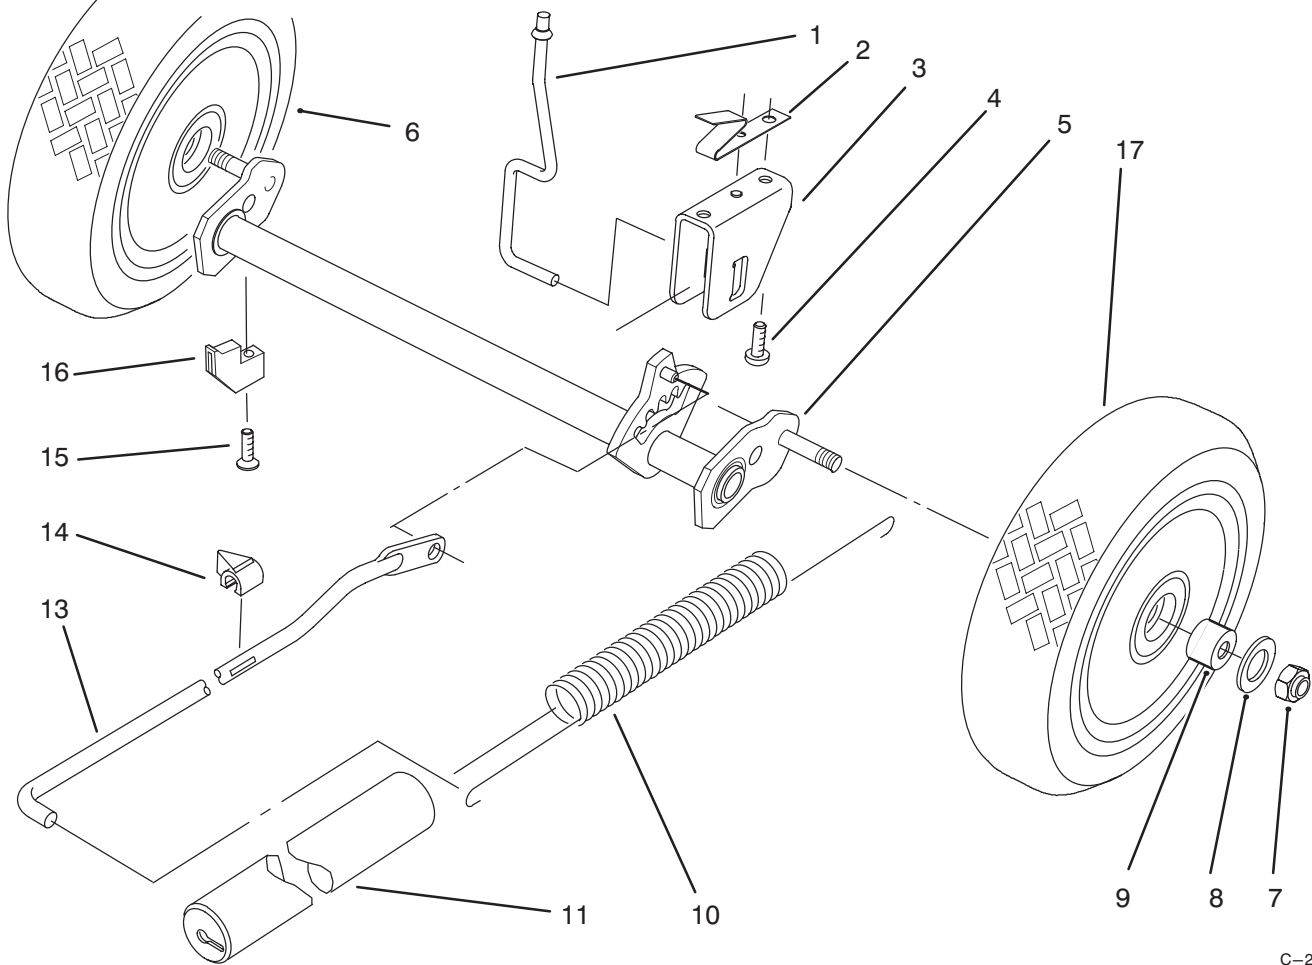


C-2110

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4061	Rod – Trigger	1
2	93-4062	Spring – Trigger Ret.	1
3	93-4066	Saddle – H.O.C.	1
4	93-4095	Screw	2
5	93-4079	Axle – Rear	1
6	93-8492	Wheel & Tire Assembly	1
7	93-4098	Nut – Lock	2
8	93-4097	Washer – Wheel	2
9	93-7023	Bushing	4

Ref. No.	Part No.	Description	No. Used
10	71-7740	Spring – Counterbalance	1
11	71-8450	Cover – Spring	1
13	93-4065	Rod – Link	1
14	71-7980	Indicator – H.O.C.	1
15	93-3793	Screw – Retainer	2
16	93-4064	Retainer – Axle	2
17	93-9836	Wheel & Tire Assembly "Smart Wheel"	1

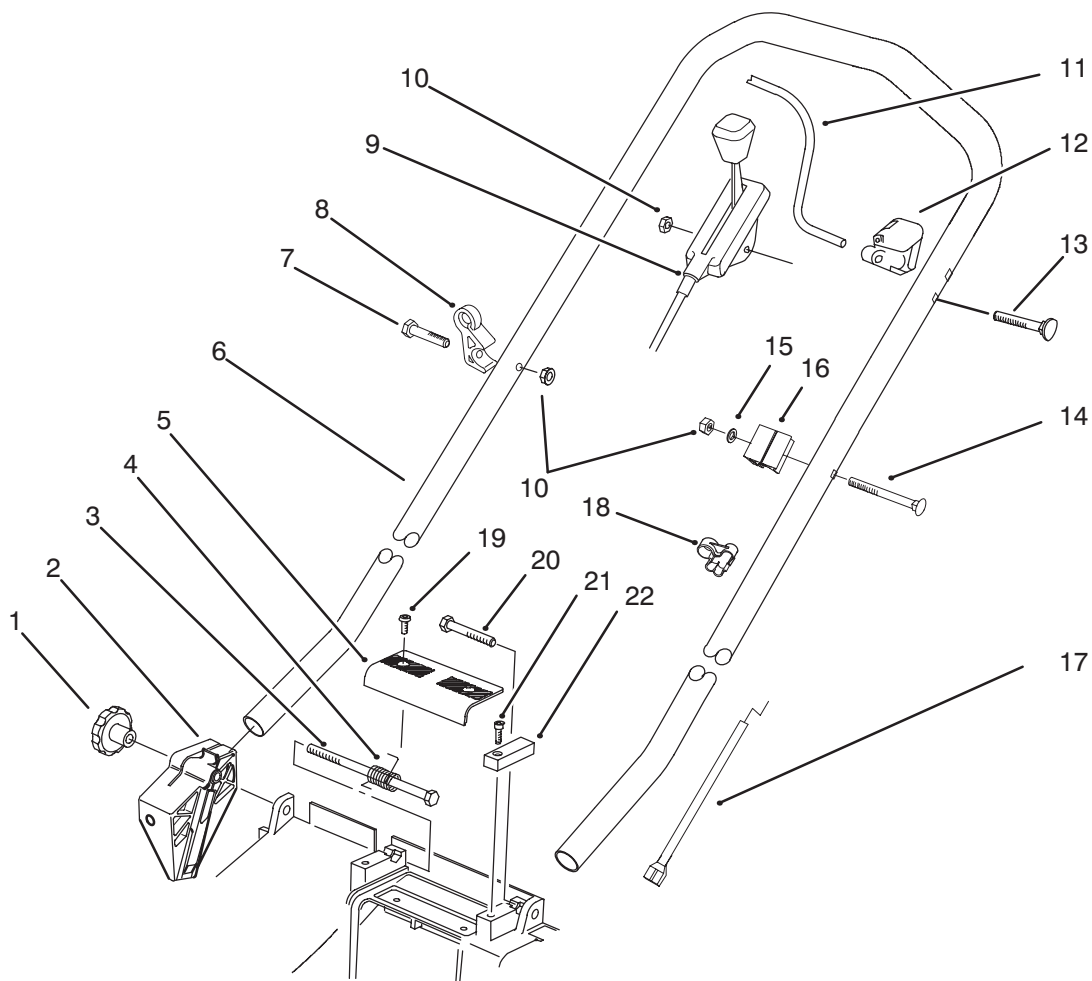


C-2111

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	19-4050	Knob	2	12	93-5412	Stop - Pivot	1
2	93-4082	Mount - Handle R.H.	1	13	92-2266	Screw - Handle	1
*	93-4083	Mount - Handle L.H.	1	14	92-2270	Screw - Handle	1
3	93-4058	Screw	1	15	3256-1	Washer - Flat	1
4	93-4057	Spring	1	16	46-6980	Support - Cable	1
5	71-7860	Grip - Upper	1	17	93-1116	Cable - Brake	1
6	93-4089	Handle	1	18	93-4084	Clamp - Cable	2
7	321-52	Screw	1	19	32144-97	Screw	2
8	93-3772	Guide - Rope	1	20	93-4060	Screw	1
9	93-1118	Control - Throttle	1	21	93-4094	Screw - Hinge, Cap	2
10	3296-73	Nut - Lock	3	22	93-4056	Cap	2
11	93-0336	Bail - Control	1				

*Not Illustrated

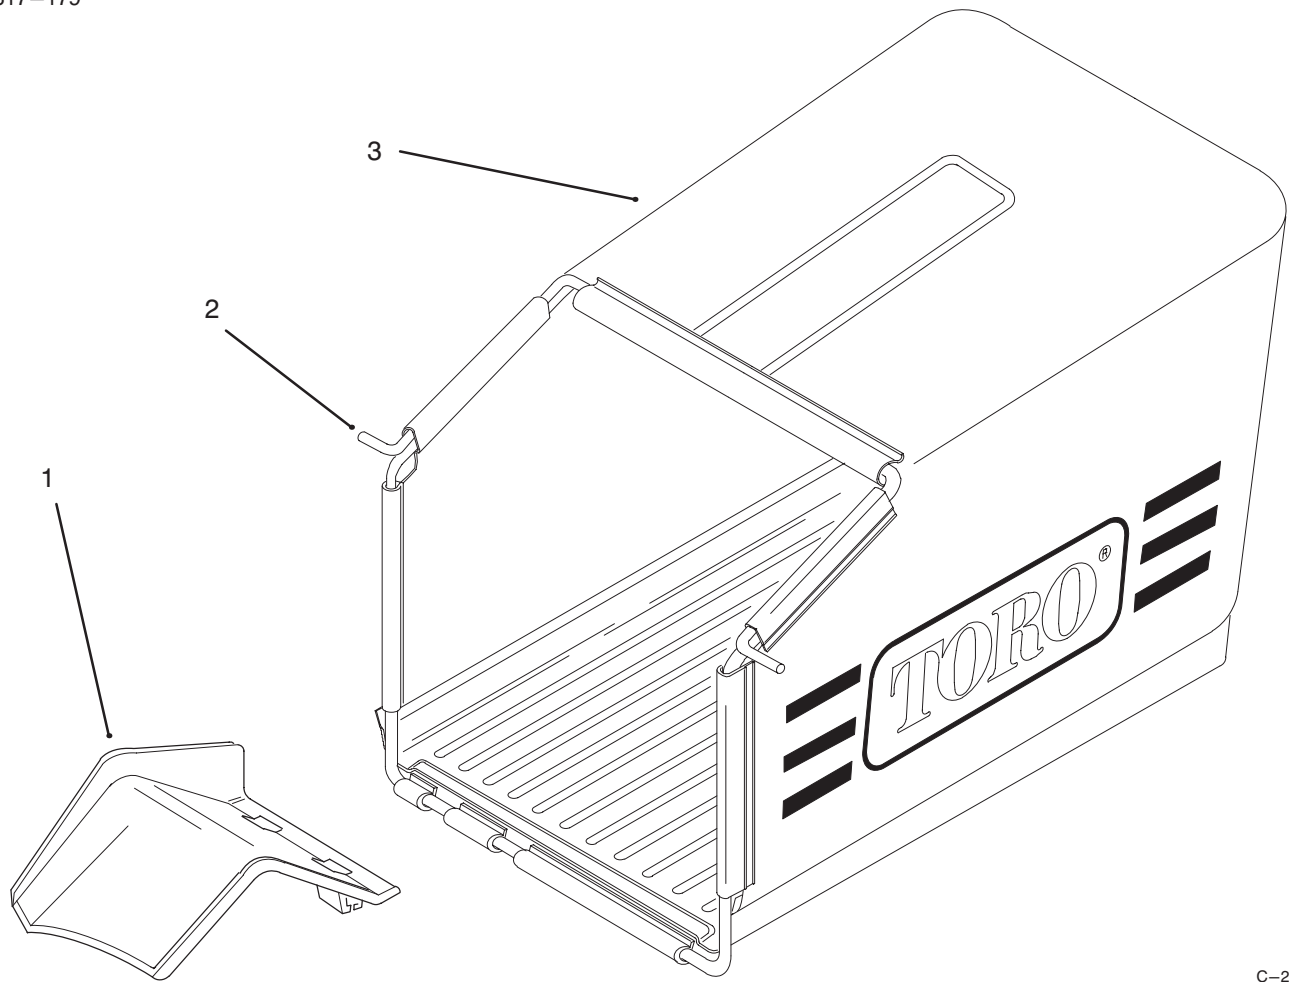


C-2112

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4087	Grass Bag Remover	1
2	93-4085	Frame - Bag	1

Ref. No.	Part No.	Description	No. Used
3	93-4086	Bag - Grass	1

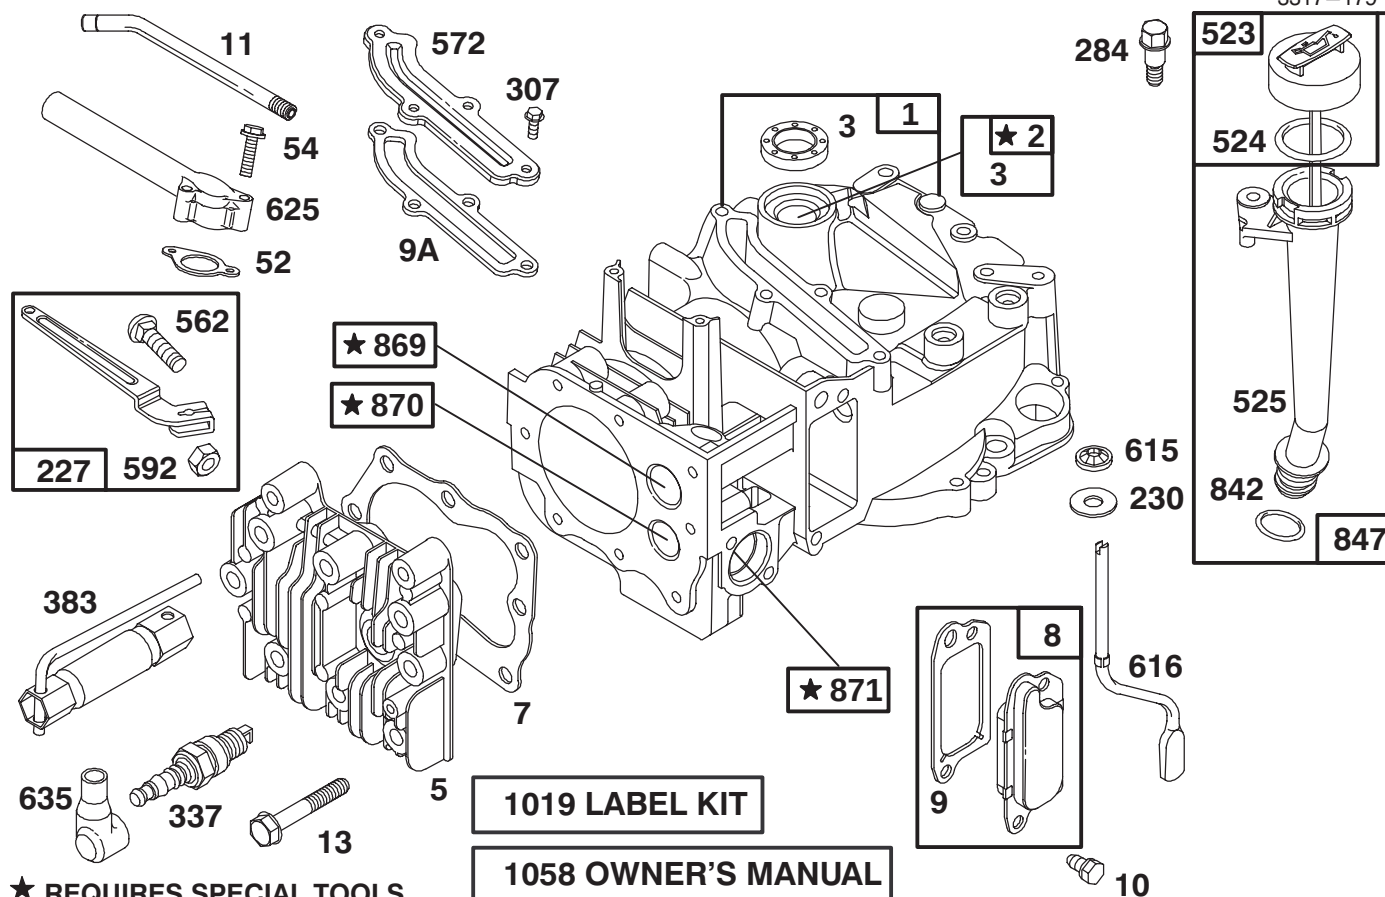


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214349	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather Assembly	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1

Ref. No.	Part No.	Description	No. Used
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	92613	Bolt – Governor Lever	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	281085	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube and Dipstick Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

★ Included in Gasket Set—Part No. 497316.

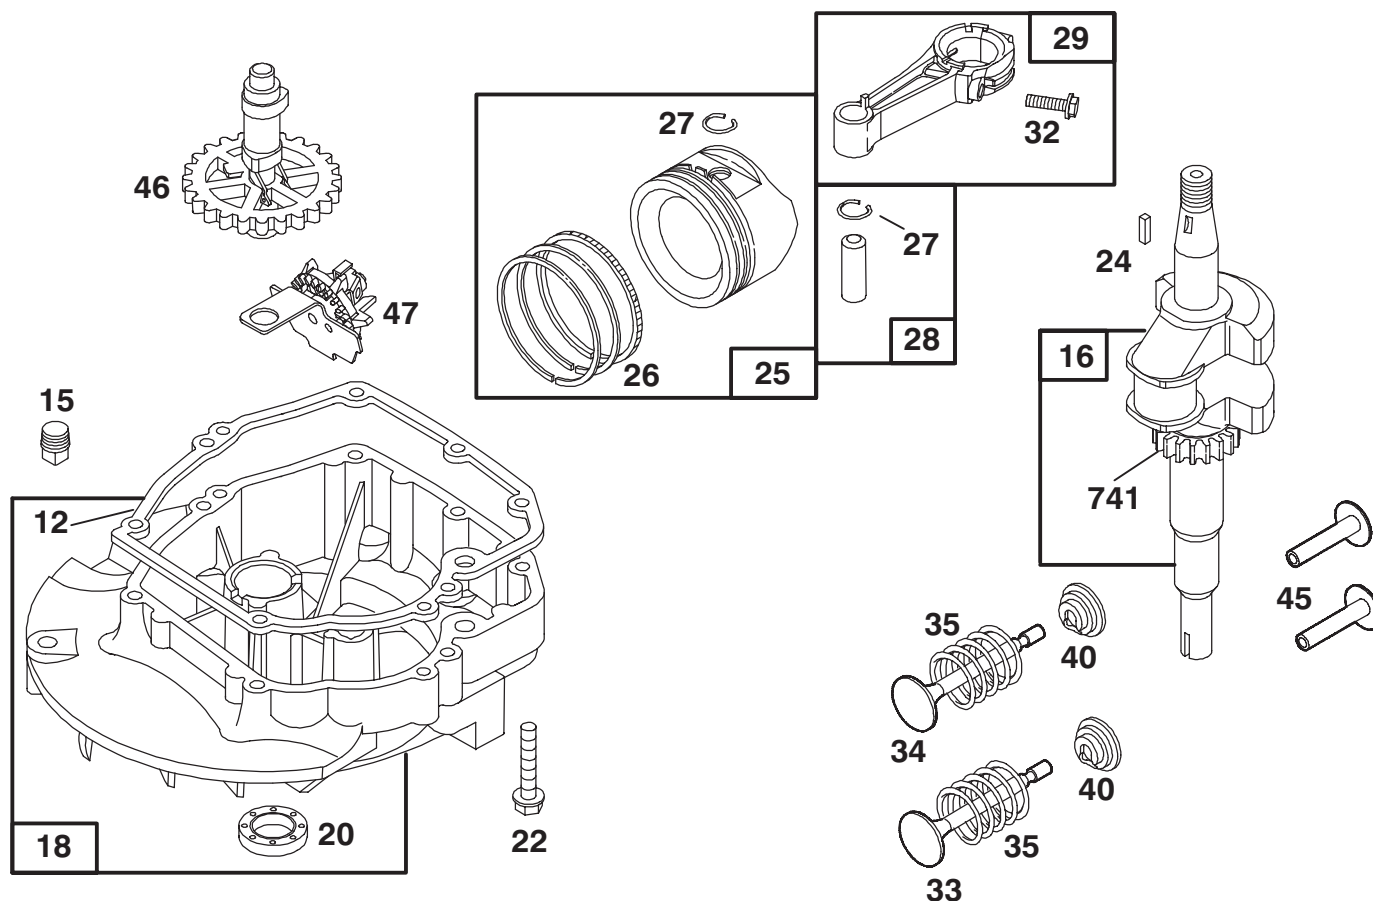


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket — Crankcase	1
15	94720	Plug — Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump — Engine	1
★20	399781	Seal — Oil	1
22	94220	Screw — Hex. Head	
		Note: 94612 Screw — Hex. Head (One (1) Used in Hole Nearest Breather.)	
24	222698	Key — Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1

Ref. No.	Part No.	Description	No. Used
	493390	Ring Set (.030" O.S.)	1
27	26026	Lock — Piston Pin	1
28	298909	Pin — Piston (Standard)	1
	298908	Pin — Piston (.005" O.S.)	1
29	490566	Rod Assembly — Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing — Order No. 490743.	
32	94699	Screw — Connecting Rod	1
33	262651	Valve — Exhaust	1
34	262652	Valve — Intake	1
35	262224	Spring — Valve	1
40	93312	Retainer — Valve Spring	1
45	262204	Tappet — Valve	2
46	492828	Gear — Cam	1
47	493737	Slinger — Oil	1
741	262598	Gear — Timing	1

★ Included in Gasket Set—Part No. 497316.

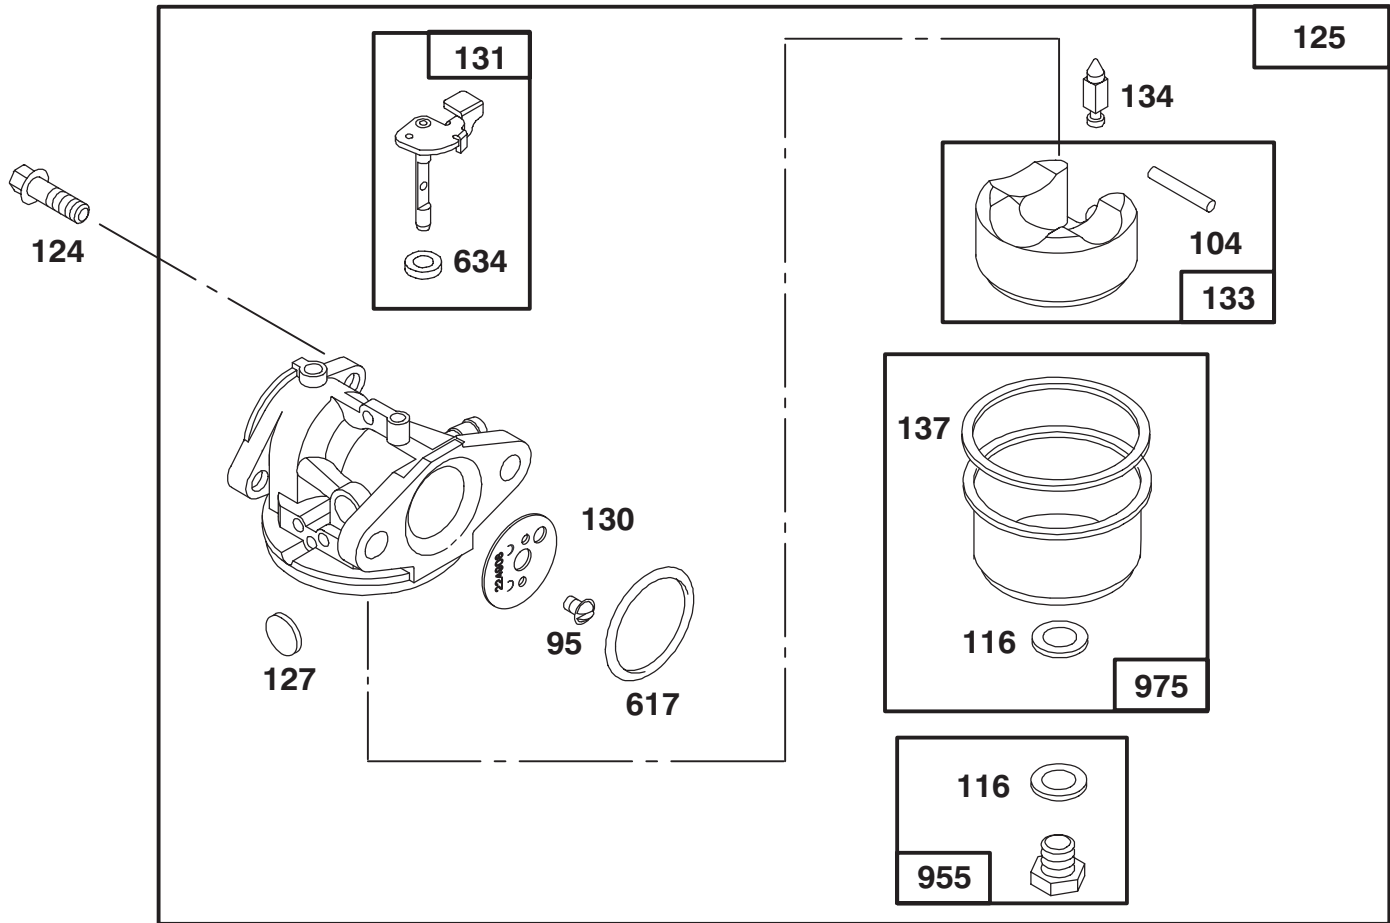


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802—0620—01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw — Throttle Valve Mounting	2
●104	231371	Pin — Float Hinge	1
●◆116		Gasket — Sealing (Sold in Kit Only).	1
124	94525	Screw — Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug — Welch (Sold in Kit Only).	1
130	224908	Valve — Throttle	1
131	493267	Shaft — Throttle	1
133	398187	Float Assy. — Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve — Inlet (Includes Seat)	1
●◆137		Gasket — Bowl (Sold in Kit Only).	1
●◆617	270344	Seal — Fuel Intake Tube	1
●◆634		Washer — Shaft (Sold in Kit Only).	1
955	497315	Screw — Bowl Mtg. (Std.)	1
975	493640	Note: 496495 Screw — Bowl Mtg. (High Altitude) Bowl Assy. — Carburetor	1

● Included in Carburetor Kit—Part No. 493762.
 ◆ Included in Carburetor Gasket Set—Part No. 490937.

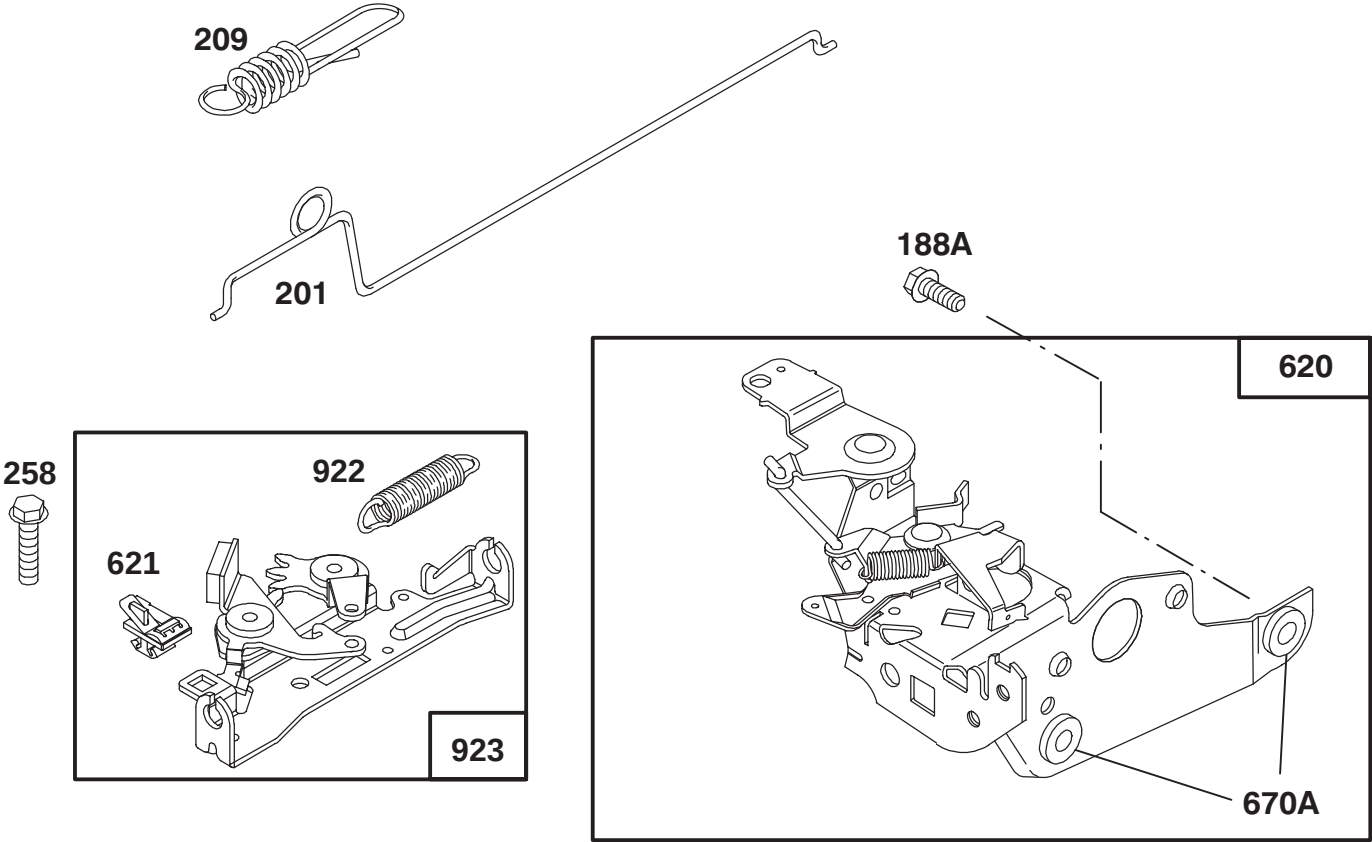


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	263043	Spring – Governor	1
258	94512	Screw – Hex. Head	1
620	497203	Bracket – Carburetor	1

Ref. No.	Part No.	Description	No. Used
621	396847	Switch – Stop	1
★670A	493823	Spacer – Bracket	1
922	262640	Spring – Brake	1
923	493442	Brake Assembly	1

★ Included in Gasket Set—Part No. 497316.

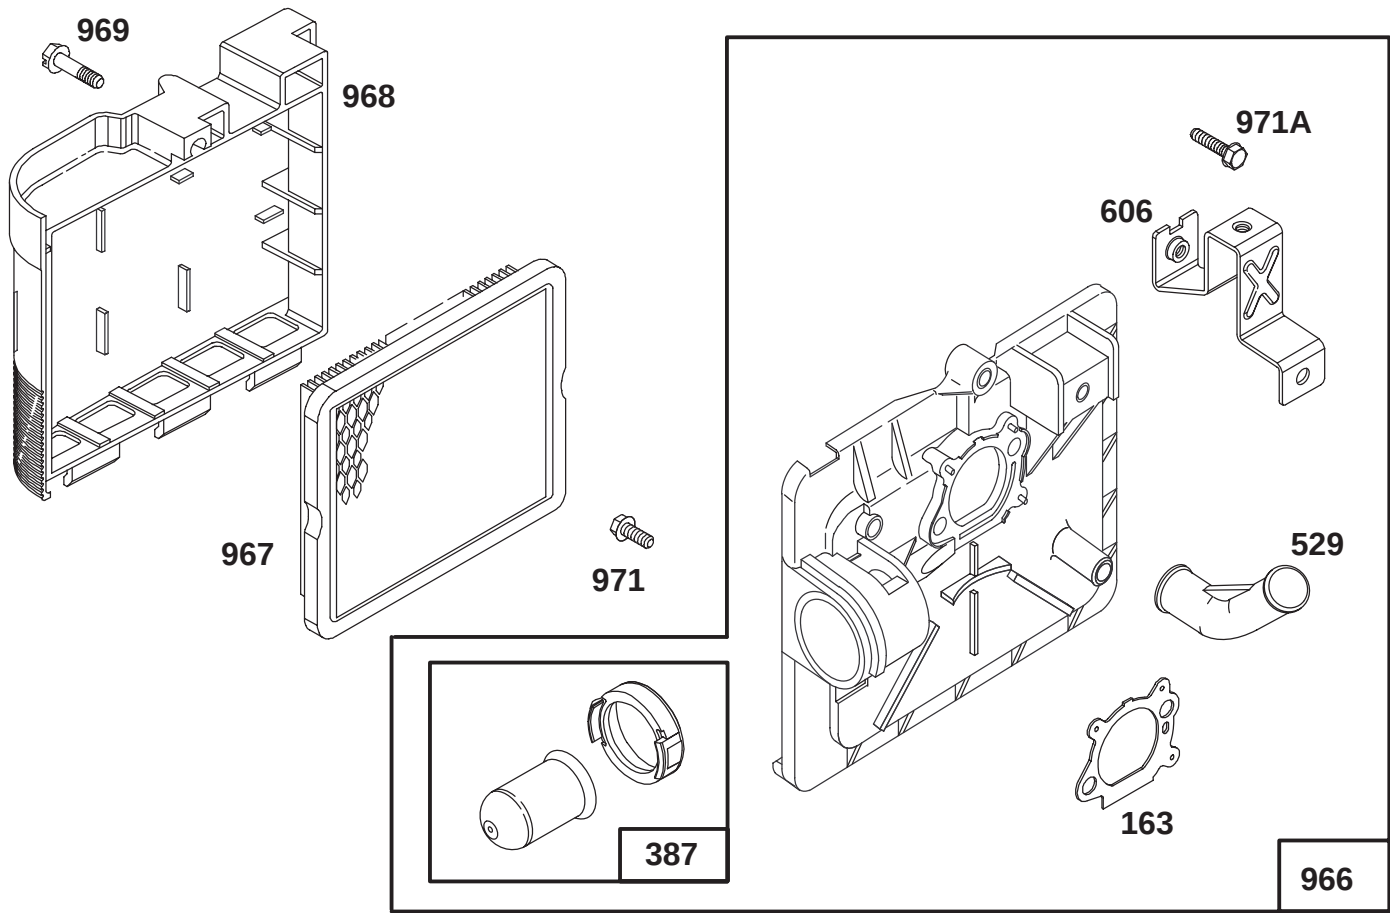


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802—0620—01

Ref. No.	Part No.	Description	No. Used
★163	272653	Gasket — Air Cleaner	1
387	496115	Primer—Carburetor	1
529	281299	Grommet — Breather	1
606	224815	Strap — Bracket	1
966	496116	Base — Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter — Air	1
968	281340	Cover — Air Cleaner	1
969	94120	Screw — Cover Mtg.	1
971	94121	Screw — Air Cleaner	1
971A	94749	Screw — Hex. Head	1

★ Included in Gasket Set—Part No. 497316.

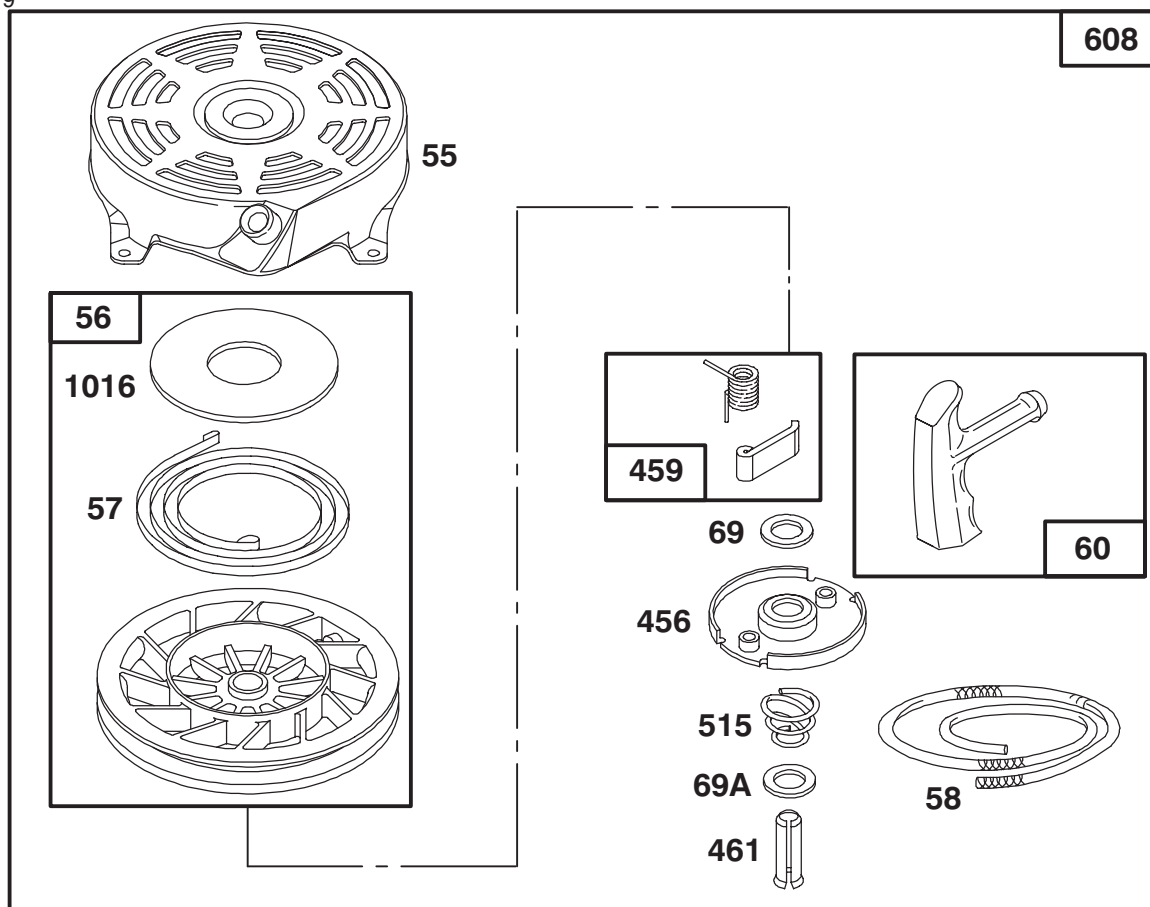


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1
56	493824	Pulley – Rewind Starter	1
57	262594	Spring – Rewind Starter	1
58	280399	Rope – Rewind Starter	1
60	393152	Handle – Rewind Starter	1
69	280973	Washer – Rewind Starter	1
69A	224322	Washer – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1


Ref. No.	Part No.	Description	No. Used
459	492833	Pawl – Starter	1
461	262626	Pin – Starter	1
515	262625	Spring – Torsion	1
608	493295	Starter Assy. – Rewind	
		Includes:	
		94128 Screw – Hex. Head	1
		92987 Nut – Hex.	1
1016	224278	Cover – Rewind Starter	1

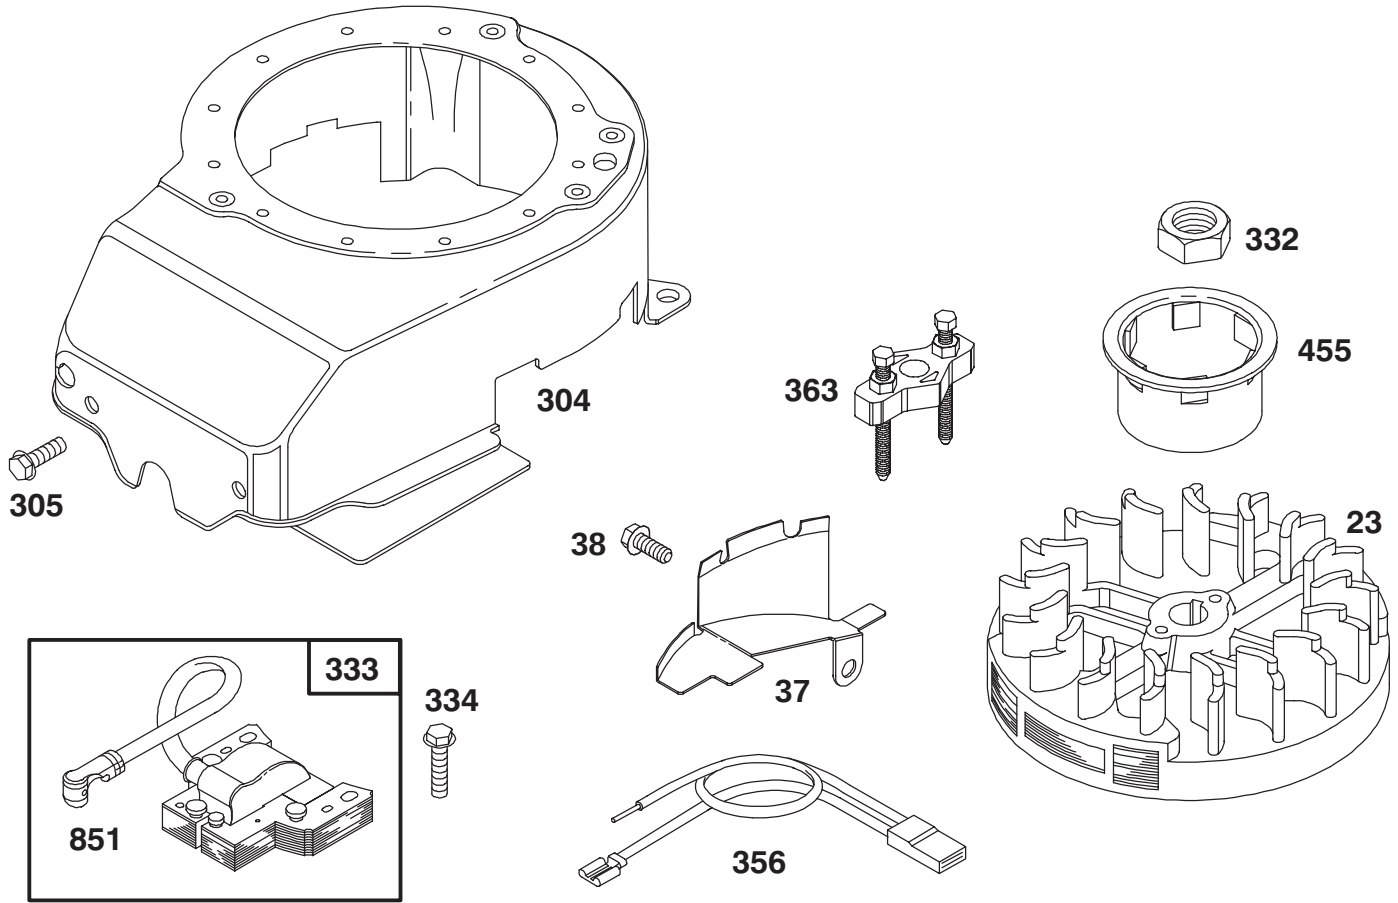

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1	333	802574	Armature – Magneto	1
37	224511	Guard – Flywheel	1	334	94731	Screw – Sem	1
38	94608	Screw – Hex. Hd.	1	356	398808	Wire – Ground	1
304	493293	Housing – Blower	1	363	19069	Puller – Flywheel	1
305	94513	Screw – Sem	1	455	224250	Cup – Starter	1
332	92284	Nut – Flywheel	1	851	493880	Terminal – Ignition Cable	1

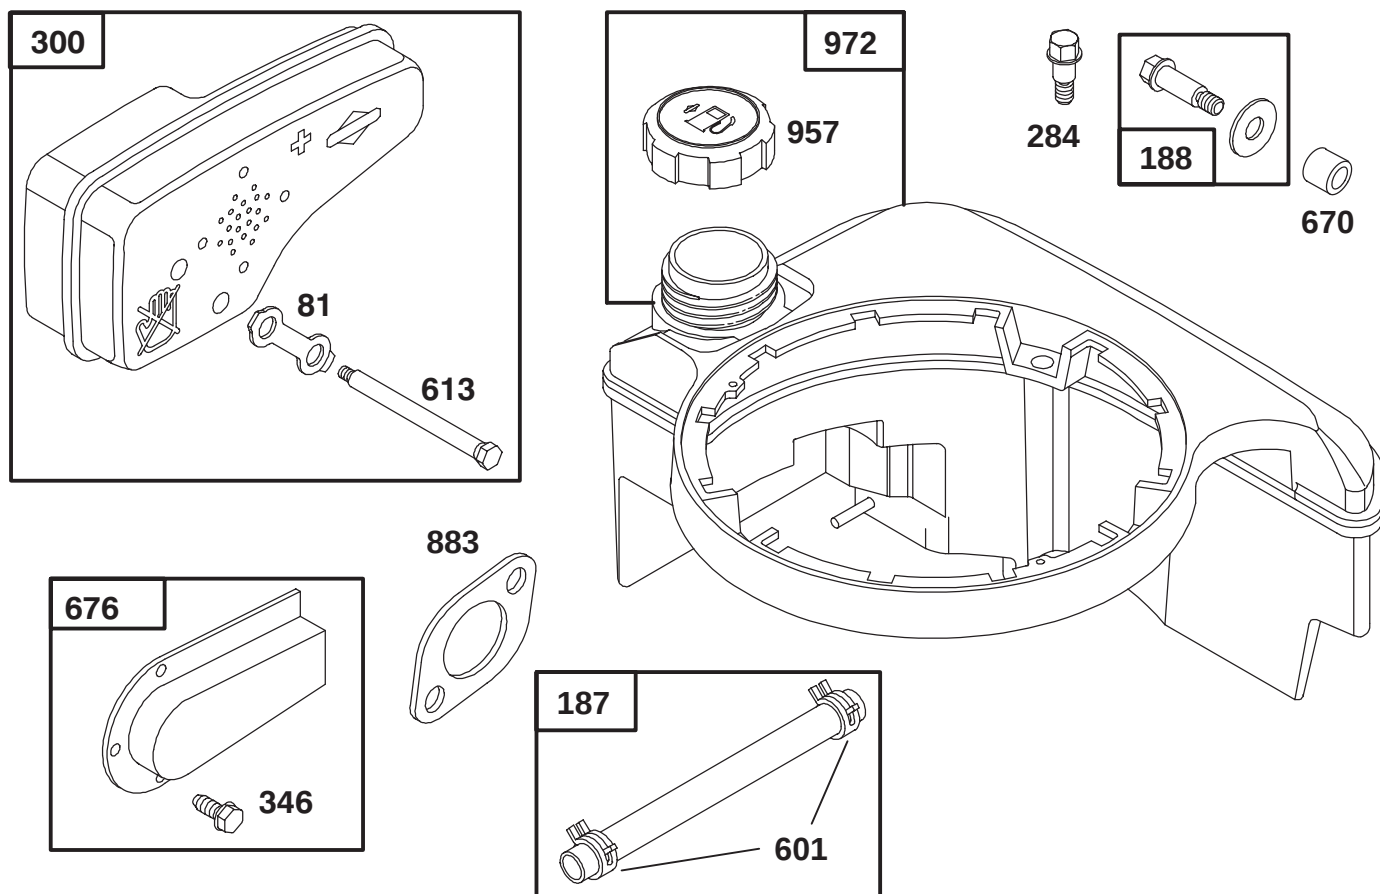




Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock — Muffler Screw	1
187	492790	Hose — Fuel	1
188	398540	Screw — Tank Mounting	1
284	94511	Screw — Hex. Head	1
300	490547	Muffler — Exhaust	1
346	93705	Screw — Hex. Head	1
601	93807	Clamp — Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw — Muffler Mtg.	1
670	280512	Spacer — Fuel Tank	1
676	493871	Deflector — Muffler	1
★883	272253	Gasket—Muffler	1
957	397974	Cap Assy. — Fuel	1
972	495224	Tank Assembly — Fuel	1

★ Included in Gasket Set—Part No. 497316.

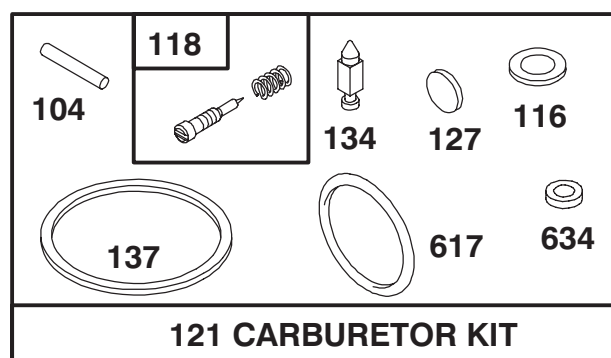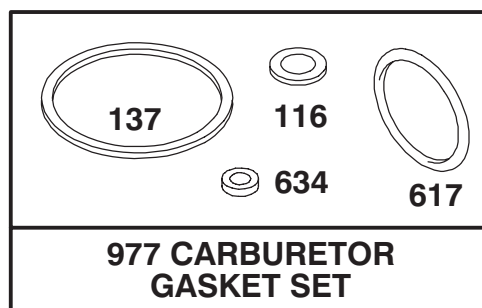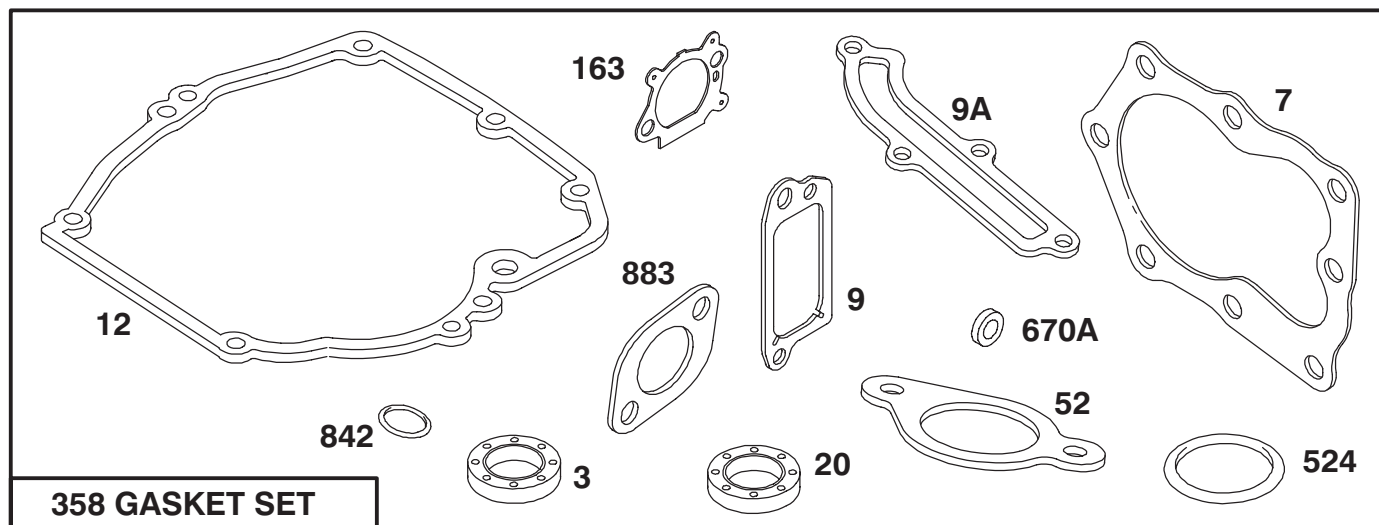

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802—0620—01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
★7	272916	Gasket — Cylinder Hd.	1
★9	272481	Gasket — Valve Cover	1
★9A	272238	Gasket — Baffle Plate	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★52	272199	Gasket — Intake Elbow	1
●104	231371	Pin — Float Hinge	1
●◆116		Gasket — Sealing (Sold in Kit Only).	1
●118	493765	Valve — Needle	1
121	493762	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only)	1
●134	398188	Valve — Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket — Bowl (Sold in Kit Only)	1
★163	272653	Gasket — Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal — Filler Tube	1
●◆617	270344	Seal — Fuel Intake Tube	1
●◆634		Washer — Shaft (Sold in Kit Only)	1
★670A	493823	Spacer — Bracket (Includes 2)	1
★842	280966	Seal — O-Ring	1
★883	272253	Gasket—Muffler	1
977	490937	Gasket Set — Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 497316.

TORO PART NUMBER INDEX

3317-179

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
16-8919	Housing - Deck	1 15 1	93-4080	Axle - Front	1 24 1
19-4050	Knob	5 1 2	93-4081	Wheel & Tire Assembly 7"	1 28 2
26-0672	Bolt - Blade	3 5 1	93-4082	Mount - Handle R.H.	5 2 1
27-6231	Bolt - Wheel	1 27 2	93-4083	Mount - Handle L.H.	5 * 1
40-1940	Washer	1 26 2	93-4084	Clamp - Cable	5 18 2
46-6980	Support - Cable	5 16 1	93-4085	Frame - Bag	6 2 1
71-7740	Spring - Counterbalance	4 10 1	93-4086	Bag - Grass	6 3 1
71-7860	Grip - Upper	5 5 1	93-4087	Grass Bag Remover	6 1 1
71-7930	Trigger - H.O.C.	1 7 1	93-4089	Handle	5 6 1
71-7980	Indicator - H.O.C.	4 14 1	93-4091	Retainer - Blade	3 1 1
71-8450	Cover - Spring	4 11 1	93-4094	Screw - Hinge, Cap	5 21 2
82-8550	Shield - Muffler	2 7 1	93-4095	Screw	4 4 2
92-2266	Screw - Handle	5 13 1	93-4095	Screw	1 5 5
92-2270	Screw - Handle	5 14 1	93-4097	Washer - Wheel	4 8 2
92-2289	Plate - Logo Toro	2 12 1	93-4098	Nut - Lock	4 7 2
93-0243	Shroud - Engine	2 4 1	93-4105	Decal	1 11 1
93-0336	Bail - Control	5 11 1	93-4110	Baffle	1 19 1
93-1116	Cable - Brake	5 17 1	93-4351	Decal - Deck	1 1 1
93-1118	Control - Throttle	5 9 1	93-4352	Decal - Shroud	2 1 1
93-3720	Baffle - Mulch	1 20 1	93-5412	Stop - Pivot	5 12 1
93-3730	Kicker - Front Right	1 2 1	93-7023	Bushing	4 9 4
93-3740	Kicker - Front Left	1 16 1	93-7024	Bushing	1 30 4
93-3750	Kicker - Rear Left	1 14 1	93-8470	Screw - Clamp	2 10 1
93-3760	Blade - 43cm	3 2 1	93-8492	Wheel & Tire Assembly	4 6 1
93-3772	Guide - Rope	5 8 1	93-8731	Stiffener - Blade	3 3 1
93-3781	Cover - Shield	1 13 1	93-9836	Wheel & Tire Assy.	4 17 1
93-3782	Cover - Belt	1 4 1	2210-249	Clamp - Casing	2 11 1
93-3790	Plug - Mulch	1 9 1	2210-316	Stop - Rope	2 3 1
93-3793	Screw - Retainer	1 31 4	321-52	Screw	5 7 1
93-3793	Screw - Retainer	4 15 2	3250-13	Screw	1 21 1
93-3794	Bushing - Door	1 12 1	3253-22	Washer - Lock	3 4 1
71-7870	Grip - Lower	1 6 1	3256-1	Washer - Flat	5 15 1
93-4055	Door - Discharge	1 10 1	3256-21	Washer	1 18 1
93-4056	Cap	5 22 2	3284-5	Pin - Groove	1 8 1
93-4057	Spring	5 4 1	3290-378	Tie - Cable	2 5 1
93-4058	Screw	5 3 1	3296-2	Nut	1 17 1
93-4060	Screw	5 20 1	3296-6	Nut - Lock	1 25 2
93-4061	Rod - Trigger	4 1 1	3296-73	Nut - Lock	5 10 3
93-4062	Spring - Trigger Ret.	4 2 1	32112-11	Nut - Push	1 22 1
93-4064	Retainer - Axle	4 16 2	32144-73	Screw - Hex Washer Hd.	2 6 3
93-4064	Retainer - Axle	1 23 2	32144-97	Screw	5 19 2
93-4065	Rod - Link	4 13 1	32144-102	Screw - Engine	2 8 3
93-4066	Saddle - H.O.C.	4 3 1	32144-111	Screw - Phillips Head	1 3 6
93-4079	Axle - Rear	4 5 1	32144-121	Screw - Mounting	2 2 2

*Not Illustrated