 




MODEL NO. 07073-30001 & UP
MODEL NO. 07174-30001 & UP

PARTS CATALOG

66" RAKE-O-VAC® SWEEPER

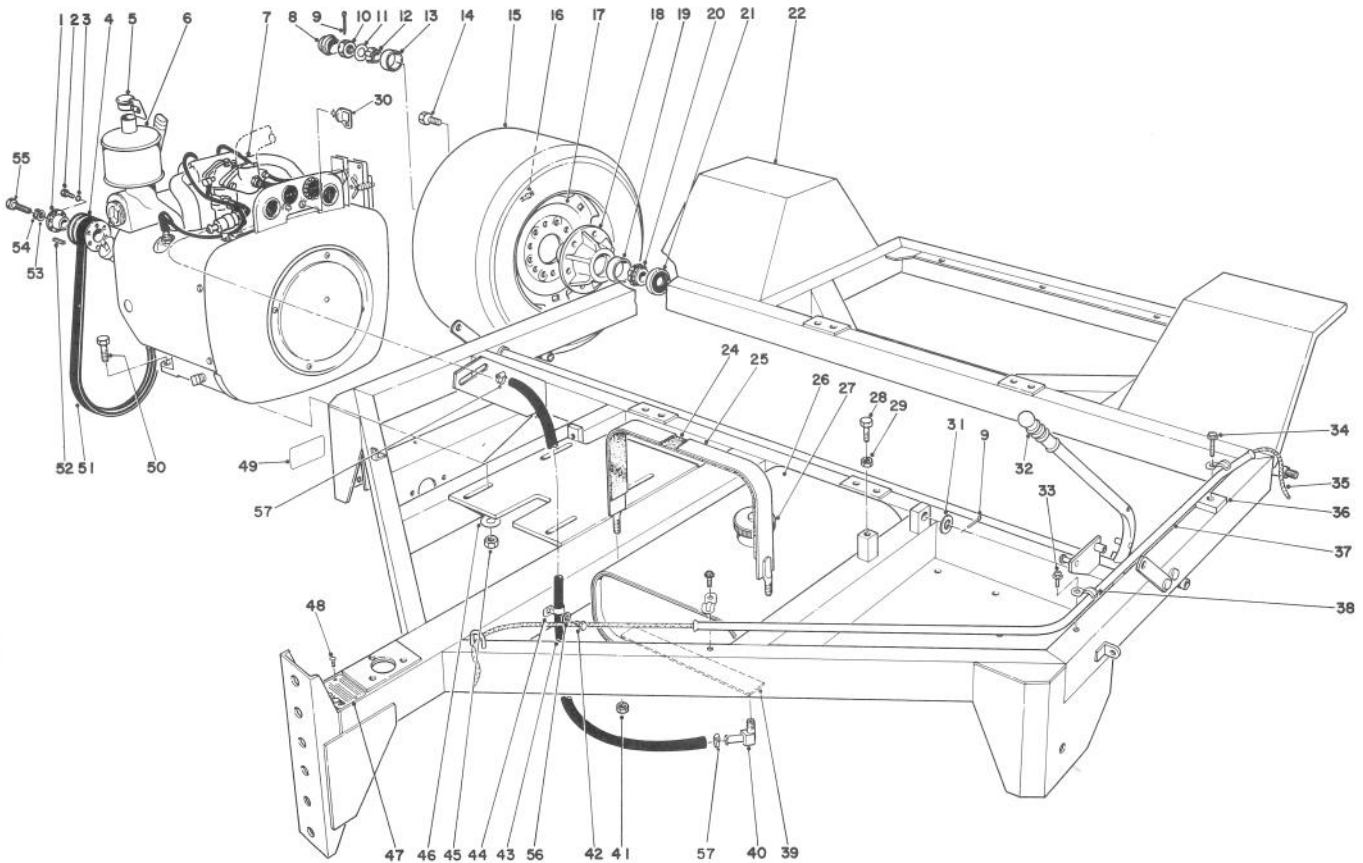


T-0006

ENGINE AND FRAME ASSEMBLY (Model No. 07073)

Ref. No.	Part No.	Description	No. Used
1	13-3330	Bushing (Incl. Ref. #2 & 3)	1
2	321-6	Screw - Cap, Hex. Hd.	3
3	3253-3	Washer - Lock	3
4	13-3320	Pulley	1
5	13-6710	Cap - Weather, Muffler	1
6	13-6720	Muffler	1
7	67-9420	Engine	1
8	242-55	Cap - Hub	2
9	3272-17	Pin - Cotter	3
10	32136-1	Nut - Slotted	2
11	3256-29	Washer - Flat	2
12	254-62	Cone - Bearing	2
13	254-61	Cup - Bearing	2
14	217-103	Bolt - Wheel	12
15	231-118	Tire	2
16	232-24	Stem - Valve	2

Ref. No.	Part No.	Description	No. Used
17	62-3220	Wheel Assembly	2
18	242-54	Hub (Incl. Ref. #13 & 19)	2
19	254-66	Cup - Bearing	2
20	254-65	Cone - Bearing	2
21	253-127	Seal	2
22	13-5000	Main Frame	1
24	13-3970	Felt Strip	2
25	13-3960	Strap Assy. (Incl. Ref. #24)	2
26	13-3930	Tank - Gas	1
27	222-8	Cap - Gas	1
28	323-8	Screw - Cap, Hex. Hd.	1
29	3218-3	Nut - Jam	1
30	63-8360	Key	2
31	3256-28	Washer - Flat	1
32	235-15	Grip - Handle	1

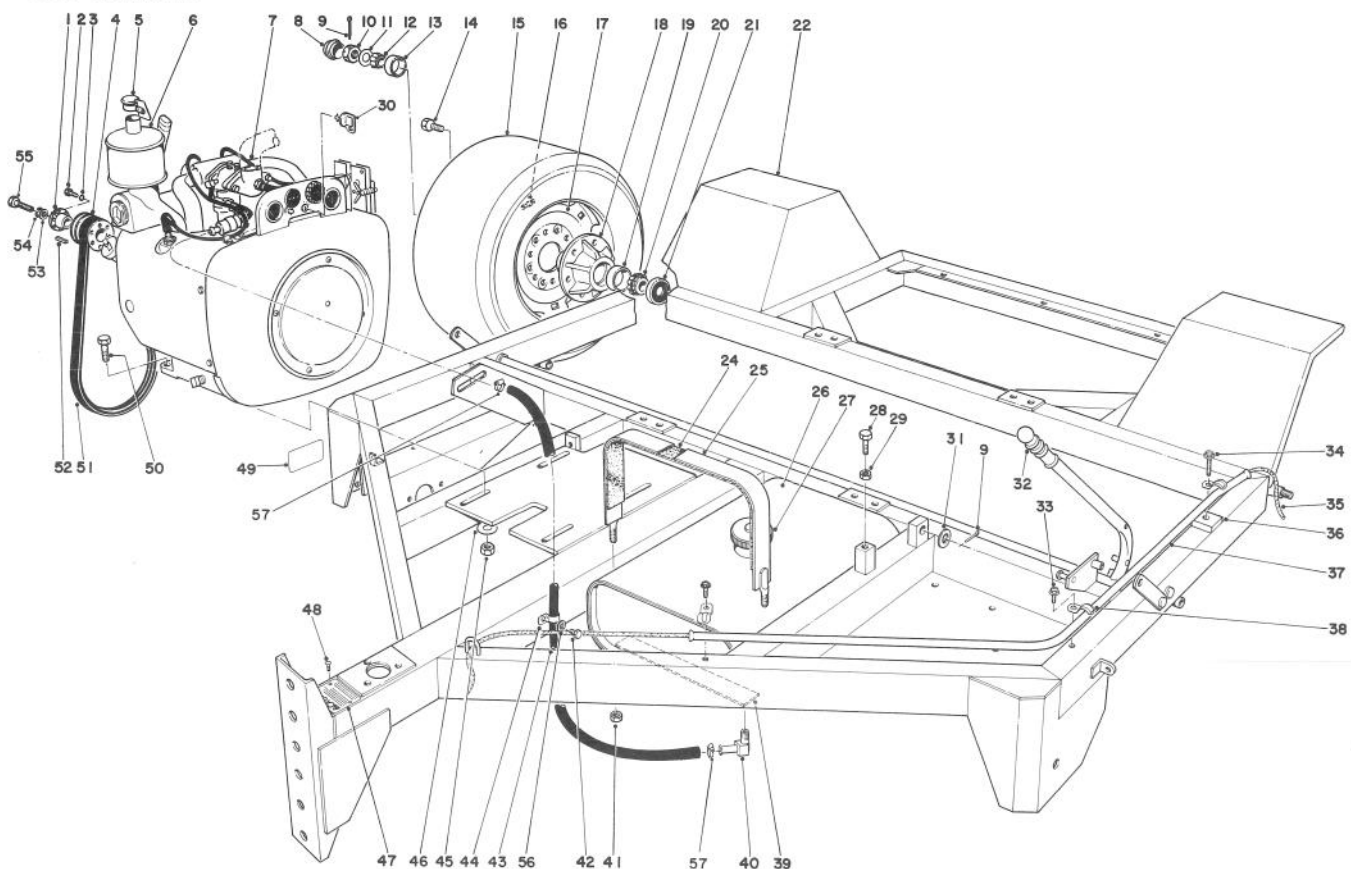 


T-0006

ENGINE AND FRAME ASSEMBLY (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used
33	32104-95	Screw - Self Tapping	2
34	32104-96	Screw - Self Tapping	1
35	20-9580	Rope	1
36	13-6910	Spacer - Guide, Rope	1
37	13-6890	Guide - Rope	1
38	2412-40	Clamp - Conduit	3
39	13-3970	Strip - Felt	2
40	304-75	Fitting - Tube	1
41	32153-3	Nut - Lock	4
42	32104-109	Screw	1
43	63-7721	Hose - Fuel Line	1
44	2412-93	Clamp	1
45	3296-23	Nut - Lock	4


Ref. No.	Part No.	Description	No. Used
46	3256-26	Washer - Flat	4
47	13-7460	Plate - Plate	1
48	3290-55	Rivet - Pop	4
49	67-5360	Decal	1
50	325-7	Screw - Cap, Hex. Hd.	4
51	13-2650	V-Belt	1
52	3-9155	Key - Square	1
53	4-1920	Washer	1
54	3253-21	Washer - Lock	1
55	323-10	Screw - Cap, Hex. Hd.	1
56	3256-22	Washer - Flat	1
57	2412-108	Clamp - Hose	2

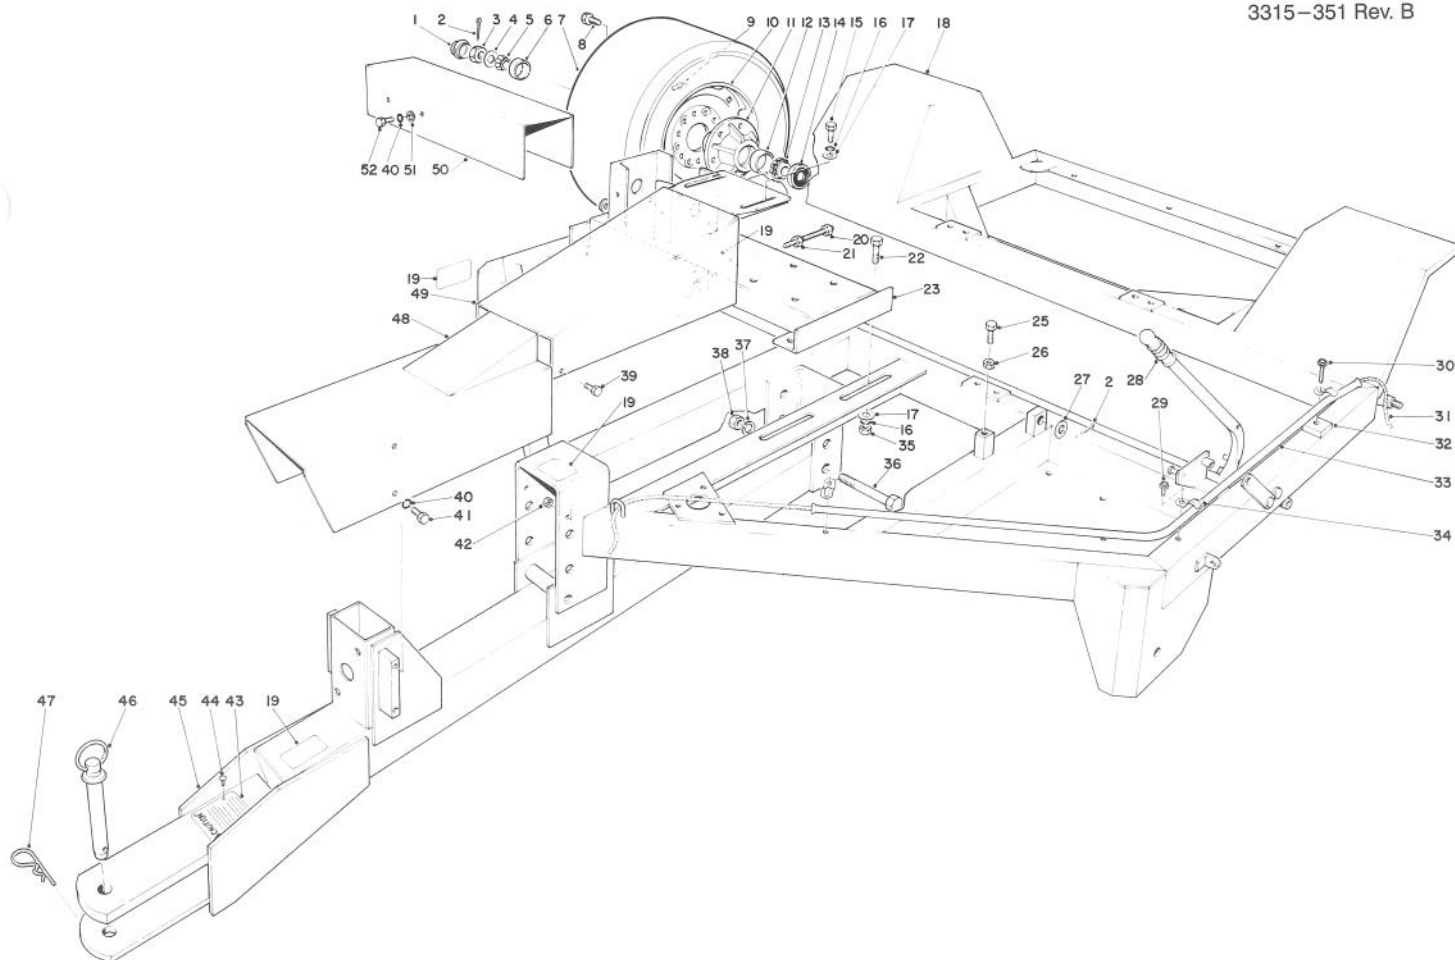 

T-0009

FRAME ASSEMBLY (Model No. 07174)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	242-55	Cap - Hub	2	28	235-15	Grip - Handle	1
2	3272-17	Pin - Cotter	3	29	32104-95	Screw - Self-Tapping	2
3	32136-1	Nut - Slotted	2	30	32104-96	Screw - Self-Tapping	1
4	3256-29	Washer - Flat	2	31	20-9580	Rope	1
5	254-62	Cone - Bearing	2	32	13-6910	Spacer - Guide, Rope	1
6	254-61	Cup - Bearing	2	33	13-6890	Guide - Rope	1
7	231-118	Tire	2	34	2412-40	Clamp - Conduit	3
8	217-103	Bolt - Wheel	12	35	3217-9	Nut - Hex	4
9	232-24	Stem - Valve	2	36	328-23	Bolt - Hex. Hd.	2
10	62-3220	Wheel Assembly	2	37	3253-9	Washer - Lock	2
11	242-54	Wheel - Hub (Incl. Ref. #6 & 12)	2	38	3217-12	Nut - Hex	2
12	254-66	Cup - Bearing	2	39	323-2	Screw - Cap, Hex. Hd.	2
13	254-65	Cone - Bearing	2	40	3253-21	Washer - Lock	6
14	253-127	Seal	2	41	323-2	Screw - Cap, Hex. Hd.	4
15	325-3	Screw - Cap, Hex. Hd.	2	42	32153-2	Nut - Lock	2
16	3253-7	Washer - Lock	6	43	13-7460	Plate - Caution	1
17	3256-26	Washer - Flat	6	44	3259-15	Screw - Drive	4
18	13-6120	Frame	1	45	13-4310	Tongue	1
19	67-5360	Decal - Caution	4	46	13-6200	Pin - Hitch (Incl. Ref. #47)	1
20	13-6240	Rod - Adjustment	1	47	3290-343	Pin - Hair, Cotter	1
21	3218-6	Nut - Jam	1	48	13-5870	Shield - Front	1
22	325-5	Screw - Cap, Hex. Hd.	4	49	13-5880	Shield - Shaft, Drop	1
23	13-6000	Base - Box, Gear	1	50	13-5790	Shield - Shaft	1
25	323-8	Screw - Cap, Hex. Hd.	1	51	3256-24	Washer - Flat	4
26	3218-3	Nut - Jam	1	52	325-5	Screw - Cap, Hex. Hd.	4
27	3256-28	Washer - Flat	1				

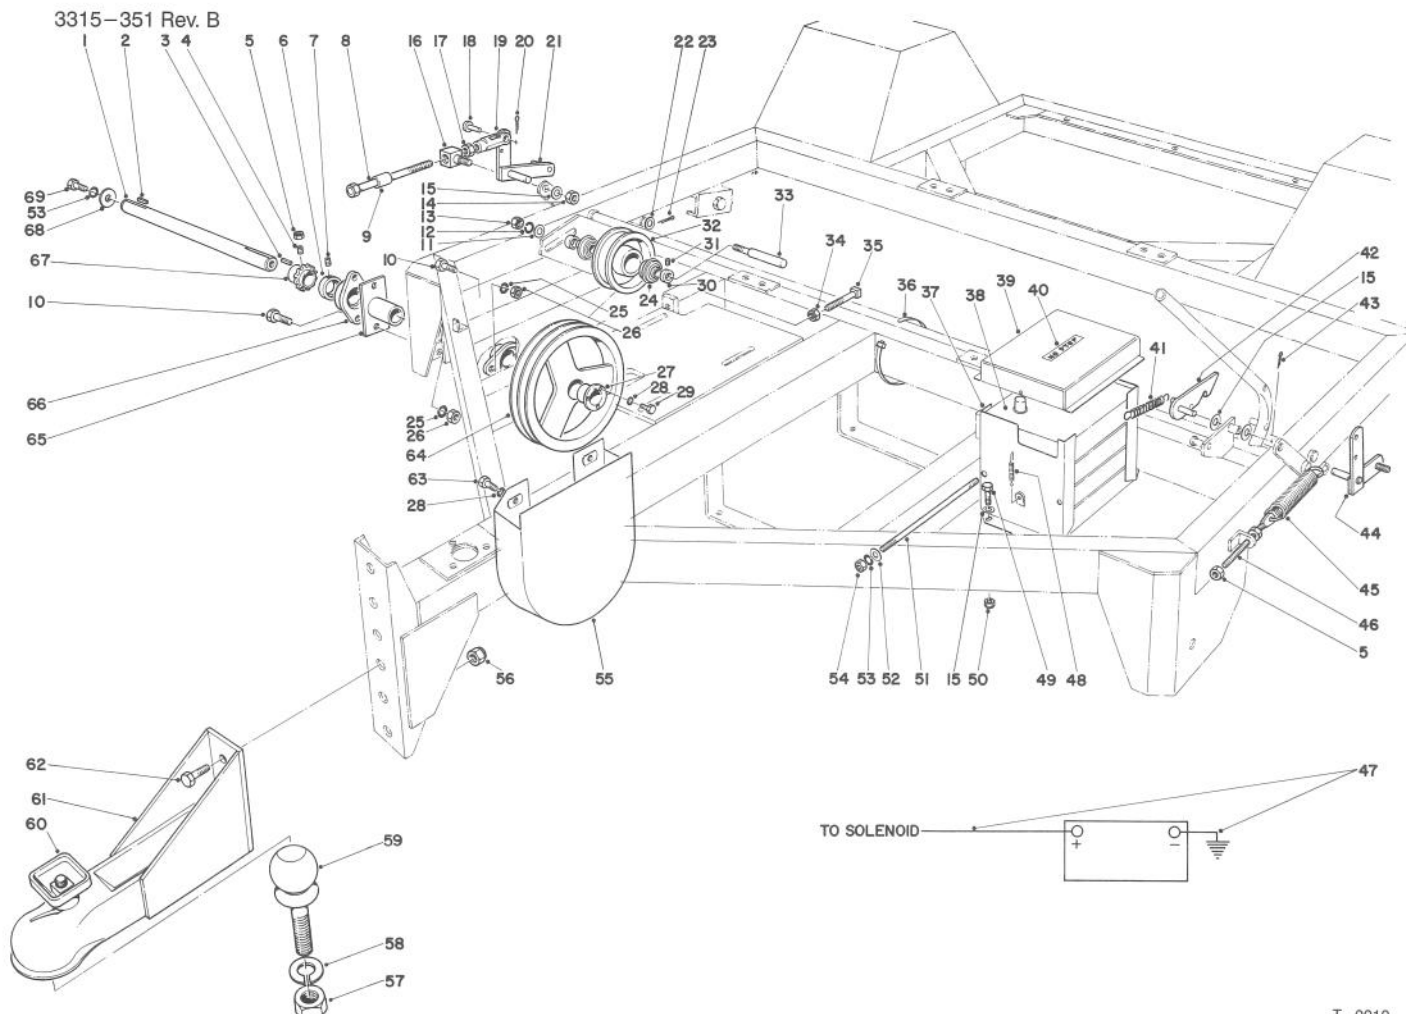 


T-0010

JACKSHAFT & LIFTING MECHANISM (Model No. 07073)

Ref. No.	Part No.	Description	No. Used
1	13-3740	Shaft - Jack	1
2	13-2840	Key - Square	1
3	13-6330	Key - Square	1
4	3247-4	Screw - Set	2
5	3218-3	Nut - Jam	6
6		Collar - Locking	2
7		Screw - Set	2
8	13-6260	Screw - Adjustment	2
9	13-5520	Spacer	2
10	324-7	Screw - Cap, Hex. Hd.	4
11	3256-26	Washer - Flat	1
12	3253-7	Washer - Lock	1
13	3217-9	Nut - Hex	1
14	32153-2	Nut - Lock	2
15	3256-24	Washer - Flat	7
16	13-0100	Block - Pivot	2
17	3219-3	Nut - Hex	2
18	283-2	Pin - Clevis	2
19	282-22	Clevis	2
20	3272-10	Pin - Cotter	2
21	13-5490	Bell Crank - Lift, R.H.	1
22	3256-28	Washer - Flat	2
23	3272-22	Pin - Cotter	2
24	56-6210	Bearing	
		(Incl. Ref. #30 & 31)	2
25	3253-6	Washer - Lock	4

Ref. No.	Part No.	Description	No. Used
26	3217-8	Nut - Lock	4
27	13-2680	Bushing	
		(Incl. Ref. #28 & 29)	1
28	3253-4	Washer - Lock	5
29	322-7	Screw - Cap, Hex. Hd.	3
30		Collar - Locking	2
31		Screw - Set	2
32	13-0600	Pulley - Idler	
		(Incl. Ref. #24)	1
33	13-0510	Pin - Idler	1
34	3218-5	Nut - Hex.	1
35	3244-21	Screw - Set	1
36	250-5	Strap - Locking	2
37	3-5967	Support - Battery	2
38	55-7290	Battery	1
39	3-3175	Cover - Battery	1
40	61-5950	Decal	1
41	13-0480	Spring	1
42	13-3990	Handle - Trip	1
43	3272-10	Pin - Cotter	1
44	13-5500	Bell Crank - Lift, L.H.	1
45	13-0050	Spring	2
46	13-5530	Rod - Adjustment, Spring	2
47	13-6790	Cable - Battery	2
48	3-8135	Spring	2
49	323-5	Screw - Cap, Hex. Hd.	4

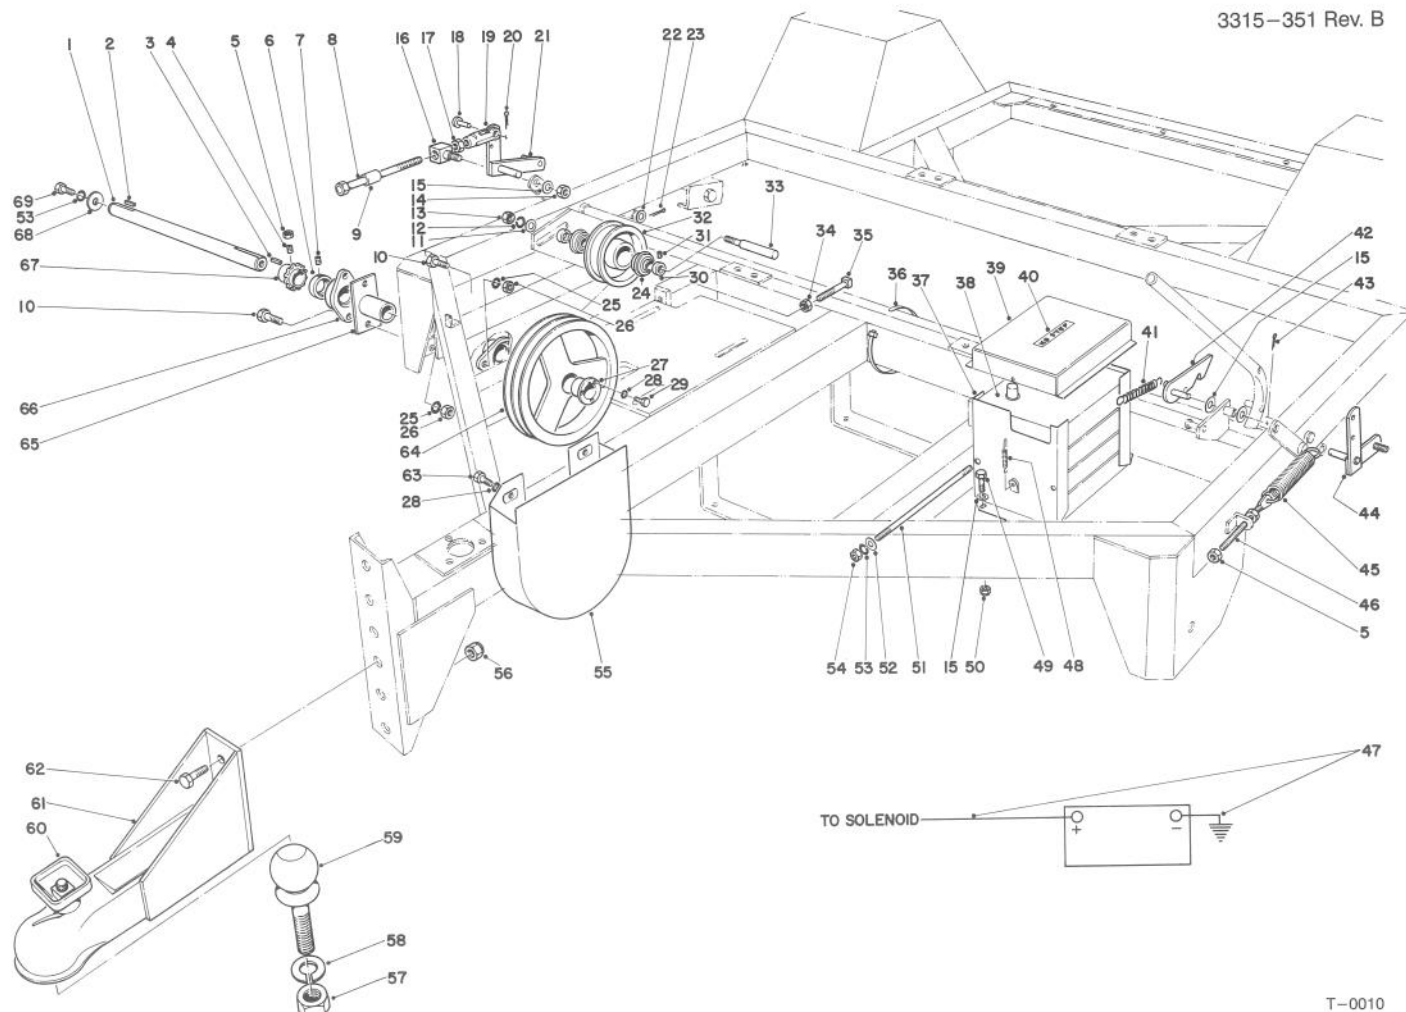 


T-0010

JACKSHAFT & LIFTING MECHANISM (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
50	3296-39	Nut - Lock	4	61	13-0060	Yoke - Hitch (Incl. Ref. #57 & 58)	1
51	5-0678	Rod - Clamp, Battery	2	62	327-6	Screw - Cap, Hex. Hd.	2
52	3256-22	Washer - Flat	4	63	322-7	Screw - Cap, Hex. Hd.	2
53	3253-3	Washer - Lock	5	64	13-2670	Sheave	1
54	3217-5	Nut - Hex.	4	65	63-5210	Spindle - Driveside	1
55	13-4490	Guard - Sheave	1	66	56-6230	Bearing (Incl. Ref. #6 & 7)	2
56	3296-53	Nut - Lock	2	67	13-4340	Sprocket	1
57	3217-12	Nut - Hex.	1	68	13-3710	Washer	1
58	3253-9	Washer - Lock	1	69	321-4	Screw - Cap, Hex. Hd.	1
59	49-4260	Ball	1				
†60	13-3080	Kit - Coupler, Ball	1				

 †Service Replacement Part

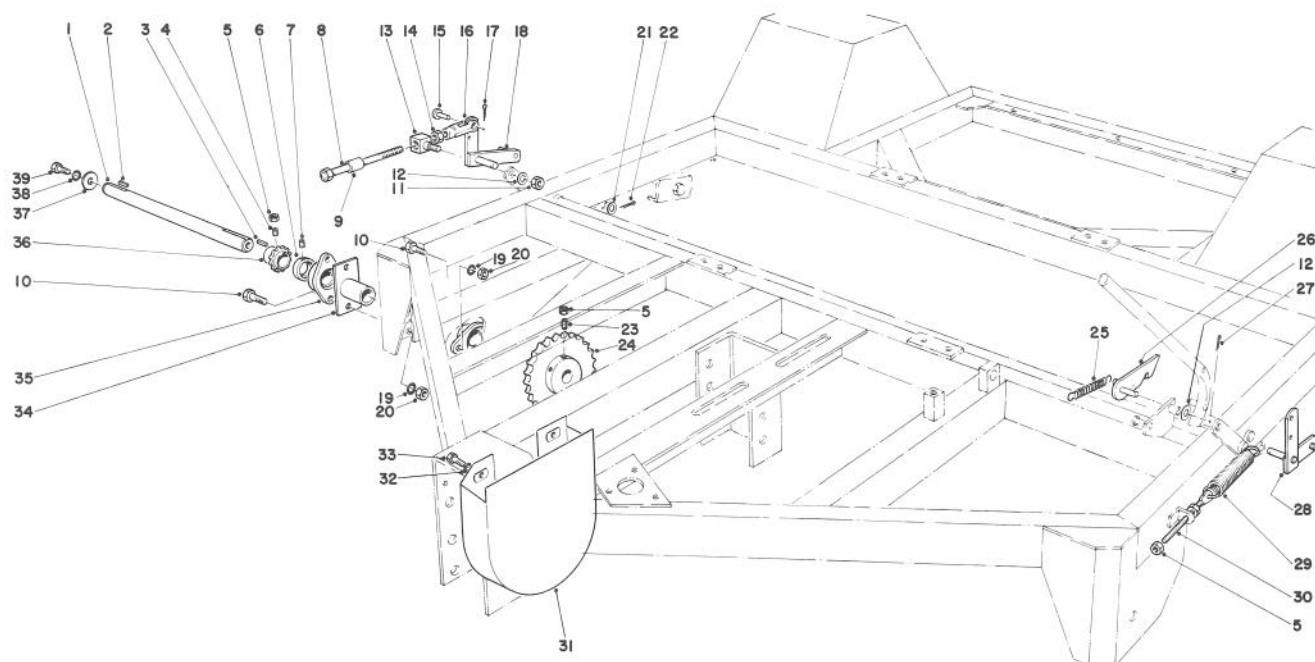


T-0011A

JACKSHAFT & LIFTING MECHANISM (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	13-3740	Shaft - Jack	1
2	13-2840	Key - Square	1
3	5-1718	Key - Square	1
4	3247-4	Screw - Set	2
5	3218-3	Nut - Jam	8
6		Collar - Lock	2
7		Screw - Set	2
8	13-6260	Bolt - Adjustment	2
9	13-5520	Spacer	2
10	324-7	Screw - Cap, Hex. Hd.	4
11	32153-2	Nut	2
12	3256-24	Washer - Flat	2
13	13-0100	Block - Pivot	2
14	3219-3	Nut - Hex.	2
15	283-2	Pin - Clevis	2
16	282-22	Clevis	2
17	3272-10	Pin - Cotter	2
18	13-5490	Bell Crank - Lift, R.H.	1
19	3253-6	Washer - Lock	4
20	3217-8	Nut - Hex.	4

Ref. No.	Part No.	Description	No. Used
21	3256-28	Washer - Flat	2
22	3272-22	Pin - Cotter	2
23	3247-6	Screw - Set	2
24	13-4880	Sprocket	1
25	13-0480	Spring	1
26	13-3990	Handle - Trip	1
27	3272-10	Pin - Cotter	1
28	13-5500	Bell Crank - Lift, L.H.	1
29	13-0050	Spring	2
30	13-5530	Rod - Adjustment, Spring	2
31	13-4490	Guard - Sheave	1
32	3253-4	Washer - Lock	2
33	322-7	Screw - Cap, Hex. Hd.	2
34	63-5210	Spindle - Driveside	1
35	56-6230	Bearing (Incl. Ref. #6 & 7)	2
36	13-4340	Sprocket	1
37	13-3710	Washer - Special	1
38	3253-3	Washer - Lock	1
39	321-4	Screw - Cap, Hex. Hd.	1

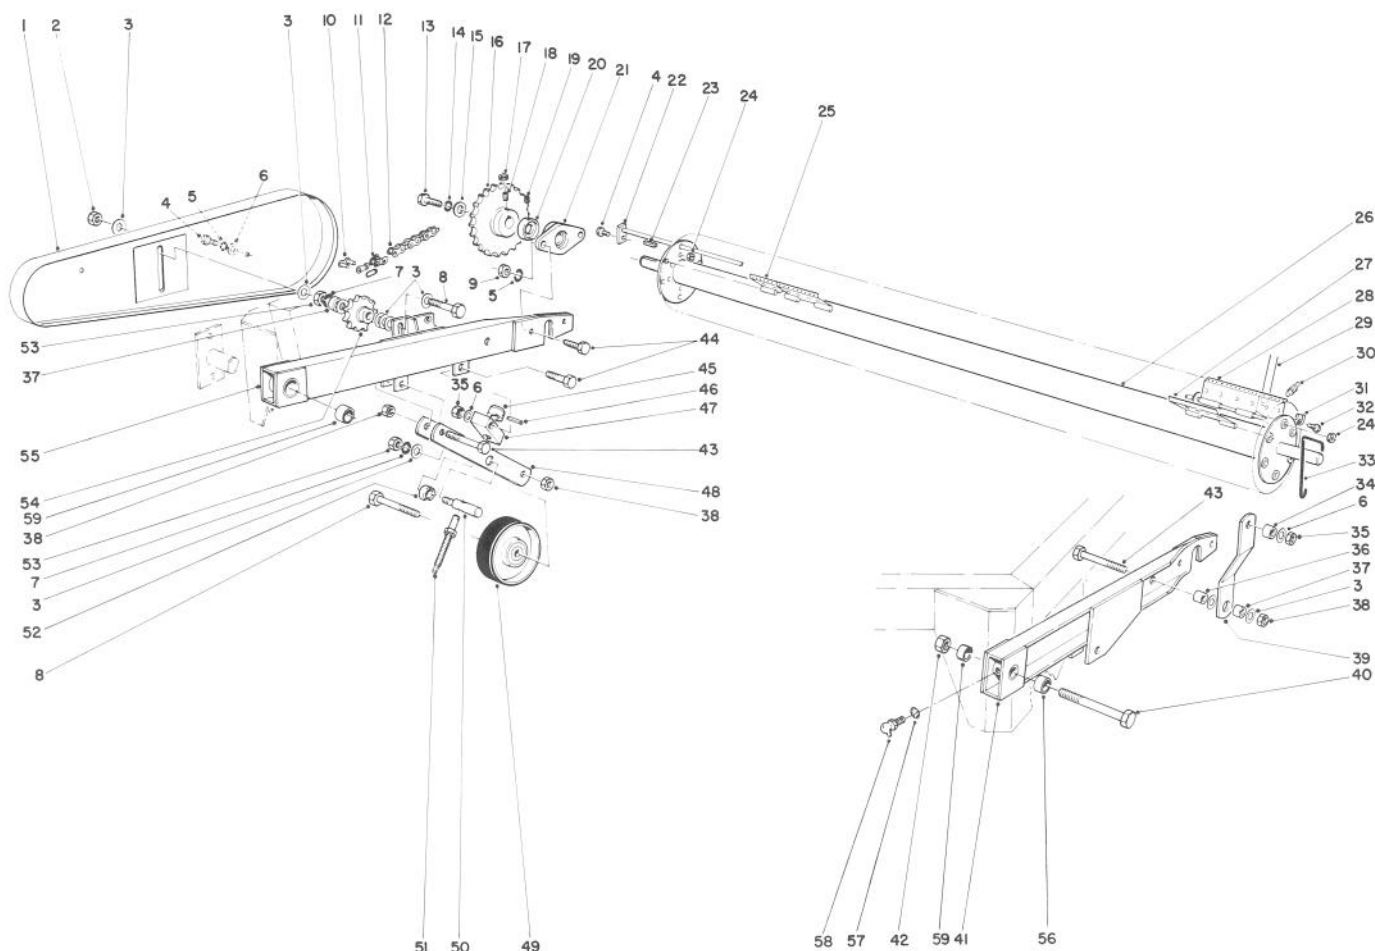 


T-0012

GAUGE WHEEL & TRAILING ARM

Ref. No.	Part No.	Description	No. Used
1	13-5620	Guard - Chain	1
2	3296-45	Nut - Lock	1
3	3256-26	Washer - Flat	10
4	323-4	Screw - Cap, Hex. Hd.	7
5	3253-21	Washer - Lock	5
6	3256-24	Washer - Flat	5
7	3253-7	Washer - Lock	3
8	325-14	Screw - Cap, Hex. Hd.	3
9	3217-7	Nut - Hex.	4
10	2710-11	Link - Connecting	1
11	2710-15	Link - Offset	1
12	13-4070	Chain	1
13	321-4	Screw - Cap, Hex. Hd.	1
14	3253-3	Washer - Lock	1
15	13-3710	Washer - Special	1
16	13-4890	Sprocket	1
17	3218-3	Nut - Jam	2
18	3247-6	Screw - Set	2
19		Screw - Set	2
20		Collar - Locking	2
21	56-6230	Bearing (Incl. Ref. #19 & 20)	2
22	13-4960	Shaft - Plate, Finger	6
23	13-2840	Key - Square	1
24	32152-2	Nut - Lock	12
25	13-4930	Plate - Finger	3

Ref. No.	Part No.	Description	No. Used
26	13-5250	Rake - Reel	1
27	13-2451	Plate - Finger	60
28	13-4940	Plate - Finger	3
29	13-6700	Finger - Nylon	276
30	13-3090	Spring	66
31	13-2480	Clamp - Finger	276
32	32140-94	Screw - Cap, Hex. Hd.	276
33	13-5700	Hook - Transport	2
34	13-0560	Spacer	2
35	32153-2	Nut	4
36	13-0360	Spacer	2
37	13-3070	Spacer	3
38	32153-5	Nut	6
39	13-5540	Link - Lift	2
40	328-10	Bolt - Hex. Hd.	1
41	63-5300	Trailing Arm-L.H. (Incl. Ref. #59)	1
42	32153-6	Nut	1
43	325-9	Screw - Cap, Hex. Hd.	4
44	323-9	Screw - Cap, Hex. Hd.	6
45	13-0320	Collar - Lock	2
46	32121-45	Pin - Roll	2
47	13-0330	Block - Pivot	2
48	13-5550	Arm - Gauge Wheel	2
49	13-2870	Wheel - Gauge	2
50	13-5570	Stud - Pivot	2

 *Not Illustrated

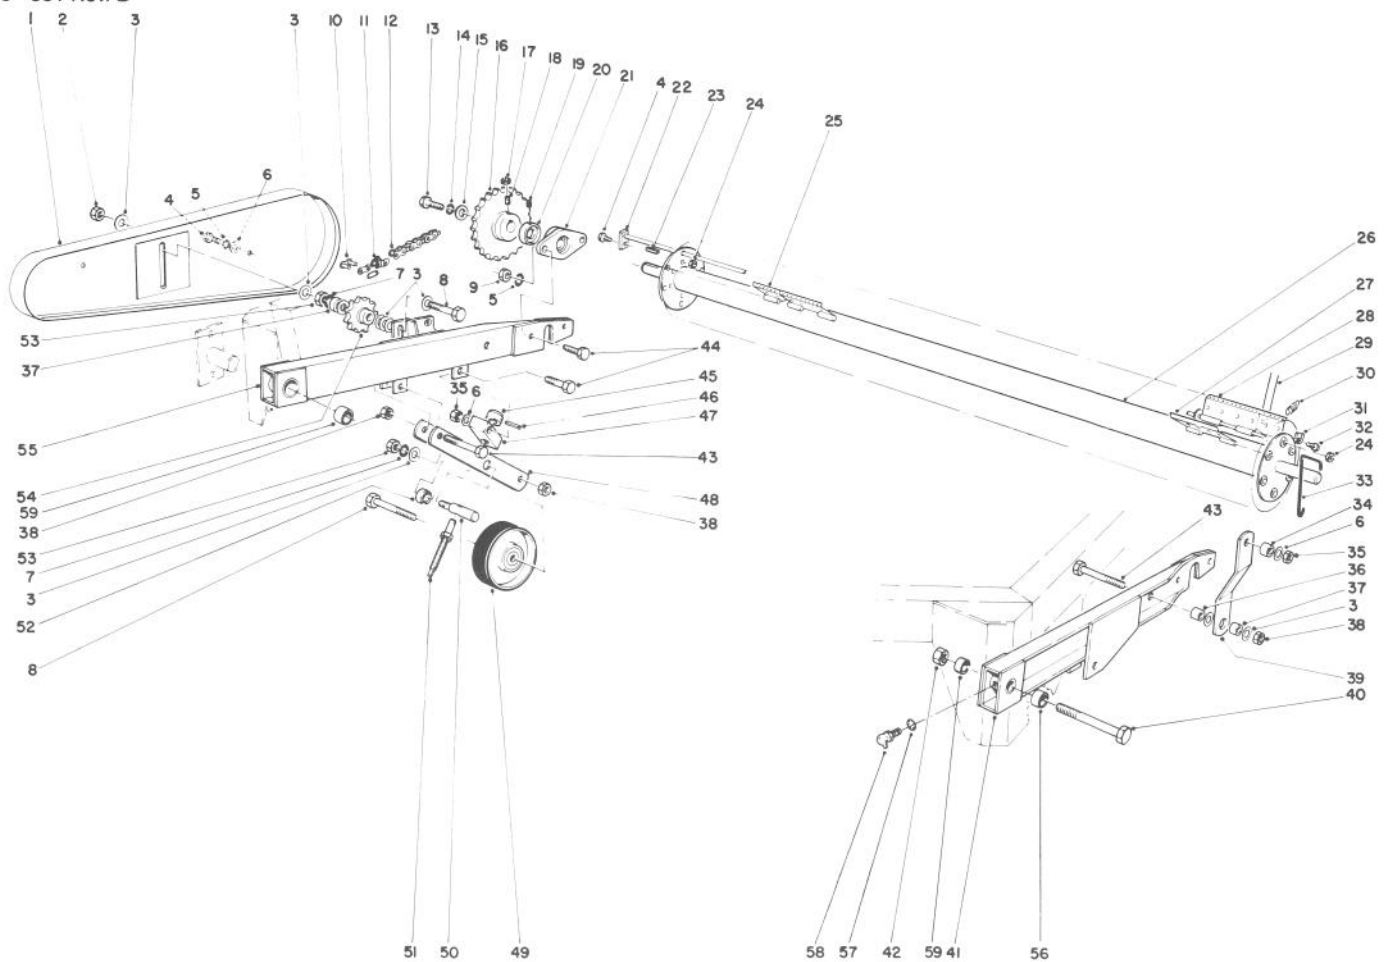


T-0012

GAUGE WHEEL & TRAILING ARM (Continued)

Ref. No.	Part No.	Description	No. Used
51	13-5590	Rod - Adjustment	2
52	13-5670	Spacer - Locking	2
53	3217-9	Nut - Hex.	3
54	13-3020	Sprocket	1
55	63-5200	Trailing Arm-R.H. (Incl. Ref. #59)	1

Ref. No.	Part No.	Description	No. Used
56	63-5250	Spacer	1
57	3254-8	Washer - Lock, Int. Tooth	2
58	302-60	Fitting - Grease	2
59	256-298	Bushing	2
	13-5370	Flex Tip Reel Assembly (Inc. Ref. #13-33)	1

 *Not Illustrated

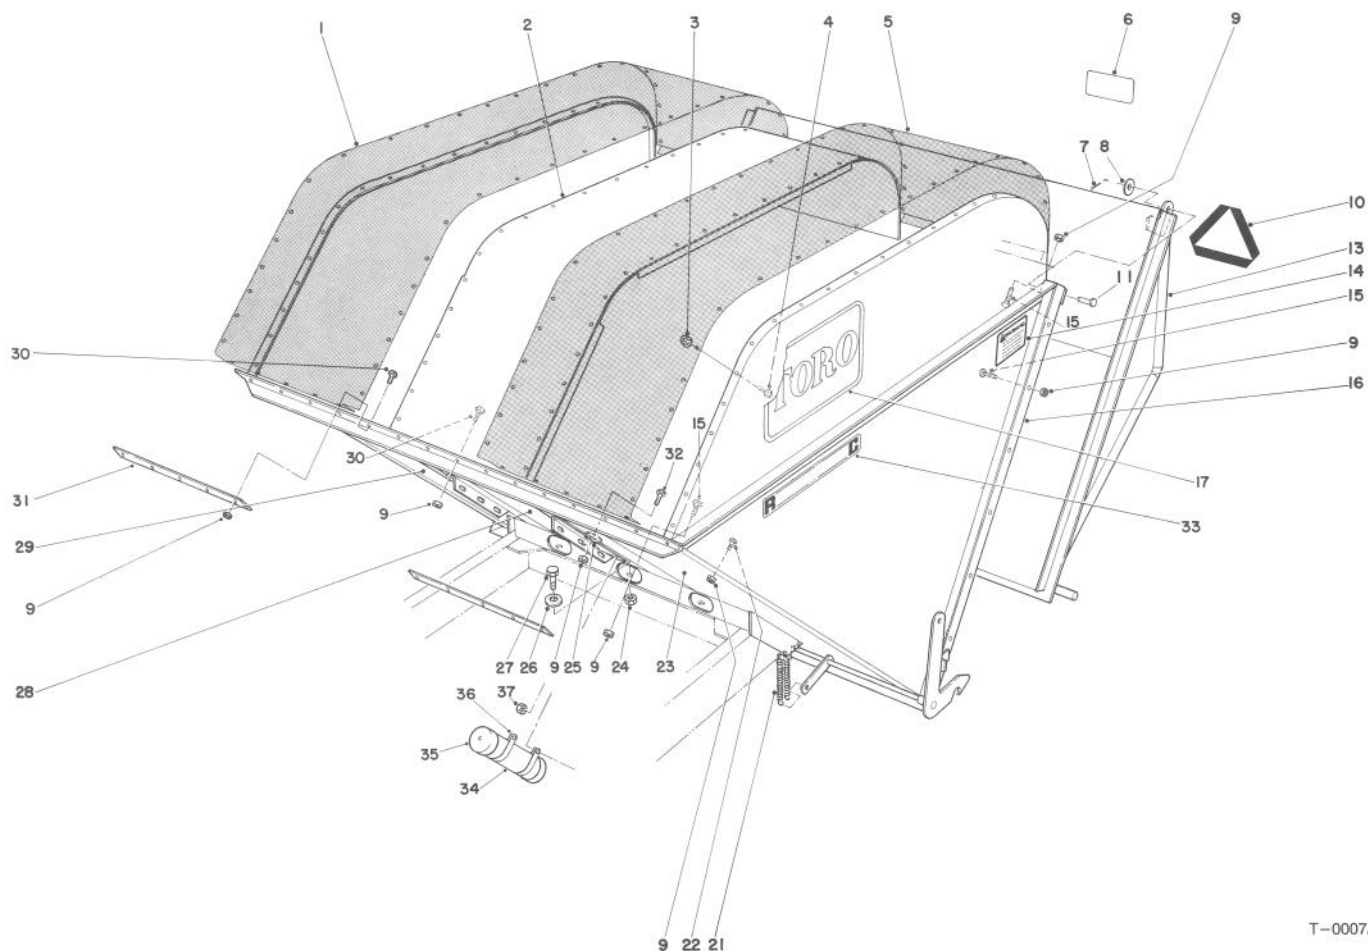


T-0007A

CAGE & REAR TAILGATE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	13-7380	Screen - Top, R.H.	1	23	13-7360	Panel - Bottom, L.H.	1
2	13-7140	Panel - Top	1	24	3296-23	Nut - Lock	3
3	32128-17	Nut - Lock, Flange Hd.	104	25	13-3710	Washer - Flat	2
4	3290-144	Screw - Hex. Flange Hd.	104	26	3256-26	Washer - Flat	3
5	13-7390	Screen - Top, L.H.	1	27	325-6	Screw - Cap, Hex. Hd.	3
6	13-6760	Decal - Caution	1	28	13-7370	Panel - Bottom, (Middle)	1
7	3272-12	Pin - Cotter	3	29	13-7350	Panel - Bottom, (R.H.)	1
8	3256-27	Washer - Flat	A/R	30	3250-32	Screw - Cap, Hex. Hd.	15
9	32128-32	Nut - Lock	103	31	42-9930	Strap - Hopper	2
10	13-2930	Decal - Slow Moving Vehicle	1	32	3258-165	Screw - Rd. Hd.	2
11	283-39	Pin - Clevis	3	33	67-9770	Decal - Hopper	2
13	13-7180	Gate	1	34	65-5871	Tube - Manual	1
14	13-7430	Decal - Warning	1	35	65-5890	Cap - Tube	2
15	3229-7	Bolt - Carriage	50	36	2412-102	R-Clamp	2
16	13-7400	Hinge - Bracket	3	37	32153-2	Nut - Lock	2
17	67-7920	Decal - Toro	2	*	92-2409	Cage Assembly (Incl. Ref. #1-33)	1
21	12-8810	Spring	2				
22	32122-42	Screw - Machine	36				

 *Not Illustrated

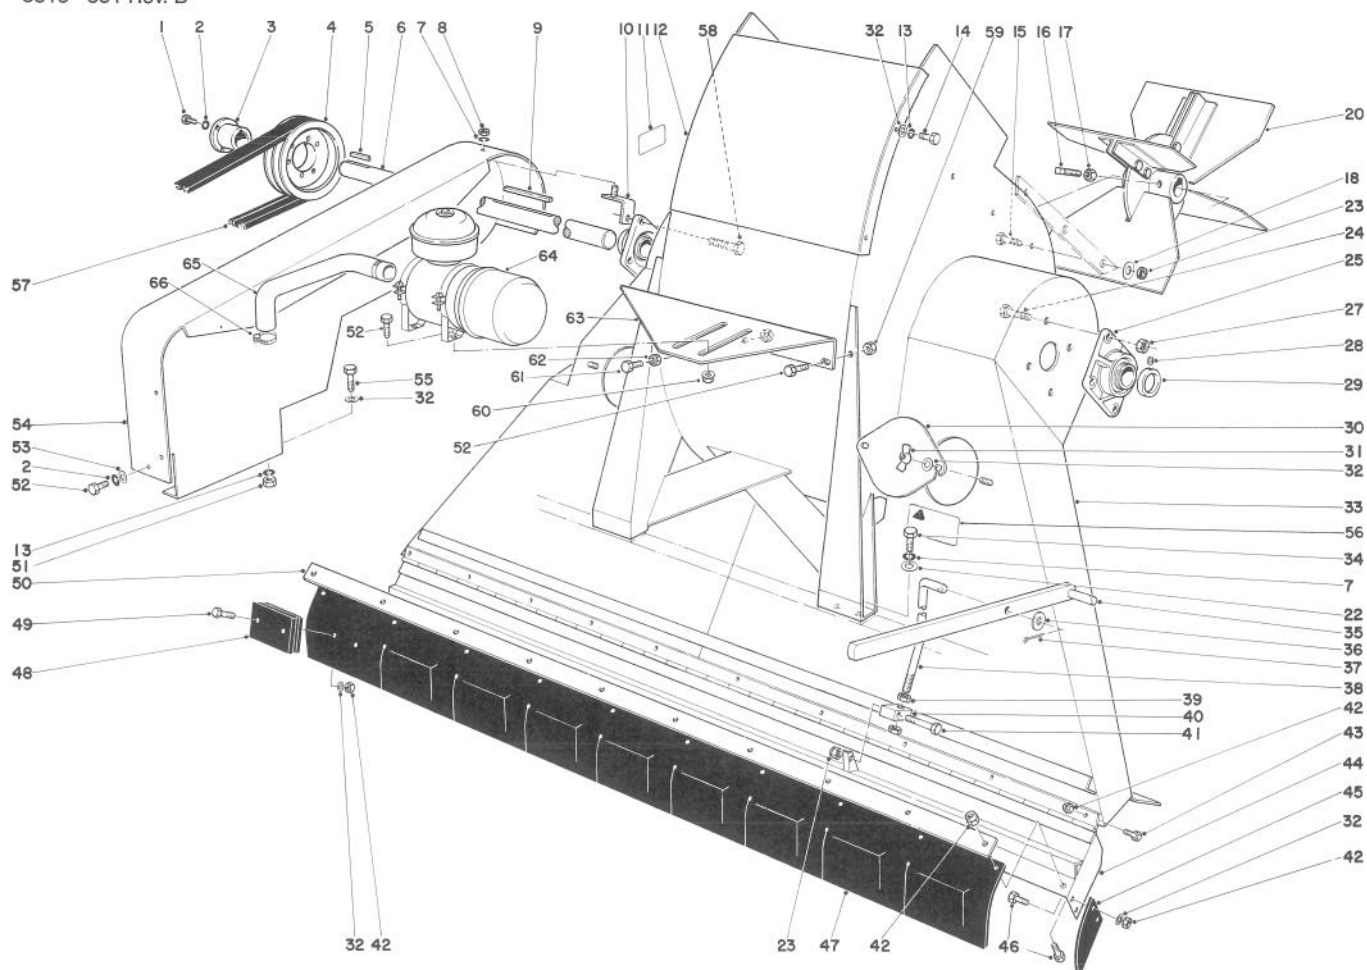


T-0005A

BLOWER & THROAT ASSEMBLY (Model No. 07073)

Ref. No.	Part No.	Description	No. Used
1	322-7	Screw - Cap, Hex. Hd.	3
2	3253-4	Washer - Lock	4
3	13-2970	Bushing (Incl. Ref. #1 & 2)	1
4	13-2800	Pulley	1
5	13-2240	Key - Square	1
6	13-3790	Shaft - Fan	1
7	3253-21	Washer - Lock	9
8	3217-7	Nut - Hex.	1
9	13-2810	Key - Square	1
10	13-3350	Support - Shield	1
11	67-5360	Decal	1
12	13-3850	Plate - Blower Access	1
13	3253-3	Washer - Lock	6
14	321-4	Screw - Cap, Hex. Hd.	4
15	323-7	Screw - Cap, Hex. Hd.	6
16	3244-14	Screw - Set, - Sq. Hd.	4
17	3218-5	Nut - Jam	4
20	13-3420	Fan Assembly	1
22	3256-24	Washer - Flat	14
23	3296-39	Nut - Lock	7
24	325-6	Screw - Cap, Hex. Hd.	7
25	56-6220	Bearing (Incl. Ref. #28 & 29)	2
27	32153-5	Nut - Lock	8
28		Screw - Set	2

Ref. No.	Part No.	Description	No. Used
29		Collar - Locking	2
30	13-1420	Cover - Inspection	2
31	32103-12	Nut - Wing	4
32	3256-22	Washer - Flat	32
33	13-6280	Blower (Incl. Ref. #12-14 & 30-32)	1
34	323-6	Screw - Cap, Hex. Hd.	8
35	13-6390	Handle - Flap	1
36	3256-27	Washer - Flat	1
37	3272-12	Pin - Cotter	1
38	13-6360	Rod - Lift	1
39	3218-6	Nut - Jam	2
40	13-0330	Block - Pivot	1
41	323-9	Screw - Cap, Hex. Hd.	1
42	3296-42	Nut - Lock	42
43	321-3	Screw - Cap, Hex. Hd.	10
44	13-4760	Flap - Lower	1
45	13-3130	Flap - End	2
46	321-5	Screw - Cap, Hex. Hd.	14
47	13-4700	Flap (Incl. Ref. #23, 42, 48-49)	1
48	13-4560	Weight - Flap	18
49	321-8	Screw - Cap, Hex. Hd.	18
50	13-1390	Retainer - Flap	1
51	3217-5	Nut - Hex.	2
52	322-1	Screw - Cap, Hex. Hd.	7

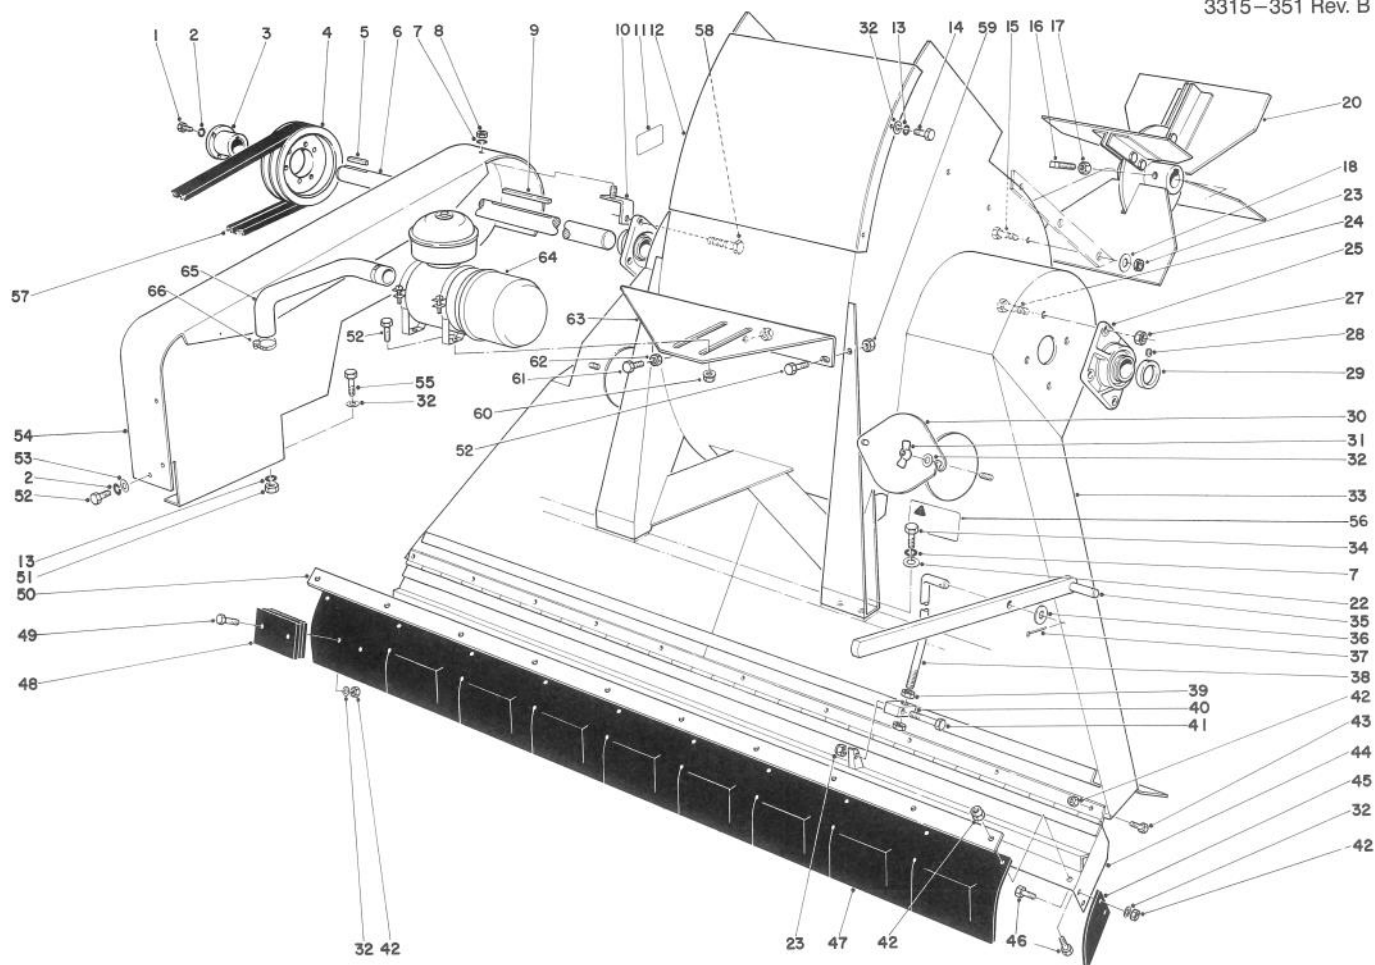 


T-0005A

BLOWER & THROAT ASSEMBLY (Model No. 07073) (Continued)

Ref. No.	Part No.	Description	No. Used
53	3256-23	Washer - Flat	1
54	13-4800	Guard - Belt	1
55	321-4	Screw - Cap, Hex. Hd.	2
56	13-6410	Decal	1
57	13-2640	Belt	1
58	325-7	Screw - Cap, Hex. Hd.	1
59	32153-3	Nut - Lock	2

Ref. No.	Part No.	Description	No. Used
60	32128-25	Nut - Lock, Flange	4
61	322-5	Screw - Cap, Hex. Hd.	1
62	3218-2	Nut - Jam	2
63	67-9730	Bracket - Air Cleaner	1
64	8-2329	Air Cleaner Assembly	1
65	53-8591	Hose - Air Cleaner	1
66	2412-42	Clamp	2

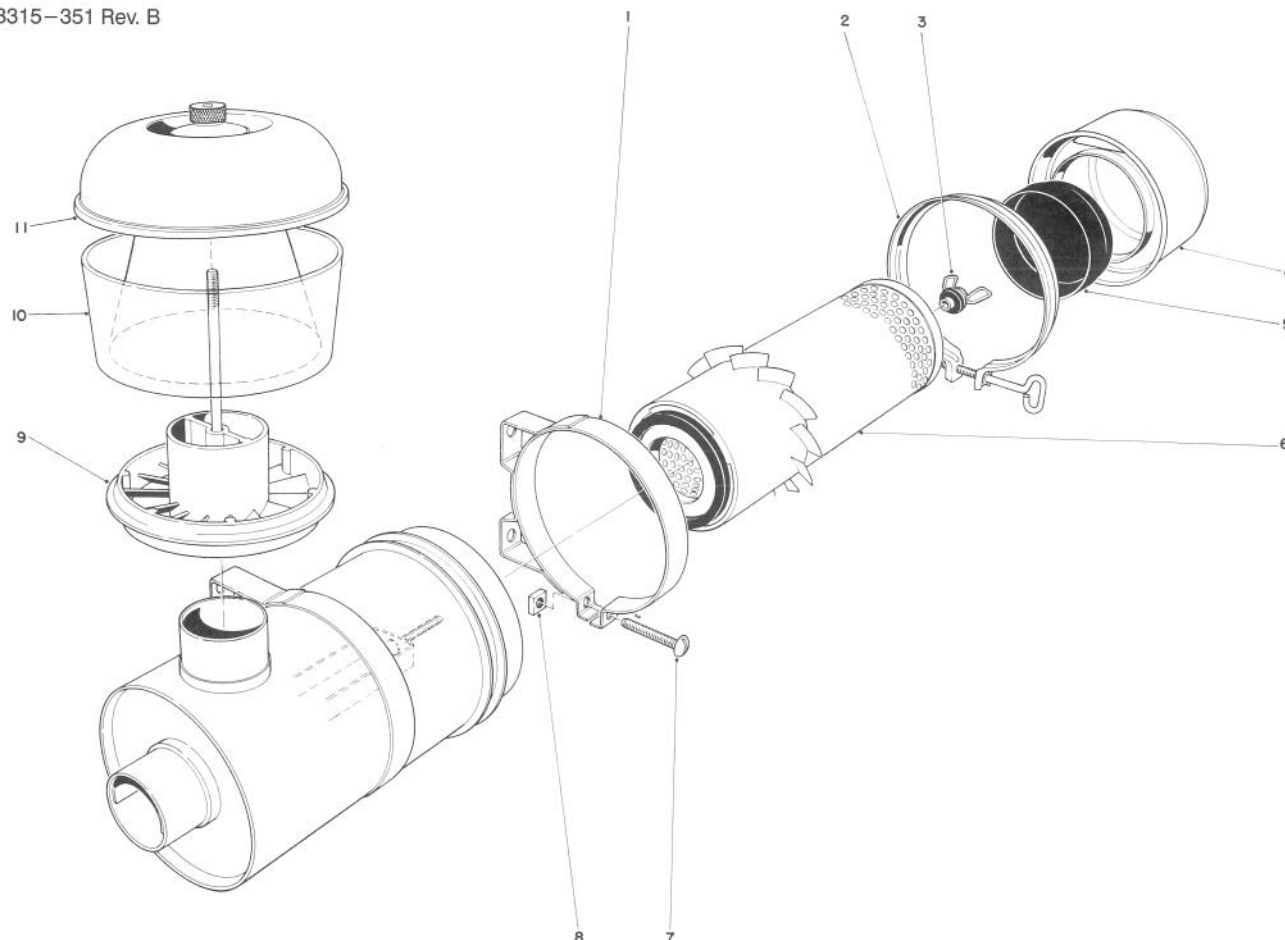 


T-0019

AIR CLEANER ASSEMBLY NO. 8-2329

Ref. No.	Part No.	Description	No. Used
1	33-1350	Assembly - Band, Mounting	2
2	33-1340	Assembly - Clamp	1
3	33-1330	Assembly - Nut	1
4	33-1320	Assembly - Cup	1
5	33-1310	Baffle	1
6	33-1300	Assembly - Element	1
7	3258-19	Screw - Machine	2

Ref. No.	Part No.	Description	No. Used
8	32107-11	Nut - Square	2
9	33-1280	Assembly - Sleeve	1
10	33-1270	Bowl - Clear	1
11	33-1260	Assembly - Cover	1
*	27-7220	Detergent - Cleaning, Air Filter Element (4 lb. box)	A/R

 
*Not Illustrated

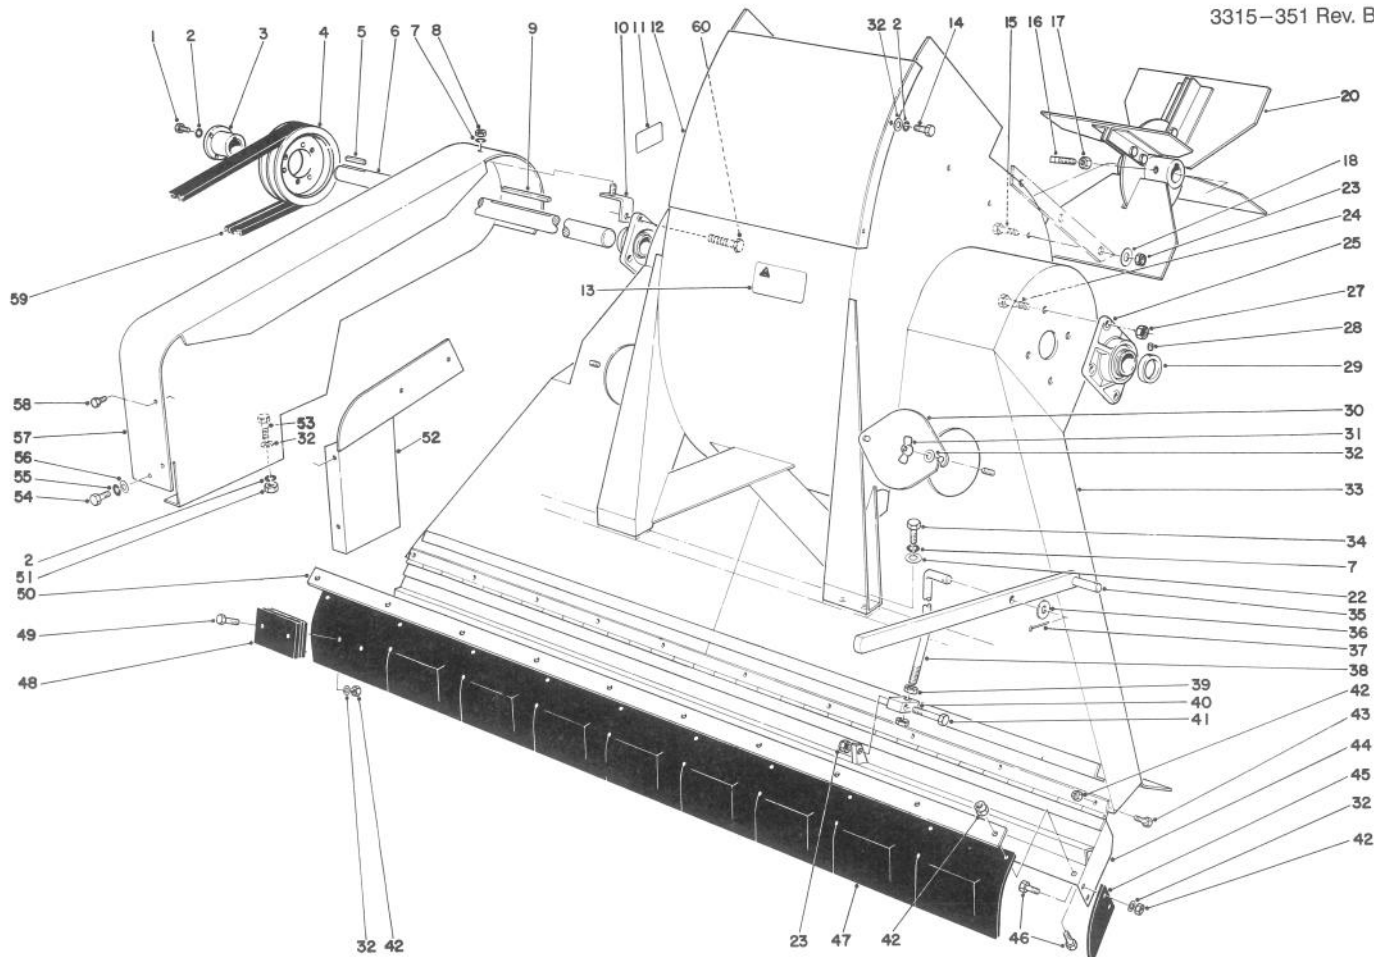

T-0013A

BLOWER & THROAT ASSEMBLY (Model No. 07174)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	321-13	Screw - Cap, Hex. Hd.	3	30	13-1420	Cover - Inspection	2
2	3253-3	Washer - Lock	9	31	32103-12	Nut - Wing	4
3	13-6070	Bushing (Incl. Ref. #1 & 2)	1	32	3256-22	Washer - Flat	32
4	13-6030	Pulley	1	33	13-6280	Blower and Throat (Incl. Ref. #2,12,14, & 30-32)	1
5	13-2240	Key - Square	1	34	323-6	Screw - Cap, Hex. Hd.	8
6	13-3790	Shaft - Fan	1	35	13-6390	Handle - Flap	1
7	3253-21	Washer - Lock	1	36	3256-27	Washer - Flat	1
8	3217-7	Nut - Hex	1	37	3272-12	Pin - Cotter	1
9	13-2810	Key - Square	1	38	13-6360	Rod - Lift	1
10	13-3350	Bracket - Mounting	1	39	3218-6	Nut - Jam	2
11	67-5360	Decal	1	40	13-0330	Block - Pivot	1
12	13-3850	Plate - Blower Access	1	41	323-8	Screw - Cap, Hex. Hd.	1
13	13-6410	Decal	1	42	3296-42	Nut - Lock	42
14	321-4	Screw - Cap, Hex. Hd.	4	43	321-3	Screw - Cap, Hex. Hd.	10
15	323-7	Screw - Cap, Hex. Hd.	6	44	13-4760	Flap - Lower	1
16	3244-14	Screw - Set, Square Hd.	4	45	13-3130	Flap - End	2
17	3218-5	Nut - Hex.	4	46	321-5	Screw - Cap, Hex. Hd.	14
20	13-3420	Assembly - Fan	1	47	13-4700	Flap - Rubber (Incl. Ref. #32, 42, 48 & 49)	1
22	3256-24	Washer - Flat	14	48	13-4560	Weight - Flap	18
23	3296-39	Nut - Lock	7	49	321-8	Screw - Cap, Hex. Hd.	18
24	325-6	Screw - Cap, Hex. Hd.	7	50	13-1390	Retainer - Flap	1
25	56-6220	Bearing (Incl. Ref. #28 & 29)	2	51	3217-5	Nut - Hex.	2
27	32153-5	Nut - Lock	8	52	13-6090	Cover - Guard, Side	1
28		Screw - Set	2	53	321-4	Screw - Cap, Hex. Hd.	2
29		Collar - Locking	2				

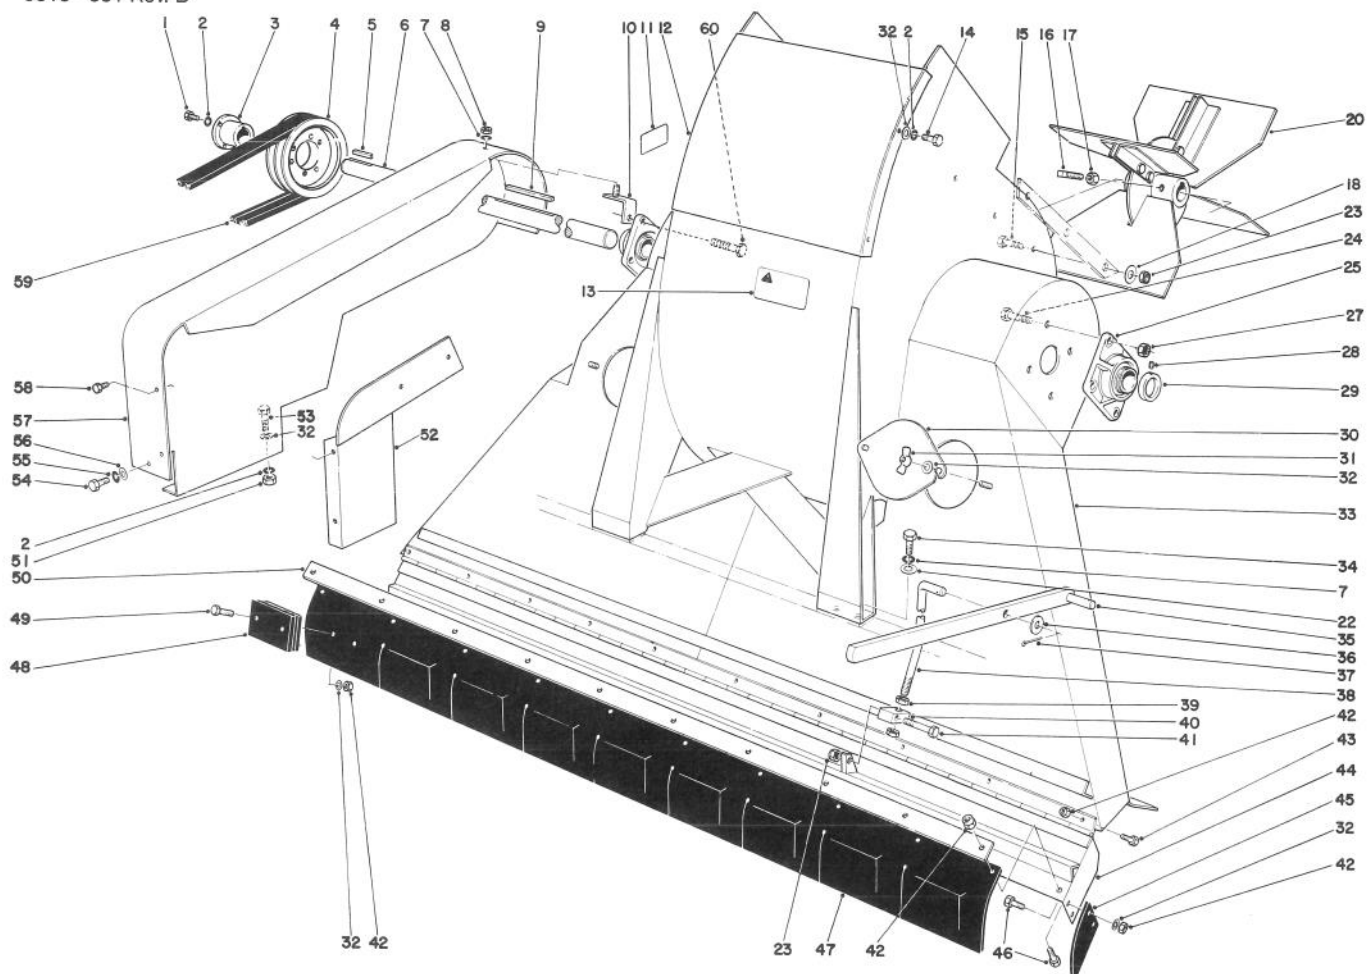 


T-0013A

BLOWER & THROAT ASSEMBLY (Model No. 07174) (Continued)

Ref. No.	Part No.	Description	No. Used
54	322-1	Screw - Cap, Hex. Hd.	1
55	3253-4	Washer - Lock	1
56	3256-23	Washer - Flat	1
57	13-4800	Guard - Belt	1

Ref. No.	Part No.	Description	No. Used
58	32104-109	Screw - Cap, Hex. Hd.	4
59	13-2640	Belt	1
60	325-7	Screw - Cap, Hex. Hd.	1

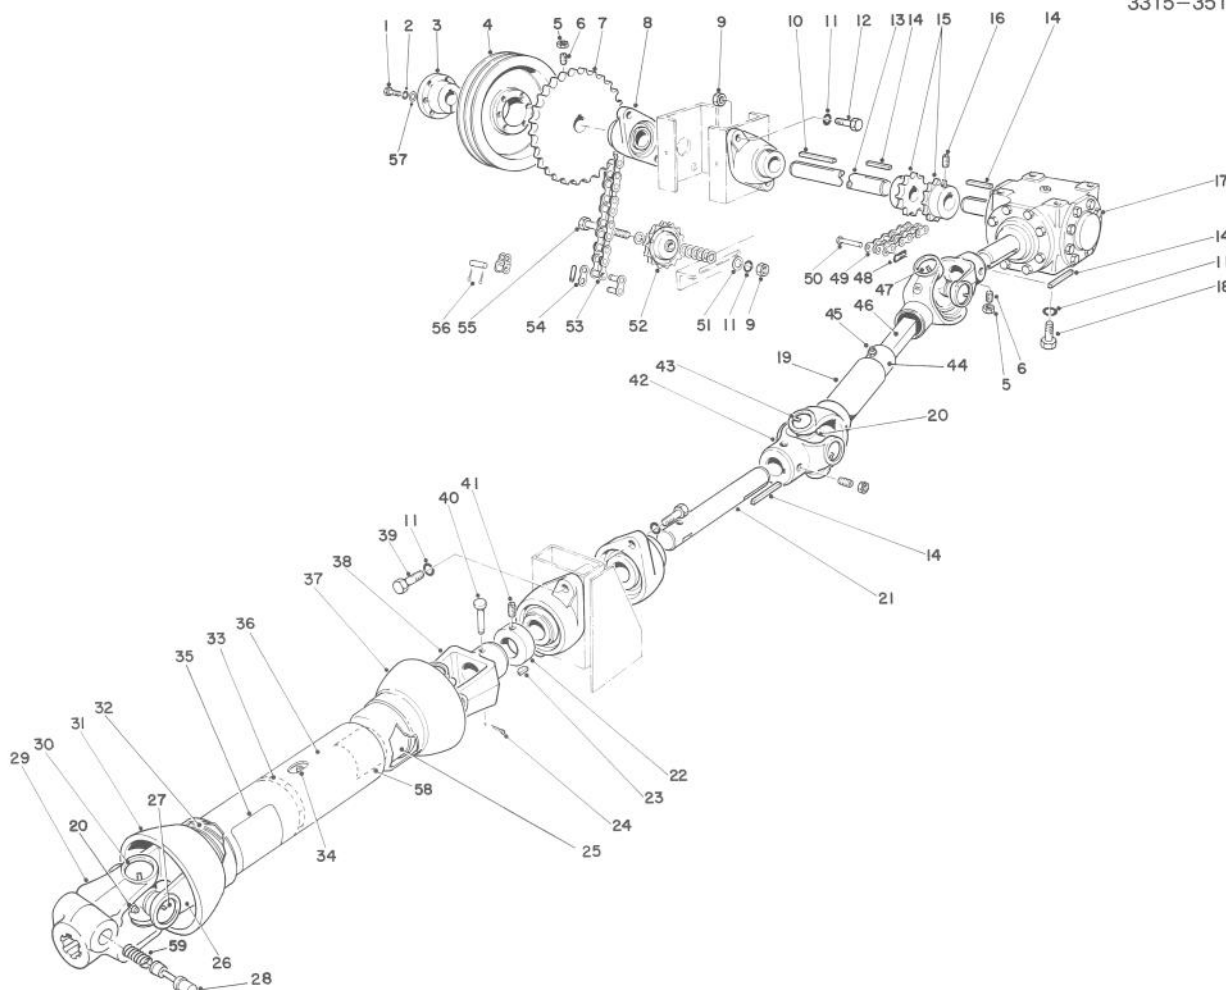 


T-0008

DRIVE MECHANISM (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	322-7	Screw - Cap, Hex. Hd.	3
2	3253-4	Washer - Lock	3
3	13-6050	Bushing (Incl. Ref. #1 & 2)	1
4	13-6020	Sheave	1
5	3218-3	Nut - Jam	6
6	3247-6	Screw - Set	6
7	13-6110	Sprocket	1
8	56-6250	Bearing (Incl. Ref. #22 & 41)	4
9	3217-9	Nut - Hex.	5
10	13-3720	Key - Square	1
11	3253-7	Washer - Lock	13
12	325-6	Screw - Cap, Hex. Hd.	4
13	13-5910	Shaft - Drive, Side	1
14	5-0738	Key - Square	4
15	13-6690	Coupling Half	2
16	3247-3	Screw - Set	4
17	70-2350	Gear Box - Complete	1
18	325-4	Screw - Cap, Hex. Hd.	4
19	42-1870	Rear Shaft Assembly (Incl. Ref. #20 & 42-47)	1
20	2115-80	Fitting - Grease	4
21	13-5900	Shaft - Drive, Front	1
22		Collar - Locking, Eccentric	4
23	3257-8	Key - Woodruff	1

Ref. No.	Part No.	Description	No. Used
24	3272-6	Pin - Cotter	1
25	42-2360	Yoke & Tube Assembly (Incl. Ref. #34 & 58)	1
26	42-2370	Yoke and Shaft	1
27	2115-79	Ring - Lock	8
28		Pin - Quick Detach	1
29	42-2310	Yoke - Front (Incl. Ref. #28 & 59)	1
30	2115-88	Bearing & Cross Kit (Incl. Ref. #20 & 27)	2
31	42-2380	Shield - Outer (Incl. Ref. #35)	1
32	92-1580	Bearing Kit, Shield	2
33	42-2340	Centralizer - Guard	1
34	2115-85	Fitting - Grease	1
35	92-1582	Decal - Safety	1
36	42-1860	Front Shaft Assembly (Incl. Ref. #20, 25, 35, 37, 38, 58 & 59)	1
37	42-2350	Shield - Inner	1
38	2115-94	Yoke - Rear	1
39	325-5	Screw - Cap, Hex. Hd.	4
40	283-46	Pin - Clevis	1
41		Screw - Set	8
42	2115-81	Yoke	2
43	2115-76	Kit - Center Parts	2

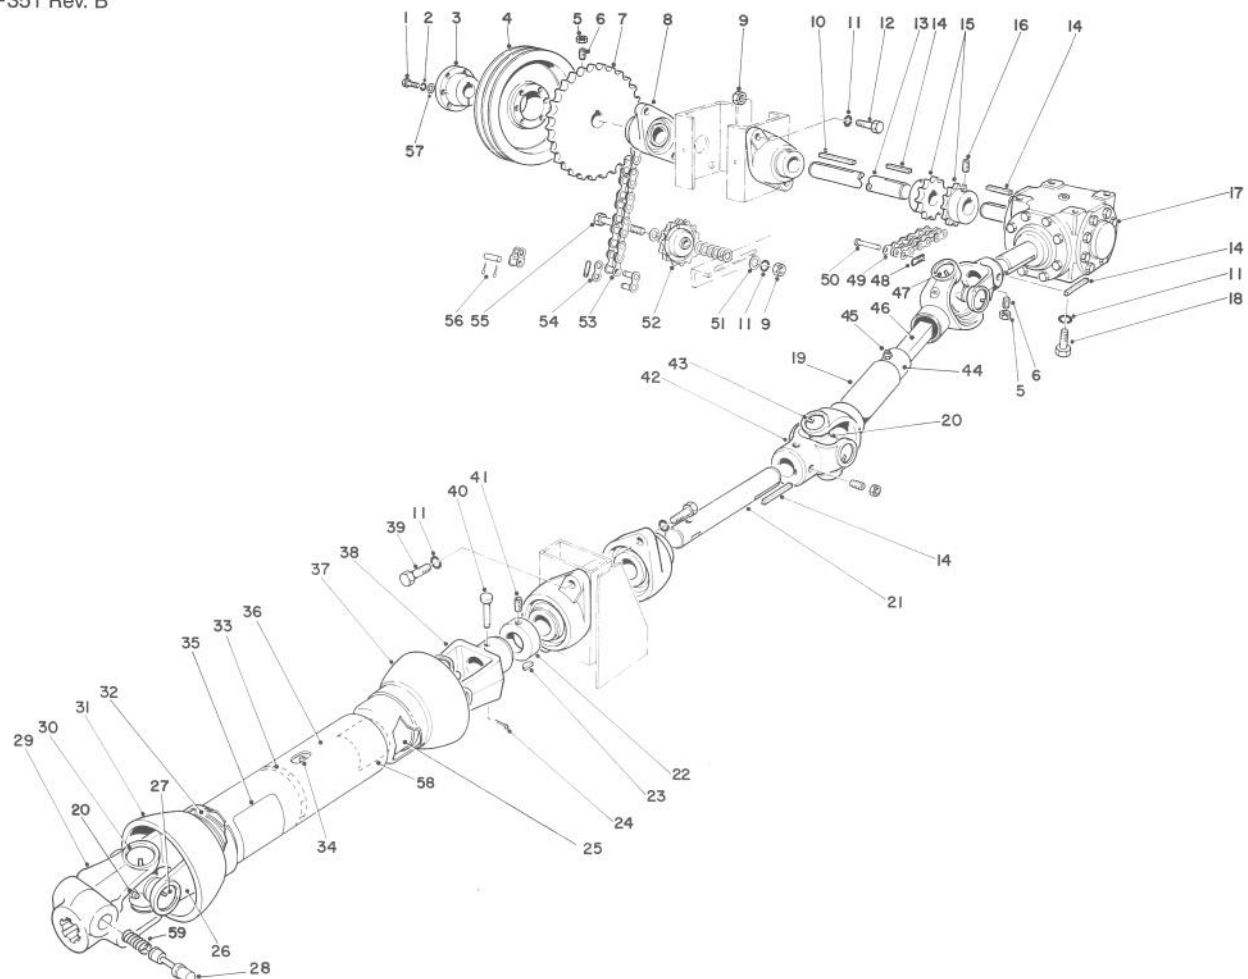 


T-0008

DRIVE MECHANISM (Model No. 07174) (Continued)

Ref. No.	Part No.	Description	No. Used
44	42-2290	Yoke and Tube	1
45	302-2	Fitting - Grease	1
46	42-2300	Yoke and Shaft	1
47	2115-78	Ring - Lock	8
48		Clip - Pin, Connector	1
49	13-6680	Chain	1
50	13-6670	Pin - Connector (Incl. Ref. #48)	1
51	3256-26	Washer - Flat	8
52	13-4570	Sprocket - Idler	1

Ref. No.	Part No.	Description	No. Used
53	13-4590	Chain	1
54	2710-30	Link - Connecting	1
55	325-12	Screw - Cap, Hex. Hd.	1
56	2710-29	Link - Offset	1
57	3256-23	Washer - Flat	3
58	92-1581	Decal - Safety	1
59		Spring	1
*	92-1187	Quick Disconnect Kit (Incl. Ref. # 28, & 59)	1

 *Not Illustrated

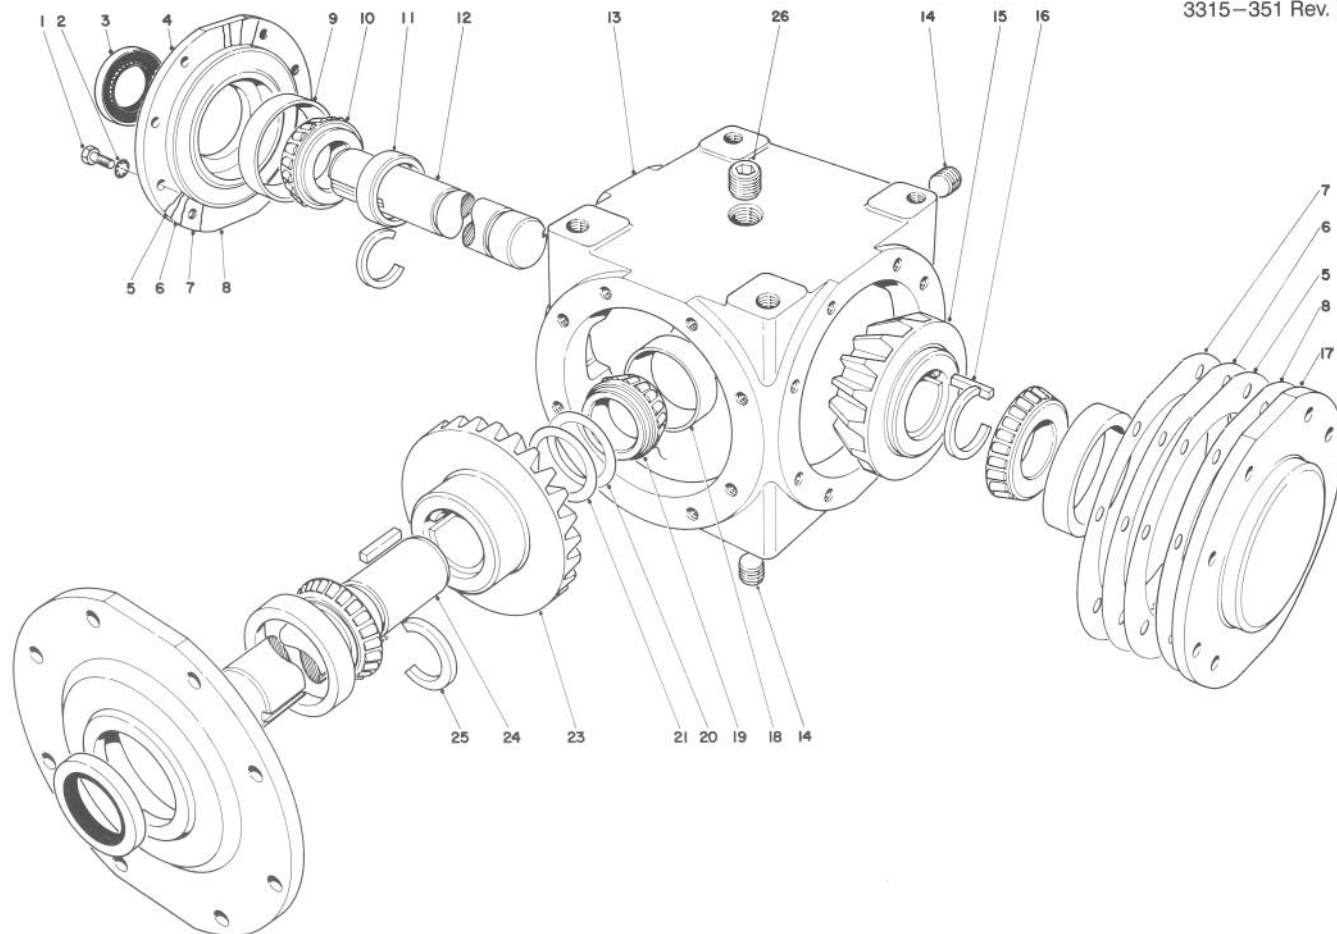


T-0014

GEAR BOX ASSEMBLY (Model No. 07174)

Ref. No.	Part No.	Description	No. Used
1	322-5	Screw - Cap, Hex. Hd.	24
2	3254-2	Washer - Lock	24
3	13-6520	Seal	2
4	70-2420	Cap	2
5	13-6490	Gasket - .002 Thk.	A/R
6	13-6610	Gasket - .003 Thk.	A/R
7	13-6600	Gasket - .005 Thk.	A/R
8	13-6590	Gasket - .015 Thk.	A/R
9	254-57	Cup - Bearing	3
10	254-58	Cone - Bearing	3
11	70-2440	Collar - Thrust	1
12	70-2430	Shaft	1
13	13-6650	Housing	1

Ref. No.	Part No.	Description	No. Used
14	285-12	Plug - Pipe	2
15	70-2450	Gear - 17 Tooth	1
16	70-2380	Key - Tapered	2
17	70-2360	Cap	1
18	254-61	Cup - Bearing	1
19	254-62	Cone - Bearing	1
20	13-6540	Shim - .010 Thk.	A/R
21	13-6630	Shim - .005 Thk.	A/R
22	70-2370	Gear - 23 Tooth	1
23	70-2390	Shaft	1
24	70-2410	Ring - Retaining	3
25	59-1460	Plug - Vent	1

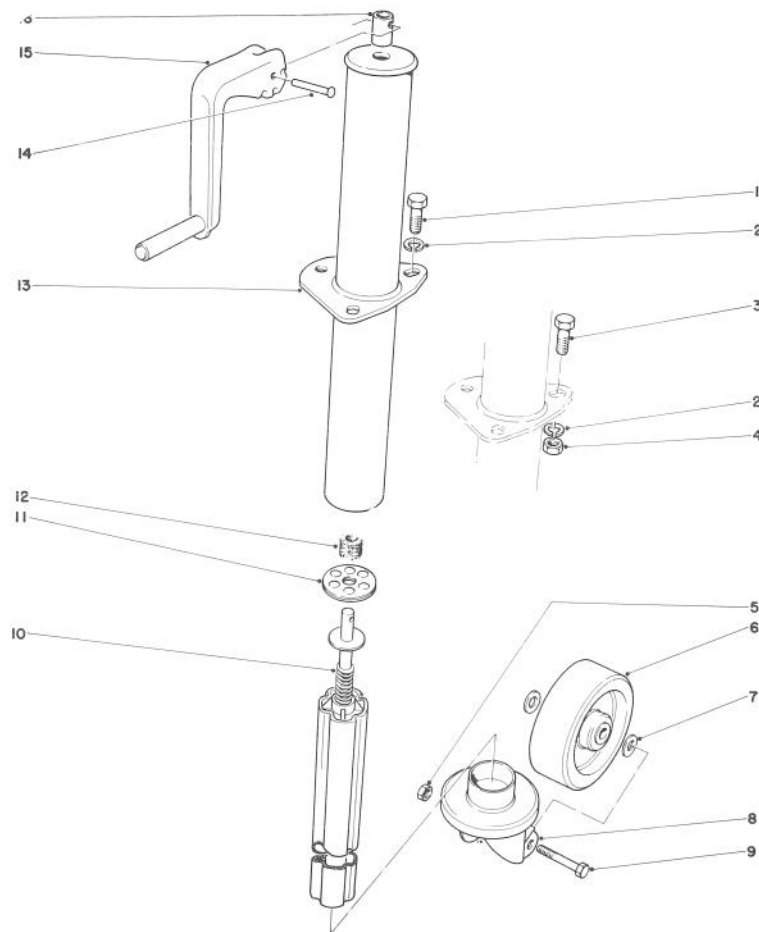 


T-0015

JACK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-4	Screw - Cap, Hex. Hd. (Model 07073 only)	3
2	3253-21	Washer - Lock	3
3	323-5	Screw - Cap, Hex. Hd. (Model 07174 only)	3
4	3217-7	Nut - hex. (Model 07174 only)	3
5	3296-23	Nut - Lock	1
6	13-6440	Wheel	1
7	3256-26	Washer - Flat	2

Ref. No.	Part No.	Description	No. Used
8	13-6450	Bracket - Wheel, Caster	1
9	325-13	Screw - Cap, Hex. Hd.	1
10	13-6750	Ram	1
11	13-3510	Bearing - Thrust	1
12	13-3610	Sleeve - Felt	1
13	13-5680	Assembly - Jack (Incl. Ref. #10-16)	1
14	13-6730	Rivet	1
15	13-6740	Handle	1
16	13-3490	Sleeve	1

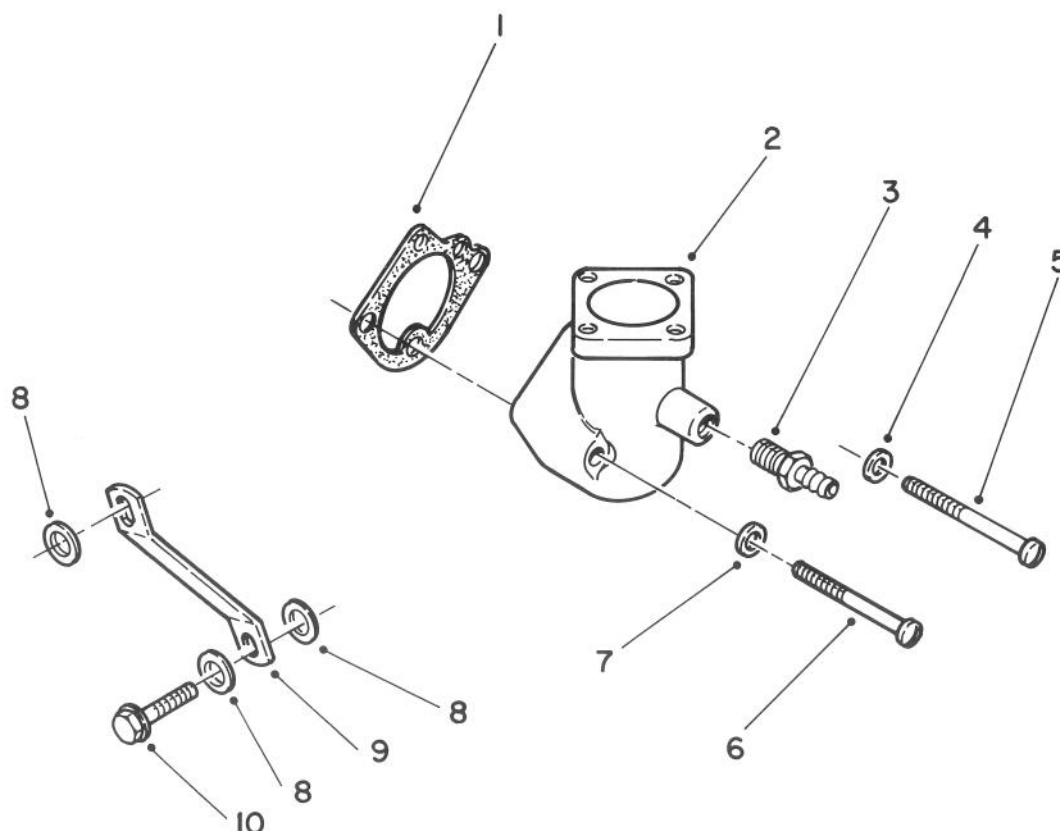 


ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
1	25041 06	Gasket – Elbow	1
2	4875402	Kit – Elbow (Incl. Ref. #1 & 3)	1
3	4815504	Connector	1
4	X-22-9	Washer – Lock, Int. Tooth	2
5	X-50-57	Screw – Mach. Rd. Hd.	2


Ref. No.	Part No.	Description	No. Used
6	X-50-37	Screw – Mach. Rd. Hd.	1
7	X-25-79	Washer – Flat	1
8	X-25-53	Washer – Flat	3
9	277116	Brace – Elbow	1
10	X-132-5	Screw – Hex. Flange Hd.	2

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

 
GROUP 4

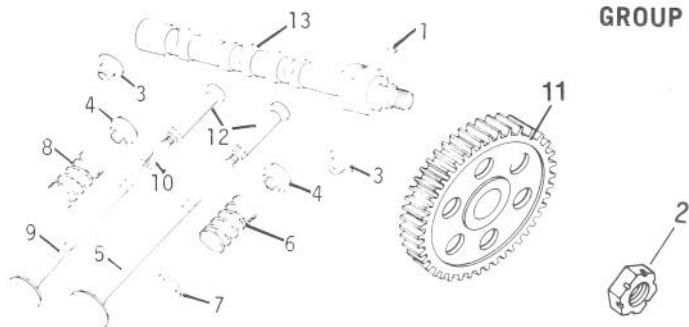


GROUP 5

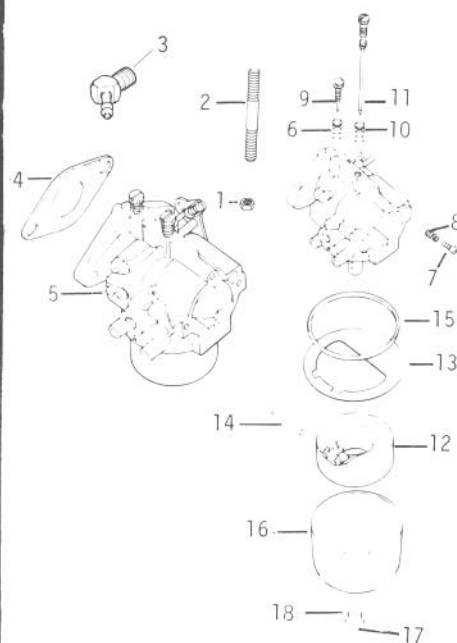 


GROUP 2

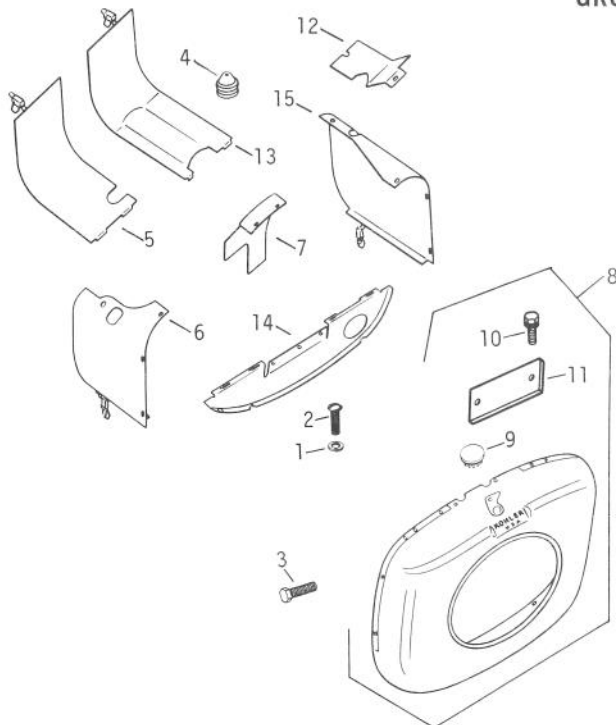 

GROUP 7




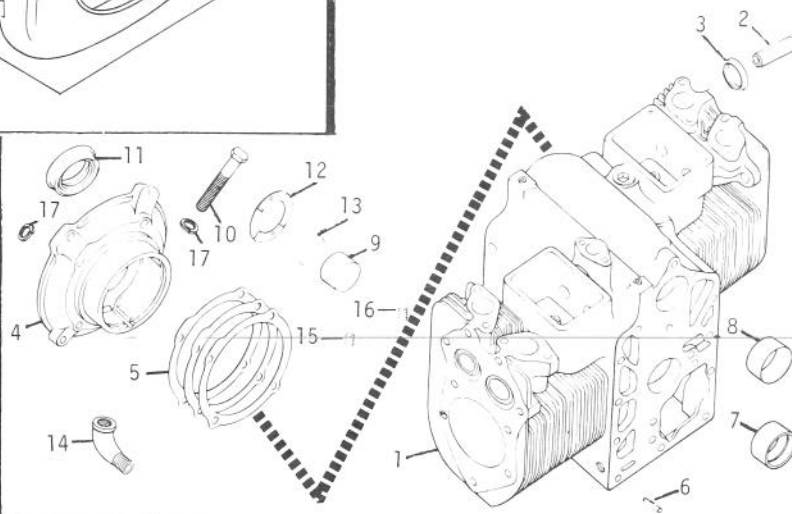 


GROUP 3

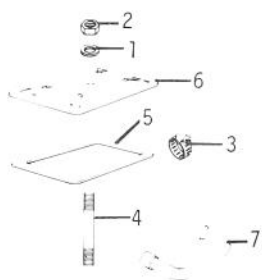 

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		BAFFLES & SHROUD GROUP 2				CARBURETOR GROUP 5	
1	X-20-1	Washer - Lock	2	1	X-82-5	Nut - Hex.	2
2	X-73-1	Screw - Mach. Rd. Hd.	2	2	X-352-10	Stud	2
3	X-133-2	Screw - H.C.	8	3	4715512	Connector	1
3	X-132-5	Screw - H.C.	1	4	271030	Gasket - Carburetor	1
4	243035	Grommet	1	5	4805306	Carburetor Assembly	1
5	277048	Baffle - #1 Barrel	1	6	200380	Spring - Idle Speed	1
6	277051	Baffle - #1 Cylinder Head	1	7	234945	Screw - Idle Fuel Adj.	1
7	277054	Baffle - #1 Upper Cylinder	1	8	200380	Spring - Idle Fuel	1
8	4802711	Blower Housing Assembly	1	9	277210	Needle - Idle Adj.	1
9	X-301-8	Plug - Button	1	10	200383	Spring - Main Fuel	1
10	X-132-6	Screw - Hex. Hd.	2	11	4810301	Needle - Main Fuel Adj.	1
11	4109623	Cover - Knock-Out	1	12	2575703	Kit - Float	1
12	4806301	Baffle	1	13	2504102	Gasket - Bowl Baffle	1
13	277168	Baffle - #2 Barrel	1	14	200376	Pin - Float Hinge	1
14	277230	Baffle - Housing Support	1	15	200375	Gasket - Bowl	1
15	4812404	Baffle - #2 Cylinder Head	1	16	235448	Bowl - Fuel	1
		BREATHER & VENT GROUP 3		17	4710006	Screw - Bowl Retainer	1
1	X-25-12	Washer - Plain	2	18	200372	Gasket - Bowl Screw	1
2	X-81-1	Nut - Hex.	2	19	2575702	Kit - Carburetor Repair	1
3	X-426-3	Clamp - Hose	2			CRANKCASE GROUP 7	
4	220368	Stud - Valve Cover	2	1	4800503	Crankcase Assembly	1
5	270034	Gasket - Valve Cover	2	2	235007-S	Guide - Valve	4
6	270036	Cover - Valve	2	3	230265	Insert - Exhaust Valve	2
7	277392	Hose - Breather	1	4	277199	Plate - Rear Closure	1
		CAMSHAFT & VALVES GROUP 4		5	277087	Gasket - Closure Plate	1
1	X-43-1	Key - Woodruff	1	5	277103	Gasket - Closure Plate	A/R
2	4810004	Nut - Jam	1	5	277115	Gasket - Closure Plate	A/R
3	230011	Retainer - Valve Spring	2	6	277134	Pin - Drive Lock	4
4	5241301	Rotator - Exhaust Valve	2	7	4803006	Bearing	2
5	235008	Valve - Intake	2	8	4815803	Bushing - Camshaft	1
6	235010	Spring - Valve	2	9	277039	Bushing	1
7	235011	Retainer - Valve Spring	4	10	270956	Screw - Cylinder Head	4
8	235168	Spring - Exhaust Valve	2	11	277065	Seal - Rear Oil	1
9	237672	Valve - Exhaust	2	12	277121	Washer - Thrust	2
10	4175510	Kit - Retainer	4	13	160037	Plug - Welch	1
11	4875534	Kit - Camshaft Gear	1	14	4828303	Elbow - Street	1
12	D-277031	Tappet	4	15	4713901	Plug - Pipe	1
13	4801201	Camshaft	1	16	X-75-23	Plug - Pipe	4
				17	X-22-1	Washer - Lock	4

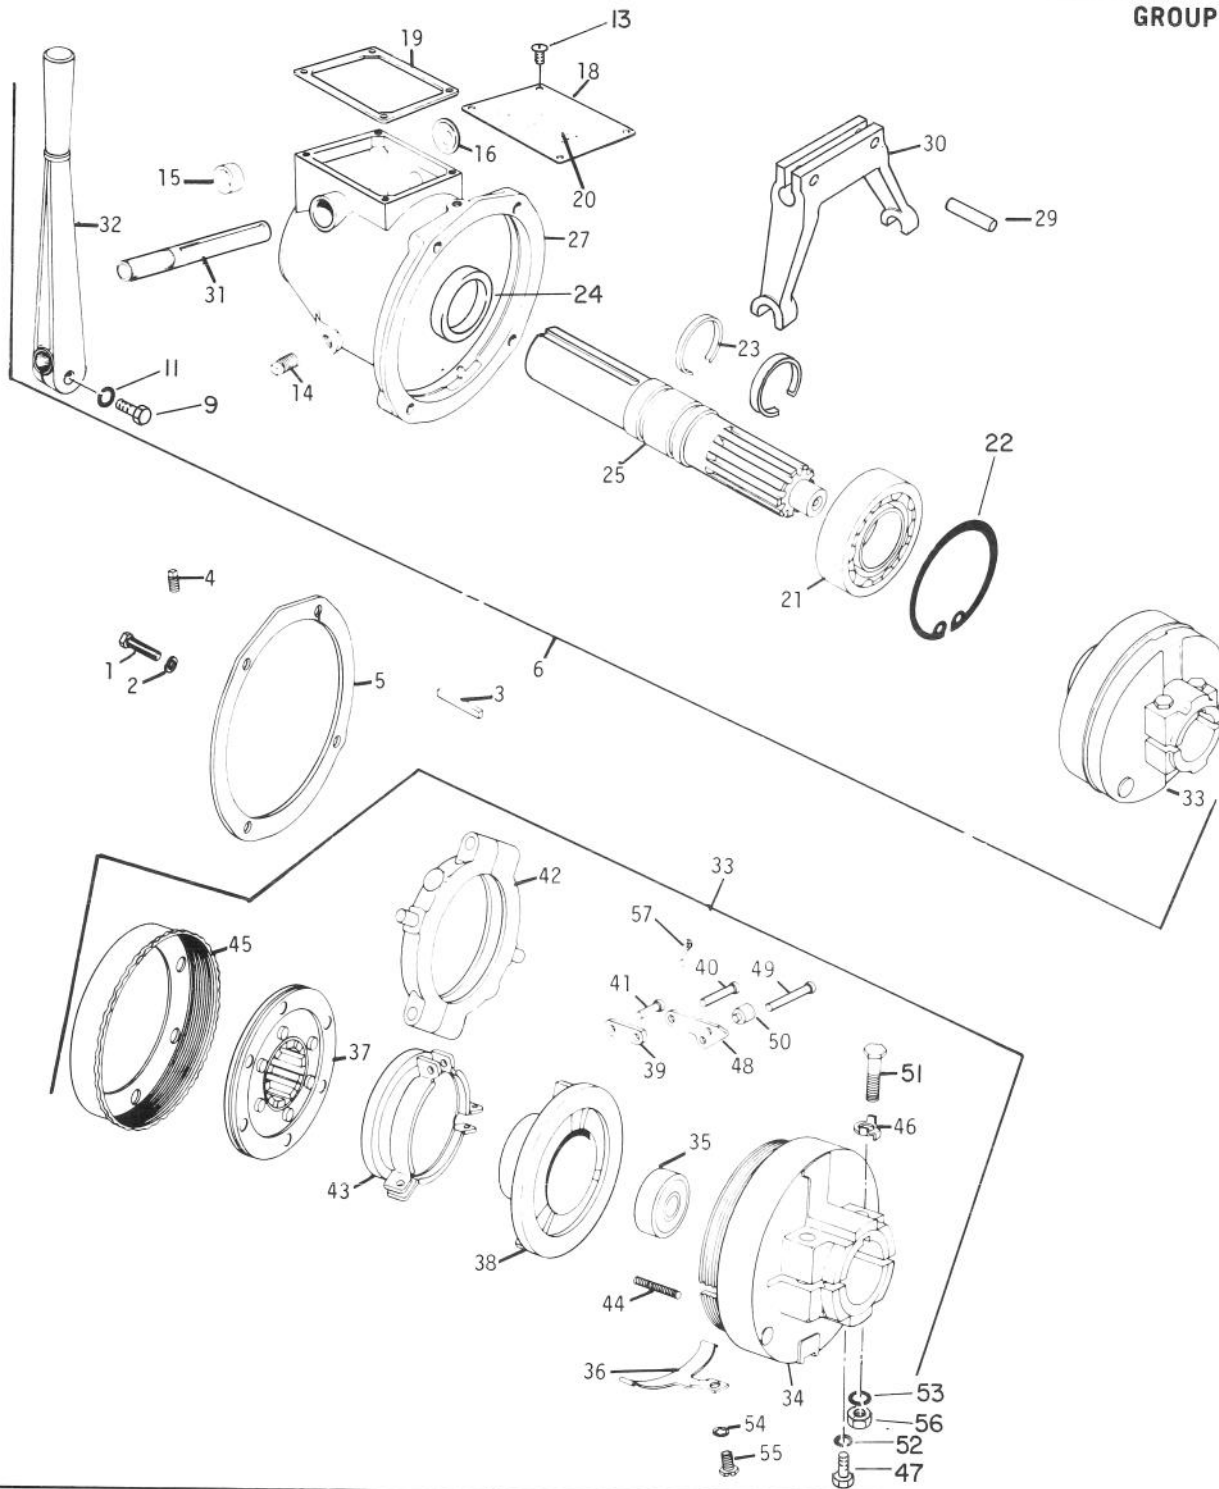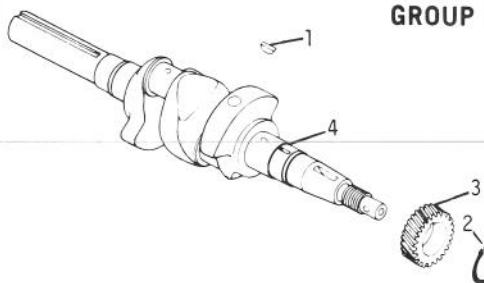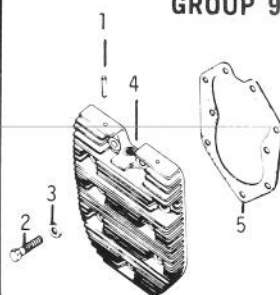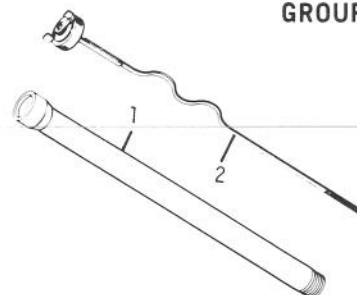    
ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366**GROUP 6****GROUP 8****GROUP 9****GROUP 10**

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
		CLUTCH GROUP 6	
1	X-8-20	Screw - H.C.	4
2	X-23-1	Washer - Lock	4
3	X-286-8	Key	1
4	270219	Plug - Vent	1
5	274042	Gasket - Clutch	1
6	4823902	Clutch Assembly	1
9	X-7-2	Screw - H.C.	1
11	X-22-1	Washer - Lock	1
13	X-50-13	Screw - R.H.	4
14	X-75-2	Plug - Pipe	2
15	X-271-19	Seal - Oil	1
16	X-230-20	Plug - Welch	1
18	234032	Cover	1
19	234033	Gasket - Clutch Cover	1
20	234089	Plate - Instruction	1
21	234035	Bearing - Ball	1
22	4814102	Snap Ring	1
23	234037	Ring - Snap	2
24	234038	Seal - Oil	1
25	234039	Shaft - Drive	1
27	4808103	Housing - Power Take Off	1
29	274101	Pin - Roll	2
30	A-234027	Yoke - Clutch	1
31	274117	Shaft - Yoke	1
32	A-234026	Lever - Shifting	1
33	A-234075	Clutch Assembly	1
34	234041	Housing - Clutch	1
35	234042	Bearing	1
36	234043	Lock - Adjusting	1
37	A-234044	Member - Driven	1
38	A-234045	Plate - Pressure	1
39	234050	Link Connecting	6
40	234051	Pin - Link (Long)	3

Ref. No.	Part No.	Description	No. Used
41	234052	Pin - Link (short)	3
42	A-234053	Bearing - Release	1
43	234054	Sleeve - Release	1
44	234055	Sleeve - Return	3
45	234056	Ring - Adjusting	1
46	234057	Lock - Screw	2
47	234073	Screw - H.C.	1
48	234046	Lever - Pressure Plate	6
49	234047	Pin - Lever	3
50	234048	Roller	3
51	X-7-29	Screw - H.C.	2
52	X-21-1	Washer - Lock	1
53	X-22-1	Washer - Lock	2
54	X-22-11	Washer - I.T.	1
55	X-52-22	Screw - Fil. Hd.	1
56	X-83-4	Nut - Hex	2
57	X-36-4	Pin - Cotter	9
		CRANKSHAFT GROUP 8	
1	X-42-15	Key - Woodruff	1
2	X-269-32	Ring - Retaining	1
3	277009	Gear - Crankshaft	1
4	4801402	Crankshaft	1
		CYLINDER HEAD GROUP 9	
1	4813303	Pin - Roll	2
2	270158	Screw - H.C.	18
3	270889	Washer	18
4	4801502	Head - Cylinder	2
5	4805201	Gasket - Cylinder Head	2
		DIPSTICK GROUP 10	
1	271829	Tube - Dipstick	1
2	277357	Dipstick	1

 ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

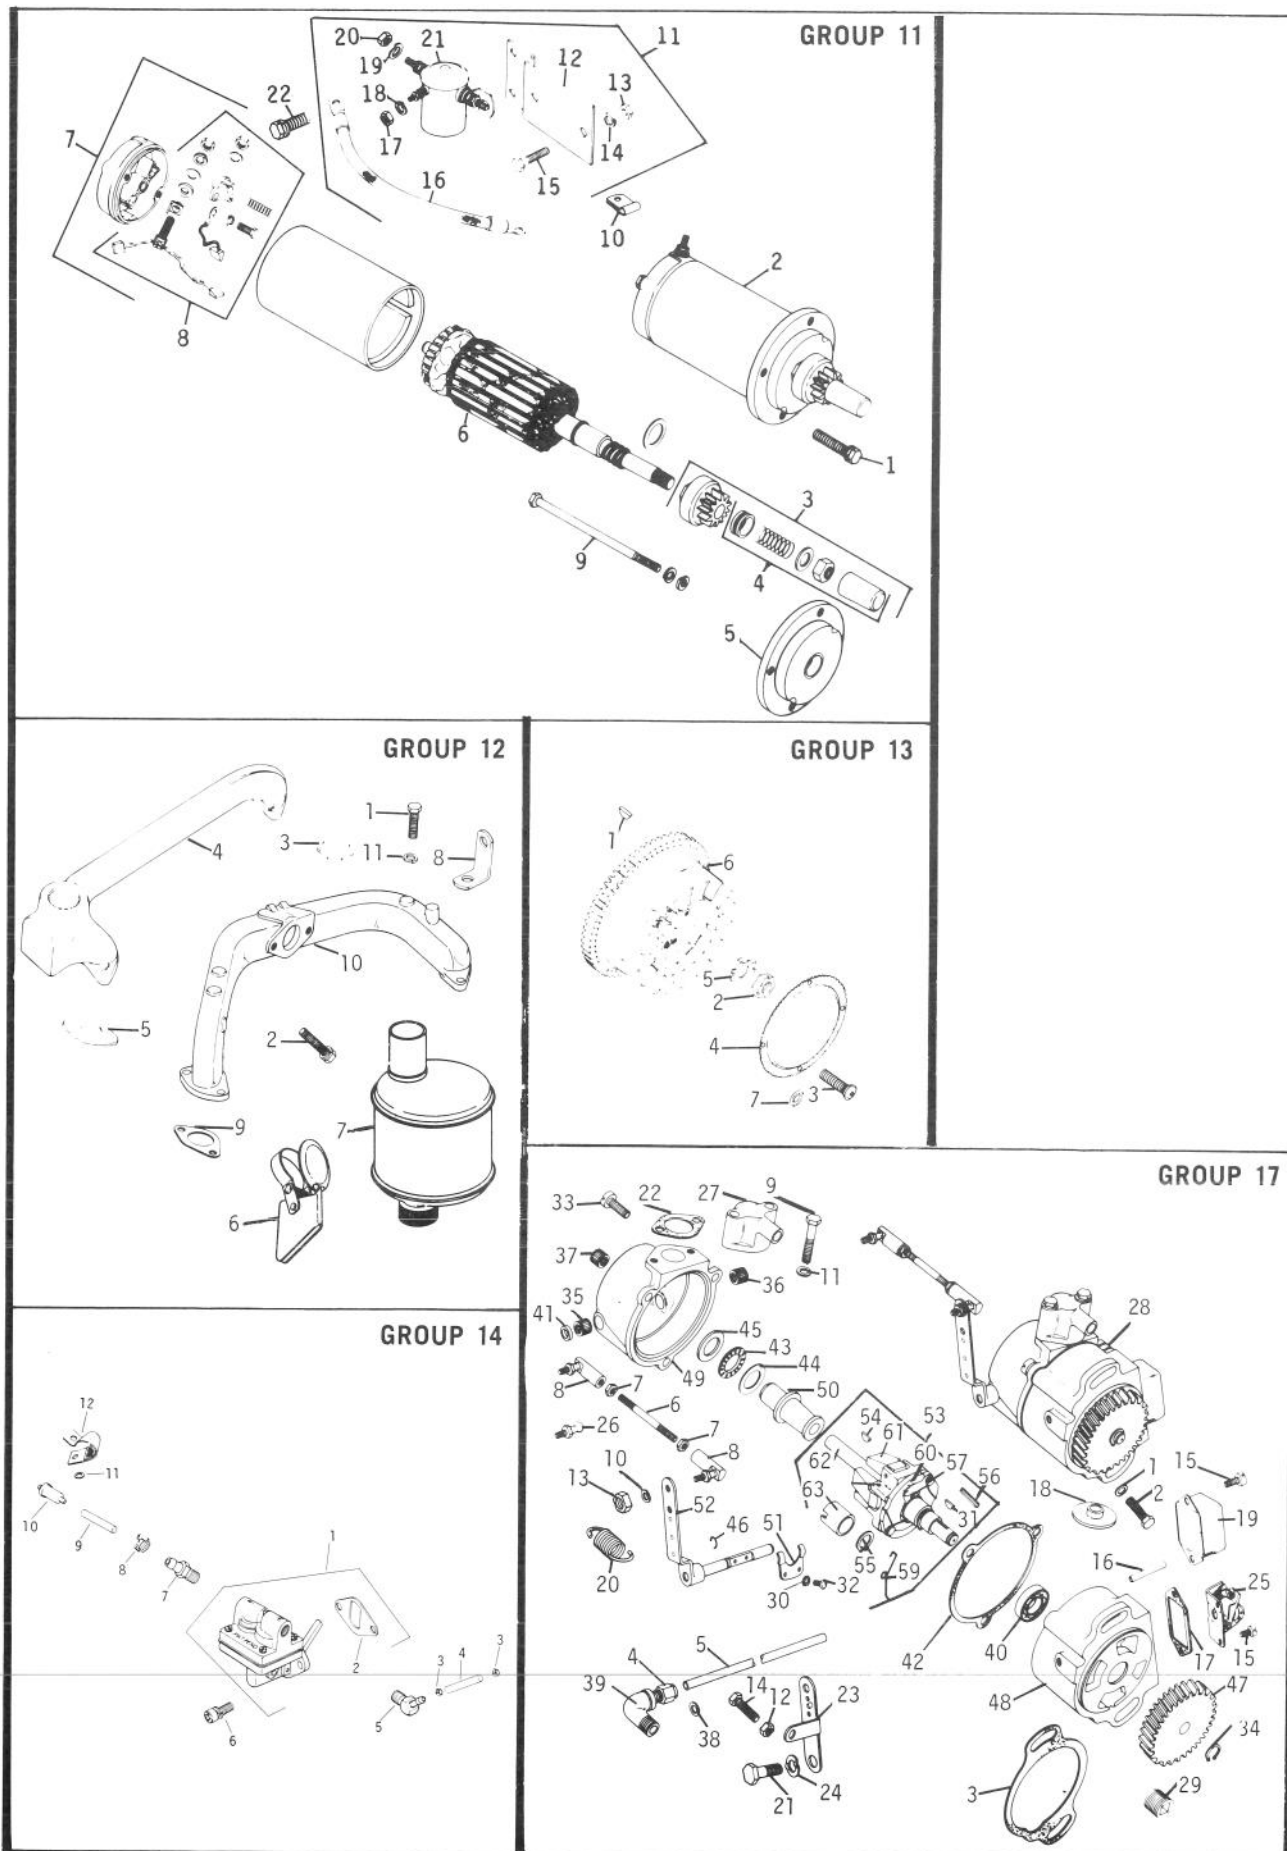


ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		ELECTRIC START GROUP 11				GOVERNOR—GROUP 17	
1	X-154-1	Screw — H.C.	3	1	X-25-20	Washer — Plain	2
2	4809802	Starter Assembly	1	2	X-154-3	Screw — H.C.	2
3	4875502	Kit — Drive	1	3	277078	Gasket — Governor Housing	1
4	4875513	Kit — Drive Parts	1	4	X-343	Connector	1
5	4822703	Cap — Drive End	1	5	4835305	Line — Oil	1
6	277605	Armature	1	6	271151	Rod — Throttle	1
7	4822704	Cap — Commutator End	1	7	X-70-3	Nut — Hex.	2
8	4875515	Kit — Brush	1	8	4520803	Joint — Ball	1
9	4821101	Thru Bolt	2	9	X-5-26	Screw — H.C.	1
10	270154	Clip — Cable	2	10	X-19-1	Washer — Lock	1
11	4821704	Solenoid Assembly	1	11	X-20-1	Washer — Lock	2
12	4812615	Bracket — Solenoid	1	12	X-70-2	Nut — Hex.	1
13	X-81-1	Nut — Hex.	2	13	X-70-3	Nut — Hex.	1
14	X-20-1	Washer — Lock	2	14	X-97-4	Screw — H.H.M.	1
15	X-5-13	Screw — H.C.	2	15	X131-1	Screw	4
*15	X-25-53	Washer — Plain	2	16	X-489-8	Rod — Breaker Push	1
16	4851812	Lead 6" (Solenoid to Start.)	1	17	5204111	Gasket — Breaker Cover	1
17	X-72-4	Nut — Hex.	1	18	220074	Diaphragm	1
18	X-18-2	Washer — Lock	1	19	232535	Cover — Breaker	1
19	X-21-1	Washer — Lock	2	20	271547	Spring Governor	1
20	X-77-2	Nut — Hex.	2	21	275691	Screw Shoulder	1
21	4840403	Solenoid	1	22	277073	Gasket	1
22	X-132-6	Screw — Hex. Hd.	2	23	277080	Lever — Throttle	1
		EXHAUST—GROUP 12		24	277341	Washer — Tension	1
1	X-55-15	Screw — H.C.	4	25	4815003	Breaker	1
2	X-154-4	Screw — H.C.	4	26	4819401	Ball	1
3	156153	Nut — Lock	1	27	A-277905	Cover	1
4	277013	Manifold — Exhaust	1	28	4831028	Kit — Governor	1
5	277091	Gasket — Manifold	2	29	X-75-23	Plug — Pipe	1
6	277363	Cap — Muffler	1	30	X-18-1	Washer — Lock	2
7	277364	Muffler	1	31	X-42-2	Key — Woodruff	1
8	4744502	Strap — Lifting	2	32	X-49-1	Screw — R.H.M.	2
9	4805202	Gasket — Intake	2	33	X-174-2	Screw — F.H.	3
10	4816402	Manifold — Intake	1	34	X-269-15	Ring — Retainer	1
11	X-21-1	Washer — Lock	4	35	X-293-3	Bearing — Needle	1
		FLYWHEEL—GROUP 13		36	X-293-2	Bearing — Needle	1
1	X-45-3	Key — Woodruff	1	37	4803002	Bearing — Needle	1
2	X-80-1	Nut — Hex.	1	38	237022	Washer	1
3	4708608	Screw — T.H.	4	39	X-324-7	Elbow	1
4	277470	Screen — Grass	1	40	240202	Bearing — Ball	1
5	277595	Nut — Lock	1	41	275055	Seal — Oil	1
6	4802514	Flywheel	1	42	277099	Gasket — Governor Cover	1
7	X-25-52	Washer — Plain	4	43	277100	Bearing — Roller Thrust	1
		FUEL PUMP—GROUP 14		44	277101	Race — Thrust Bearing	1
1	4855902	Pump — Fuel Assembly	1	45	277102	Race — Thrust Bearing	1
2	2504105	Gasket — Fuel Pump	1	46	277104	Ring — Retaining	1
3	2523701	Clamp — Hose	2	47	4804311	Gear — Governor	1
4	4835307	Hose — Fuel	1	48	4808102	Housing	1
5	47155 12	Fitting — Fuel	1	49	4809605	Cover — Governor	1
6	4708608	Screw — T.H.	2	50	4875501	Kit — Sleeve	1
7	X-380-1	Connector — Straight	1	51	4847102	Yoke — Governor	1
8	X-426-9	Clamp — Hose	2	52	4808703	Lever — Governor	1
9	2535302	Hose — Fuel	1	53	4842008	Shaft — Governor Assy.	1
10	4505001	Filter — Fuel	1	54	X-42-8	Key — Woodruff	1
11	X-25-68	Washer — Plain 1/4	1	55	X-269-4	Ring — Retaining	1
12	2515401	Clamp — Filter	1	56	X-280-8	Pin — Roll	1
				57	230080	Pin — Flyweight	1
				59	4808901	Spring	2
				60	277114	Flyweight	2
				61	277117	Weight — Governor	4
				62	277007	Shaft — Governor	1
				63	4814904	Breaker — Cam	1

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

 
GROUP 18

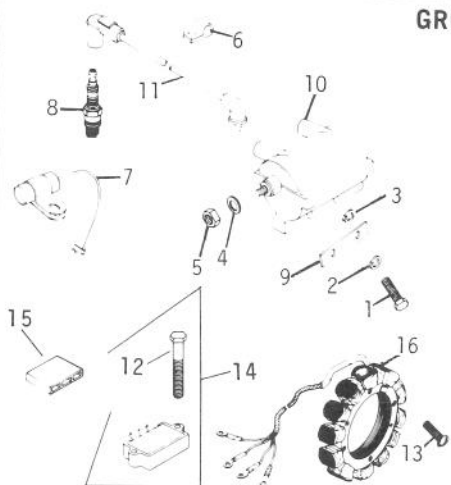


GROUP 22

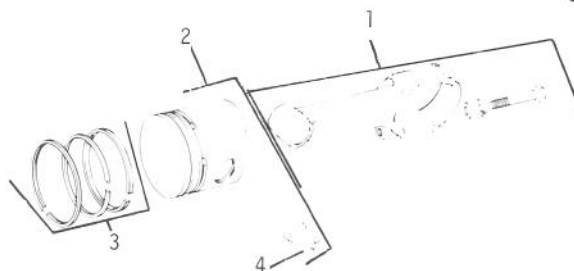 


GROUP 25

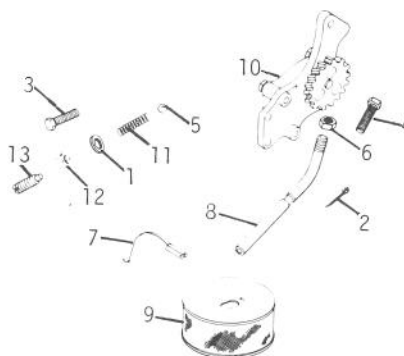 


GROUP 19

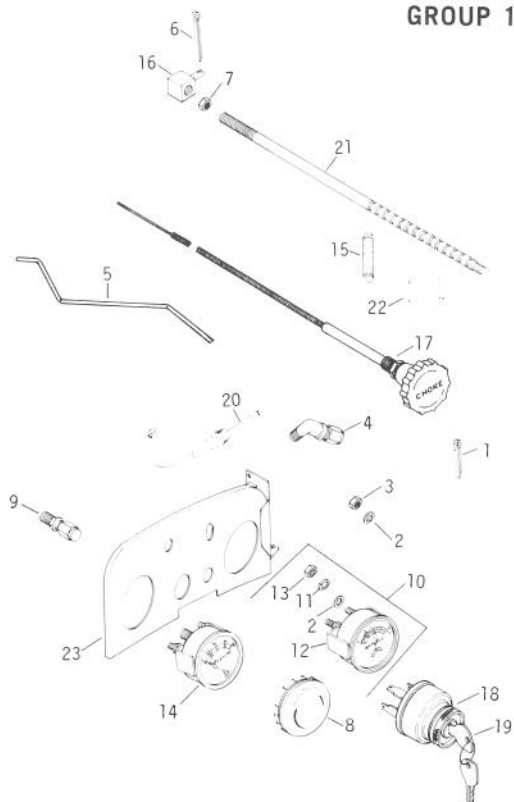 


GROUP 26

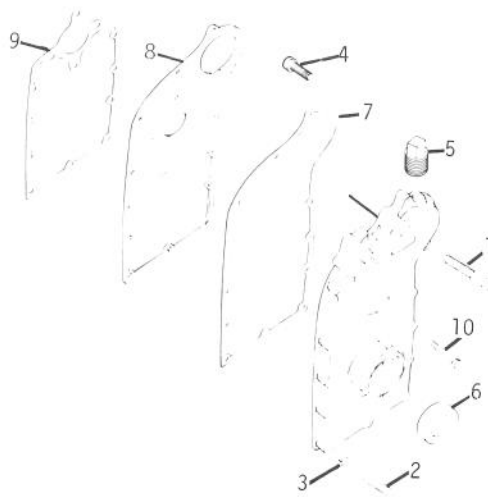 

GROUP 21

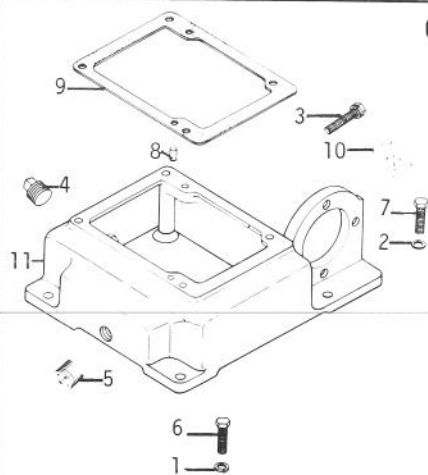 

GROUP 29

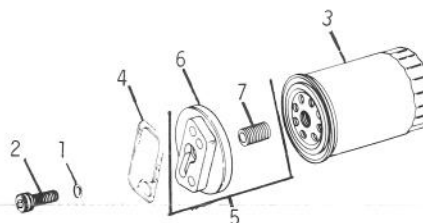 

ENGINE KOHLER MODEL NO. K582CS TYPE NO. 36366

Ref. No.	Part No.	Description	No. Used
IGNITION-GROUP 18			
1	X-5-26	Screw - H.C.	2
2	X-19-1	Washer - Lock	2
3	X-20-1	Washer - Lock	2
4	X-25-63	Washer - Plain	1
5	X-70-3	Nut - Hex	2
6	210281	Clip - Cable	2
7	230722	Condenser	1
8	235041-5	Plug - Spark	2
9	271694	Plate - Coil Mounting	2
10	277375	Coil	1
11	4834804	Lead - High Tension	2
12	X-132-5	Screw - H.C.	2
13	X-67-51	Screw - R.H.M.	4
14	2575503	Kit Regulator (Incl. Ref. #12)	1
15	236602	Connector	1
16	237878	Stator	1
	4851809	Lead - Switch to solenoid 2 wire - 14 ga. - 33" insulated barrel eyelet and uninsulated push on tab terminals - 14 ga. - 27" - insulated barrel eyelet terminals.	1
INSTR. PANEL-GROUP 19			
1	X-36-4	Pin - Cotter	1
2	X-25-7	Washer - Plain	6
3	X-70-8	Nut - Hex.	1
4	X-324-7	Elbow 1/8 N.P.T.F.	1
5	277534	Line - Oil Gauge	1
6	X-36-1	Pin - Cotter	1
7	X-82-5	Nut - Hex.	1
8	X-301-8	Button - Plug	1
9	X-721-1	Connector - Female	1
10	4875518	Kit - Ammeter	1
11	X-19-1	Washer - Lock	4
12	4812609	Bracket - Ammeter	1
13	X-70-8	Nut - Hex.	3
14	270231	Gauge - Oil Pressure	1
15	270409	Spring	1
16	270410	Block - Swivel	1
17	277148	Cable - Choke	1
18	4809901	Switch - Key	1
19	4834001	Key	1
20	4832302	Holder - Fuse (Incl. 4130401 Fuse)	1
21	4842003	Shaft - Governor Control	1
22	4815501	Connector	1
23	277173	Panel - Instrument	1
	2551811	Lead - 14 ga. - 18" uninsulated push on tab - insulated barrel eyelet terminals	1
	4751840	Lead - 14 ga. - 14" uninsulated push on tab terminals	1
	4130401	Fuse	1

Ref. No.	Part No.	Description	No. Used
OIL PAN-GROUP 21			
1	X-22-1	Washer - Lock	4
2	X-25-44	Washer - Plain	1
3	X-67-62	Screw - Tapping	1
4	X-75-6	Plug - Pipe	1
5	X-75-42	Plug - Pipe	1
6	X-129-11	Screw - H.C.	4
7	X-154-6	Screw - H.C.	1
8	230125-5	Shaft - Governor	2
9	277014	Gasket - Oil Pan	1
10	4812608	Bracket - Starter Support	1
11	4875517	Kit - Oil Pan	1
PISTON & ROD-GROUP 22			
1	4806716	Rod - Conn. Assy. (Std.)	2
	4806717	Rod - Conn. Assy. (.010)	2
2	4887421	Piston w/Ring Set (Std.)	2
	4887422	Piston w/Ring Set (.003)	2
	4887423	Piston w/Ring Set (.010)	2
	4887424	Piston w/Ring Set (.020)	2
	4887425	Piston w/Ring Set (.030)	2
3	4710805	Ring Set (Std. & .003)	2
	4710806	Ring Set (.010)	2
	4710807	Ring Set (.020)	2
	4710808	Ring set (.030)	2
4	4701801	Retainer	4
OIL PUMP-GROUP 25			
1	X-25-94	Washer - Plain	1
2	X-36-6	Pin - Cotter	1
3	X-154-2	Screw - H.C.	1
4	X-154-5	Screw - H.C.	1
5	X-212-3	Ball - Steel	1
6	X-629-1	Palnut	1
7	270085	Clip - Oil Tube	1
8	277201	Tube - Oil Inlet	1
9	277202	Strainer - Oil	1
10	4839323	Pump - Oil	1
11	4808903	Spring Relief Valve	1
12	X-101-6	Nut - Elastic Stop	1
13	277694	Screw - Socket Set	1
GEAR COVER-GROUP 26			
1	X-6-11	Screw - H.C.	4
2	X-6-22	Screw - H.C.	7
3	X-21-1	Washer - Lock	14
4	X-55-6	Screw - H.C.	1
5	X-75-2	Plug - Pipe	1
6	5203208	Seal - Front Oil	1
7	277020	Gasket - Gear Cover	1
8	277021	Plate - Gear Cover	1
9	277022	Gasket - Gear Cover Plate	1
10	277086	Screw - H.C.	2
11	277493	Cover - Gear	1
OIL FILTER-GROUP 29			
1	X-25-44	Washer - Plain	2
2	X-55-9	Screw - H.C.	2
3	277233	Filter - Oil	1
4	48041 03	Gasket	1
5	48 18003	Adapter - Filter Assembly	1
6	4802902	Adapter - Oil Filter	1
7	277234	Nipple	1
	4852233	Short Block	1
	4875533	Gasket Set w/Seals	1
	4800402	Gasket Set w/o Seals	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-3175	Cover - Battery	4 39 1	13-3720	Key - Square	15 10 1
3-5967	Support - Battery	4 37 2	13-3740	Shaft - Jack	4 1 1
3-8135	Spring	4 48 2	13-3740	Shaft - Jack	6 1 1
3-9155	Key - Square	2 52 1	13-3790	Shaft - Fan	13 6 1
4-1920	Washer	2 53 1	13-3790	Shaft - Fan	10 6 1
5-0678	Rod - Clamp, Battery	5 51 2	13-3850	Plate - Blower Access	10 12 1
5-0738	Key - Square	15 14 4	13-3850	Plate - Blower Access	13 12 1
5-1718	Key - Square	6 3 1	13-3930	Tank - Gas	1 26 1
8-2329	Air Cleaner Assembly	11 64 1	13-3960	Strap Assy.	1 25 2
12-8810	Spring	9 21 2	13-3970	Felt Strip	1 24 2
13-0050	Spring	6 29 2	13-3970	Strip - Felt	2 39 2
13-0050	Spring	4 45 2	13-3990	Handle - Trip	6 26 1
13-0060	Yoke - Hitch	5 61 1	13-3990	Handle - Trip	4 42 1
13-0100	Block - Pivot	6 13 2	13-4070	Chain	7 12 1
13-0100	Block - Pivot	4 16 2	13-4310	Tongue	3 45 1
13-0320	Collar - Lock	7 45 2	13-4340	Sprocket	6 36 1
13-0330	Block - Pivot	10 40 1	13-4340	Sprocket	5 67 1
13-0330	Block - Pivot	7 47 2	13-4490	Guard - Sheave	6 31 1
13-0330	Block - Pivot	13 40 1	13-4490	Guard - Sheave	5 55 1
13-0360	Spacer	7 36 2	13-4560	Weight - Flap	10 48 18
13-0480	Spring	6 25 1	13-4560	Weight - Flap	13 48 18
13-0480	Spring	4 41 1	13-4570	Sprocket - Idler	16 52 1
13-0510	Pin - Idler	4 33 1	13-4590	Chain	16 53 1
13-0560	Spacer	7 34 2	13-4700	Flap	10 47 1
13-0600	Pulley - Idler	4 32 1	13-4700	Flap - Rubber	13 47 1
13-1390	Retainer - Flap	10 50 1	13-4760	Flap - Lower	10 44 1
13-1390	Retainer - Flap	13 50 1	13-4760	Flap - Lower	13 44 1
13-1420	Cover - Inspection	10 30 2	13-4800	Guard - Belt	11 54 1
13-1420	Cover - Inspection	13 30 2	13-4800	Guard - Belt	14 57 1
13-2240	Key - Square	10 5 1	13-4880	Sprocket	6 24 1
13-2240	Key - Square	13 5 1	13-4890	Sprocket	7 16 1
13-2451	Plate - Finger	7 27 60	13-4930	Plate - Finger	7 25 3
13-2480	Clamp - Finger	7 31 276	13-4940	Plate - Finger	7 28 3
13-2640	Belt	11 57 1	13-4960	Shaft - Plate, Finger	7 22 6
13-2640	Belt	14 59 1	13-5000	Main Frame	1 22 1
13-2650	V-Belt	2 51 1	13-5250	Rake - Reel	7 26 1
13-2670	Sheave	5 64 1	13-5370	Flex Tip Reel Assembly	8 1 1
13-2680	Bushing	4 27 1	13-5490	Bell Crank - Lift, R.H.	6 18 1
13-2800	Pulley	10 4 1	13-5490	Bell Crank - Lift, R.H.	4 21 1
13-2810	Key - Square	10 9 1	13-5500	Bell Crank - Lift, L.H.	6 28 1
13-2810	Key - Square	13 9 1	13-5500	Bell Crank - Lift, L.H.	4 44 1
13-2840	Key - Square	4 2 1	13-5520	Spacer	4 9 2
13-2840	Key - Square	6 2 1	13-5520	Spacer	6 9 2
13-2840	Key - Square	7 23 1	13-5530	Rod - Adjustment, Spring	6 30 2
13-2870	Wheel - Gauge	7 49 2	13-5530	Rod - Adjustment, Spring	4 46 2
13-2930	Decal - Slow Moving Vehicle	9 10 1	13-5540	Link - Lift	7 39 2
13-2970	Bushing	10 3 1	13-5550	Arm - Gauge Wheel	7 48 2
13-3020	Sprocket	8 54 1	13-5570	Stud - Pivot	7 50 2
13-3070	Spacer	7 37 3	13-5590	Rod - Adjustment	8 51 2
13-3080	Kit - Coupler, Ball	5 60 1	13-5620	Guard - Chain	7 1 1
13-3090	Spring	7 30 66	13-5670	Spacer - Locking	8 52 2
13-3130	Flap - End	10 45 2	13-5680	Assembly - Jack	18 13 1
13-3130	Flap - End	13 45 2	13-5700	Hook - Transport	7 33 2
13-3320	Pulley	1 4 1	13-5790	Shield - Shaft	3 50 1
13-3330	Bushing	1 1 1	13-5870	Shield - Front	3 48 1
13-3350	Bracket - Mounting	13 10 1	13-5880	Shield - Shaft, Drop	3 49 1
13-3350	Support - Shield	10 10 1	13-5900	Shaft - Drive, Front	15 21 1
13-3420	Assembly - Fan	13 20 1	13-5910	Shaft - Drive, Side	15 13 1
13-3420	Fan Assembly	10 20 1	13-6000	Base - Box, Gear	3 23 1
13-3490	Sleeve	18 16 1	13-6020	Sheave	15 4 1
13-3510	Bearing - Thrust	18 11 1	13-6030	Pulley	13 4 1
13-3610	Sleeve - Felt	18 12 1	13-6050	Bushing	15 3 1
13-3710	Washer	5 68 1	13-6070	Bushing	13 3 1
13-3710	Washer - Flat	9 25 2	13-6090	Cover - Guard, Side	13 52 1
13-3710	Washer - Special	7 15 1	13-6110	Sprocket	15 7 1
13-3710	Washer - Special	6 37 1	13-6120	Frame	3 18 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
13-6200	Pin - Hitch	3 46 1	42-2340	Centralizer - Guard	15 33 1
13-6240	Rod - Adjustment	3 20 1	42-2350	Shield - Inner	15 37 1
13-6260	Bolt - Adjustment	6 8 2	42-2360	Yoke & Tube Assembly	15 25 1
13-6260	Screw - Adjustment	4 8 2	42-2370	Yoke and Shaft	15 26 1
13-6280	Blower	10 33 1	42-2380	Shield - Outer	15 31 1
13-6280	Blower and Throat	13 33 1	42-9930	Strap - Hopper	9 31 2
13-6330	Key - Square	4 3 1	49-4260	Ball	5 59 1
13-6360	Rod - Lift	10 38 1	53-8591	Hose - Air Cleaner	11 65 1
13-6360	Rod - Lift	13 38 1	55-7290	Battery	4 38 1
13-6390	Handle - Flap	10 35 1	56-6210	Bearing	4 24 2
13-6390	Handle - Flap	13 35 1	56-6220	Bearing	10 25 2
13-6410	Decal	13 13 1	56-6220	Bearing	13 25 2
13-6410	Decal	11 56 1	56-6230	Bearing	7 21 2
13-6440	Wheel	18 6 1	56-6230	Bearing	6 35 2
13-6450	Bracket - Wheel, Caster	18 8 1	56-6230	Bearing	5 66 2
13-6490	Gasket - .002 Thk.	17 5 A/R	56-6250	Bearing	15 8 4
13-6520	Seal	17 3 2	59-1460	Plug - Vent	17 26 1
13-6540	Shim - .010 Thk.	17 20 A/R	61-5950	Decal	4 40 1
13-6590	Gasket - .015 Thk.	17 8 A/R	62-3220	Wheel Assembly	3 10 2
13-6600	Gasket - .005 Thk.	17 7 A/R	62-3220	Wheel Assembly	1 17 2
13-6610	Gasket - .003 Thk.	17 6 A/R	63-5200	Trailing Arm - R.H.	8 55 1
13-6630	Shim - .005 Thk.	17 21 A/R	63-5210	Spindle - Driveside	6 34 1
13-6650	Housing	17 13 1	63-5210	Spindle - Driveside	5 65 1
13-6670	Pin - Connector	16 50 1	63-5250	Spacer	8 56 1
13-6680	Chain	16 49 1	63-5300	Trailing Arm - L.H.	7 41 1
13-6690	Coupling Half	15 15 2	63-7721	Hose - Fuel Line	2 43 1
13-6700	Finger - Nylon	7 29 276	63-8360	Key	1 30 2
13-6710	Cap - Weather, Muffler	1 5 1	65-5871	Tube - Manual	9 34 1
13-6720	Muffler	1 6 1	65-5890	Cap - Tube	9 35 2
13-6730	Rivet	18 14 1	67-5360	Decal	10 11 1
13-6740	Handle	18 15 1	67-5360	Decal	13 11 1
13-6750	Ram	18 10 1	67-5360	Decal	2 49 1
13-6760	Decal - Caution	9 6 1	67-5360	Decal - Caution	3 19 4
13-6790	Cable - Battery	4 47 2	67-7920	Decal - Toro	9 17 2
13-6890	Guide - Rope	2 37 1	67-9420	Engine	1 7 1
13-6890	Guide - Rope	3 33 1	67-9730	Bracket - Air Cleaner	11 63 1
13-6910	Spacer - Guide, Rope	2 36 1	67-9770	Decal - Hopper	9 33 2
13-6910	Spacer - Guide, Rope	3 32 1	70-2350	Gear Box - Complete	15 17 1
13-7140	Panel - Top	9 2 1	70-2360	Cap	17 17 1
13-7180	Gate	9 13 1	70-2370	Gear - 23 Tooth	17 23 1
13-7350	Panel - Bottom, (R.H.)	9 29 1	70-2380	Key - Tapered	17 16 2
13-7360	Panel - Bottom, L.H.	9 23 1	70-2390	Shaft	17 24 1
13-7370	Panel - Bottom, (Middle)	9 28 1	70-2410	Ring - Retaining	17 25 3
13-7380	Screen - Top, R.H.	9 1 1	70-2420	Cap	17 4 2
13-7390	Screen - Top, L.H.	9 5 1	70-2430	Shaft	17 12 1
13-7400	Hinge - Bracket	9 16 3	70-2440	Collar - Thrust	17 11 1
13-7430	Decal - Warning	9 14 1	70-2450	Gear - 17 Tooth	17 15 1
13-7460	Plate - Caution	3 43 1	92-1187	Quick Disconnect Kit	16 * 1
13-7460	Plate - Plate	2 47 1	92-1580	Bearing Kit	15 32 2
20-9580	Rope	3 31 1	92-1581	Decal - Safety	16 58 1
20-9580	Rope	2 35 1	92-1582	Decal - Safety	15 35 1
27-7220	Detergent - Cleaning, Air	12 * A/R	92-2409	Cage Assembly	9 * 1
33-1260	Assembly - Cover	12 11 1	217-103	Bolt - Wheel	3 8 12
33-1270	Bowl - Clear	12 10 1	217-103	Bolt - Wheel	1 14 12
33-1280	Assembly - Sleeve	12 9 1	2115-76	Kit - Center Parts	15 43 2
33-1300	Assembly - Element	12 6 1	2115-78	Ring - Lock	16 47 8
33-1310	Baffle	12 5 1	2115-79	Ring - Lock	15 27 8
33-1320	Assembly - Cup	12 4 1	2115-80	Fitting - Grease	15 20 4
33-1330	Assembly - Nut	12 3 1	2115-81	Yoke	15 42 2
33-1340	Assembly - Clamp	12 2 1	2115-85	Fitting - Grease	15 34 1
33-1350	Assembly - Band, Mounting	12 1 2	2115-88	Bearing & Cross Kit	15 30 2
42-1860	Front Shaft Assembly	15 36 1	2115-94	Yoke - Rear	15 38 1
42-1870	Rear Shaft Assembly	15 19 1	222-8	Cap - Gas	1 27 1
42-2290	Yoke and Tube	16 44 1	231-118	Tire	3 7 2
42-2300	Yoke and Shaft	16 46 1	231-118	Tire	1 15 2
42-2310	Yoke - Front	15 29 1	232-24	Stem - Valve	3 9 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
232-24	Stem - Valve	1 16 2	322-7	Screw - Cap, Hex. Hd.	5 63 2
235-15	Grip - Handle	3 28 1	323-2	Screw - Cap, Hex. Hd.	3 39 2
235-15	Grip - Handle	2 32 1	323-2	Screw - Cap, Hex. Hd.	3 41 4
242-54	Hub	1 18 2	323-4	Screw - Cap, Hex. Hd.	18 1 3
242-54	Wheel - Hub	3 11 2	323-4	Screw - Cap, Hex. Hd.	7 4 7
242-55	Cap - Hub	3 1 2	323-5	Screw - Cap, Hex. Hd.	18 3 3
242-55	Cap - Hub	1 8 2	323-5	Screw - Cap, Hex. Hd.	4 49 4
2412-40	Clamp - Conduit	3 34 3	323-6	Screw - Cap, Hex. Hd.	10 34 8
2412-40	Clamp - Conduit	2 38 3	323-6	Screw - Cap, Hex. Hd.	13 34 8
2412-42	Clamp	11 66 2	323-7	Screw - Cap, Hex. Hd.	10 15 6
2412-93	Clamp	2 44 1	323-7	Screw - Cap, Hex. Hd.	13 15 6
2412-102	R-Clamp	9 36 2	323-8	Screw - Cap, Hex. Hd.	3 25 1
2412-108	Clamp - Hose	2 57 2	323-8	Screw - Cap, Hex. Hd.	1 28 1
250-5	Strap - Locking	4 36 2	323-8	Screw - Cap, Hex. Hd.	13 41 1
253-127	Seal	3 14 2	323-9	Screw - Cap, Hex. Hd.	10 41 1
253-127	Seal	1 21 2	323-9	Screw - Cap, Hex. Hd.	7 44 6
254-57	Cup - Bearing	17 9 3	323-10	Screw - Cap, Hex. Hd.	2 55 1
254-58	Cone - Bearing	17 10 3	324-7	Screw - Cap, Hex. Hd.	4 10 4
254-61	Cup - Bearing	3 6 2	324-7	Screw - Cap, Hex. Hd.	6 10 4
254-61	Cup - Bearing	1 13 2	325-3	Screw - Cap, Hex. Hd.	3 15 2
254-61	Cup - Bearing	17 18 1	325-4	Screw - Cap, Hex. Hd.	15 18 4
254-62	Cone - Bearing	3 5 2	325-5	Screw - Cap, Hex. Hd.	3 22 4
254-62	Cone - Bearing	1 12 2	325-5	Screw - Cap, Hex. Hd.	15 39 4
254-62	Cone - Bearing	17 19 1	325-5	Screw - Cap, Hex. Hd.	3 52 4
254-65	Cone - Bearing	3 13 2	325-6	Screw - Cap, Hex. Hd.	15 12 4
254-65	Cone - Bearing	1 20 2	325-6	Screw - Cap, Hex. Hd.	10 24 7
254-66	Cup - Bearing	3 12 2	325-6	Screw - Cap, Hex. Hd.	13 24 7
254-66	Cup - Bearing	1 19 2	325-6	Screw - Cap, Hex. Hd.	9 27 3
256-298	Bushing	8 59 2	325-7	Screw - Cap, Hex. Hd.	2 50 4
2710-11	Link - Connecting	7 10 1	325-7	Screw - Cap, Hex. Hd.	11 58 1
2710-15	Link - Offset	7 11 1	325-7	Screw - Cap, Hex. Hd.	14 60 1
2710-29	Link - Offset	16 56 1	325-9	Screw - Cap, Hex. Hd.	7 43 4
2710-30	Link - Connecting	16 54 1	325-12	Screw - Cap, Hex. Hd.	16 55 1
282-22	Clevis	6 16 2	325-13	Screw - Cap, Hex. Hd.	18 9 1
282-22	Clevis	4 19 2	325-14	Screw - Cap, Hex. Hd.	7 8 3
283-2	Pin - Clevis	6 15 2	327-6	Screw - Cap, Hex. Hd.	5 62 2
283-2	Pin - Clevis	4 18 2	328-10	Bolt - Hex. Hd.	7 40 1
283-39	Pin - Clevis	9 11 3	328-23	Bolt - Hex. Hd.	3 36 2
283-46	Pin - Clevis	15 40 1	3217-5	Nut - Hex.	10 51 2
285-12	Plug - Pipe	17 14 2	3217-5	Nut - Hex.	13 51 2
302-2	Fitting - Grease	16 45 1	3217-5	Nut - Hex.	5 54 4
302-60	Fitting - Grease	8 58 2	3217-7	Nut - Hex.	13 8 1
304-75	Fitting - Tube	2 40 1	3217-7	Nut - Hex.	10 8 1
321-3	Screw - Cap, Hex. Hd.	10 43 10	3217-7	Nut - Hex.	7 9 4
321-3	Screw - Cap, Hex. Hd.	13 43 10	3217-7	Nut - hex.	18 4 3
321-4	Screw - Cap, Hex. Hd.	7 13 1	3217-8	Nut - Hex.	6 20 4
321-4	Screw - Cap, Hex. Hd.	10 14 4	3217-8	Nut - Lock	4 26 4
321-4	Screw - Cap, Hex. Hd.	13 14 4	3217-9	Nut - Hex	4 13 1
321-4	Screw - Cap, Hex. Hd.	6 39 1	3217-9	Nut - Hex	3 35 4
321-4	Screw - Cap, Hex. Hd.	14 53 2	3217-9	Nut - Hex.	15 9 5
321-4	Screw - Cap, Hex. Hd.	11 55 2	3217-9	Nut - Hex.	8 53 3
321-4	Screw - Cap, Hex. Hd.	5 69 1	3217-12	Nut - Hex	3 38 2
321-5	Screw - Cap, Hex. Hd.	10 46 14	3217-12	Nut - Hex.	5 57 1
321-5	Screw - Cap, Hex. Hd.	13 46 14	3218-2	Nut - Jam	11 62 2
321-6	Screw - Cap, Hex. Hd.	1 2 3	3218-3	Nut - Jam	15 5 6
321-8	Screw - Cap, Hex. Hd.	10 49 18	3218-3	Nut - Jam	4 5 6
321-8	Screw - Cap, Hex. Hd.	13 49 18	3218-3	Nut - Jam	6 5 8
321-13	Screw - Cap, Hex. Hd.	13 1 3	3218-3	Nut - Jam	7 17 2
322-1	Screw - Cap, Hex. Hd.	11 52 7	3218-3	Nut - Jam	3 26 1
322-1	Screw - Cap, Hex. Hd.	14 54 1	3218-3	Nut - Jam	1 29 1
322-5	Screw - Cap, Hex. Hd.	17 1 24	3218-5	Nut - Hex.	13 17 4
322-5	Screw - Cap, Hex. Hd.	11 61 1	3218-5	Nut - Hex.	4 34 1
322-7	Screw - Cap, Hex. Hd.	10 1 3	3218-5	Nut - Jam	10 17 4
322-7	Screw - Cap, Hex. Hd.	15 1 3	3218-6	Nut - Jam	3 21 1
322-7	Screw - Cap, Hex. Hd.	4 29 3	3218-6	Nut - Jam	10 39 2
322-7	Screw - Cap, Hex. Hd.	6 33 2	3218-6	Nut - Jam	13 39 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3219-3	Nut - Hex	4 17 2	3256-28	Washer - Flat	4 22 2
3219-3	Nut - Hex.	6 14 2	3256-28	Washer - Flat	3 27 1
3229-7	Bolt - Carriage	9 15 50	3256-28	Washer - Flat	1 31 1
3244-14	Screw - Set, - Sq. Hd.	10 16 4	3256-29	Washer - Flat	3 4 2
3244-14	Screw - Set, Square Hd.	13 16 4	3256-29	Washer - Flat	1 11 2
3244-21	Screw - Set	4 35 1	3257-8	Key - Woodruff	15 23 1
3247-3	Screw - Set	15 16 4	3258-19	Screw - Machine	12 7 2
3247-4	Screw - Set	4 4 2	3258-165	Screw - Rd. Hd.	9 32 2
3247-4	Screw - Set	6 4 2	3259-15	Screw - Drive	3 44 4
3247-6	Screw - Set	15 6 6	3272-6	Pin - Cotter	15 24 1
3247-6	Screw - Set	7 18 2	3272-10	Pin - Cotter	6 17 2
3247-6	Screw - Set	6 23 2	3272-10	Pin - Cotter	4 20 2
3250-32	Screw - Cap, Hex. Hd.	9 30 15	3272-10	Pin - Cotter	6 27 1
3253-3	Washer - Lock	13 2 9	3272-10	Pin - Cotter	4 43 1
3253-3	Washer - Lock	1 3 3	3272-12	Pin - Cotter	9 7 3
3253-3	Washer - Lock	10 13 6	3272-12	Pin - Cotter	10 37 1
3253-3	Washer - Lock	7 14 1	3272-12	Pin - Cotter	13 37 1
3253-3	Washer - Lock	6 38 1	3272-17	Pin - Cotter	3 2 3
3253-3	Washer - Lock	5 53 5	3272-17	Pin - Cotter	1 9 3
3253-4	Washer - Lock	10 2 4	3272-22	Pin - Cotter	6 22 2
3253-4	Washer - Lock	15 2 3	3272-22	Pin - Cotter	4 23 2
3253-4	Washer - Lock	4 28 5	3290-55	Rivet - Pop	2 48 4
3253-4	Washer - Lock	6 32 2	3290-144	Screw - Hex. Flange Hd.	9 4 104
3253-4	Washer - Lock	14 55 1	3290-343	Pin - Hair, Cotter	3 47 1
3253-6	Washer - Lock	6 19 4	3296-23	Nut - Lock	18 5 1
3253-6	Washer - Lock	4 25 4	3296-23	Nut - Lock	9 24 3
3253-7	Washer - Lock	7 7 3	3296-23	Nut - Lock	2 45 4
3253-7	Washer - Lock	15 11 13	3296-39	Nut - Lock	10 23 7
3253-7	Washer - Lock	4 12 1	3296-39	Nut - Lock	13 23 7
3253-7	Washer - Lock	3 16 6	3296-39	Nut - Lock	5 50 4
3253-9	Washer - Lock	3 37 2	3296-42	Nut - Lock	10 42 42
3253-9	Washer - Lock	5 58 1	3296-42	Nut - Lock	13 42 42
3253-21	Washer - Lock	18 2 3	3296-45	Nut - Lock	7 2 1
3253-21	Washer - Lock	7 5 5	3296-53	Nut - Lock	5 56 2
3253-21	Washer - Lock	10 7 9	32103-12	Nut - Wing	10 31 4
3253-21	Washer - Lock	13 7 9	32103-12	Nut - Wing	13 31 4
3253-21	Washer - Lock	3 40 6	32104-95	Screw - Self Tapping	2 33 2
3253-21	Washer - Lock	2 54 1	32104-95	Screw - Self-Tapping	3 29 2
3254-2	Washer - Lock	17 2 24	32104-96	Screw - Self Tapping	2 34 1
3254-8	Washer - Lock, Int. Tooth	8 57 2	32104-96	Screw - Self-Tapping	3 30 1
3256-22	Washer - Flat	10 32 32	32104-109	Screw	2 42 1
3256-22	Washer - Flat	13 32 32	32104-109	Screw - Cap, Hex. Hd.	14 58 4
3256-22	Washer - Flat	5 52 4	32107-11	Nut - Square	12 8 2
3256-22	Washer - Flat	2 56 1	32121-45	Pin - Roll	7 46 2
3256-23	Washer - Flat	11 53 1	32122-42	Screw - Machine	9 22 36
3256-23	Washer - Flat	14 56 1	32128-17	Nut - Lock, Flange Hd.	9 3 104
3256-23	Washer - Flat	16 57 3	32128-25	Nut - Lock, Flange	11 60 4
3256-24	Washer - Flat	7 6 5	32128-32	Nut - Lock	9 9 103
3256-24	Washer - Flat	6 12 2	32136-1	Nut - Slotted	3 3 2
3256-24	Washer - Flat	4 15 7	32136-1	Nut - Slotted	1 10 2
3256-24	Washer - Flat	10 22 14	32140-94	Screw - Cap, Hex. Hd.	7 32 276
3256-24	Washer - Flat	13 22 14	32152-2	Nut - Lock	7 24 12
3256-24	Washer - Flat	3 51 4	32153-2	Nut	6 11 2
3256-26	Washer - Flat	2 46 4	32153-2	Nut	7 35 4
3256-26	Washer - Flat	7 3 10	32153-2	Nut - Lock	4 14 2
3256-26	Washer - Flat	18 7 2	32153-2	Nut - Lock	9 37 2
3256-26	Washer - Flat	4 11 1	32153-2	Nut - Lock	3 42 2
3256-26	Washer - Flat	3 17 6	32153-3	Nut - Lock	2 41 4
3256-26	Washer - Flat	9 26 3	32153-3	Nut - Lock	11 59 2
3256-26	Washer - Flat	16 51 8	32153-5	Nut	7 38 6
3256-27	Washer - Flat	9 8 A/R	32153-5	Nut - Lock	10 27 8
3256-27	Washer - Flat	10 36 1	32153-5	Nut - Lock	13 27 8
3256-27	Washer - Flat	13 36 1	32153-6	Nut	7 42 1
3256-28	Washer - Flat	6 21 2			

*Not Illustrated

V42-522

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible — minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit — which is not reflected in your manual — see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Rake—O—Vac has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the left side of the frame behind the hitch. In any correspondence concerning the Rake—O—Vac — supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer — supply the following information:

1. Model and serial number of the Rake—O—Vac.
2. Part number — description — and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Engine And Frame Assembly		Blower And Throat Assembly	
(Model 07073)	1-2	(Model 07073)	10-11
Frame Assembly (Model 07174)	3	Air Cleaner Assembly No. 8-2329	12
Jackshaft And Lifting Mechanism		Blower And Throat Assembly	
(Model 07073)	4-5	(Model 07174)	13-14
Jackshaft And Lifting Mechanism		Drive Mechanism (Model 07174)	15-16
(Model 07174)	6	Gear Box Assembly (Model 07174)	17
Gauge Wheel And Trailing Arm		Jack Assembly (Models 07073 & 07174)	18
(Model 07073 & 07174)	7-8	Engine Kohler Model No. K582CS	
Cage And Rear Tailgate		Type No. 36366	22-30
(Model 07073 & 07174)	9		