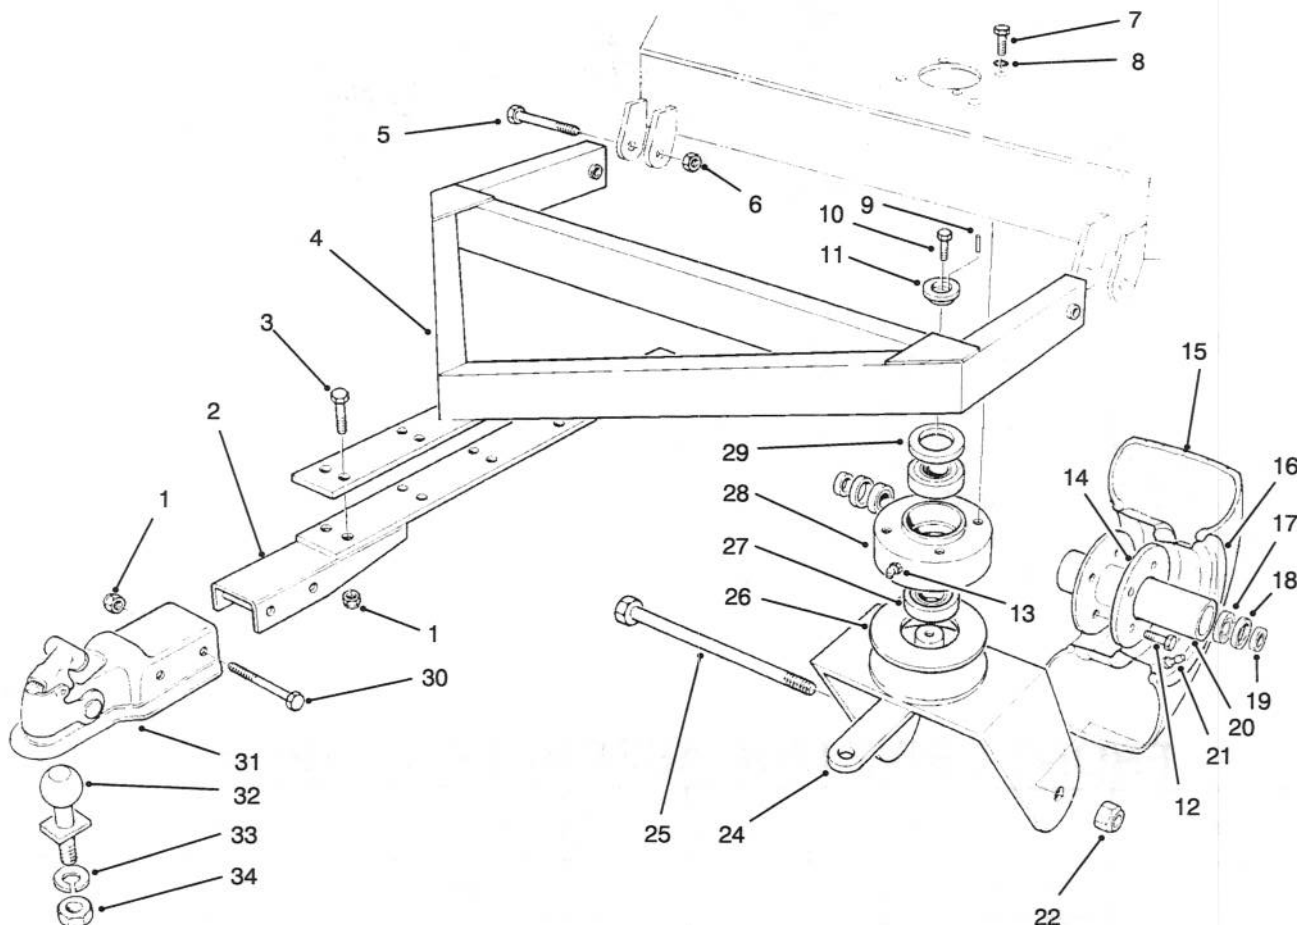


TORO

MODEL NO. 09501-40001 & UP


**PARTS
CATALOG****FAIRWAY AERATOR**

T-1309-1

HITCH & FRONT WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-23	Nut - Lock	6
2	71-7020	Adapter Asm. - Hitch	1
3	325-8	Screw - Cap Hex. Hd.	4
4	71-6890	Hitch W.A.	1
5	327-14	Screw - Cap Hex. Hd.	2
6	3217-11	Nut - Hex.	2
7	325-5	Screw - Cap Hex. Hd.	4
8	3253-7	Washer - Lock	4
9	32121-3	Pin - Roll	1
10	325-6	Screw - Cap Hex. Hd.	1
11	71-6820	Cap - Retaining	1
12	3212-5	Bolt	4
13	302-61	Fitting - Grease	1
14	71-6760	Support - Rim	1
15	231-119	Tire	1
16	217-60	Rim	1
17	71-6780	Bearing	2

Ref. No.	Part No.	Description	No. Used
18	71-6790	Seal - Oil	2
19	71-6750	Spacer - Outer	2
20	71-6830	Hub Asm. - Wheel	1
21	232-35	Stem - Valve	1
22	3296-70	Nut - Hex.	1
24	71-6730	Caster Asm.	1
25	71-6800	Shaft - Axle	1
26	71-6810	Disc - Plastic	1
27	71-6720	Bearing	2
28	71-6770	Housing - Bearing	1
29	71-6710	Seal - Oil	1
30	325-17	Screw - Cap Hex. Hd.	2
31	71-7010	Coupler - Hitch	1
32	71-7070	Ball - Hitch	1
33	3253-11	Washer - Lock	1
34	72-8010	Nut - Hex.	1

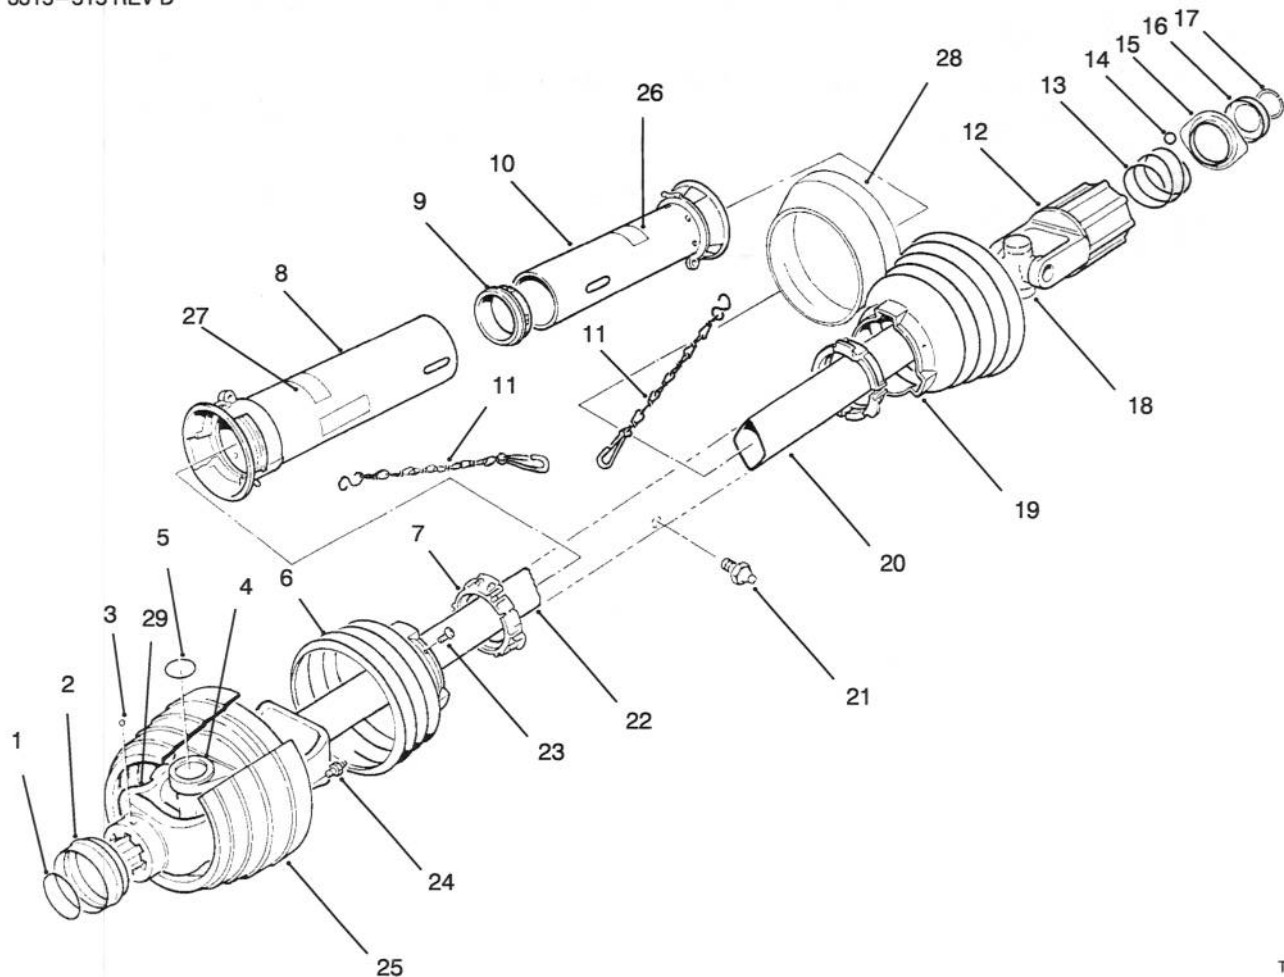

T-1456-1


FRONT DRIVE LINE ASSEMBLY NO. 82-3170

Ref. No.	Part No.	Description	No. Used
1		Ring - Retaining	1
2		Assembly - Collar	1
3		Ball	3
4	84-6300	Yoke - Double	1
5	84-6310	Kit - Cross & Bearing	2
6	84-6350	Shield - 3 Rib	1
7	77-4740	Ring - Bearing	2
8	84-6320	Tube - Shield, Outer	1
9	77-4790	Bearing - Support	1
10	84-6330	Tube - Shield, Inner	1
11	77-4760	Chain - Safety	2
12	84-6270	Clutch - Radial Pin	1
13		Spring - Compression	1
14		Ball	1
15		Collar - Lock	1
16		Ring - Flanged	1
17		Ring - Snap	1
18	77-4720	Cross & Bearing Kit	1
19	77-4730	Cone - Shield	1

Ref. No.	Part No.	Description	No. Used
20	84-6390	Outer Shaft & Yoke	1
21	84-6370	Fitting - Grease	1
22	84-6380	Inner Shaft & Yoke	1
23	84-6360	Screw	8
24	84-6290	Fitting - Grease	1
25	84-6340	Asm.. - Bearing & Cone	1
26	92-7937	Decal - Inner	1
27	92-7936	Decal - Outer	1
28	93-7734	Reinforced Collar	1
29	84-6280	Yoke Assembly (Incl. Ref.#1-4)	1
*	77-4670	Kit - Collar (Incl. Ref.#1-3)	1
*	77-4660	Kit - Flange (Incl. Ref.#13-17)	1
*	82-3170	Drive Line (Complete)	1
**	94-1775	Kit - Clutch, Cams & Springs	6

*Not Illustrated

**Number of Kits Required to Rebuild Clutch

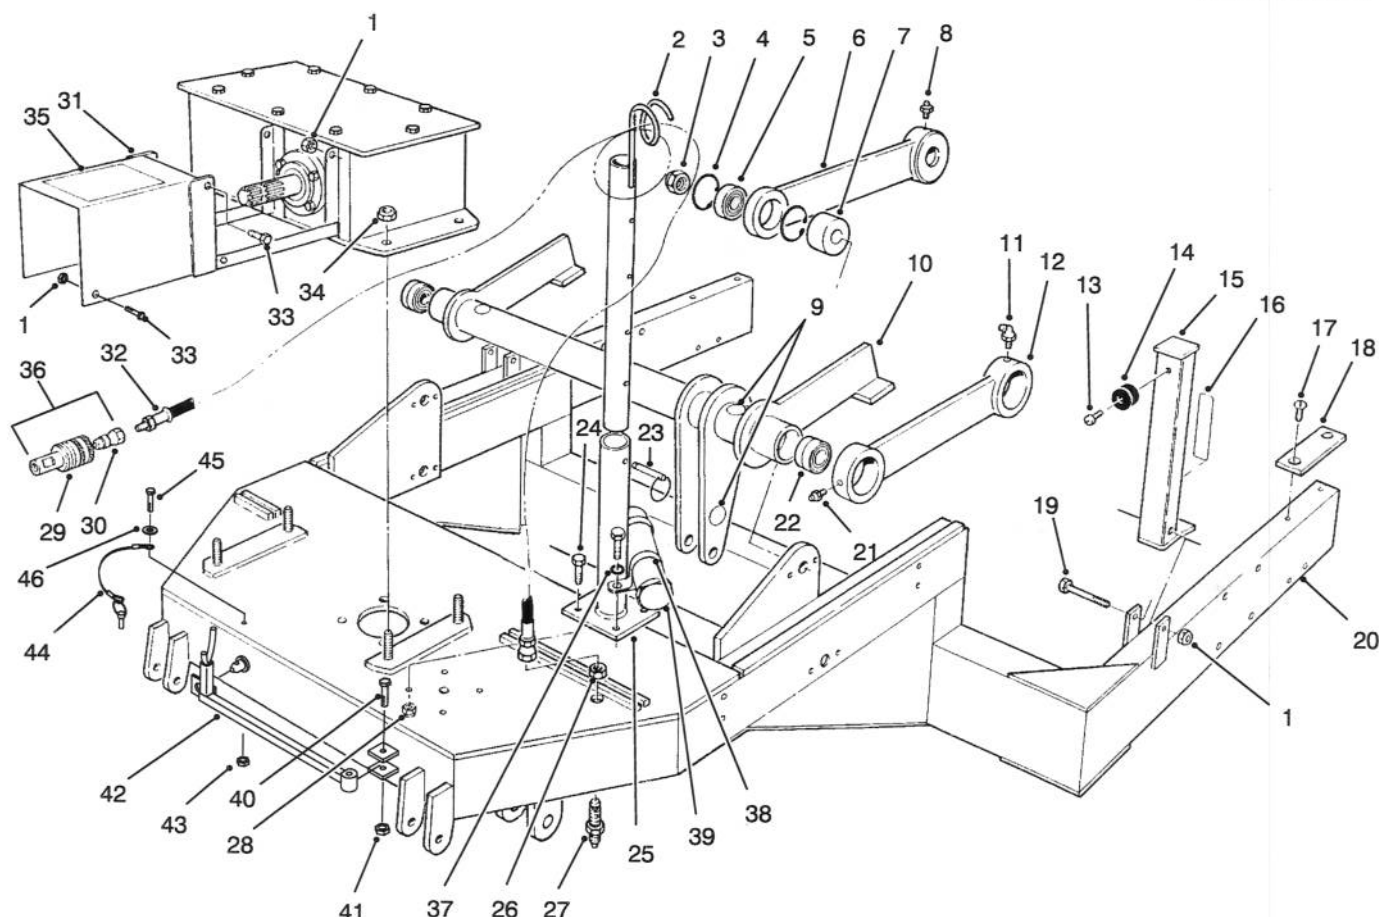

T-0898-2


CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-39	Nut - Lock	5
2	71-6910	Extension Asm. - Stand	1
3	3296-70	Nut - Hex	2
4	32120-8	Ring - Retaining	4
5	70-9240	Bearing	2
6	71-6590	Lift Arm - Top	2
7	72-7970	Spacer - Lift Arm, Top	2
8	302-55	Fitting - Grease	3
9	58-6520	Decal - Grease	3
10	71-6510	Lift Unit Asm.	1
11	302-61	Fitting - Grease	2
12	71-6600	Lift Arm - Bottom, LH	1
*	74-3110	Lift Arm - Bottom, RH	1
13	47-2830	Screw	2
14	71-7530	Grommet	2
15	76-2920	Stand - Transport	2
16	67-5370	Decal - Caution	2
17	32108-20	Screw - Countersink	4
18	71-7510	Pad - Absorber, Shock	2
19	323-15	Screw - Cap Hex. Hd.	2
20	94-1778	Frame Asm. - Carrier	1
21	302-55	Fitting - Grease	2
22	70-9240	Bearing	4
23	21-9110	Pin - Ball	1
24	322-6	Screw - Cap Hex. Hd.	4

*Not Illustrated

†Not Serviced Separately

Ref. No.	Part No.	Description	No. Used
25	71-6950	Stand Asm. - Hose	1
†26		Nut - Bulkhead	1
27	354-33	Fitting Assembly - Bulkhead (Incl. Ref. #28)	1
28	3296-29	Nut - Lock	4
†29		Body - Female	1
†30		Tip - Male	1
31	95-3122	Shield - Drive Line (Incl. Ref. #35)	1
32	71-6980	Hose - Hydraulic	1
33	323-6	Screw - Cap Hex. Hd.	3
34	3296-23	Nut - Lock	4
35	82-9400	Decal - Danger	1
36	71-7060	Coupler - Quick (Incl. Ref. #31 & 32)	1
37	3256-74	Washer - Flat	2
38	2412-133	R-Clamp	2
39	74-0720	Tube - Manual	1
40	325-12	Screw - Cap Hex. Hd.	1
41	3296-23	Nut - Lock	1
42	94-1762	Rest - Drive Shaft	1
43	3296-29	Nut - Lock	1
44	92-9941	Lynch Pin & Tie	1
45	322-5	Screw - Cap Hex. Hd.	1
46	3256-2	Washer - Flat	1

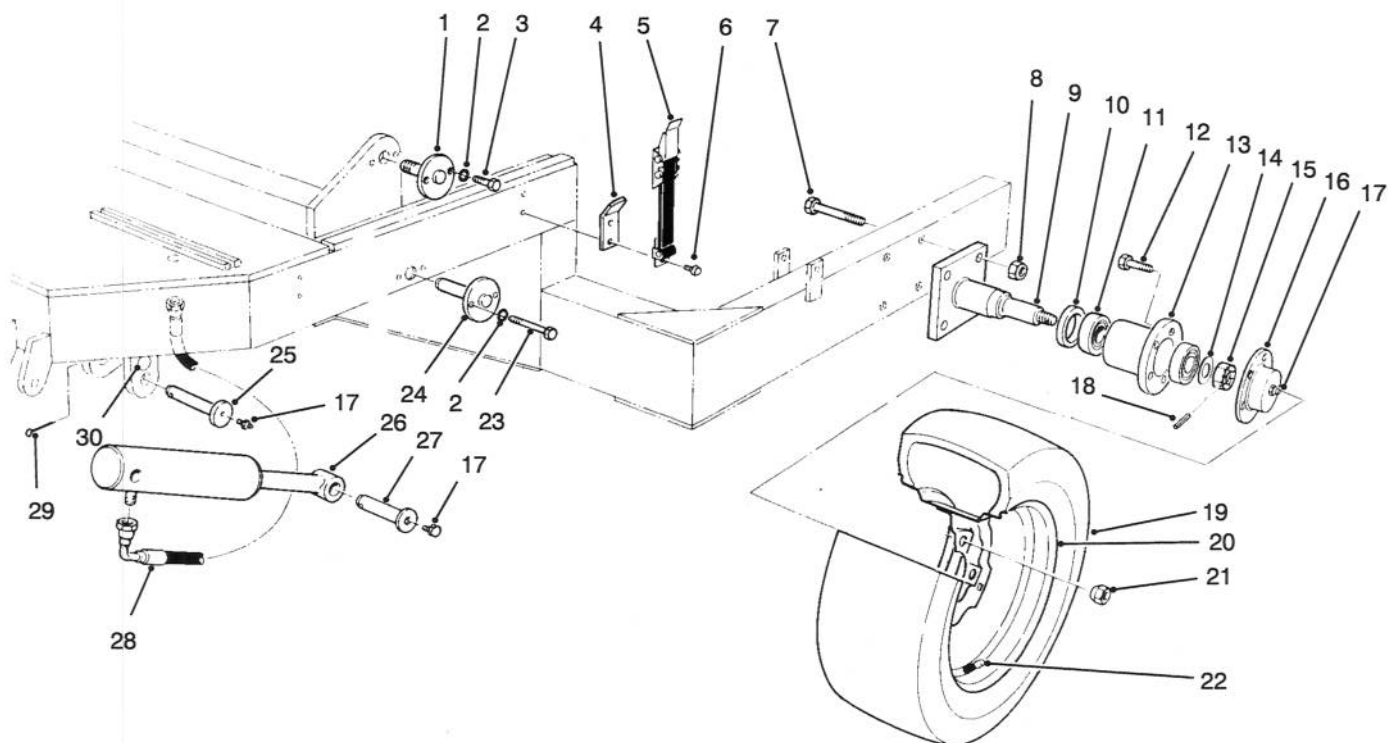


T-0897-1

REAR WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-6620	Pin - Location, Top	2
2	3253-21	Washer - Lock	4
3	323-6	Screw - Cap Hex. Hd.	4
4	71-6900	Guide - Cover, Front	4
5	71-6990	Latch - Draw, Flexible	4
6	3234-13	Screw - Flange Hd.	8
7	327-14	Screw - Cap Hex. Hd.	8
8	3296-61	Nut - Lock	8
9	71-6860	Shaft - Axle	2
10	71-6710	Seal - Oil	2
11	71-6630	Bearing	4
12	77-4520	Screw - Cap Hex. Hd.	10
13	71-6850	Housing - Bearing	2
14	70-9520	Washer - Flat	2
15	70-9460	Nut - Castle	2

Ref. No.	Part No.	Description	No. Used
16	71-6840	Cap - Hub	2
17	302-55	Fitting - Grease	2
18	32121-34	Pin - Roll	2
19	231-101	Tire	2
20	217-117	Rim	2
21	23-7270	Nut - Wheel	10
22	232-27	Stem - Valve	2
23	323-14	Screw - Cap Hex. Hd.	4
24	71-6520	Pin - Location, Bottom	2
25	71-6540	Pin - Mount, Front	1
26	71-6560	Cylinder - Hydraulic	1
27	71-6550	Pin - Mount, Rear	1
28	71-7490	Hose Assembly	1
29	3272-23	Pin - Cotter	2
30	58-6520	Decal - Grease	1

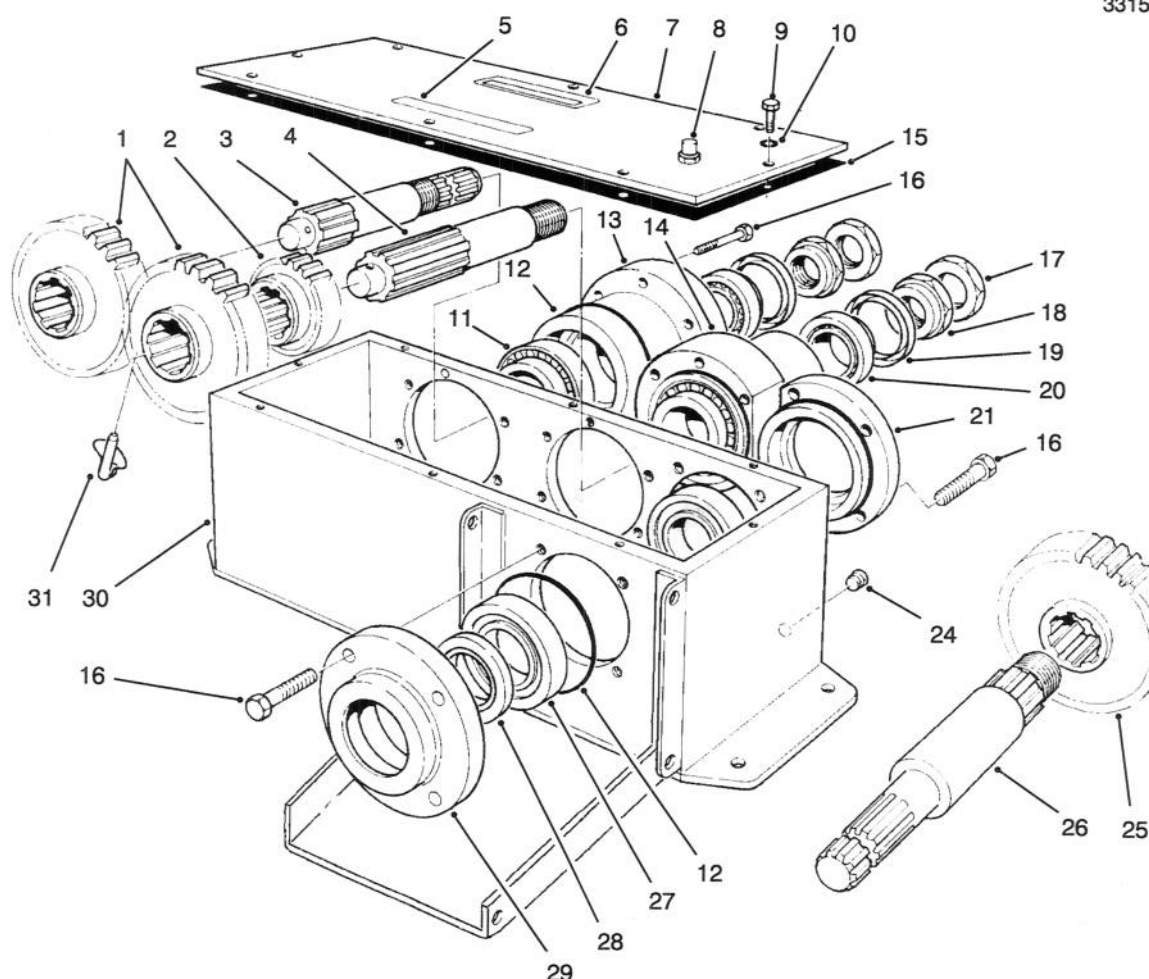


T-0893-1

FRONT GEAR BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-7300	Gear - 30 Tooth	1
*	71-7310	Gear - 31 Tooth	1
*	71-7320	Gear - 32 Tooth	1
*	71-7330	Gear - 33 Tooth	1
*	71-7340	Gear - 34 Tooth	1
*	71-7350	Gear - 35 Tooth	2
*	71-7360	Gear - 36 Tooth	1
*	71-7370	Gear - 37 Tooth	1
*	71-7380	Gear - 38 Tooth	1
*	71-7390	Gear - 39 Tooth	1
*	71-7400	Gear - 40 Tooth	1
2	71-7200	Gear - 20 Tooth	1
3	71-6570	Shaft - Corer	1
4	70-9690	Shaft - Intermediate	1
5	65-3090	Decal	1
6	67-5360	Decal - Warning	1
7	70-9670	Cover - Gearbox	1
8	72-3800	Breather	1
9	322-5	Screw - Cap Hex. Hd.	8
10	3253-4	Washer - Lock	8

Ref. No.	Part No.	Description	No. Used
11	71-6700	Bearing	2
12	92-3013	Seal - O-Ring	4
13	92-3011	Housing - Bearing	1
14	92-3010	Housing - Bearing	1
15	71-6610	Gasket - Cover	1
16	323-8	Screw - Cap Hex. Hd.	20
17	70-9720	Nut - Jam	2
18	70-9710	Nut - Hex	2
19	71-6490	Seal - Oil	2
20	71-6690	Bearing	2
21	92-3008	Cap - Bearing	1
24	285-21	Plug - Pipe	1
25	82-2900	Gear - 35 Tooth	1
26	70-9700	Shaft - Tractor	1
27	72-3820	Bearing	2
28	70-9680	Seal - Oil	1
29	92-3009	Cap - Bearing	1
30	94-1779	Gear Case Asm.	1
31	283-72	Pin - Lynch	2

*Not Illustrated

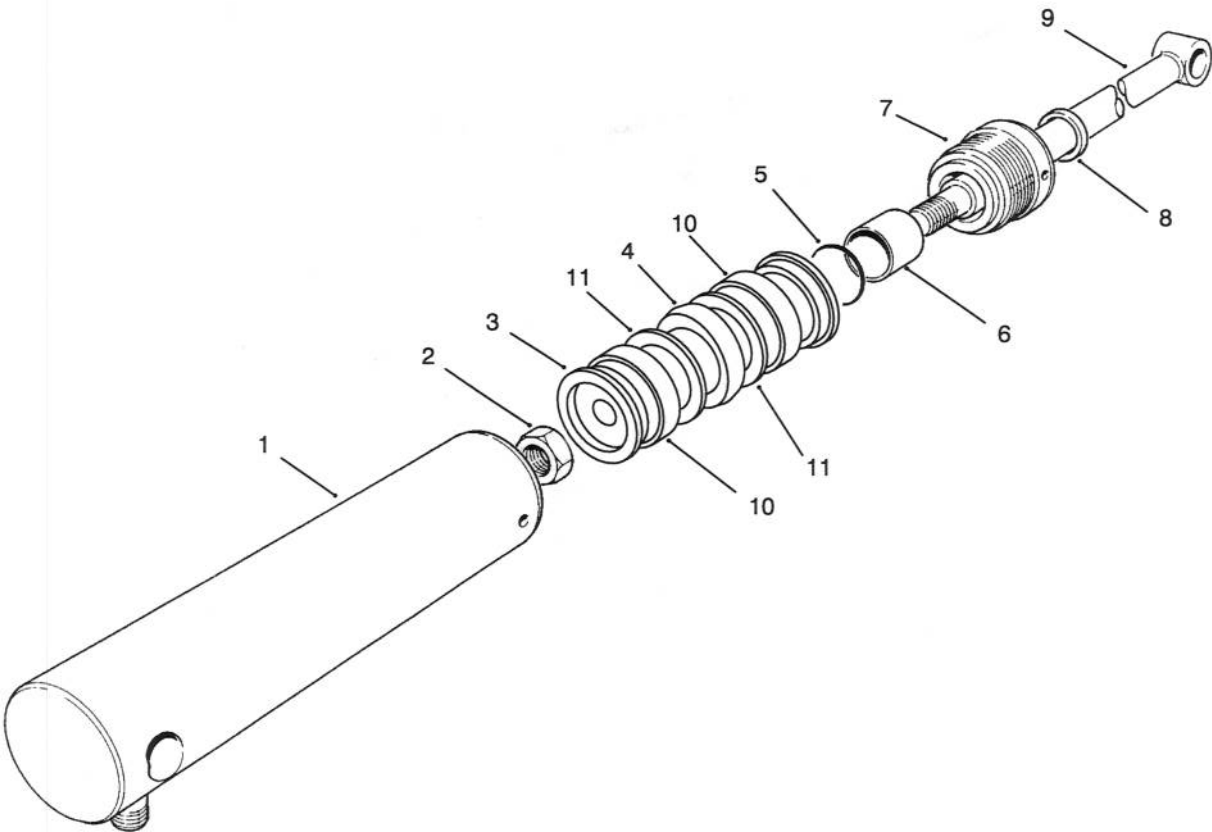


T-0899-1

HYDRAULIC CYLINDER ASSEMBLY NO. 71-6560

Ref. No.	Part No.	Description	No. Used
1	92-2410	Barrel	1
2	93-8770	Nut	1
3	92-2412	Piston	1
†4		Seal - Piston	1
†5		O-Ring	1
†6		Bushing - Bronze	1
7	92-2411	Cap - End	1

Ref. No.	Part No.	Description	No. Used
†8		Seal - Wiper	1
9	92-2413	Rod (Incl. Ref. #4-6,8,10,11)	1
10		Plastic Anti-Extrusion Ring	2
11		Spiral Back-Up Wear Ring	2
*	71-6640	Seal Kit (Incl. Ref.# 4-6,8,10,11)	1

*Not Illustrated
†Not Serviced Separately

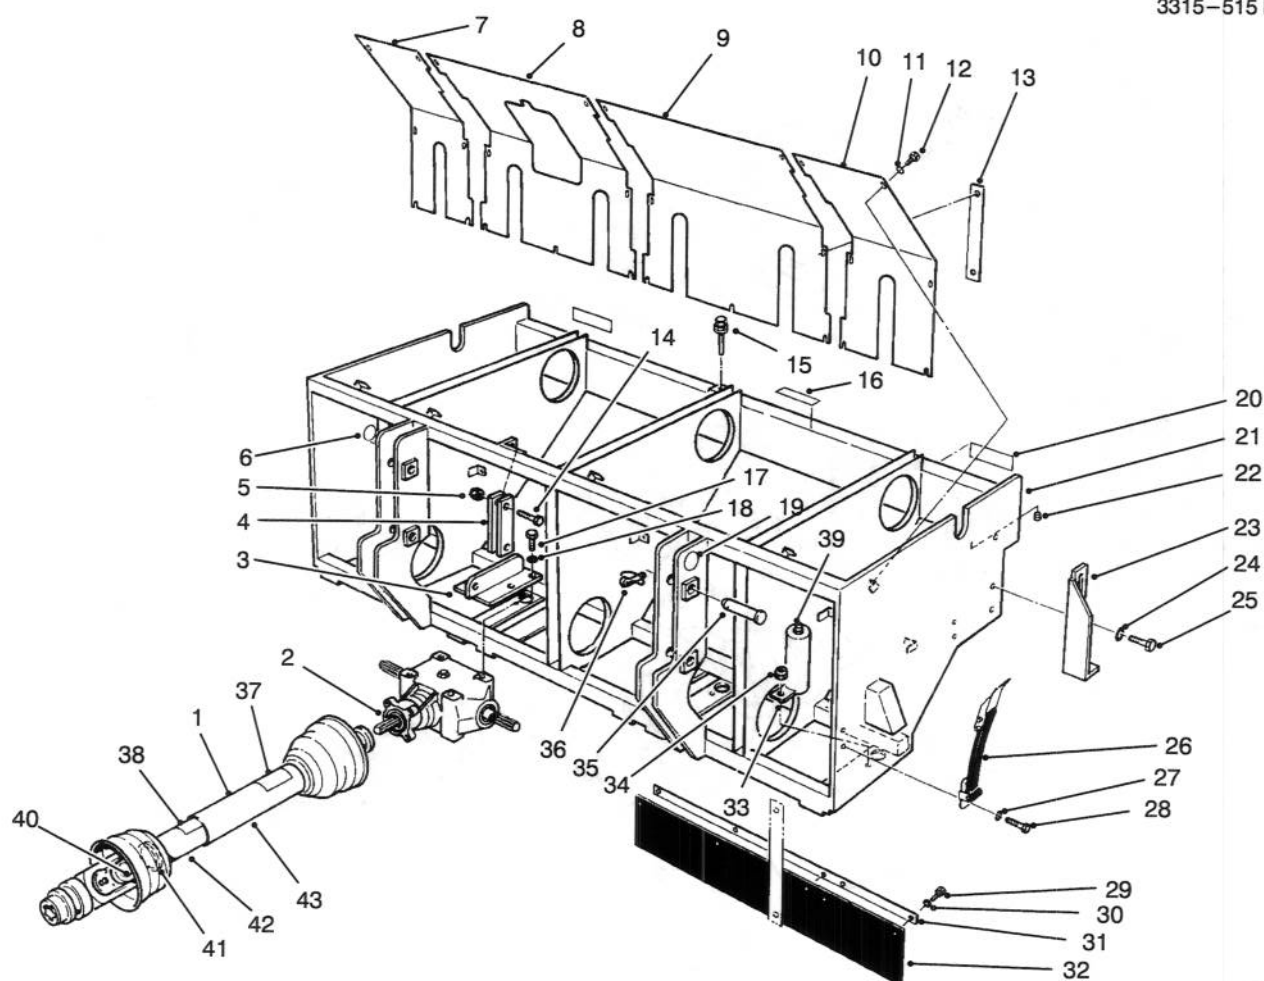


T-1137-1

CORER & SHIELD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	68-8060	Drive Line Asm. (Incl. Ref. 40-43)	1
2	77-3050	Gearbox - Rear, Bevel	1
3	76-3760	Plate - Mounting, Gearbox	1
4	71-7150	Plate - Upright, Gearbox	2
5	3296-23	Nut - Lock	2
6	58-6520	Decal - Grease	1
7	77-3070	Screen - Outer, R.H.	1
8	77-3090	Screen - Inner, R.H.	1
9	77-3080	Screen - Inner, L.H.	1
10	77-3060	Screen - Outer, L.H.	1
11	3253-4	Washer - Lock	16
12	322-3	Screw - Cap Hex. Hd.	16
13	72-7980	Strap	6
14	325-8	Screw - Cap Hex. Hd.	2
15	72-7960	Indicator - Oil Level	1
16	67-5360	Decal - Warning, Covers	1
17	48-7830	Screw, Cap Hex. Hd.	4
18	3253-7	Washer - Lock	4
19	58-6520	Decal - Grease	1
20	59-9930	Decal - Danger	2
21	92-3004	Coring Frame Asm.	1
22	285-21	Plug - Pipe	1

Ref. No.	Part No.	Description	No. Used
23	71-7470	Adjuster - L.H.	1
*	71-7480	Adjuster - R.H.	1
24	3256-69	Washer - Flat	4
25	327-4	Screw - Cap, Hex. Hd.	4
26	71-6990	Latch - Draw, Flexible (Complete)	4
27	3253-3	Washer - Lock	8
28	321-2	Screw - Cap Hex. Hd.	8
29	322-5	Screw - Cap Hex. Hd.	10
30	3256-2	Washer - Flat	10
31	71-7460	Strap - Securing, Curtain	2
32	71-7450	Curtain - Lower	2
33	71-7180	Cover - Dust	6
34	3296-39	Nut - Lock	6
35	71-6530	Pin - Mount, Lift Arm	4
36	283-71	Pin - Lynch	4
37	92-1581	Decal - Safety	1
38	92-1582	Decal - Safety	1
39	302-55	Fitting - Grease	6
40	72-7990	Cross & Bearing Kit	1
41	92-1580	Nylon Repair Kit	1
42	92-7931	Inner Guard	1
43	92-7930	Outer Guard	1

*Not Illustrated

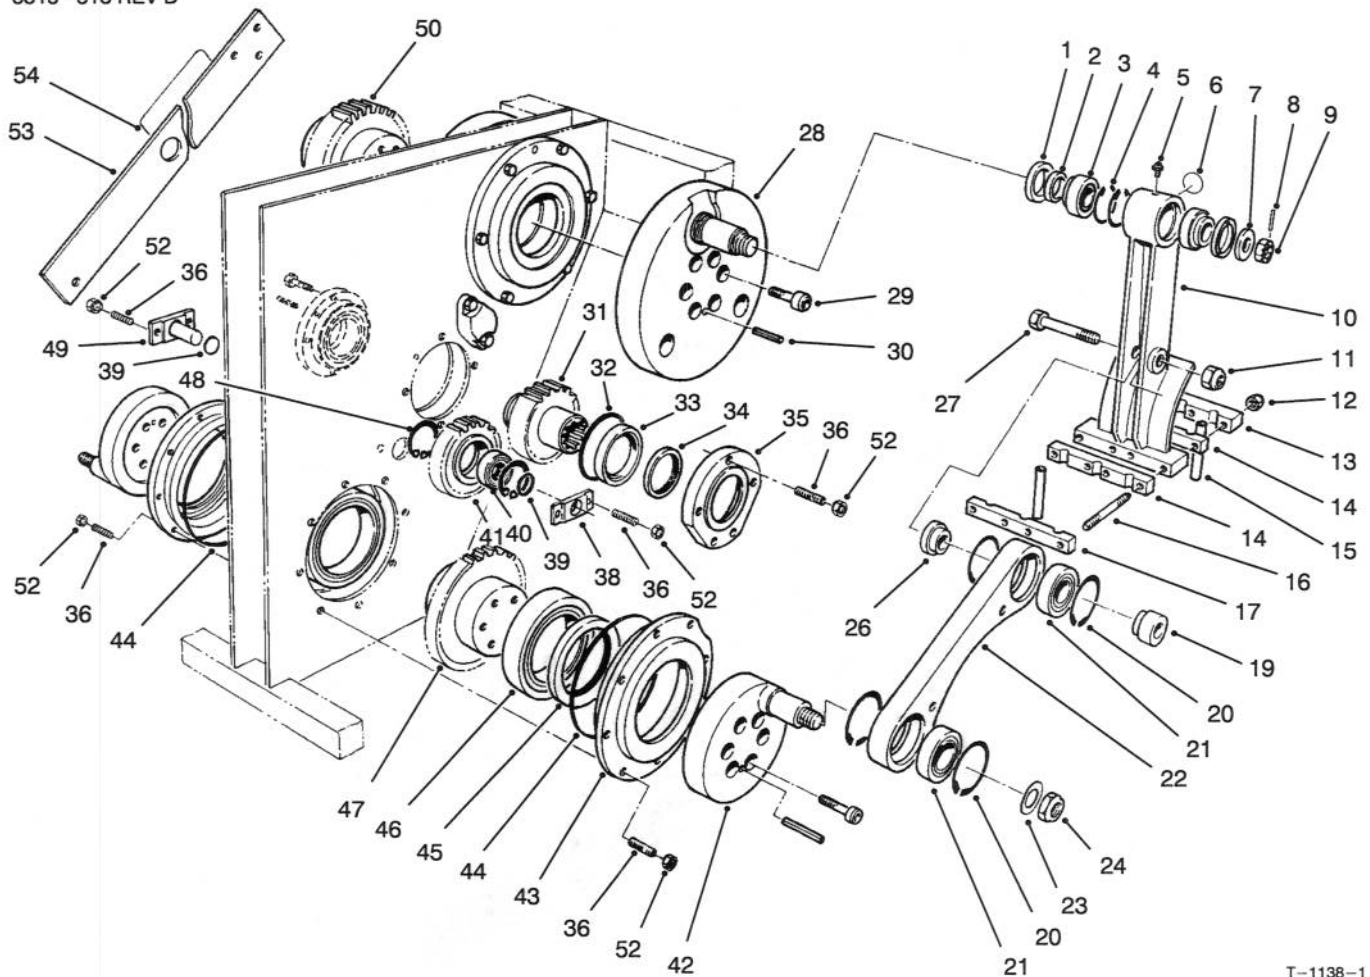


T-1138-1

CORER GEAR CASE & STOMPER ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	72-3840	Seal - Oil	12
2	70-9580	Spacer - Inner	6
3	72-3810	Bearing	12
4	82-3190	Ring - Retaining	12
5	302-55	Fitting - Grease	6
6	58-6520	Decal - Grease	6
7	70-9570	Spacer - Outer	6
8	32121-34	Pin - Roll	6
9	70-9460	Nut - Castle	6
10	70-9420	Arm - Tine	6
11	3296-70	Nut - Lock	6
12	3296-23	Nut - Lock	24
†13		Block - Outer	
†14		Block - Inner	
†15		Tine	
†16		Stud	
†17		Block - Bridging	
19	72-8060	Bushing - Spacer, Long	6
20	32151-88	Ring - Retaining	24
21	72-8070	Bearing	12
22	77-3040	Rod - Connecting	6
23	3256-62	Washer - Flat	6
24	3296-70	Nut - Lock	6
26	72-8090	Bushing - Spacer, Short	6
27	70-9550	Bolt - Connecting	6

Ref. No.	Part No.	Description	No. Used
28	92-9948	Crank - Top	6
29	3274-4	Screw - Cap Hex. Socket	72
30	71-7100	Pin - Roll	12
31	76-3630	Gear - Shaft, Driver	3
32	92-3013	Seal - O-Ring	6
33	70-9220	Bearing	6
34	70-9350	Seal - Oil	6
35	92-3001	Flange - Shaft, Drive	6
36	92-3005	Stud	150
38	92-3003	Cap - End	6
39	237-168	O-Ring	12
40	77-4560	Bearing	6
41	76-3640	Gear - Idler	6
42	72-8100	Crank - Bottom	6
43	92-3000	Flange - Crankshaft	12
44	92-3012	Seal - O-Ring	12
45	70-9340	Seal - Oil	12
46	70-9330	Bearing	12
47	76-3660	Gear - Crankshaft, Bottom	3
48	32120-62	Ring - Retaining	12
49	92-3002	Shaft - Idler	6
50	76-3650	Gear - Crankshaft, Top	3
52	92-3006	Nut - Lock	150
53	82-3200	Timing Bar	1
54	82-3220	Decal	1

† See pages 9, 10 & 11 for selection.

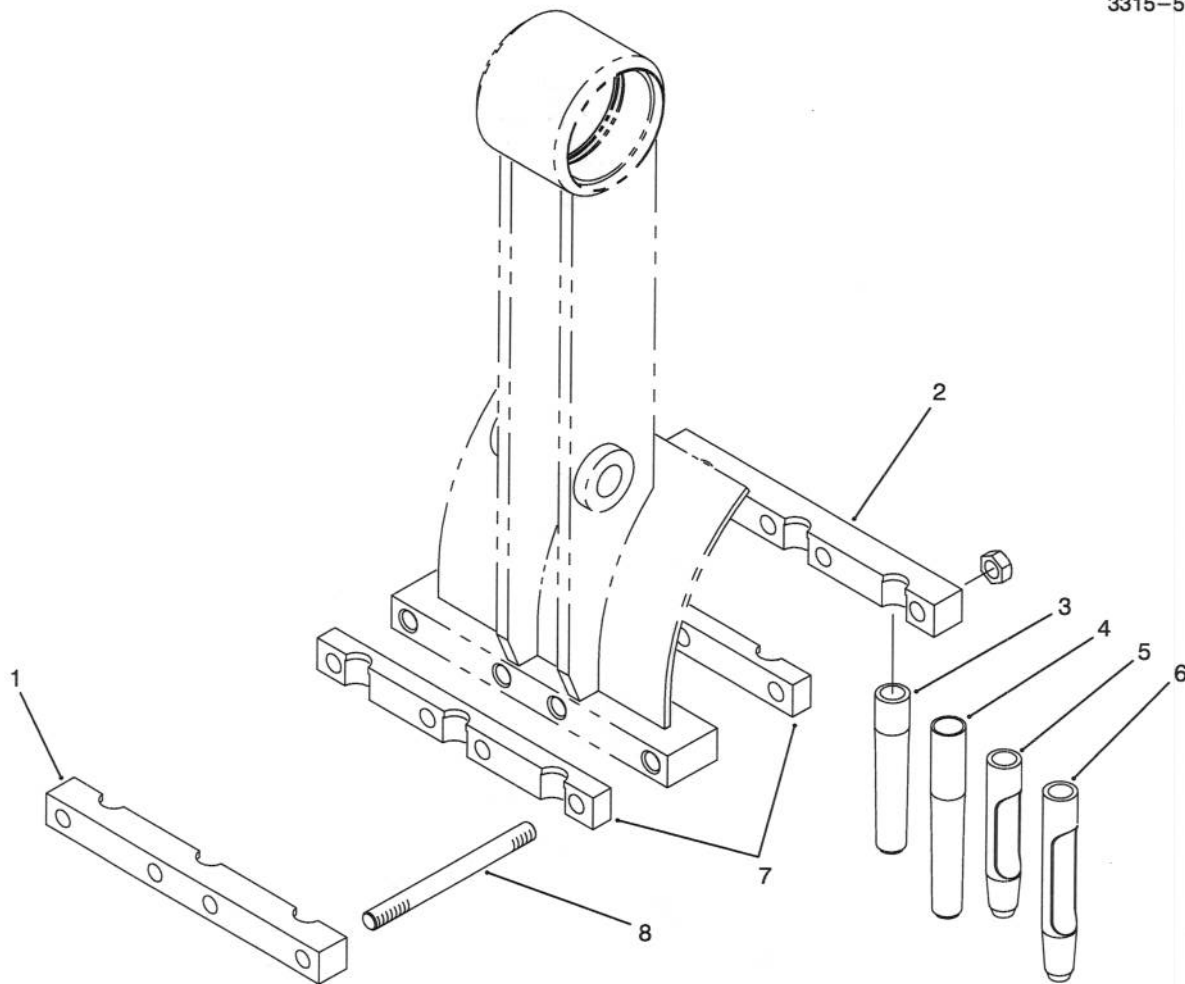


T-2530-1

6-TINE BLOCKS & .75 DIAMETER TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	70-9390	Block - Bridging, 6-Tine	6
2	70-9380	Block - Outer, 6-Tine	6
3	62-4600	Tine - Tubular .75 x 4.75	36
4	86-9720	Tine - Tubular .75 x 5.75	36

Ref. No.	Part No.	Description	No. Used
5	92-7941	Tine - Open Center .75 x 4.75	36
6	92-7900	Tine - Open Center .75 x 5.75	36
7	70-9400	Block, Inner, 6-Tine	12
8	71-7120	Stud - .50 x 150mm	24

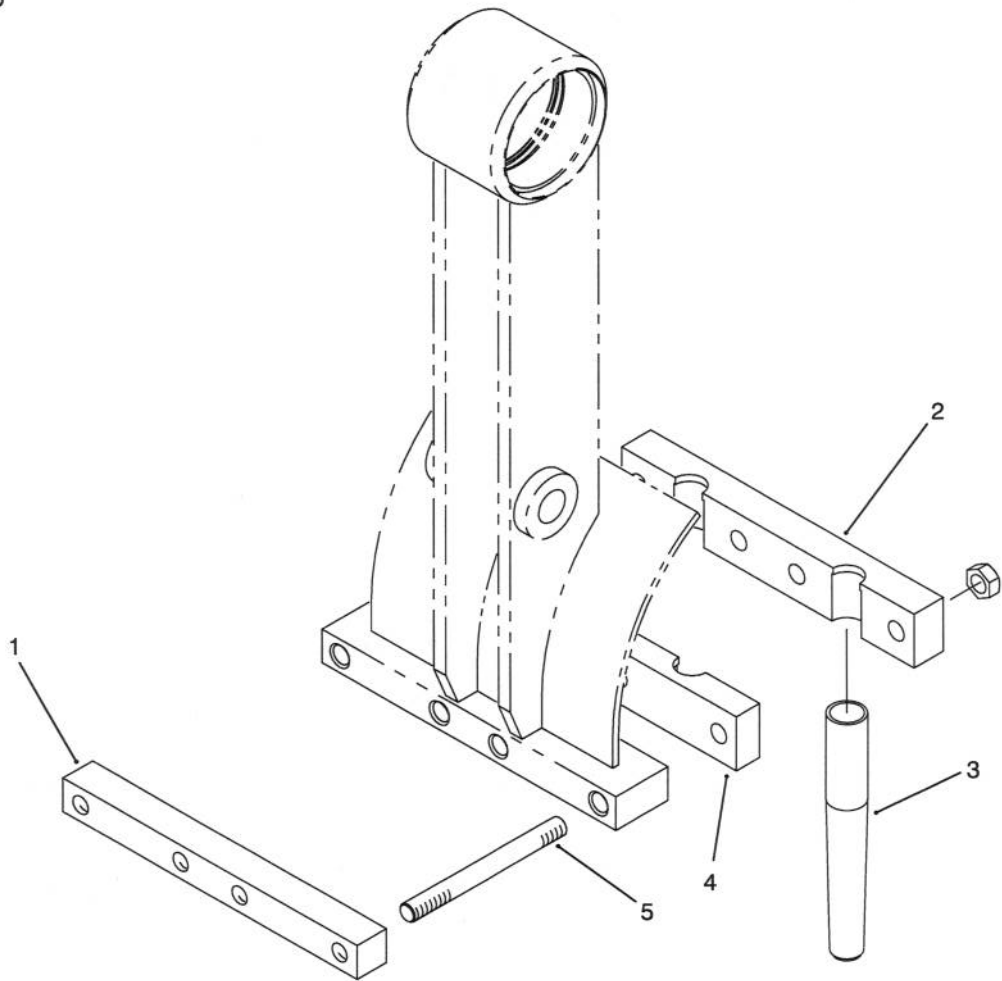


T-2531-1

2-TINE BLOCKS & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	70-9410	Block - Bridging, 2-Tine	6
2	70-9260	Block - Outer, 2-Tine	6
3	71-0940	Tine - Tubular .88 x 7.00	12

Ref. No.	Part No.	Description	No. Used
4	70-9270	Block - Inner, 2-Tine	6
5	71-7110	Stud - .50 x 130mm	24

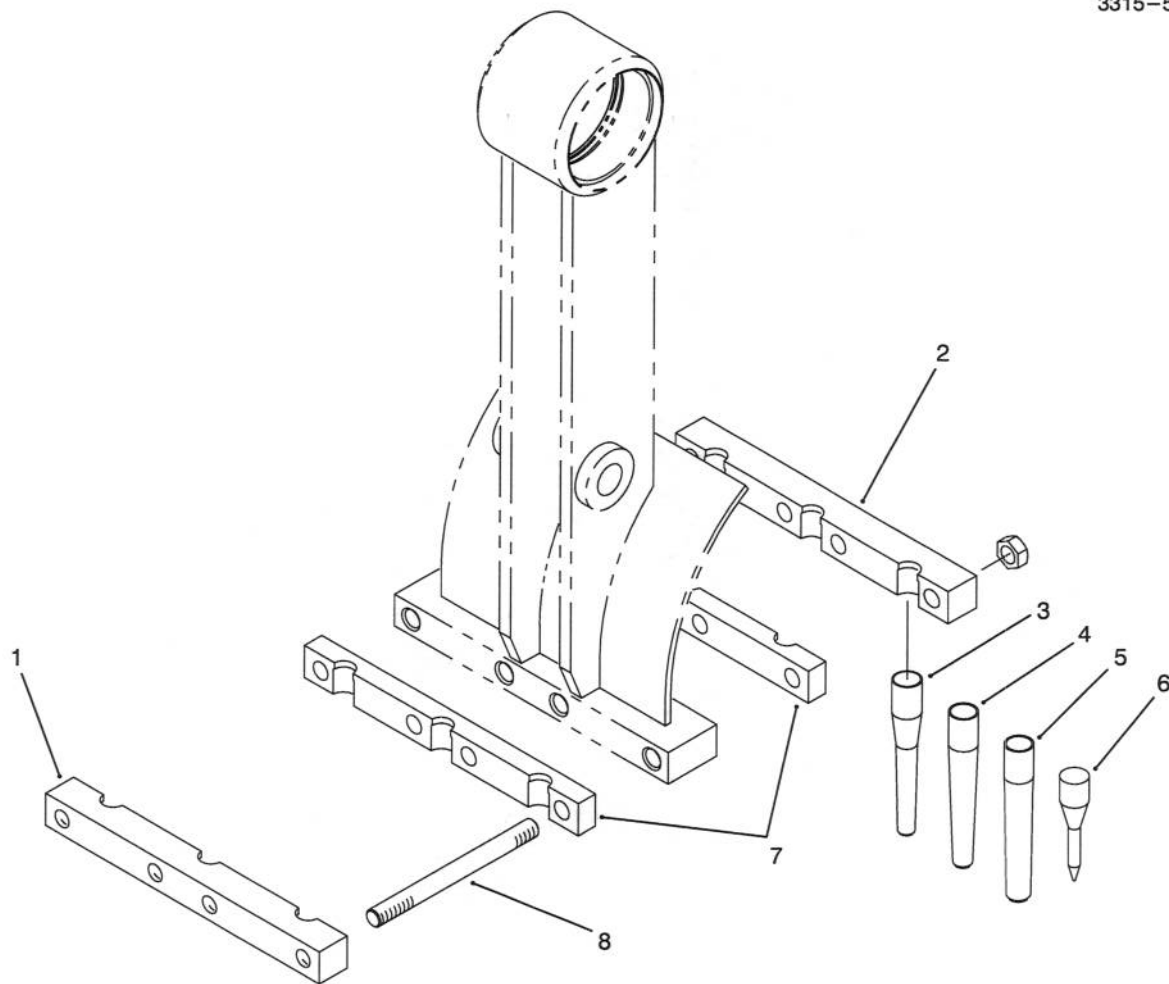


T-2532-1

6-TINE BLOCKS & TINE SELECTION

Ref. No.	Part No.	Description	No. Used
1	95-3104	Block - Bridging, 6-Tine	6
2	95-3103	Block - Outer, 6-Tine	6
3	59-3690	Tine - Tubular .38 x 4.75	36
4	94-3419	Tine - Tubular .50 x 4.75	36

Ref. No.	Part No.	Description	No. Used
5	59-3670	Tine - Tubular .62 x 4.75	36
6	77-5320	Tine - Spiker .31 x 3.25	36
7	95-3105	Block - Inner, 6-Tine	12
8	71-7120	Stud - .50 x 150mm	24

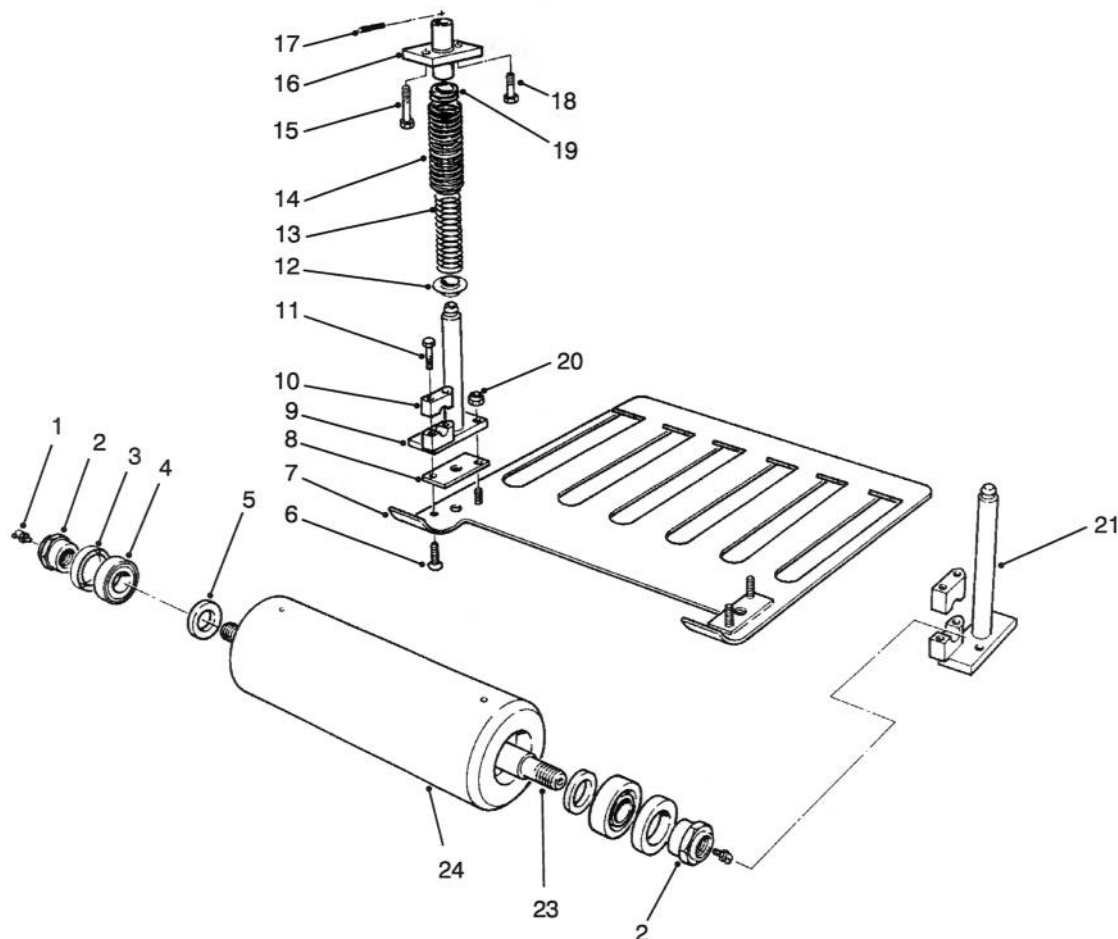


T-0896-1

ROLLER & FINGER PLATE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-61	Fitting - Grease	6
2	71-7290	Nut - Thin	6
3	71-6790	Seal - Oil	6
4	71-6780	Bearing	6
5	72-3830	Seal - Oil	6
6	3289-17	Screw - HSFH	12
7	70-9440	Plate - 6 Tine	3
*	70-9430	Plate - 2 Tine	3
8	71-7270	Plate - Backing	6
9	71-7220	Shaft - R.H.	3
10	72-8020	Block - Clamp, Top	6
11	3212-6	Screw - Cap Hex. Hd.	12
12	71-7240	Ring - Clamp, Bottom	6

Ref. No.	Part No.	Description	No. Used
13	70-9450	Spring - Compression	6
14	82-2890	Shield - Rubber	6
15	323-35	Screw - Cap Hex. Hd.	6
16	71-7130	Bushing	6
17	32121-15	Pin - Roll	6
18	323-7	Screw - Cap Hex. Hd.	6
19	71-7230	Ring - Clamp, Top	6
20	3296-39	Nut - Lock	12
21	71-7210	Shaft - L.H.	3
23	71-7280	Shaft	3
24	71-7250	Roller Assembly (Incl. Ref. #1-5, 22 & 23)	3

*Not Illustrated

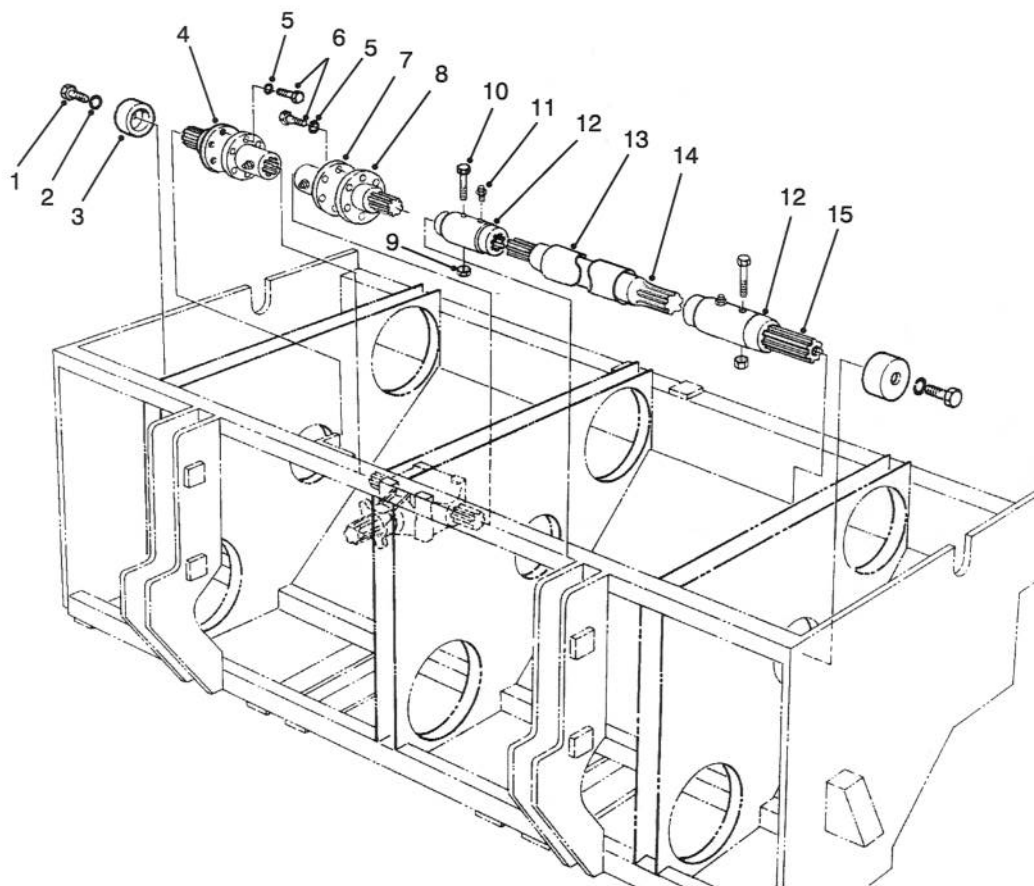


T-1139-1

DRIVE LINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-5	Screw - Cap Hex. Hd.	2
2	48-8070	Washer - Lock	2
3	76-3750	Flange	2
4	76-3730	Shaft - Splined	1
5	3253-7	Washer - Lock	12
6	3274-89	Screw - Cap Hex. Socket	12
7	76-3710	Coupling - Flange	2
8	76-3720	Shaft - Splined	1

Ref. No.	Part No.	Description	No. Used
9	3296-29	Nut - Lock	2
10	322-12	Screw - Cap Hex. Hd.	2
11	302-55	Fitting - Grease	4
12	76-3740	Coupling - Splined	2
13	70-9620	Tube - Shield	1
14	70-9300	Shaft - Splined	1
15	70-9310	Shaft - Splined	1

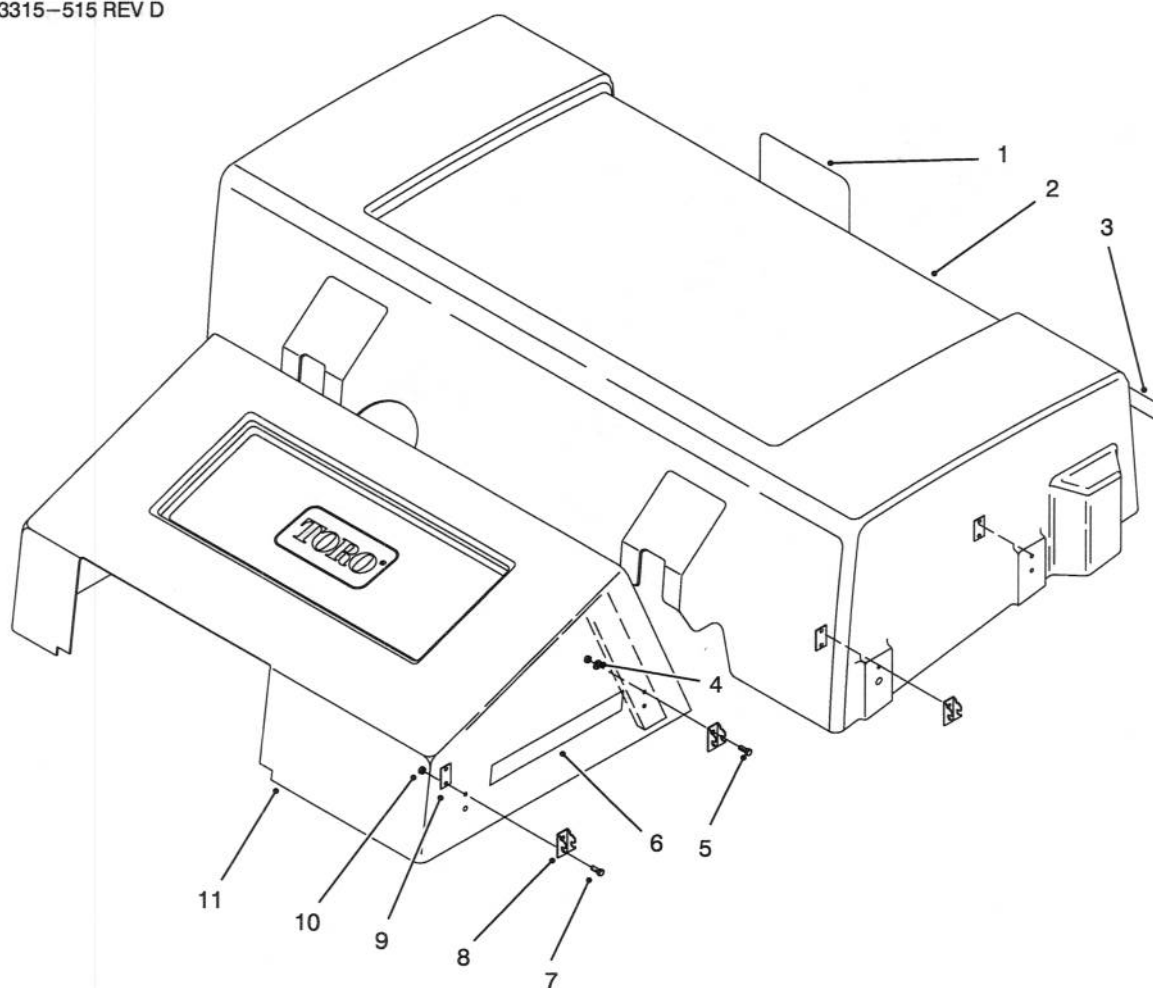


T-0900-1

AERATOR & CORING HEAD COVERS

Ref. No.	Part No.	Description	No. Used
1	67-7310	Decal - Toro	2
2	84-5980	Cover - Coring Head	1
3	59-9930	Decal - Danger	2
4	3256-22	Washer - Flat	4
5	321-9	Screw - Cap Hex. Hd.	4
6	67-5330	Decal - Aerator, Fairway	2

Ref. No.	Part No.	Description	No. Used
7	321-4	Screw - Cap Hex. Hd.	12
8	71-6990	Latch (Complete) (Keeper Shown Illustrated)	4
9	71-6940	Plate - Backing	6
10	3296-56	Nut - Lock	16
11	84-5970	Cover - Front, Aerator	1

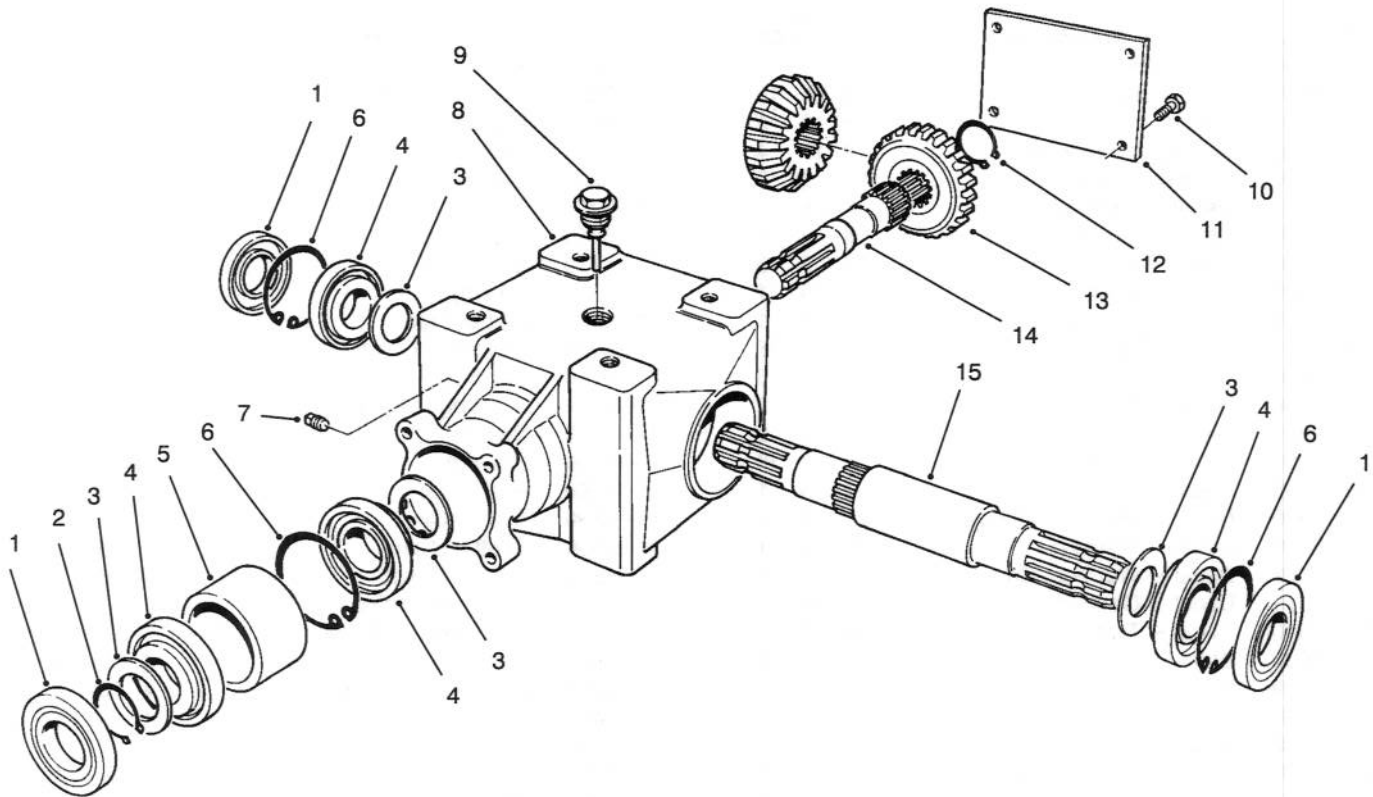

T-1127-1

GEAR BOX ASSEMBLY NO. 77-3050

Ref. No.	Part No.	Description	No. Used
1	74-3200	Seal - Oil	3
2	74-2960	Ring - Retaining	1
†3	74-2990	Shim Kit	4
4	71-6630	Bearing	4
5	77-4430	Spacer	1
6	32120-31	Ring - Snap	3
7	281-1	Plug - Pipe	1
*8		Case	1

Ref. No.	Part No.	Description	No. Used
9	77-4490	Plug - Oil Level/Filler	1
10	77-4500	Bolt - Hex. Socket Hd.	4
11	77-4470	Cover	1
12	77-4460	Ring - Retaining	1
13	77-4450	Gear - 18 Tooth	2
14	77-4440	Shaft - Input	1
15	77-4480	Shaft	1

† Includes three (3) shims of various thickness to properly adjust gear backlash & shaft end play.
Required when replacing items #4, 5, & 13-15. Instruction sheet included.

*Not Serviced Separately

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
21-9110	Pin - Ball	3 23 1	71-6620	Pin - Location, Top	4 1 2
23-7270	Nut - Wheel	4 21 10	71-6630	Bearing	15 4 4
47-2830	Screw	3 13 2	71-6630	Bearing	4 11 4
48-7830	Screw, Cap Hex. Hd.	7 17 4	71-6640	Seal Kit	6 * 1
48-8070	Washer - Lock	13 2 2	71-6690	Bearing	5 20 2
58-6520	Decal - Grease	7 6 1	71-6700	Bearing	5 11 2
58-6520	Decal - Grease	8 6 6	71-6710	Seal - Oil	4 10 2
58-6520	Decal - Grease	3 9 3	71-6710	Seal - Oil	1 29 1
58-6520	Decal - Grease	7 19 1	71-6720	Bearing	1 27 2
58-6520	Decal - Grease	4 30 1	71-6730	Caster Asm.	1 24 1
59-3670	Tine - Tubular	11 5 36	71-6750	Spacer - Outer	1 19 2
59-3690	Tine - Tubular	11 3 36	71-6760	Support - Rim	1 14 1
59-9930	Decal - Danger	14 3 2	71-6770	Housing - Bearing	1 28 1
59-9930	Decal - Danger	7 20 2	71-6780	Bearing	12 4 6
62-4600	Tine - Tubular	9 3 36	71-6780	Bearing	1 17 2
65-3090	Decal	5 5 1	71-6790	Seal - Oil	12 3 6
67-5330	Decal - Aerator, Fairway	14 6 2	71-6790	Seal - Oil	1 18 2
67-5360	Decal - Warning	5 6 1	71-6800	Shaft - Axle	1 25 1
67-5360	Decal - Warning, Covers	7 16 1	71-6810	Disc - Plastic	1 26 1
67-5370	Decal - Caution	3 16 2	71-6820	Cap - Retaining	1 11 1
67-7310	Decal - Toro	14 1 2	71-6830	Hub Asm. - Wheel	1 20 1
68-8060	Drive Line Asm.	7 1 1	71-6840	Cap - Hub	4 16 2
70-9220	Bearing	8 33 6	71-6850	Housing - Bearing	4 13 2
70-9240	Bearing	3 5 2	71-6860	Shaft - Axle	4 9 2
70-9240	Bearing	3 22 4	71-6890	Hitch W.A.	1 4 1
70-9260	Block - Outer, 2-Tine	10 2 6	71-6900	Guide - Cover, Front	4 4 4
70-9270	Block - Inner, 2-Tine	10 4 6	71-6910	Extension Asm. - Stand	3 2 1
70-9300	Shaft - Splined	13 14 1	71-6940	Plate - Backing	14 9 6
70-9310	Shaft - Splined	13 15 1	71-6950	Stand Asm. - Hose	3 25 1
70-9330	Bearing	8 46 12	71-6980	Hose - Hydraulic	3 32 1
70-9340	Seal - Oil	8 45 12	71-6990	Latch (Complete)	14 8 4
70-9350	Seal - Oil	8 34 6	71-6990	Latch - Draw, Flexible	4 5 4
70-9380	Block - Outer, 6-Tine	9 2 6	71-6990	Latch - Draw, Flexible	7 26 4
70-9390	Block - Bridging, 6-Tine	9 1 6	71-7010	Coupler - Hitch	1 31 1
70-9400	Block, Inner, 6-Tine	9 7 12	71-7020	Adapter Asm. - Hitch	1 2 1
70-9410	Block - Bridging, 2-Tine	10 1 6	71-7060	Coupler - Quick	3 36 1
70-9420	Arm - Tine	8 10 6	71-7070	Ball - Hitch	1 32 1
70-9430	Plate - 2 Tine	12 * 3	71-7100	Pin - Roll	8 30 12
70-9440	Plate - 6 Tine	12 7 3	71-7110	Stud - .50 x 130mm	10 5 24
70-9450	Spring - Compression	12 13 6	71-7120	Stud - .50 x 150mm	11 8 24
70-9460	Nut - Castle	8 9 6	71-7120	Stud - .50 x 150mm	9 8 24
70-9460	Nut - Castle	4 15 2	71-7130	Bushing	12 16 6
70-9520	Washer - Flat	4 14 2	71-7150	Plate - Upright, Gearbox	7 4 2
70-9550	Bolt - Connecting	8 27 6	71-7180	Cover - Dust	7 33 6
70-9570	Spacer - Outer	8 7 6	71-7200	Gear - 20 Tooth	5 2 1
70-9580	Spacer - Inner	8 2 6	71-7210	Shaft - L.H.	12 21 3
70-9620	Tube - Shield	13 13 1	71-7220	Shaft - R.H.	12 9 3
70-9670	Cover - Gearbox	5 7 1	71-7230	Ring - Clamp, Top	12 19 6
70-9680	Seal - Oil	5 28 1	71-7240	Ring - Clamp, Bottom	12 12 6
70-9690	Shaft - Intermediate	5 4 1	71-7250	Roller Assembly	12 24 3
70-9700	Shaft - Tractor	5 26 1	71-7270	Plate - Backing	12 8 6
70-9710	Nut - Hex	5 18 2	71-7280	Shaft	12 23 3
70-9720	Nut - Jam	5 17 2	71-7290	Nut - Thin	12 2 6
71-0940	Tine - Tubular	10 3 12	71-7300	Gear - 30 Tooth	5 1 1
71-6490	Seal - Oil	5 19 2	71-7310	Gear - 31 Tooth	5 * 1
71-6510	Lift Unit Asm.	3 10 1	71-7320	Gear - 32 Tooth	5 * 1
71-6520	Pin - Location, Bottom	4 24 2	71-7330	Gear - 33 Tooth	5 * 1
71-6530	Pin - Mount, Lift Arm	7 35 4	71-7340	Gear - 34 Tooth	5 * 1
71-6540	Pin - Mount, Front	4 25 1	71-7350	Gear - 35 Tooth	5 * 2
71-6550	Pin - Mount, Rear	4 27 1	71-7360	Gear - 36 Tooth	5 * 1
71-6560	Cylinder - Hydraulic	4 26 1	71-7370	Gear - 37 Tooth	5 * 1
71-6570	Shaft - Corer	5 3 1	71-7380	Gear - 38 Tooth	5 * 1
71-6590	Lift Arm - Top	3 6 2	71-7390	Gear - 39 Tooth	5 * 1
71-6600	Lift Arm - Bottom, LH	3 12 1	71-7400	Gear - 40 Tooth	5 * 1
71-6610	Gasket - Cover	5 15 1	71-7450	Curtain - Lower	7 32 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
71-7460	Strap - Securing, Curtain	7 31 2	82-3200	Timing Bar	8 53 1
71-7470	Adjuster - L.H.	7 23 1	82-3220	Decal	8 54 1
71-7480	Adjuster - R.H.	7 * 1	82-9400	Decal - Danger	3 35 1
71-7490	Hose Assembly	4 28 1	84-5970	Cover - Front, Aerator	14 11 1
71-7510	Pad - Absorber, Shock	3 18 2	84-5980	Cover - Coring Head	14 2 1
71-7530	Grommet	3 14 2	84-6270	Clutch - Radial Pin	2 12 1
72-3800	Breather	5 8 1	84-6280	Yoke Assembly	2 29 1
72-3810	Bearing	8 3 12	84-6290	Fitting - Grease	2 24 1
72-3820	Bearing	5 27 2	84-6300	Yoke - Double	2 4 1
72-3830	Seal - Oil	12 5 6	84-6310	Kit - Cross & Bearing	2 5 2
72-3840	Seal - Oil	8 1 12	84-6320	Tube - Shield, Outer	2 8 1
72-7960	Indicator - Oil Level	7 15 1	84-6330	Tube - Shield, Inner	2 10 1
72-7970	Spacer - Lift Arm, Top	3 7 2	84-6340	Asm.. - Bearing & Cone	2 25 1
72-7980	Strap	7 13 6	84-6350	Shield - 3 Rib	2 6 1
72-7990	Cross & Bearing Kit	7 40 1	84-6360	Screw	2 23 8
72-8010	Nut - Hex.	1 34 1	84-6370	Fitting - Grease	2 21 1
72-8020	Block - Clamp, Top	12 10 6	84-6380	Inner Shaft & Yoke	2 22 1
72-8060	Bushing - Spacer, Long	8 19 6	84-6390	Outer Shaft & Yoke	2 20 1
72-8070	Bearing	8 21 12	86-9720	Tine - Tubular	9 4 36
72-8090	Bushing - Spacer, Short	8 26 6	92-1580	Nylon Repair Kit	7 41 1
72-8100	Crank - Bottom	8 42 6	92-1581	Decal - Safety	7 37 1
74-0720	Tube - Manual	3 39 1	92-1582	Decal - Safety	7 38 1
74-2960	Ring - Retaining	15 2 1	92-2410	Barrel	6 1 1
74-2990	Shim Kit	15 3 4	92-2411	Cap - End	6 7 1
74-3110	Lift Arm - Bottom, RH	3 * 1	92-2412	Piston	6 3 1
74-3200	Seal - Oil	15 1 3	92-2413	Rod	6 9 1
76-2920	Stand - Transport	3 15 2	92-3000	Flange - Crankshaft	8 43 12
76-3630	Gear - Shaft, Driver	8 31 3	92-3001	Flange - Shaft, Drive	8 35 6
76-3640	Gear - Idler	8 41 6	92-3002	Shaft - Idler	8 49 6
76-3650	Gear - Crankshaft, Top	8 50 3	92-3003	Cap - End	8 38 6
76-3660	Gear - Crankshaft, Bottom	8 47 3	92-3004	Coring Frame Asm.	7 21 1
76-3710	Coupling - Flange	13 7 2	92-3005	Stud	8 36 150
76-3720	Shaft - Splined	13 8 1	92-3006	Nut - Lock	8 52 150
76-3730	Shaft - Splined	13 4 1	92-3008	Cap - Bearing	5 21 1
76-3740	Coupling - Splined	13 12 2	92-3009	Cap - Bearing	5 29 1
76-3750	Flange	13 3 2	92-3010	Housing - Bearing	5 14 1
76-3760	Plate - Mounting, Gearbox	7 3 1	92-3011	Housing - Bearing	5 13 1
77-3040	Rod - Connecting	8 22 6	92-3012	Seal - O-Ring	8 44 12
77-3050	Gearbox - Rear, Bevel	7 2 1	92-3013	Seal - O-Ring	5 12 4
77-3060	Screen - Outer, L.H.	7 10 1	92-3013	Seal - O-Ring	8 32 6
77-3070	Screen - Outer, R.H.	7 7 1	92-7900	Tine - Open Center	9 6 36
77-3080	Screen - Inner, L.H.	7 9 1	92-7930	Outer Guard	7 43 1
77-3090	Screen - Inner, R.H.	7 8 1	92-7931	Inner Guard	7 42 1
77-4430	Spacer	15 5 1	92-7936	Decal - Outer	2 27 1
77-4440	Shaft - Input	15 14 1	92-7937	Decal - Inner	2 26 1
77-4450	Gear - 18 Tooth	15 13 2	92-7941	Tine - Open Center	9 5 36
77-4460	Ring - Retaining	15 12 1	92-9941	Lynch Pin & Tie	3 44 1
77-4470	Cover	15 11 1	92-9948	Crank - Top	8 28 6
77-4480	Shaft	15 15 1	93-7734	Reinforced Collar	2 28 1
77-4490	Plug - Oil Level/Filler	15 9 1	93-8770	Nut	6 2 1
77-4500	Bolt - Hex. Socket Hd.	15 10 4	94-1762	Rest - Drive Shaft	3 42 1
77-4520	Screw - Cap Hex. Hd.	4 12 10	94-1775	Kit - Clutch, Cams &	2 ** 6
77-4560	Bearing	8 40 6	94-1778	Frame Asm. - Carrier	3 20 1
77-4660	Kit - Flange	2 * 1	94-1779	Gear Case Asm.	5 30 1
77-4670	Kit - Collar	2 * 1	94-3419	Tine - Tubular	11 4 36
77-4720	Cross & Bearing Kit	2 18 1	95-3103	Block - Outer, 6-Tine	11 2 6
77-4730	Cone - Shield	2 19 1	95-3104	Block - Bridging, 6-Tine	11 1 6
77-4740	Ring - Bearing	2 7 2	95-3105	Block - Inner, 6-Tine	11 7 12
77-4760	Chain - Safety	2 11 2	95-3122	Shield - Drive Line	3 31 1
77-4790	Bearing - Support	2 9 1	217-60	Rim	1 16 1
77-5320	Tine - Spiker	11 6 36	217-117	Rim	4 20 2
82-2890	Shield - Rubber	12 14 6	231-101	Tire	4 19 2
82-2900	Gear - 35 Tooth	5 25 1	231-119	Tire	1 15 1
82-3170	Drive Line (Complete)	2 * 1	232-27	Stem - Valve	4 22 2
82-3190	Ring - Retaining	8 4 12	232-35	Stem - Valve	1 21 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
237-168	O-Ring	8 39 12	3253-3	Washer - Lock	7 27 8
2412-133	R-Clamp	3 38 2	3253-4	Washer - Lock	5 10 8
281-1	Plug - Pipe	15 7 1	3253-4	Washer - Lock	7 11 16
283-71	Pin - Lynch	7 36 4	3253-7	Washer - Lock	13 5 12
283-72	Pin - Lynch	5 31 2	3253-7	Washer - Lock	1 8 4
285-21	Plug - Pipe	7 22 1	3253-7	Washer - Lock	7 18 4
285-21	Plug - Pipe	5 24 1	3253-11	Washer - Lock	1 33 1
302-55	Fitting - Grease	8 5 6	3253-21	Washer - Lock	4 2 4
302-55	Fitting - Grease	3 8 3	3256-2	Washer - Flat	7 30 10
302-55	Fitting - Grease	13 11 4	3256-2	Washer - Flat	3 46 1
302-55	Fitting - Grease	4 17 2	3256-22	Washer - Flat	14 4 4
302-55	Fitting - Grease	3 21 2	3256-62	Washer - Flat	8 23 6
302-55	Fitting - Grease	7 39 6	3256-69	Washer - Flat	7 24 4
302-61	Fitting - Grease	12 1 6	3256-74	Washer - Flat	3 37 2
302-61	Fitting - Grease	3 11 2	3272-23	Pin - Cotter	4 29 2
302-61	Fitting - Grease	1 13 1	3274-4	Screw - Cap Hex. Socket	8 29 72
321-2	Screw - Cap Hex. Hd.	7 28 8	3274-89	Screw - Cap Hex. Socket	13 6 12
321-4	Screw - Cap Hex. Hd.	14 7 12	3289-17	Screw - HSFH	12 6 12
321-9	Screw - Cap Hex. Hd.	14 5 4	3296-23	Nut - Lock	1 1 6
322-3	Screw - Cap Hex. Hd.	7 12 16	3296-23	Nut - Lock	7 5 2
322-5	Screw - Cap Hex. Hd.	5 9 8	3296-23	Nut - Lock	8 12 24
322-5	Screw - Cap Hex. Hd.	7 29 10	3296-23	Nut - Lock	3 34 4
322-5	Screw - Cap Hex. Hd.	3 45 1	3296-23	Nut - Lock	3 41 1
322-6	Screw - Cap Hex. Hd.	3 24 4	3296-29	Nut - Lock	13 9 2
322-12	Screw - Cap Hex. Hd.	13 10 2	3296-29	Nut - Lock	3 28 4
323-6	Screw - Cap Hex. Hd.	4 3 4	3296-29	Nut - Lock	3 43 1
323-6	Screw - Cap Hex. Hd.	3 33 3	3296-39	Nut - Lock	3 1 5
323-7	Screw - Cap Hex. Hd.	12 18 6	3296-39	Nut - Lock	7 34 6
323-8	Screw - Cap Hex. Hd.	5 16 20	3296-39	Nut - Lock	12 20 12
323-14	Screw - Cap Hex. Hd.	4 23 4	3296-56	Nut - Lock	14 10 16
323-15	Screw - Cap Hex. Hd.	3 19 2	3296-61	Nut - Lock	4 8 8
323-35	Screw - Cap Hex. Hd.	12 15 6	3296-70	Nut - Hex	3 3 2
325-5	Screw - Cap Hex. Hd.	13 1 2	3296-70	Nut - Hex.	1 22 1
325-5	Screw - Cap Hex. Hd.	1 7 4	3296-70	Nut - Lock	8 11 6
325-6	Screw - Cap Hex. Hd.	1 10 1	3296-70	Nut - Lock	8 24 6
325-8	Screw - Cap Hex. Hd.	1 3 4	32108-20	Screw - Countersink	3 17 4
325-8	Screw - Cap Hex. Hd.	7 14 2	32120-8	Ring - Retaining	3 4 4
325-12	Screw - Cap Hex. Hd.	3 40 1	32120-31	Ring - Snap	15 6 3
325-17	Screw - Cap Hex. Hd.	1 30 2	32120-62	Ring - Retaining	8 48 12
327-4	Screw - Cap, Hex. Hd.	7 25 4	32121-3	Pin - Roll	1 9 1
327-14	Screw - Cap Hex. Hd.	1 5 2	32121-15	Pin - Roll	12 17 6
327-14	Screw - Cap Hex. Hd.	4 7 8	32121-34	Pin - Roll	8 8 6
3212-5	Bolt	1 12 4	32121-34	Pin - Roll	4 18 2
3212-6	Screw - Cap Hex. Hd.	12 11 12	32151-88	Ring - Retaining	8 20 24
3217-11	Nut - Hex.	1 6 2	354-33	Fitting Assembly - Bulkhead	3 27 1
3234-13	Screw - Flange Hd.	4 6 8			

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Fairway Aerator has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Fairway Aerator, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Fairway Aerator.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Hitch & Front Wheel Assembly	1	6-Tine Blocks & .75 Diameter Tine Selection	9
Drive Line Assembly	2	2-Tine Blocks & Tine Selection	10
Chassis Assembly	3	6-Tine Blocks & Tine Selection	11
Rear Wheel Assembly	4	Roller & Finger Plate Assembly	12
Front Gear Box Assembly	5	Drive Line Assembly	13
Hydraulic Cylinder Assembly No. 71-6560	6	Aerator & Coring Head Covers	14
Corer & Shield Assembly	7	Gear Box Assembly No. 77-3050	15
Corer Gear Case & Stomper Arm Assembly	8	Numerical Parts Index	16-18

[illegible]