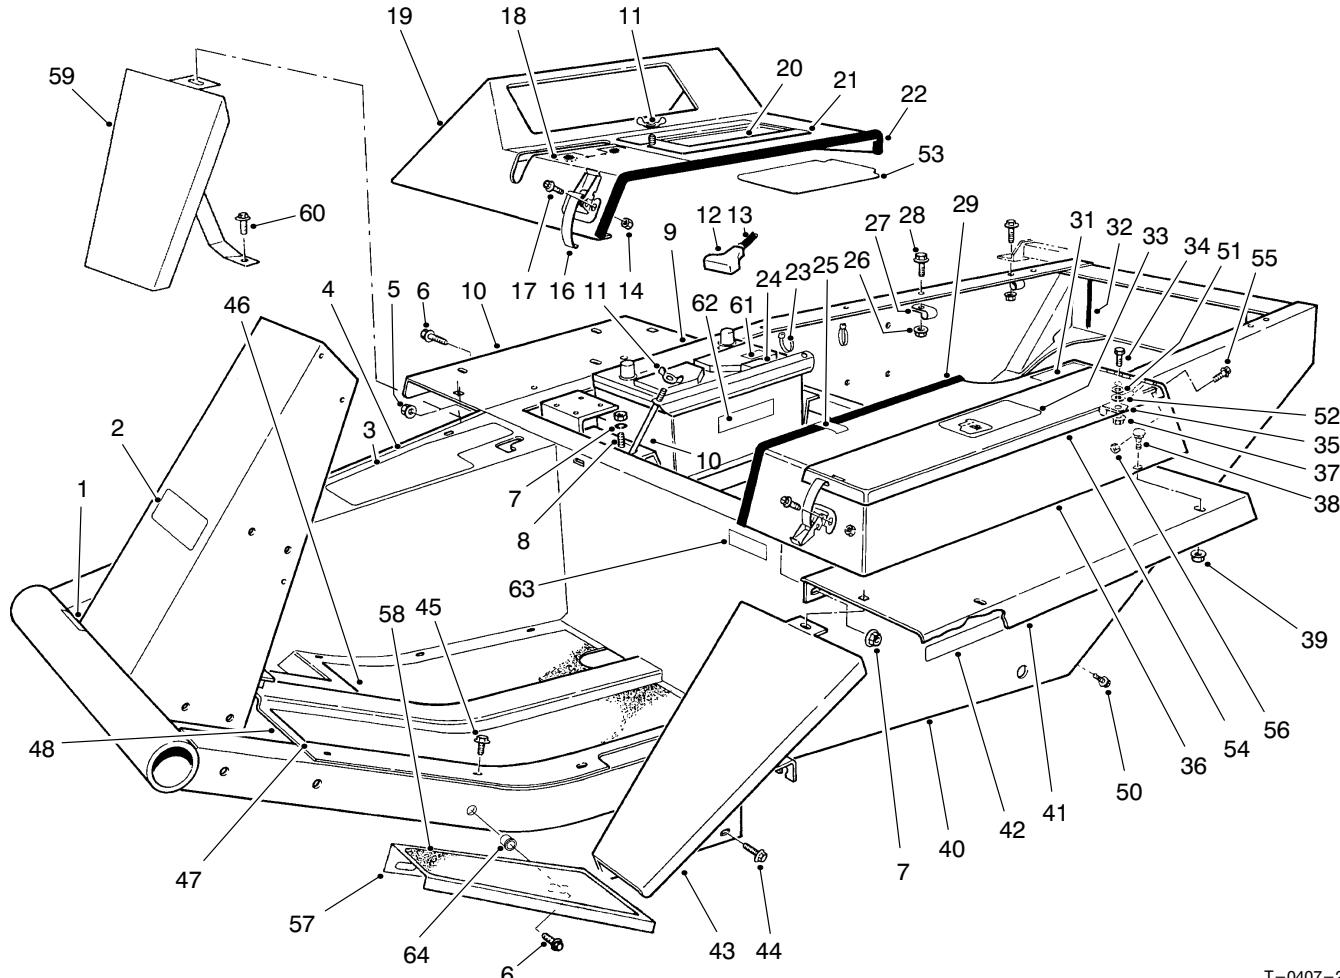


TORO®


MODEL NO. 30739-50001 & UP

PARTS
CATALOG**GROUNDMASTER® 325D Intl. 2WD
TRACTION UNIT**

T-0407-2

MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-7836	Decal - Traction Pedal	1	18	93-7806	Decal - Power Take off	1
2	70-2200	Decal - Toro	1	19	38-4550	Instrument Cover	1
3	93-7832	Decal - Caution	1	20	95-2746	Decal - Starting Instructions	1
4	21-2660	Footrest	1	21	24-9740	Cover - Battery Access	1
5	32128-21	Nut - Flange	10	22	39-8020	Trim - Instrument Cover	1
6	3234-12	Screw - HHF	5	23	3290-378	Cable Tie	2
7	3217-6	Nut - Hex.	2	24	24-6420	Hold Down - Battery	1
8	3253-4	Washer - Lock	2	25	2412-61	Clip - Tinnerman	2
9	63-9230	Battery Type MF24-78, Dry	1	26	3290-357	Nut - Flange	5
10	24-6390	Stud - Battery Hold Down	2	27	2412-4	Clamp	3
11	32103-2	Nut - Wing	3	28	3234-11	Screw - HHF	5
12	28-1280	Boot - Cable	1	29	37-9650	Trim	1
13	70-1180	Cable - Battery Positive (Incl. Ref. #12)	1	31	93-6680	Decal - Diesel Fuel	1
14	3296-2	Nut	6	32	43-4300	Trim - Rear Frame	2
16	249-21	Hook Clamp	3	33	93-7822	Decal - Refueling	1
17	3290-144	Screw - Machine	6	34	322-5	Screw - HH	1
				35	2412-74	Clamp	1

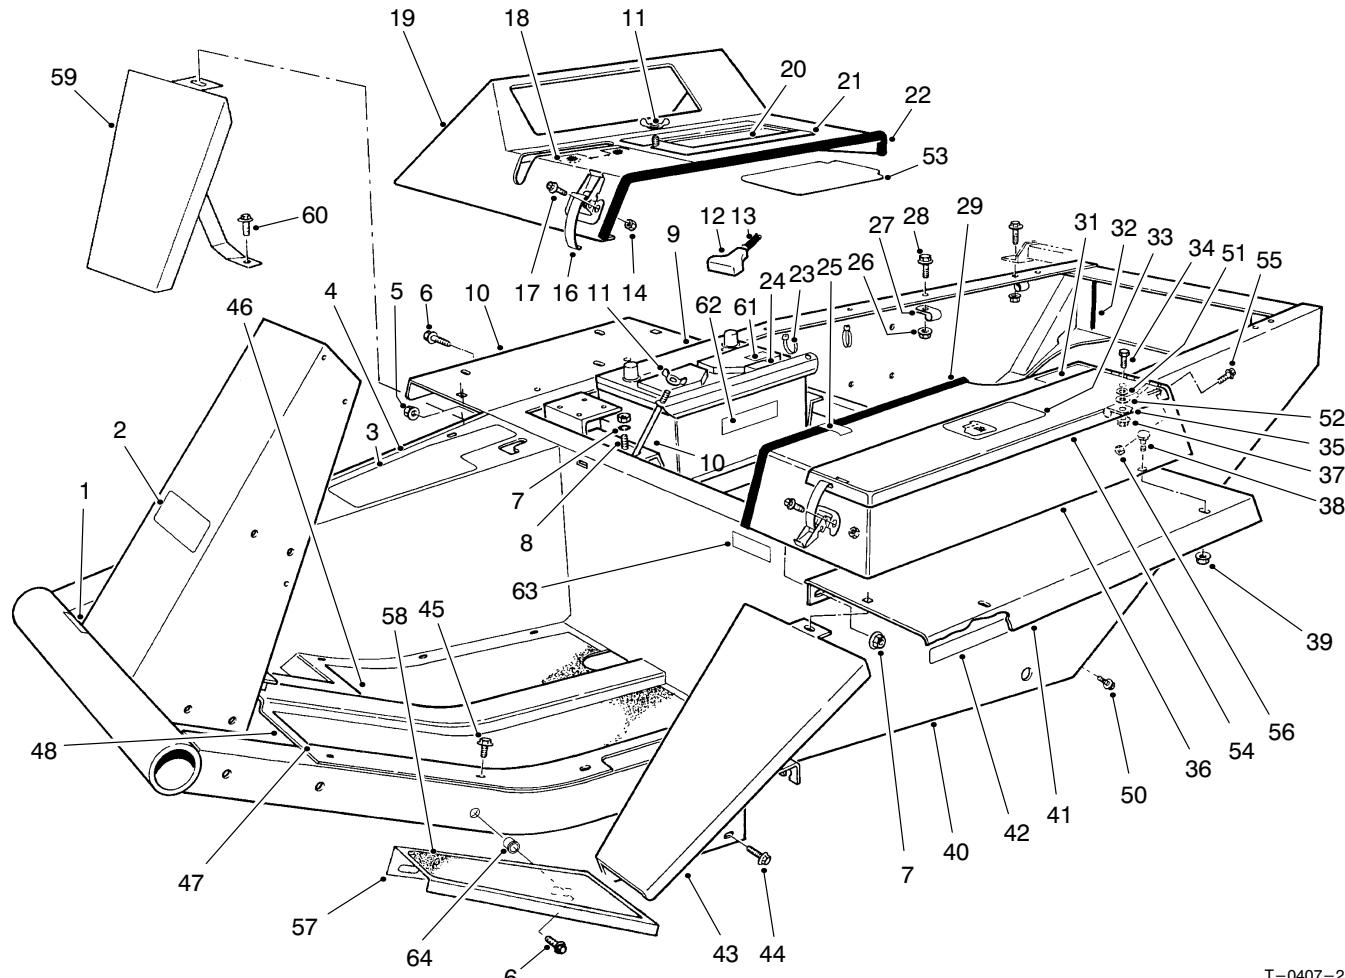

T-0407-2


MAIN FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
36	93-3183	Tool Box (Incl. Ref. #30)	1
37	32128-20	Nut - Flange	1
38	3229-1	Bolt - Carriage	6
39	32128-33	Nut - Flange	6
†40	94-2689	Frame (Incl. Ref. #1-2, 5, 42 & 50)	1
41	72-3690	Fender	2
42	93-7830	Decal - Torque	2
43	68-8610	Fender - Extension	1
44	3234-14	Screw - HH	2
45	32144-10	Screw - Tap	11
46	21-2770	Pad - Foot Rest R.H.	1
47	21-2760	Pad - Foot Rest L.H.	1
48	88-0070	Floor Plate	1
50	3234-25	Screw - HHF	4

Ref. No.	Part No.	Description	No. Used
51	3254-2	Washer - Lock, Int. Tooth	1
52	18-2770	Cable - Ground	1
53	92-7801	Shield - Battery Cover	1
54	93-3184	Cover (Incl. Ref. #33)	1
55	3290-144	Screw - HH	3
56	3296-2	Nut - Lock	3
57	93-7410	Panel - Footrest	1
58	66-3200	Tread - Foot, LH	1
59	93-7626	Fender - RH	1
60	3234-33	Screw - Flange	1
61	93-7276	Decal - Danger	1
62	93-6668	Decal - Charging	1
63	93-7252	Decal - CE	1
■64	32148-9	Nut - Clinch	1

† Includes item 42, page 15.

■ Special tool required.

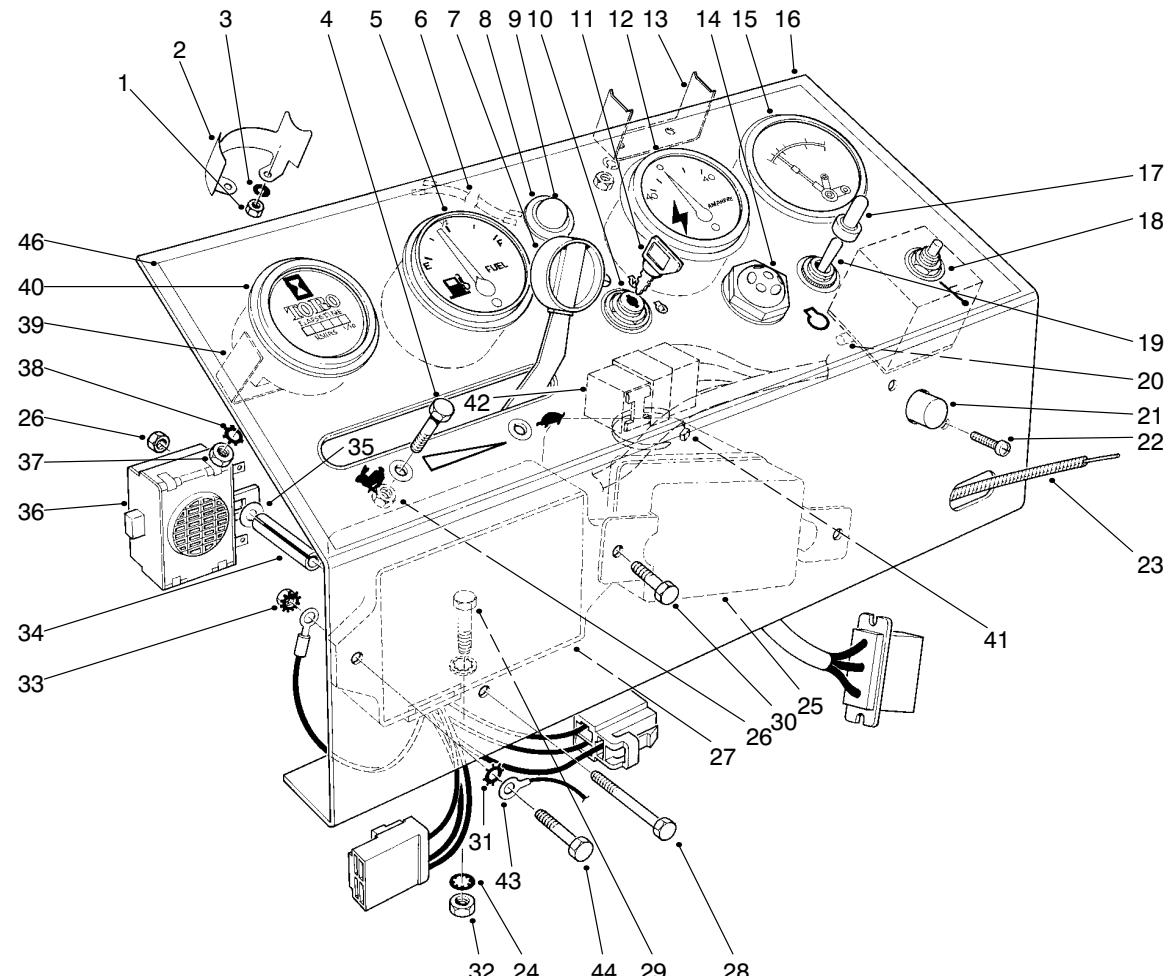


T-0408-1

INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3219-14	Nut - Hex.	6	22	3250-17	Screw - PH	2
2	38-1670	Clamp - Mounting	2	23	43-3990	Throttle Control (Incl. Ref. #7)	1
3	3253-17	Washer - Lock	6	24	3254-2	Washer - Lock, Int. Tooth	6
4	3290-134	Screw - HH	2	25	43-0410	Asm. - Regulator	1
5	38-1650	Gauge - Fuel (Incl. Ref. #1-3)	1	26	3296-12	Nut - Lock	3
6	44-2220	Wire Lead	1	27	43-1880	Asm. - Control Unit	1
7	233-35	Knob	2	28	3290-424	Screw - HH	1
8	44-2210	Light - Warning (Incl. Ref. #9)	1	29	322-5	Screw - HH	2
9	218-533	Lens	1	30	321-4	Screw - HH	2
10	27-2360	Switch - Key	1	31	3255-7	Washer - Lock, Ext. Tooth	3
11	63-8360	Key	1	32	3217-6	Nut - Hex	2
12	38-1660	Ammeter (Inc. Ref. #1-3)	1	33	32149-2	Nut - Lock	3
13	218-539	Clamp	1	34	43-3820	Spacer	1
14	42-9190	Lamp - Glow	1	35	3256-14	Washer - Flat	1
15	26-6750	Gauge - Engine Temp. (Incl. Ref. #1, 3, & 13)	1	36	22-7820	Asm. - Buzzer	1
16	43-3970	Panel - Instrument	1	37	3217-26	Nut - Hex.	1
17	218-473	Boot - Switch, Toggle	1	38	3255-5	Washer - Lock	1
18	26-6740	Relay - Temperature Reset	1	39	218-515	Bracket - Mounting	1
19	6-1659	Switch - Toggle (Inc. Ref. #17)	1	40	12-9990	Hour Meter (Incl. Ref. #37-39)	1
+20		Fuse - Temp. Relay 14 Amp. SFE	1	41	3290-379	Cable Tie	1
21	43-4000	Circuit Breaker	1	42	63-7590	Relay	1
				43	70-1190	Cable - Ground	1
				44	321-6	Screw - HH	1
				46	93-7813	Decal - Instrument Panel	1


†Obtain Locally

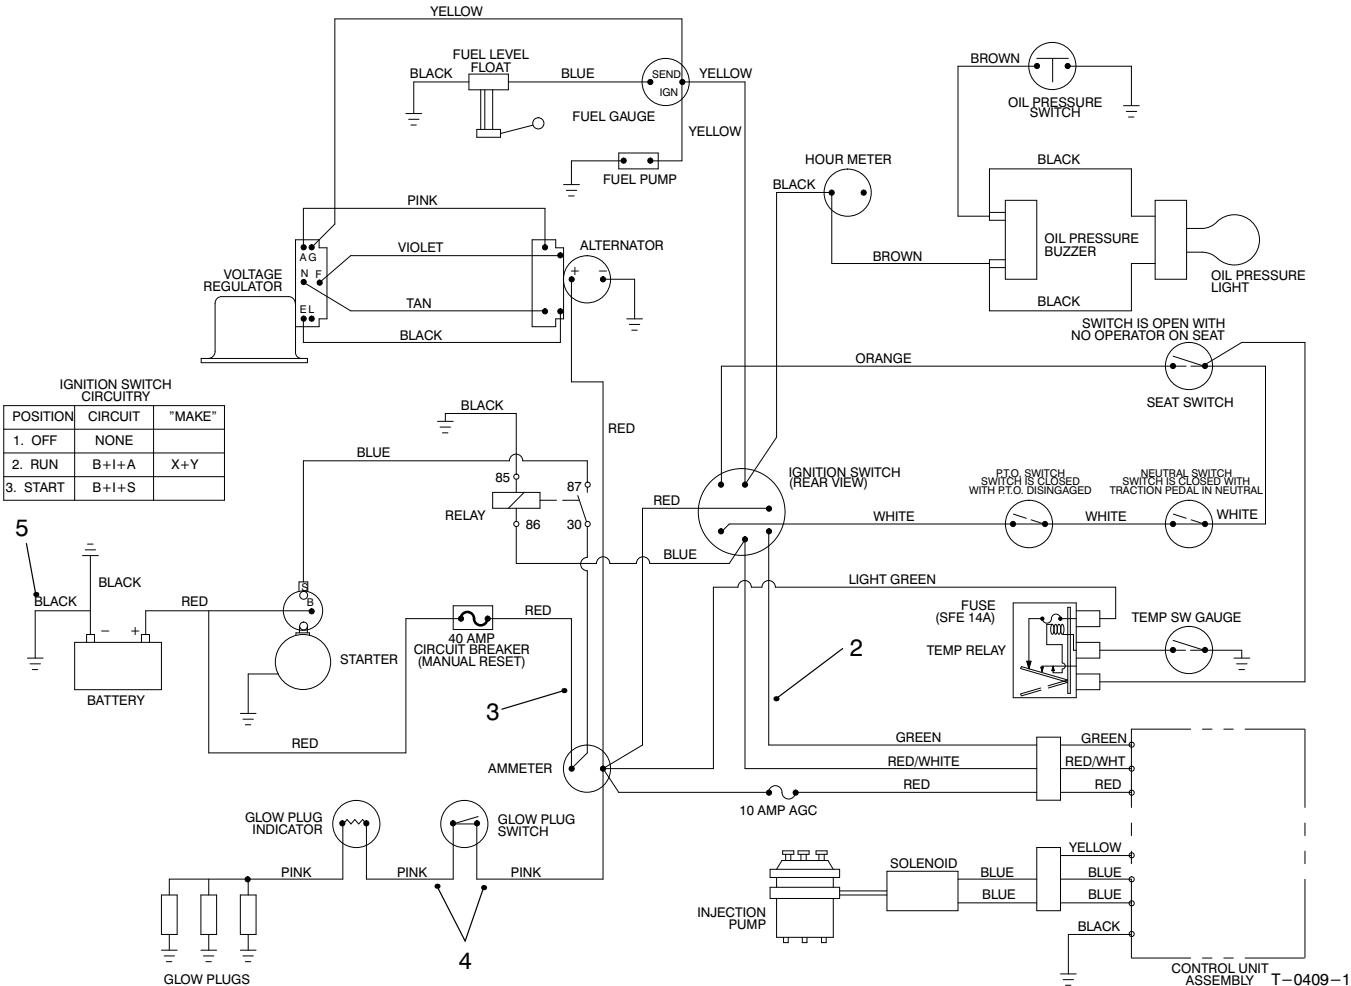

ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
2	88-1790	Asm. – Wire Harness	1
3	43-4040	Asm. – Wire	1


Ref. No.	Part No.	Description	No. Used
4	43-4010	Asm. – Wire	2
5	70-1190	Ground Cable	1

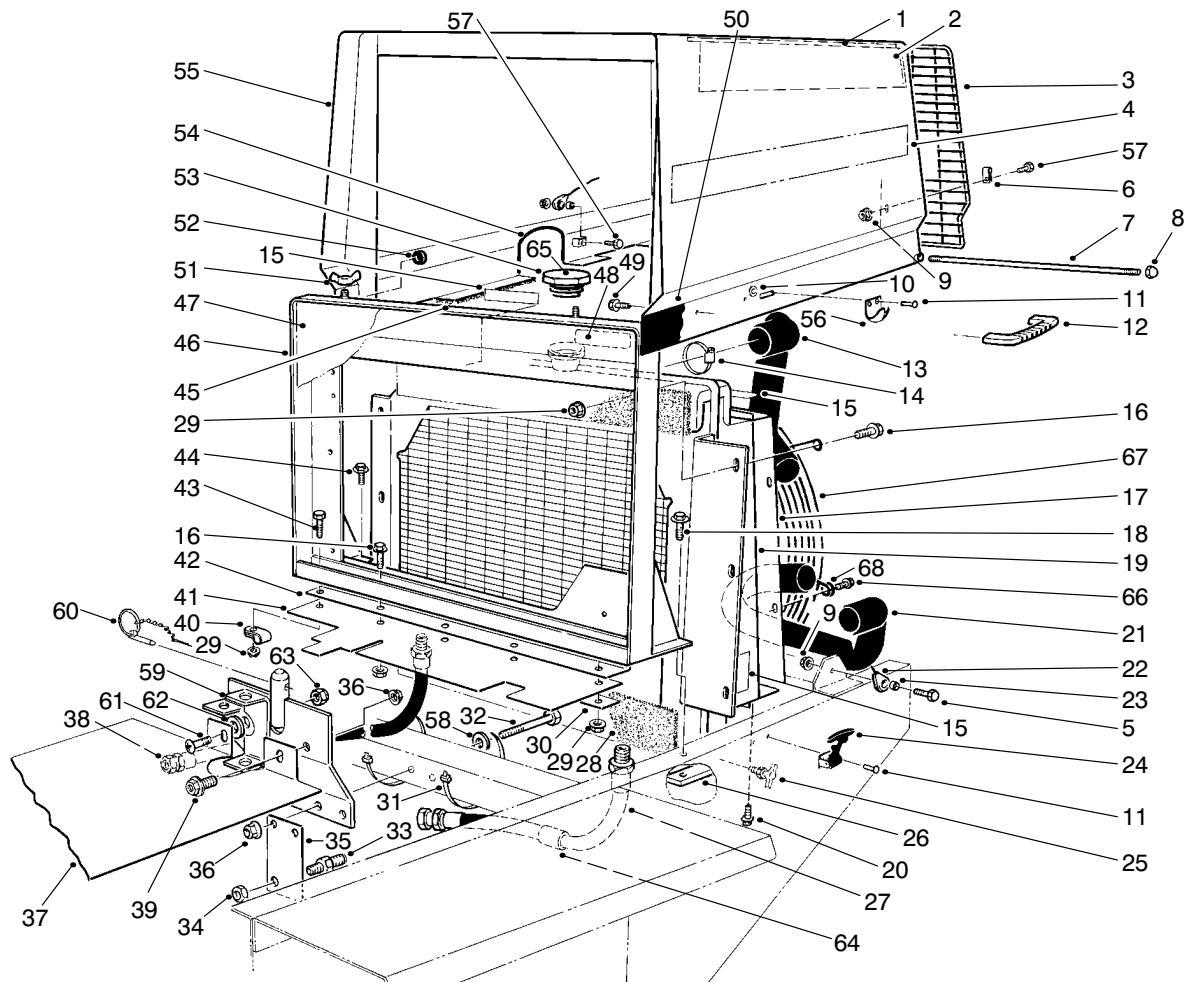

T-1185-1

RADIATOR & HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	77-5170	Foam - Top	1	27	63-9010	Asm. - Hose, Cooler/Pump	1
2	77-5160	Foam - Side	1	28	43-3320	Foam - Radiator	2
3	67-9000	Screen - Rear	1	29	32128-20	Screw - HHF	11
4	93-3188	Decal - Groundsmaster	2	30	67-8470	Strip - Retainer	1
5	321-4	Screw - HH	2	31	3290-379	Tie - Cable	4
6	2412-127	Clamp	4	32	323-14	Screw - HH	3
7	67-8840	Pin - Hinge	1	33	340-71	Union - Bulkhead	2
8	32111-8	Nut - Acorn	2	34	340-70	Nut - Lock Bulkhead	2
9	32128-32	Nut - Flange	8	35	68-9160	Bracket	1
10	3269-10	Washer - Backup	2	36	32128-21	Nut - Flange	5
11	3290-271	Rivet	4	37	88-3390	Plate - Sealing	1
12	65-5100	Handle - Hood	1	38	63-8960	Asm. - Hose, Valve/Cooler	1
13	43-3350	Hose - Upper Radiator	1	39	3234-11	Screw - Flange	1
14	2412-3	Clamp - Hose	4	40	2412-39	Clamp	1
15	93-7272	Decal - Warning	3	41	67-8570	Strip - Sealing	1
16	3234-14	Screw - HHF	11	42	43-3340	Plate - Sealing, Grille	1
17	43-3330	Shroud - Radiator	1	43	322-6	Screw - HH	1
18	3234-1	Screw - HHF	2	44	11-0590	Screw - Tap	2
19	33-2570	Asm. - Radiator	1	45	82-8950	Foam - Flange Hood	2
20	32104-116	Screw - Tap	4	46	67-8870	Support - Radiator	1
21	43-7020	Hose - Lower Radiator	1	47	67-9030	Grille	1
22	77-3170	Stop - Hood Cable	2	48	93-7821	Decal - Radiator Coolant	1
23	77-5250	Spacer - Hood Cable	4	49	46-8091	Screw - Flange	2
24	249-39	Latch - Flexible Draw	1	50	77-5141	Decal - Hood LH	1
25	304-46	Drain Cock	1	* 77-5151	Decal - Hood RH	1	
26	38-4600	Bar - Frame LH	1	51	32103-2	Nut - Wing	2

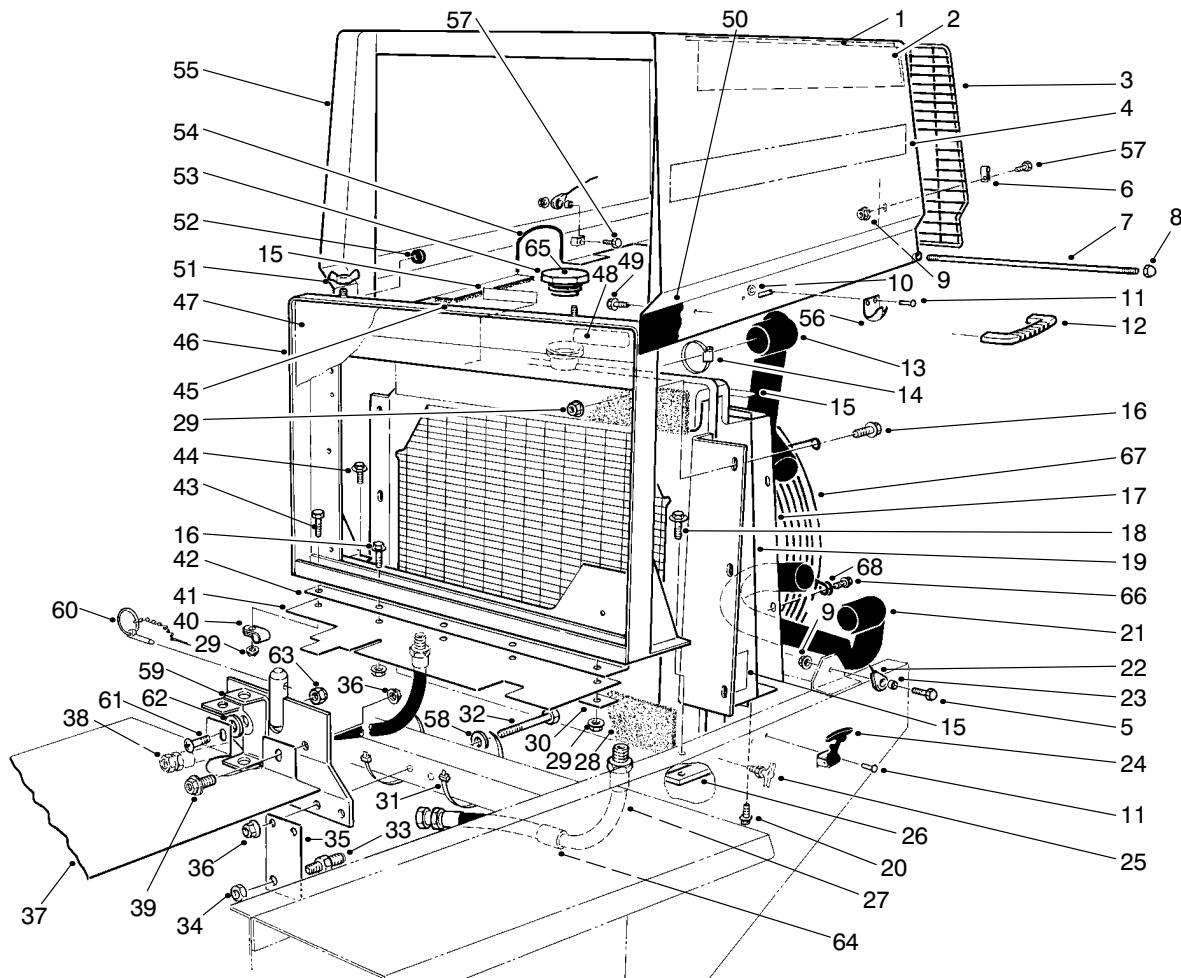


T-1185-1

RADIATOR & HOOD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	237-141	Bumper – Radiator	2
53	66-3240	Cap – Radiator	1
54	66-8111	Trim – Hood Cutout	1
55	14-4149	Hood	1
56	249-40	Keeper	1
57	3274-69	Screw – Socket Hd.	6
58	5-0838	Washer – Flat	3
59	86-9410	Bracket – Seat Support	1
60	283-76	Pin – Lynch	1

Ref. No.	Part No.	Description	No. Used
61	32122-16	Screw – Truss Hd.	1
62	88-3370	Spacer – Sealing Plate	1
63	3296-59	Nut – Lock	1
64	38-3400	Guard – Rubber	1
65	93-7840	Decal – Radiator Cap	1
66	32104-109	Screw – Hex. Hd.	4
67	93-9729	Guard – Fan	1
68	3256-22	Washer – Flat	4

*Not Illustrated

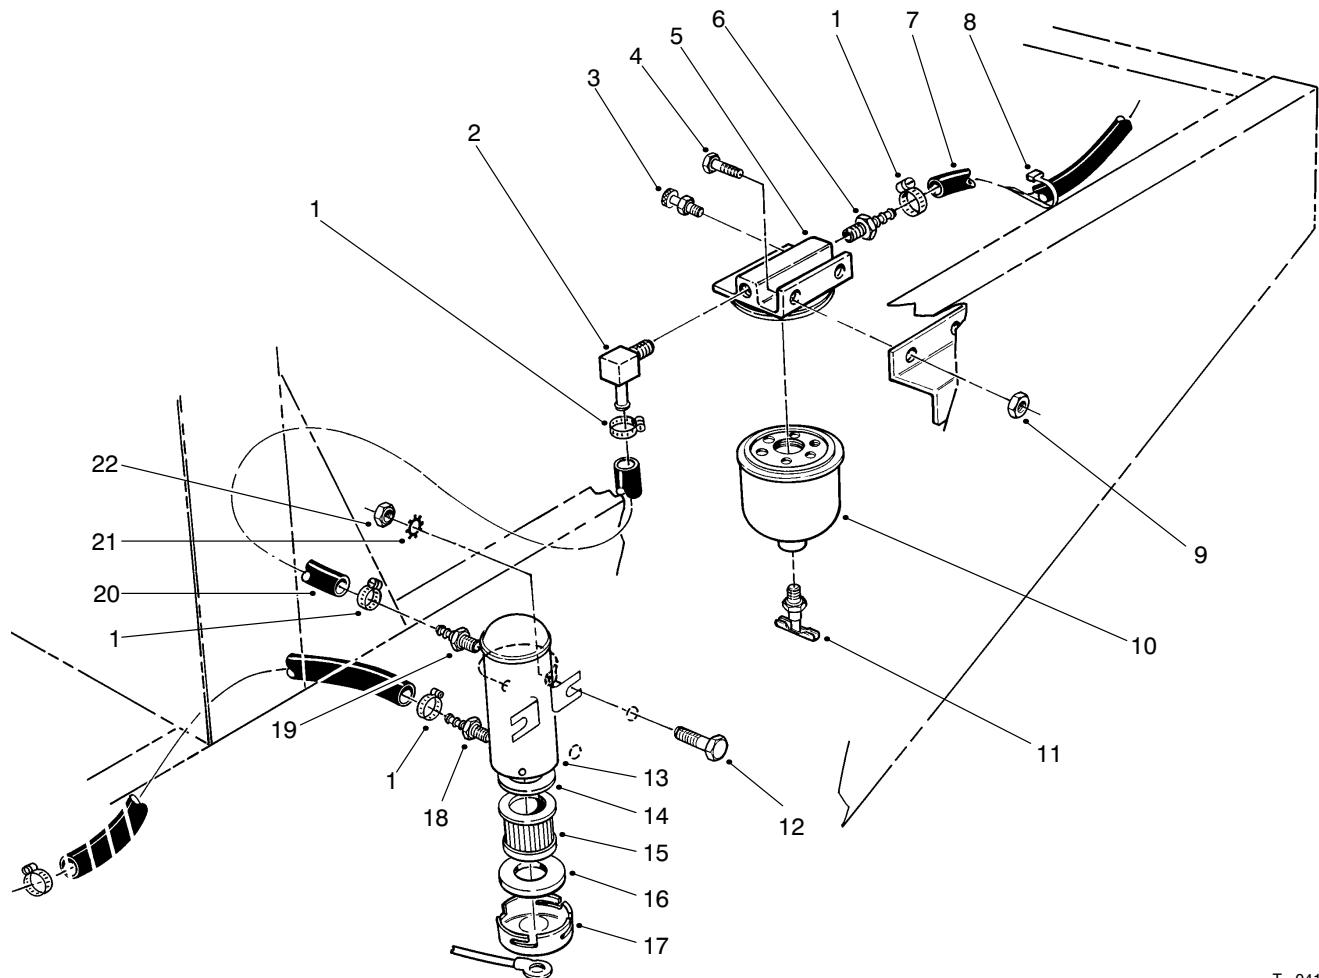


T-0411-1

FUEL FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	2412-108	Hose Clamp	5	13	53-8150	Asm. - Fuel Pump, Electric (Incl. Ref. #14-17)	1
2	304-96	90° Hose Barb	1	14	43-2570	Gasket	1
3	63-8290	Vent	1	15	43-2550	Filter	1
4	321-4	Screw - HH	2	16	43-2560	Gasket	1
5	63-8280	Asm. - Head	1	17	43-2580	Magnet	1
6	353-975	Hose Barb	1	18	353-702	Hose Barb	1
7	63-9720	Hose	1	19	304-73	Hose Barb	1
8	3290-378	Cable Tie	A/R	20	63-9650	Hose	1
9	32149-2	Nut	2	21	3255-7	Washer - Lock, Ext. Tooth	2
10	63-8300	Element - Fuel Filter (Incl. Ref. #11)	1	22	32149-2	Nut	2
11	63-8310	Drain Valve	1	*	95-3092	400 Hour Filter Kit (Incl. Ref. #10 & 15)	1
12	321-6	Screw - Cap Hex. Hd.	2				

*Not Illustrated

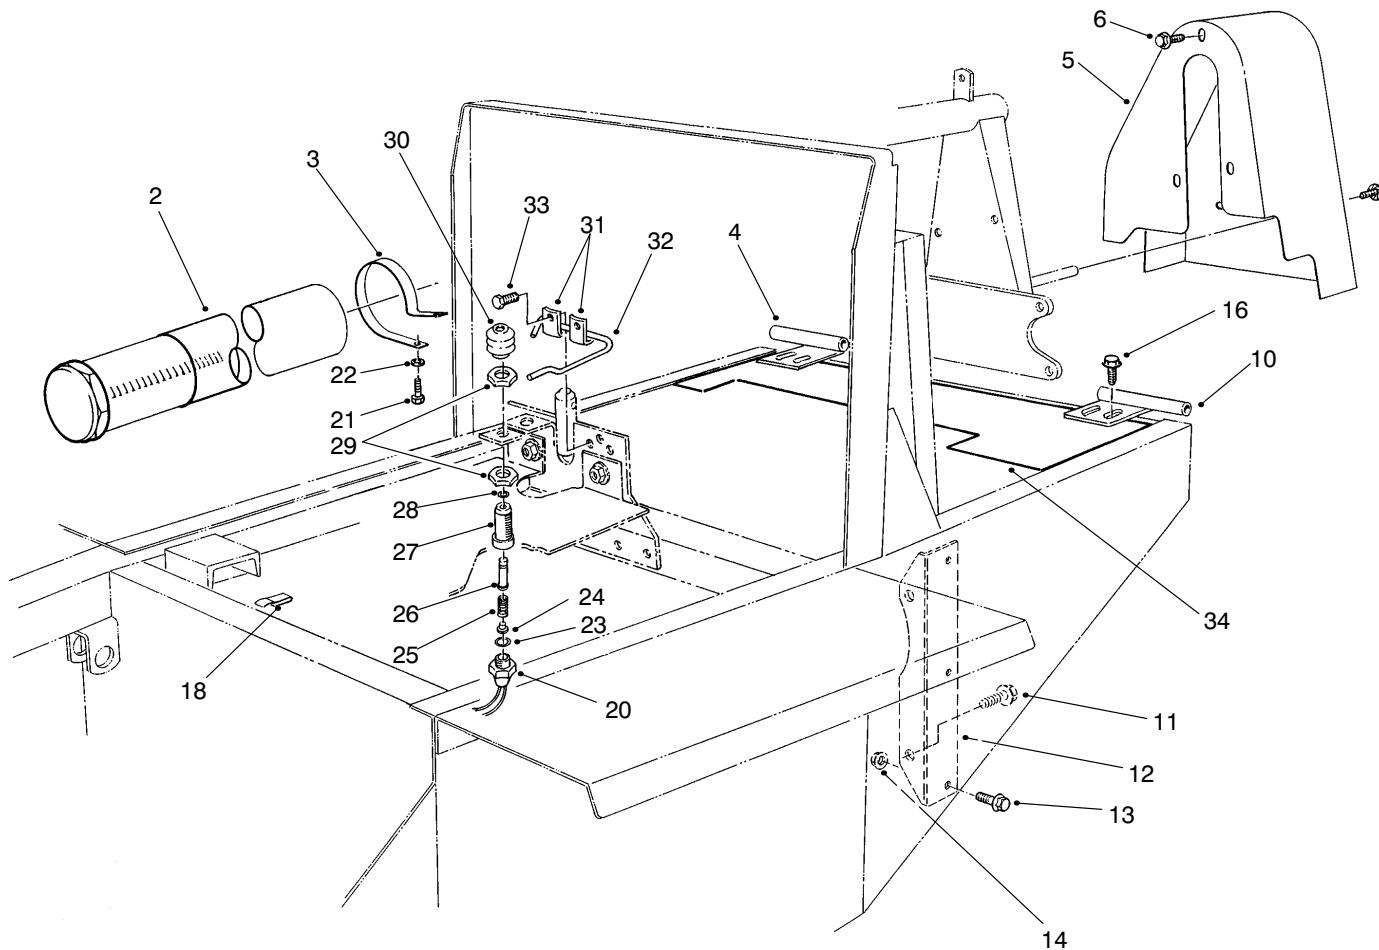


T-1186-1

INTERLOCK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	74-0720	Tube - Manual	1
3	2412-133	R-Clamp	2
4	67-8820	Hinge, R.H.	1
5	43-3900	Guard - Fan Belt	1
6	3234-14	Screw - HH	5
10	67-8810	Hinge L.H.	1
11	3234-32	Screw - Flange	2
12	67-8190	Bracket - Engine Support	2
13	3234-11	Screw - Flange	6
14	3290-357	Nut - Flange	6
16	3234-17	Screw - HH	4
18	212-93	Wire Clip	2
20	72-4320	Switch - Ball	1
21	322-2	Screw - HH	2
22	3256-23	Washer - Flat	2

Ref. No.	Part No.	Description	No. Used
23	237-30	O-Ring	1
24	43-8610	Guide - Spring & Ball Seat	1
25	43-8600	Spring - Compression	1
26	43-8860	Plunger - Switch	1
27	43-8620	Guide - Switch Pin	1
28	237-7	O-Ring	1
29	218-461	Nut - Jam	1
30	43-8870	Boot - Switch	1
31	3-6657	Clip	2
32	86-7040	Rod - Seat Prop	1
33	32144-10	Screw - Tap	2
34	93-8472	Guard - Flywheel	1
*	43-9071	Asm. - Switch (Incl. Ref. #20, 23-30; Qty. 1 of #29)	1


*Not Illustrated

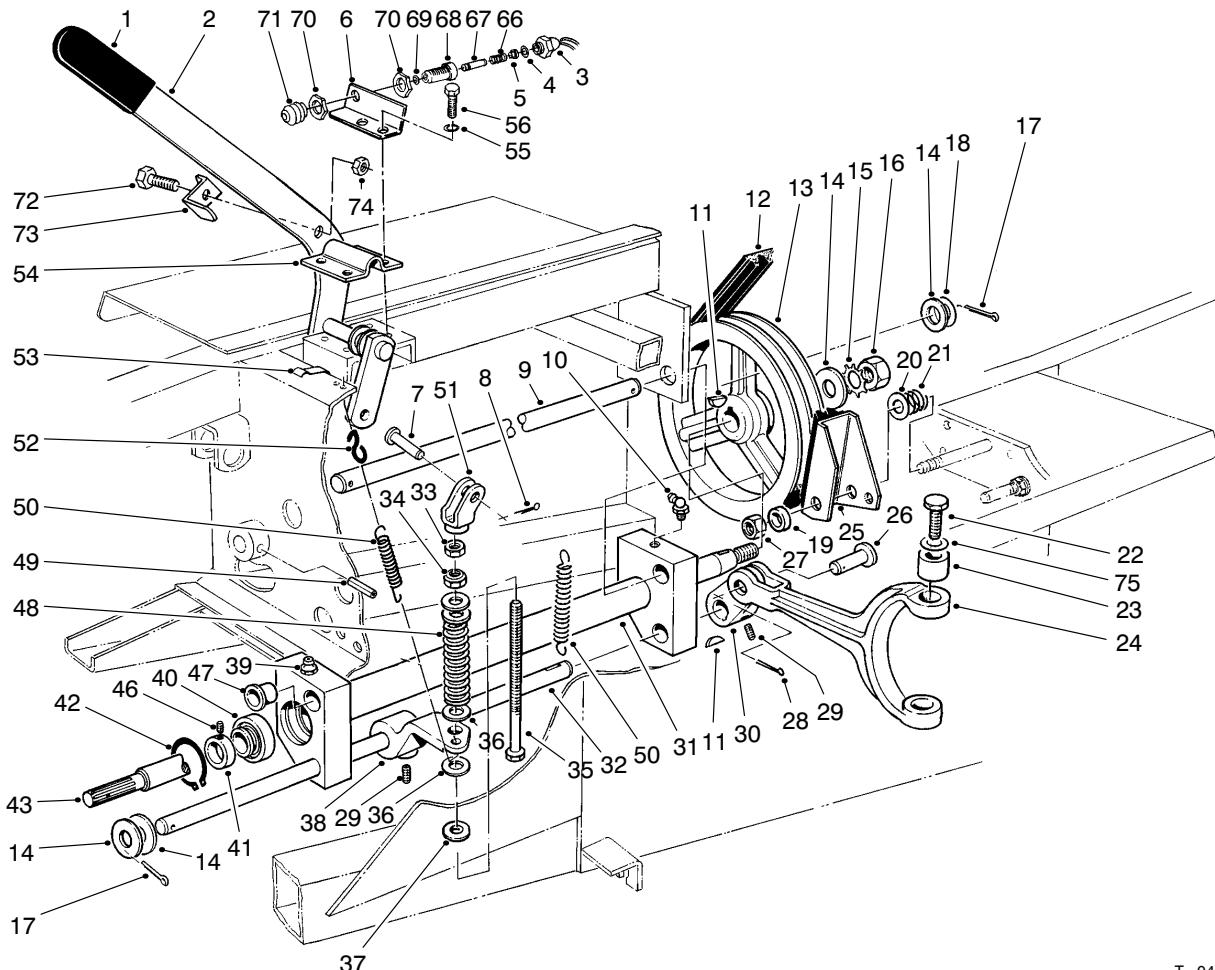


T-0413-2

POWER TAKE OFF (PTO) ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	21-1880	Grip - Handle	1	27	3296-28	Nut - Lock	1
2	84-8500	Lever - PTO	1	28	3272-11	Pin - Cotter	1
3	72-4320	Switch - Ball	1	29	3246-3	Screw - Set	4
4	237-30	O-Ring	1	30	92-4058	Arm - PTO	1
5	43-8610	Guide - Spring & Ball Seat	1	31	43-5500	Pivot - PTO	1
6	84-8520	Bracket - PTO Switch	1	32	43-5550	Shaft - Actuator, PTO	1
7	283-42	Pin - Clevis	1	33	3219-3	Nut - Hex.	1
8	3272-6	Pin - Cotter	1	34	3296-6	Nut - Lock	1
9	43-3860	Shaft - Pivot, PTO	1	35	27-7900	Screw - Adjusting	1
10	302-10	Fitting - Grease	1	36	3256-41	Washer - Flat	4
11	3257-5	Key - Woodruff	3	37	5-0652	Spacer	1
12	53-9660	V-Belt Torque Team	1	38	43-5570	Arm - Actuator, PTO	1
13	21-0230	Pulley - PTO	1	39	302-2	Fitting - Grease	1
14	3256-28	Washer - Flat	4	40	251-252	Bearing - Ball (Incl. Ref. #41)	2
15	3254-7	Washer - Lock	1	41	251-234	Collar - Lock (Incl. Ref. #46)	2
16	3219-7	Nut - Hex.	1	42	32120-22	Ring - Retaining	2
17	3272-22	Pin - Cotter	2	43	43-5540	Shaft - PTO	1
18	3-6498	Washer	A/R	46	3245-1	Screw - Set	2
19	3-8812	Spacer	1	47	256-113	Bushing - Flange	4
20	3256-6	Washer - Flat	1	48	21-0400	Spring - Compression	1
21	5-1747	Spring	1	49	32121-9	Pin - Roll	1
22	92-5727	Screw - HH	2	50	21-1830	Spring - Tension	2
23	92-5723	Bushing - PTO Fork	2	51	43-5630	Yoke - PTO	1
24	92-4060	Fork - PTO	1	52	5-0701	Anchor - Spring	1
25	27-7370	Asm. - Brake , PTO	1				
26	93-3769	Pin - Clevis	1				

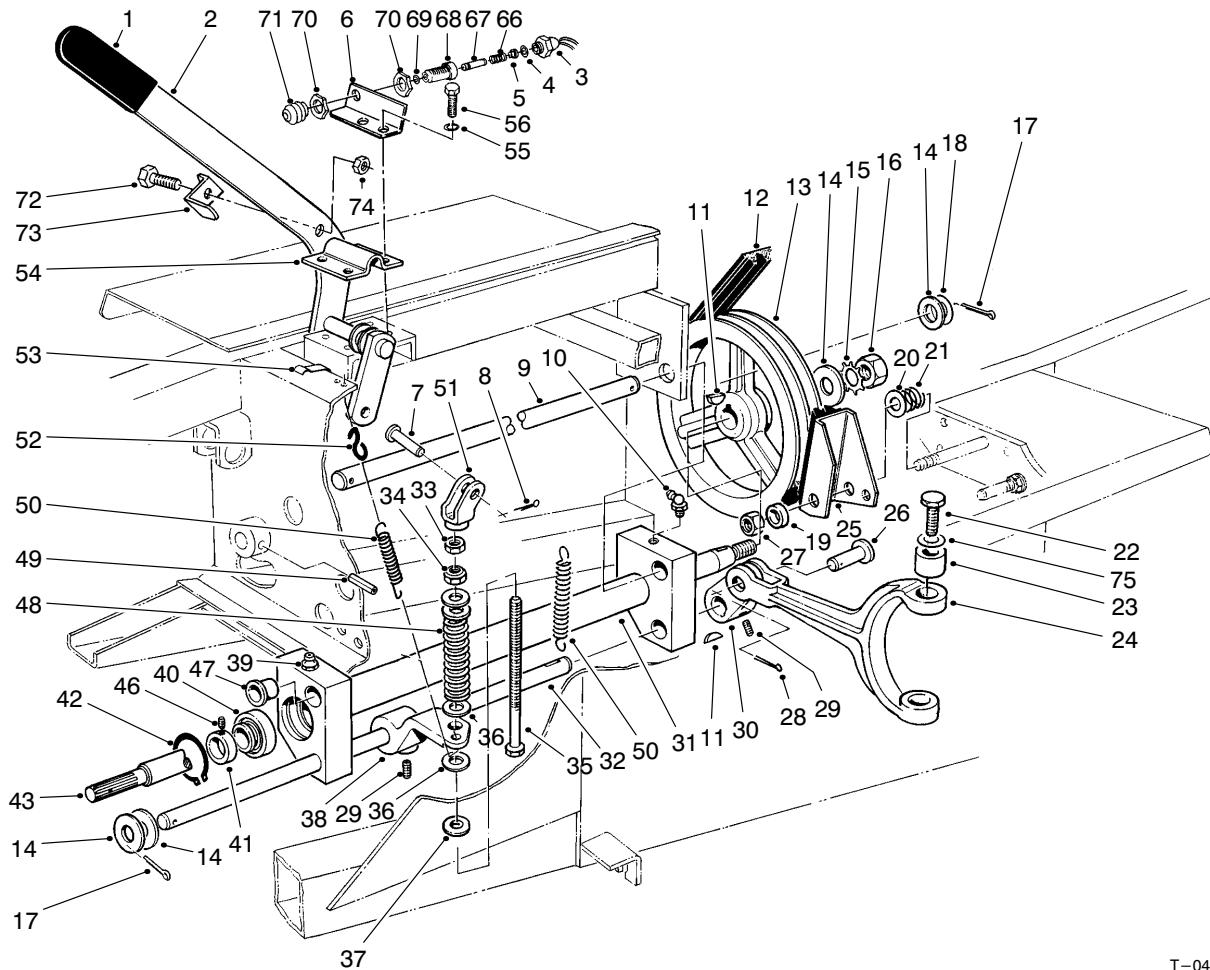

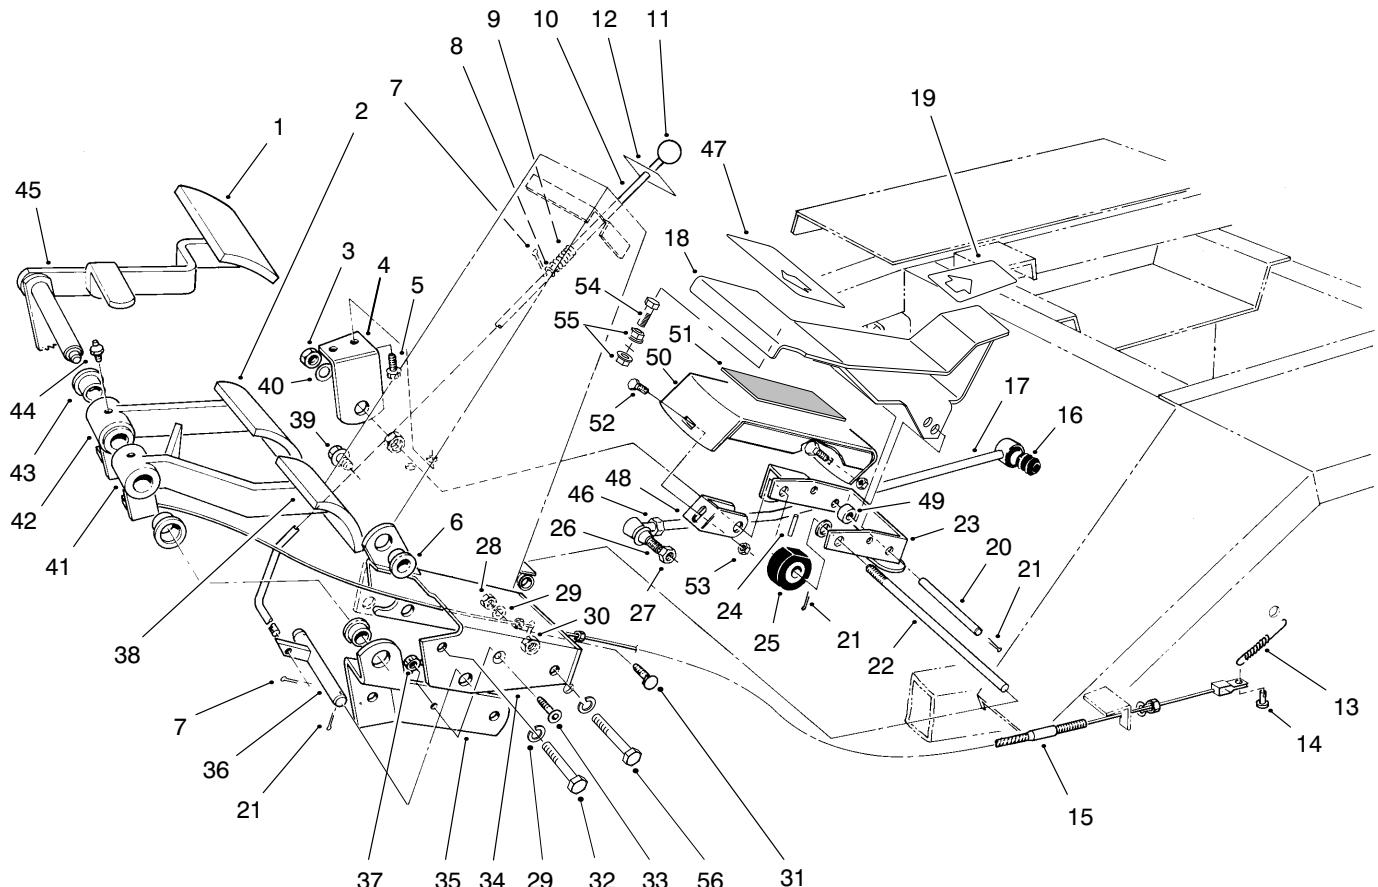


T-0415-4

BRAKE PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-8742	Pad - Brake	1	25	28-5220	Wheel - Friction	1
2	93-8743	Pad - Turn	2	26	21-0141	Asm. - Socket, R.H.	1
3	3218-5	Nut - Jam	2	27	3220-3	Nut - Jam	1
4	21-2850	Mount - R.H. Pedal	1	28	3217-7	Nut - Hex	2
5	11-0590	Screw - Tap	2	29	3253-21	Washer - Lock	4
6	256-156	Bushing	5	30	32153-2	Nut - Lock	2
7	3272-5	Pin - Cotter	3	31	3231-21	Bolt - Carriage	2
8	3256-22	Washer - Flat	1	32	323-13	Screw - HH	1
9	95-1821	Spring - Compression	1	33	3274-47	Screw - HSFH	1
10	82-8670	Rod - Brake Latch	1	34	27-7590	Mount - Brake	1
11	233-17	Knob	1	35	27-9270	Mount - Brake Pivot Shaft	1
12	93-7831	Decal - Parking Brake	1	36	27-7640	Shaft - Brake Latch	1
13	3-7243	Spring - Extension	2	37	32149-2	Nut	1
14	283-58	Pin - Clevis	2	39	3234-11	Screw - HH	3
15	21-3380	Cable - L.H. Brake	1	40	3256-26	Washer - Flat	1
*	21-3370	Cable - R.H. Brake	1	41	27-7490	Pedal - L.H. Brake (Incl. Ref. #43)	1
16	23-2270	Bushing - Rubber	1	42	27-7510	Pedal - R.H. Brake (Incl. Ref. #43)	1
17	23-2240	Rod - Pump Control	1	43	256-10	Bushing	4
18	94-3304	Pedal - Traction	1	44	302-5	Fitting - Grease	2
19	94-3308	Pad - Pedal Rear	1	45	27-8550	Pedal - Parking Brake	1
20	88-1640	Pin - Traction Pedal	1	46	3220-5	Nut - Jam	1
21	3272-6	Pin - Cotter	6	47	94-3307	Pad - Front Pedal	1
22	88-1650	Shaft - Traction Pedal	1	48	88-1680	Bracket - Footrest	1
23	88-1670	Bracket - Pivot (Inc. Ref. #6)	1	49	88-0470	Tube - Pedal, Spacer	1
24	32121-6	Pin - Roll	1				

*Not Illustrated

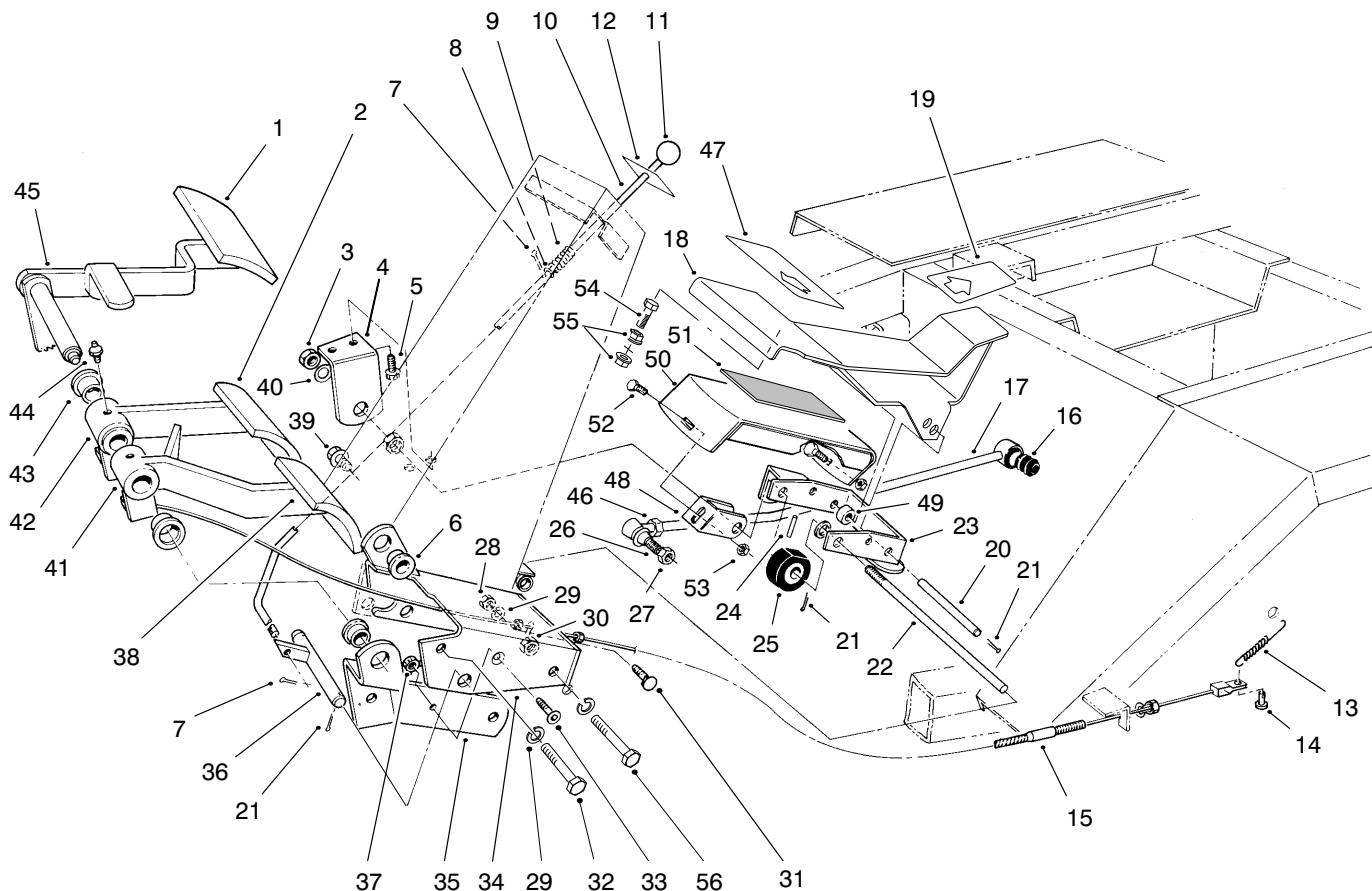


T-0415-4

BRAKE PEDAL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
50	88-1710	Footrest	1
51	88-1720	Pad - Footrest	1
52	3230-1	Bolt - Carriage	2
53	32128-25	Nut - Flange	2


Ref. No.	Part No.	Description	No. Used
54	323-42	Screw - Cap Hex. Hd.	1
55	32128-43	Nut - Flange Lock	2
56	323-14	Screw - HH	1

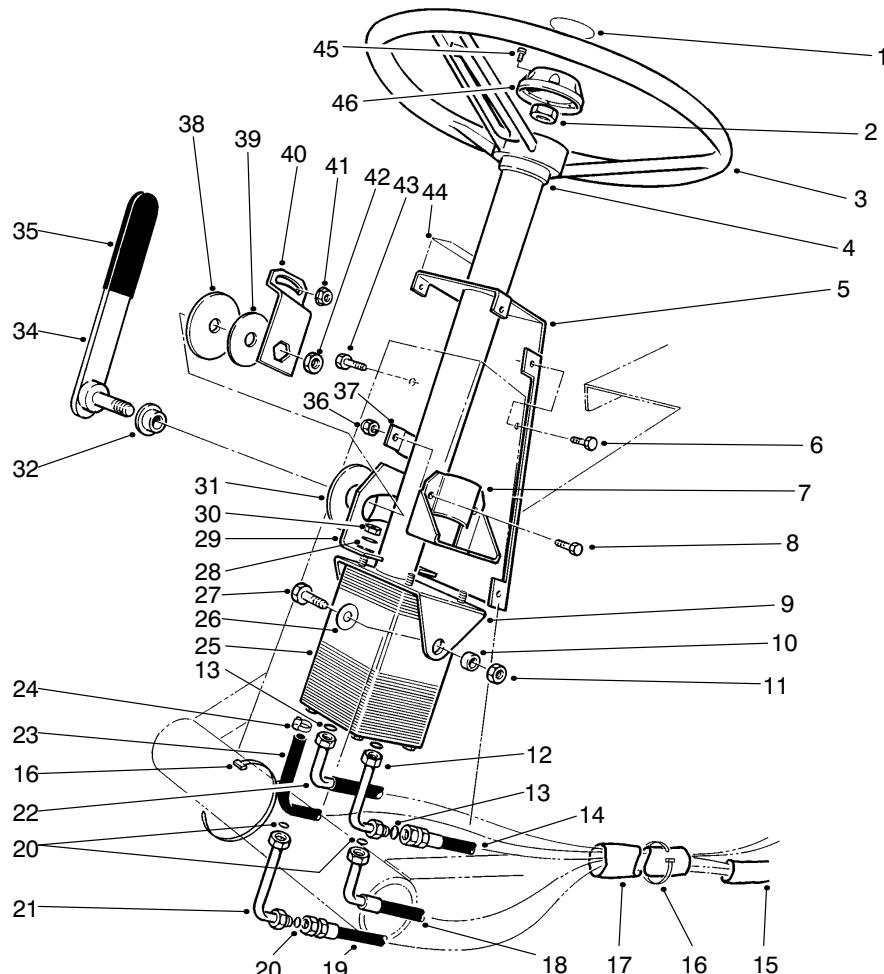

T-1187-2

POWER STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	68-5370	Decal - Toro	1	23	63-8990	Hose	1
2	66-9760	Nut - Hex.	1	24	2412-36	Clamp	2
3	75-0560	Asm. - Steering Wheel (Incl. Ref. #45 & 46)	1	25	92-7308	Valve - Power Steering	1
4	21-9260	Cover - Dust	1	26	3256-46	Washer - Flat	2
5	82-8660	Cover - Tower	1	27	323-6	Screw - HH	2
6	32144-10	Screw - Tap	6	28	3256-3	Washer - Flat	4
7	67-8690	Support - Column	1	29	80-2940	Plate - Pivot	1
8	3234-17	Screw - HH	2	30	3296-20	Nut - Lock	4
9	77-3120	Bracket - Mount, Column	1	31	31-0390	Disc - Friction	1
10	80-2960	Spacer - Tower	2	32	80-2980	Boss - Pin	1
11	32153-2	Nut - Hex.	2	34	93-1353	Lever - Steering Tilt	1
12	82-8760	Elbow	1	35	21-1880	Grip - Handle	1
13	237-30	O-Ring	3	36	3296-29	Nut - Lock	2
14	63-8970	Hose - Trans. to Steering	1	37	82-8650	Clamp - Half	1
15	70-1390	Sleeve - Protective	1	38	82-9010	Disc - Friction	1
16	3290-379	Tie - Cable	3	39	80-2930	Washer	1
17	70-1380	Sleeve - Protective	1	40	80-2880	Bracket - Steering, Tilt	1
18	68-9730	Hose - Steering to Cylinder	1	41	32128-20	Nut - Flange	1
19	68-9720	Hose - Cylinder to Steering	1	42	3218-7	Nut - Jam	1
20	237-22	O-Ring	3	43	322-4	Screw - HH	1
21	82-8770	Elbow	1	44	82-8940	Decal - Steering, Tilt	1
22	63-8980	Hose - Aux. to Valve	1	45	32144-21	Screw - PPH	1
				46	68-5140	Cap - Steering Wheel	1

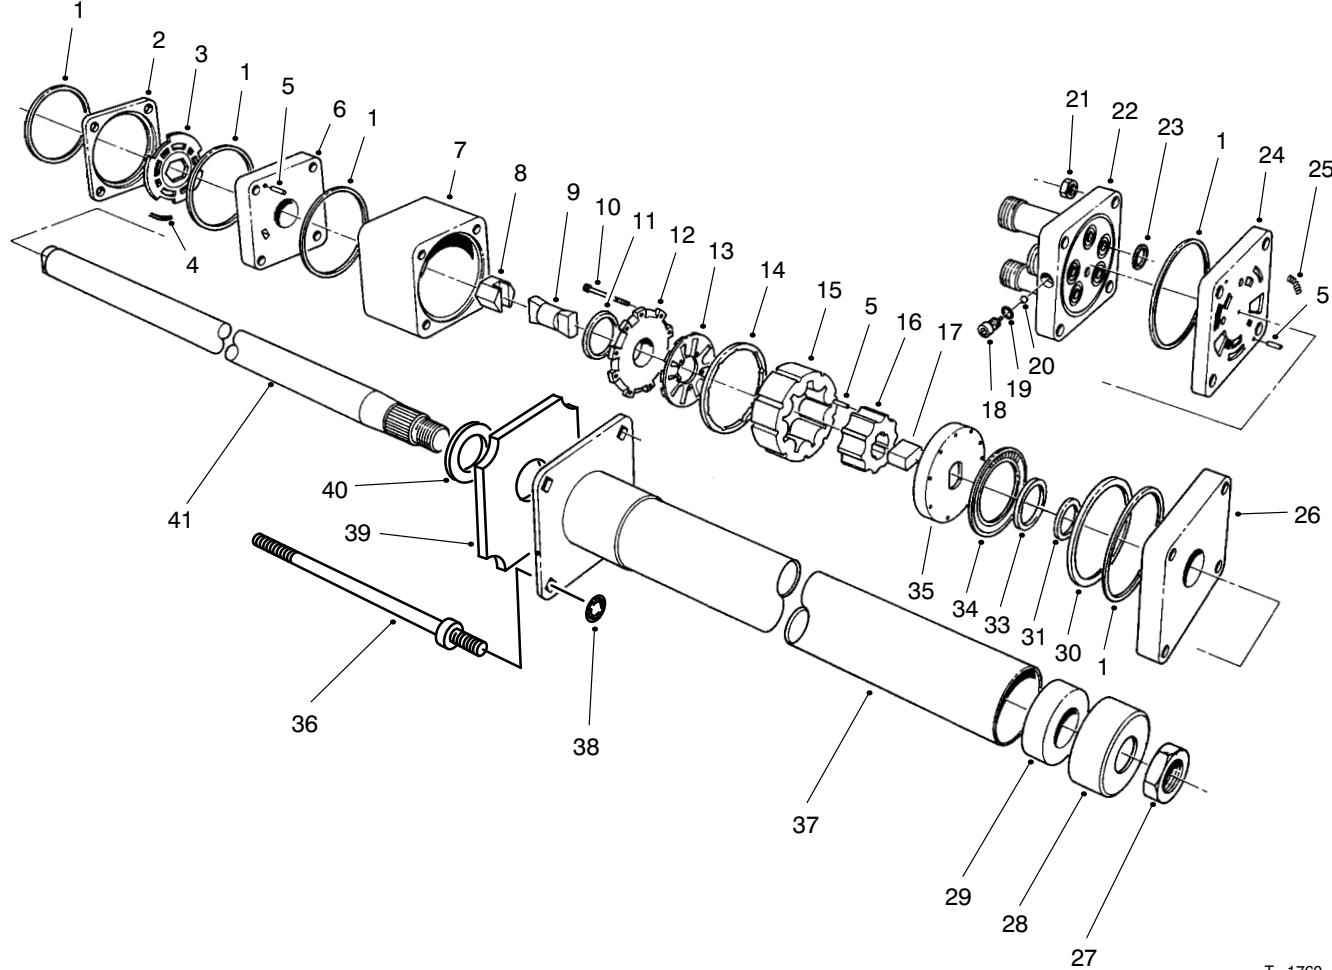

T-1760-2


POWER STEERING VALVE ASSEMBLY NO. 92-7308


Ref. No.	Part No.	Description	No. Used
1		Ring - Seal	5
2		Ring - Valve	1
3		Plate - Valve	1
4		Spring	3
5		Pin - Alignment	9
6		Manifold - Isolation	1
7		Ring - Metering	1
8		Asm. - Hex Drive	1
9		Link - Drive	1
10		Screw - HSH	11
11		Seal - Commutator	1
12		Cover - Commutator	1
13		Commutator	1
14		Ring - Commutator	1
15		Stator	1
16		Rotor	1
17		Spacer - Drive Link	1
18		Plug	1
19		O-Ring	1
20		Ball	1
21		Nut - Hex	4
22		Cover - Port	1
23		O-Ring	5
24		Manifold - Port	1
25		Spring	3

Ref. No.	Part No.	Description	No. Used
26		Plate - Upper Cover	1
27	3220-6	Nut	1
28	92-7315	Seal	1
29	66-9780	Bushing	1
30		Spacer - Thrust Bearing	1
31		Spacer - Seal	1
33		Seal - Face	1
34		Bearing - Thrust	1
35		Plate - Drive	1
36	92-7310	Bolt - Special	4
37		Upper Cover & Jacket	1
38	92-7316	Nut - Push On	4
39	92-7317	Foam	1
40		Washer - Retaining	1
41	* 66-9970	Shaft - Input	1
	* 66-9980	Spring Kit (Incl. Ref. #4 & 25)	1
	* 66-9990	Seal Kit (Incl. Ref. #1, 11, 19, 23 & 33)	1
	* 92-7314	Needle Roller Kit (Incl. Ref. #5)	1
		Asm. - Column (Incl. Ref. #27-29 & 37-41)	1

*Not Illustrated

HYDRAULIC SCHEMATIC

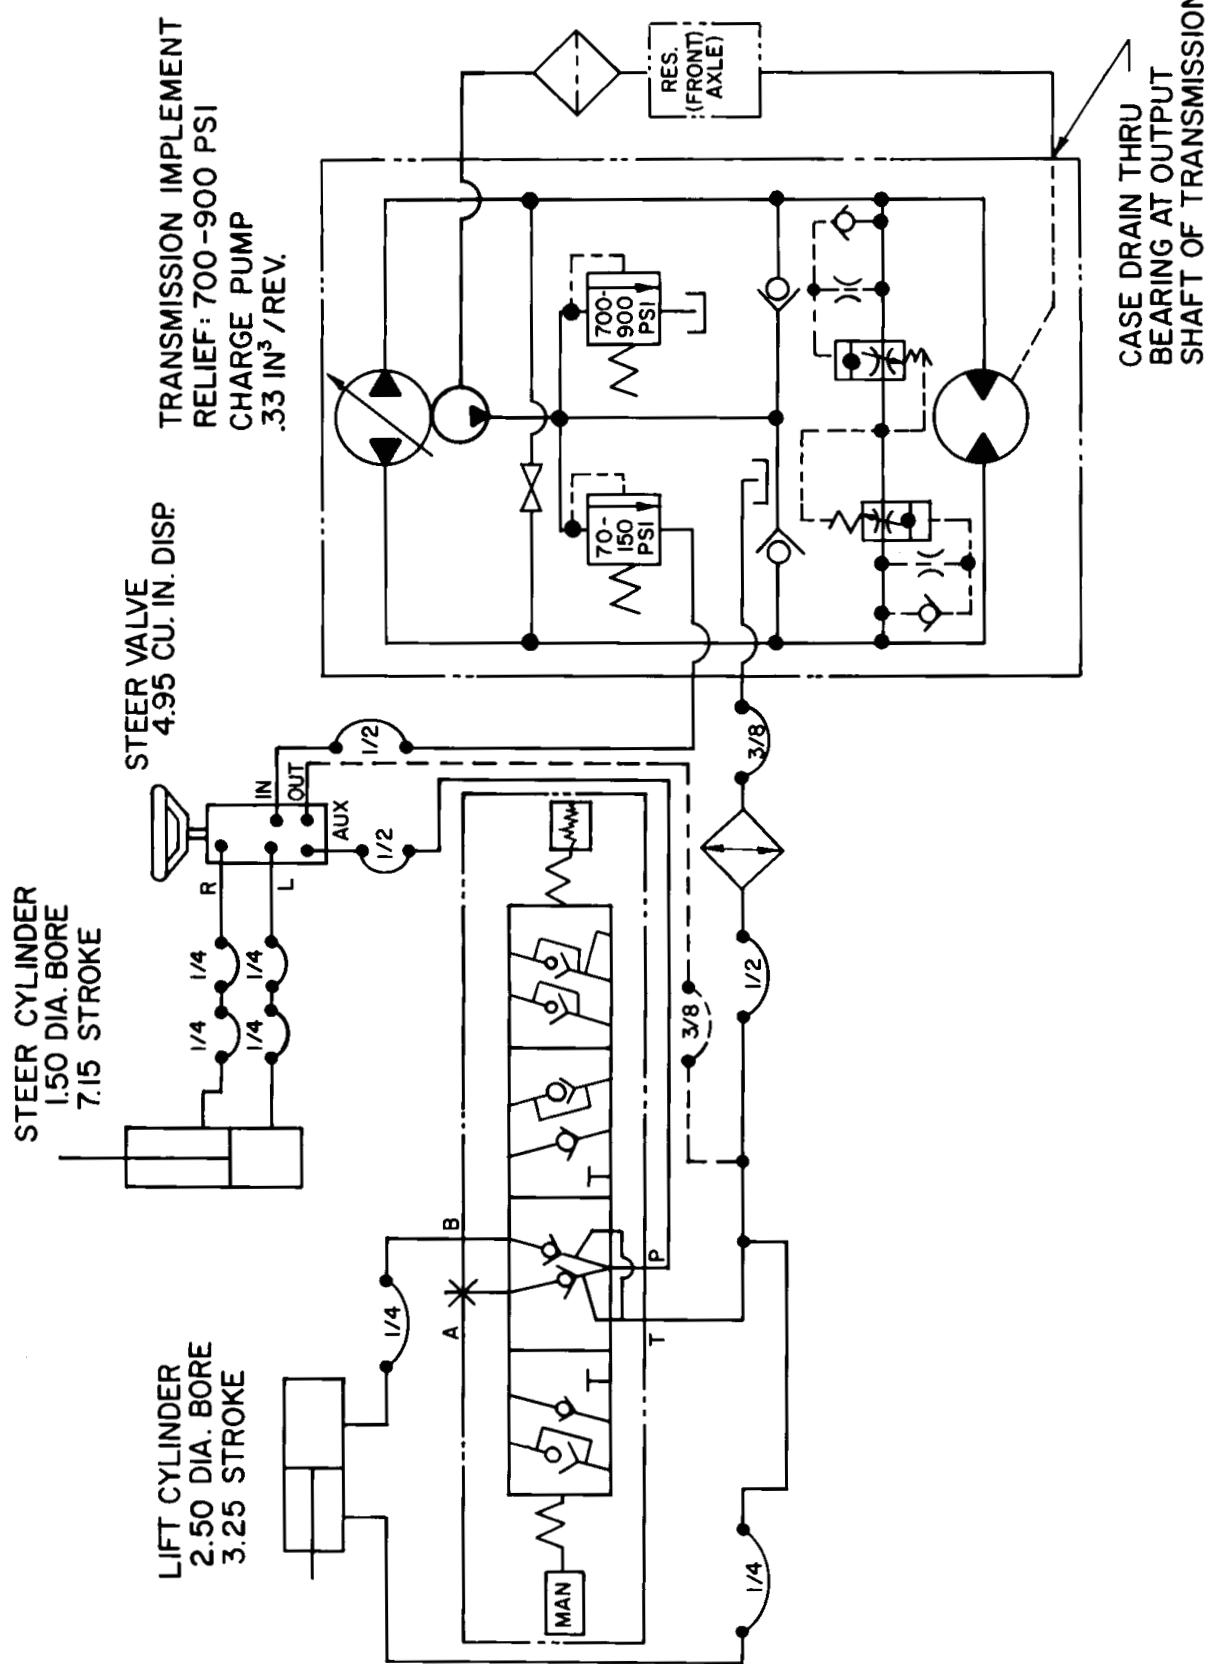

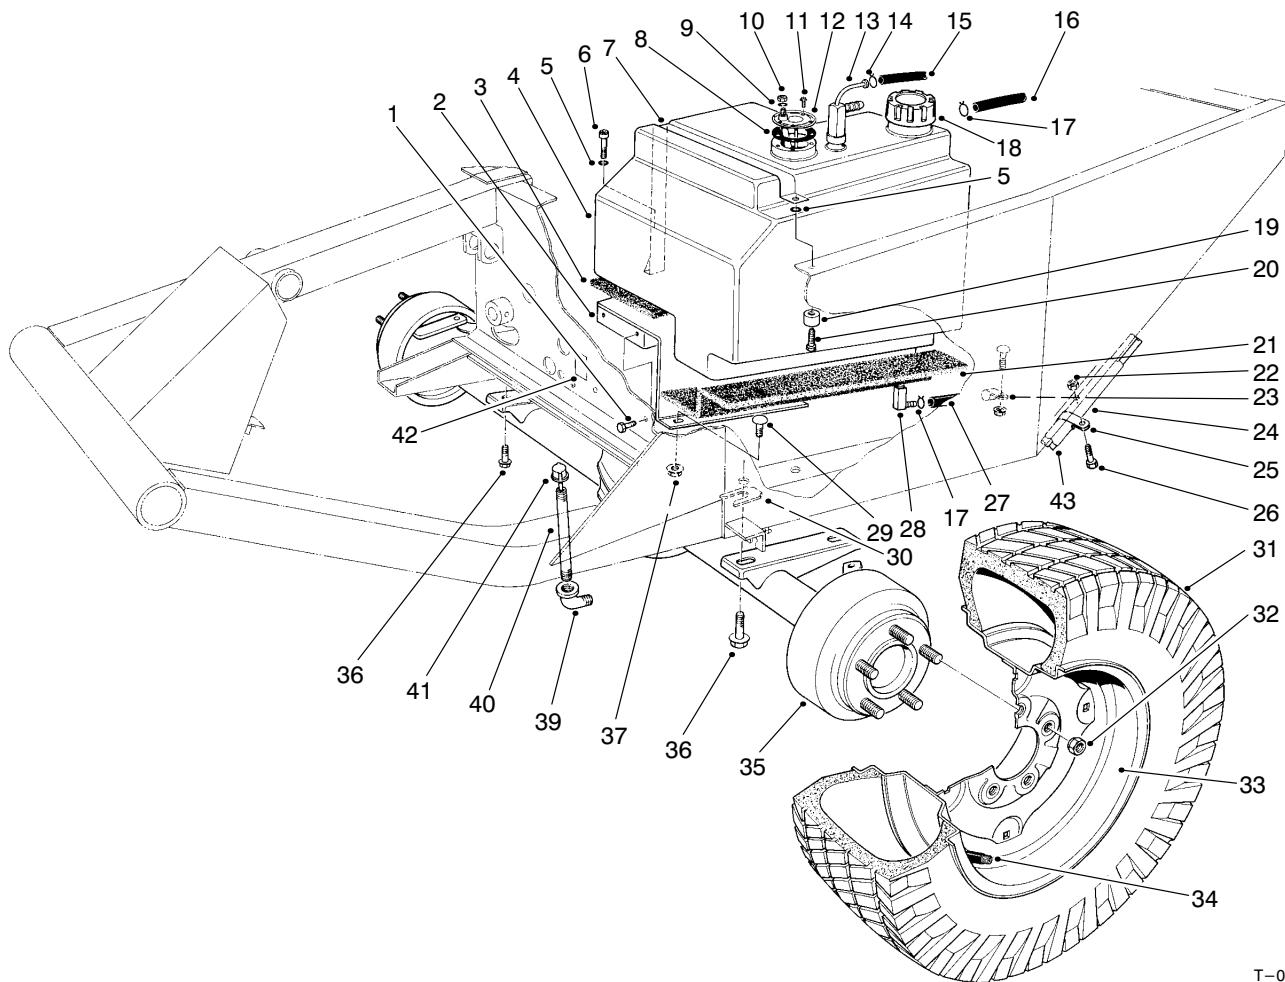


T-0419-1

FRONT AXLE & FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3234-11	Screw - HF	2
2	68-9760	Base - Fuel Tank	1
3	21-3600	Foam - Tank Support	1
4	43-4150	Fuel Tank (Incl. Ref. #13 & 14)	1
5	3253-3	Washer - Lock	2
6	32104-96	Screw - HH	1
7	37-9550	Strap - Fuel Tank	1
8	62-7650	Gasket	1
9	3253-17	Washer - Lock	1
10	3219-14	Nut - Hex.	1
11	32144-53	Screw - Tap	5
12	62-6840	Sender - Fuel Level	1
13	43-4160	Fitting - Return & Vent	1
14	2412-79	Clamp	1
15	43-4230	Hose Return	1
16	43-5690	Hose - Vent, Fuel Tank	1
17	2412-6	Clamp	2
18	55-3572	Fuel Cap	1
19	22-7810	Spacer	1
20	321-6	Screw - HH	1
21	21-3610	Foam - Tank Support	1
22	3296-20	Nut - Lock	2
23	2412-4	Clamp	1
24	56-7980	Sleeve - Protective	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
25	2412-126	R-Clamp	1
26	322-4	Screw - HH	1
27	63-9640	Hose Fuel	1
28	43-4190	Asm. - Fitting	1
29	3230-2	Bolt - Carriage	3
30	42-6080	Shim - Axle	A/R
31	231-138	Tire - 6 Ply	2
*	231-95	Tire - 23x10.5x12 (Optional)	2
32	23-7270	Nut - Wheel	10
33	217-117	Rim	2
*	217-116	Rim - 23x10.5x12 (Optional)	2
34	232-31	Valve Stem w/Cap	2
*	232-27	Valve Stem (For 23x10.5x12 Rim Opt.)	1
35	86-9600	Asm. - Differential	1
36	32144-67	Screw - Tap	4
37	32128-20	Nut - Flange	3
39	2811-9	Street Elbow	1
40	289-37	Pipe Nipple	1
41	23-5180	Dipstick	1
42	93-7823	Decal - Oil	1
43	68-9710	Hose - Steering Cylinder	2
*	231-90	Tube - Inner	2

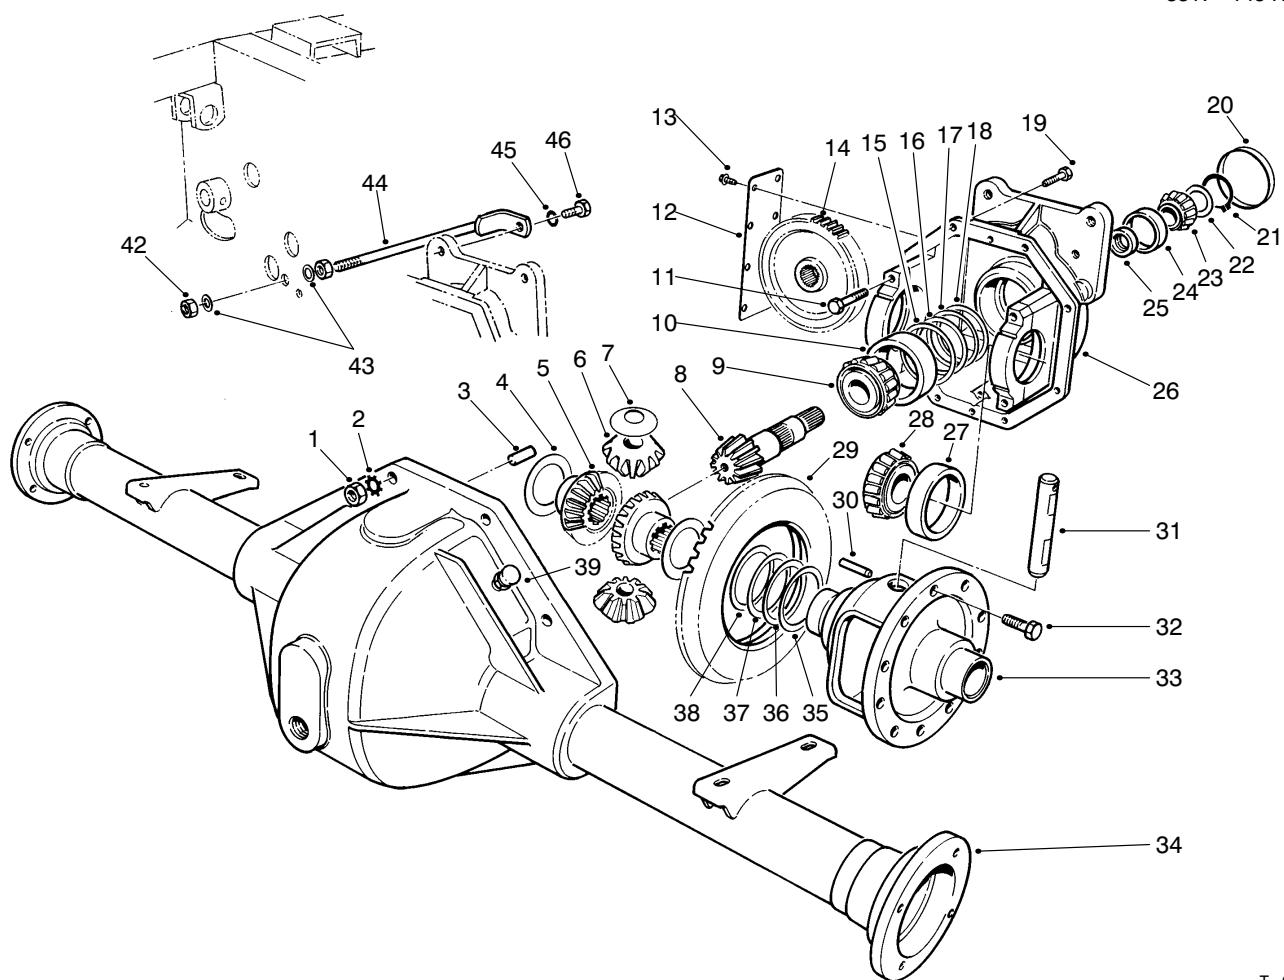


T-0919-2

DIFFERENTIAL ASSEMBLY NO. 86-9600

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3219-2	Nut	8	*22	46-2212	Shim – Front Pinion Bearing (.035)	A/R
2	3255-8	Washer – Lock	8	*	46-2213	Shim – Front Pinion Bearing (.037)	A/R
3	21-8270	Pin – Dowel	2	*	46-2214	Shim – Front Pinion Bearing (.039)	A/R
4	21-7720	Washer – Thrust	2	*	46-2215	Shim – Front Pinion Bearing (.041)	A/R
5	24-8790	Differential Bevel Gear Side	2	*	46-2216	Shim – Front Pinion Bearing (.043)	A/R
6	21-7690	Pinion Gear	2	*	46-2220	Shim – Front Pinion Bearing (.045)	A/R
7	21-7730	Washer – Thrust	2	*	46-2221	Shim – Front Pinion Bearing (.047)	A/R
8		Drive Pinion (Incl. Ref. #29)	1	*	46-2222	Shim – Front Pinion Bearing (.049)	A/R
9	43-6760	Roller Bearing Cone	1	*	46-2223	Shim – Front Pinion Bearing (.051)	A/R
10	43-6750	Roller Bearing Cup	1	*	46-2224	Shim – Front Pinion Bearing (.053)	A/R
11	92-1773	Screw – HH	4	*	46-2225	Shim – Front Pinion Bearing (.055)	A/R
12	21-7830	Gear Cover	1	*	46-2226	Shim – Front Pinion Bearing (.057)	A/R
13	12-5450	Thread Forming Screw	8	*	46-2410	Shim – Front Pinion Bearing (.062)	A/R
14	86-7230	Spur-Gear	1				
15	43-6710	Adjustment Shim .003	A/R				
16	43-6711	Adjustment Shim .005	A/R				
17	43-6712	Adjustment Shim .010	A/R				
18	43-6713	Adjustment Shim .030	A/R				
19	3210-7	Screw – HH	8				
20	21-7850	Cup – Plug	1				
21	43-6550	Ring – Retaining	1				
22	46-2210	Shim – Front Pinion Bearing (.031)	A/R				
*	46-2211	Shim – Front Pinion Bearing (.033)	A/R				

*Not Illustrated

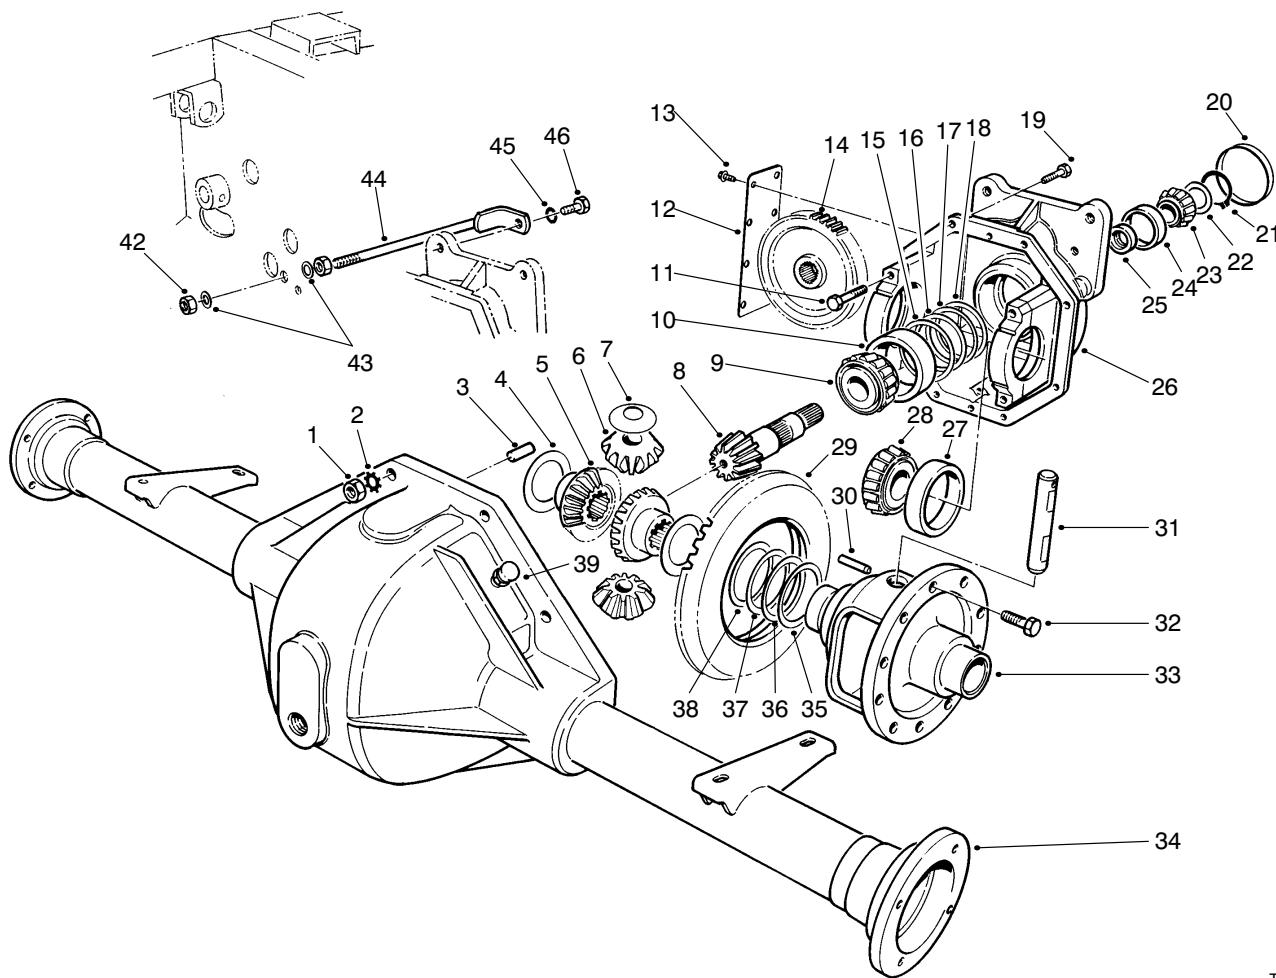


T-0919-2

DIFFERENTIAL ASSEMBLY NO. 86-9600 (Continued)

Ref. No.	Part No.	Description	No. Used
22	46-2411	Shim – Front Pinion Bearing (.064)	A/R
* 46-2412		Shim – Front Pinion Bearing (.066)	A/R
* 46-2413		Shim – Front Pinion Bearing (.068)	A/R
* 46-2414		Shim – Front Pinion Bearing (.070)	A/R
* 46-2415		Shim – Front Pinion Bearing (.072)	A/R
* 46-2416		Shim – Front Pinion Bearing (.074)	A/R
* 46-2420		Shim – Front Pinion Bearing (.076)	A/R
* 46-2421		Shim – Front Pinion Bearing (.078)	A/R
* 46-2422		Shim – Front Pinion Bearing (.080)	A/R
* 46-2423		Shim – Front Pinion Bearing (.082)	A/R
* 46-2424		Shim – Front Pinion Bearing (.084)	A/R
* 46-2425		Shim – Front Pinion Bearing (.086)	A/R
* 46-2426		Shim – Front Pinion Bearing (.088)	A/R
23	254-91	Bearing Cone	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
24	254-90	Bearing Cup	1
25	21-8020	Spacer – Pinion Bearing	1
26	86-9580	Upper Housing (Incl. Ref. #11)	1
27	254-66	Cup – Tapered Bearing	2
28	254-65	Cone – Tapered Bearing	2
29	32121-15	Ring Gear	1
30	21-7700	Pin – Roll	1
31	21-7770	Pinion Mate Shaft	1
32	21-7670	Drive Gear Screw	5
33	43-6840	Differential Case	1
34	21-8120	Lower Housing	1
35	21-8110	Adjustment Shim .030	A/R
36	21-8110	Adjustment Shim .010	A/R
37	21-8100	Adjustment Shim .005	A/R
38	21-8090	Adjustment Shim .003	A/R
39	72-9420	Asm. – Vent Tube	1
42	3217-9	Nut	2
43	3256-6	Washer – Flat	2
44	24-9830	Support – Axle	1
45	3253-21	Washer – Lock	1
46	323-6	Screw – Cap Hex. Hd.	1
* 92-4903		Asm. – Upper Hsg. 2WD (Incl. Ref. #4-33 & 35-38)	1
* 92-4848		Asm. – Gear & Pinion (Incl. Ref. #8 & 29)	1

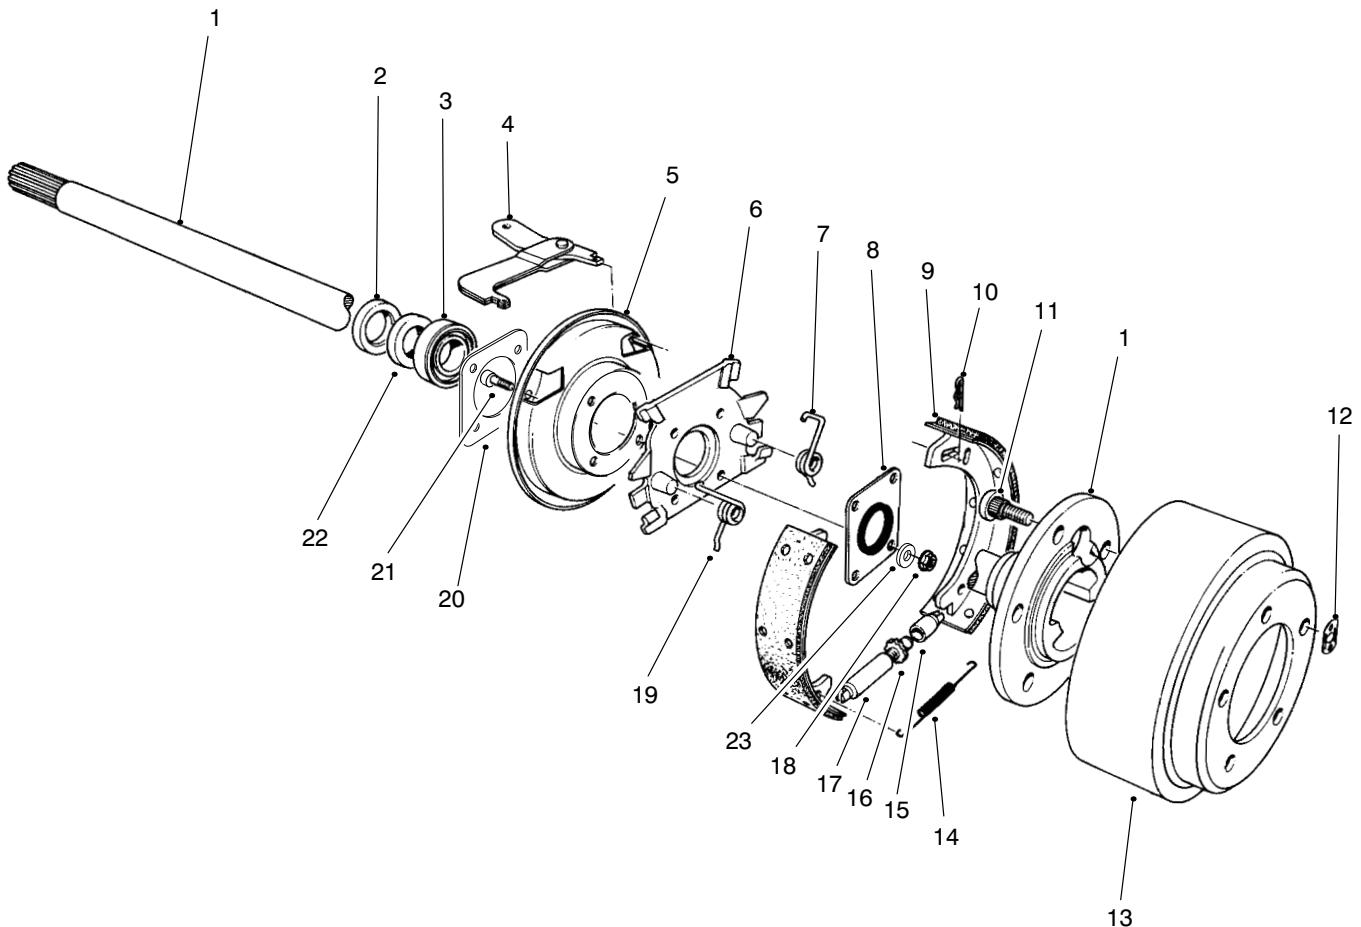


T-0421-3

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	28-0650	Shaft - Flanged Axle	2	13	28-0680	Drum - Brake	2
2	92-1774	Oil Seal	2	14	21-9440	Spring - Adjusting Screw	2
3	21-8180	Bearing	2	15	21-9390	Socket - Adjusting Screw	2
4	24-9180	Strut & Lever Parking Brake	2	16	21-9370	Screw - Adjusting	2
5	21-9450	Dust Shield	2	17	21-9380	Nut - Pivot	2
6	43-6810	Torque - Spider	2	18	94-6935	Nut - Lock	8
7	21-9430	Spring - Shoe Return R.H.	2	19	21-9420	Spring - Shoe Return L.H.	2
8	28-0670	Seal - Oil	2	20	93-7416	Insert - Shield, Dust	2
9	84-8600	Asm. - Shoe & Lining (Set of 4)	1	21	94-6934	Screw - Socket Head	8
10	21-9460	Retainer - Brake Lever	4	22	24-8840	Ring - Wheel Bearing	2
11	242-34	Stud - Axle Flange	10	23	94-6936	Washer	8
12	21-8360	Clip - Retaining	2	*	92-8775	Kit - Gasket, Liquid	2

*Not Illustrated

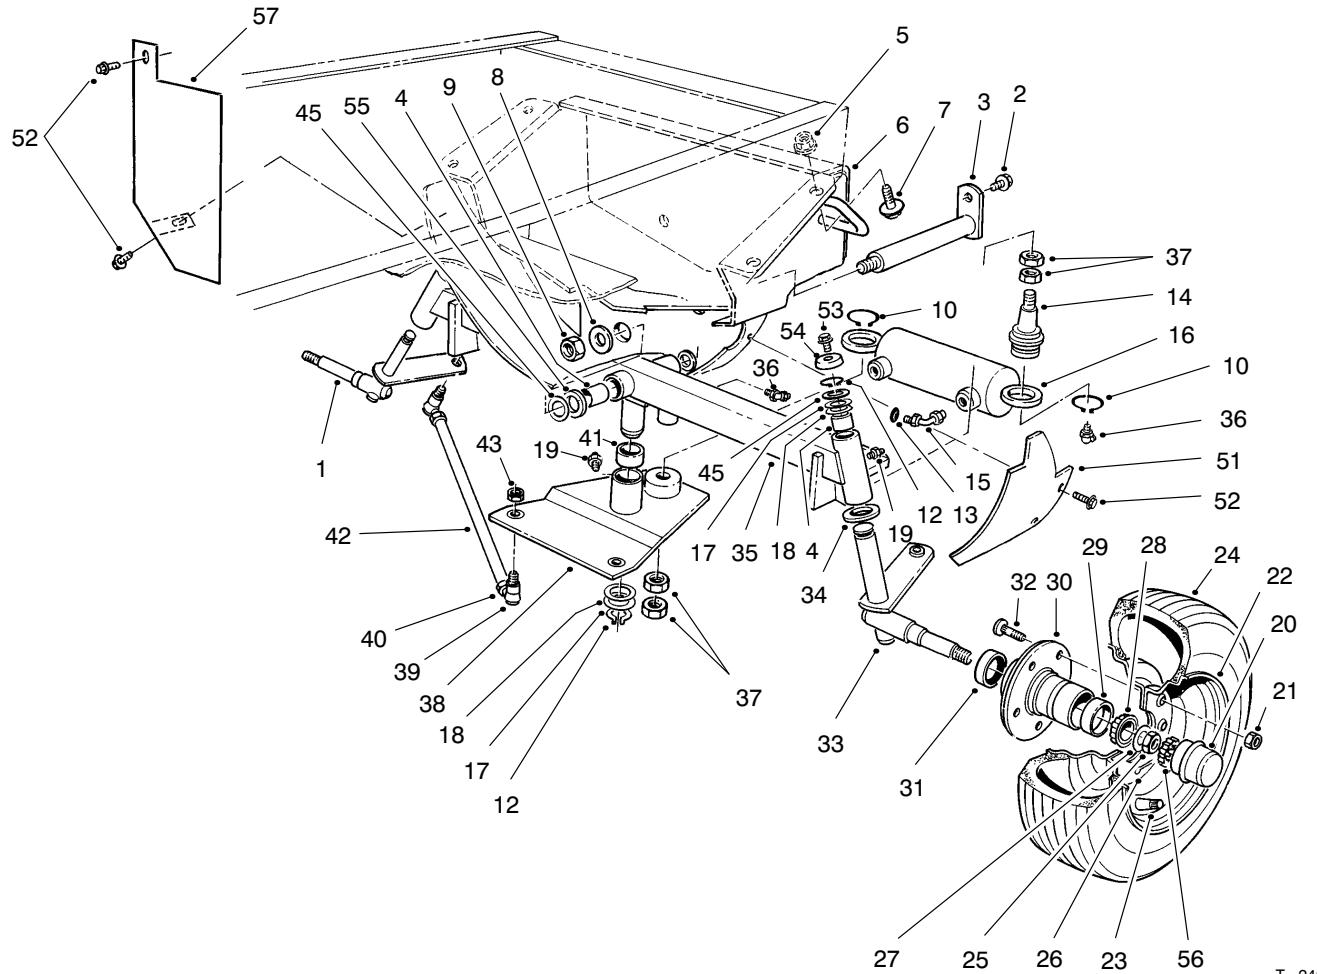


T-2406-1

REAR AXLE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-3199	Asm. - Spindle R.H.	1
2	32144-14	Screw - Tap	1
3	92-7807	Pin - Rear Axle	1
4	67-1750	Bushing	6
5	32128-23	Nut - Flange	4
6	92-7803	Support - Axle	1
7	3234-32	Screw - HHF	4
8	71-4540	Washer - Thrust	A/R
9	32146-20	Nut - Lock	1
10	32151-104	Ring - Retaining	2
11	302-40	Fitting - Grease	2
12	32151-36	Ring - Retaining	3
13	237-22	O-Ring	1
14	92-5938	Ball Joint	2
15	340-54	Fitting 45°	2
16	92-7828	Cylinder - Hydraulic	1
17	5-1226	Washer	3
18	10-8110	Washer - Thrust	A/R
19	302-5	Fitting - Grease	3
20	241-119	Dust Cap	2
21	242-50	Nut - Wheel	10
22	217-106	Wheel	2
23	232-31	Valve Stem w/Cap	2
24	231-105	Tire	2
25	3220-7	Nut - Jam	2
26	3272-13	Pin - Cotter	2
27	93-0309	Washer - Tab	2
28	254-94	Cone - Bearing	4

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
29	254-72	Cup - Bearing	4
30	21-2820	Hub Wheel (Incl. Ref. #29 & 32)	2
31	253-129	Closure	2
32	10-6830	Stud - Drive	10
33	93-3198	Asm. - Spindle L.H.	1
34	256-121	Bushing - Thrust	2
35	92-7816	Axle - Rear (Incl. Ref. #4)	1
36	302-11	Fitting - Grease	1
37	3220-6	Nut - Jam	4
38	92-7821	Steering Pivot (Incl. Ref. #41)	1
39	21-0141	Asm. - Socket R.H. Thd.	2
*	21-0151	Asm. - Socket L.H. Thd.	2
40	3220-5	Nut - Jam R.H. Thd.	2
*	3220-12	Nut - Jam L.H. Thd.	2
41	256-242	Bushing	2
42	21-1990	Asm. - Tie Rod	2
43	3220-3	Nut - Jam	8
45	56-2460	Washer	A/R
51	93-7042	Cover - Flywheel Guard	1
52	32144-10	Screw - Tap	4
53	3234-13	Screw - HHF	2
54	66-2990	Cap - Spindle	2
55	92-7845	Spacer - Hardened	1
56	93-0307	Retainer - Nut, Lock	2
57	93-8738	Guard - Flywheel	1

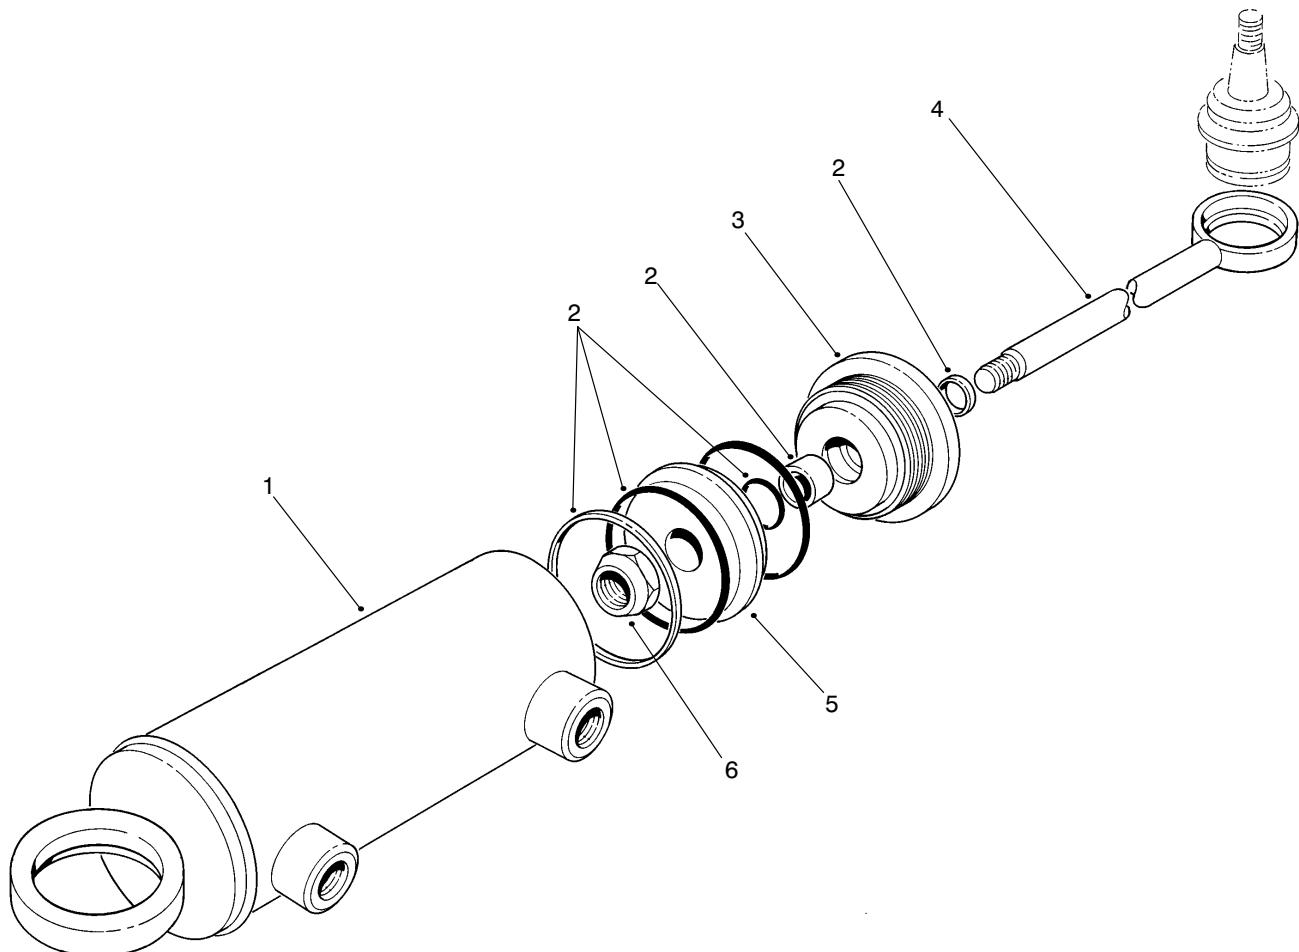


T-1761-2

HYDRAULIC CYLINDER NO. 92-7828

Ref. No.	Part No.	Description	No. Used
1		Asm. - Tube	1
2	92-6593	Seal Kit	1
3	92-6588	Gland	1

Ref. No.	Part No.	Description	No. Used
4		Asm. - Piston Rod	1
5	66-1940	Piston	1
6	66-1930	Nut - Lock	1

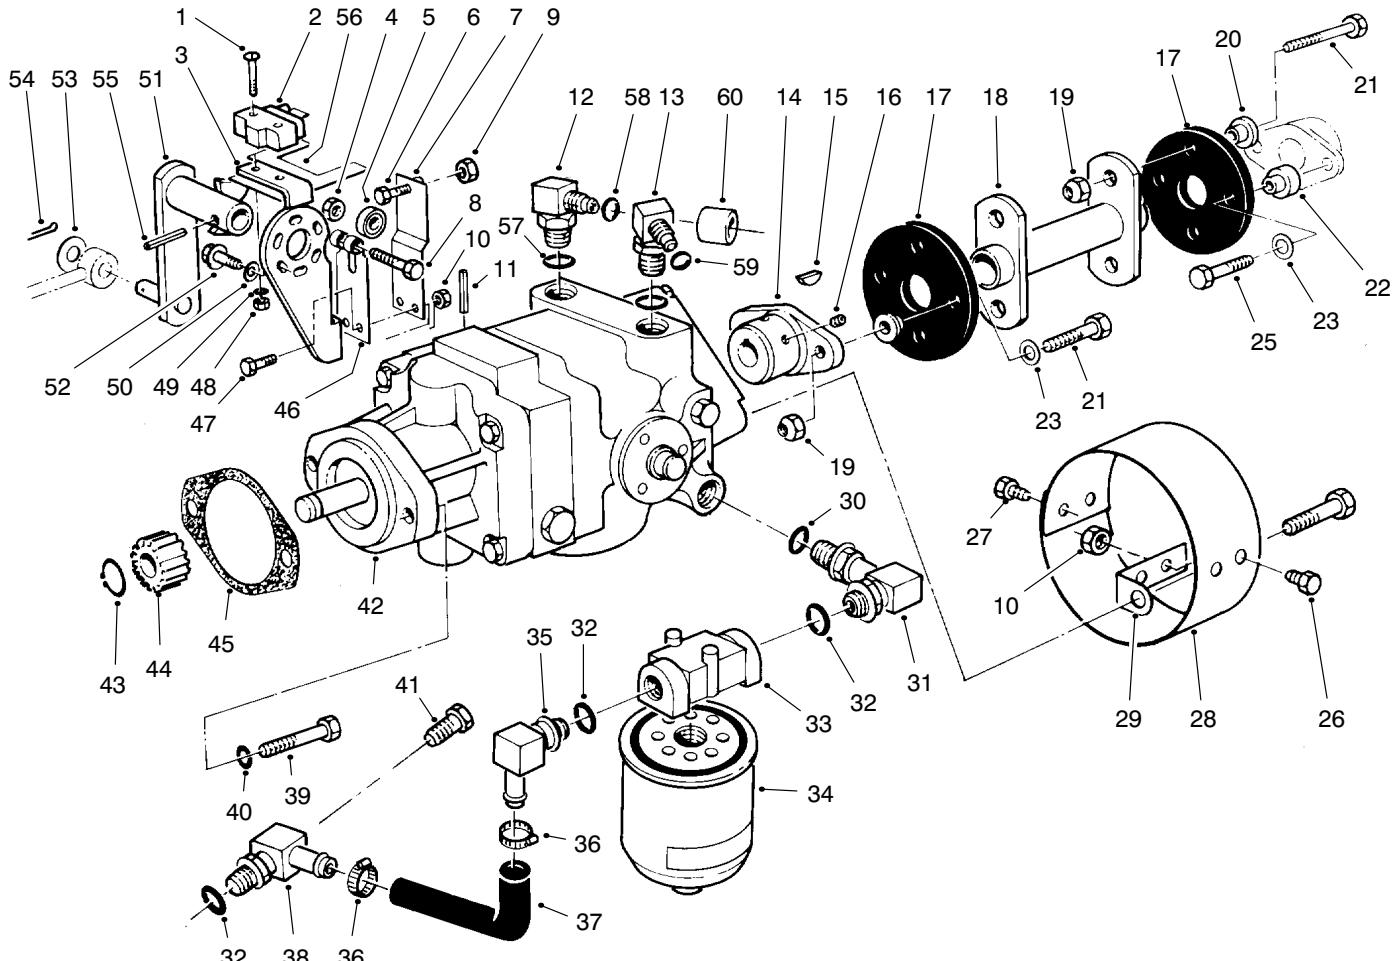


T-0424-3

TRANSMISSION INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3249-11	Screw - Mach. Rd. Hd.	2
2	29-6163	Micro Switch	1
3	29-6120	Pump Plate	1
4	3296-29	Nut - Lock	1
5	251-259	Bearing - Ball	1
6	3210-7	Screw - HH	1
7	29-6170	Extended Leaf Spring	1
8	322-17	Screw - HH	1
9	3219-2	Nut - Hex	1
10	3296-42	Nut - Lock	6
11	32121-6	Pin - Roll	1
12	340-77	Elbow	1
13	340-99	Elbow	1
14	33-4380	Pump Hub	1
15	3257-32	Key - Woodruff	1
16	3241-5	Screw - Set	2
17	44-2230	Coupling - Rubber	2
18	46-6390	Coupling - Drive	1
19	32152-1	Nut - Lock	8
20	27-6600	Spacer - Rubber Coupling	6
21	322-6	Screw - HH	6
22	27-6590	Spacer - Rubber Coupling	2
23	3256-3	Washer - Flat	4
25	322-8	Screw - HH	2
26	321-2	Screw - HH	2
27	321-4	Screw - HH	2

Ref. No.	Part No.	Description	No. Used
28	54-9300	Cover	1
29	54-9290	Bracket	2
30	237-80	O-Ring	1
31	68-8660	Elbow	1
32	237-81	O-Ring	3
33	68-8990	Head - Filter	1
34	23-9740	Oil Filter	1
35	353-987	Elbow	1
36	2412-34	Clamp - Hose	2
37	68-9650	Hose - Axle	1
38	70-2620	Elbow - 90°	1
39	323-7	Screw - HH	2
40	3253-21	Washer - Lock	2
41	353-508	Plug - Drain	1
42	92-8947	Transmission - Inline	1
43	32120-72	Ring - Retaining External	1
44	86-7220	Gear - Transmission Output	1
45	41-8760	Gasket - Transmission	1
46	29-6150	Leaf Spring	1
47	321-6	Screw - HH	2
48	3217-16	Nut - Hex.	2
49	3254-9	Washer - Lock	2
50	3255-7	Washer - Lock	3
51	28-9570	Pump Lever	1
52	11-9760	Screw - Tap	3
53	3256-6	Washer - Flat	1

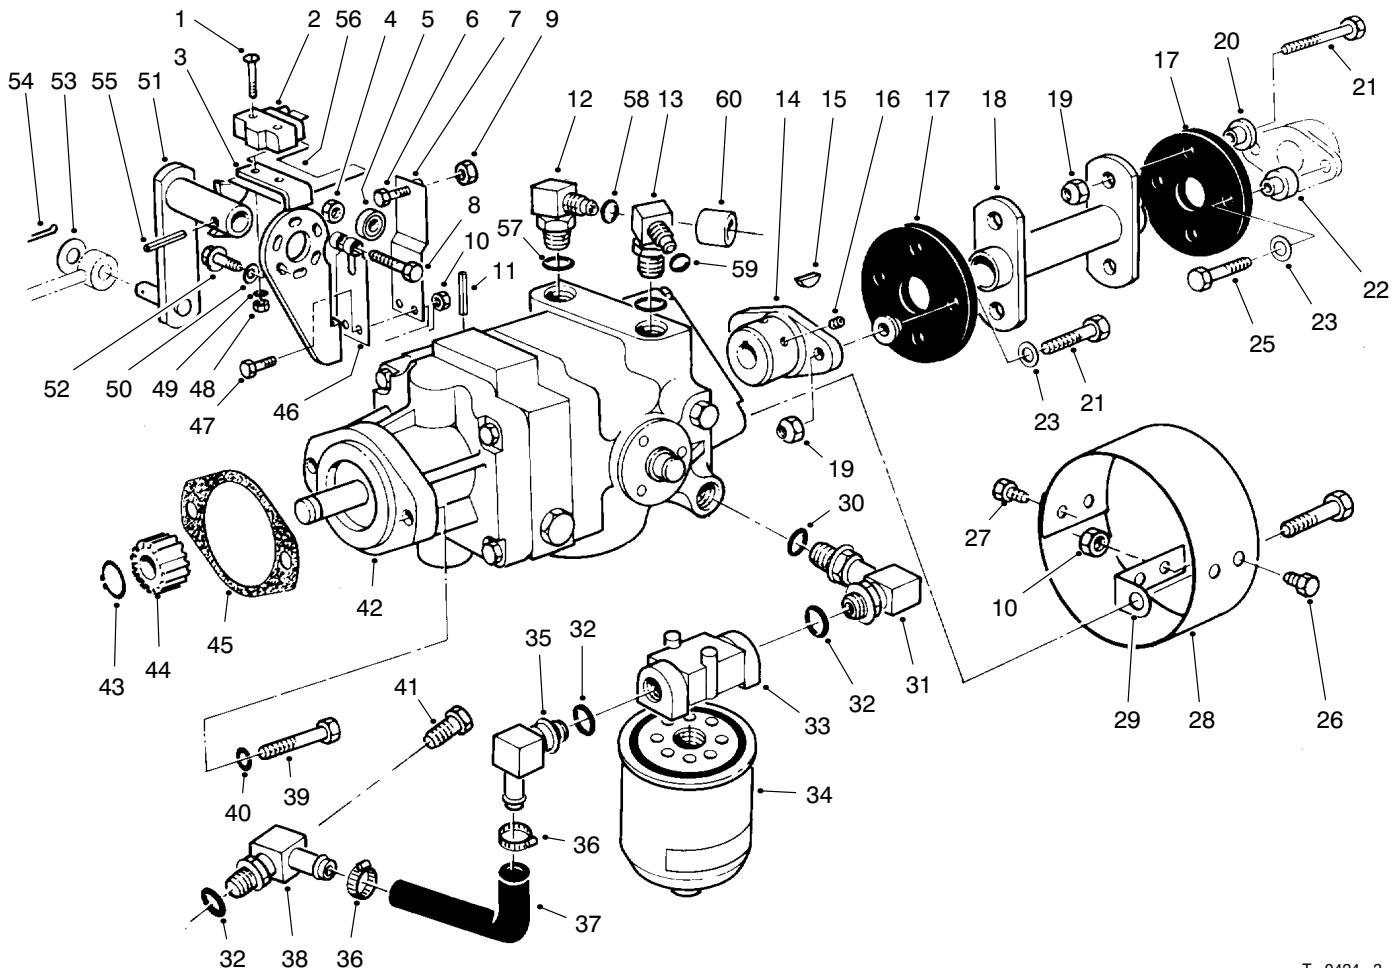


T-0424-3

TRANSMISSION INSTALLATION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
54	3272-10	Pin - Cotter	1	59	237-30	O-Ring	1
55	32121-24	Pin - Roll	1	60	38-3400	Guard - Rubber	1
56	46-8810	Stop - Leaf Spring	1	*	95-3092	400 Hour Filter Kit (Incl. Ref. #34)	1
57	237-42	O-Ring	2				
58	237-22	O-Ring	1				

*Not Illustrated

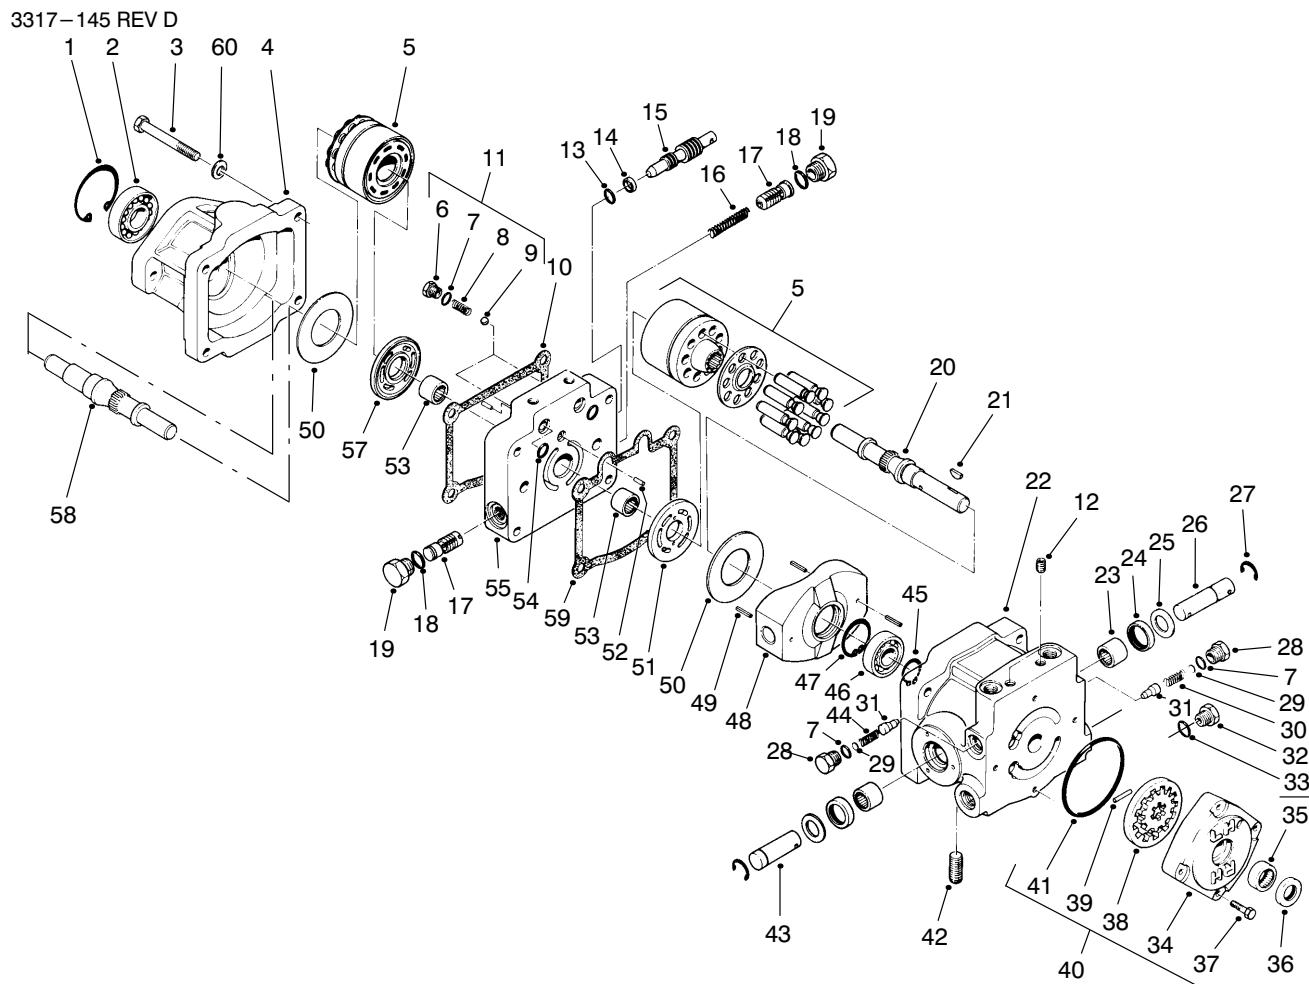


T-0425-2

TRANSMISSION ASSEMBLY NO. 92-8947

Ref. No.	Part No.	Description	No. Used
1	32120-8	Ring - Retaining	1
2	72-3750	Bearing - Ball	1
3	323-56	Screw - HH	4
4	67-9080	Housing - Motor	1
5	48-1800	Kit - Cylinder Block	2
6	25-2650	Plug - Check Valve	2
7	237-86	O-Ring	4
8	25-2640	Valve Spring	2
9	25-2490	Ball	2
10	67-9100	Gasket	1
11	25-3180	Kit - Check Valve (Incl. Ref. #6-9)	2
12	285-17	Plug - Pipe	2
13	237-22	O-Ring	1
14	25-2630	Back-Up Ring	1
15	25-2620	By-Pass Valve	1
16	25-2610	Accel. Valve Spring	1
17	25-2410	Asm. - Accel. Valve	2
18	76-1900	O-Ring	2
19	353-550	Plug - HH	2
20	67-8020	Pump Shaft	1
21	3257-32	Key - Woodruff	1
22	54-7890	Housing - Pump (Incl. Ref. #12 & 23-25)	1
23	252-82	Bearing - Needle	2
24	25-3210	Seal - Lip	2


Ref. No.	Part No.	Description	No. Used
25	25-2510	Washer - Flat	2
26	25-2580	Shaft - Trunnion	1
27	32151-46	Ring - Retaining	2
28	25-2460	Plug - HH	2
29	25-2470	Shim Pack	2
30	25-2570	Valve Spring	1
31	25-2560	Cone - Relief Valve	2
32	353-551	Plug - HH	1
33	237-80	O-Ring	1
34	25-2550	Housing - Charge Pump	1
35	67-8050	Bearing - Needle	1
36	93-4133	Seal - Lip	1
37	322-4	Screw - HH	4
38	25-2680	Asm. - Gerotor	1
39	25-2530	Headless Straight Pin	1
40	25-3190	Charge Pump (Incl. Ref. #34-39 & 41)	1
41	237-95	O-Ring	1
42	67-9090	Plug	1
43	25-2500	Shaft - Trunnion	1
44	25-2480	Valve Spring	1
45	32120-15	Ring - Retaining	1
46	251-8	Bearing - Ball	1
47	32120-11	Ring - Retaining	1
48	25-2450	Variable Swashplate	1
49	32121-91	Pin - Coil ,Spring	3

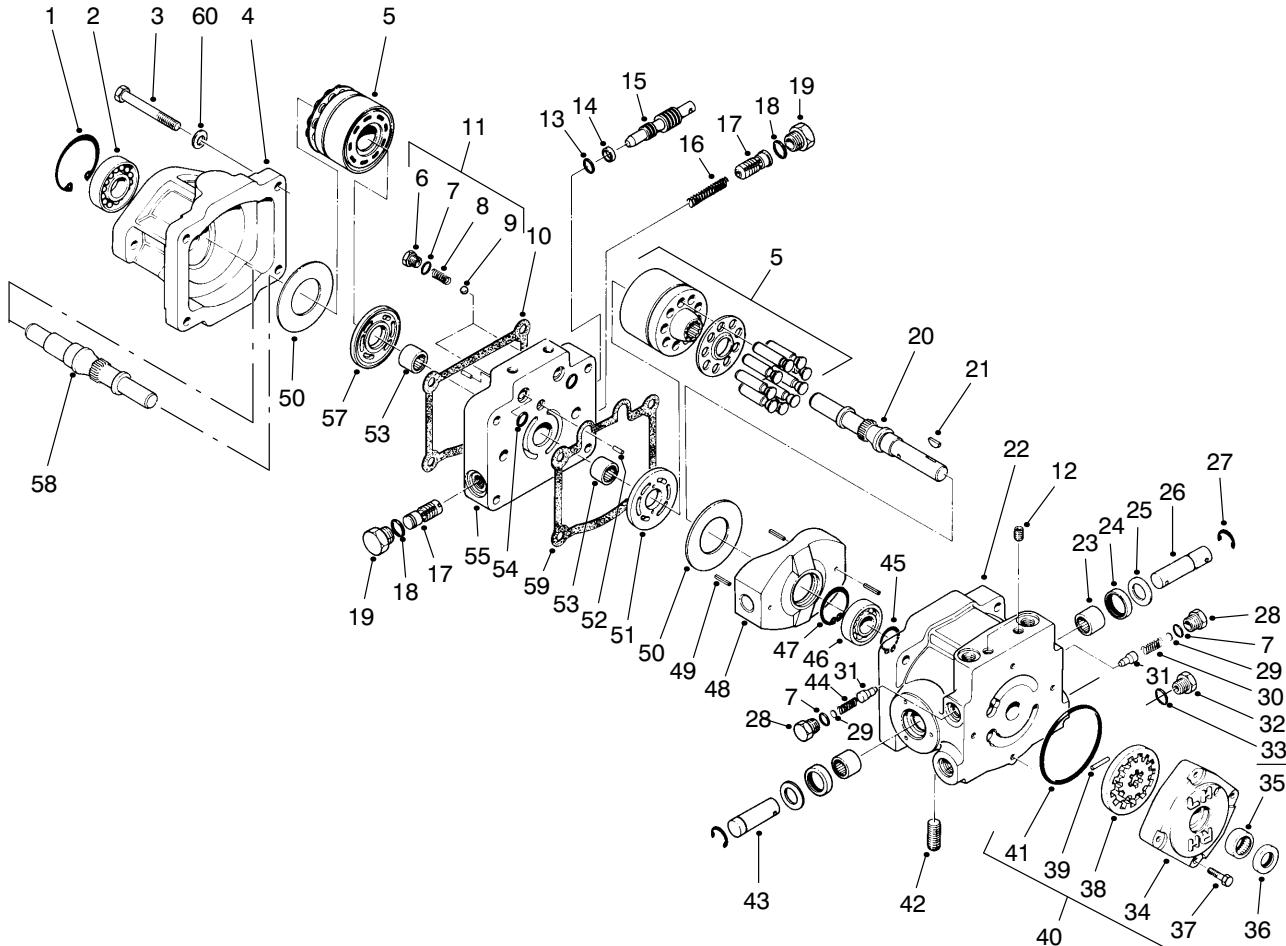

T-0425-2

TRANSMISSION ASSEMBLY NO. 92-8947 (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
50	25-2380	Plate – Thrust	2	58	46-8410	Shaft – Motor	1
51	25-2440	Plate – Pump Valve	1	59	25-2400	Gasket	1
52	25-2430	Pin – Dowel	2	60	74-9510	Washer	4
53	46-8400	Bearing – Needle	2	61	92-8776	Plug (Incl. Ref. #62)	4
54	93-4132	O-Ring	2	62	92-8777	O-Ring	4
55	92-8918	Center Section	1				
57	25-2390	Plate – Motor Valve	1				

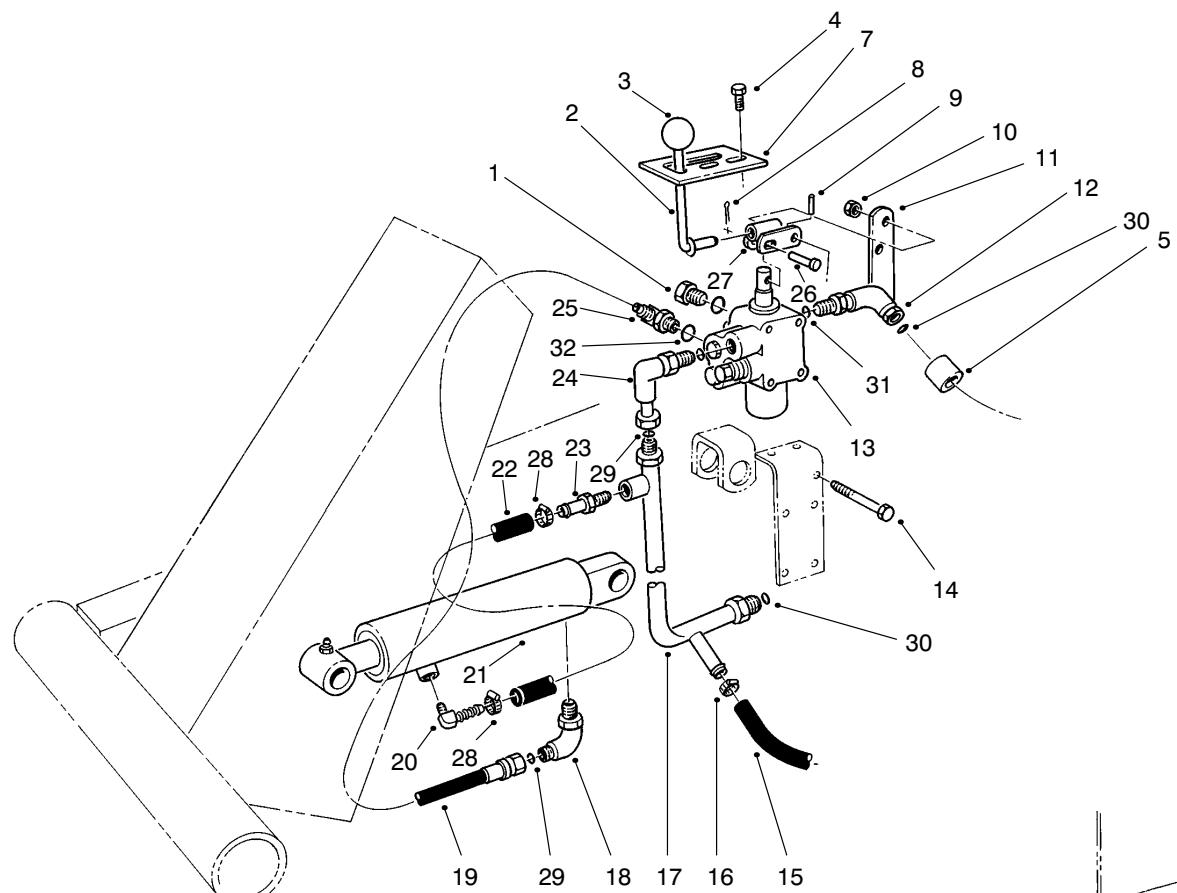


T-0426-2

VALVE & CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	353-512	Plug	1
2	21-8620	Lever - Valve	1
3	233-21	Knob	1
4	32144-10	Screw - Tap	2
5	38-3400	Guard - Rubber	1
7	21-8640	Lever - Latch Valve	1
8	3272-6	Pin - Cotter	1
9	32121-73	Pin - Slotted Spring	1
10	3296-42	Nut - Lock	5
11	21-9010	Pivot Mount - Valve Lever	1
12	340-99	Fitting - 90° Elbow	1
13	43-1710	Asm. - Valve	1
14	321-23	Screw - HH	5
15	63-8990	Hose	1
16	2412-36	Clamp - Hose	1
17	63-9260	Manifold - Valve	1
18	340-112	Elbow - 90°	1
19	92-7833	Hose - Hydraulic (Valve to Cylinder)	1

Ref. No.	Part No.	Description	No. Used
20	304-75	Fitting - 90° Barb	1
21	62-4250	Cylinder - Hydraulic	1
*	66-1250	Cylinder - Hydraulic (Optional)	1
22	92-7834	Hose	1
23	304-73	Fitting - Straight Barb	1
24	340-110	Elbow - 90°	1
25	340-97	Fitting - 90°	1
26	283-17	Pin	1
27	21-8590	Link - Valve Lever	1
28	2412-108	Clamp - Hose	2
29	237-22	O-Ring	2
30	237-30	O-Ring	2
31	237-42	O-Ring	2
32	237-78	O-Ring	2
33	38-3400	Guard - Rubber	1

*Not Illustrated

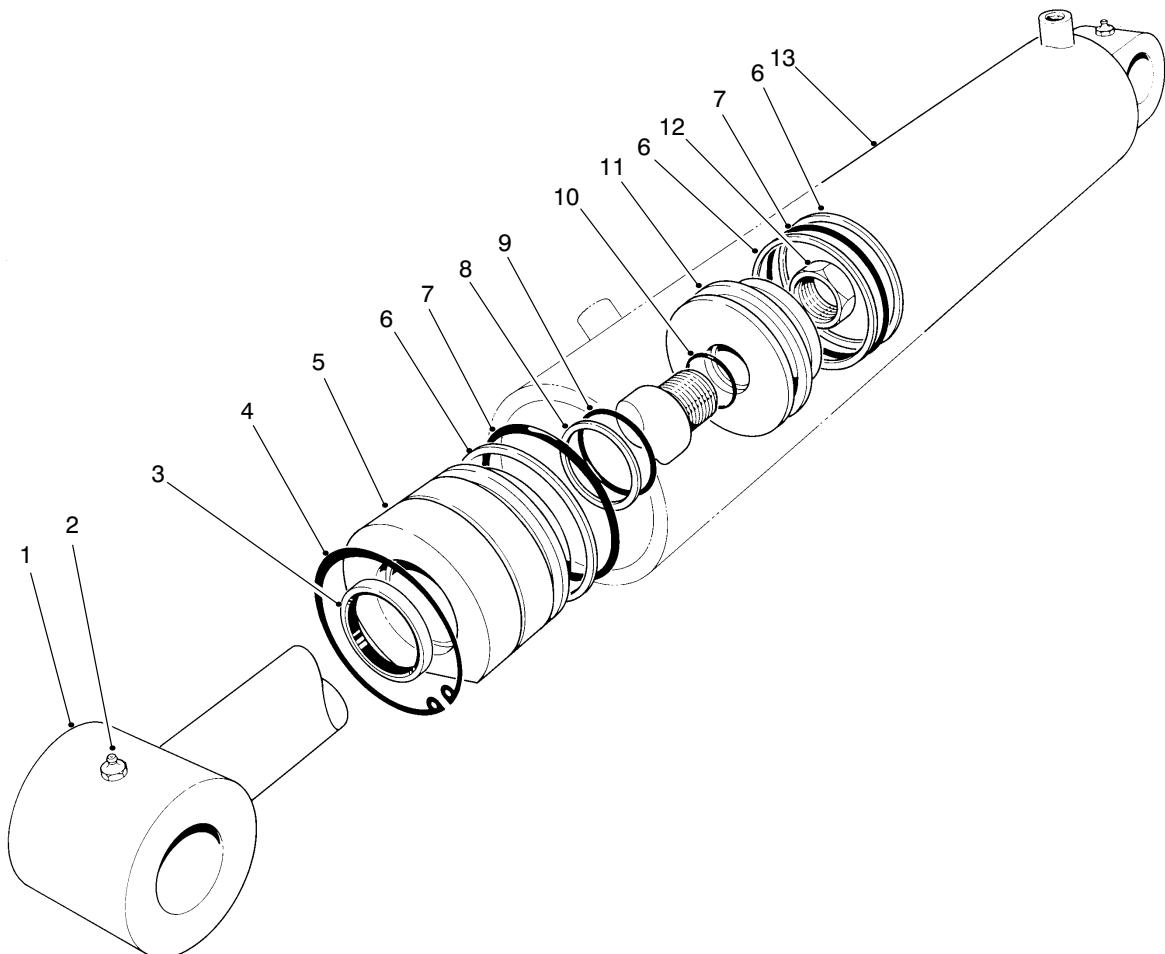


T-0859-1

HYDRAULIC LIFT CYLINDER ASSEMBLY NO. 62-4250 (2-1/2" Bore)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	61-4980	Shaft - w/Clevis	1	9		O-Ring	1
2	302-55	Fitting - Grease	2	10		O-Ring	1
3		Seal - Dust	1	11	60-9770	Piston	1
4	61-4990	Ring - Retaining	1	12	60-9760	Nut	1
5	60-9780	Head	1	†13	*	Barrel Kit - Seal Repair (Incl. Ref. #3, 6-10)	1
6		Ring - Back-up	3				
7		O-Ring	2				
8		Ring - Backup	1				

†Not available separately..

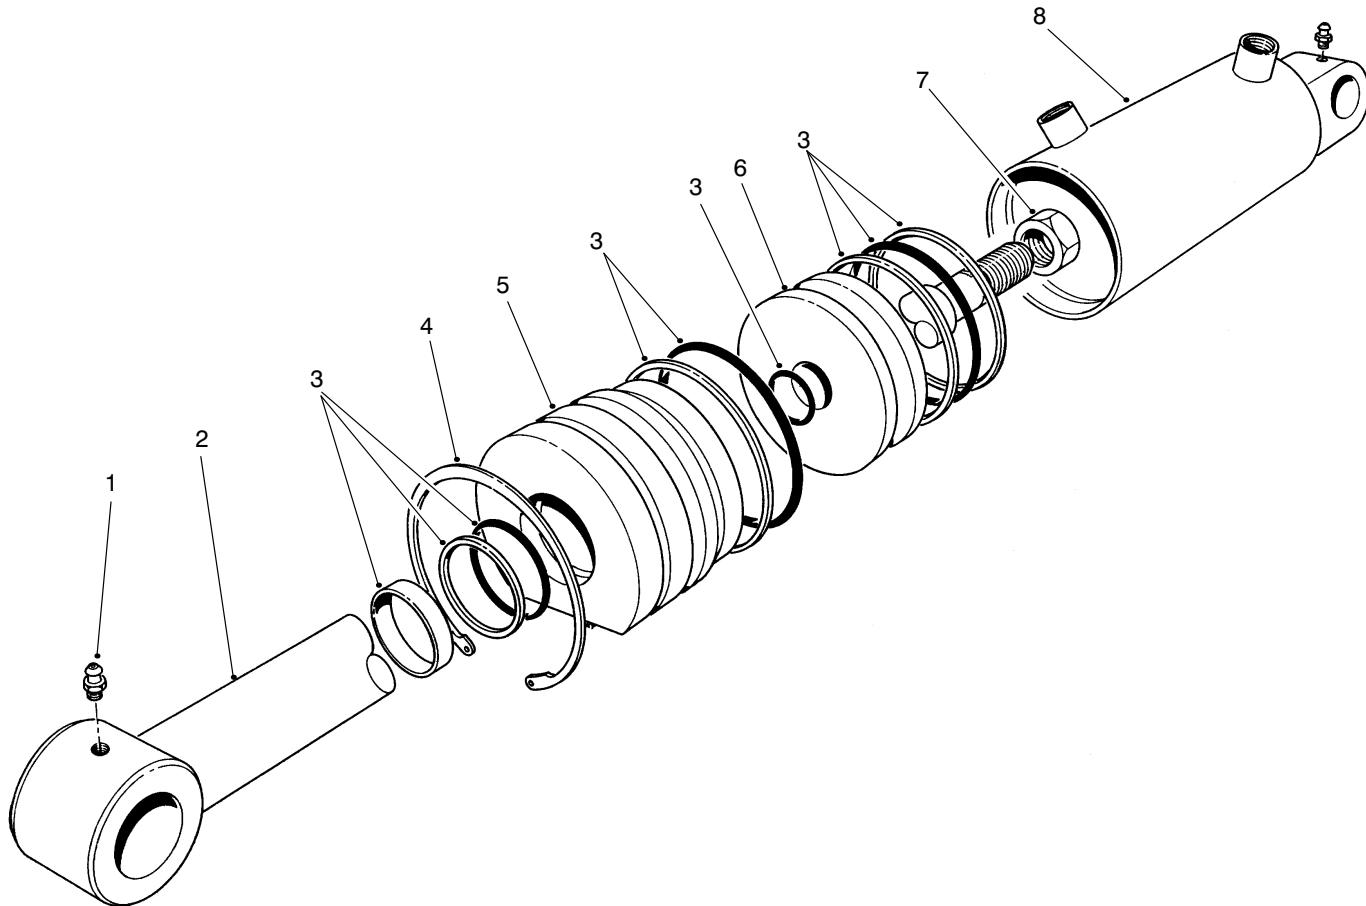


T-0527-2

HYDRAULIC LIFT CYLINDER ASSEMBLY NO. 66-1250 (3" Bore)

Ref. No.	Part No.	Description	No. Used
1	302-55	Fitting - Grease	2
2	67-5480	Shaft	1
3	67-5500	Kit - Repair	1
4	67-5470	Ring - Retaining	1

Ref. No.	Part No.	Description	No. Used
5	67-5460	Head	1
6	67-5450	Piston	1
7	60-9760	Nut - Hex	1
*8		Barrel	1

*Not available separately.

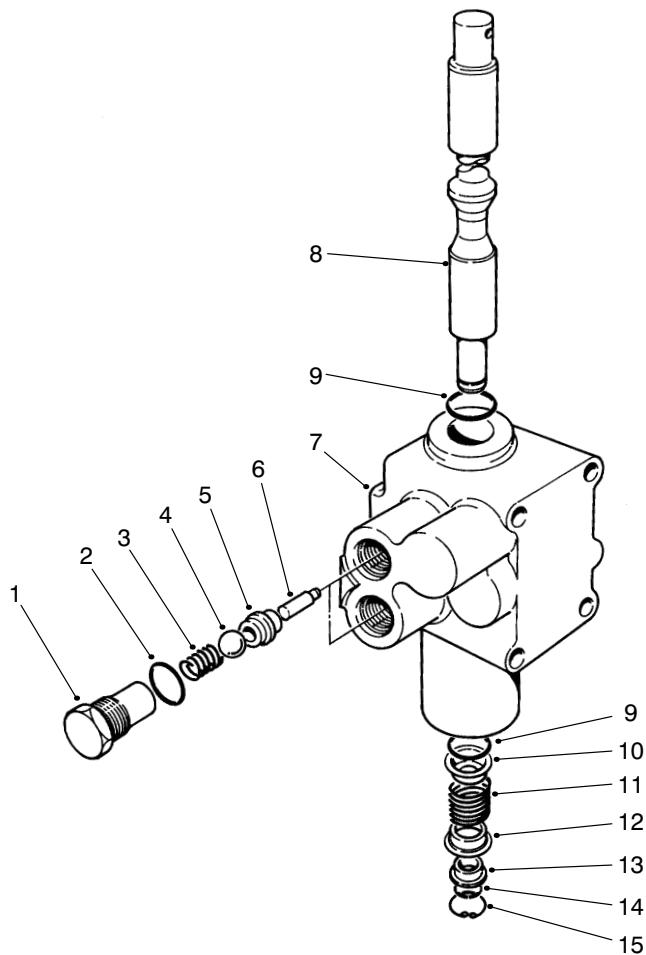


T-0428-1

CONTROL VALVE ASSEMBLY NO. 43-1710

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat - Check Valve	2
6	22-8360	Pin - Cam	2
7	43-1730	Body	1
8	22-8420	Spool	1

Ref. No.	Part No.	Description	No. Used
9	22-8500	O-Ring	2
10	22-8380	Retainer - Spring	1
11	22-8410	Spring	1
12	22-8390	Retainer - Spring	1
13	22-8400	Spacer - Float	1
14	22-8480	Spring Ring Spool	1
15	22-8490	Ring - Snap	1

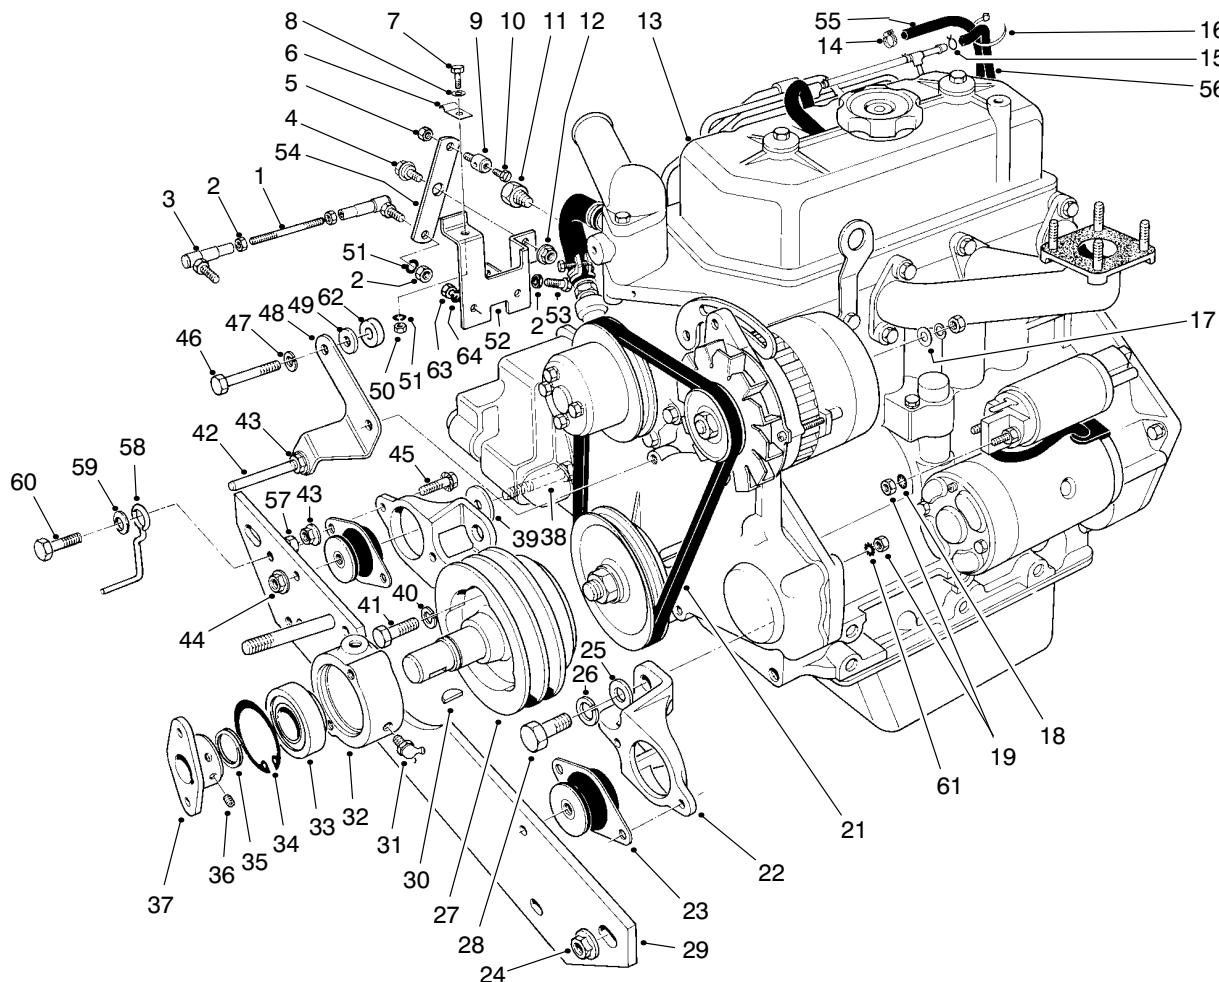


T-0429-2

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43-3770	Link - Throttle	1
2	3219-1	Nut	5
3	18-1720	Asm. - Ball Joint	2
4	37-8770	Bolt - Shoulder	1
5	3296-20	Nut - Lock	1
6	2412-31	Clamp - Bodine	1
7	321-4	Screw - HH	1
8	3256-22	Washer - Flat	1
9	43-3780	Swivel - Throttle Control	1
10	25-8640	Screw - Machine	1
11	43-1940	Adapter - Temp. Gauge	1
12	32152-1	Nut - Flange	1
13	43-1440	Engine Assembly (Unit Serial No. 50001 thru 60119)	1
13	94-9160	Engine Assembly (Unit Serial No. 60120 & Up)	1
14	2412-108	Clamp - Worm Drive	1
15	2412-79	Clamp	1
16	3290-379	Tie - Cable	1
17	5-3637	Washer	1
18	3254-2	Washer - Lock, Int. Tooth	2
19	42-9580	Nut	2
21	42-9100	Belt - Fan	1
22	53-9710	Mount - Engine	2
23	53-9680	Engine Mount - Rubber	2


Ref. No.	Part No.	Description	No. Used
24	32128-23	Nut - Flange	2
25	3256-64	Washer - Flat	4
26	43-5950	Washer - Lock	4
27	43-3510	Pulley - Engine	1
28	43-3210	Screw - HH	4
29	75-9900	Engine Support - Front	1
30	3257-33	Key - Woodruff	1
31	302-10	Fitting - Grease	1
32	43-3720	Collar - Bearing	1
33	251-252	Bearing - Ball	1
34	32120-22	Ring - Retaining, Internal	1
35	32120-69	Ring - Retaining, External	1
36	3241-5	Screw - Set Socket Head	2
37	27-1960	Hub - Engine	1
38	324-12	Screw - HH	2
39	53-9480	Washer	2
40	42-9600	Washer - Lock	3
41	43-3190	Screw - HH	3
42	21-1820	Stud - Belt Retainer	2
43	3290-357	Nut - Flange	7
44	32128-37	Nut - Flange	2
45	3234-11	Screw - HH	4
46	42-9510	Screw - HH	2
47	3253-4	Washer - Lock	2
48	43-3790	Bracket - Belt Guide	1
49	4-2390	Washer	2

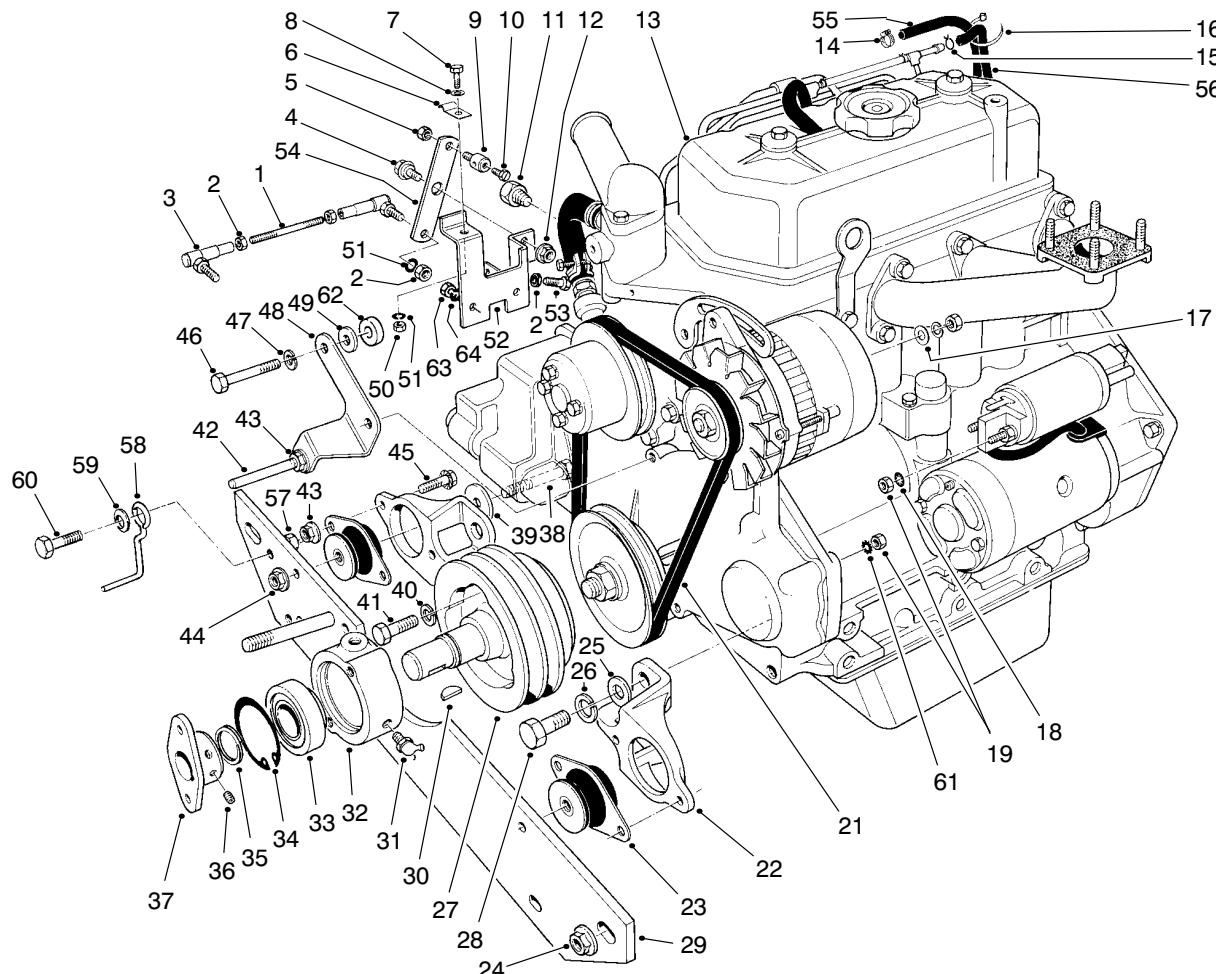

T-0429-2

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
50	3217-5	Nut - Hex.	1	58	63-1400	Guide - Belt	1
51	3253-3	Washer - Lock	3	59	3290-224	Washer - Lock	1
52	43-3730	Bracket - Throttle Control	1	60	3234-18	Screw - HH	1
53	329-7	Screw - HH	1	61	3255-9	Washer - Lock, Ext. Tooth	1
54	43-3760	Lever - Throttle	1	62	5-0652	Spacer	2
55	47-7420	Hose	1	63	48-7630	Screw - HH	2
56	43-4230	Hose	1	64	43-5930	Washer - Lock	2
57	32153-2	Nut - Lock	1				

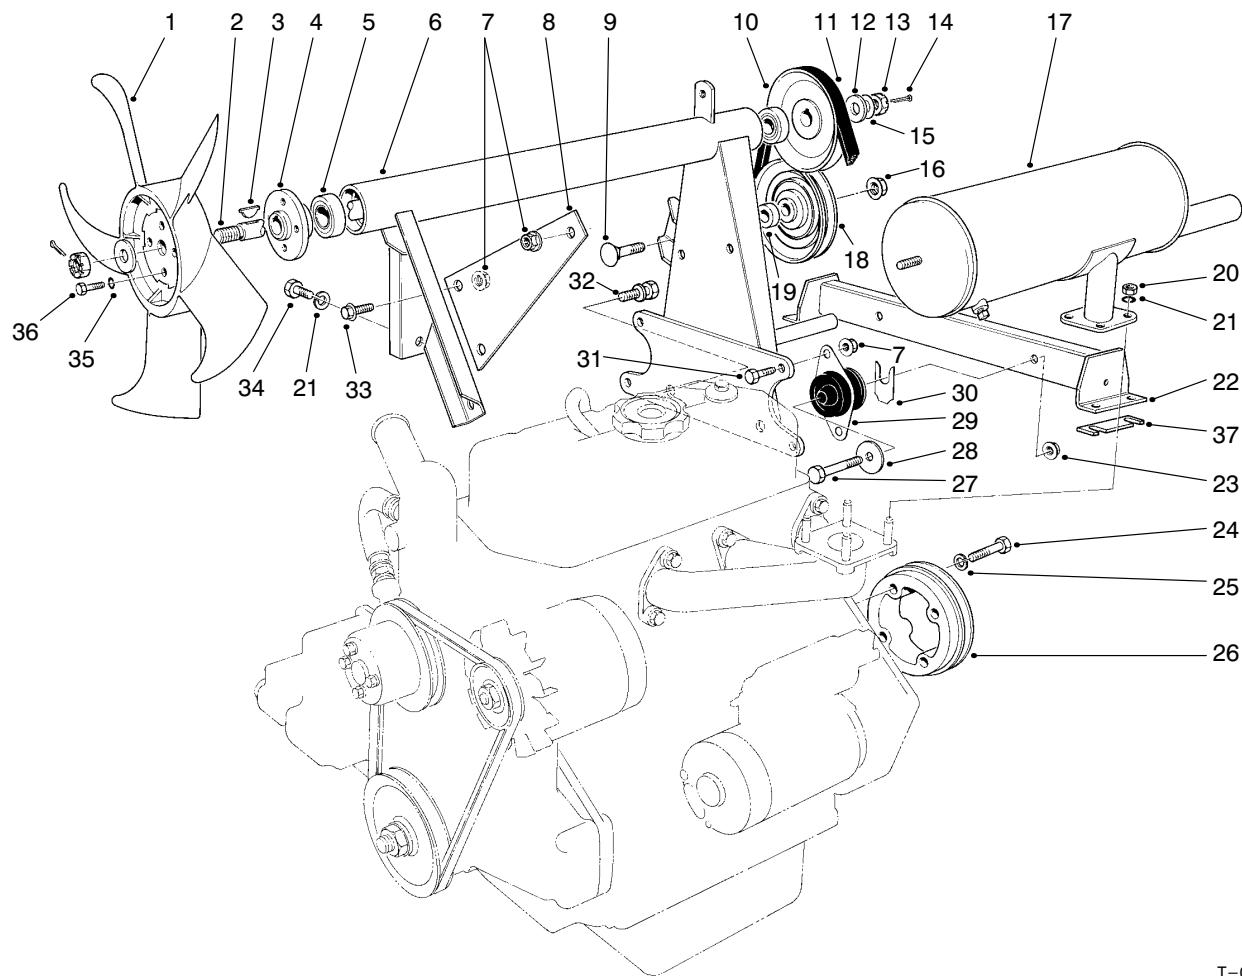


T-0430-1

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	43-1910	Fan - Cooling	1
2	43-3690	Fan - Shaft	1
3	3257-30	Key - Woodruff	2
4	43-3700	Hub - Fan	1
5	38-7820	Bearing	2
6	53-9750	Mount - Fan	1
7	3290-357	Nut - Flange	8
8	43-3870	Support - Muffler	1
9	3233-14	Bolt - Carriage	1
10	43-3880	Pulley	1
11	43-5910	V-Belt	1
12	29-8910	Washer	2
13	32136-3	Nut - Hex. Slotted	2
14	3272-16	Pin - Cotter	2
15	3-6803	Washer	A/R
16	32128-23	Nut - Flange	1
17	43-3850	Muffler	1
18	66-5310	Pulley - Idler	1
19	66-5320	Spacer	1
20	42-9580	Nut	4

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
21	3253-4	Washer - Lock	5
22	77-3140	Mount - Engine	1
23	32128-37	Nut - Flange	2
24	43-3200	Screw - HH	4
25	42-9600	Washer - Lock	4
26	43-3530	Pulley - Flywheel	1
27	324-11	Screw - HH	2
28	53-9480	Washer	2
29	53-9680	Mount - Engine, Rubber	2
30	42-6080	Shim	A/R
31	3234-11	Screw - HH	4
32	66-7030	Screw - HH w/Washer	2
33	3234-12	Screw - Flange	2
34	42-9230	Screw - HH	1
35	3253-3	Washer - Lock	4
36	321-3	Screw - HH	4
37	68-9110	Shim	A/R
*	68-9111	Shim	A/R
*	68-9112	Shim	A/R

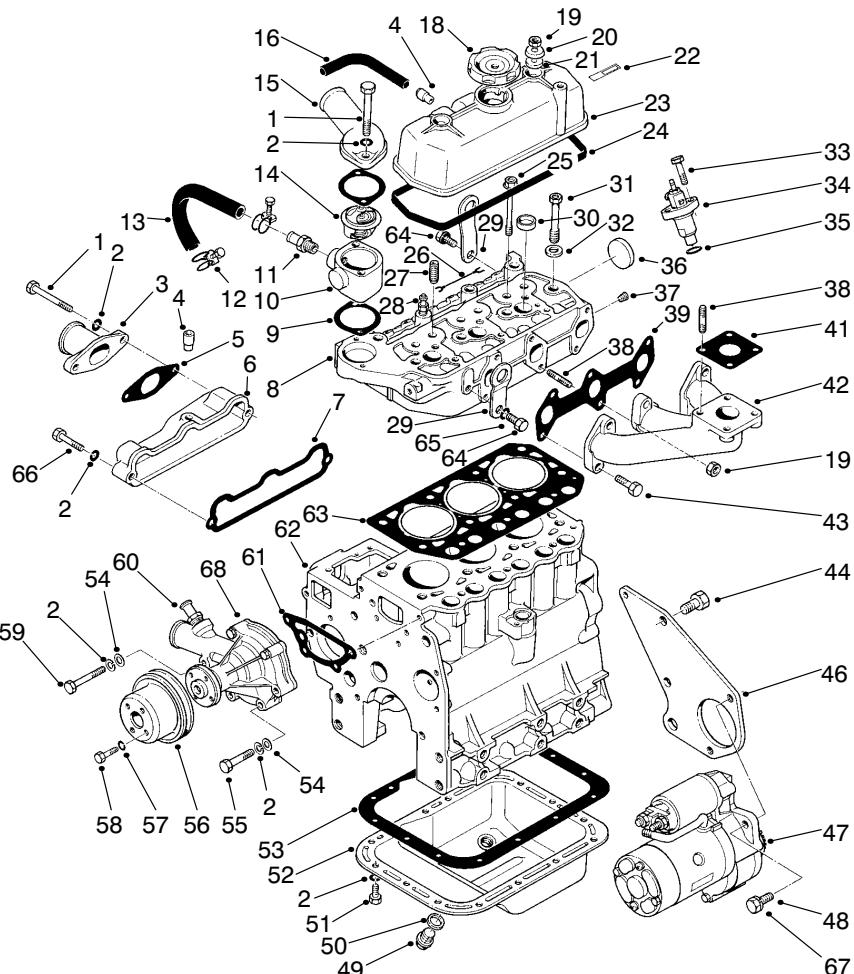


T-0431-1

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	42-9310	Screw - HH	4	26	42-9180	Wire - Glow Plug Lead	2
2	42-9850	Washer - Lock	24	27	42-7460	Guide - Valve	6
3	42-9150	Inlet - Pipe	1	28	42-7480	Glow Plug	3
4	42-7510	Pipe	2	29	42-7440	Hanger - Engine	2
5	42-9160	Gasket - Inlet Pipe	1	30	42-7080	Cap - Sealing (25)	3
6	42-9120	Asm. - Intake Manifold	1	31	42-9320	Bolt - Cylinder Head (12 x 98)	8
7	42-9140	Gasket - Intake Manifold	1	32	42-9790	Washer - Head Bolt	8
8	72-4290	Asm. - Head, Cylinder	1	33	42-9390	Bolt (8 x 32)	6
†*	93-1369	Asm. - Head, Cylinder	1	34	44-8070	Asm. - Nozzle & Holder	3
9	42-7550	Gasket	2	35	42-8120	Gasket - Nozzle Holder	3
10	43-1790	Fitting - Thermostat	1	36	42-7090	Cap - Sealing (45)	1
11	42-7740	Nipple - Hose	1	37	67-2570	Plug - Taper 1/8	1
12	43-3140	Clamp - Hose	2	38	42-9570	Stud (8 x 25)	5
13	43-3130	Hose - Water (Incl. Ref. #12)	1	39	42-9170	Gasket - Exhaust Manifold	1
14	43-1780	Thermostat	1	41	42-9110	Gasket	1
15	42-7540	Fitting - Water Outlet	1	42	43-1870	Manifold - Exhaust	1
16	93-3685	Pipe - Air Breather	1	43	42-9520	Screw - Cap (8 x 30)	5
18	42-7420	Cap - Oil Filter	1	44	42-9240	Screw - Cap (12 x 28)	3
19	42-9580	Nut (8)	3	46	43-1770	Plate - Rear	1
20	42-9800	Washer	2	47	46-7610	Asm. - Starter	1
21	42-7490	Seal - Oil	2	48	43-0090	Screw - Cap (10 x 25)	2
22	42-7530	Label - Engine No.	1	49	42-9260	Plug - Oil Drain	1
23	42-7500	Asm. - Cover, Rocker	1	50	42-7290	Gasket - Oil Drain Plug (18)	1
24	42-7520	Gasket - Cover, Rocker	1	51	42-9230	Screw - Cap (8 x 16)	15
25	93-3180	Bolt - Cylinder Head (10 x 90)	3				

† For engines with Serial No. 86155 & up.

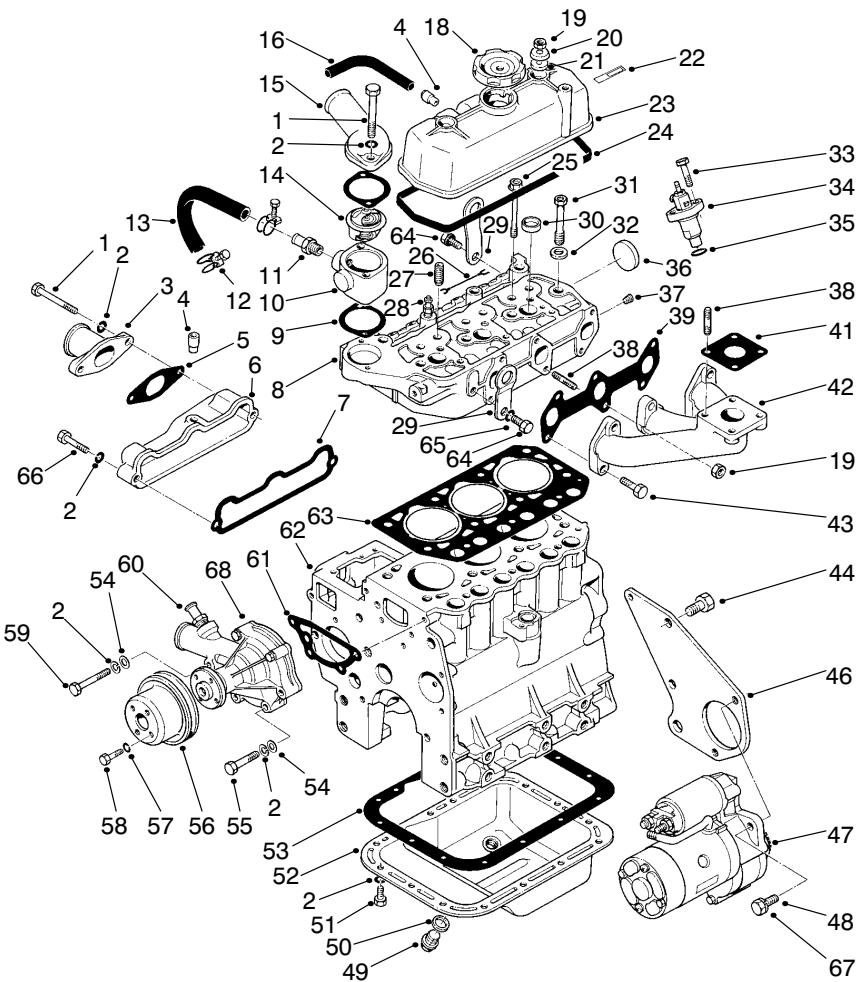


T-0431-1

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
52	42-7280	Asm. - Oil Pan (Incl. Ref. #49 & 50)	1
53	42-7300	Gasket - Oil Pan	1
54	42-9660	Washer - Plain (8)	4
55	42-9500	Screw - Cap (8 x 45)	3
56	42-9070	Pulley - Water Pump	1
57	43-5930	Washer - Lock	4
58	42-9490	Screw - Cap (6 x 12)	4
59	42-9510	Screw - Cap (8 x 60)	1
60	42-9080	Asm. - Water Pump	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
61	42-9090	Gasket - Water Pump	1
62	48-2020	Cylinder Block Sub Asm.	1
63	42-7470	Gasket - Cylinder Head	1
64	42-9300	Screw - Cap (10 x 20)	2
65	42-9600	Washer - Lock	2
66	42-9530	Screw - Cap (8 x 40)	1
67	42-9600	Washer - Lock	2
68	93-3656	Gasket - Pump, Water	1
*	42-9200	Complete Gasket Set	1

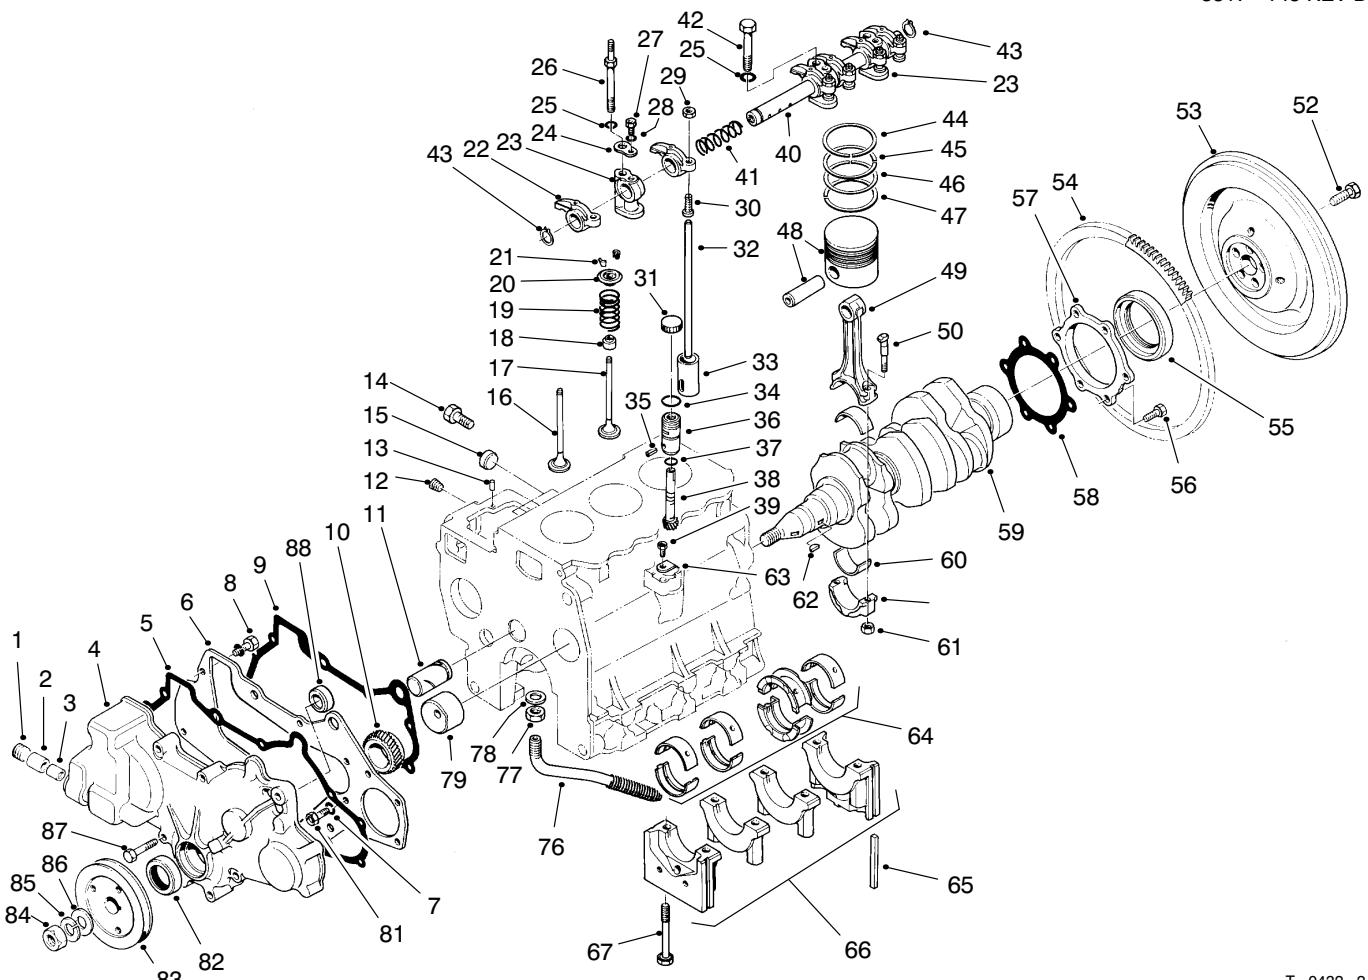


T-0432-2

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	42-7400	Plug - Taper	1	26	42-9360	Bolt	2
2	42-7320	Bearing - Needle	1	27	42-9350	Screw - HH	2
3	42-7310	Bearing - Needle	1	28	43-5930	Washer - Lock	2
4	93-3689	Case - Gear	1	29	42-9620	Nut - Jam	6
5	42-7340	Gasket - Gear Case	1	30	42-7980	Screw - Adjusting	6
6	62-3740	Plate - Front	1	31	93-3688	Cap - Shipping	1
7	42-9850	Washer - Lock	5	32	42-7920	Rod - Push	6
8	62-3730	Screw - HH w/Washer	2	33	42-7890	Tappet	6
9	42-7150	Gasket - Front Plate	1	34	42-9010	O-Ring	1
10	42-7700	Gear - Crankshaft	1	35	42-8970	Pin - Spring	1
11	42-7110	Shaft - Idler	1	36	42-8980	Sleeve - Gear	1
12	67-2390	Plug - Taper	2	37	42-8990	O-Ring	1
13	56-0220	Pin - Dowel	2	38		Gear - Driven	1
14	42-9250	Screw - HH	4	39	42-9440	Screw - HH	1
15	42-7080	Cap - Sealing	2	40	42-7960	Shaft Assembly - Rocker	1
16	93-1351	Valve - Intake	3	41	42-7930	Spring - Rocker Shaft L.H.	1
17	93-1352	Valve - Exhaust	3	42	42-9370	Screw - HH	1
18	92-1961	Seal - Valve Stem	6	43	42-7990	Ring - Snap	2
19	42-7880	Spring - Valve	6	44	72-4200	Ring - Set - Piston Std.	3
20	42-7850	Retainer - Valve Spring	6	45	72-4210	Ring Set - Piston	3
21	42-7860	Lock - Spring Retainer	12	46	72-4220	0.25 (.010 in.) 0.5.	3
22	42-7940	Arm - Rocker	6	47	72-4230	Ring Set - Piston	3
23	42-7970	Stay - Rocker	3			0.50 (.020 in.) 0.5.	3
24	42-7950	Washer - Seat	2			Ring Set - Piston	3
25	42-9600	Washer - Spring	3			075 (.030 in.) 0.5.	3

*Not Illustrated

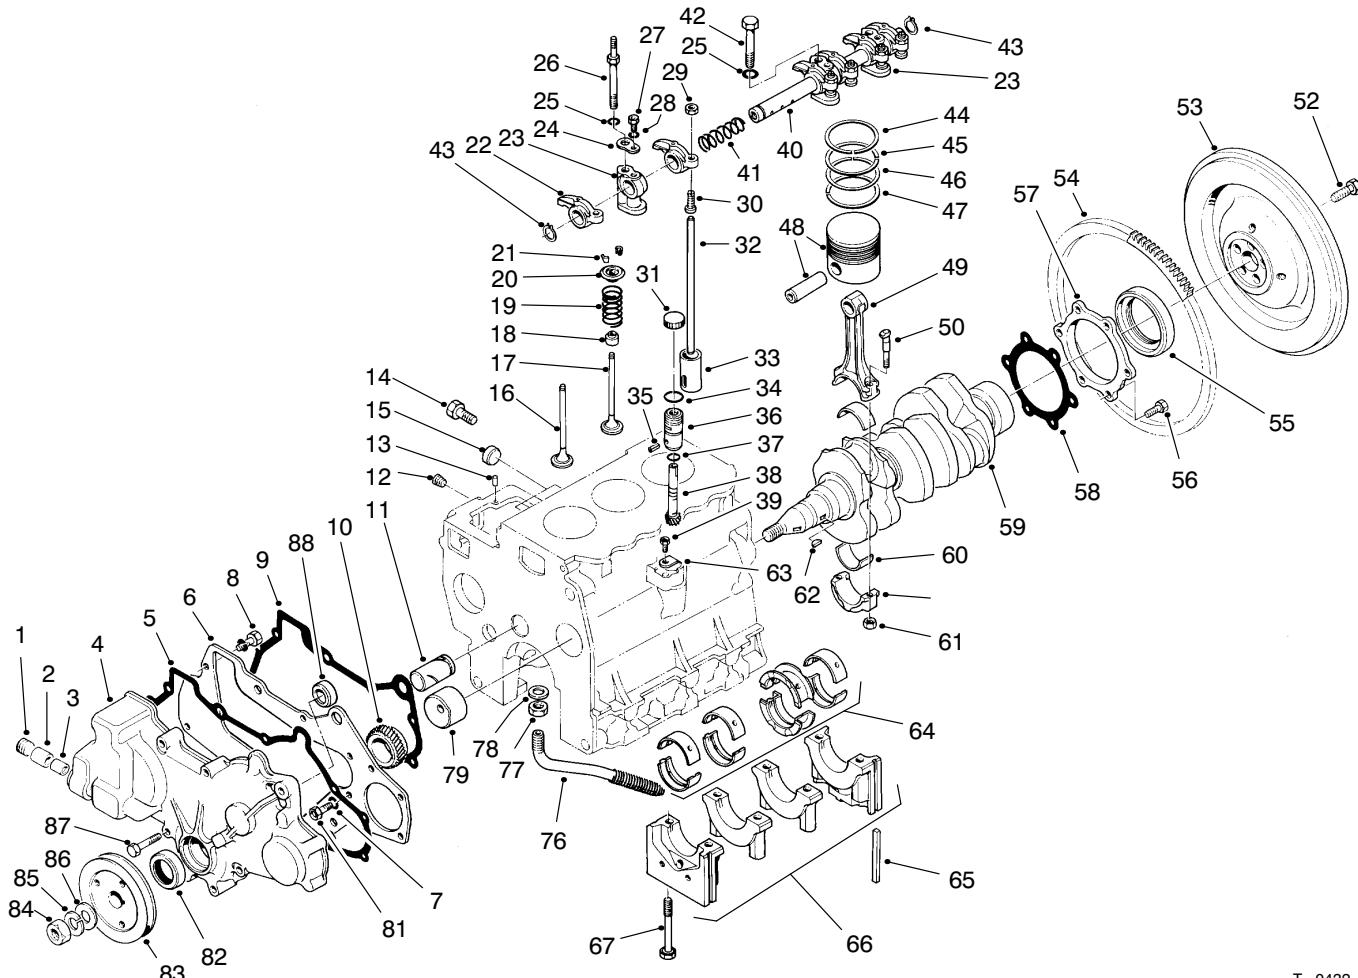

T-0432-2


ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	72-4240	Piston & Piston Pin Std.	3
*	72-4250	Piston & Piston Pin 0.25 (.010 in.) 0.5.	3
*	72-4260	Piston & Piston Pin 0.50 (.020 in.) 0.5.	3
*	72-4270	Piston & Piston Pin 0.75 (.030 in.) 0.5.	3
49	42-7650	Asm. - Connecting Rod	3
50	67-2860	Bolt - Connecting Rod	6
52	54-8670	Bolt - Flywheel	5
53	43-1800	Flywheel (Incl. Ref. #54)	1
54	43-1810	Gear - Ring	1
55	42-7060	Seal - Oil	1
56	42-9220	Screw - Cap Hex. Hd.	6
57	42-7120	Case - Oil Seal	1
58	42-7130	Gasket - Oil Seal	1
59	42-7710	Crankshaft	1
60	42-7660	Bearing Set	
		Connecting Rod Std.	3
*	42-7670	Bearing Set	
		Connecting Rod 0.25 (.010 in.) U.S.	3
*	42-7680	Bearing Set	
		Connecting Rod 0.50 (.020 in.) U.S.	3

*Not Illustrated

†Not Available

Ref. No.	Part No.	Description	No. Used
*60	42-7690	Bearing Set	
		Connecting Rod	
		0.75 (.030 in.) U.S.	3
61	42-9590	Nut - Connecting Rod	6
62	42-7730	Key - Woodruff	2
63	42-9020	Plate - Locking	1
64	42-7230	Bearing Set	
		Crankshaft Std.	1
*	42-7240	Bearing Set - Crankshaft	
		0.25 (.010 in.) U.S.	1
*	42-7250	Bearing Set - Crankshaft	
		0.50 (.020 in.) U.S.	1
*	42-7260	Bearing Set - Crankshaft	
		0.75 (.030 in.) U.S.	1
65	42-7040	Seal - Side	4
†66		Asm. - Bearing Cap	1
67	42-9210	Bolt - Bearing Cap	8
76	48-2010	Asm. - Screen, Oil	1
77	48-1990	Nut - Jam	1
78	48-1980	Gasket	1
79	42-7100	Bushing - Camshaft	1
81	42-9230	Screw - HH	3
82	42-7390	Seal - Oil	1
83	42-7720	Pulley - Crankshaft	1
84	43-6470	Nut	1
85	42-9860	Washer - Spring	1

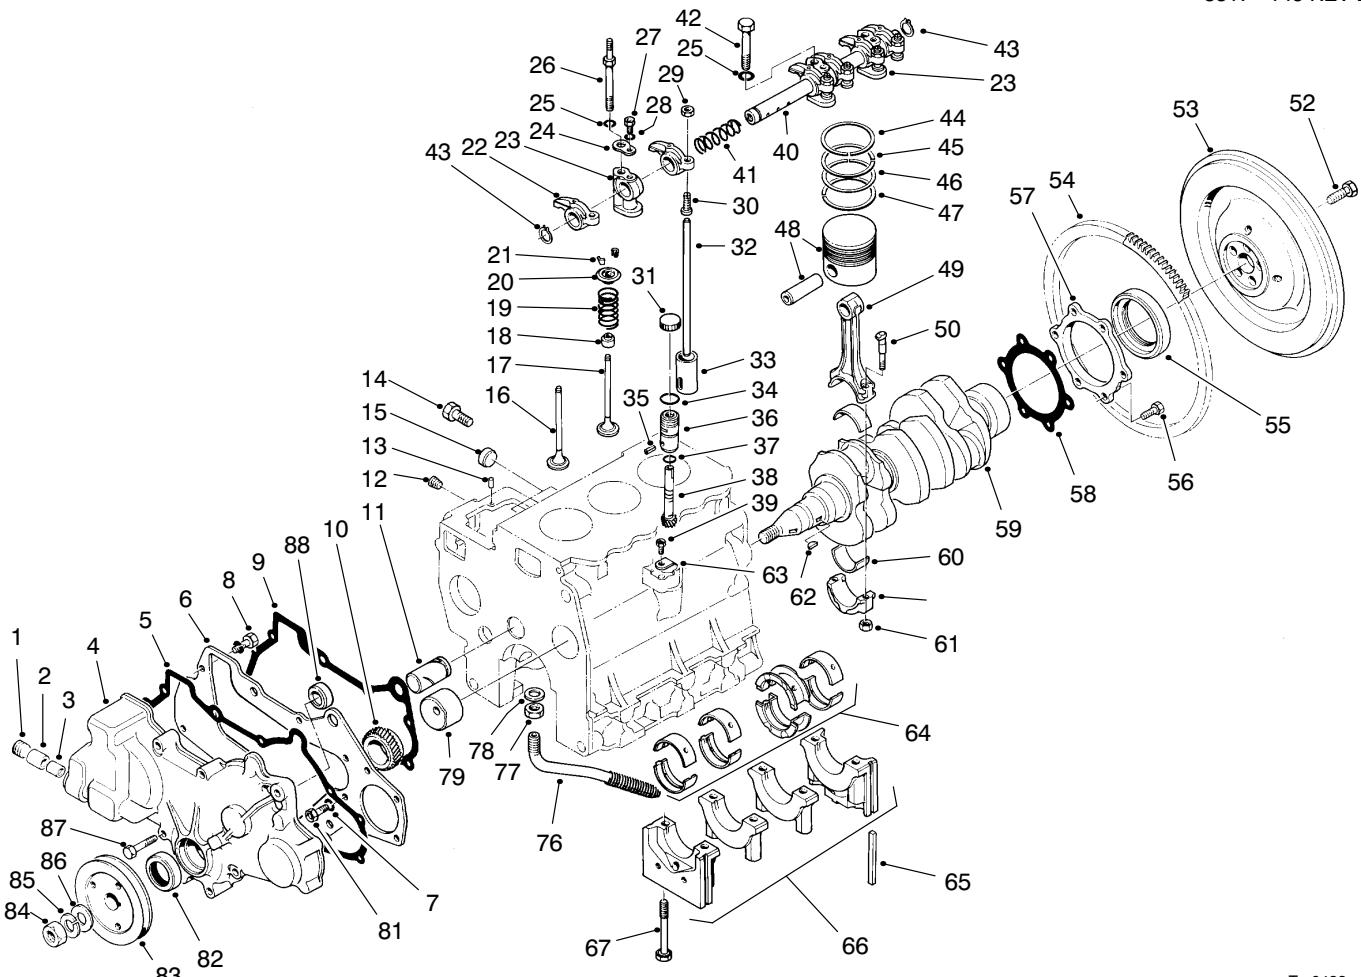


T-0432-2

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
86 87	42-9810 42-9500	Washer - Flat Screw - HH	1 8	88 *	82-2590 42-8960	Plug - Thrust Driven Unit - Speedometer (Incl. Ref. #34-38)	1 1

*Not Illustrated

†Not Available

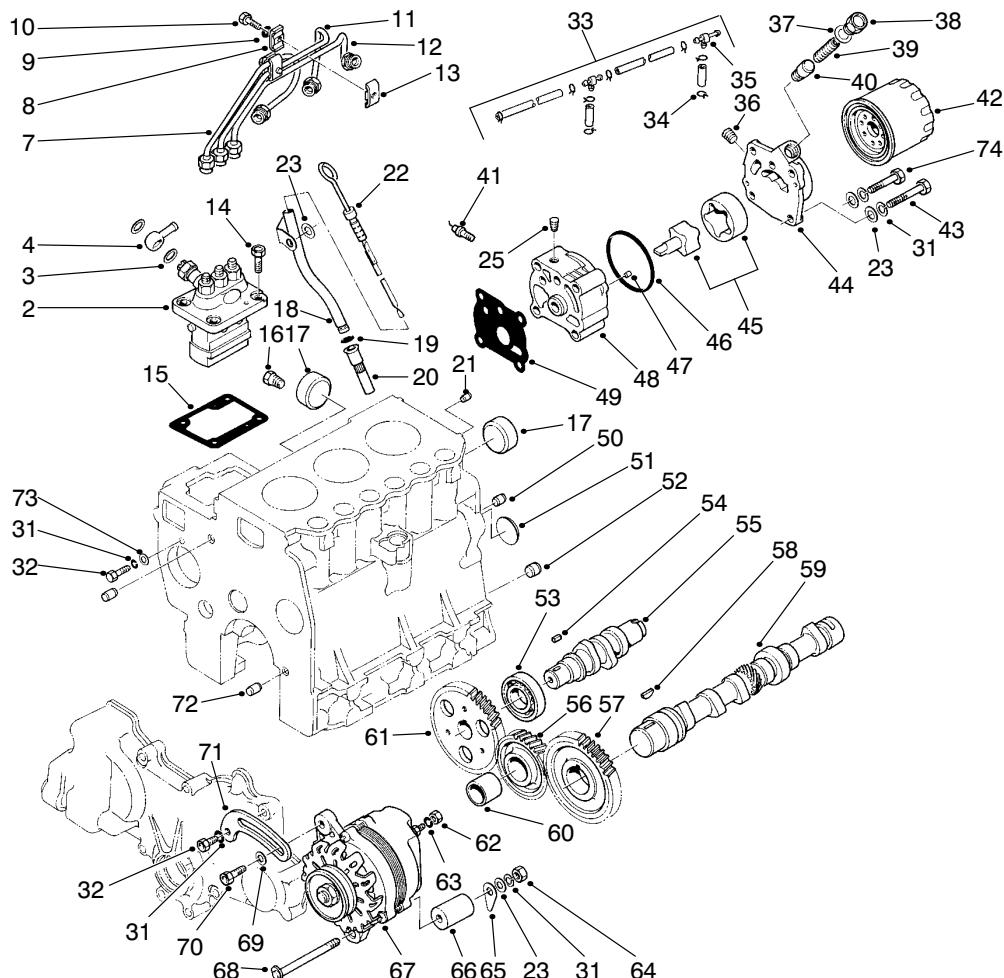

T-0433-1


ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
2	42-8000	Asm. - Pump, Fuel Injection (Used on Serial No. 50001 - 60119)	1
†2		Asm. - Pump, Fuel Injection (Used on Serial No. 60120 & Up)	1
3	42-9830	Washer - Seal	2
4	42-8100	Collar - Union	1
7	42-8130	Asm. - Pipe, Fuel Injection (No. 1)	1
8	56-0750	Clamp	2
9	43-5930	Washer - Lock	1
10	43-2600	Capscrew	2
11	42-8140	Asm. - Pipe, Fuel Injection (No. 2)	1
12	42-8150	Asm. - Pipe, Fuel Injection (No.3)	1
13	56-0760	Clamp	2
14	43-0110	Screw - HH (Used on Serial No. 50001 - 60119)	4
†14	43-0110	Screw - HH (Used on Serial No. 60120 & Up)	3
15	42-8010	Shim - 0.2 (.008 in.)	A/R
*	42-8020	Shim - 0.3 (.012 in.)	A/R
*	42-8030	Shim - 0.4 (.016 in.)	A/R

*Not Illustrated

† Items must be serviced by a Mitsubishi Authorized Toro Dealer/Distributor.

Ref. No.	Part No.	Description	No. Used
15	42-8040	Shim - 0.5 (.020 in.)	A/R
*	42-8050	Shim - 0.6 (.024 in.)	A/R
*	42-8060	Shim - 0.7 (.028 in.)	A/R
*	42-8070	Shim - 0.8 (.032 in.)	A/R
*	42-8080	Shim - 0.9 (.036 in.)	A/R
*	42-8090	Shim - 1.0 (.039 in.)	A/R
16	281-1	Plug - Taper	1
17	42-7090	Cap - Sealing	2
18	42-7050	Guide - Oil Level Gauge	1
19	43-2710	O-Ring	1
20	72-6950	Retainer - Oil Level Guide	1
21	42-7160	Pin - Dowel	1
22	42-7270	Asm. - Gauge, Oil Level	1
23	42-9660	Washer - Flat	6
25	67-2570	Plug - Taper	1
31	42-9850	Washer - Lock	7
32	42-9230	Screw - HH	2
33	42-8180	Asm. - Pipe, Fuel Return	1
34	2412-79	Clamp - Hose	8
35	42-8190	Joint	2
36	67-2390	Plug - Taper	1
37	42-7290	Gasket	1
38	67-2520	Plug	1
39	42-8930	Spring - Relief	1
40	67-2500	Plunger - Relief	1
41	56-1310	Asm. - Oil Pressure Switch	1
42	42-9030	Asm. - Filter, Oil	1

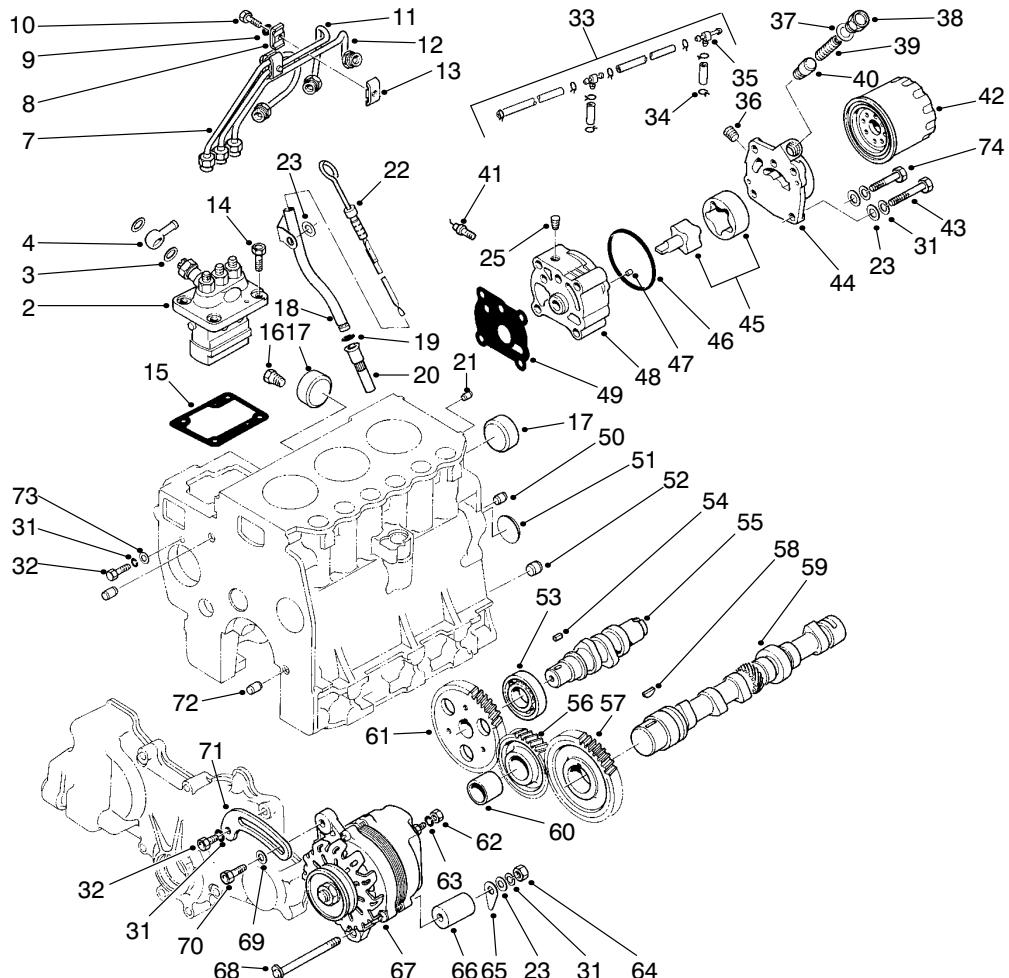


T-0433-1

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
43	42-9480	Screw – HH	3	61	42-7830	Gear – Injection Pump Cam	1
44	42-8920	Cover – Oil Pump	1	62	43-5970	Nut	1
45	42-8910	Asm. – Rotor, Oil Pump	1	63	43-5920	Washer – Lock	1
46	42-8940	O-Ring	1	64	42-9580	Nut	1
47	93-3657	Pin – Dowel	2	65	43-0370	Shim	AIR
48	42-8900	Body – Oil Pump	1	66	43-0380	Spacer	1
49	42-8950	Gasket – Oil Pump Body	1	67	43-0390	Alternator (Model AH2035M4)	1
50	42-7180	Bushing – Knock	2	68	43-1900	Screw – HH	1
51	42-7170	Plug – Expansion	1	69	54-8660	Washer	1
52	42-7200	Bushing – Knock	1	70	54-8650	Screw – HHF	1
53	42-7820	Bearing – Ball	1	71	43-0400	Brace – Alternator	1
54	42-7840	Key – Sunk	1	72	42-7190	Bushing – Knock	2
55	42-7810	Shaft – Injection Pump Cam	1	73	42-9820	Washer	1
56	42-7790	Asm. – Idler Gear (Incl. Ref. #60)	1	74	56-2120	Screw – Hex. Hd.	1
57	42-7780	Gear – Camshaft	1	* 42-8850	Asm. – Oil Pump (Incl. Ref. 36-40 & 44-48)	1	
58	42-7730	Key – Woodruff	1	* 95-3092	400 Hour Filter Kit (Incl. Ref. #42)	1	
59	72-4280	Camshaft	1				
60		Bushing – Idler Gear	1				

*Not Illustrated

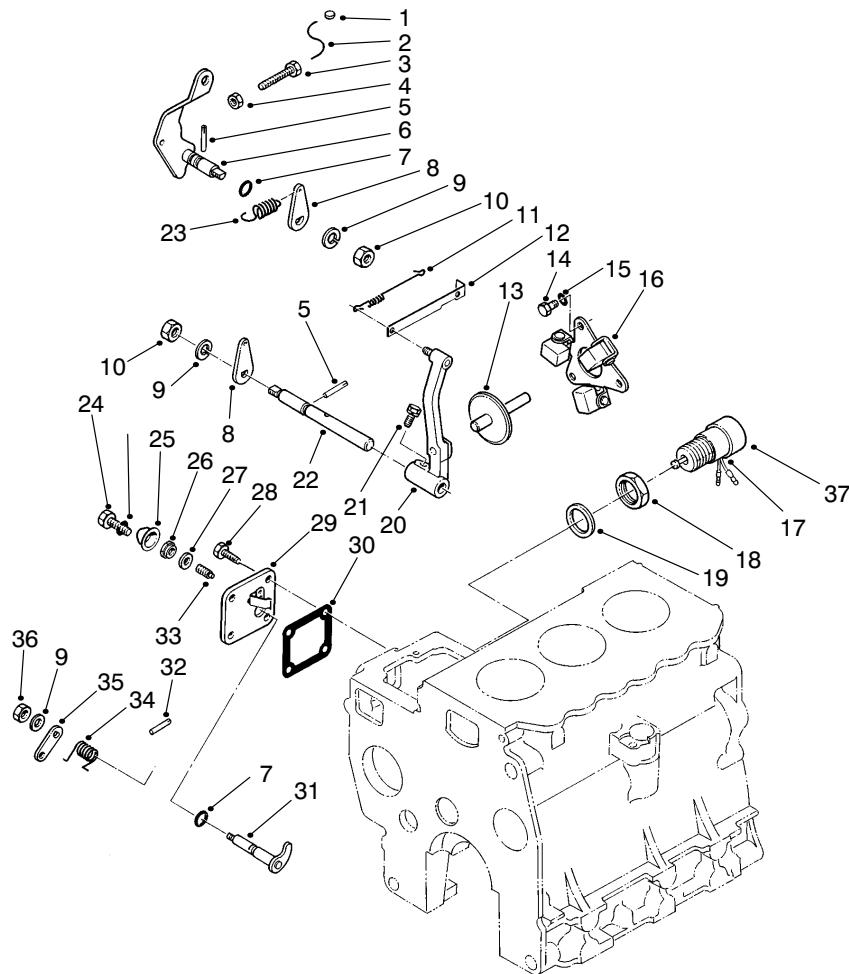


T-0434-1

GOVERNOR ASSEMBLY (Used on Serial No. 50001–60119)

Ref. No.	Part No.	Description	No. Used
1	42-8690	Metal – Sealing	1
2	42-8700	Wire	1
3	42-9420	Bolt – High Speed Set	1
4	43-2830	Nut	1
5	42-8810	Pin – Grooved	2
6	42-8780	Asm. – Speed Control Lever	1
7	42-8830	O-Ring	2
8	42-8770	Lever – Governor Spring	2
9	42-9850	Washer – Lock	2
10	42-9580	Nut – Jam	2
11	42-8740	Spring – Tie Rod	1
12	42-8750	Tie Rod	1
13	42-8720	Asm. – Sliding Shaft	1
14	42-9430	Screw – HH	3
15	43-5930	Washer – Lock	4
16	67-4040	Asm. – Weight, Governor	1
17	43-2730	Solenoid – Tubular	1
18	43-2750	Nut	1
19	43-2740	Gasket	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
20	42-8730	Asm. – Governor Lever	1
21	42-9450	Asm. – Bolt/Washer	1
22	42-8760	Shaft – Governor	1
23	42-8820	Spring – Governor	1
24	43-2800	Screw – HH	1
25	43-2820	Sealing Cap	1
26	43-5960	Nut – Special	1
27	43-3120	Washer – Seal	1
28	67-2560	Screw – HH	3
29	42-8790	Asm. – Cover (Incl. Ref. #25, 27 & 33)	1
30	42-8800	Gasket Cover	1
31	44-8090	Asm. – Lever, Stop	1
32	42-8810	Pin – Grooved	1
33	43-3160	Screw – Adjusting	1
34	44-8100	Spring Return	1
35	43-2770	Lever – Stop	1
36	42-9640	Nut – Jam	1
37	62-6940	Cap	1

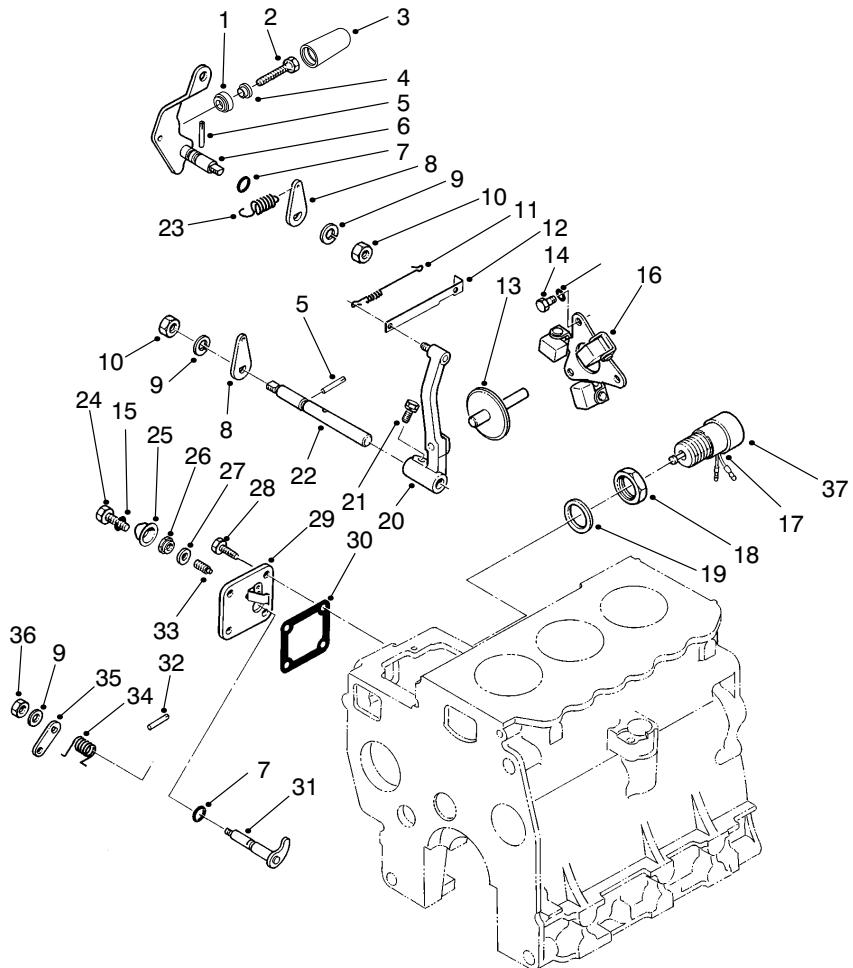


T-2434

GOVERNOR ASSEMBLY (Used on Serial No. 60120 & Up)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
†1		C-Ring, High Speed Set	1	20	42-8730	Asm. - Governor Lever	1
†2		Bolt - High Speed Set	1	21	42-9450	Asm. - Bolt/Washer	1
†3		Cover - High Speed Set	1	22	42-8760	Shaft - Governor	1
†4		Nut - Hight Speed Set	1	23	42-8820	Spring - Governor	1
5	42-8810	Pin - Grooved	2	24	43-2800	Screw - HH	1
6	42-8780	Asm. - Speed Control Lever	1	25	43-2820	Sealing Cap	1
7	42-8830	O-Ring	2	26	43-5960	Nut - Special	1
8	42-8770	Lever - Governor Spring	2	27	43-3120	Washer - Seal	1
9	42-9850	Washer - Lock	2	28	67-2560	Screw - HH	3
10	42-9580	Nut - Jam	2	29	42-8790	Asm. - Cover (Incl. Ref. #25, 27 & 33)	1
11	42-8740	Spring - Tie Rod	1	30	42-8800	Gasket Cover	1
12	42-8750	Tie Rod	1	31	44-8090	Asm. - Lever, Stop	1
13	42-8720	Asm. - Sliding Shaft	1	32	42-8810	Pin - Grooved	1
14	42-9430	Screw - HH	3	33	43-3160	Screw - Adjusting	1
15	43-5930	Washer - Lock	4	34	44-8100	Spring Return	1
16	67-4040	Asm. - Weight, Governor	1	35	43-2770	Lever - Stop	1
17	43-2730	Solenoid - Tubular	1	36	42-9640	Nut - Jam	1
18	43-2750	Nut	1	37	62-6940	Cap	1
19	43-2740	Gasket	1				

† Items must be serviced by a Mitsubishi Authorized Toro Dealer/Distributor.

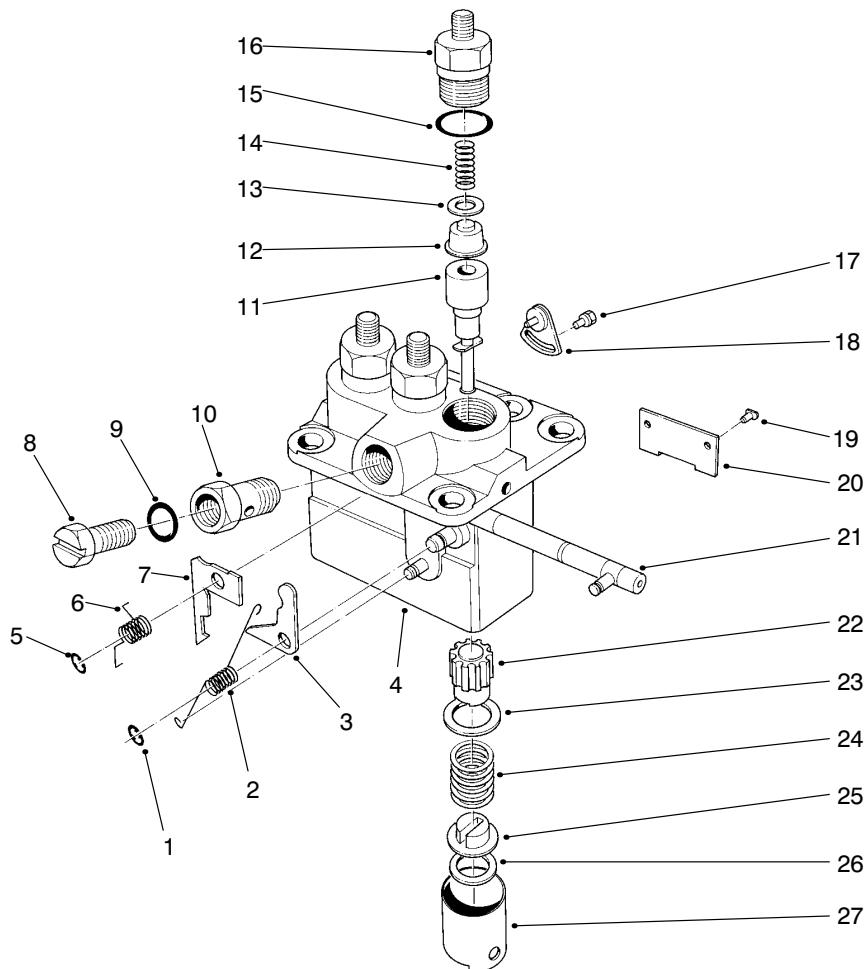


T-0435-5

FUEL INJECTION PUMP ASSEMBLY NO. 42-8000 (Used on Serial No. 50001-60119)

Ref. No.	Part No.	Description	No. Used
1	70-4240	E-Ring	1
2	43-3110	Spring - Ungleich Set	1
3	43-2910	Plate - Ungleich Set 16.9 (.665 in.) Mark 1	A/R
*	43-2920	Plate - Ungleich Set 16.8 (.661 in.) Mark 2	A/R
*	43-2930	Plate - Ungleich Set 16.7 (.657 in.) Mark 3	A/R
*	43-2940	Plate - Ungleich Set 16.6 (.654 in.) Mark 4	A/R
*	43-2950	Plate - Ungleich Set 16.5 (.650 in.) Mark 5	A/R
4	54-8780	Pump Housing Sub Asm.	1
5	54-8700	E-Ring	1
6	42-8460	Spring Return	1
7	43-3010	Plate - Smoke Set 2.3 (.091 in.) Mark 60	A/R
*	54-8710	Plate - Smoke Set 2.4 (.095 in.) Mark 61	A/R
*	43-3020	Plate - Smoke Set 2.5 (.098 in.) Mark 62	A/R
*	56-0960	Plate - Smoke Set 2.6 (.102 in.) Mark 63	A/R
*Not Illustrated	56-0960	Plate - Smoke Set 2.7 (.106 in.) Mark 64	A/R

Ref. No.	Part No.	Description	No. Used
7	43-3030	Plate - Smoke Set 2.8 (.110 in.) Mark 65	A/R
*	54-8730	Plate - Smoke Set 2.9 (.114 in.) Mark 66	A/R
*	43-3040	Plate - Smoke Set 3.0 (.118 in.) Mark 67	A/R
*	54-8740	Plate - Smoke Set 3.1 (.122 in.) Mark 68	A/R
*	43-3050	Plate - Smoke Set 3.2 (.126 in.) Mark 69	A/R
*	54-8750	Plate - Smoke Set 3.3 (.130 in.) Mark 70	A/R
*	43-3060	Plate - Smoke Set 3.4 (.134 in.) Mark 71	A/R
*	54-8760	Plate - Smoke Set 3.5 (.138 in.) Mark 72	A/R
*	43-3070	Plate - Smoke Set 3.6 (.142 in.) Mark 73	A/R
*	54-8770	Plate - Smoke Set 3.7 (.146 in.) Mark 74	A/R
8	42-8370	Screw - Air Breather	1
9	42-9770	Washer	1
10	42-8380	Screw - Hollow	1
11	42-8260	Element Sub Asm.	3
12	42-8250	Delivery Valve Sub Asm.	3

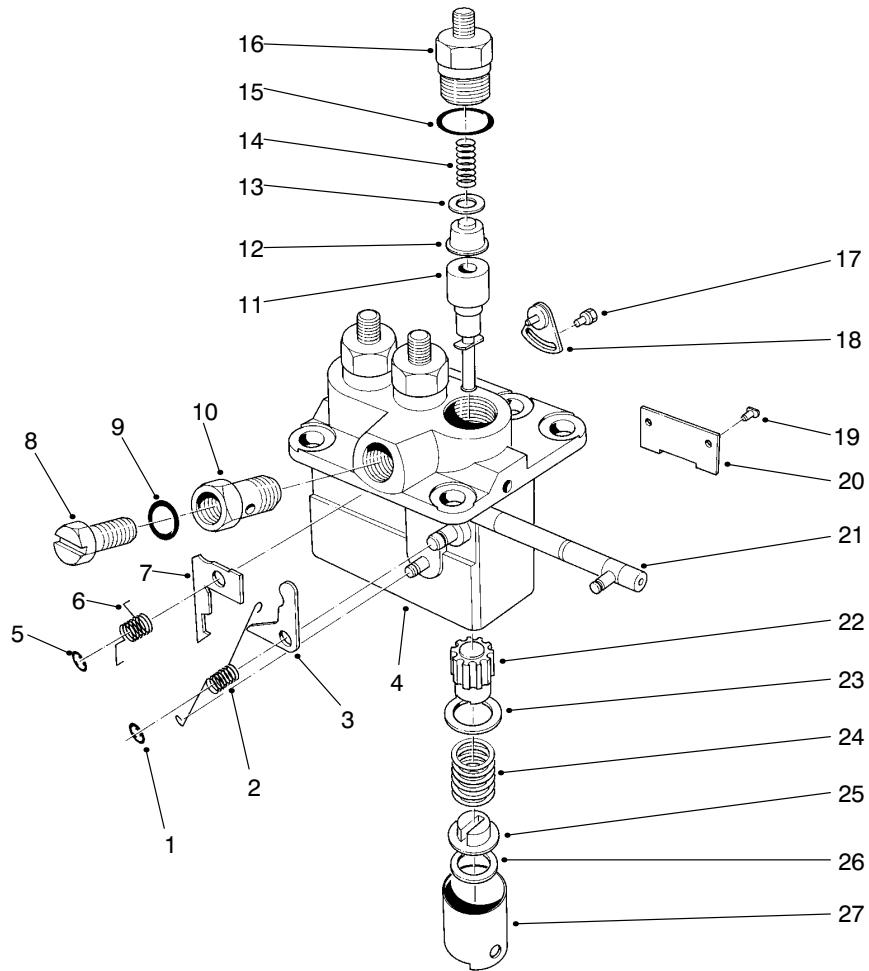


T-0435-5

FUEL INJECTION PUMP ASSEMBLY NO. 42-8000 (Cont.) (Used on Serial No. 50001-60119)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
13	42-8240	Gasket - Delivery Valve	3	26	70-4080	Shim - Plate 0.3 (.0121 in.)	A/R
14	42-8230	Spring - Delivery Valve	3	*	70-4090	Shim - Plate 0.4 (.016 in.)	A/R
15	42-8330	O-Ring	3	*	70-4100	Shim - Plate 0.5 (.020 in.)	A/R
16	42-8220	Holder - Delivery Valve	3	*	42-8440	Shim - Plate 0.25 (.010 in.)	A/R
17	43-3150	Asm. - Bolt/Washer	2	*	42-8450	Shim - Plate 0.35 (.014 in.)	A/R
18	42-8360	Asm. - Plate, Adjusting	2	*	43-6240	Shim - Plate 0.45 (.018 in.)	A/R
19	42-8340	Pin - Tappet Guide	3	*	54-8680	Shim - Plate 0.55 (.022 in.)	A/R
20	42-8350	Plate	1	*	54-8690	Shim - Plate 0.65 (.026 in.)	A/R
21	42-8310	Asm. - Rack, Control	1	27	42-8300	Tappet Sub Asm.	3
22	42-8270	Sleeve - Plunger Control	3				
23	42-8280	Seat - Spring, Upper	3				
24	42-8290	Spring - Pump Plunger	3				
25	42-8320	Seat - Spring, Lower	3				
26	70-3970	Shim - Plate 0.6 (.0241 in.)	A/R				
*	70-4070	Shim - Plate 0.2 (.008 in.)	A/R				

*Not Illustrated

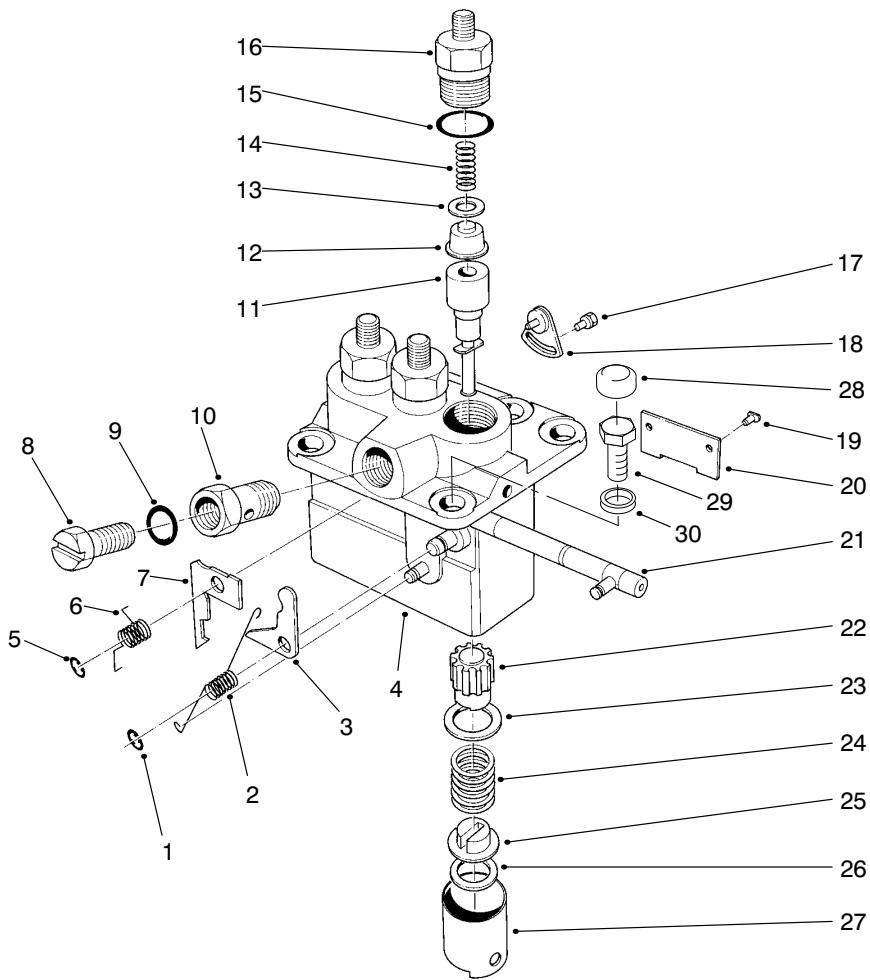

T-2435


FUEL INJECTION PUMP ASSEMBLY (Used on Serial No. 60120 & Up)

Ref. No.	Part No.	Description	No. Used
1	70-4240	E-Ring	1
2	43-3110	Spring – Ungleich Set	1
3	95-1566	Plate – Ungleich Set 17.0 (.669 in.) Mark 6	A/R
*	95-1567	Plate – Ungleich Set 16.9 (.665 in.) Mark 7	A/R
*	95-1568	Plate – Ungleich Set 16.8 (.661 in.) Mark 8	A/R
*	95-1569	Plate – Ungleich Set 16.7 (.657 in.) Mark 9	A/R
*	95-1570	Plate – Ungleich Set 16.6 (.654 in.) Mark 10	A/R
*	95-1571	Plate – Ungleich Set 16.85 (.663 in.) Mark 11	A/R
*	95-1572	Plate – Ungleich Set 16.75 (.659 in.) Mark 12	A/R
4	54-8780	Pump Housing Sub Asm.	1
5	42-8460	E-Ring	1
6	54-8700	Spring Return	1
7	43-3010	Plate – Smoke Set 2.3 (.091 in.) Mark 60	A/R
*	54-8710	Plate – Smoke Set 2.4 (.095 in.) Mark 61	A/R
*	54-8710	Plate – Smoke Set 2.5 (.098 in.) Mark 62	A/R

*Not Illustrated

† Items must be serviced by a Mitsubishi Authorized Toro Dealer/Distributor.

Ref. No.	Part No.	Description	No. Used
7	43-3020	Plate – Smoke Set 2.6 (.102 in.) Mark 63	A/R
*	95-1573	Plate – Smoke Set 1.2 (.047 in.) Mark 49	A/R
*	95-1574	Plate – Smoke Set 1.3 (.051 in.) Mark 50	A/R
*	95-1576	Plate – Smoke Set 1.4 (.055 in.) Mark 51	A/R
*	56-0900	Plate – Smoke Set 1.5 (.059 in.) Mark 52	A/R
*	56-0990	Plate – Smoke Set 1.6 (.063 in.) Mark 53	A/R
*	56-0910	Plate – Smoke Set 1.7 (.067 in.) Mark 54	A/R
*	56-1000	Plate – Smoke Set 1.8 (.071 in.) Mark 55	A/R
*	56-0920	Plate – Smoke Set 1.9 (.075 in.) Mark 56	A/R
*	56-1010	Plate – Smoke Set 2.0 (.079 in.) Mark 57	A/R
*	56-0930	Plate – Smoke Set 2.1 (.083 in.) Mark 58	A/R
*	43-3000	Plate – Smoke Set 2.2 (.087 in.) Mark 59	A/R
8	42-8370	Screw – Air Breather	1

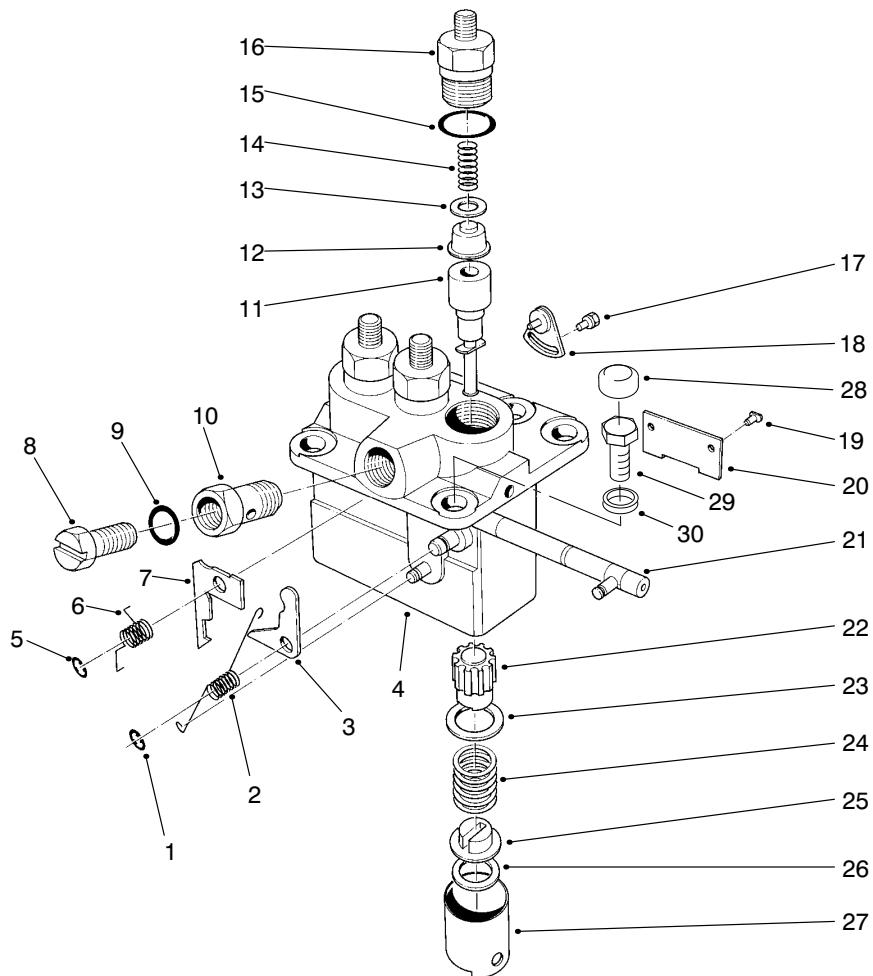


T-2435

FUEL INJECTION PUMP ASSEMBLY (Continued) (Used on Serial No. 60120 & Up)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
9	42-9770	Washer	1	26	70-4080	Shim - Plate 0.3 (.0121 in.)	A/R
10	42-8380	Screw - Hollow	1	*	70-4090	Shim - Plate 0.4 (.016 in.)	A/R
11	42-8260	Element Sub Asm.	3	*	70-4100	Shim - Plate 0.5 (.020 in.)	A/R
12	42-8250	Delivery Valve Sub Asm.	3	*	42-8440	Shim - Plate 0.25 (.010 in.)	A/R
13	42-8240	Gasket - Delivery Valve	3	*	42-8450	Shim - Plate 0.35 (.014 in.)	A/R
14	42-8230	Spring - Delivery Valve	3	*	43-6240	Shim - Plate 0.45 (.018 in.)	A/R
15	42-8330	O-Ring	3	*	54-8680	Shim - Plate 0.55 (.022 in.)	A/R
16	42-8220	Holder - Delivery Valve	3	*	54-8690	Shim - Plate 0.65 (.026 in.)	A/R
17	43-3150	Asm. - Bolt/Washer	2	27	42-8300	Tappet Sub Asm.	3
18	42-8360	Asm. - Plate, Adjusting	2	†28		Cover	1
19	42-8340	Pin - Tappet Guide	3	†29		Screw - Cap Hex. Hd.	1
20	42-8350	Plate	1	†30		C-Ring	1
21	42-8310	Asm. - Rack, Control	1				
22	42-8270	Sleeve - Plunger Control	3				
23	42-8280	Seat - Spring, Upper	3				
24	42-8290	Spring - Pump Plunger	3				
25	42-8320	Seat - Spring, Lower	3				
26	70-3970	Shim - Plate 0.6 (.0241 in.)	A/R				
*	70-4070	Shim - Plate 0.2 (.008 in.)	A/R				

*Not Illustrated

† Items must be serviced by a Mitsubishi Authorized Toro Dealer/Distributor.

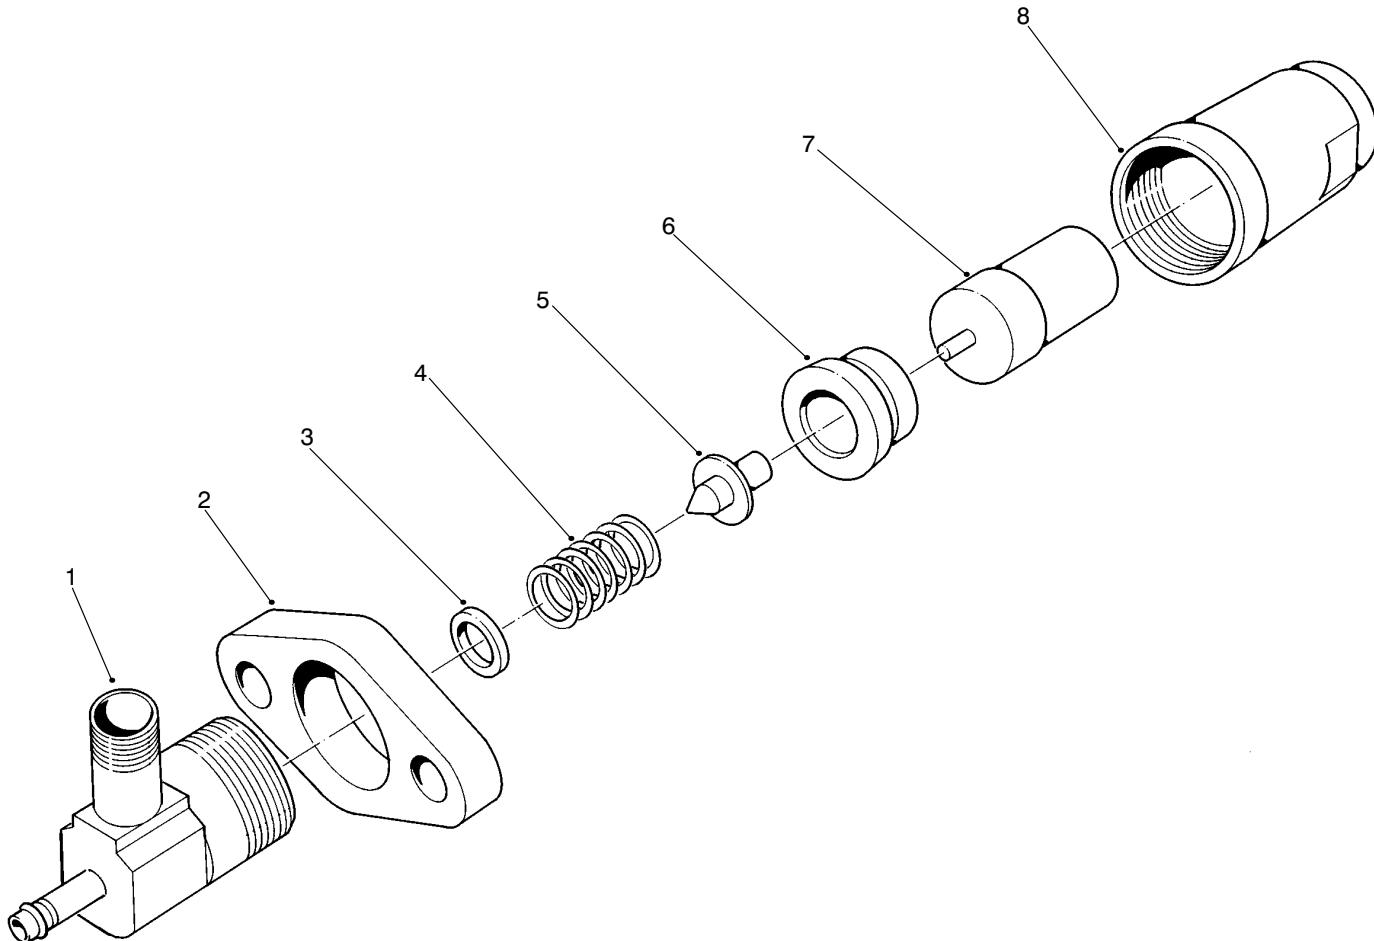


T-0436-1

NOZZLE & HOLDER ASSEMBLY NO. 44-8070

Ref. No.	Part No.	Description	No. Used
1	44-8080	Body	3
2	42-8670	Flange	3
3	42-9680	Washer 1.3 (.051 in.)	A/R
*	42-9690	Washer 1.35 (.053 in.)	A/R
*	42-9700	Washer 1.4 (.055 in.)	A/R
*	42-9710	Washer 0.9 (.035 in.)	A/R
*	42-9720	Washer 1.0 (.039 in.)	A/R

*Not Illustrated


Ref. No.	Part No.	Description	No. Used
*3	42-9730	Washer 1.1 (.043 in.)	A/R
*	42-9740	Washer 1.2 (.047 in.)	A/R
*	42-9750	Washer 0.1 (.004 in.)	A/R
4	51-7500	Spring - Pressure	3
5	93-3181	Pin - Pressure	3
6	51-7520	Piece - Distance	3
7	42-8680	Asm. - Nozzle	3
8	42-8650	Nut - Retaining	3

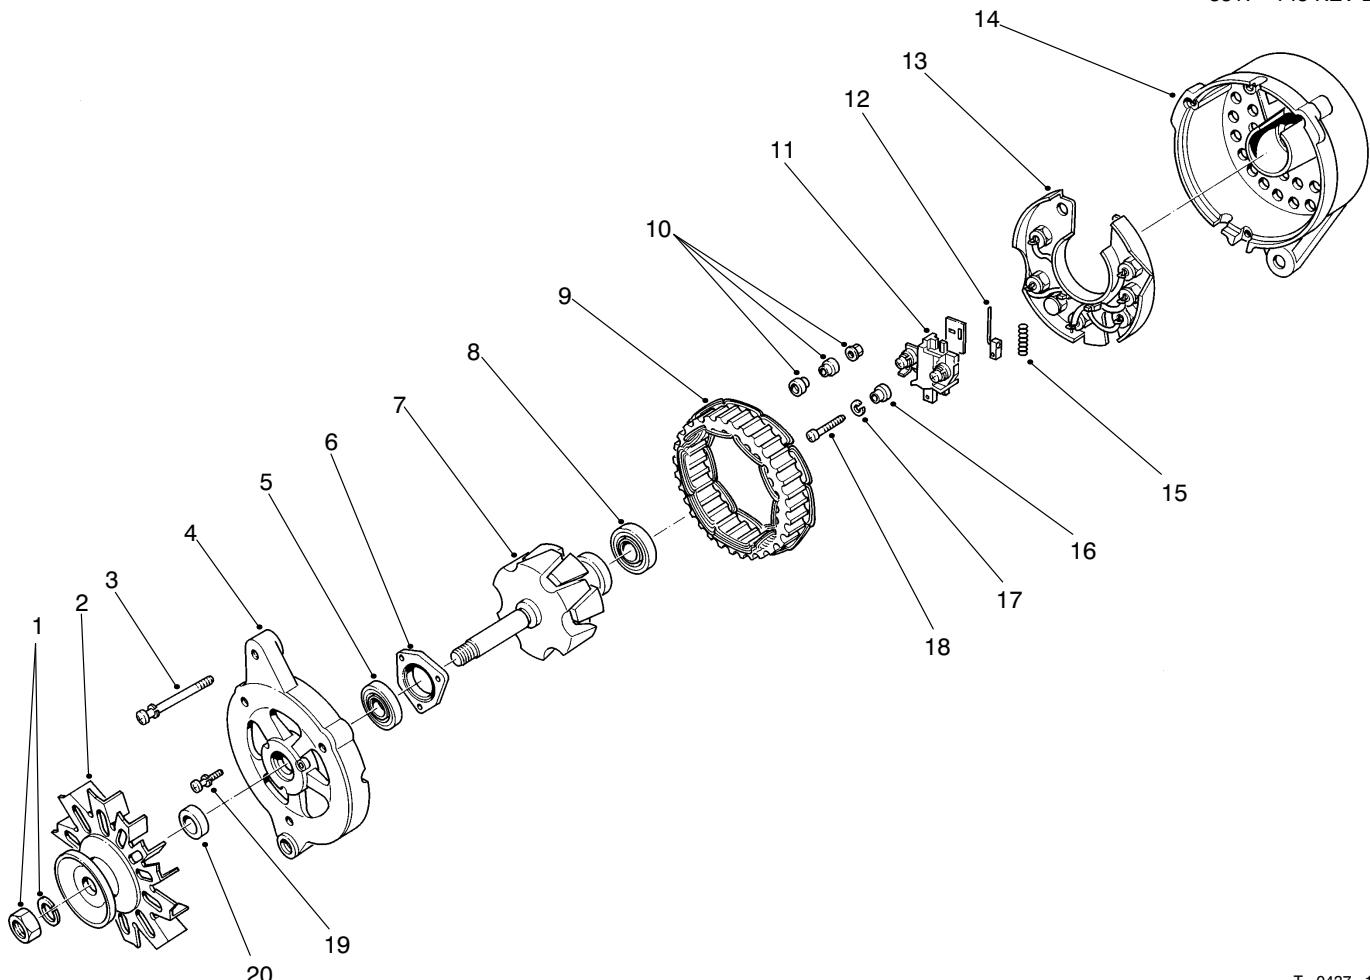

T-0437-1

ALTERNATOR ASSEMBLY NO. 43-0390

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	51-7850	Nut Set	1	11	43-0490	Asm. - Holder, Brush (Incl. Ref. #12 & 15)	1
2	43-0420	Asm. - Pulley (Incl. Ref. #20)	1	12	43-0500	Brush	2
3	43-0120	Screw - Set	1	13	43-0520	Asm. - Rectifier	1
4	43-0430	Asm. - Bracket, Front (Incl. Ref. #5-6 & 19)	1	14	43-0480	Asm. - Rear Bracket (Incl. Ref. #10-13 & 15-18)	1
5	70-3320	Bearing - Front	1	15	70-2810	Spring - Brush	1
6		Plate - Bearing Retainer	1	16	43-2720	Mold	1
7	51-7910	Asm. - Rotor (Incl. Ref. #8)	1	17	43-5920	Washer - Lock	1
8	51-7920	Bearing - Rear	1	18	93-3654	Screw	1
9	43-0470	Stator	1	19	51-7890	Screw - Set	1
10	43-0080	Nut - Set	1	20		Collar - Shaft	1

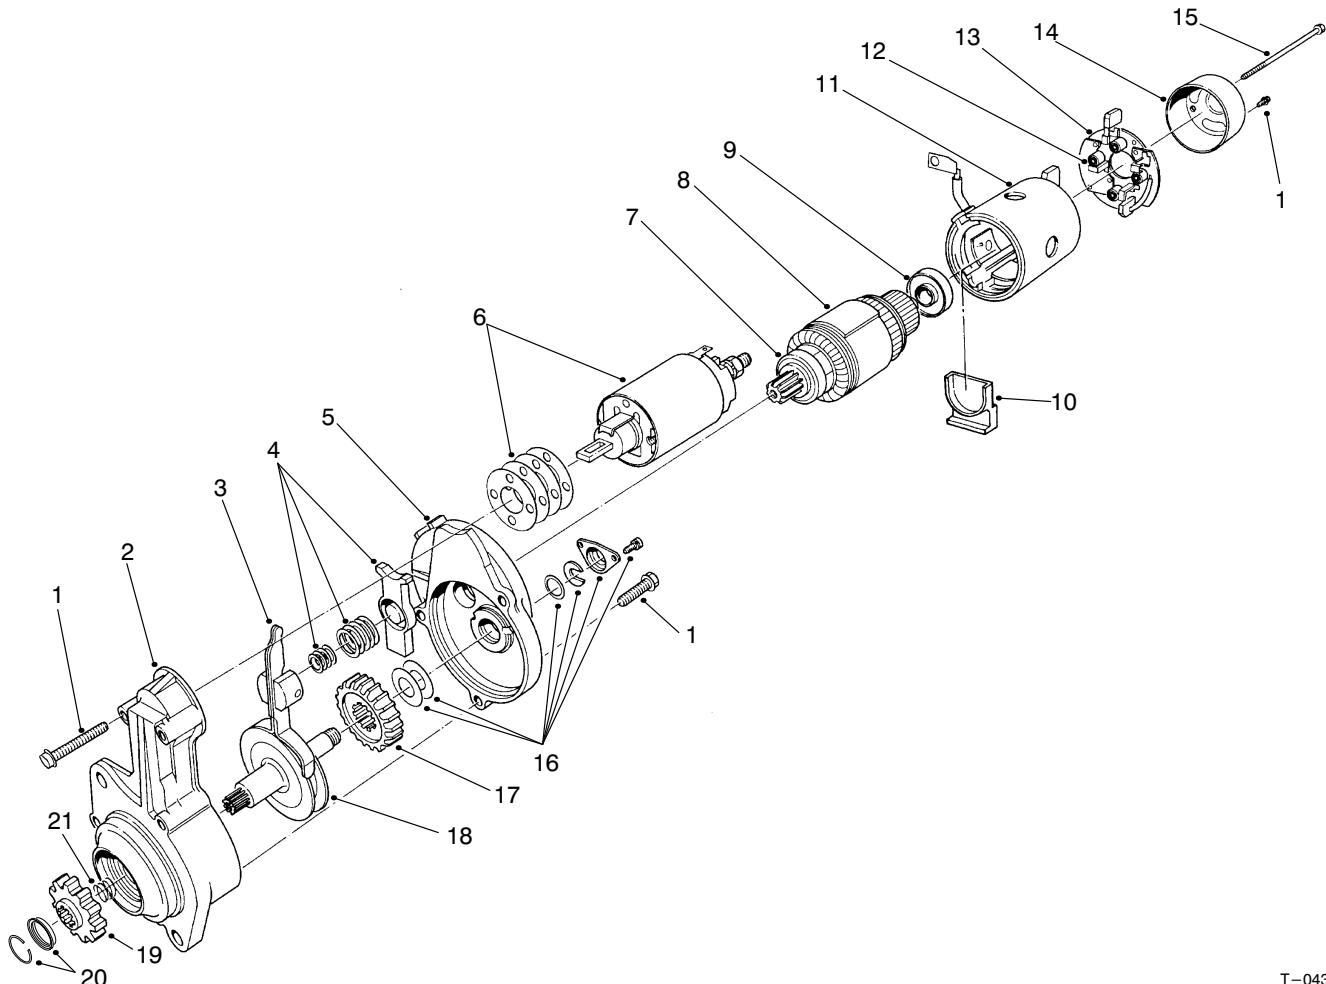


T-0438-1

STARTER ASSEMBLY NO. 46-7610

Ref. No.	Part No.	Description	No. Used
1	93-3655	Screw - Set	1
2	46-7630	Asm. - Bracket, Front	1
3	46-7640	Asm. - Lever	1
4	43-0190	Spring Set	1
5	46-7650	Asm. - Bracket, Center	1
6	46-7660	Asm. - Switch	1
7	46-7680	Bearing - Front	1
8	46-7670	Armature Set (Incl. Ref. #7 & 9)	1
9	70-3330	Bearing - Rear	1
10	46-8050	Packing	1
11	46-7780	Asm. - Yoke	1
12	51-7820	Spring - Brush	4
13	51-7810	Asm. - Brush Holder (Incl. Ref. #12)	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
14	51-7830	Bracket - Rear	1
15	93-3687	Bolt Set	1
16	51-7780	Cover Set	1
17	46-7760	Gear	1
18	46-7750	Asm. - Shaft, Pinion	1
19	46-7720	Pinion Set (Incl. Ref. #20)	1
20	51-7740	Stopper	1
21	* 46-7740	Spring	1
*	46-7710	Gear Set (Incl. Ref. #17 & 18)	1
		Asm. - Shaft, Clutch (Incl. Ref. #16-20)	1

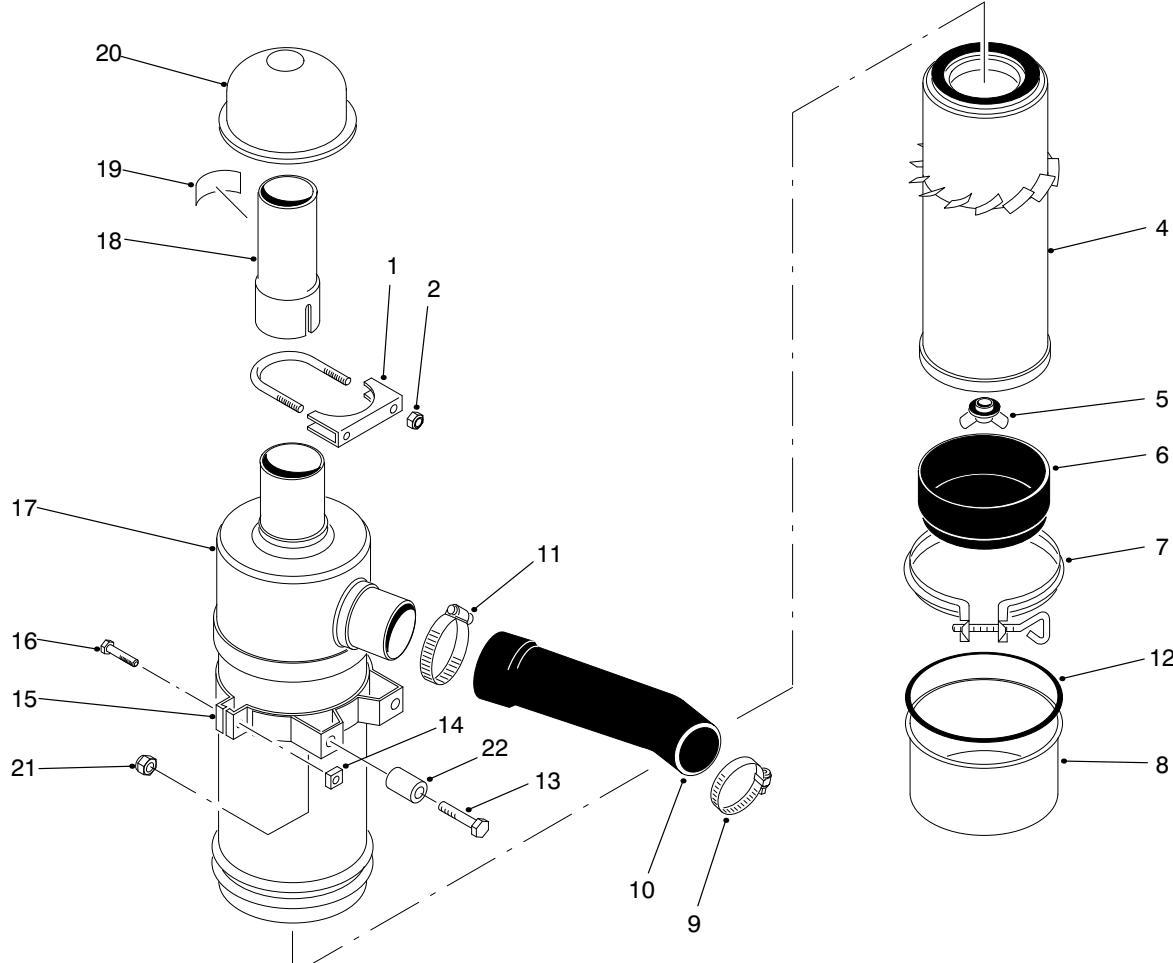


T-1188-2

AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	20-4840	Muffler Clamp (Incl. Ref. #2)	1	14	32107-11	Nut	2
2	3217-6	Nut	2	15	27-7170	Asm. - Band (Incl. Ref. #14 & 16)	2
4	27-7110	Asm. - Element	1	16	3258-19	Screw - Mach. Rd. Hd.	2
5	27-7120	Asm. - Nut & Gasket	1	17	27-7100	Asm. - Air Cleaner (Incl. Ref. #3-8)	1
6	27-7140	Skirt - Baffle	1	18	44-8950	Tube - Air Cleaner	1
7	27-7130	Asm. - Clamp	1	19	93-7275	Decal - Starting Fluid	1
8	27-7150	Asm. - Cup	1	20	27-7180	Asm. - Cap, Air Inlet	1
9	2412-3	Hose - Clamp	1	21	3296-29	Nut - Lock	4
10	95-1836	Hose - Air Cleaner	1	22	77-3180	Spacer	4
11	2412-42	Hose Clamp	1	*	95-3092	400 Hour Filter Kit (Incl. Ref. #4)	1
12	80-3330	Gasket	1				
13	322-10	Screw - HH	4				

*Not Illustrated

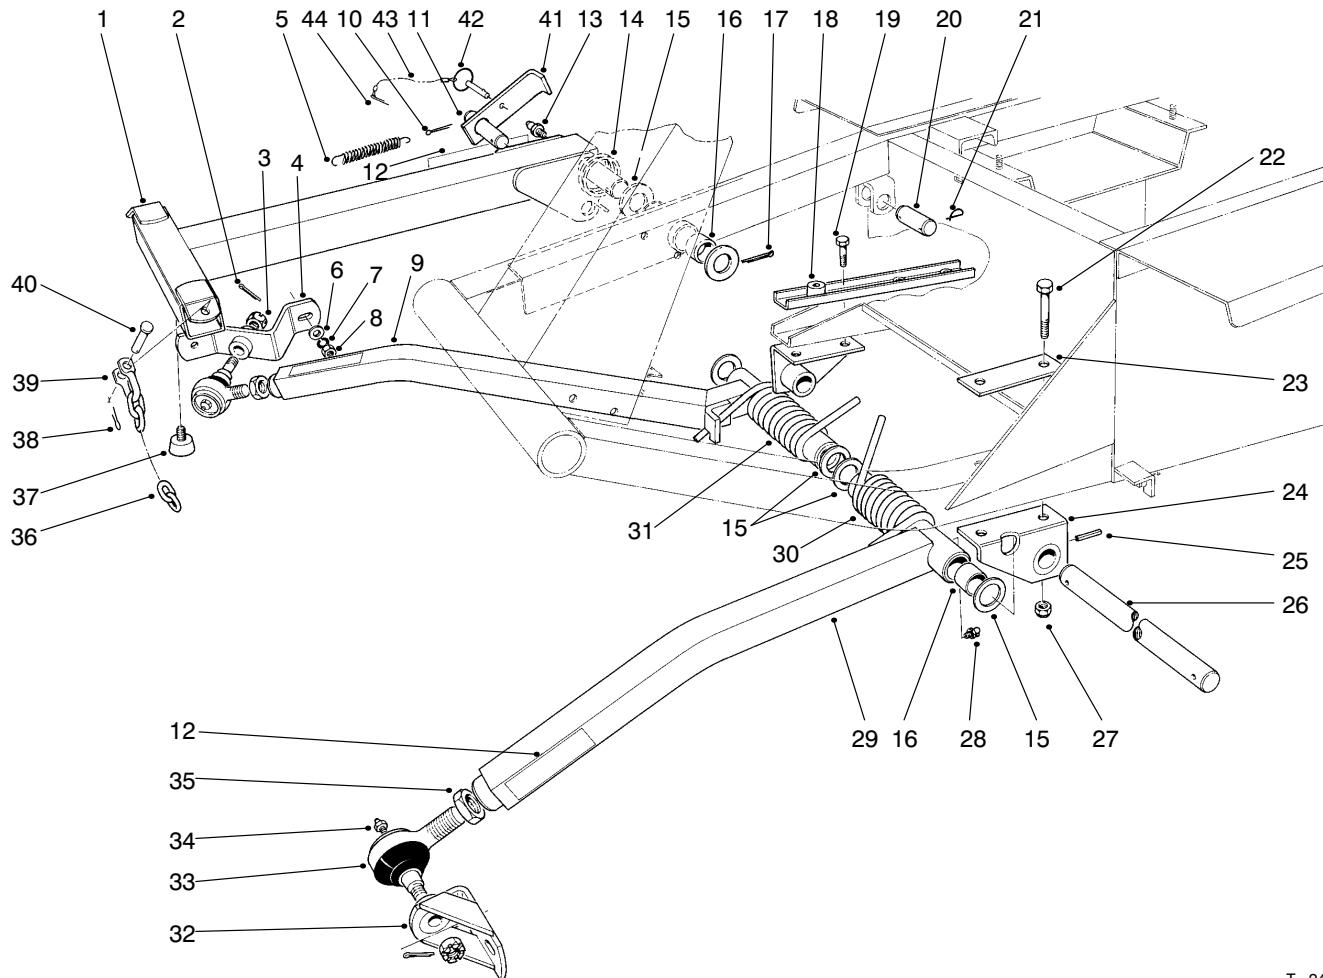

T-2414-1

PUSH ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-6370	Lift Arm	1
2	3272-11	Pin - Cotter	2
3	32136-2	Nut - Hex. Slotted	2
4	21-3020	Ball Joint Mount R.H.	1
5	21-1830	Spring - Tension	1
6	3256-25	Washer - Flat	1
7	3253-6	Washer - Lock	2
8	3217-8	Nut - Full	2
9	66-7150	Push Arm R.H. (Incl. Ref. #16 & 28)	1
10	3272-24	Pin - Cotter	1
11	24-9510	Pin	1
12	93-6696	Decal - Warning	3
13	302-5	Fitting - Grease	1
14	46-8840	Spring - Lift Arm	1
15	5-1754	Washer	6
16	256-126	Bushing	6
17	3272-33	Pin - Cotter	1
18	93-7040	Support Reinforcement	1
19	324-4	Screw - HH	2
20	3-7292	Pin	1
21	5-3126	Pin - Spring	3
22	324-11	Screw - HH	2

Ref. No.	Part No.	Description	No. Used
23	21-3750	Plate - Support	1
24	21-2860	Bracket - Push Arm	2
25	32121-84	Pin - Roll	2
26	21-2990	Shaft - Pivot	1
27	32128-42	Nut - Flange	4
28	302-33	Fitting - Grease	2
29	21-2960	Push Arm L.H. (Incl. Ref. #16 & 28)	1
30	21-2900	Spring - Torsion L.H.	1
31	21-2890	Spring - Torsion R.H.	1
32	21-3050	Ball Joint Mount L.H.	1
33	86-8100	Asm. - Ball Joint	2
34	302-5	Fitting - Grease	2
35	21-3000	Nut - Jam	2
36	3-1365	Chain - Lift	3
37	67-9800	Bumper	1
38	3272-10	Pin - Cotter	3
39	5-2942	Shackle	3
40	283-10	Pin	3
41	93-7650	Lever - Locking	1
42	93-7644	Pin - Hitch	1
43	28-8070	Lanyard	1
44	3272-7	Pin - Cotter	1

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-1365	Chain - Lift	50 36 3	21-8120	Adjustment Shim .030	18 35 A/R
3-6498	Washer	9 18 A/R	21-8180	Bearing	19 3 2
3-6657	Clip	8 31 2	21-8270	Pin - Dowel	17 3 2
3-6803	Washer	32 15 A/R	21-8360	Clip - Retaining	19 12 2
3-7243	Spring - Extension	11 13 2	21-8590	Link - Valve Lever	26 27 1
3-7292	Pin	50 20 1	21-8620	Lever - Valve	26 2 1
3-8812	Spacer	9 19 1	21-8640	Lever - Latch Valve	26 7 1
4-2390	Washer	30 49 2	21-9010	Pivot Mount - Valve Lever	26 11 1
5-0652	Spacer	9 37 1	21-9260	Cover - Dust	13 4 1
5-0652	Spacer	31 62 2	21-9370	Screw - Adjusting	19 16 2
5-0701	Anchor - Spring	9 52 1	21-9380	Nut - Pivot	19 17 2
5-0838	Washer - Flat	6 58 3	21-9390	Socket - Adjusting Screw	19 15 2
5-1226	Washer	20 17 3	21-9420	Spring - Shoe Return L.H.	19 19 2
5-1747	Spring	9 21 1	21-9430	Spring - Shoe Return R.H.	19 7 2
5-1754	Washer	50 15 6	21-9440	Spring - Adjusting Screw	19 14 2
5-2942	Shackle	50 39 3	21-9450	Dust Shield	19 5 2
5-3126	Pin - Spring	50 21 3	21-9460	Retainer - Brake Lever	19 10 4
5-3637	Washer	30 17 1	22-7810	Spacer	16 19 1
6-1659	Switch - Toggle	3 19 1	22-7820	Asm. - Buzzer	3 36 1
10-6830	Stud - Drive	20 32 10	22-8330	Plug	29 1 2
10-8110	Washer - Thrust	20 18 A/R	22-8340	Spring	29 3 2
11-0590	Screw - Tap	11 5 2	22-8350	Ball	29 4 2
11-0590	Screw - Tap	5 44 2	22-8360	Pin - Cam	29 6 2
11-9760	Screw - Tap	22 52 3	22-8370	Seat - Check Valve	29 5 2
12-5450	Thread Forming Screw	17 13 8	22-8380	Retainer - Spring	29 10 1
12-9990	Hour Meter	3 40 1	22-8390	Retainer - Spring	29 12 1
14-4149	Hood	6 55 1	22-8400	Spacer - Float	29 13 1
18-1720	Asm. - Ball Joint	30 3 2	22-8410	Spring	29 11 1
18-2770	Cable - Ground	2 52 1	22-8420	Spool	29 8 1
20-4840	Muffler Clamp	49 1 1	22-8480	Spring Ring Spool	29 14 1
21-0141	Asm. - Socket R.H. Thd.	20 39 2	22-8490	Ring - Snap	29 15 1
21-0141	Asm. - Socket, R.H.	11 26 1	22-8500	O-Ring	29 9 2
21-0151	Asm. - Socket L.H. Thd.	20 * 2	23-2240	Rod - Pump Control	11 17 1
21-0230	Pulley - PTO	9 13 1	23-2270	Bushing - Rubber	11 16 1
21-0400	Spring - Compression	9 48 1	23-5180	Dipstick	16 41 1
21-1600	Clamp - Lever, PTO	10 54 1	23-7270	Nut - Wheel	16 32 10
21-1820	Stud - Belt Retainer	30 42 2	23-9740	Oil Filter	22 34 1
21-1830	Spring - Tension	50 5 1	24-6390	Stud - Battery Hold Down	1 10 2
21-1830	Spring - Tension	9 50 2	24-6420	Hold Down - Battery	1 24 1
21-1880	Grip - Handle	9 1 1	24-8790	Differential Bevel Gear Side	17 5 2
21-1880	Grip - Handle	13 35 1	24-8840	Ring - Wheel Bearing	19 22 2
21-1990	Asm. - Tie Rod	20 42 2	24-9180	Strut & Lever Parking Brake	19 4 2
21-2660	Footrest	1 4 1	24-9510	Pin	50 11 1
21-2760	Pad - Foot Rest L.H.	2 47 1	24-9740	Cover - Battery Access	1 21 1
21-2770	Pad - Foot Rest R.H.	2 46 1	24-9830	Support - Axle	18 44 1
21-2820	Hub Wheel	20 30 2	25-2380	Plate - Thrust	25 50 2
21-2850	Mount - R.H. Pedal	11 4 1	25-2390	Plate - Motor Valve	25 57 1
21-2860	Bracket - Push Arm	50 24 2	25-2400	Gasket	25 59 1
21-2890	Spring - Torsion R.H.	50 31 1	25-2410	Asm. - Accel. Valve	24 17 2
21-2900	Spring - Torsion L.H.	50 30 1	25-2430	Pin - Dowel	25 52 2
21-2960	Push Arm L.H.	50 29 1	25-2440	Plate - Pump Valve	25 51 1
21-2990	Shaft - Pivot	50 26 1	25-2450	Variable Swashplate	24 48 1
21-3000	Nut - Jam	50 35 2	25-2460	Plug - HH	24 28 2
21-3020	Ball Joint Mount R.H.	50 4 1	25-2470	Shim Pack	24 29 2
21-3050	Ball Joint Mount L.H.	50 32 1	25-2480	Valve Spring	24 44 1
21-3370	Cable - R.H. Brake	11 * 1	25-2490	Ball	24 9 2
21-3380	Cable - L.H. Brake	11 15 1	25-2500	Shaft - Trunnion	24 43 1
21-3600	Foam - Tank Support	16 3 1	25-2510	Washer - Flat	24 25 2
21-3610	Foam - Tank Support	16 21 1	25-2530	Headless Straight Pin	24 39 1
21-3750	Plate - Support	50 23 1	25-2550	Housing - Charge Pump	24 34 1
21-7670	Differential Case	18 33 1	25-2560	Cone - Relief Valve	24 31 2
21-7690	Pinion Gear	17 6 2	25-2570	Valve Spring	24 30 1
21-7700	Pinion Mate Shaft	18 31 1	25-2580	Shaft - Trunnion	24 26 1
21-7720	Washer - Thrust	17 4 2	25-2610	Accel. Valve Spring	24 16 1
21-7730	Washer - Thrust	17 7 2	25-2620	By-Pass Valve	24 15 1
21-7770	Drive Gear Screw	18 32 5	25-2630	Back-Up Ring	24 14 1
21-7830	Gear Cover	17 12 1	25-2640	Valve Spring	24 8 2
21-7850	Cup - Plug	17 20 1	25-2650	Plug - Check Valve	24 6 2
21-8020	Spacer - Pinion Bearing	18 25 1	25-2680	Asm. - Gerotor	24 38 1
21-8090	Adjustment Shim .003	18 38 A/R	25-3180	Kit - Check Valve	24 11 2
21-8100	Adjustment Shim .005	18 37 A/R	25-3190	Charge Pump	24 40 1
21-8110	Adjustment Shim .010	18 36 A/R	25-3210	Seal - Lip	24 24 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No.	No.	Qty.	Part No.	Description	Pg. Ref. No.	No.	Qty.
25-8640	Screw - Machine	30	10	1	42-7230	Bearing Set	36	64	1
26-6740	Relay - Temperature Reset	3	18	1	42-7240	Bearing Set - Crankshaft	36	*	1
26-6750	Gauge - Engine Temp.	3	15	1	42-7250	Bearing Set - Crankshaft	36	*	1
27-1960	Hub - Engine	30	37	1	42-7260	Bearing Set - Crankshaft	36	*	1
27-2360	Switch - Key	3	10	1	42-7270	Asm. - Gauge, Oil Level	38	22	1
27-6590	Spacer - Rubber Coupling	22	22	2	42-7280	Asm. - Oil Pan	34	52	1
27-6600	Spacer - Rubber Coupling	22	20	6	42-7290	Gasket	38	37	1
27-7100	Asm. - Air Cleaner	49	17	1	42-7290	Gasket - Oil Drain Plug (18)	33	50	1
27-7110	Asm. - Element	49	4	1	42-7300	Gasket - Oil Pan	34	53	1
27-7120	Asm. - Nut & Gasket	49	5	1	42-7310	Bearing - Needle	35	3	1
27-7130	Asm. - Clamp	49	7	1	42-7320	Bearing - Needle	35	2	1
27-7140	Skirt - Baffle	49	6	1	42-7340	Gasket - Gear Case	35	5	1
27-7150	Asm. - Cup	49	8	1	42-7390	Seal - Oil	36	82	1
27-7170	Asm. - Band	49	15	2	42-7400	Plug - Taper	35	1	1
27-7180	Asm. - Cap, Air Inlet	49	20	1	42-7420	Cap - Oil Filter	33	18	1
27-7370	Asm. - Brake , PTO	9	25	1	42-7440	Hanger - Engine	33	29	2
27-7490	Pedal - L.H. Brake	11	41	1	42-7460	Guide - Valve	33	27	6
27-7510	Pedal - R.H. Brake	11	42	1	42-7470	Gasket - Cylinder Head	34	63	1
27-7590	Mount - Brake	11	34	1	42-7480	Glow Plug	33	28	3
27-7640	Shaft - Brake Latch	11	36	1	42-7490	Seal - Oil	33	21	2
27-7900	Screw - Adjusting	9	35	1	42-7500	Asm. - Cover, Rocker	33	23	1
27-8550	Pedal - Parking Brake	11	45	1	42-7510	Pipe	33	4	2
27-9270	Mount - Brake Pivot Shaft	11	35	1	42-7520	Gasket - Cover, Rocker	33	24	1
28-0650	Shaft - Flanged Axle	19	1	2	42-7530	Label - Engine No.	33	22	1
28-0670	Seal - Oil	19	8	2	42-7540	Fitting - Water Outlet	33	15	1
28-0680	Drum - Brake	19	13	2	42-7550	Gasket	33	9	2
28-1280	Boot - Cable	1	12	1	42-7650	Asm. - Connecting Rod	36	49	3
28-5220	Wheel - Friction	11	25	1	42-7660	Bearing Set	36	60	3
28-8070	Lanyard	50	43	1	42-7670	Bearing Set	36	*	3
28-9570	Pump Lever	22	51	1	42-7680	Bearing Set	36	*	3
29-6120	Pump Plate	22	3	1	42-7690	Bearing Set	36	*60	3
29-6150	Leaf Spring	22	46	1	42-7700	Gear - Crankshaft	35	10	1
29-6163	Micro Switch	22	2	1	42-7710	Crankshaft	36	59	1
29-6170	Extended Leaf Spring	22	7	1	42-7720	Pulley - Crankshaft	36	83	1
29-8910	Washer	32	12	2	42-7730	Key - Woodruff	39	58	1
31-0390	Disc - Friction	13	31	1	42-7730	Key - Woodruff	36	62	2
33-2570	Asm. - Radiator	5	19	1	42-7740	Nipple - Hose	33	11	1
33-4380	Pump Hub	22	14	1	42-7780	Gear - Camshaft	39	57	1
37-8770	Bolt - Shoulder	30	4	1	42-7790	Asm. - Idler Gear	39	56	1
37-9550	Strap - Fuel Tank	16	7	1	42-7810	Shaft - Injection Pump Cam	39	55	1
37-9650	Trim	1	29	1	42-7820	Bearing - Ball	39	53	1
38-1650	Gauge - Fuel	3	5	1	42-7830	Gear - Injection Pump Cam	39	61	1
38-1660	Ammeter	3	12	1	42-7840	Key - Sunk	39	54	1
38-1670	Clamp - Mounting	3	2	2	42-7850	Retainer - Valve Spring	35	20	6
38-3400	Guard - Rubber	26	5	1	42-7860	Lock - Spring Retainer	35	21	12
38-3400	Guard - Rubber	26	33	1	42-7880	Spring - Valve	35	19	6
38-3400	Guard - Rubber	23	60	1	42-7890	Tappet	35	33	6
38-3400	Guard - Rubber	6	64	1	42-7920	Rod - Push	35	32	6
38-4550	Instrument Cover	1	19	1	42-7930	Spring - Rocker Shaft L.H.	35	41	1
38-4600	Bar - Frame LH	5	26	1	42-7940	Arm - Rocker	35	22	6
38-7820	Bearing	32	5	2	42-7950	Washer - Seat	35	24	2
39-8020	Trim - Instrument Cover	1	22	1	42-7960	Shaft Assembly - Rocker	35	40	1
41-8760	Gasket - Transmission	22	45	1	42-7970	Stay - Rocker	35	23	3
42-6080	Shim	32	30	A/R	42-7980	Screw - Adjusting	35	30	6
42-6080	Shim - Axle	16	30	A/R	42-7990	Ring - Snap	35	43	2
42-7040	Seal - Side	36	65	4	42-8000	Asm. - Pump, Fuel Injection	38	2	1
42-7050	Guide - Oil Level Gauge	38	18	1	42-8010	Shim - 0.2 (.008 in.)	38	15	A/R
42-7060	Seal - Oil	36	55	1	42-8020	Shim - 0.3 (.012 in.)	38	*	A/R
42-7080	Cap - Sealing	35	15	2	42-8030	Shim - 0.4 (.016 in.)	38	*	A/R
42-7080	Cap - Sealing (25)	33	30	3	42-8040	Shim - 0.5 (.020 in.)	38	15	A/R
42-7090	Cap - Sealing	38	17	2	42-8050	Shim - 0.6 (.024 in.)	38	*	A/R
42-7090	Cap - Sealing (45)	33	36	1	42-8060	Shim - 0.7 (.028 in.)	38	*	A/R
42-7100	Bushing - Camshaft	36	79	1	42-8070	Shim - 0.8 (.032 in.)	38	*	A/R
42-7110	Shaft - Idler	35	11	1	42-8080	Shim - 0.9 (.036 in.)	38	*	A/R
42-7120	Case - Oil Seal	36	57	1	42-8090	Shim - 1.0 (.039 in.)	38	*	A/R
42-7130	Gasket - Oil Seal	36	58	1	42-8100	Collar - Union	38	4	1
42-7150	Gasket - Front Plate	35	9	1	42-8120	Gasket - Nozzle Holder	33	35	3
42-7160	Pin - Dowel	38	21	1	42-8130	Asm. - Pipe, Fuel Injection	38	7	1
42-7170	Plug - Expansion	39	51	1	42-8140	Asm. - Pipe, Fuel Injection	38	11	1
42-7180	Bushing - Knock	39	50	2	42-8150	Asm. - Pipe, Fuel Injection	38	12	1
42-7190	Bushing - Knock	39	72	2	42-8180	Asm. - Pipe, Fuel Return	38	33	1
42-7200	Bushing - Knock	39	52	1	42-8190	Joint	38	35	2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
42-8220	Holder - Delivery Valve	43 16 3	42-8910	Asm. - Rotor, Oil Pump	39 45 1
42-8220	Holder - Delivery Valve	45 16 3	42-8920	Cover - Oil Pump	39 44 1
42-8230	Spring - Delivery Valve	43 14 3	42-8930	Spring - Relief	38 39 1
42-8230	Spring - Delivery Valve	45 14 3	42-8940	O-Ring	39 46 1
42-8240	Gasket - Delivery Valve	43 13 3	42-8950	Gasket - Oil Pump Body	39 49 1
42-8240	Gasket - Delivery Valve	45 13 3	42-8960	Driven Unit - Speedometer	37 * 1
42-8250	Delivery Valve Sub Asm.	42 12 3	42-8970	Pin - Spring	35 35 1
42-8250	Delivery Valve Sub Asm.	45 12 3	42-8980	Sleeve - Gear	35 36 1
42-8260	Element Sub Asm.	42 11 3	42-8990	O-Ring	35 37 1
42-8260	Element Sub Asm.	45 11 3	42-9010	O-Ring	35 34 1
42-8270	Sleeve - Plunger Control	43 22 3	42-9020	Plate - Locking	36 63 1
42-8270	Sleeve - Plunger Control	45 22 3	42-9030	Asm. - Filter, Oil	38 42 1
42-8280	Seat - Spring, Upper	43 23 3	42-9070	Pulley - Water Pump	34 56 1
42-8280	Seat - Spring, Upper	45 23 3	42-9080	Asm. - Water Pump	34 60 1
42-8290	Spring - Pump Plunger	43 24 3	42-9090	Gasket - Water Pump	34 61 1
42-8290	Spring - Pump Plunger	45 24 3	42-9100	Belt - Fan	30 21 1
42-8300	Tappet Sub Asm.	43 27 3	42-9110	Gasket	33 41 1
42-8300	Tappet Sub Asm.	45 27 3	42-9120	Asm. - Intake Manifold	33 6 1
42-8310	Asm. - Rack, Control	43 21 1	42-9140	Gasket - Intake Manifold	33 7 1
42-8310	Asm. - Rack, Control	45 21 1	42-9150	Inlet - Pipe	33 3 1
42-8320	Seat - Spring, Lower	43 25 3	42-9160	Gasket - Inlet Pipe	33 5 1
42-8320	Seat - Spring, Lower	45 25 3	42-9170	Gasket - Exhaust Manifold	33 39 1
42-8330	O-Ring	43 15 3	42-9180	Wire - Glow Plug Lead	33 26 2
42-8330	O-Ring	45 15 3	42-9190	Lamp - Glow	3 14 1
42-8340	Pin - Tappet Guide	43 19 3	42-9200	Complete Gasket Set	34 * 1
42-8340	Pin - Tappet Guide	45 19 3	42-9210	Bolt - Bearing Cap	36 67 8
42-8350	Plate	43 20 1	42-9220	Screw - Cap Hex. Hd.	36 56 6
42-8350	Plate	45 20 1	42-9230	Screw - Cap (8 x 16)	33 51 15
42-8360	Asm. - Plate, Adjusting	43 18 2	42-9230	Screw - HH	38 32 2
42-8360	Asm. - Plate, Adjusting	45 18 2	42-9230	Screw - HH	32 34 1
42-8370	Screw - Air Breather	42 8 1	42-9230	Screw - HH	36 81 3
42-8370	Screw - Air Breather	44 8 1	42-9240	Screw - Cap (12 x 28)	33 44 3
42-8380	Screw - Hollow	42 10 1	42-9250	Screw - HH	35 14 4
42-8380	Screw - Hollow	45 10 1	42-9260	Plug - Oil Drain	33 49 1
42-8440	Shim - Plate	43 * A/R	42-9300	Screw - Cap (10 x 20)	34 64 2
42-8440	Shim - Plate	45 * A/R	42-9310	Screw - HH	33 1 4
42-8450	Shim - Plate	43 * A/R	42-9320	Bolt - Cylinder Head	33 31 8
42-8460	Spring Return	42 6 1	42-9350	Screw - HH	35 27 2
42-8460	Spring Return	44 6 1	42-9360	Bolt	35 26 2
42-8650	Nut - Retaining	46 8 3	42-9370	Screw - HH	35 42 1
42-8670	Flange	46 2 3	42-9390	Bolt (8 x 32)	33 33 6
42-8680	Asm. - Nozzle	46 7 3	42-9420	Bolt - High Speed Set	40 3 1
42-8690	Metal - Sealing	40 1 1	42-9430	Screw - HH	40 14 3
42-8700	Wire	40 2 1	42-9430	Screw - HH	41 14 3
42-8720	Asm. - Sliding Shaft	40 13 1	42-9440	Screw - HH	35 39 1
42-8720	Asm. - Sliding Shaft	41 13 1	42-9450	Asm. - Bolt/Washer	40 21 1
42-8730	Asm. - Governor Lever	40 20 1	42-9450	Asm. - Bolt/Washer	41 21 1
42-8730	Asm. - Governor Lever	41 20 1	42-9480	Screw - HH	39 43 3
42-8740	Spring - Tie Rod	40 11 1	42-9490	Screw - Cap (6 x 12)	34 58 4
42-8740	Spring - Tie Rod	41 11 1	42-9500	Screw - Cap (8 x 45)	34 55 3
42-8750	Tie Rod	40 12 1	42-9500	Screw - HH	37 87 8
42-8750	Tie Rod	41 12 1	42-9510	Screw - Cap (8 x 60)	34 59 1
42-8760	Shaft - Governor	40 22 1	42-9510	Screw - HH	30 46 2
42-8760	Shaft - Governor	41 22 1	42-9520	Screw - Cap (8 x 30)	33 43 5
42-8770	Lever - Governor Spring	40 8 2	42-9530	Screw - Cap (8 x 40)	34 66 1
42-8770	Lever - Governor Spring	41 8 2	42-9570	Stud (8 x 25)	33 38 5
42-8780	Asm. - Speed Control Lever	40 6 1	42-9580	Nut	30 19 2
42-8780	Asm. - Speed Control Lever	41 6 1	42-9580	Nut	32 20 4
42-8790	Asm. - Cover	40 29 1	42-9580	Nut	39 64 1
42-8790	Asm. - Cover	41 29 1	42-9580	Nut (8)	33 19 3
42-8800	Gasket Cover	40 30 1	42-9580	Nut - Jam	40 10 2
42-8800	Gasket Cover	41 30 1	42-9580	Nut - Jam	41 10 2
42-8810	Pin - Grooved	40 5 2	42-9590	Nut - Connecting Rod	36 61 6
42-8810	Pin - Grooved	41 5 2	42-9600	Washer - Lock	32 25 4
42-8810	Pin - Grooved	40 32 1	42-9600	Washer - Lock	30 40 3
42-8810	Pin - Grooved	41 32 1	42-9600	Washer - Lock	34 65 2
42-8820	Spring - Governor	40 23 1	42-9600	Washer - Lock	34 67 2
42-8820	Spring - Governor	41 23 1	42-9600	Washer - Spring	35 25 3
42-8830	O-Ring	40 7 2	42-9620	Nut - Jam	35 29 6
42-8830	O-Ring	41 7 2	42-9640	Nut - Jam	40 36 1
42-8850	Asm. - Oil Pump	39 * 1	42-9640	Nut - Jam	41 36 1
42-8900	Body - Oil Pump	39 48 1	42-9660	Washer - Flat	38 23 6

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
42-9660	Washer – Plain (8)	34 54 4	43-2830	Nut	40 4 1
42-9680	Washer	46 3 A/R	43-2910	Plate – Ungleich Set	42 3 A/R
42-9690	Washer	46 * A/R	43-2920	Plate – Ungleich Set	42 * A/R
42-9700	Washer	46 * A/R	43-2930	Plate – Ungleich Set	42 * A/R
42-9710	Washer	46 * A/R	43-2940	Plate – Ungleich Set	42 * A/R
42-9720	Washer	46 * A/R	43-2950	Plate – Ungleich Set	42 * A/R
42-9730	Washer	46 *3 A/R	43-3000	Plate – Smoke Set	44 * A/R
42-9740	Washer	46 * A/R	43-3010	Plate – Smoke Set	42 * A/R
42-9750	Washer	46 * A/R	43-3010	Plate – Smoke Set	44 * A/R
42-9770	Washer	42 9 1	43-3020	Plate – Smoke Set	42 * A/R
42-9770	Washer	45 9 1	43-3020	Plate – Smoke Set	44 7 A/R
42-9790	Washer – Head Bolt	33 32 8	43-3030	Plate – Smoke Set	42 7 A/R
42-9800	Washer	33 20 2	43-3040	Plate – Smoke Set	42 * A/R
42-9810	Washer – Flat	37 86 1	43-3050	Plate – Smoke Set	42 * A/R
42-9820	Washer	39 73 1	43-3060	Plate – Smoke Set	42 * A/R
42-9830	Washer – Seal	38 3 2	43-3070	Plate – Smoke Set	42 * A/R
42-9850	Washer – Lock	33 2 24	43-3110	Spring – Ungleich Set	42 2 1
42-9850	Washer – Lock	35 7 5	43-3110	Spring – Ungleich Set	44 2 1
42-9850	Washer – Lock	40 9 2	43-3120	Washer – Seal	40 27 1
42-9850	Washer – Lock	41 9 2	43-3120	Washer – Seal	41 27 1
42-9850	Washer – Lock	38 31 7	43-3130	Hose – Water	33 13 1
42-9860	Washer – Spring	36 85 1	43-3140	Clamp – Hose	33 12 2
43-0080	Nut – Set	47 10 1	43-3150	Asm. – Bolt/Washer	43 17 2
43-0090	Screw – Cap (10 x 25)	33 48 2	43-3150	Asm. – Bolt/Washer	45 17 2
43-0110	Screw – HH	38 14 3	43-3160	Screw – Adjusting	40 33 1
43-0110	Screw – HH	38 14 4	43-3160	Screw – Adjusting	41 33 1
43-0120	Screw – Set	47 3 1	43-3190	Screw – HH	30 41 3
43-0190	Spring Set	48 4 1	43-3200	Screw – HH	32 24 4
43-0370	Shim	39 65 AIR	43-3210	Screw – HH	30 28 4
43-0380	Spacer	39 66 1	43-3320	Foam – Radiator	5 28 2
43-0390	Alternator	39 67 1	43-3330	Shroud – Radiator	5 17 1
43-0400	Brace – Alternator	39 71 1	43-3340	Plate – Sealing, Grille	5 42 1
43-0410	Asm. – Regulator	3 25 1	43-3350	Hose – Upper Radiator	5 13 1
43-0420	Asm. – Pulley	47 2 1	43-3510	Pulley – Engine	30 27 1
43-0430	Asm. – Bracket, Front	47 4 1	43-3530	Pulley – Flywheel	32 26 1
43-0470	Stator	47 9 1	43-3690	Fan – Shaft	32 2 1
43-0480	Asm. – Rear Bracket	47 14 1	43-3700	Hub – Fan	32 4 1
43-0490	Asm. – Holder, Brush	47 11 1	43-3720	Collar – Bearing	30 32 1
43-0500	Brush	47 12 2	43-3730	Bracket – Throttle Control	31 52 1
43-0520	Asm. – Rectifier	47 13 1	43-3760	Lever – Throttle	31 54 1
43-1440	Engine Assembly	30 13 1	43-3770	Link – Throttle	30 1 1
43-1710	Asm. – Valve	26 13 1	43-3780	Swivel – Throttle Control	30 9 1
43-1730	Body	29 7 1	43-3790	Bracket – Belt Guide	30 48 1
43-1770	Plate – Rear	33 46 1	43-3820	Spacer	3 34 1
43-1780	Thermostat	33 14 1	43-3850	Muffler	32 17 1
43-1790	Fitting – Thermostat	33 10 1	43-3860	Shaft – Pivot, PTO	9 9 1
43-1800	Flywheel	36 53 1	43-3870	Support – Muffler	32 8 1
43-1810	Gear – Ring	36 54 1	43-3880	Pulley	32 10 1
43-1870	Manifold – Exhaust	33 42 1	43-3900	Guard – Fan Belt	8 5 1
43-1880	Asm. – Control Unit	3 27 1	43-3970	Panel – Instrument	3 16 1
43-1900	Screw – HH	39 68 1	43-3990	Throttle Control	3 23 1
43-1910	Fan – Cooling	32 1 1	43-4000	Circuit Breaker	3 21 1
43-1940	Adapter – Temp. Gauge	30 11 1	43-4010	Asm. – Wire	4 4 2
43-2550	Filter	7 15 1	43-4040	Asm. – Wire	4 3 1
43-2560	Gasket	7 16 1	43-4150	Fuel Tank	16 4 1
43-2570	Gasket	7 14 1	43-4160	Fitting – Return & Vent	16 13 1
43-2580	Magnet	7 17 1	43-4190	Asm. – Fitting	16 28 1
43-2600	Capscrew	38 10 2	43-4230	Hose	31 56 1
43-2710	O-Ring	38 19 1	43-4230	Hose Return	16 15 1
43-2720	Mold	47 16 1	43-4300	Trim – Rear Frame	1 32 2
43-2730	Solenoid – Tubular	40 17 1	43-5500	Pivot – PTO	9 31 1
43-2730	Solenoid – Tubular	41 17 1	43-5540	Shaft – PTO	9 43 1
43-2740	Gasket	40 19 1	43-5550	Shaft – Actuator, PTO	9 32 1
43-2740	Gasket	41 19 1	43-5570	Arm – Actuator, PTO	9 38 1
43-2750	Nut	40 18 1	43-5630	Yoke – PTO	9 51 1
43-2750	Nut	41 18 1	43-5690	Hose – Vent, Fuel Tank	16 16 1
43-2770	Lever – Stop	40 35 1	43-5910	V-Belt	32 11 1
43-2770	Lever – Stop	41 35 1	43-5920	Washer – Lock	47 17 1
43-2800	Screw – HH	40 24 1	43-5920	Washer – Lock	39 63 1
43-2800	Screw – HH	41 24 1	43-5930	Washer – Lock	38 9 1
43-2820	Sealing Cap	40 25 1	43-5930	Washer – Lock	40 15 4
43-2820	Sealing Cap	41 25 1	43-5930	Washer – Lock	41 15 4

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
43-5930	Washer - Lock	35 28 2	46-7630	Asm. - Bracket, Front	48 2 1
43-5930	Washer - Lock	34 57 4	46-7640	Asm. - Lever	48 3 1
43-5930	Washer - Lock	31 64 2	46-7650	Asm. - Bracket, Center	48 5 1
43-5950	Washer - Lock	30 26 4	46-7660	Asm. - Switch	48 6 1
43-5960	Nut - Special	40 26 1	46-7670	Armature Set	48 8 1
43-5960	Nut - Special	41 26 1	46-7680	Bearing - Front	48 7 1
43-5970	Nut	39 62 1	46-7710	Asm. - Shaft, Clutch	48 * 1
43-6240	Shim - Plate	43 * A/R	46-7720	Pinion Set	48 19 1
43-6240	Shim - Plate	45 * A/R	46-7740	Gear Set	48 * 1
43-6470	Nut	36 84 1	46-7750	Asm. - Shaft, Pinion	48 18 1
43-6550	Ring - Retaining	17 21 1	46-7760	Gear	48 17 1
43-6710	Adjustment Shim .003	17 15 A/R	46-7780	Asm. - Yoke	48 11 1
43-6711	Adjustment Shim .005	17 16 A/R	46-8050	Packing	48 10 1
43-6712	Adjustment Shim .010	17 17 A/R	46-8091	Screw - Flange	5 49 2
43-6713	Adjustment Shim .030	17 18 A/R	46-8400	Bearing - Needle	25 53 2
43-6750	Roller Bearing Cup	17 10 1	46-8410	Shaft - Motor	25 58 1
43-6760	Roller Bearing Cone	17 9 1	46-8810	Stop - Leaf Spring	23 56 1
43-6810	Torque - Spider	19 6 2	46-8840	Spring - Lift Arm	50 14 1
43-6840	Lower Housing	18 34 1	47-7420	Hose	31 55 1
43-7020	Hose - Lower Radiator	5 21 1	48-1800	Kit - Cylinder Block	24 5 2
43-8600	Spring - Compression	8 25 1	48-1980	Gasket	36 78 1
43-8600	Spring - Compression	10 66 1	48-1990	Nut - Jam	36 77 1
43-8610	Guide - Spring & Ball Seat	9 5 1	48-2010	Asm. - Screen, Oil	36 76 1
43-8610	Guide - Spring & Ball Seat	8 24 1	48-2020	Cylinder Block Sub Asm.	34 62 1
43-8620	Guide - Switch Pin	8 27 1	48-7630	Screw - HH	31 63 2
43-8620	Guide - Switch Pin	10 68 1	51-7500	Spring - Pressure	46 4 3
43-8860	Plunger - Switch	8 26 1	51-7520	Piece - Distance	46 6 3
43-8860	Plunger - Switch	10 67 1	51-7740	Stopper	48 20 1
43-8870	Boot - Switch	8 30 1	51-7780	Cover Set	48 16 1
43-8870	Boot - Switch	10 71 1	51-7810	Asm. - Brush Holder	48 13 1
43-9071	Asm. - Switch	10 * 1	51-7820	Spring - Brush	48 12 4
43-9071	Asm. - Switch	8 * 1	51-7830	Bracket - Rear	48 14 1
44-2210	Light - Warning	3 8 1	51-7850	Nut Set	47 1 1
44-2220	Wire Lead	3 6 1	51-7890	Screw - Set	47 19 1
44-2230	Coupling - Rubber	22 17 2	51-7910	Asm. - Rotor	47 7 1
44-8070	Asm. - Nozzle & Holder	33 34 3	51-7920	Bearing - Rear	47 8 1
44-8080	Body	46 1 3	53-8150	Asm. - Fuel Pump, Electric	7 13 1
44-8090	Asm. - Lever, Stop	40 31 1	53-9480	Washer	32 28 2
44-8090	Asm. - Lever, Stop	41 31 1	53-9480	Washer	30 39 2
44-8100	Spring Return	40 34 1	53-9660	V-Belt Torque Team	9 12 1
44-8100	Spring Return	41 34 1	53-9680	Engine Mount - Rubber	30 23 2
44-8950	Tube - Air Cleaner	49 18 1	53-9680	Mount - Engine, Rubber	32 29 2
46-2210	Shim - Front Pinion Bearing	17 22 A/R	53-9710	Mount - Engine	30 22 2
46-2211	Shim - Front Pinion Bearing	17 * A/R	53-9750	Mount - Fan	32 6 1
46-2212	Shim - Front Pinion Bearing	17 *22 A/R	54-7890	Housing - Pump	24 22 1
46-2213	Shim - Front Pinion Bearing	17 * A/R	54-8650	Screw - IHF	39 70 1
46-2214	Shim - Front Pinion Bearing	17 * A/R	54-8660	Washer	39 69 1
46-2215	Shim - Front Pinion Bearing	17 * A/R	54-8670	Bolt - Flywheel	36 52 5
46-2216	Shim - Front Pinion Bearing	17 * A/R	54-8680	Shim - Plate	43 * A/R
46-2220	Shim - Front Pinion Bearing	17 * A/R	54-8680	Shim - Plate	45 * A/R
46-2221	Shim - Front Pinion Bearing	17 * A/R	54-8690	Shim - Plate	43 * A/R
46-2222	Shim - Front Pinion Bearing	17 * A/R	54-8690	Shim - Plate	45 * A/R
46-2223	Shim - Front Pinion Bearing	17 * A/R	54-8700	Plate - Smoke Set	42 7 A/R
46-2224	Shim - Front Pinion Bearing	17 * A/R	54-8700	Plate - Smoke Set	44 7 A/R
46-2225	Shim - Front Pinion Bearing	17 * A/R	54-8710	Plate - Smoke Set	42 * A/R
46-2226	Shim - Front Pinion Bearing	17 * A/R	54-8710	Plate - Smoke Set	44 * A/R
46-2410	Shim - Front Pinion Bearing	17 * A/R	54-8730	Plate - Smoke Set	42 * A/R
46-2411	Shim - Front Pinion Bearing	18 22 A/R	54-8740	Plate - Smoke Set	42 * A/R
46-2412	Shim - Front Pinion Bearing	18 * A/R	54-8750	Plate - Smoke Set	42 * A/R
46-2413	Shim - Front Pinion Bearing	18 * A/R	54-8760	Plate - Smoke Set	42 * A/R
46-2414	Shim - Front Pinion Bearing	18 * A/R	54-8770	Plate - Smoke Set	42 * A/R
46-2415	Shim - Front Pinion Bearing	18 * A/R	54-8780	E-Ring	42 5 1
46-2416	Shim - Front Pinion Bearing	18 * A/R	54-8780	E-Ring	44 5 1
46-2420	Shim - Front Pinion Bearing	18 * A/R	54-9290	Bracket	22 29 2
46-2421	Shim - Front Pinion Bearing	18 * A/R	54-9300	Cover	22 28 1
46-2422	Shim - Front Pinion Bearing	18 * A/R	55-3572	Fuel Cap	16 18 1
46-2423	Shim - Front Pinion Bearing	18 * A/R	56-0220	Pin - Dowel	35 13 2
46-2424	Shim - Front Pinion Bearing	18 * A/R	56-0750	Clamp	38 8 2
46-2425	Shim - Front Pinion Bearing	18 * A/R	56-0760	Clamp	38 13 2
46-2426	Shim - Front Plnion Bearing	18 * A/R	56-0900	Plate - Smoke Set	44 * A/R
46-6390	Coupling - Drive	22 18 1	56-0910	Plate - Smoke Set	44 * A/R
46-7610	Asm. - Starter	33 47 1	56-0920	Plate - Smoke Set	44 * A/R

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
56-0930	Plate - Smoke Set	44 * A/R	67-5460	Head	28 5 1
56-0960	Plate - Smoke Set	42 * A/R	67-5470	Ring - Retaining	28 4 1
56-0990	Plate - Smoke Set	44 * A/R	67-5480	Shaft	28 2 1
56-1000	Plate - Smoke Set	44 * A/R	67-5500	Kit - Repair	28 3 1
56-1010	Plate - Smoke Set	44 * A/R	67-8020	Pump Shaft	24 20 1
56-1310	Asm. - Oil Pressure Switch	38 41 1	67-8050	Bearing - Needle	24 35 1
56-2120	Screw - Hex. Hd.	39 74 1	67-8190	Bracket - Engine Support	8 12 2
56-2460	Washer	20 45 A/R	67-8470	Strip - Retainer	5 30 1
56-7980	Sleeve - Protective	16 24 1	67-8570	Strip - Sealing	5 41 1
60-9760	Nut	27 12 1	67-8690	Support - Column	13 7 1
60-9760	Nut - Hex	28 7 1	67-8810	Hinge L.H.	8 10 1
60-9770	Piston	27 11 1	67-8820	Hinge, R.H.	8 4 1
60-9780	Head	27 5 1	67-8840	Pin - Hinge	5 7 1
61-4960	Kit - Seal Repair	27 * 1	67-8870	Support - Radiator	5 46 1
61-4980	Shaft - w/Clevis	27 1 1	67-9000	Screen - Rear	5 3 1
61-4990	Ring - Retaining	27 4 1	67-9030	Grille	5 47 1
62-3730	Screw - HH w/Washer	35 8 2	67-9080	Housing - Motor	24 4 1
62-3740	Plate - Front	35 6 1	67-9090	Plug	24 42 1
62-4250	Cylinder - Hydraulic	26 21 1	67-9100	Gasket	24 10 1
62-6840	Sender - Fuel Level	16 12 1	67-9800	Bumper	50 37 1
62-6940	Cap	40 37 1	68-5140	Cap - Steering Wheel	13 46 1
62-6940	Cap	41 37 1	68-5370	Decal - Toro	13 1 1
62-7650	Gasket	16 8 1	68-8610	Fender - Extension	2 43 1
63-1400	Guide - Belt	31 58 1	68-8660	Elbow	22 31 1
63-7590	Relay	3 42 1	68-8990	Head - Filter	22 33 1
63-8280	Asm. - Head	7 5 1	68-9110	Shim	32 37 A/R
63-8290	Vent	7 3 1	68-9111	Shim	32 * A/R
63-8300	Element - Fuel Filter	7 10 1	68-9112	Shim	32 * A/R
63-8310	Drain Valve	7 11 1	68-9160	Bracket	5 35 1
63-8360	Key	3 11 1	68-9650	Hose - Axle	22 37 1
63-8960	Asm. - Hose, Valve/Cooler	5 38 1	68-9710	Hose - Steering Cylinder	16 43 2
63-8970	Hose - Trans. to Steering	13 14 1	68-9720	Hose - Cylinder to Steering	13 19 1
63-8980	Hose - Aux. to Valve	13 22 1	68-9730	Hose - Steering to Cylinder	13 18 1
63-8990	Hose	26 15 1	68-9760	Base - Fuel Tank	16 2 1
63-8990	Hose	13 23 1	70-1180	Cable - Battery Positive	1 13 1
63-9010	Asm. - Hose, Cooler/Pump	5 27 1	70-1190	Cable - Ground	3 43 1
63-9230	Battery Type MF24-78, Dry	1 9 1	70-1190	Ground Cable	4 5 1
63-9260	Manifold - Valve	26 17 1	70-1380	Sleeve - Protective	13 17 1
63-9640	Hose Fuel	16 27 1	70-1390	Sleeve - Protective	13 15 1
63-9650	Hose	7 20 1	70-2200	Decal - Toro	1 2 1
63-9720	Hose	7 7 1	70-2620	Elbow - 90	22 38 1
65-5100	Handle - Hood	5 12 1	70-2810	Spring - Brush	47 15 1
66-1250	Cylinder - Hydraulic	26 * 1	70-3320	Bearing - Front	47 5 1
66-1930	Nut - Lock	21 6 1	70-3330	Bearing - Rear	48 9 1
66-1940	Piston	21 5 1	70-3970	Shim - Plate	43 26 A/R
66-2990	Cap - Spindle	20 54 2	70-3970	Shim - Plate	45 26 A/R
66-3200	Tread - Foot, LH	2 58 1	70-4070	Shim - Plate	43 * A/R
66-3240	Cap - Radiator	6 53 1	70-4070	Shim - Plate	45 * A/R
66-5310	Pulley - Idler	32 18 1	70-4080	Shim - Plate	43 26 A/R
66-5320	Spacer	32 19 1	70-4080	Shim - Plate	45 26 A/R
66-6370	Lift Arm	50 1 1	70-4090	Shim - Plate	43 * A/R
66-7030	Screw - HH w/Washer	32 32 2	70-4090	Shim - Plate	45 * A/R
66-7150	Push Arm R.H.	50 9 1	70-4100	Shim - Plate	43 * A/R
66-8111	Trim - Hood Cutout	6 54 1	70-4100	Shim - Plate	45 * A/R
66-9760	Nut - Hex.	13 2 1	70-4240	E-Ring	42 1 1
66-9780	Bushing	14 29 1	70-4240	E-Ring	44 1 1
66-9970	Spring Kit	14 * 1	71-4540	Washer - Thrust	20 8 A/R
66-9980	Seal Kit	14 * 1	72-3690	Fender	2 41 2
66-9990	Needle Roller Kit	14 * 1	72-3750	Bearing - Ball	24 2 1
67-1750	Bushing	20 4 6	72-4200	Ring - Set - Piston Std.	35 44 3
67-2390	Plug - Taper	35 12 2	72-4210	Ring Set - Piston	35 45 3
67-2390	Plug - Taper	38 36 1	72-4220	Ring Set - Piston	35 46 3
67-2500	Plunger - Relief	38 40 1	72-4230	Ring Set - Piston	35 47 3
67-2520	Plug	38 38 1	72-4240	Piston & Piston Pin Std.	36 48 3
67-2560	Screw - HH	40 28 3	72-4250	Piston & Piston Pin	36 * 3
67-2560	Screw - HH	41 28 3	72-4260	Piston & Piston Pin	36 * 3
67-2570	Plug - Taper	38 25 1	72-4270	Piston & Piston Pin	36 * 3
67-2570	Plug - Taper 1/8	33 37 1	72-4280	Camshaft	39 59 1
67-2860	Bolt - Connecting Rod	36 50 6	72-4290	Asm. - Head, Cylinder	33 8 1
67-4040	Asm. - Weight, Governor	40 16 1	72-4320	Switch - Ball	9 3 1
67-4040	Asm. - Weight, Governor	41 16 1	72-4320	Switch - Ball	8 20 1
67-5450	Piston	28 6 1			

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
72-6950	Retainer - Oil Level Guide	38 20 1	92-7801	Shield - Battery Cover	2 53 1
72-9420	Asm. - Vent Tube	18 39 1	92-7803	Support - Axle	20 6 1
74-0720	Tube - Manual	8 2 1	92-7807	Pin - Rear Axle	20 3 1
74-9510	Washer	25 60 4	92-7816	Axle - Rear	20 35 1
75-0560	Asm. - Steering Wheel	13 3 1	92-7821	Steering Pivot	20 38 1
75-9900	Engine Support - Front	30 29 1	92-7828	Cylinder - Hydraulic	20 16 1
76-1900	O-Ring	24 18 2	92-7833	Hose - Hydraulic	26 19 1
77-3120	Bracket - Mount, Column	13 9 1	92-7834	Hose	26 22 1
77-3140	Mount - Engine	32 22 1	92-7845	Spacer - Hardened	20 55 1
77-3170	Stop - Hood Cable	5 22 2	92-8775	Kit - Gasket, Liquid	19 * 2
77-3180	Spacer	49 22 4	92-8776	Plug	25 61 4
77-5141	Decal - Hood LH	5 50 1	92-8777	O-Ring	25 62 4
77-5151	Decal - Hood RH	5 * 1	92-8918	Center Section	25 55 1
77-5160	Foam - Side	5 2 1	92-8947	Transmission - Inline	22 42 1
77-5170	Foam - Top	5 1 1	93-0307	Retainer - Nut, Lock	20 56 2
77-5250	Spacer - Hood Cable	5 23 4	93-0309	Washer - Tab	20 27 2
79-9890	Washer - Shim	10 75 A/R	93-1351	Valve - Intake	35 16 3
80-2880	Bracket - Steering, Tilt	13 40 1	93-1352	Valve - Exhaust	35 17 3
80-2930	Washer	13 39 1	93-1353	Lever - Steering Tilt	13 34 1
80-2940	Plate - Pivot	13 29 1	93-1369	Asm. - Head, Cylinder	33 * 1
80-2960	Spacer - Tower	13 10 2	93-3180	Bolt - Cylinder Head	33 25 3
80-2980	Boss - Pin	13 32 1	93-3181	Pin - Pressure	46 5 3
80-3330	Gasket	49 12 1	93-3183	Tool Box	2 36 1
82-2590	Plug - Thrust	37 88 1	93-3184	Cover	2 54 1
82-8650	Clamp - Half	13 37 1	93-3188	Decal - Groundsmaster	5 4 2
82-8660	Cover - Tower	13 5 1	93-3198	Asm. - Spindle L.H.	20 33 1
82-8670	Rod - Brake Latch	11 10 1	93-3199	Asm. - Spindle R.H.	20 1 1
82-8760	Elbow	13 12 1	93-3654	Screw	47 18 1
82-8770	Elbow	13 21 1	93-3655	Screw - Set	48 1 1
82-8940	Decal - Steering, Tilt	13 44 1	93-3656	Gasket - Pump, Water	34 68 1
82-8950	Foam - Flange Hood	5 45 2	93-3657	Pin - Dowel	39 47 2
82-9010	Disc - Friction	13 38 1	93-3685	Pipe - Air Breather	33 16 1
84-8500	Lever - PTO	9 2 1	93-3687	Bolt Set	48 15 1
84-8520	Bracket - PTO Switch	9 6 1	93-3688	Cap - Shipping	35 31 1
84-8600	Asm. - Shoe & Lining	19 9 1	93-3689	Case - Gear	35 4 1
86-7040	Rod - Seat Prop	8 32 1	93-3769	Pin - Clevis	9 26 1
86-7050	Bracket - Switch Actuator	10 73 1	93-4132	O-Ring	25 54 2
86-7220	Gear - Transmission Output	22 44 1	93-4133	Seal - Lip	24 36 1
86-7230	Spur-Gear	17 14 1	93-6668	Decal - Charging	2 62 1
86-8100	Asm. - Ball Joint	50 33 2	93-6680	Decal - Diesel Fuel	1 31 1
86-9410	Bracket - Seat Support	6 59 1	93-6696	Decal - Warning	50 12 3
86-9580	Upper Housing	18 26 1	93-7040	Support Reinforcement	50 18 1
86-9600	Asm. - Differential	16 35 1	93-7042	Cover - Flywheel Guard	20 51 1
88-0070	Floor Plate	2 48 1	93-7252	Decal - CE	2 63 1
88-0470	Tube - Pedal, Spacer	11 49 1	93-7272	Decal - Warning	5 15 3
88-1640	Pin - Traction Pedal	11 20 1	93-7275	Decal - Starting Fluid	49 19 1
88-1650	Shaft - Traction Pedal	11 22 1	93-7276	Decal - Danger	2 61 1
88-1670	Bracket - Pivot	11 23 1	93-7410	Panel - Footrest	2 57 1
88-1680	Bracket - Footrest	11 48 1	93-7416	Insert - Shield, Dust	19 20 2
88-1710	Footrest	12 50 1	93-7626	Fender - RH	2 59 1
88-1720	Pad - Footrest	12 51 1	93-7644	Pin - Hitch	50 42 1
88-1790	Asm. - Wire Harness	4 2 1	93-7650	Lever - Locking	50 41 1
88-3370	Spacer - Sealing Plate	6 62 1	93-7806	Decal - Power Take off	1 18 1
88-3390	Plate - Sealing	5 37 1	93-7813	Decal - Instrument Panel	3 46 1
92-1773	Screw - HH	17 11 4	93-7821	Decal - Radiator Coolant	5 48 1
92-1774	Oil Seal	19 2 2	93-7822	Decal - Refueling	1 33 1
92-1961	Seal - Valve Stem	35 18 6	93-7823	Decal - Oil	16 42 1
92-4058	Arm - PTO	9 30 1	93-7830	Decal - Torque	2 42 2
92-4060	Fork - PTO	9 24 1	93-7831	Decal - Parking Brake	11 12 1
92-4848	Asm. - Gear & Pinion	18 * 1	93-7832	Decal - Caution	1 3 1
92-4903	Asm. - Upper Hsg. 2WD	18 * 1	93-7836	Decal - Traction Pedal	1 1 1
92-5723	Bushing - PTO Fork	9 23 2	93-7840	Decal - Radiator Cap	6 65 1
92-5727	Screw - HH	9 22 2	93-8472	Guard - Flywheel	8 34 1
92-5938	Ball Joint	20 14 2	93-8738	Guard - Flywheel	20 57 1
92-6588	Gland	21 3 1	93-8742	Pad - Brake	11 1 1
92-6593	Seal Kit	21 2 1	93-8743	Pad - Turn	11 2 2
92-7308	Valve - Power Steering	13 25 1	93-9729	Guard - Fan	6 67 1
92-7310	Bolt - Special	14 36 4	94-2689	Frame	2 40 1
92-7314	Asm. - Column	14 * 1	94-3304	Pedal - Traction	11 18 1
92-7315	Seal	14 28 1	94-3307	Pad - Front Pedal	11 47 1
92-7316	Nut - Push On	14 38 4	94-3308	Pad - Pedal Rear	11 19 1
92-7317	Foam	14 39 1	94-6934	Screw - Socket Head	19 21 8

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No.	No.	Qty.	Part No.	Description	Pg. Ref. No.	No.	Qty.
94-6935	Nut - Lock	19	18	8	2412-4	Clamp	1	27	3
94-6936	Washer	19	23	8	2412-6	Clamp	16	17	2
94-9160	Engine Assembly	30	13	1	2412-31	Clamp - Bodine	30	6	1
95-1566	Plate - Ungleich Set	44	3	A/R	2412-34	Clamp - Hose	22	36	2
95-1567	Plate - Ungleich Set	44	*	A/R	2412-36	Clamp	13	24	2
95-1568	Plate - Ungleich Set	44	*	A/R	2412-36	Clamp - Hose	26	16	1
95-1569	Plate - Ungleich Set	44	*	A/R	2412-39	Clamp	5	40	1
95-1570	Plate - Ungleich Set	44	*	A/R	2412-42	Hose Clamp	49	11	1
95-1571	Plate - Ungleich Set	44	*	A/R	2412-61	Clip - Tinnerman	1	25	2
95-1572	Plate - Ungleich Set	44	*	A/R	2412-74	Clamp	1	35	1
95-1573	Plate - Smoke Set	44	*	A/R	2412-79	Clamp	16	14	1
95-1574	Plate - Smoke Set	44	*	A/R	2412-79	Clamp	30	15	1
95-1576	Plate - Smoke Set	44	*	A/R	2412-79	Clamp - Hose	38	34	8
95-1821	Spring - Compression	11	9	1	2412-108	Clamp - Hose	26	28	2
95-1836	Hose - Air Cleaner	49	10	1	2412-108	Clamp - Worm Drive	30	14	1
95-2746	Decal - Starting Instructions	1	20	1	2412-108	Hose Clamp	7	1	5
95-3092	400 Hour Filter Kit	23	*	1	2412-126	R-Clamp	16	25	1
95-3092	400 Hour Filter Kit	39	*	1	2412-127	Clamp	5	6	4
95-3092	400 Hour Filter Kit	49	*	1	2412-133	R-Clamp	8	3	2
95-3092	400 Hour Filter Kit	7	*	1	251-8	Bearing - Ball	24	46	1
212-93	Clip - Wire	10	53	1	251-234	Collar - Lock	9	41	2
212-93	Wire Clip	8	18	2	251-252	Bearing - Ball	30	33	1
217-106	Wheel	20	22	2	251-252	Bearing - Ball	9	40	2
217-116	Rim - 23x10.5x12	16	*	2	251-259	Bearing - Ball	22	5	1
217-117	Rim	16	33	2	252-82	Bearing - Needle	24	23	2
218-461	Nut - Jam	8	29	1	253-129	Closure	20	31	2
218-461	Nut - Jam	10	70	2	254-65	Cone - Tapered Bearing	18	28	2
218-473	Boot - Switch, Toggle	3	17	1	254-66	Cup - Tapered Bearing	18	27	2
218-515	Bracket - Mounting	3	39	1	254-72	Cup - Bearing	20	29	4
218-533	Lens	3	9	1	254-90	Bearing Cup	18	24	1
218-539	Clamp	3	13	1	254-91	Bearing Cone	18	23	1
231-90	Tube - Inner	16	*	2	254-94	Cone - Bearing	20	28	4
231-95	Tire - 23x10.5x12	16	*	2	256-10	Bushing	11	43	4
231-105	Tire	20	24	2	256-113	Bushing - Flange	9	47	4
231-138	Tire - 6 Ply	16	31	2	256-121	Bushing - Thrust	20	34	2
232-27	Valve Stem	16	*	1	256-126	Bushing	50	16	6
232-31	Valve Stem w/Cap	20	23	2	256-156	Bushing	11	6	5
232-31	Valve Stem w/Cap	16	34	2	256-242	Bushing	20	41	2
233-17	Knob	11	11	1	281-1	Plug - Taper	38	16	1
233-21	Knob	26	3	1	283-10	Pin	50	40	3
233-35	Knob	3	7	2	283-17	Pin	26	26	1
237-7	O-Ring	8	28	1	283-42	Pin - Clevis	9	7	1
237-7	O-Ring	10	69	1	283-58	Pin - Clevis	11	14	2
237-22	O-Ring	20	13	1	283-76	Pin - Lynch	6	60	1
237-22	O-Ring	24	13	1	285-17	Plug - Pipe	24	12	2
237-22	O-Ring	13	20	3	289-37	Pipe Nipple	16	40	1
237-22	O-Ring	26	29	2	2811-9	Street Elbow	16	39	1
237-22	O-Ring	23	58	1	302-2	Fitting - Grease	9	39	1
237-30	O-Ring	9	4	1	302-5	Fitting - Grease	20	19	3
237-30	O-Ring	13	13	3	302-5	Fitting - Grease	50	34	2
237-30	O-Ring	8	23	1	302-5	Fitting - Grease	11	44	2
237-30	O-Ring	26	30	2	302-5	Fitting - Grease	50	13	1
237-30	O-Ring	23	59	1	302-10	Fitting - Grease	9	10	1
237-42	O-Ring	29	2	2	302-10	Fitting - Grease	30	31	1
237-42	O-Ring	26	31	2	302-11	Fitting - Grease	20	36	1
237-42	O-Ring	23	57	2	302-33	Fitting - Grease	50	28	2
237-78	O-Ring	26	32	2	302-40	Fitting - Grease	20	11	2
237-80	O-Ring	22	30	1	302-55	Fitting - Grease	27	2	2
237-80	O-Ring	24	33	1	302-55	Fitting - Grease	28	1	2
237-81	O-Ring	22	32	3	304-46	Drain Cock	5	25	1
237-86	O-Ring	24	7	4	304-73	Fitting - Straight Barb	26	23	1
237-95	O-Ring	24	41	1	304-73	Hose Barb	7	19	1
237-141	Bumper - Radiator	6	52	2	304-75	Fitting - 90 Barb	26	20	1
241-119	Dust Cap	20	20	2	304-96	90 Hose Barb	7	2	1
242-34	Stud - Axle Flange	19	11	10	321-2	Screw - HH	22	26	2
242-50	Nut - Wheel	20	21	10	321-3	Screw - HH	32	36	4
249-21	Hook Clamp	1	16	3	321-4	Screw - HH	7	4	2
249-39	Latch - Flexible Draw	5	24	1	321-4	Screw - HH	5	5	2
249-40	Keeper	6	56	1	321-4	Screw - HH	30	7	1
2412-3	Clamp - Hose	5	14	4	321-4	Screw - HH	22	27	2
2412-3	Hose - Clamp	49	9	1	321-4	Screw - HH	3	30	2
2412-4	Clamp	16	23	1	321-4	Screw - HH	10	72	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
321-6	Screw - Cap Hex. Hd.	7 12 2	3234-13	Screw - HHF	20 53 2
321-6	Screw - HH	16 20 1	3234-14	Screw - HH	8 6 5
321-6	Screw - HH	3 44 1	3234-14	Screw - HH	2 44 2
321-6	Screw - HH	22 47 2	3234-14	Screw - HHF	5 16 11
321-23	Screw - HH	26 14 5	3234-17	Screw - HH	13 8 2
322-2	Screw - HH	8 21 2	3234-17	Screw - HH	8 16 4
322-4	Screw - HH	16 26 1	3234-18	Screw - HH	31 60 1
322-4	Screw - HH	24 37 4	3234-25	Screw - HHF	2 50 4
322-4	Screw - HH	13 43 1	3234-32	Screw - Flange	8 11 2
322-5	Screw - HH	3 29 2	3234-32	Screw - HHF	20 7 4
322-5	Screw - HH	1 34 1	3234-33	Screw - Flange	2 60 1
322-6	Screw - HH	22 21 6	3241-5	Screw - Set	22 16 2
322-6	Screw - HH	5 43 1	3241-5	Screw - Set Socket Head	30 36 2
322-8	Screw - HH	22 25 2	3245-1	Screw - Set	9 46 2
322-10	Screw - HH	49 13 4	3246-3	Screw - Set	9 29 4
322-17	Screw - HH	22 8 1	3249-11	Screw - Mach. Rd. Hd.	22 1 2
323-6	Screw - Cap Hex. Hd.	18 46 1	3250-17	Screw - PH	3 22 2
323-6	Screw - HH	13 27 2	3253-3	Washer - Lock	16 5 2
323-7	Screw - HH	22 39 2	3253-3	Washer - Lock	32 35 4
323-13	Screw - HH	11 32 1	3253-3	Washer - Lock	31 51 3
323-14	Screw - HH	5 32 3	3253-4	Washer - Lock	1 8 2
323-14	Screw - HH	12 56 1	3253-4	Washer - Lock	32 21 5
323-42	Screw - Cap Hex. Hd.	12 54 1	3253-4	Washer - Lock	30 47 2
323-56	Screw - HH	24 3 4	3253-6	Washer - Lock	50 7 2
324-4	Screw - HH	50 19 2	3253-17	Washer - Lock	3 3 6
324-11	Screw - HH	50 22 2	3253-17	Washer - Lock	16 9 1
324-11	Screw - HH	32 27 2	3253-21	Washer - Lock	11 29 4
324-12	Screw - HH	30 38 2	3253-21	Washer - Lock	22 40 2
329-7	Screw - HH	31 53 1	3253-21	Washer - Lock	18 45 1
3210-7	Screw - HH	22 6 1	3253-21	Washer - Lock	10 55 4
3210-7	Screw - HH	17 19 8	3254-2	Washer - Lock, Int. Tooth	30 18 2
3217-5	Nut - Hex.	31 50 1	3254-2	Washer - Lock, Int. Tooth	3 24 6
3217-6	Nut	49 2 2	3254-2	Washer - Lock, Int. Tooth	2 51 1
3217-6	Nut - Hex	3 32 2	3254-7	Washer - Lock	9 15 1
3217-6	Nut - Hex.	1 7 2	3254-9	Washer - Lock	22 49 2
3217-7	Nut - Hex	11 28 2	3255-5	Washer - Lock	3 38 1
3217-8	Nut - Full	50 8 2	3255-7	Washer - Lock, Ext. Tooth	3 31 3
3217-9	Nut	18 42 2	3255-7	Washer - Lock	22 50 3
3217-16	Nut - Hex.	22 48 2	3255-7	Washer - Lock, Ext. Tooth	7 21 2
3217-26	Nut - Hex.	3 37 1	3255-8	Washer - Lock	17 2 8
3218-5	Nut - Jam	11 3 2	3255-9	Washer - Lock, Ext. Tooth	31 61 1
3218-7	Nut - Jam	13 42 1	3256-3	Washer - Flat	22 23 4
3219-1	Nut	30 2 5	3256-3	Washer - Flat	13 28 4
3219-2	Nut	17 1 8	3256-6	Washer - Flat	9 20 1
3219-2	Nut - Hex	22 9 1	3256-6	Washer - Flat	18 43 2
3219-3	Nut - Hex.	9 33 1	3256-6	Washer - Flat	22 53 1
3219-7	Nut - Hex.	9 16 1	3256-14	Washer - Flat	3 35 1
3219-14	Nut - Hex.	3 1 6	3256-22	Washer - Flat	11 8 1
3219-14	Nut - Hex.	16 10 1	3256-22	Washer - Flat	30 8 1
3220-3	Nut - Jam	11 27 1	3256-22	Washer - Flat	6 68 4
3220-3	Nut - Jam	20 43 8	3256-23	Washer - Flat	8 22 2
3220-5	Nut - Jam	11 46 1	3256-25	Washer - Flat	50 6 1
3220-5	Nut - Jam R.H. Thd.	20 40 2	3256-26	Washer - Flat	11 40 1
3220-6	Nut	14 27 1	3256-28	Washer - Flat	9 14 4
3220-6	Nut - Jam	20 37 4	3256-41	Washer - Flat	9 36 4
3220-7	Nut - Jam	20 25 2	3256-46	Washer - Flat	13 26 2
3220-12	Nut - Jam L.H. Thd.	20 * 2	3256-64	Washer - Flat	30 25 4
3229-1	Bolt - Carriage	2 38 6	3257-5	Key - Woodruff	9 11 3
3230-1	Bolt - Carriage	12 52 2	3257-30	Key - Woodruff	32 3 2
3230-2	Bolt - Carriage	16 29 3	3257-32	Key - Woodruff	22 15 1
3231-21	Bolt - Carriage	11 31 2	3257-32	Key - Woodruff	24 21 1
3233-14	Bolt - Carriage	32 9 1	3257-33	Key - Woodruff	30 30 1
3234-1	Screw - HHF	5 18 2	3258-19	Screw - Mach. Rd. Hd.	49 16 2
3234-11	Screw - Flange	8 13 6	3269-10	Washer - Backup	5 10 2
3234-11	Screw - Flange	5 39 1	3272-5	Pin - Cotter	11 7 3
3234-11	Screw - HF	16 1 2	3272-6	Pin - Cotter	26 8 1
3234-11	Screw - HH	32 31 4	3272-6	Pin - Cotter	9 8 1
3234-11	Screw - HH	11 39 3	3272-6	Pin - Cotter	11 21 6
3234-11	Screw - HH	30 45 4	3272-7	Pin - Cotter	50 44 1
3234-11	Screw - HHF	1 28 5	3272-10	Pin - Cotter	50 38 3
3234-12	Screw - Flange	32 33 2	3272-10	Pin - Cotter	23 54 1
3234-12	Screw - HHF	1 6 5	3272-11	Pin - Cotter	50 2 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No.	No.	Qty.	Part No.	Description	Pg. Ref. No.	No.	Qty.
3272-11	Pin - Cotter	9	28	1	32121-84	Pin - Roll	50	25	2
3272-13	Pin - Cotter	20	26	2	32121-91	Pin - Coil ,Spring	24	49	3
3272-16	Pin - Cotter	32	14	2	32122-16	Screw - Truss Hd.	6	61	1
3272-22	Pin - Cotter	9	17	2	32128-20	Nut - Flange	16	37	3
3272-24	Pin - Cotter	50	10	1	32128-20	Nut - Flange	2	37	1
3272-33	Pin - Cotter	50	17	1	32128-20	Nut - Flange	13	41	1
3274-47	Screw - HSFH	11	33	1	32128-20	Screw - HHF	5	29	11
3274-69	Screw - Socket Hd.	6	57	6	32128-21	Nut - Flange	1	5	10
3290-134	Screw - HH	3	4	2	32128-21	Nut - Flange	5	36	5
3290-144	Screw - HH	2	55	3	32128-23	Nut - Flange	20	5	4
3290-144	Screw - Machine	1	17	6	32128-23	Nut - Flange	32	16	1
3290-224	Washer - Lock	31	59	1	32128-23	Nut - Flange	30	24	2
3290-271	Rivet	5	11	4	32128-25	Nut - Flange	12	53	2
3290-357	Nut - Flange	32	7	8	32128-32	Nut - Flange	5	9	8
3290-357	Nut - Flange	8	14	6	32128-33	Nut - Flange	2	39	6
3290-357	Nut - Flange	1	26	5	32128-37	Nut - Flange	32	23	2
3290-357	Nut - Flange	30	43	7	32128-37	Nut - Flange	30	44	2
3290-378	Cable Tie	7	8 A/R		32128-42	Nut - Flange	50	27	4
3290-378	Cable Tie	1	23	2	32128-43	Nut - Flange Lock	12	55	2
3290-379	Cable Tie	3	41	1	32136-2	Nut - Hex. Slotted	50	3	2
3290-379	Tie - Cable	13	16	3	32136-3	Nut - Hex. Slotted	32	13	2
3290-379	Tie - Cable	5	31	4	32144-10	Screw - Tap	26	4	2
3290-379	Tie - Cable	30	16	1	32144-10	Screw - Tap	13	6	6
3290-424	Screw - HH	3	28	1	32144-10	Screw - Tap	8	33	2
3296-2	Nut	1	14	6	32144-10	Screw - Tap	2	45	11
3296-2	Nut - Lock	2	56	3	32144-10	Screw - Tap	20	52	4
3296-6	Nut - Lock	9	34	1	32144-14	Screw - Tap	20	2	1
3296-12	Nut - Lock	3	26	3	32144-21	Screw - PPH	13	45	1
3296-16	Nut - Lock	10	74	1	32144-53	Screw - Tap	16	11	5
3296-20	Nut - Lock	30	5	1	32144-67	Screw - Tap	16	36	4
3296-20	Nut - Lock	16	22	2	32146-20	Nut - Lock	20	9	1
3296-20	Nut - Lock	13	30	4	32148-9	Nut - Clinch	2	64	1
3296-28	Nut - Lock	9	27	1	32149-2	Nut	7	9	2
3296-29	Nut - Lock	22	4	1	32149-2	Nut	7	22	2
3296-29	Nut - Lock	49	21	4	32149-2	Nut	11	37	1
3296-29	Nut - Lock	13	36	2	32149-2	Nut - Lock	3	33	3
3296-42	Nut - Lock	22	10	6	32151-36	Ring - Retaining	20	12	3
3296-42	Nut - Lock	26	10	5	32151-46	Ring - Retaining	24	27	2
3296-59	Nut - Lock	6	63	1	32151-104	Ring - Retaining	20	10	2
32103-2	Nut - Wing	1	11	3	32152-1	Nut - Flange	30	12	1
32103-2	Nut - Wing	5	51	2	32152-1	Nut - Lock	22	19	8
32104-6	Screw - Tap	10	56	4	32153-2	Nut - Hex.	13	11	2
32104-96	Screw - HH	16	6	1	32153-2	Nut - Lock	11	30	2
32104-109	Screw - Hex. Hd.	6	66	4	32153-2	Nut - Lock	31	57	1
32104-116	Screw - Tap	5	20	4	340-54	Fitting 45	20	15	2
32107-11	Nut	49	14	2	340-70	Nut - Lock Bulkhead	5	34	2
32111-8	Nut - Acorn	5	8	2	340-71	Union - Bulkhead	5	33	2
32120-8	Ring - Retaining	24	1	1	340-77	Elbow	22	12	1
32120-11	Ring - Retaining	24	47	1	340-97	Fitting - 90	26	25	1
32120-15	Ring - Retaining	24	45	1	340-99	Elbow	22	13	1
32120-22	Ring - Retaining	9	42	2	340-99	Fitting - 90 Elbow	26	12	1
32120-22	Ring - Retaining, Internal	30	34	1	340-110	Elbow - 90	26	24	1
32120-69	Ring - Retaining, External	30	35	1	340-112	Elbow - 90	26	18	1
32120-72	Ring - Retaining External	22	43	1	353-508	Plug - Drain	22	41	1
32121-6	Pin - Roll	22	11	1	353-512	Plug	26	1	1
32121-6	Pin - Roll	11	24	1	353-550	Plug - HH	24	19	2
32121-9	Pin - Roll	9	49	1	353-551	Plug - HH	24	32	1
32121-15	Pin - Roll	18	30	1	353-702	Hose Barb	7	18	1
32121-24	Pin - Roll	23	55	1	353-975	Hose Barb	7	6	1
32121-73	Pin - Slotted Spring	26	9	1	353-987	Elbow	22	35	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible – minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit – which is not reflected in your manual – see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Groundsmaster 325D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Groundsmaster 325D – supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer – supply the following information:

1. Model and serial number of the Groundsmaster 325D.
2. Part number – description – and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Main Frame Assembly	1–2
Instrument Panel Assembly	3
Electrical Schematic	4
Radiator & Hood Assembly	5–6
Fuel Filter Assembly	7
Interlock Assembly	8
Power Take Off (PTO) Assembly	9–10
Brake Pedal Assembly	11–12
Power Steering Assembly	13
Power Steering Valve Assembly No. 92–7308	14
Hydraulic Schematic	15
Front Axle and Fuel Tank Assembly	16
Differential Assembly No. 86–9600	17–18
Brake Assembly	19
Rear Axle and Wheel Assembly	20
Hydraulic Cylinder No. 92–7828	21
Transmission Installation Assembly	22–23
Transmission Assembly No. 92–8947	24–25
Description	Page
Valve and Cylinder Assembly	26
Hydraulic Lift Cylinder Assembly No. 62–4250 (2–1/2" Bore)	27
Hydraulic Lift Cylinder Assembly No. 66–1250 (3" Bore) (Opt.)	28
Control Valve Assembly No. 43–1710	29
Engine Assembly	30–39
Governor Assembly	40–41
Fuel Injection Pump Assembly No. 42–8000	42–43
Fuel Injection Pump Assembly	44–45
Nozzle and Holder Assembly No. 44–8070	46
Alternator Assembly No. 43–0390	47
Starter Assembly No. 46–7610	48
Air Cleaner Assembly	49
Push Arm Assembly	50
TORO Part Number Index	51–60

MAINTENANCE RECORD

MAINTENANCE RECORD

MAINTENANCE RECORD

**Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.**

Litho in U.S.A.