


TORO®

MODEL NOS. 37025, 37014,
37013, 37012, 37011

CROSS REFERENCE

GENERAL TRACTOR (TRANSMISSION ASSEMBLY)

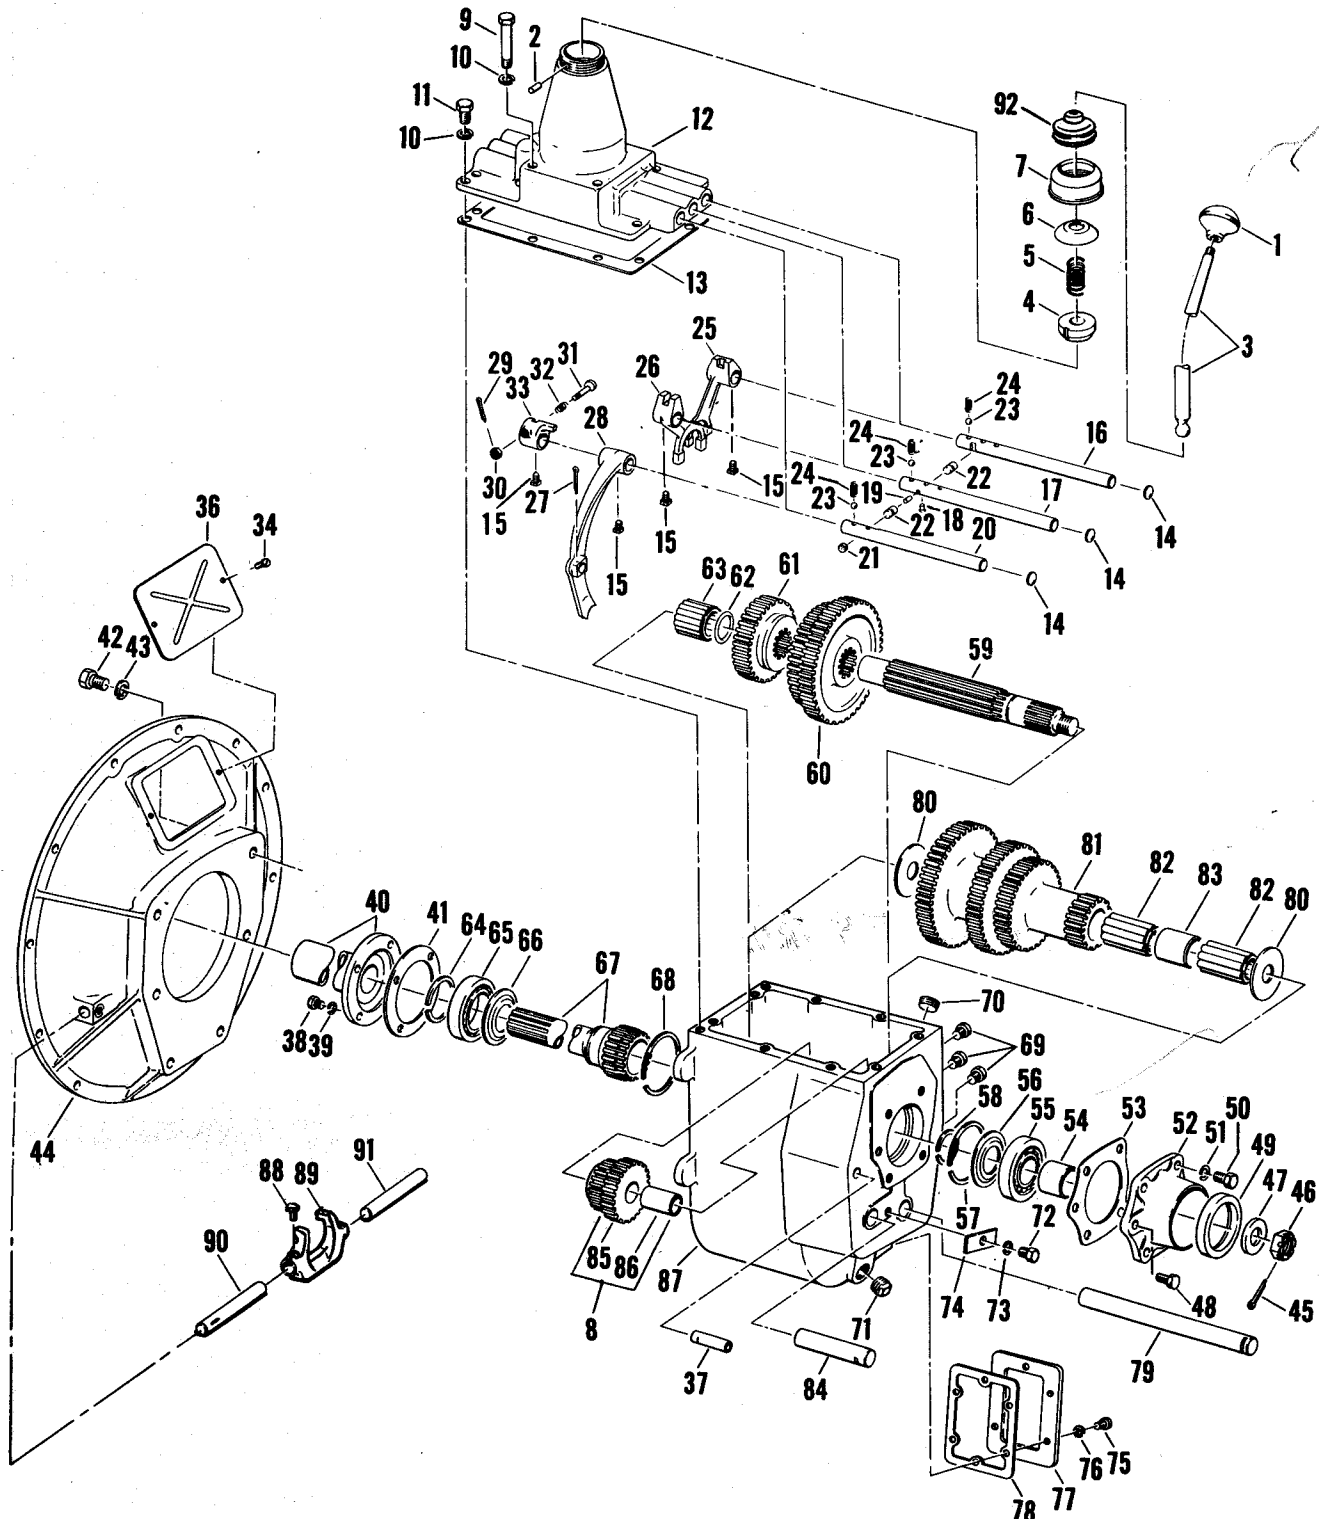

TRANSMISSION ASSEMBLY

Ref. No.	Part No.	Description	Borg-Warner Part No.	No. Used
1	19-7580	Knob, Gear Shift	C37J-50A	1
2	19-7590	Pin, Retaining	4499A	1
3	19-7600	Lever, Gear Shift	AC9A-2	1
4	19-7810	Ball, Shift Lever	C8-2-1/2C	1
5	19-7620	Spring	4498B	1
6	19-7630	Cup, Spring Retaining	4497	1
7	19-7640	Cap, Lever Housing	4496K	1
8	19-7650	Reverse Gear and Bushing	AT9A-10	1
9	19-7660	Capscrew, Cover Retaining	190911	1
10	19-7670	Lockwasher	103321	18
11	19-7680	Capscrew, Cover Retaining	179838	5
12	19-7690	Cover, Shift Linkage	T8G-148A	1
13	19-7700	Gasket, Cover	T9-115	1
14	19-7710	Plug	103892	3
15	19-7720	Setscrew	4418B	3
16	19-7730	Rod, 1st & 2nd Gears	T8A-21	1
17	19-7740	Rod, 3rd & 4th Gears	T8A-20	1
18	19-7750	Pin, Retaining	4447	1
19	19-7760	Pin	4446A	1
20	19-7770	Rod, Reverse Gear	T8-99A	1
21	19-7780	Plug	X2850S	1
22	19-7790	Interlock Pawl	T8-86	2
23	19-7800	Ball, Detent	453593	3
24	19-7810	Spring, Detent	T8B-42	3
25	19-7820	Shift Fork, 1st & 2nd Gears	T8-24	1
26	19-7830	Shift Fork, 3rd & 4th Gears	T8-23	1
27	19-7840	Pin, Cotter	103386	1
28	19-7850	Shift Fork, Reverse Gear	T8-51	1
29	19-7860	Pin, Cotter	103361	1
30	19-7870	Nut, Spring Retaining	102643	1
31	19-7880	Plunger, Reverse Shift	T9A-40	1
32	19-7890	Spring	T9A-39	1
33	19-7900	Socket, Reverse Gear	T9A-37	1
34	19-7910	Screw, Plate Retaining	4776L	2
36	19-7930	Plate, Inspection	T9-74	1
37	19-7950	Rod, Reverse Fork Guide	T8-52	1
38	19-7960	Capscrew, Throw-Out Sleeve Retaining	179816	4
39	19-7970	Lockwasher	4801A	4
40	19-7980	Throw-Out Sleeve	T9-6H	1
41	19-7990	Gasket	T9-145	1
42	19-8000	Capscrew, Clutch Housing Retaining	179883	6
43	19-8010	Lockwasher	103323	6
44	19-8020	Clutch Housing	T9-1-1/2	1
45	19-8030	Pin, Cotter	103387	1
46	19-8040	Nut, Slotted	T9-50P	1

Ref. No.	Part No.	Description	Borg-Warner Part No.	No. Used
47	19-8050	Washer, Flat	T9-50-1/2G	1
48	19-8060	Capscrew (in item 52)	179847	1
49	19-8070	Oil Seal	T9-110	1
50	19-8080	Capscrew, Bearing Housing Retaining	179839	4
51	19-7670	Lockwasher	103321	5
52	19-8100	Bearing Housing	T9-7Z	1
53	19-8110	Gasket	T9-145-1/2	1
54	19-8120	Spacer	T9-75-1/2Y	1
55	19-8130	Bearing, Rear	B307A	1
56	19-8140	Grease Shield	T8-137	1
57	19-8150	Ring, Retaining	T8-7-1/2	1
58	19-8160	Ring, Retaining	T69-137	1
59	19-8170	Shaft, Output	T9-2G	1
60	19-8180	Gear, 1st & 2nd	T9-12W	1
61	19-8190	Gear, 3rd & 4th	T9A-11	1
62	19-8200	Retaining Ring	T8-25	1
63	19-8210	Bearing, Front, Inner	4919B	1
64	19-8220	Ring, Retaining	4495	1
65	19-8230	Bearing, Front	B-209A	1
66	19-8240	Grease Shield	T8-136	1
67	19-8250	Shaft, Clutch	L2-16D	1
68	19-8260	Ring, Retaining	T8-6-1/2	1
69	19-8270	Capscrew	X775	3
70	19-8280	Plug, Filler and Level	9409949	1
71	19-8290	Plug, Drain	444592, 444593, 444594 opt.	1
72	19-8300	Capscrew	179837	7
73	19-7670	Lockwasher	103321	1
74	19-8330	Plate, Lock	4501	1
75	19-8300	Capscrew, Cover Retaining	179837	6
76	19-7670	Lockwasher	103321	6
77	19-8090	Plate, Cover	T53-160B	1
78	19-8320	Gasket	T9-150	1
79	19-8340	Countershaft	T9-3P	1
80	19-8350	Thrust Washer	T9-30Y	2
81	19-8360	Cluster Gear	T8C-8A	1
82	19-8370	Bearing, Roller	4919C	2
83	19-8380	Spacer	T8-28A	1
84	19-8390	Shaft, Reverse Gear	T8-35	1
85	19-8400	Gear, Reverse	T9A-10	1
86	19-8410	Bushing, Reverse Gear	T8-85	1
87	19-8420	Housing, Transmission	T9-1YY	1
88	19-8430	Set Screw	5573	2
89	19-8440	Fork, Throw-Out Bearing	T64J-360D	1
90	19-8450	Shaft, Fork Linkage	T9-311XX	1
91	19-8460	Shaft, Fork Support	T9-310	1
92	3-6184	Dust Cover		1
	19-7570	Transmission Assembly Complete	T-9-C9A	1

Warner gear part numbers are listed for identification only. Obtain parts from Toro Distributor.