



Form No. 3371-811 Rev A

Count on it.

Parts Catalog

TITAN MX4880 Zero-Turn-Radius Riding Mower

Model No. 74871—Serial No. 312000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Main Frame and Caster Wheel Assembly	4
Wheel and Tire Assembly No. 120-5506	5
Body and Styling Assembly	6
Traction Drive Assembly	7
RH Hydro Transmission Assembly No. 119-8893	8
LH Hydro Transmission Assembly No. 119-8892	10
Motion Control Assembly	12
Brake Link Assembly	14
Engine and Clutch Assembly	15
Fuel Delivery Assembly	16
Multi Layer Fuel Tank Assembly No. 117-7352	17
Roll-Over Protection System Assembly	18
Electrical Assembly	19
Deck Lift Assembly	20
48 Inch Deck Assembly	21
48 Inch Deck Decal Assembly No. 120-7116	22
48 Inch Deck Belt and Hi-Flo Blade Assembly	23
Seat Assembly	24
Seat Assembly No. 121-5659	26
Armrest Kit Assembly No. 110-5719	27

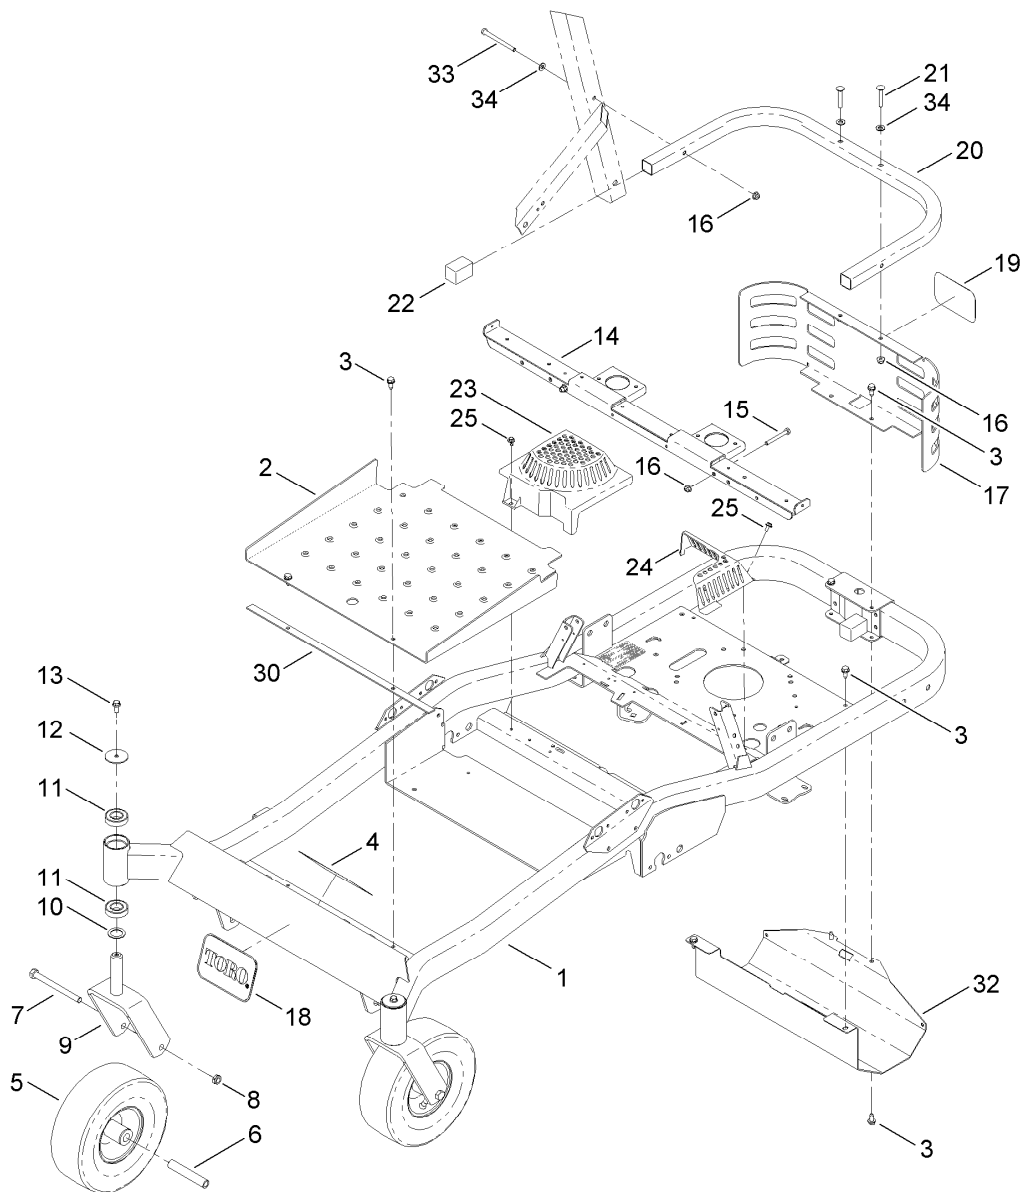

Main Frame and Caster Wheel Assembly


Ref.	Part Number	Qty.	Description
1	117-7356-01	1	Frame ASM
2	115-2531-05	1	Pan-Floor
3	32144-70	8	Screw-HWHTF
4	120-5466	1	Decal-Safety
5	120-5506	2	Wheel And Tire ASM
6	120-2228	2	Spacer-Spanner
7	325-36	2	Screw-HH
8	3296-45	2	Nut-Lock, NI
9	119-8923-01	2	Caster Fork ASM
10	10-8110	2	Washer-Thrust
11	109-3678	4	Bearing-Ball
12	109-3724	2	Washer
13	3234-47	2	Screw-HHF
14	117-7451-03	1	Seat Support ASM
15	322-12	2	Screw-HH

Ref.	Part Number	Qty.	Description
16	104-8300	6	Nut-Flange, NI
17	120-2248-03	1	Guard-Rear
18	62-5550	1	Decal
19	105-8278	1	Decal
20	121-0704-01	1	Tube-Guard
21	322-10	2	Screw-HH
22	121-2980	2	Cap
23	117-1241	1	Cover-Fan, RH
24	117-1242	1	Cover-Fan, LH
25	46-8560	2	Screw-HHFTF
30	117-7238	1	Strip-Vibration, Anti
32	120-2247-03	1	Guard-Muffler
33	322-23	2	Screw-HH
34	3256-23	4	Washer-Flat

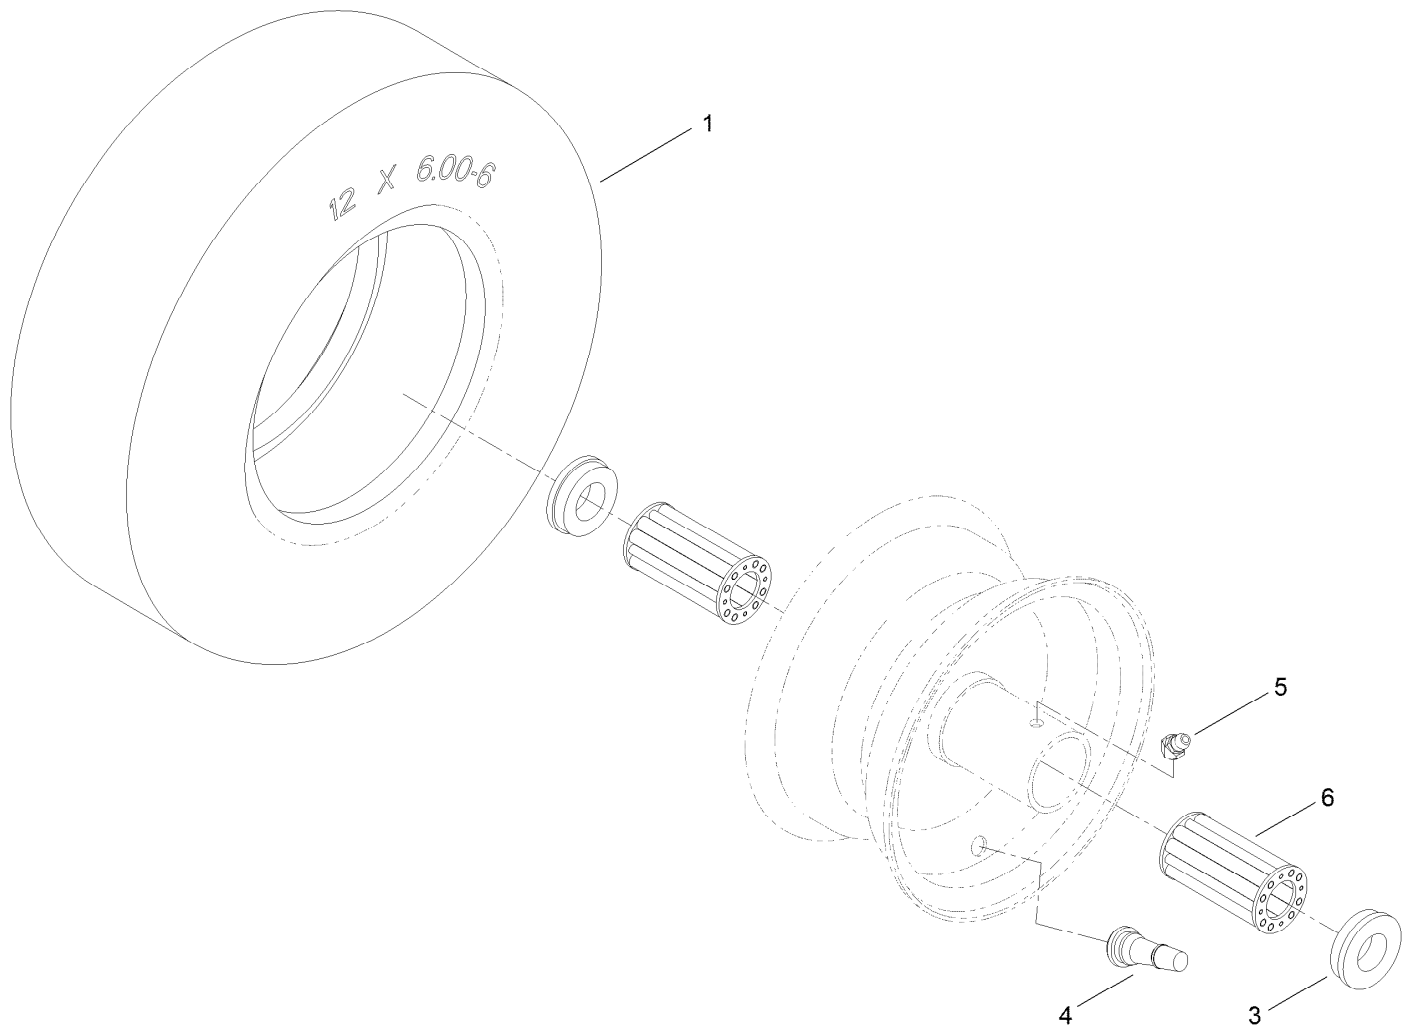


Wheel and Tire Assembly No. 120-5506

Ref.	Part Number	Qty.	Description
1	120-7115	1	Tire
3	120-7124	2	Bushing-Flange
4	5108	1	Valve
5	120-7125	1	Fitting-Zerk
6	83-4740	2	Bearing

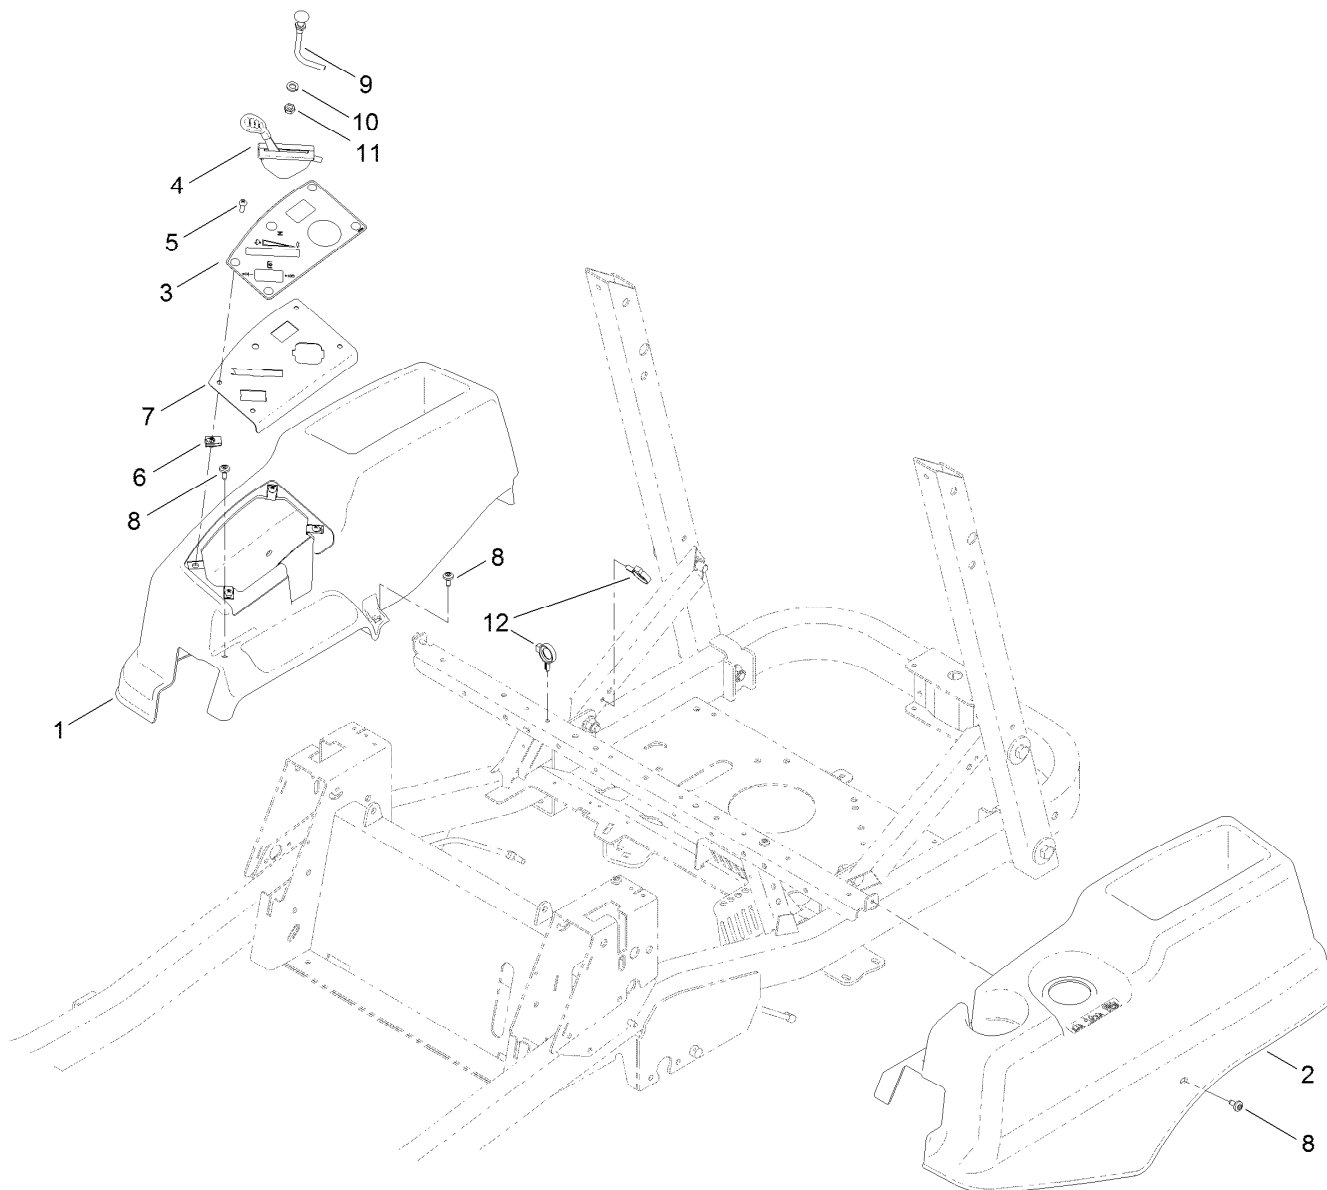

Body and Styling Assembly

Ref.	Part Number	Qty.	Description
1	120-5488	1	Pod-RH
2	120-5489	1	Pod-LH
3	115-9632	1	Decal-Panel, Control
4	121-0770	1	Cable-Throttle
5	3258-166	4	Screw-PRH
6	107069	4	Clip
7	115-2591-03	1	Panel-Control
8	112-4004	6	Screw-Shoulder
9	120-2291	1	Cable-Choke
10	3253-21	1	Washer-Lock
11	3220-3	1	Nut-HJ
12	105-1853	2	Clamp-Hose

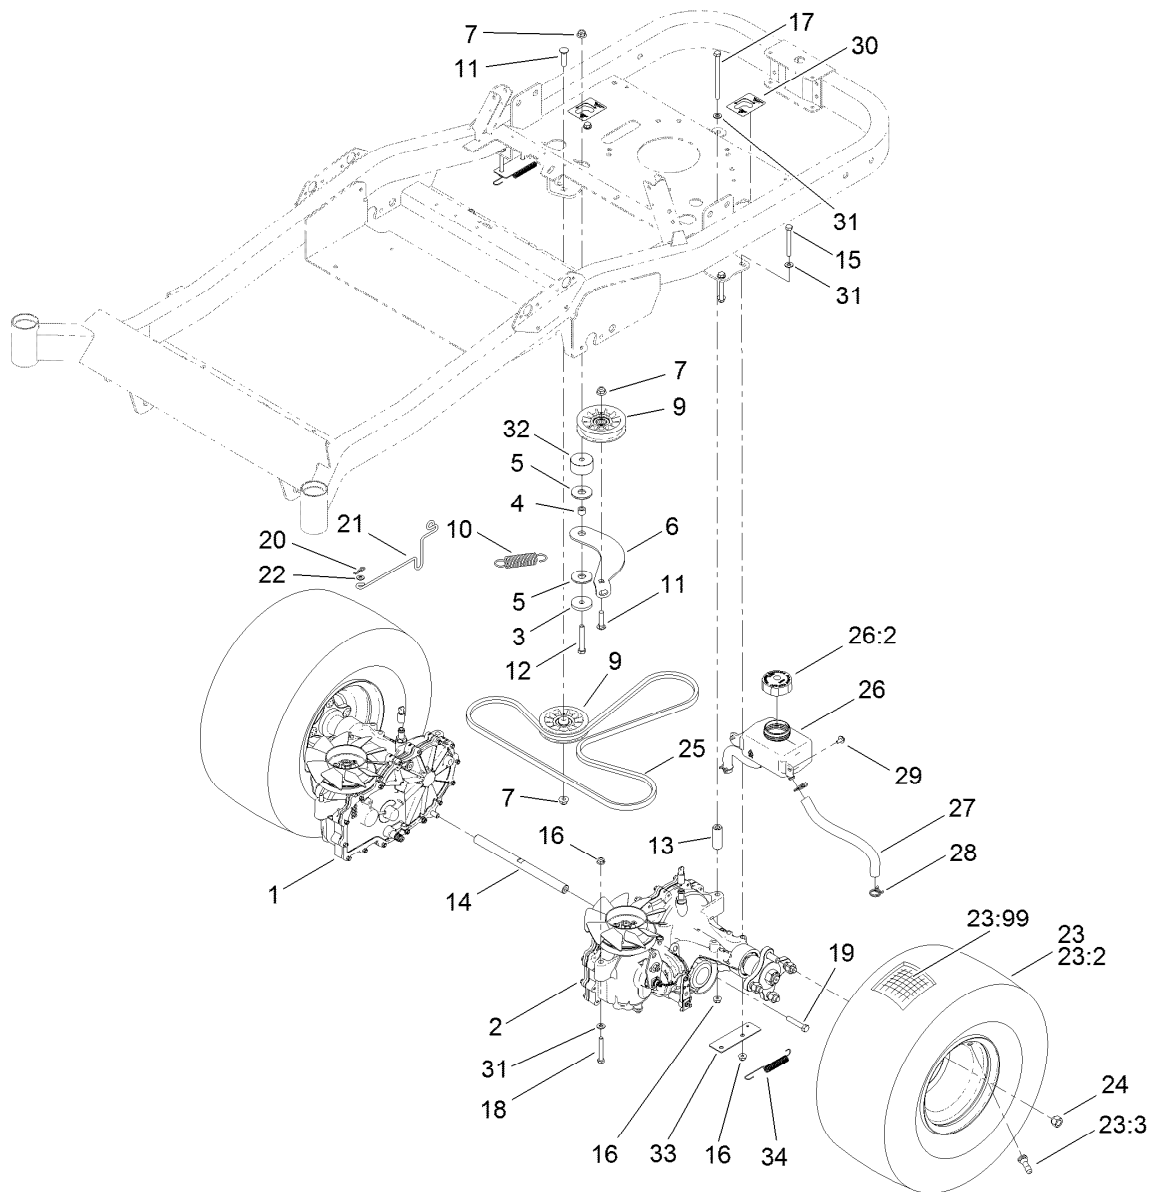

Traction Drive Assembly

Ref.	Part Number	Qty.	Description
1	119-8893	1	RH Hydro Transmission ASM
2	119-8892	1	LH Hydro Transmission ASM
3	110-9981	1	Washer-Plain
4	115-4986	1	Spacer
5	114-0463	2	Washer-Friction, Composite
6	117-5350	1	Arm-Idler
7	104-8301	3	Nut-Flange, NI
9	109-3397	2	Pulley-Idler, Flat
10	1-603402	1	Spring-Extension
11	3231-4	2	Screw-CARR
12	323-12	1	Screw-HH
13	109-3652	2	Spacer-Hydro
14	115-2559	1	Shaft-Cross, Hydro
15	322-13	4	Screw-HH
16	104-8300	8	Nut-Flange, NI
17	322-38	2	Screw-HH
18	322-11	2	Screw-HH
19	323-10	2	Screw-HH

Ref.	Part Number	Qty.	Description
20	1-806003	2	Pin-Cotter, Hair
21	115-4990	2	Rod-Bypass
22	3256-22	2	Washer-Flat
23	120-5482	2	Wheel And Tire ASM
23:2	120-5483	1	Tire-Turfmaster
23:3	232-27	1	Stem-Valve
23:99	105-4070	1	Tube-Inner
24	242-50	8	Nut-Lug
25	115-9613	1	V-Belt
26	115-9618	1	HYD Reservoir ASM
26:2	109-3320	1	Cap-Reservoir, HYD
27	115-4969	2	Hose-Overflow
28	117-1193	4	Clamp-Hose
29	46-8560	2	Screw-HHFTF
30	117-1158	2	Decal-Bypass
31	3256-23	8	Washer-Flat
32	117-5351	1	Spacer
33	117-7248-03	2	Plate-Spring
34	110769	2	Spring-Extension

Exploded view diagram of a 150cc engine assembly. The diagram shows the following components and their assembly sequence:

- Top End:** Includes the cylinder head (11), intake valve (2), and various seals and washers (7, 91, 92, 93).
- Valvetrain:** Shows the intake valve (2), valve spring (7), and valve guide (70).
- Timing Mechanism:** Includes the timing belt (101), timing pulleys (80, 81, 82, 83), and timing cover (40).
- Pistons and Crankshaft:** Shows the piston (65), piston rings (64, 60), and crankshaft (100).
- Bottom End:** Includes the crankshaft (100), crank pin (101), and crank seal (102).
- Oil Pan:** Shows the oil pan (106) and oil pan gasket (105).
- Accessories:** Includes the alternator (207), water pump (203), and various sensors and switches (201, 202, 203, 204, 205, 206, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300).


Item not shown
13 Sealant
209 Hub Puller

RH Hydro Transmission Assembly No. 119-8893 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-1676	1	Main Housing Kit	83	104-5329	1	Pin-Jackshaft
2	117-5358	1	Housing Side Kit	91	114-1694	1	Gear-54T
7	117-5359	16	Screw-HHF	92	120-7975	1	Spacer
11	104-2189	1	Plug-Thread, Straight	93	114-1696	1	Bearing-Ball
13	104-2147	1	Sealant ●	95	120-7976	1	Bearing-Ball
23	109-3321	1	Element-Oil Filter, HYD	97	109-5939	1	Hub Kit
32	114-1685	1	Rod-Bypass	100	114-1697	1	Pawl-Brake
34	107-2490	1	Arm-Bypass	101	120-7977	1	Brake Shaft Kit
40	104-5304	1	Swashplate-Trunnion	102	125-0021	1	Handle, Brake
42	104-2116	1	Stud	105	104-2120	3	Screw
43	112-9853	1	Puck-Friction	106	120-7981	1	Guard-Filter, RH
45	114-8491	1	Washer	111	109-3278	1	Adapter-Straight
55	104-5308	1	Spacer	156	115-5057	1	Cover-Nut, Axle
60	109-2865	1	Bearing, Thrust Pr	200	109-3537	1	Complete Seal Kit ●
64	114-1689	1	Motor Cylinder Block Kit	201	120-7982	1	RH Charge, Center Section Kit
65	94-6922	1	Bearing-Thrust	202	114-8464	1	Charge Relief Kit
69	110-8561	1	Pump Block ASM	203	114-8465	1	Charge Kit
70	104-5339	1	Washer-Flat	207	125-0059	1	Kit, Fan And Pulley
72	120-7972	1	Gear-13T	209	114-8467	1	Hub-Puller, 4 Bolt ●
73	114-1691	1	Shaft-Motor	210	117-5361	1	Shaft Input Kit
74	104-5360	1	Washer	211	117-5362	1	Arm Control Kit
80	94-1933	2	Washer	212	114-8470	1	Axle Shaft Kit
81	120-7973	1	Gear-46T				
82	120-7974	1	Gear-11T				

● Not illustrated


LH Hydro Transmission Assembly No. 119-8892

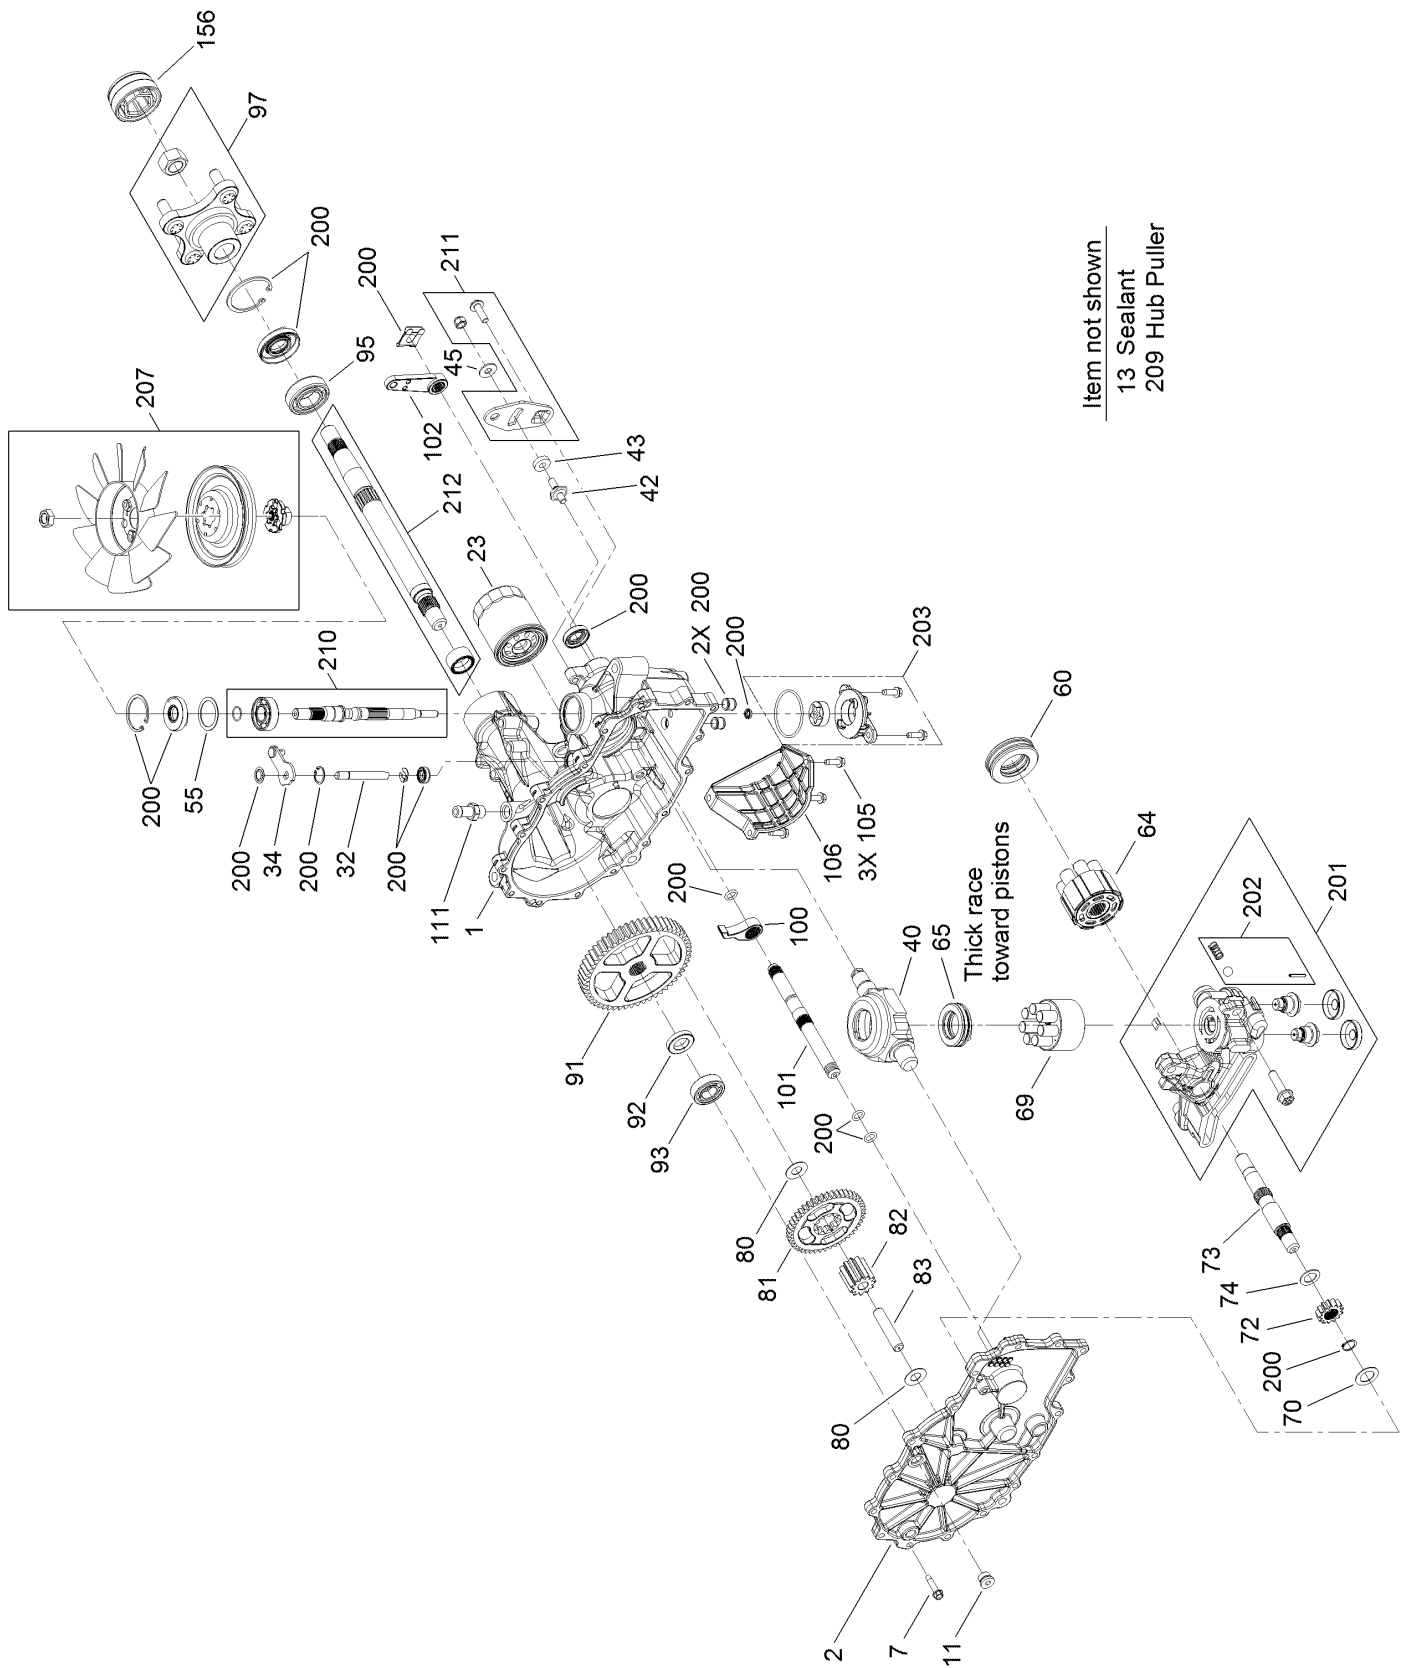

LH Hydro Transmission Assembly No. 119-8892 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-8471	1	Main Housing Kit	83	104-5329	1	Pin-Jackshaft
2	114-8472	1	Side Cover Kit	91	114-1694	1	Gear-54T
7	117-5359	16	Screw-HHF	92	120-7975	1	Spacer
11	104-2189	1	Plug-Thread, Straight	93	114-1696	1	Bearing-Ball
13	104-2147	1	Sealant ●	95	120-7976	1	Bearing-Ball
23	109-3321	1	Element-Oil Filter, HYD	97	109-5939	1	Hub Kit
32	114-1685	1	Rod-Bypass	100	114-1697	1	Pawl-Brake
34	107-2490	1	Arm-Bypass	101	120-7977	1	Brake Shaft Kit
40	104-5304	1	Swashplate-Trunnion	102	125-0021	1	Handle, Brake
42	104-2116	1	Stud	105	104-2120	3	Screw
43	112-9853	1	Puck-Friction	106	120-7979	1	Guard-Filter, LH
45	114-8491	1	Washer	111	109-3278	1	Adapter-Straight
55	104-5308	1	Spacer	156	115-5057	1	Cover-Nut, Axle
60	109-2865	1	Bearing, Thrust Pr	200	109-3537	1	Complete Seal Kit ●
64	114-1689	1	Motor Cylinder Block Kit	201	120-7980	1	LH Charge Center Section Kit
65	94-6922	1	Bearing-Thrust	202	114-8464	1	Charge Relief Kit
69	110-8561	1	Pump Block ASM	203	114-8465	1	Charge Kit
70	104-5339	1	Washer-Flat	207	109-5938	1	Fan And Pulley Kit
72	120-7972	1	Gear-13T	209	114-8467	1	Hub-Puller, 4 Bolt ●
73	114-1691	1	Shaft-Motor	210	117-5361	1	Shaft Input Kit
74	104-5360	1	Washer	211	117-5362	1	Arm Control Kit
80	94-1933	2	Washer	212	114-8470	1	Axle Shaft Kit
81	120-7973	1	Gear-46T				
82	120-7974	1	Gear-11T				


● Not illustrated

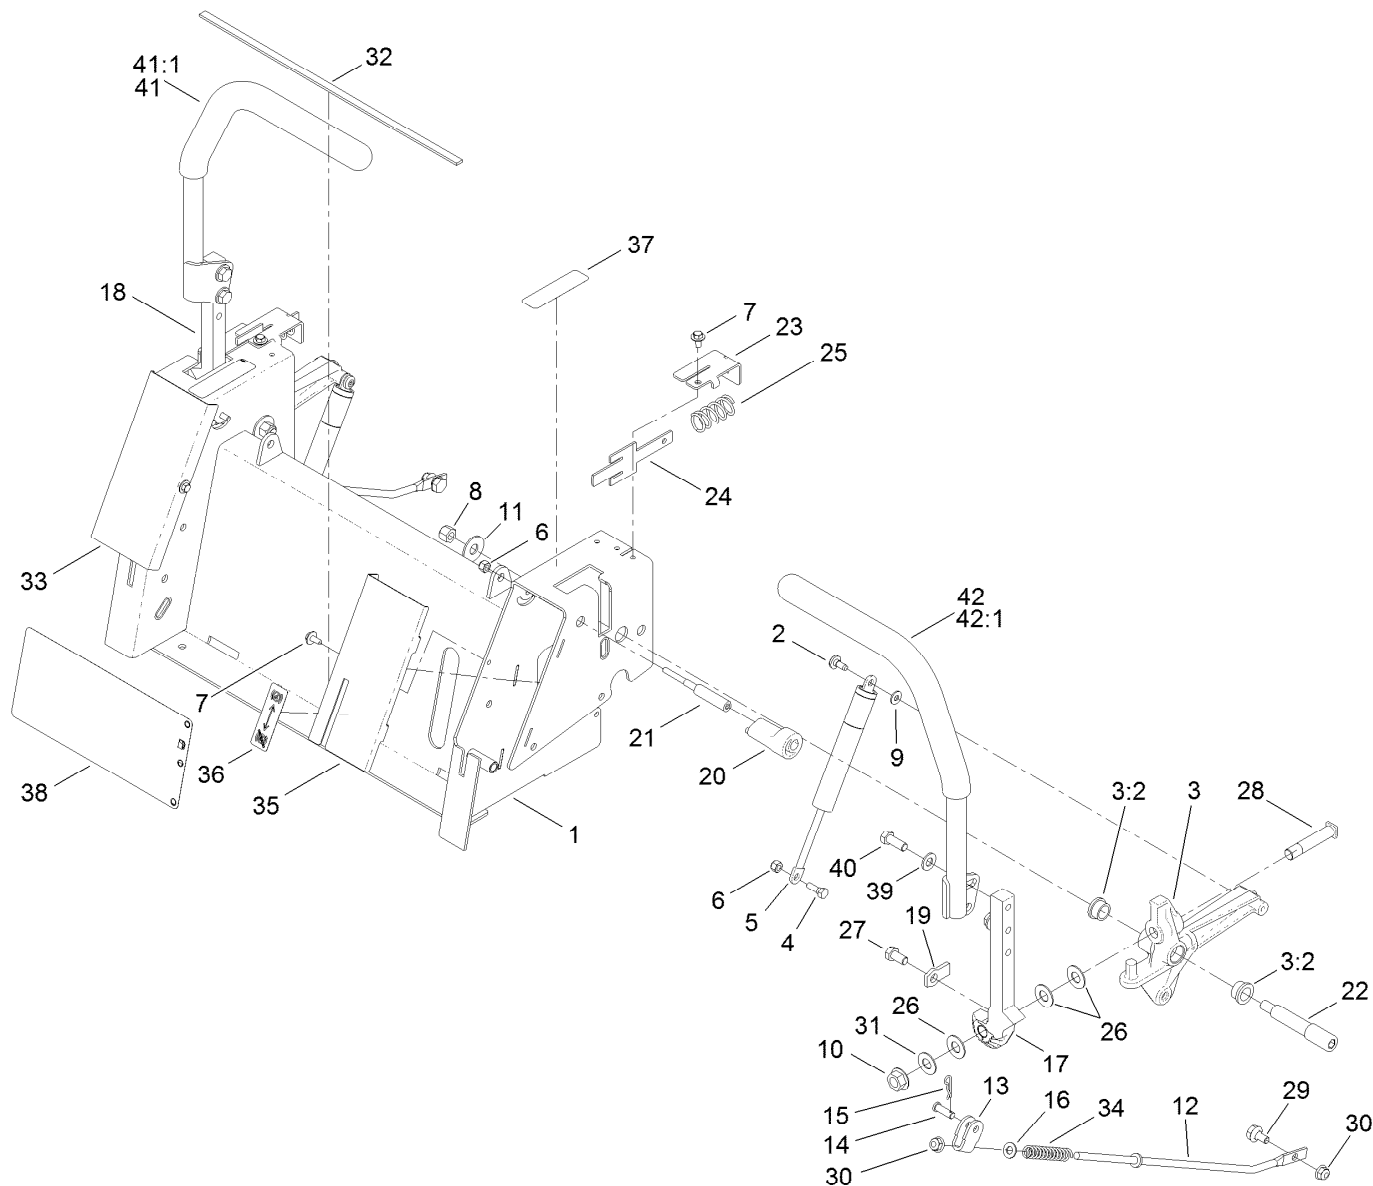

Motion Control Assembly

Ref.	Part Number	Qty.	Description
1	117-7452-03	1	Control Box ASM
2	112-4004	2	Screw-Shoulder
3	110-6828	2	Activator Arm ASM
3:2	105-3455	2	Bushing
4	106-2214	2	Bolt-Shoulder
5	109-2339	2	Damper-Control, Motion
6	3296-42	4	Nut-Lock, NI
7	46-8560	4	Screw-HHFTF
8	3296-48	2	Nut-Lock, NI
9	119-8952	2	Washer
10	32128-23	2	Nut-HF
11	3256-5	2	Washer-Flat
12	117-7422	2	Rod-Control
13	117-7423	2	Bracket-Control
14	1-808280	2	Pin-Clevis
15	1-806003	2	Pin-Cotter, Hair
16	3256-23	2	Washer-Flat
17	110-6783-05	1	Arm-Actuator, LH
18	110-6782-05	1	Arm-Actuator, RH
19	115-5023	2	Tab-Stop
20	110-6873	2	Eccentric


Ref.	Part Number	Qty.	Description
21	110-6874	2	Screw-Eccentric
22	110-6875	2	Bolt-Shoulder
23	110-6751	2	Bracket-Return
24	110-6750	2	Plate-Return
25	110-6752	2	Spring-Compression
26	110-6894	6	Washer-Pivot
27	323-4	2	Screw-HH
28	110-6784	2	Bolt-Shoulder
29	37-8771	2	Bolt-Shoulder
30	104-8300	4	Nut-Flange, NI
31	112-9771	2	Washer-Teflon
32	117-7237	1	Strip-Vibration, Anti
33	117-1255-03	1	Cover-Control, RH
34	1-603807	2	Spring-Return, Neutral
35	115-2561-03	1	Cover-Control, LH
36	115-9625	1	Decal
37	99-8936	2	Decal-Control, Motion
38	120-7112	1	Decal
39	3256-24	4	Washer-Flat
40	323-6	4	Screw-HH
41	120-2207	1	RH Lever/Grip ASM

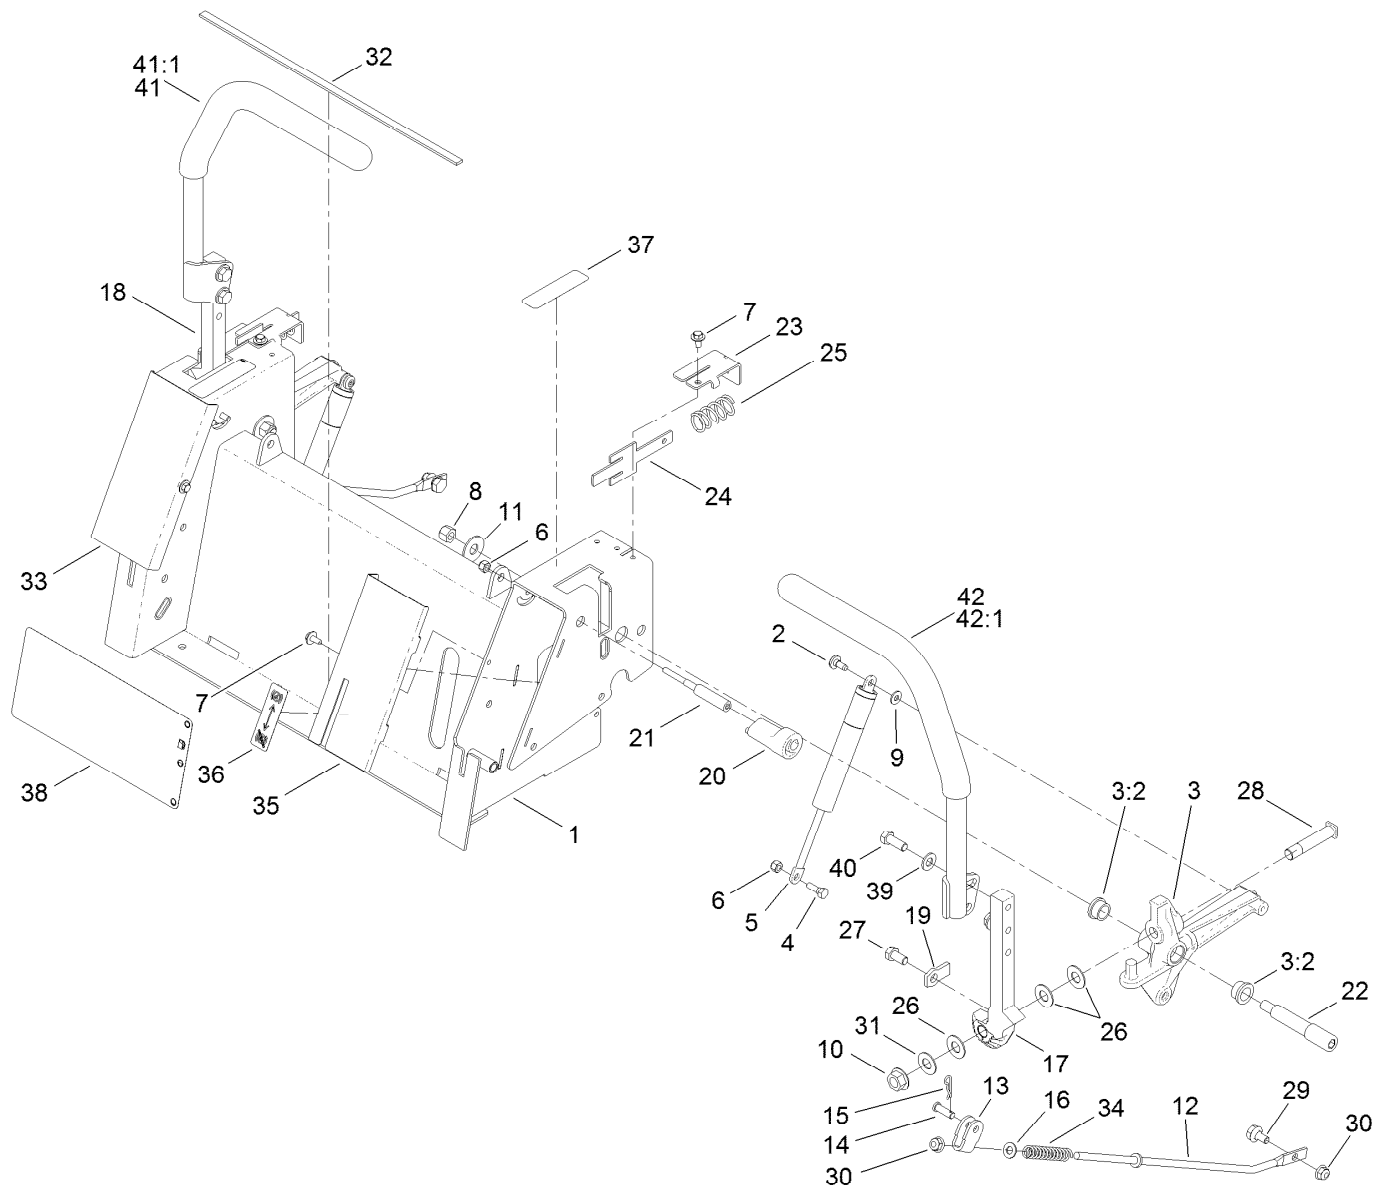

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
41:1	106-9987	1	Grip-Control, Motion


Ref.	Part Number	Qty.	Description
42	120-2208	1	LH Lever/Grip ASM
42:1	106-9987	1	Grip-Control, Motion

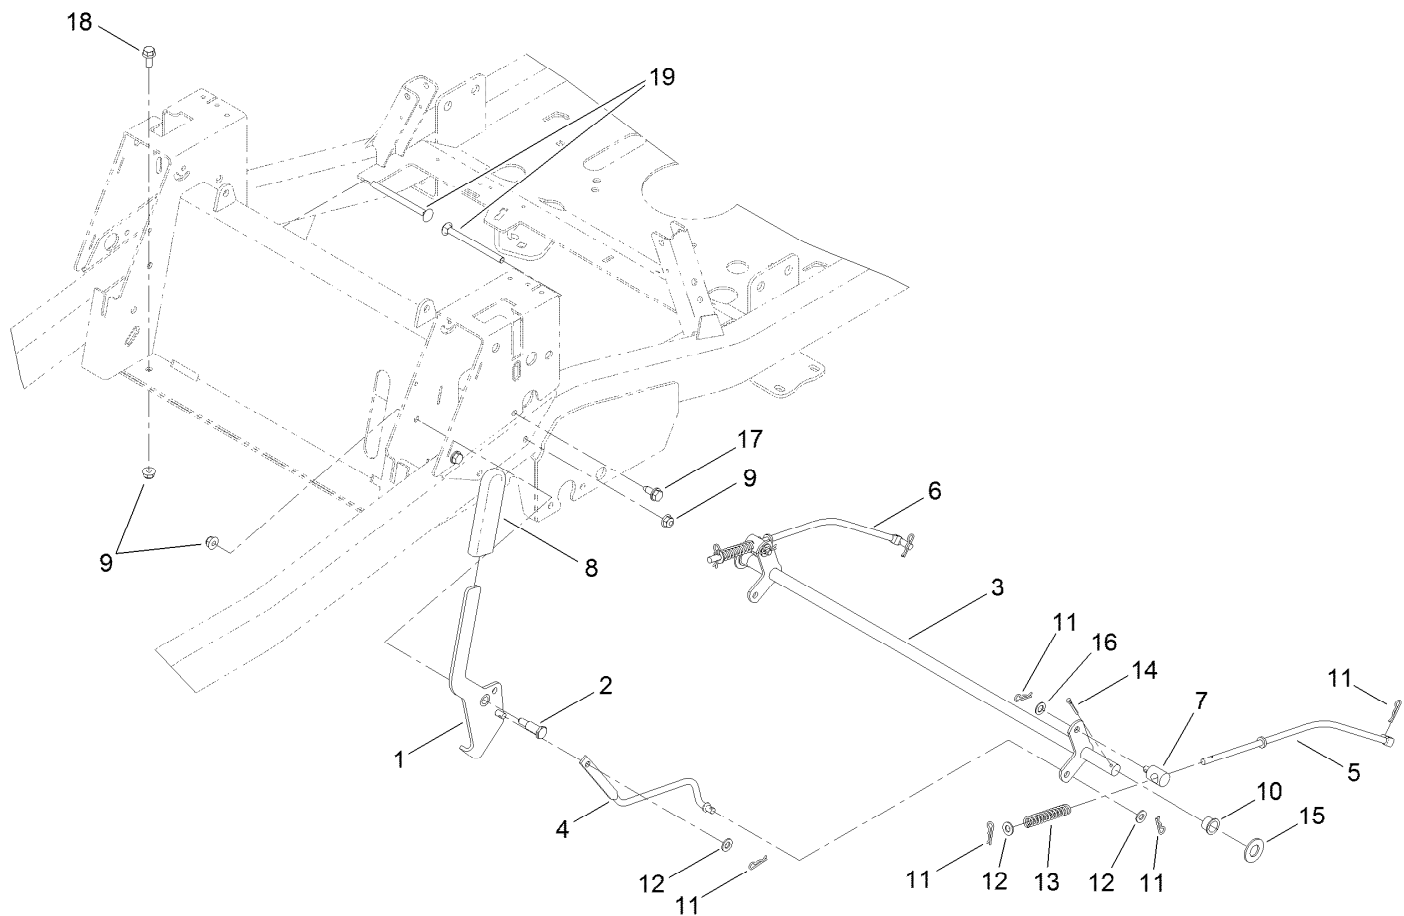

Brake Link Assembly

Ref.	Part Number	Qty.	Description
1	119-3460	1	Handle-Brake
2	63-2650	1	Screw-Shoulder
3	115-5071-03	1	Brake-Bellcrank
4	115-5074	1	Link-Brake
5	117-7322	1	Rod-Brake, LH
6	117-7323	1	Rod-Brake, RH
7	115-9681	2	Fitting-Rod
8	1-633268	1	Grip-Lever
9	104-8300	5	Nut-Flange, NI
10	256-292	2	Bushing-Flange, NI

Ref.	Part Number	Qty.	Description
11	1-806003	8	Pin-Cotter, Hair
12	3256-23	4	Washer-Flat
13	1-603807	2	Spring-Return, Neutral
14	3272-11	2	Pin-Cotter
15	3256-27	2	Washer-Flat
16	40-1940	2	Washer
17	32144-70	4	Screw-HWHTF
18	3234-47	2	Screw-HHF
19	106-9758	2	Screw-CARR

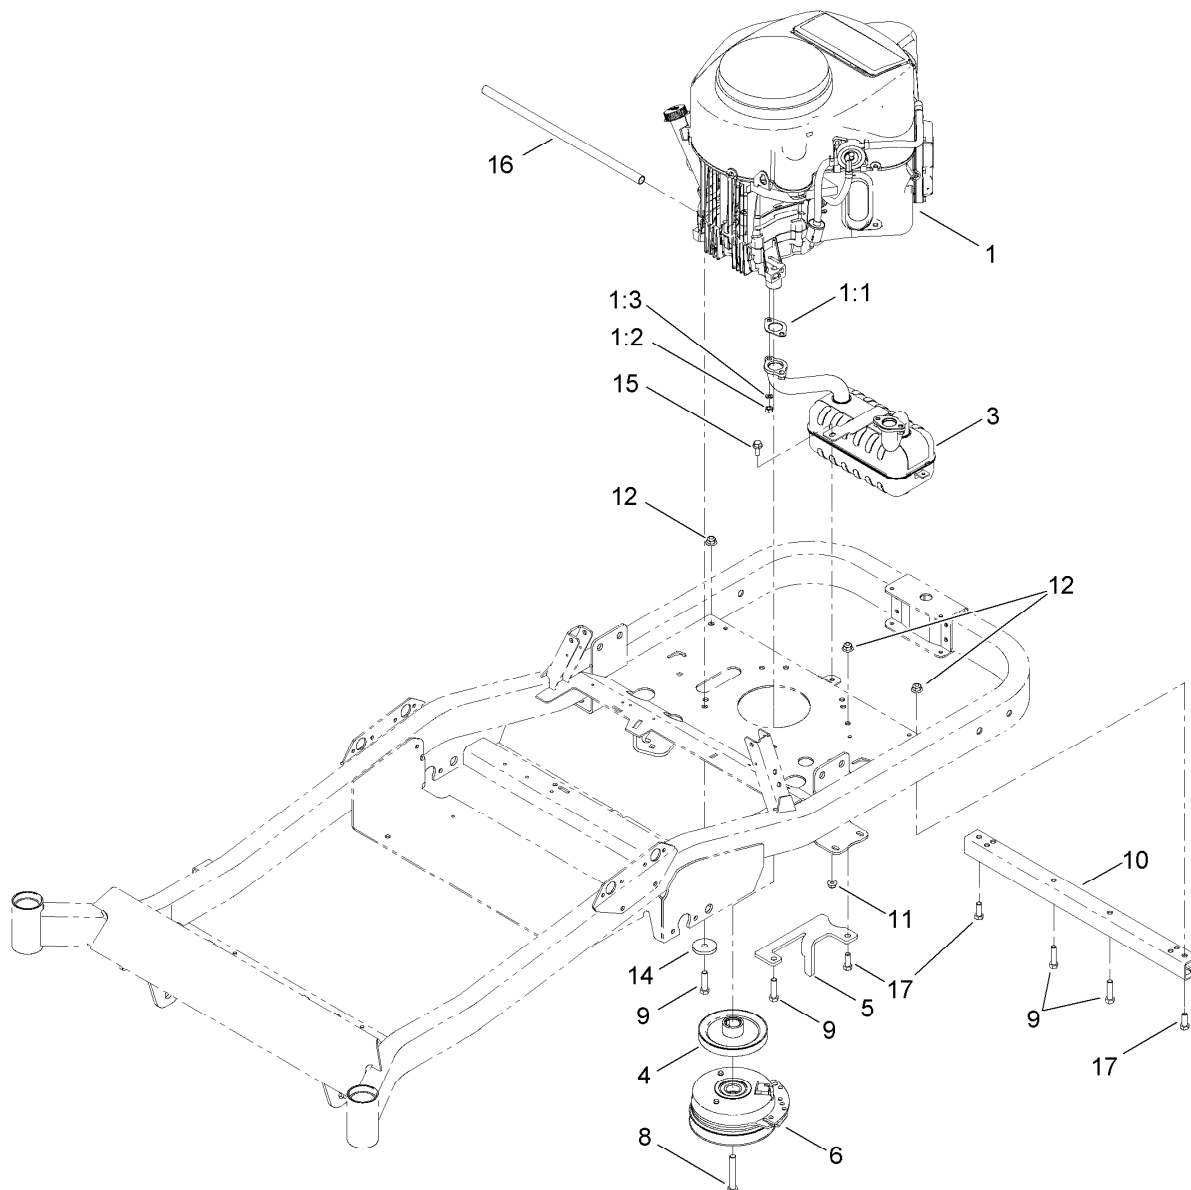


Engine and Clutch Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fr651V-S10-R ●■
1:1	1-653313	2	Gasket-Exhaust
1:2	114-3549	4	Nut
1:3	114-3550	4	Washer-Lock, Spring
3	117-7465	1	Muffler-Kawasaki Twin
4	115-2568	1	Pulley-Engine
5	117-7344-03	1	Bracket-Stop, PTO
6	119-8941	1	Clutch-PTO

Ref.	Part Number	Qty.	Description
8	3212-13	1	Screw-HH
9	323-50	4	Bolt-HH
10	117-7335-03	1	Tube-Stiffener
11	104-8300	1	Nut-Flange, NI
12	104-8301	3	Nut-Flange, NI
14	110-9981	1	Washer-Plain
15	3234-47	1	Screw-HHF
16	106-7022	1	Tube-Drain, Oil
17	323-6	3	Screw-HH


● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

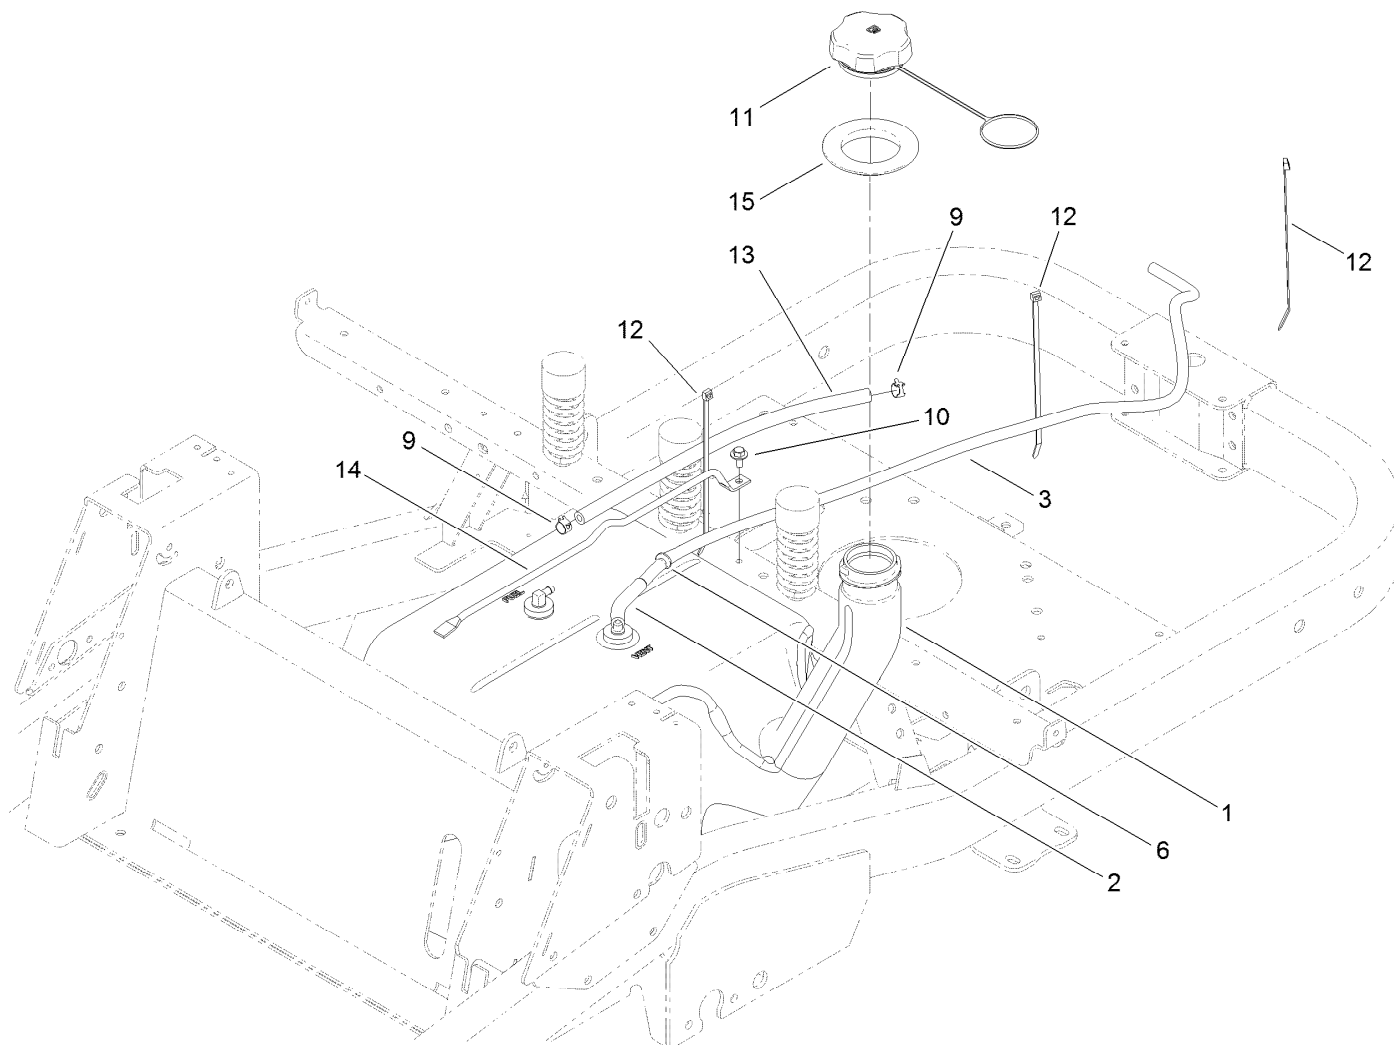


Fuel Delivery Assembly

Ref.	Part Number	Qty.	Description
1	117-7352	1	Multi Layer Fuel Tank ASM
2	114-3765	1	Hose-Fuel
3	51-3212	1	Hose-Fuel
6	121-0743	1	Adapter-Orifice
9	2412-98	2	Clamp-Hose
10	46-8560	1	Screw-HHFTF
11	114-0294	1	Cap-Fuel, Ratcheting
12	614249	3	Tie-Cable
13	107-0589	1	Hose-Fuel
14	115-2620	1	Rod-Tank, Gas
15	117-1298	1	Seal-Tank

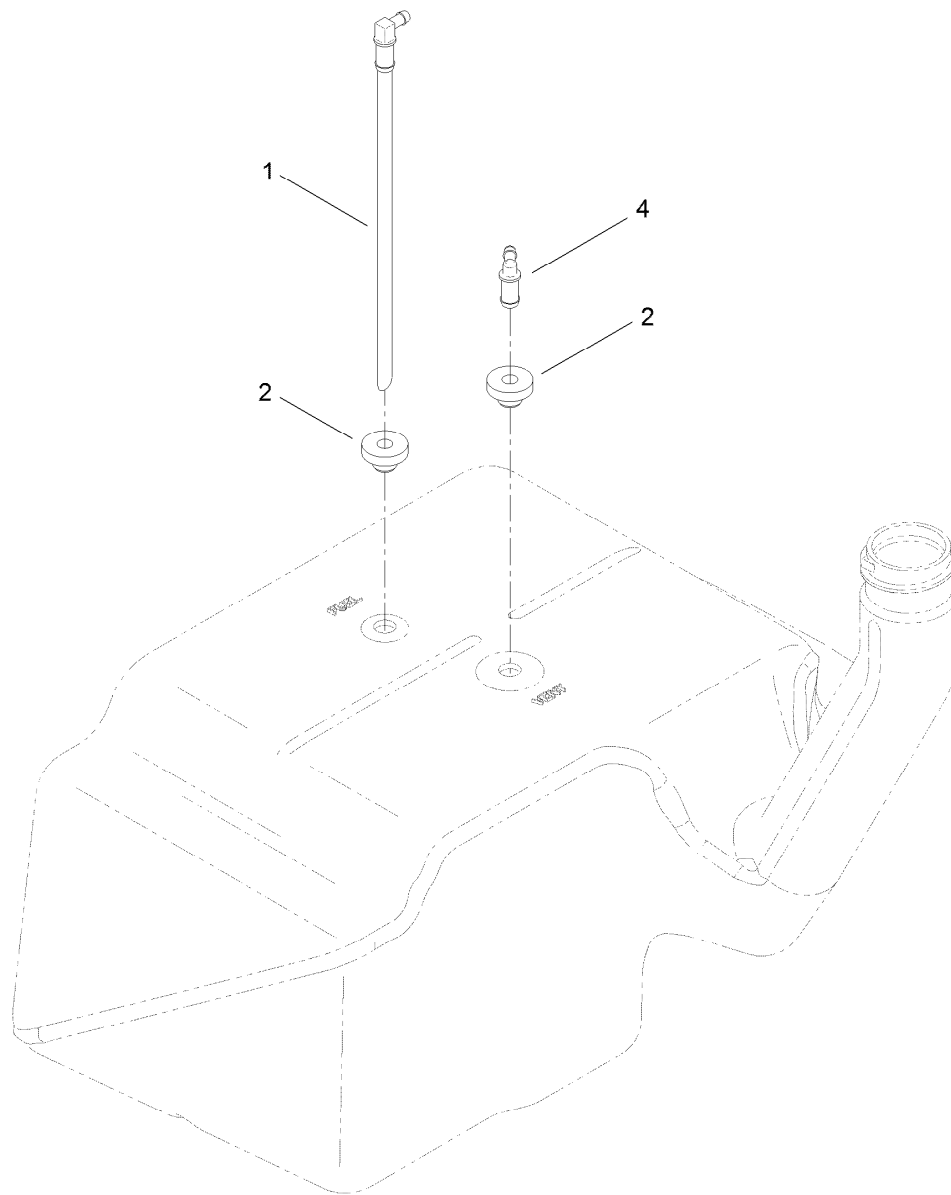

Multi Layer Fuel Tank Assembly No. 117-7352


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-0793	1	Connector-Elbow, 90 DEG
2	46-6560	2	Bushing
4	117-7400	1	Fitting-Plastic

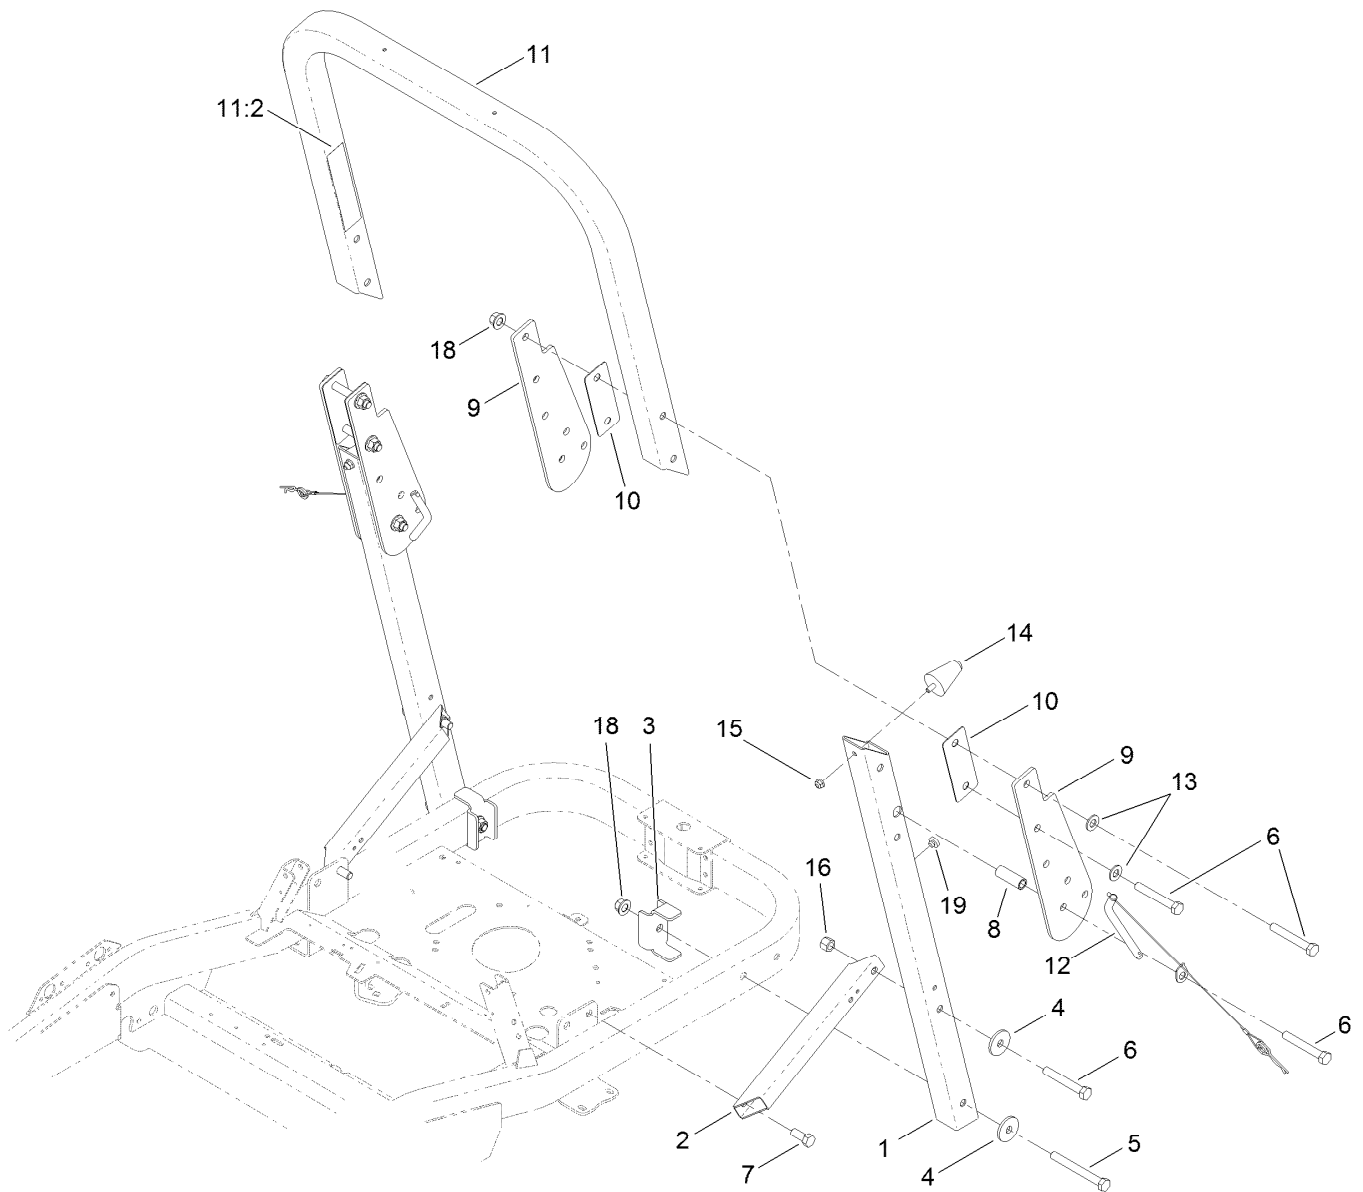

Roll-Over Protection System Assembly

Ref.	Part Number	Qty.	Description
1	121-2986-03	2	Tube-ROPS, Lower
2	115-4962-03	2	Tube-Support, ROPS
3	115-4963-03	2	Bracket-Reinforcing
4	84-1560	4	Washer-Thrust
5	325-18	2	Screw-HH
6	325-14	8	Screw-HH
7	325-5	2	Screw-HH
8	109-6653	2	Spacer
9	119-8911-03	4	Bracket-Pivot, ROPS
10	119-8926-03	4	Spacer-ROPS


Ref.	Part Number	Qty.	Description
11	119-8991	1	Upper ROPS ASM
11:2	107-3069	1	Decal-Warning, Folding ROPS
12	119-8970	2	Pin-ROPS
13	3256-26	4	Washer-Flat
14	114-1925	2	Bumper-Rubber
15	104-8300	2	Nut-Flange, NI
16	119-8969	2	Nut-Hex
18	99-5107	10	Nut-Lock
19	1-513658	2	Bumper

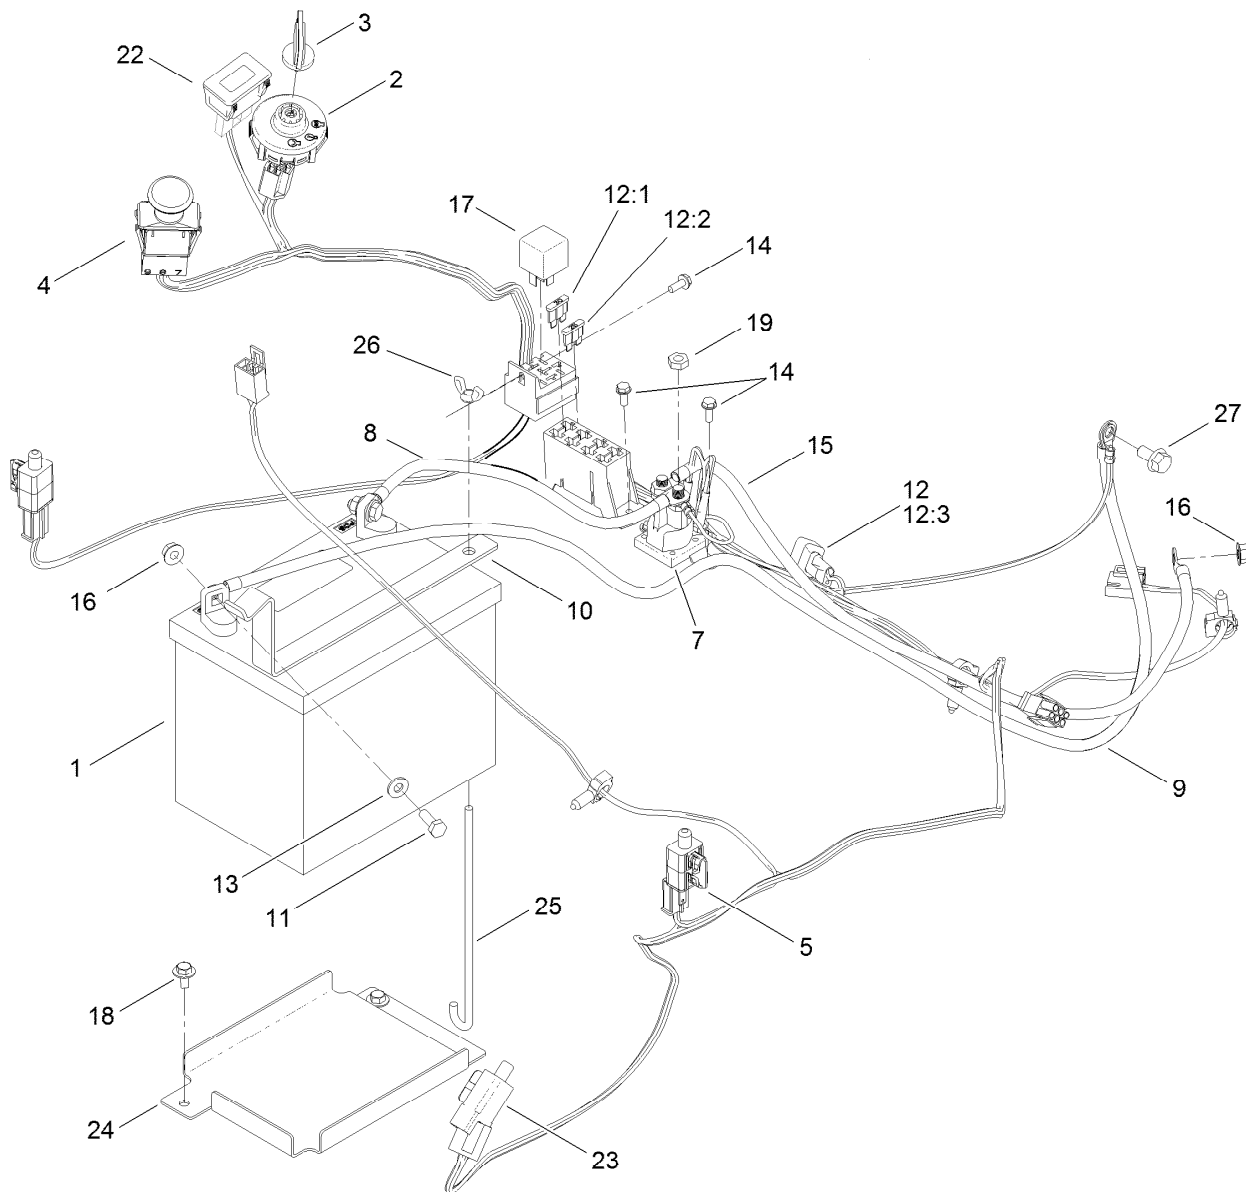

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	105-1692	1	Battery
2	117-2221	1	Switch-Ignition
3	63-8360	1	Key-Ignition
4	103-5221	1	Switch-PTO
5	110-6765	2	Switch-Single Pole No
7	117-1197	1	Solenoid
8	117-5342	1	Cable-Battery, Positive
9	117-7240	1	Cable-Battery, Negative
10	117-7313-01	1	Strap-Battery
11	321-4	2	Screw-HH
12	121-3015	1	Harness-Wire
12:1	109103	1	Fuse-Blade, 30 Amp
12:2	109102	1	Fuse-Blade, 25 Amp
12:3	100-4918	1	Diode


Ref.	Part Number	Qty.	Description
13	3256-22	2	Washer-Flat
14	32144-1	5	Screw-Taptite
15	92-6989	1	Wire-21 Inch
16	32128-33	3	Nut-HF
17	98-7249	1	Relay
18	46-8560	2	Screw-HHFTF
19	3220-2	2	Nut-Jam
22	120-2244	1	Hourmeter
23	99-7408	1	Switch-Reverse
24	117-1283-03	1	Tray-Battery
25	1-633651	1	Bolt-Holddown
26	1-543792	1	Wingnut
27	33104-016	1	Screw-HHF

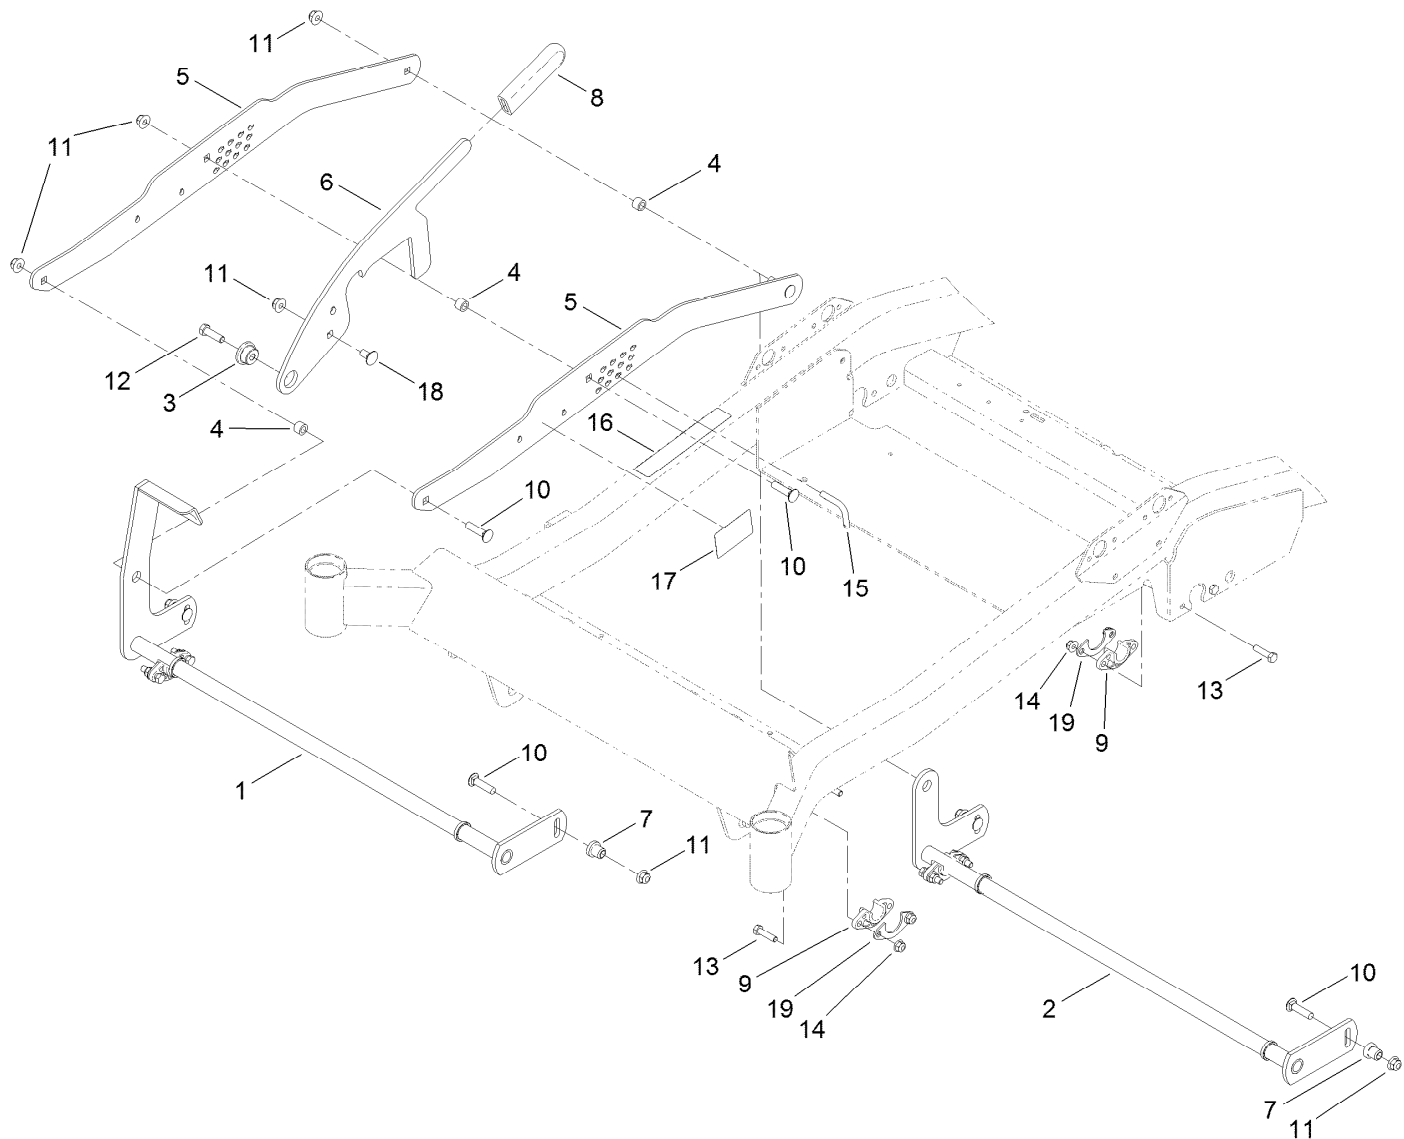

Deck Lift Assembly

Ref.	Part Number	Qty.	Description
1	115-2495-03	1	Pivot-Front
2	115-2498-03	1	Pivot-Rear
3	117-1281	1	Bushing-Mount, HOC
4	115-4986	3	Spacer
5	115-2503-03	2	Plate-Lift, Foot
6	115-2504	1	Plate-Stop, HOC
7	65-5950	4	Bushing-Pulley
8	1-633268	1	Grip-Lever
9	115-5065	4	Bushing-Flange
10	3231-4	7	Screw-CARR


Ref.	Part Number	Qty.	Description
11	104-8301	8	Nut-Flange, NI
12	323-7	1	Screw-HH
13	322-6	8	Screw-HH
14	104-8300	8	Nut-Flange, NI
15	117-1280	1	Pin-Keyed
16	115-9644	1	Decal-HOC
17	117-5344	1	Decal-Lock, Deck
18	3231-1	1	Screw-CARR
19	116-2887	4	Gusset-Deck Lift

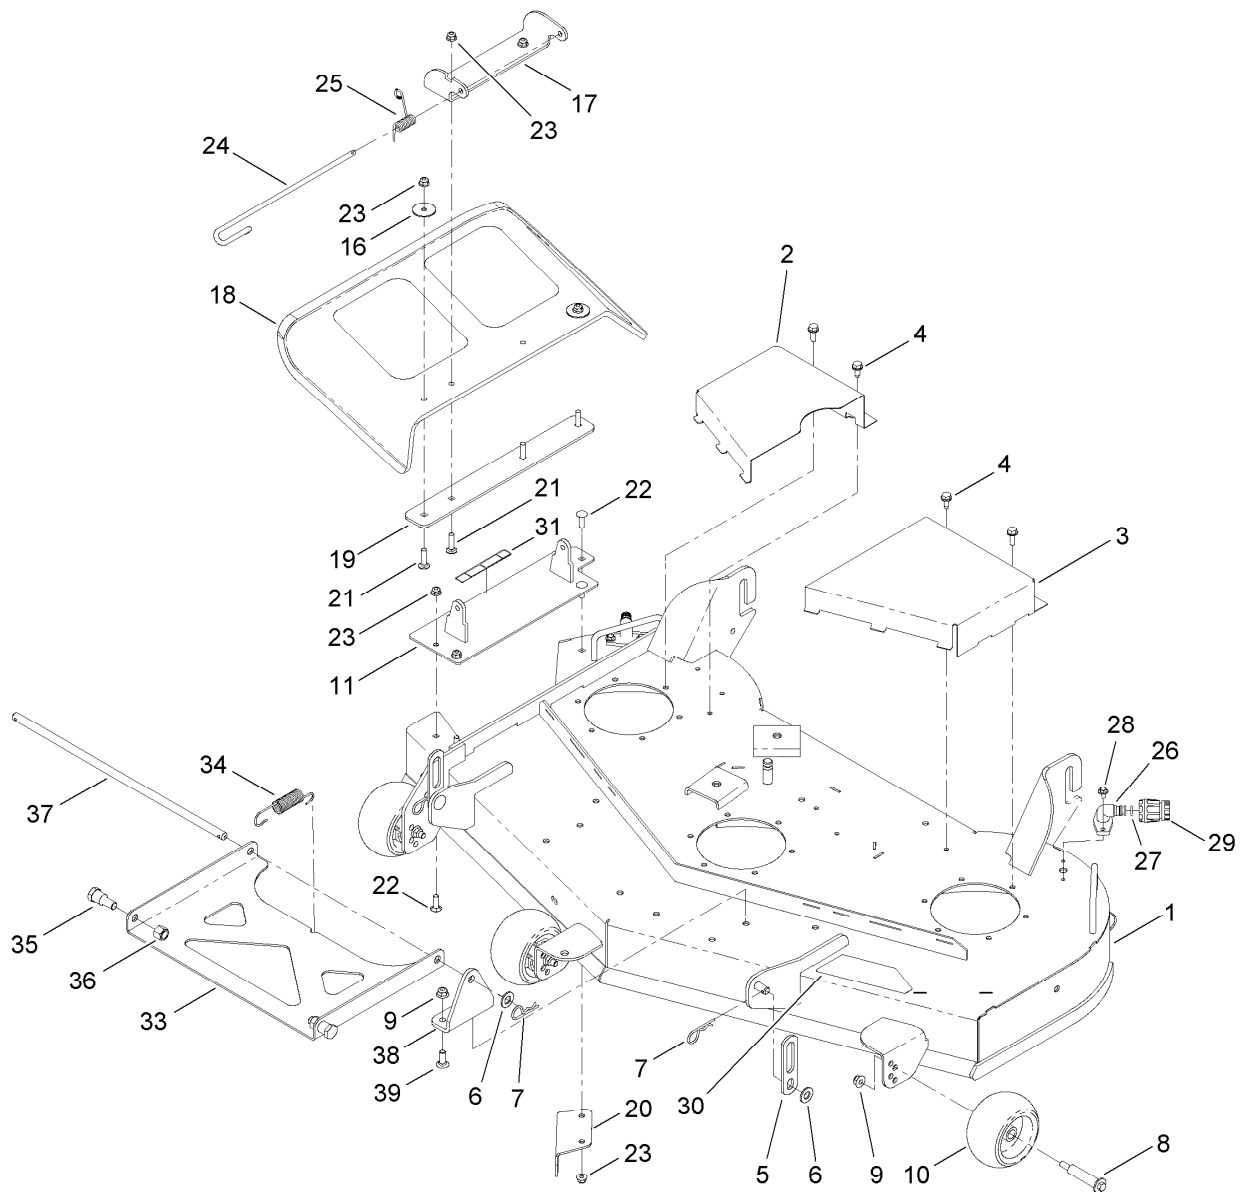

48 Inch Deck Assembly


Ref.	Part Number	Qty.	Description
1	120-7116	1	48 Inch Deck And Decal ASM
2	117-7396-03	1	Cover-Belt, RH
3	117-7397-03	1	Cover-Belt, LH
4	32144-70	2	Screw-HWHTF
5	119-8949	4	Link-Lift
6	3256-26	6	Washer-Flat
7	1-806005	6	Pin-Hair
8	112-3977	3	Bolt-Shoulder
9	104-8301	7	Nut-Flange, NI
10	1-603299	3	Roller-Scalp, Anti
11	117-7367-03	1	Plate ASM
16	3256-68	2	Washer-Flat
17	114-1648-03	1	Bracket-Deflector, Upper
18	117-1270	1	Deflector-Molded
19	115-5048-03	1	Plate-Deflector
20	117-7418-03	1	Baffle-Cutoff
21	3230-3	4	Screw-CARR

Ref.	Part Number	Qty.	Description
22	3230-22	4	Screw-CARR
23	104-8300	8	Nut-Flange, NI
24	109-8854	1	Pin-Chute
25	121-2983	1	Spring-Torsion
26	95-2747	2	Fitting-Washout
27	46-6290	2	O-Ring, Seal
28	46-8560	4	Screw-HHFTF
29	95-3270	1	Connector-Hose
30	119-3382	1	Decal-Deck
31	93-7009	1	Decal-Danger, Deflector
33	115-5027-01	1	Pan-Pivot, Deck
34	115-9652	1	Spring-Extension
35	94-5823	2	Bolt-Shoulder, HH
36	3296-23	2	Nut-Lock, NI
37	115-5030	1	Rod-Deck, Pivot
38	119-8946-01	2	Bracket-Pivot, Front
39	3231-22	4	Screw-CARR

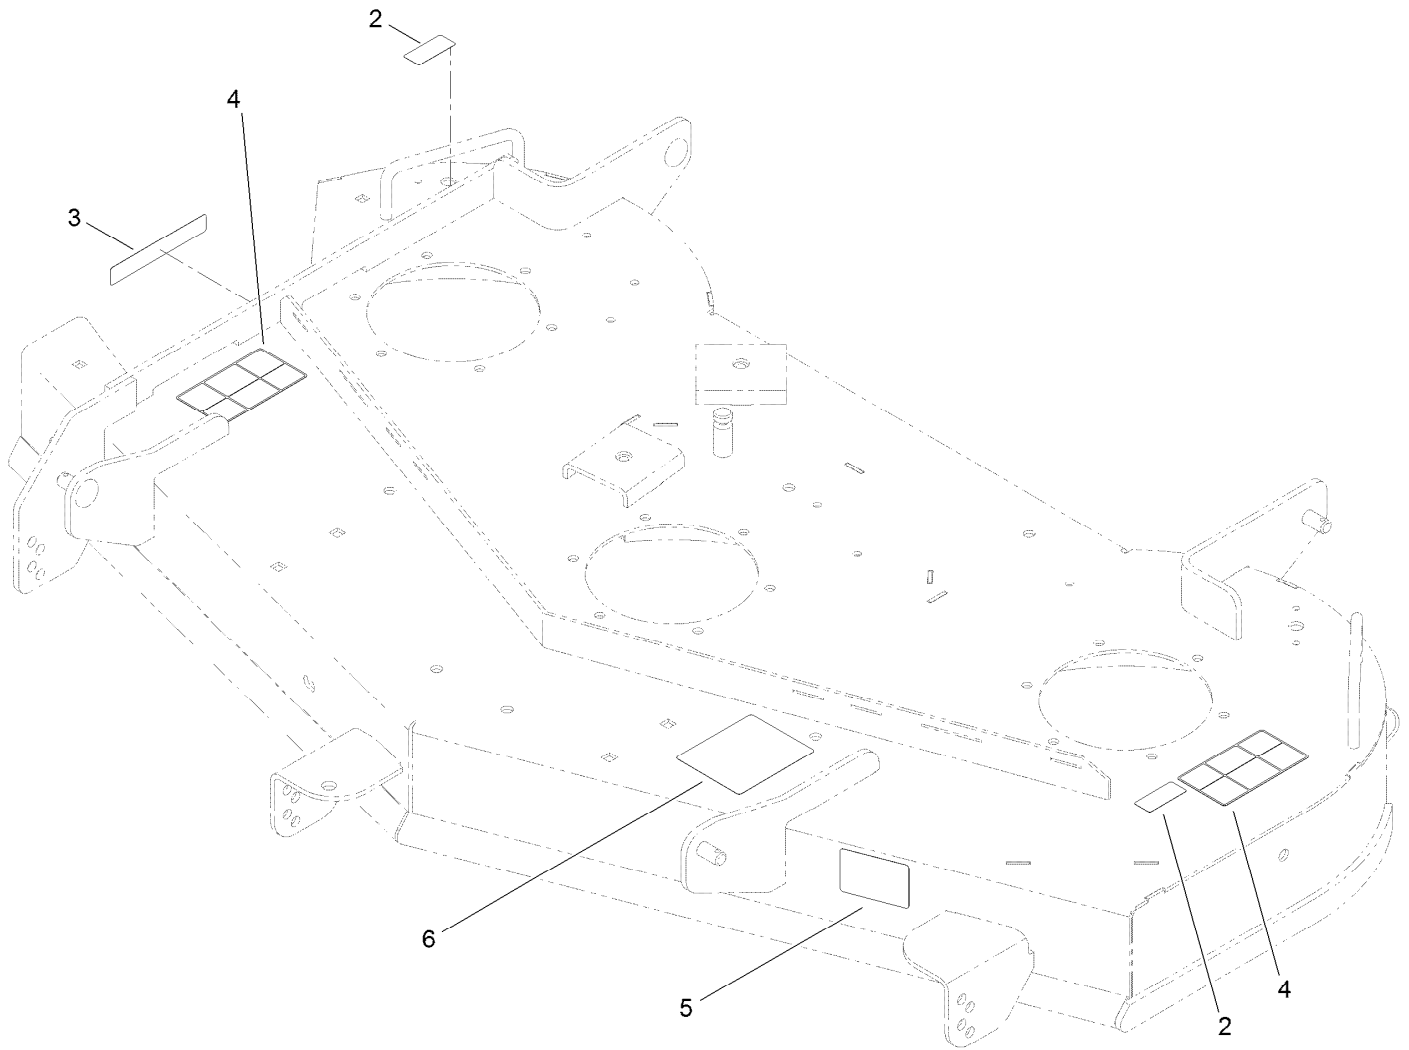

48 Inch Deck Decal Assembly No. 120-7116

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	114-1606	2	Decal-Danger, Pulley
3	93-7009	1	Decal-Danger, Deflector
4	110-6691	2	Decal-Danger
5	112-9840	1	Decal-Scalp, Anti
6	117-1194	1	Decal-Routing, Belt

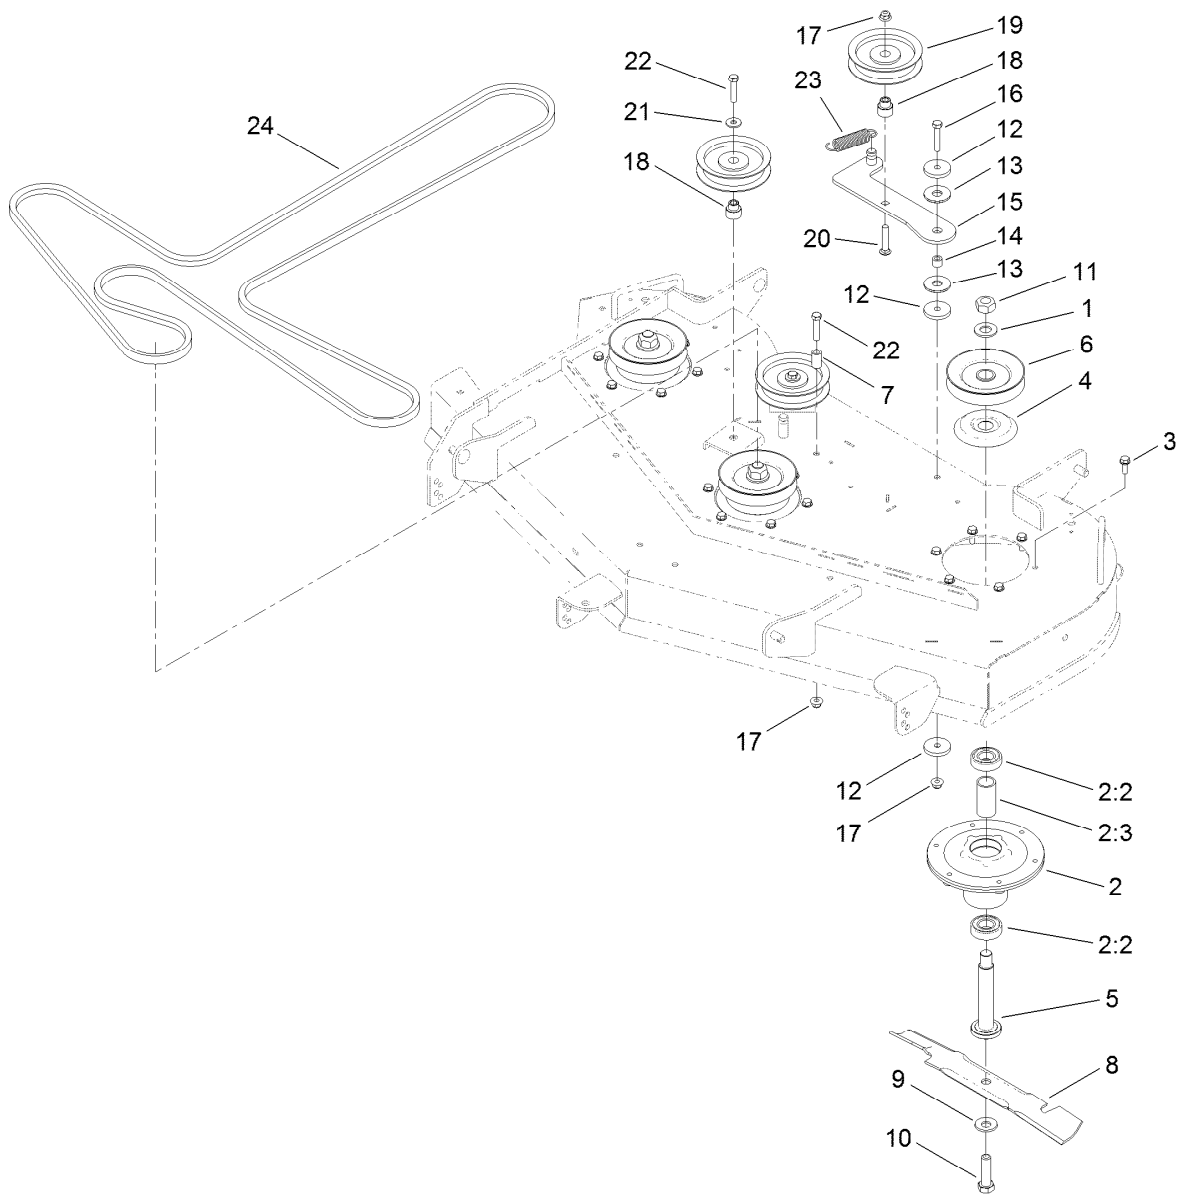


48 Inch Deck Belt and Hi-Flo Blade Assembly

Ref.	Part Number	Qty.	Description
1	7-4150	3	Washer
2	120-5477	3	Spindle ASM
2:2	116-0720	2	Bearing-Ball
2:3	115-2641	1	Spacer-Bearing
3	32144-41	18	Screw-Taptite
4	117-7210	3	Shield-Bearing
5	115-2642	3	Shaft-Spindle
6	117-7326	3	Pulley
7	1-603401	1	Spacer-Fender
8	117-7277-03	3	Blade-Hi Flo, 16.50In
9	22-8520	3	Washer-Belleville
10	51-4060	3	Screw-Blade
11	3219-7	3	Nut-Hex


Ref.	Part Number	Qty.	Description
12	110-9981	3	Washer-Plain
13	114-0463	2	Washer-Friction, Composite
14	1-413088	1	Bushing-Lever, Lift
15	115-5054	1	Idler Arm ASM
16	323-10	1	Screw-HH
17	104-8301	3	Nut-Flange, NI
18	115-2577	3	Bushing-Idler
19	116-3626	3	Pulley-Idler
20	3231-6	1	Screw-CARR
21	80-6990	2	Washer-Hardened
22	323-9	3	Screw-HH
23	108-4056	1	Spring-Extension
24	117-7325	1	V-Belt

Seat Assembly

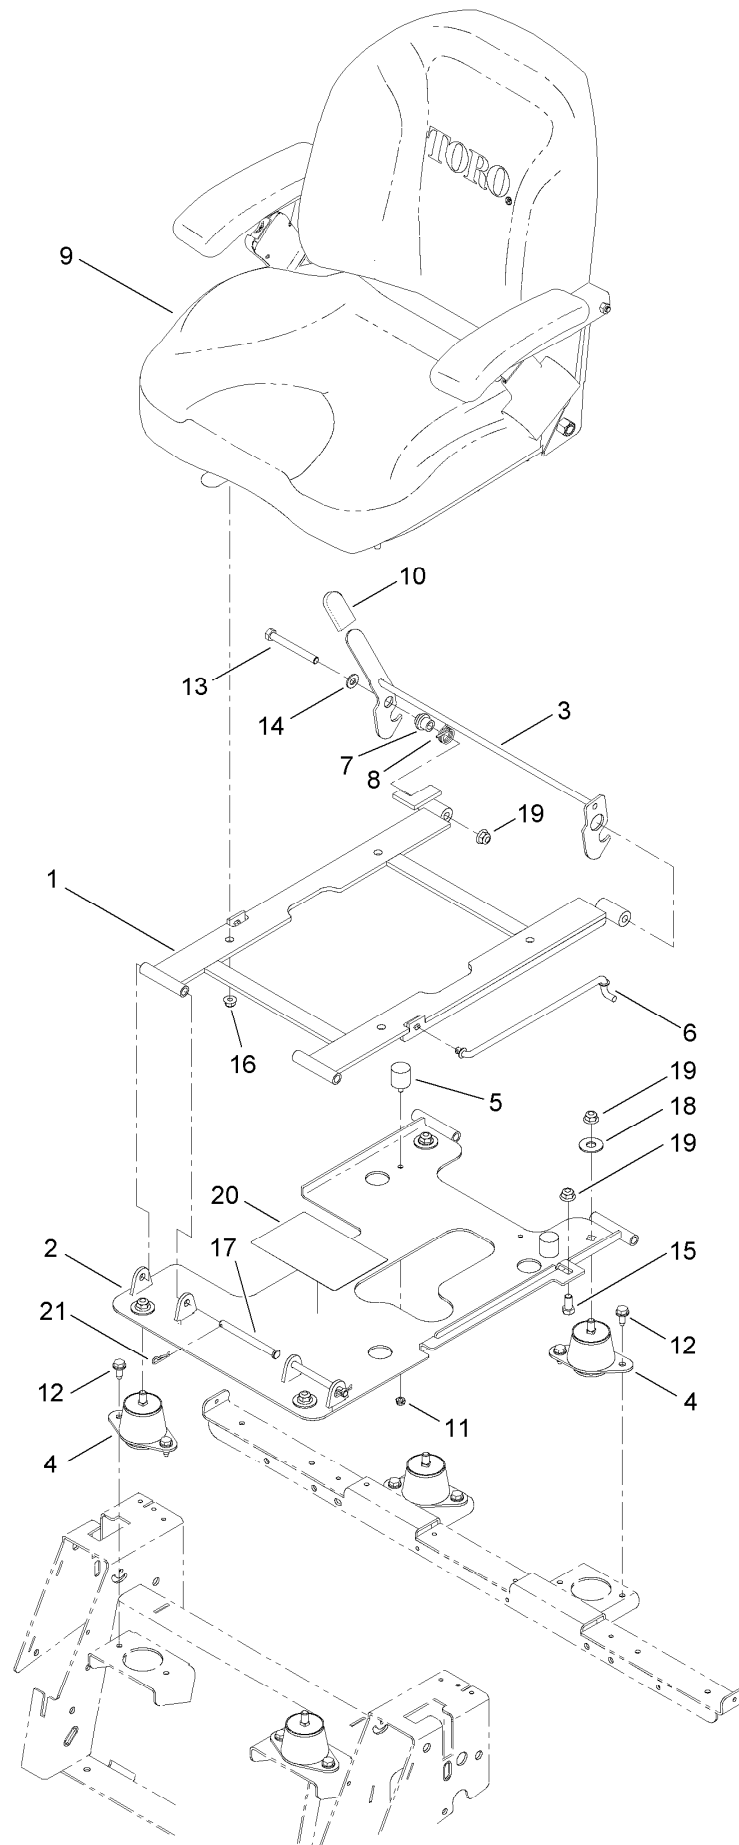


Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-0019-03	1	Seat Pan ASM	12	32144-70	8	Screw-HWHTF
2	117-7449-03	1	Seat Base ASM	13	323-20	1	Screw-HH
3	119-8918	1	Latch ASM	14	3256-24	1	Washer-Flat
4	109-9034	4	Isolator-Seat	15	323-4	1	Screw-HH
5	106-5891	2	Bumper	16	104-8300	4	Nut-Flange, NI
6	116-0070	1	Rod-Prop	17	100-1413	2	Pin-Clevis
7	107-0075	1	Bushing-Latch, Seat	18	3256-5	4	Washer-Flat
8	110-5831	1	Spring-Torsion	19	104-8301	6	Nut-Flange, NI
9	121-5659	1	Seat ASM	20	115-9630	1	Decal-Maintenance
10	103-4434	1	Grip-Lever	21	1-806003	2	Pin-Cotter, Hair
11	3296-56	2	Nut-Lock, NI				

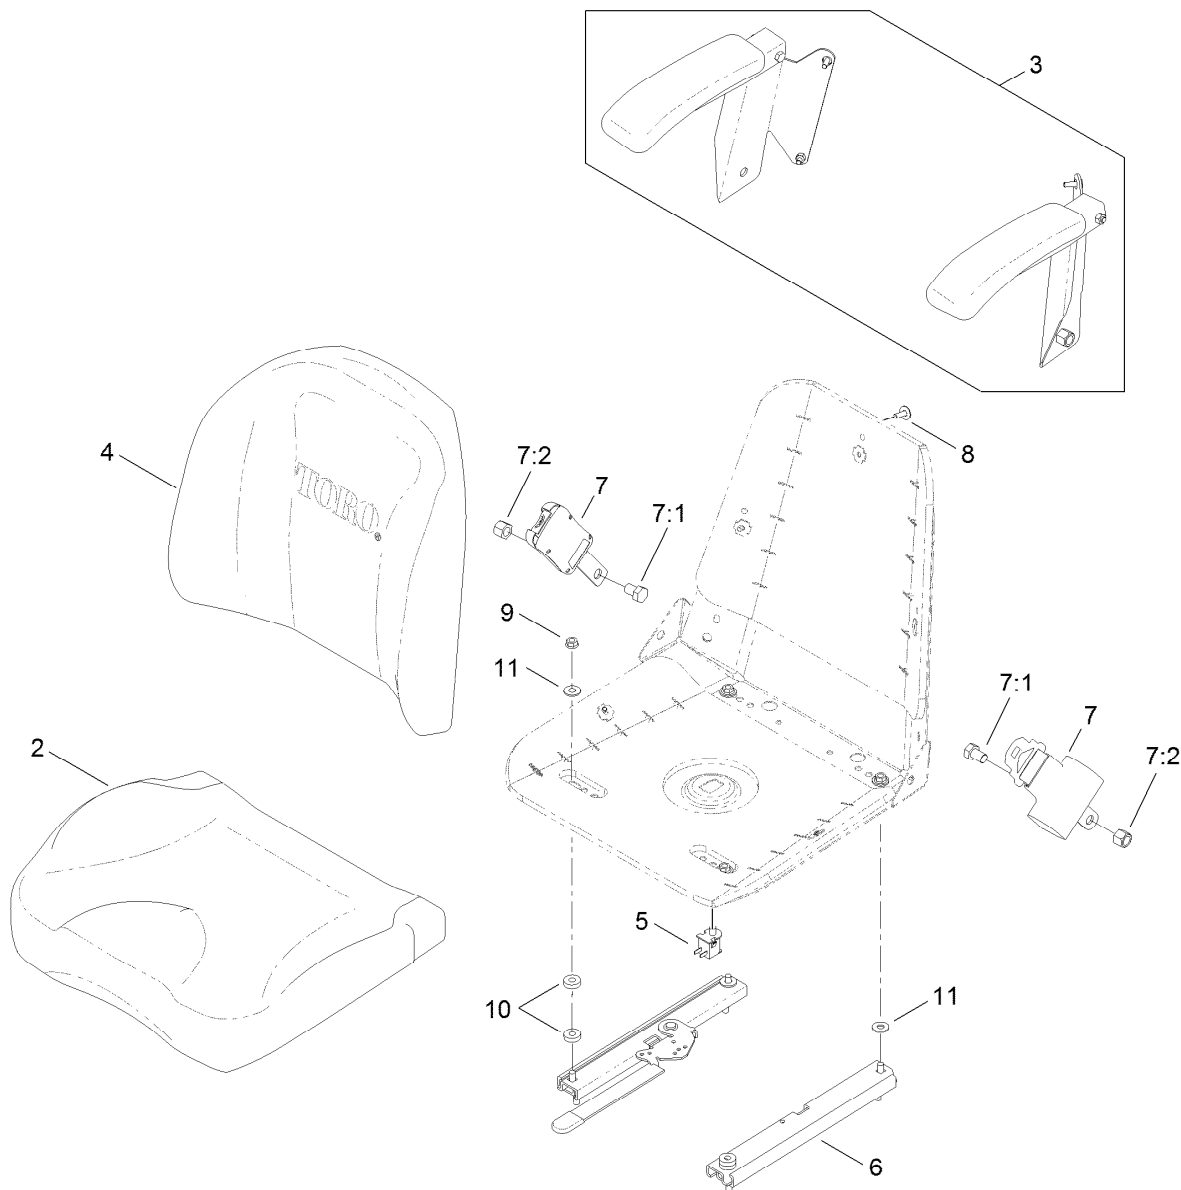


Seat Assembly No. 121-5659

Ref.	Part Number	Qty.	Description
2	121-4751	1	Cushion-Seat, Bottom
3	110-5719	1	Armrest Kit
4	121-4752	1	Cushion-Seat, Back
5	82-2190	1	Switch-Bail
6	121-5711	1	Track ASM
7	116-2981	1	Seat Belt Kit
7:1	325-2	2	Screw-HH
7:2	3296-23	2	Nut-Lock, NI
8	103-8383	7	Bolt-Seat
9	32128-20	4	Nut-HF
10	26-4840	4	Spacer-Pin, Mounting
11	3256-3	6	Washer-Flat

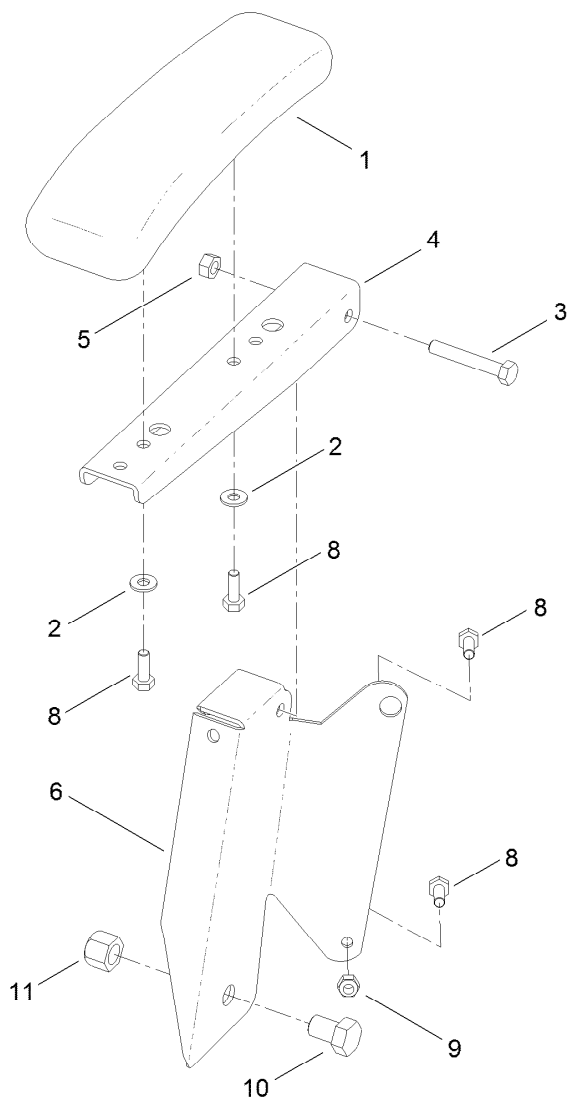

RH ARMREST ASSEMBLY

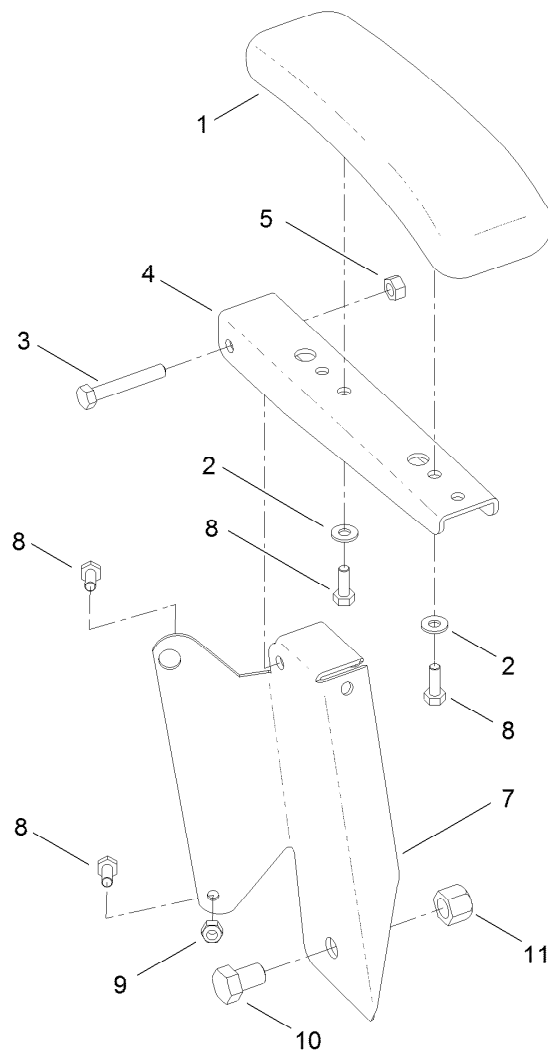

LH ARMREST ASSEMBLY

Armrest Kit Assembly No. 110-5719

Ref.	Part Number	Qty.	Description
1	110-4163	2	Cushion-Rest, Arm
2	3256-22	4	Washer-Flat
3	322-10	2	Screw-HH
4	105-3623	2	Channel-Armrest
5	32153-3	2	Nut-Hex, Side Deform
6	105-3621	1	Bracket-Armrest, RH
7	105-3622	1	Bracket-Armrest, LH
8	321-30	8	Screw-HH
9	3296-42	4	Nut-Lock, NI
10	325-2	2	Screw-HH
11	3296-23	2	Nut-Lock, NI



Count on it.