



**Count on it.**

# Parts Catalog

**Commercial Walk-Behind Mower**  
**Fixed Deck, Pistol Grip, Hydro Drive with**  
**48in TURBO FORCE® Cutting Unit**  
**Model No. 39938—Serial No. 312000001 and Up**



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LPG:** Liquid Propane Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head


**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents

|                                                       |    |
|-------------------------------------------------------|----|
| Engine and Exhaust Assembly . . . . .                 | 4  |
| Fuel System Assembly . . . . .                        | 6  |
| Pump Drive and Engine Pulley Assembly . . . . .       | 7  |
| Hydraulic Wheel Motor Assembly No. 1-603718 . . . . . | 8  |
| LH Hydraulic Pump Assembly No. 116-0942 . . . . .     | 9  |
| RH Hydraulic Pump Assembly No. 116-0943 . . . . .     | 10 |
| Parking Brake Assembly . . . . .                      | 11 |
| Deck Engagement Assembly . . . . .                    | 12 |
| Hydraulic System Assembly . . . . .                   | 13 |
| Lower Control Assembly . . . . .                      | 14 |
| Upper Control Assembly . . . . .                      | 16 |
| Handle Assembly No. 119-6538 . . . . .                | 18 |
| Drive Lever Assembly . . . . .                        | 19 |
| Deck Assembly . . . . .                               | 20 |
| Deck Decal Assembly No. 110-4909 . . . . .            | 21 |
| Deflector Assembly No. 110-0758 . . . . .             | 22 |
| Sheave, Spindle and Blade Assembly . . . . .          | 23 |
| Idler Assembly . . . . .                              | 24 |
| Caster Assembly . . . . .                             | 25 |
| Attachments and Accessories . . . . .                 | 26 |

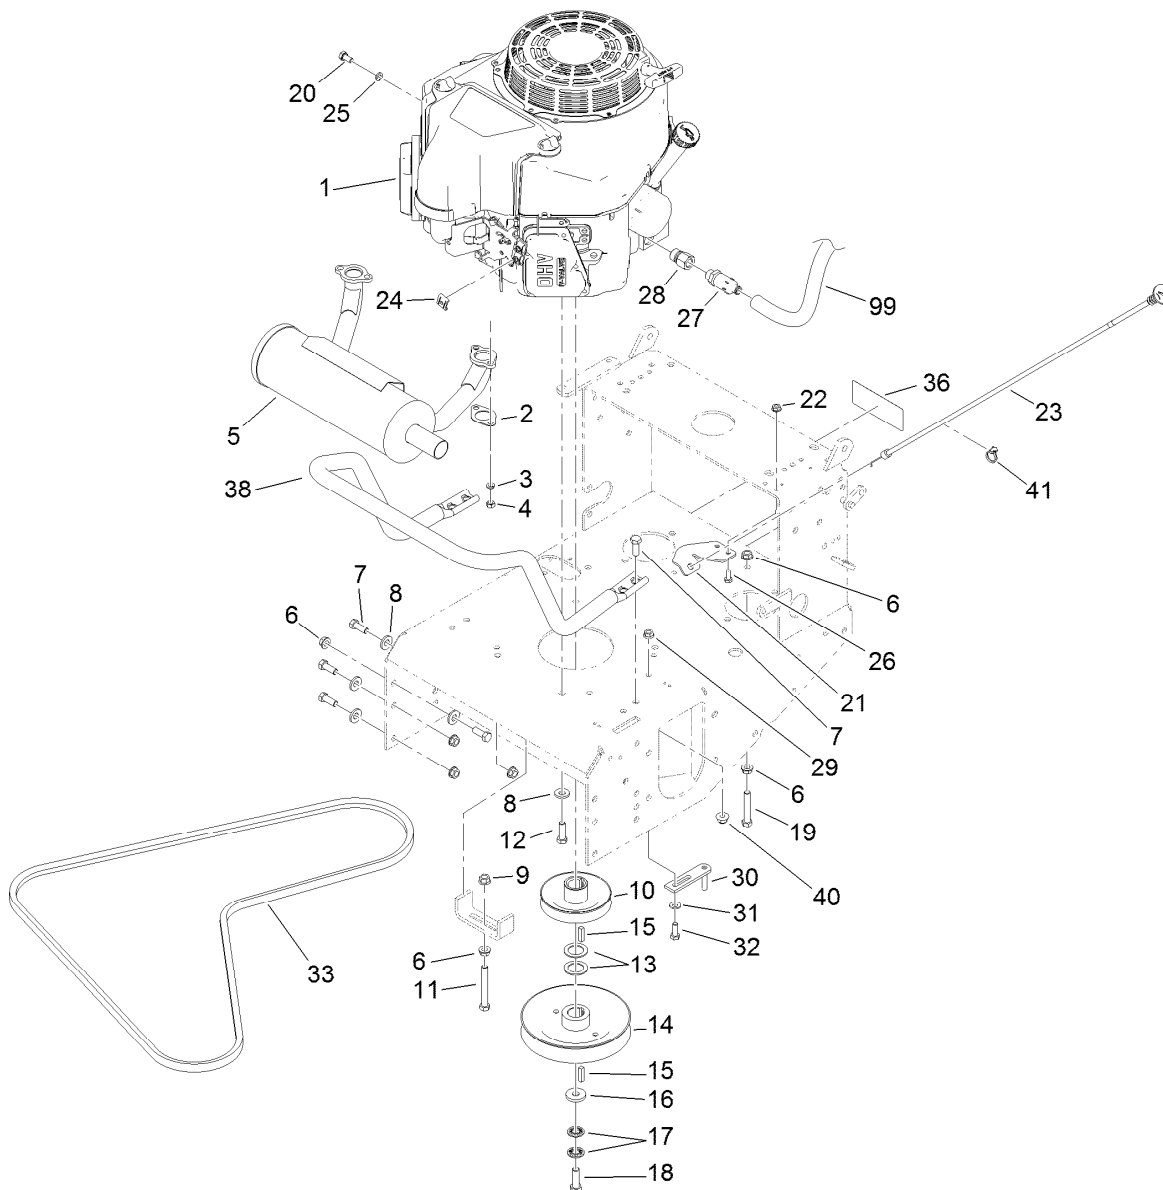


## Engine and Exhaust Assembly

| Ref. | Part Number | Qty. | Description                         |
|------|-------------|------|-------------------------------------|
| 1    |             | 1    | Engine-Kawasaki,<br>Fs481V-As06 ● ■ |
| 2    | 1-653313    | 2    | Gasket-Exhaust                      |
| 3    | 114-3550    | 4    | Washer-Lock, Spring                 |
| 4    | 114-3549    | 4    | Nut                                 |
| 5    | 116-3734    | 1    | Muffler-Horizontal, Offset          |
| 6    | 3290-357    | 11   | Nut-HHF, Whiz                       |
| 7    | 323-6       | 12   | Screw-HH                            |
| 8    | 98-5975     | 12   | Washer-Belleville                   |
| 9    | 32128-21    | 1    | Nut-HF                              |
| 10   | 1-653035    | 1    | Pulley                              |
| 11   | 323-14      | 1    | Screw-HH                            |
| 12   | 323-7       | 4    | Screw-HH                            |
| 13   | 1-523157    | 2    | Washer-Spacer                       |
| 14   | 110-4890    | 1    | Pulley ASM                          |
| 15   | 1-807259    | 2    | Key                                 |
| 16   | 1-373034    | 1    | Washer                              |
| 17   | 1-603610    | 2    | Washer-Spring                       |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 18   | 116-3702    | 1    | Screw-HH             |
| 19   | 323-11      | 1    | Screw-HH             |
| 20   | 33114-016   | 1    | Screw-HH             |
| 21   | 103-1797-01 | 1    | Bracket-Cable, Choke |
| 22   | 32128-33    | 2    | Nut-HF               |
| 23   | 103-1796    | 1    | Cable-Choke          |
| 24   | 81-1690     | 1    | Clamp-Cable          |
| 25   | 3253-4      | 1    | Washer-Lock          |
| 26   | 321-3       | 2    | Screw-HH             |
| 27   | 92-6877     | 1    | Valve-Drain, Oil     |
| 28   | 103-1966    | 1    | Adapter              |
| 29   | 32128-20    | 1    | Nut-HF               |
| 30   | 1-322110    | 1    | Guide-Belt           |
| 31   | 1-303334    | 1    | Washer-Spring        |
| 32   | 322-4       | 1    | Screw-HH             |
| 33   | 110-0543    | 1    | Belt-V               |
| 36   | 98-0776     | 1    | Decal-Caution        |
| 38   | 116-6278-03 | 1    | Guard-Muffler        |

● Not serviced separately

■ Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

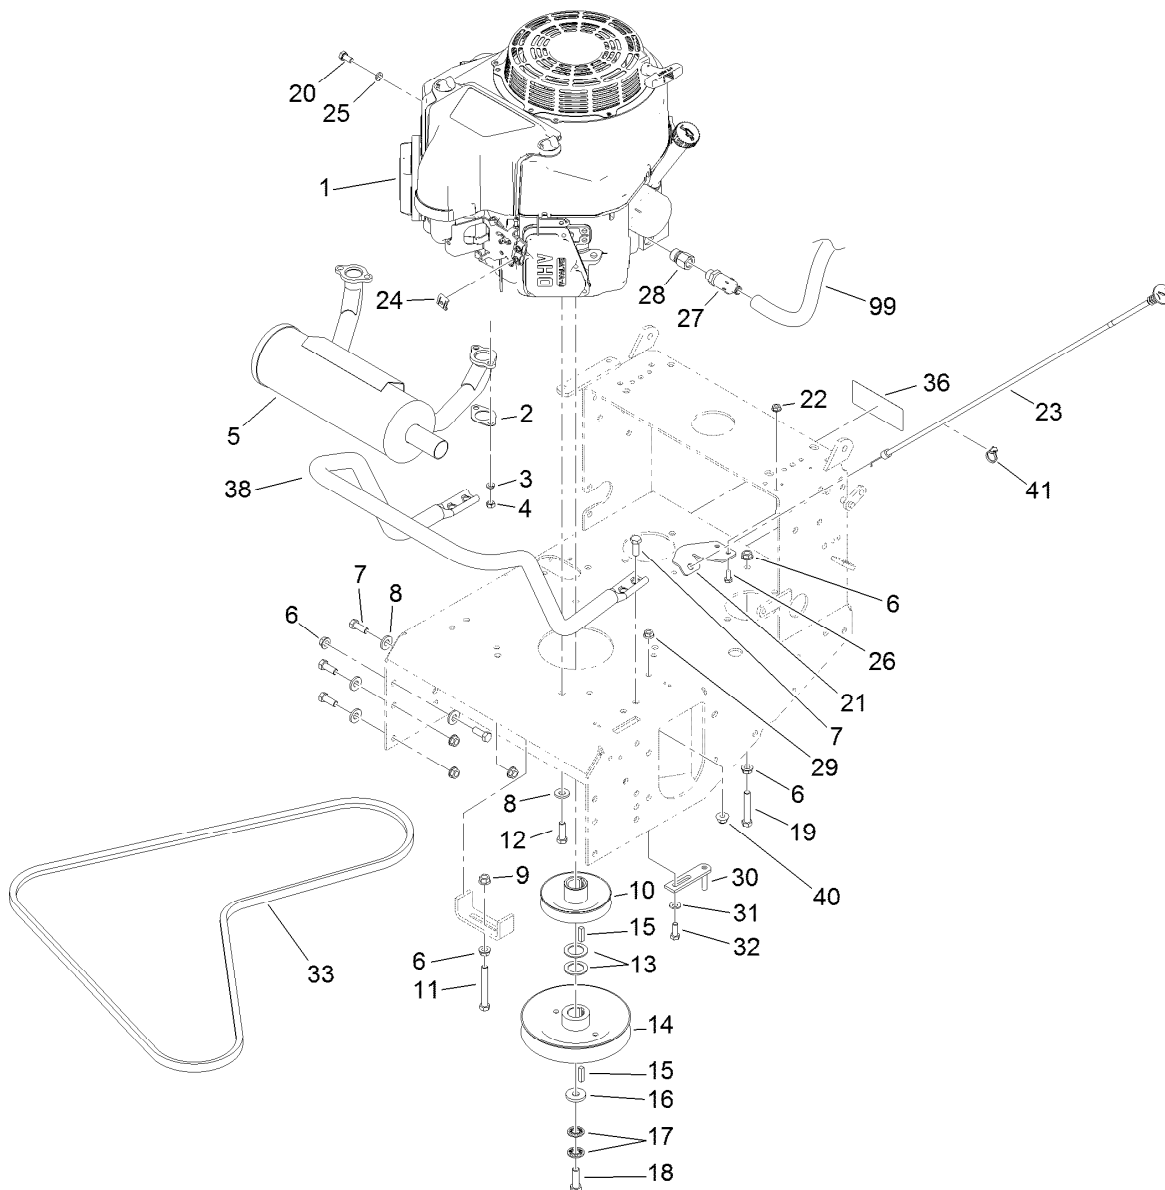

## Engine and Exhaust Assembly (continued)


| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 40   | 104-8301    | 4    | Nut-Flange, NI |

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 41   | 1-303287    | 1    | Tie-Cable       |
| 99   | 103-1964    | 1    | Hose-Drain, Oil |

● Not serviced separately

■ Obtain parts from [www.kawpowerpc.com](http://www.kawpowerpc.com)




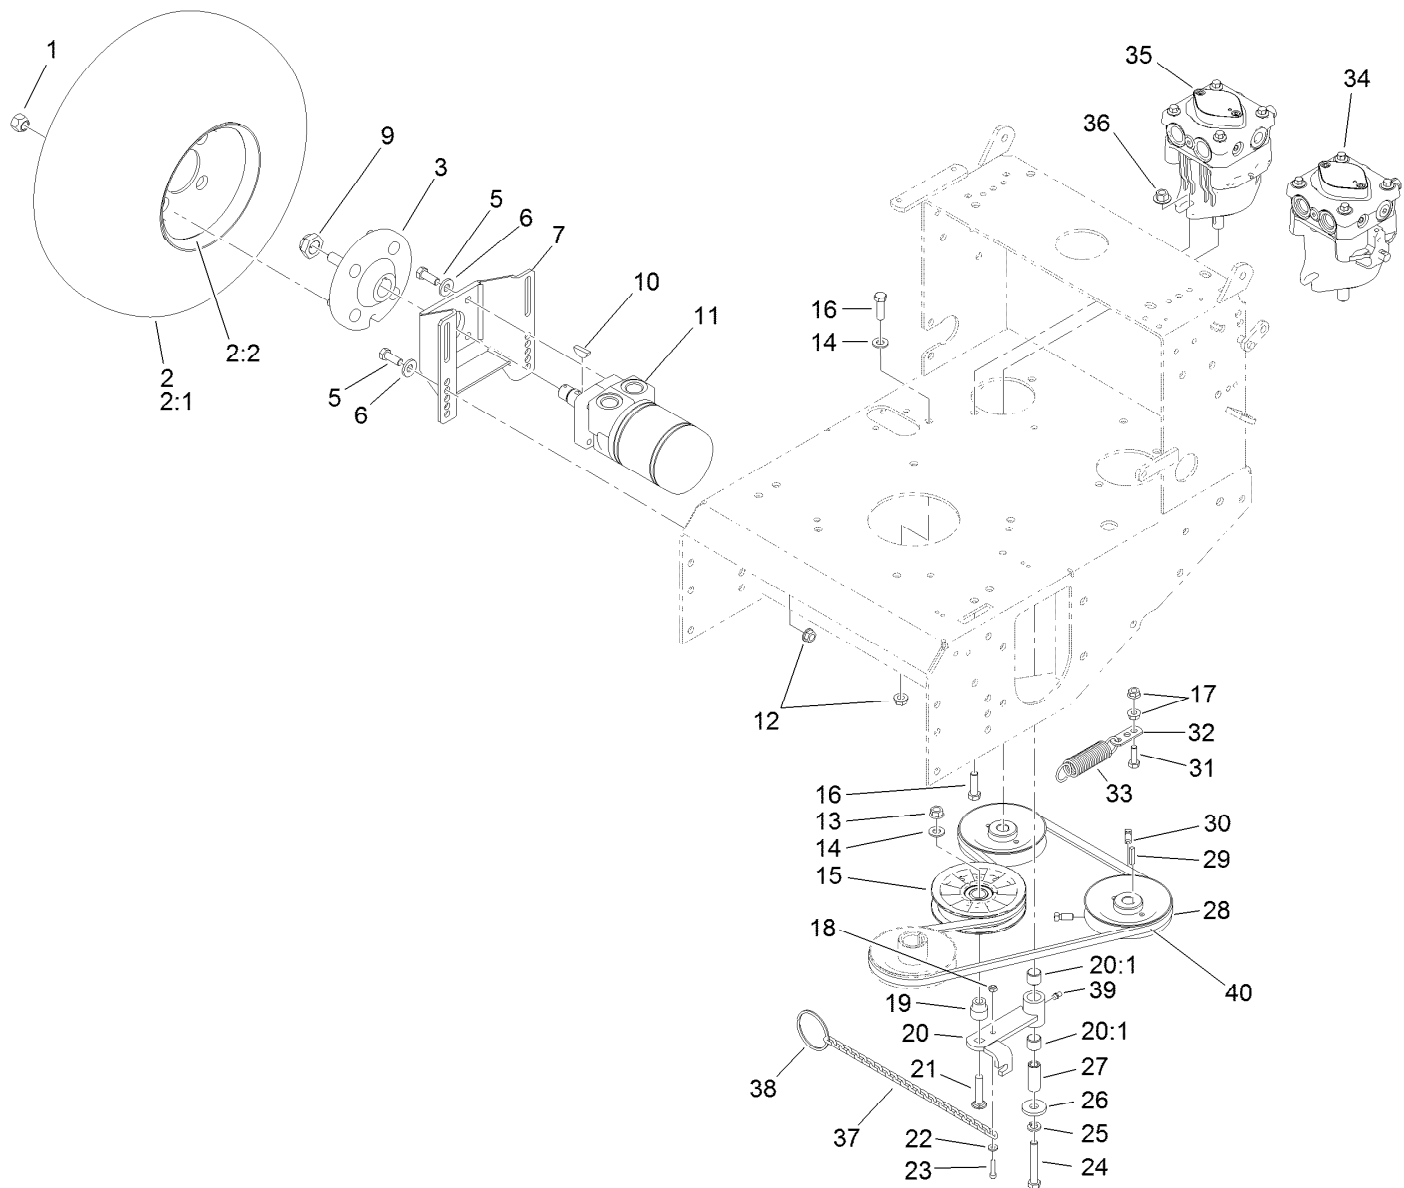

## Pump Drive and Engine Pulley Assembly


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 242-50      | 8    | Nut-Lug            |
| 2    | 1-613263    | 2    | Wheel And Tire ASM |
| 2:1  | 1-613264    | 1    | Tire-Turfmaster    |
| 2:2  | 1-603715    | 1    | Wheel-Rim          |
| 3    | 112-9049    | 2    | Wheel Hub ASM      |
| 5    | 323-6       | 16   | Screw-HH           |
| 6    | 98-5975     | 16   | Washer-Belleville  |
| 7    | 1-402062-01 | 2    | Mount-Motor        |
| 9    | 116-2839    | 2    | Nut-Lock           |
| 10   | 1-807019    | 2    | Key-Woodruff       |
| 11   | 1-603718    | 2    | HYD Motor ASM      |
| 12   | 3290-357    | 9    | Nut-HHF, Whiz      |
| 13   | 32128-21    | 1    | Nut-HF             |
| 14   | 3256-24     | 2    | Washer-Flat        |
| 15   | 109-4077    | 1    | Pulley-Idler, Flat |
| 16   | 323-7       | 5    | Screw-HH           |
| 17   | 32128-20    | 2    | Nut-HF             |
| 18   | 3296-2      | 1    | Nut-Lock, NI       |
| 19   | 1-603496    | 1    | Bushing-Idler      |
| 20   | 1-602521    | 1    | Idler Arm ASM      |
| 20:1 | 103-4681    | 2    | Sleeve-Bearing     |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 21   | 3231-29     | 1    | Screw-CARR        |
| 22   | 3256-14     | 1    | Washer-Flat       |
| 23   | 1-809069    | 1    | Screw-HSH         |
| 24   | 323-12      | 1    | Screw-HH          |
| 25   | 3253-21     | 1    | Washer-Lock       |
| 26   | 1-373034    | 1    | Washer            |
| 27   | 1-603044    | 1    | Bushing           |
| 28   | 1-413010    | 2    | Sheave ASM        |
| 29   | 1-807272    | 2    | Key               |
| 30   | 1-803050    | 4    | Screw-Set         |
| 31   | 322-5       | 1    | Screw-HH          |
| 32   | 1-603801    | 1    | Anchor-Spring     |
| 33   | 1-603402    | 1    | Spring-Extension  |
| 34   | 116-0942    | 1    | LH HYD Pump ASM   |
| 35   | 116-0943    | 1    | RH HYD Pump ASM   |
| 36   | 32128-43    | 4    | Nut-Flange        |
| 37   | 1-323365    | 1    | Chain-Link, Twist |
| 38   | 1-323366    | 1    | Ring-Split        |
| 39   | 302-19      | 1    | Fitting-Grease    |
| 40   | 106-2740    | 1    | V-Belt            |

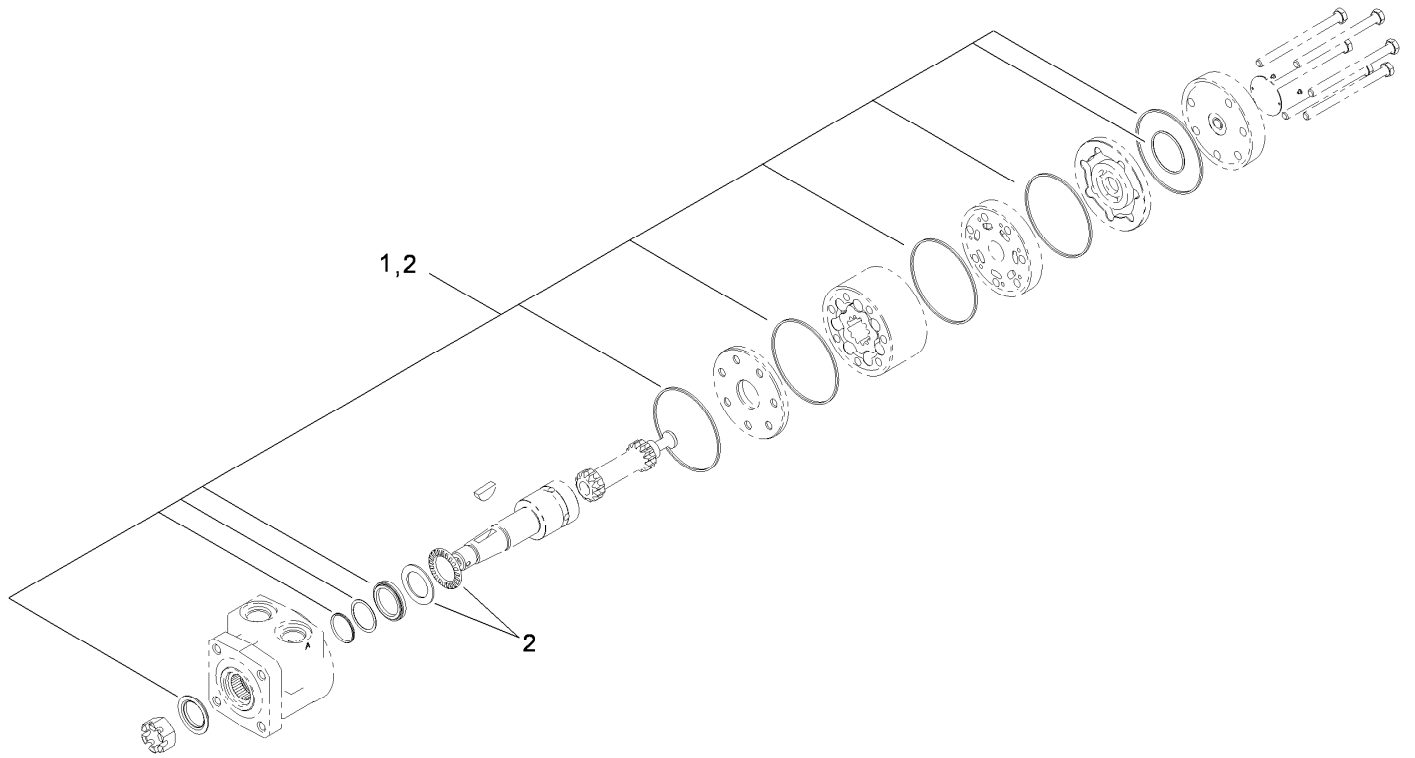


## Hydraulic Wheel Motor Assembly No. 1-603718

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 1-000119           | 1           | Seal Kit             |
| 2           | 1-000138           | 1           | Bearing And Seal Kit |

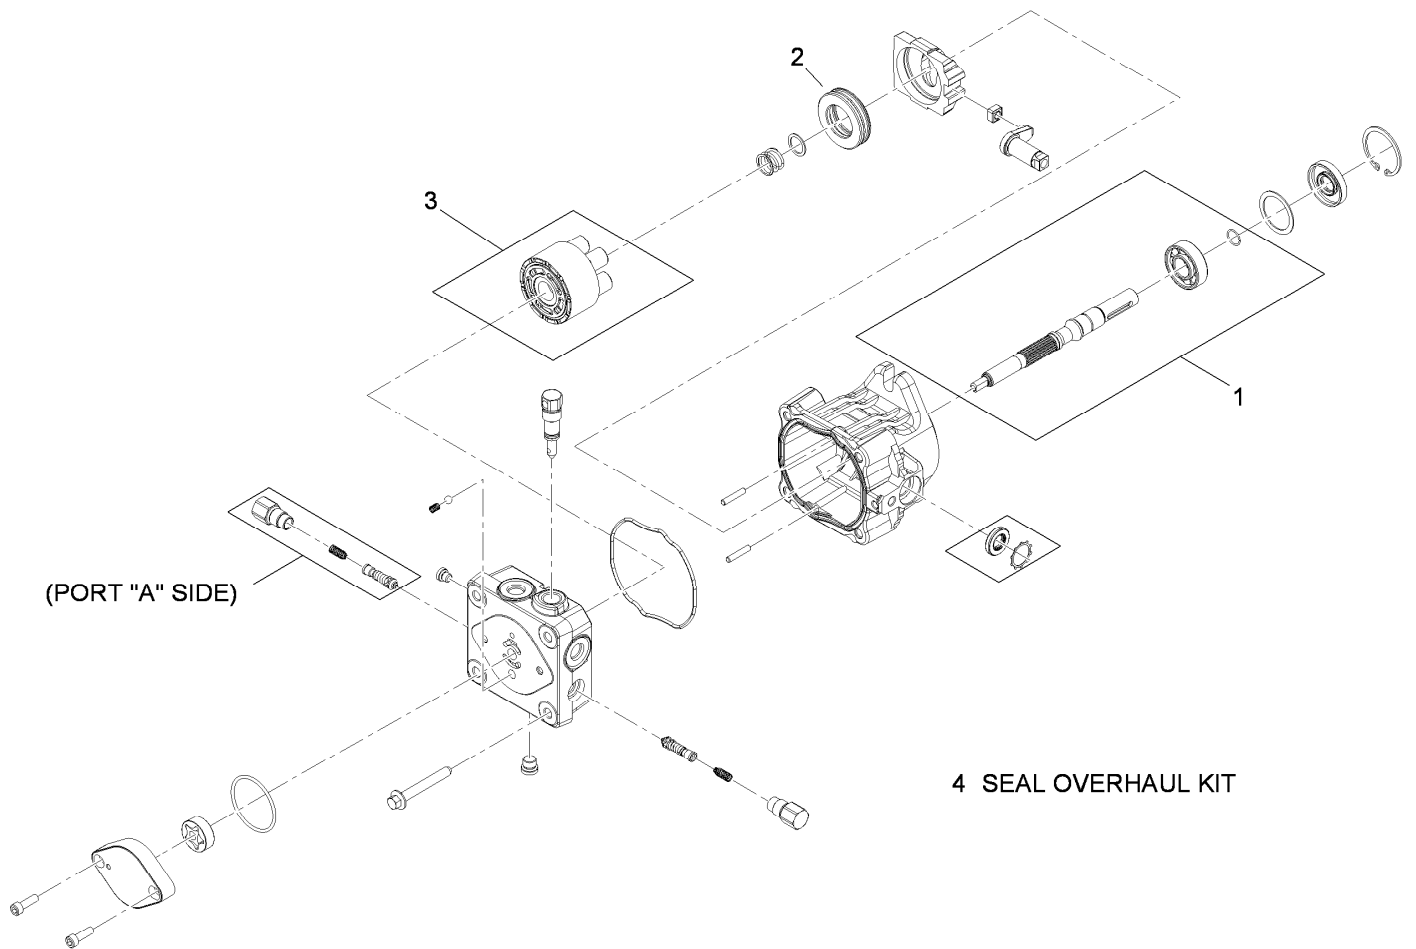

## LH Hydraulic Pump Assembly No. 116-0942


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 103-2664           | 1           | Input Shaft Kit    |
| 2           | 94-6922            | 1           | Bearing-Thrust     |
| 3           | 103-2666           | 1           | Cylinder Block Kit |
| 4           | 105-6184           | 1           | Seal Overhaul Kit  |

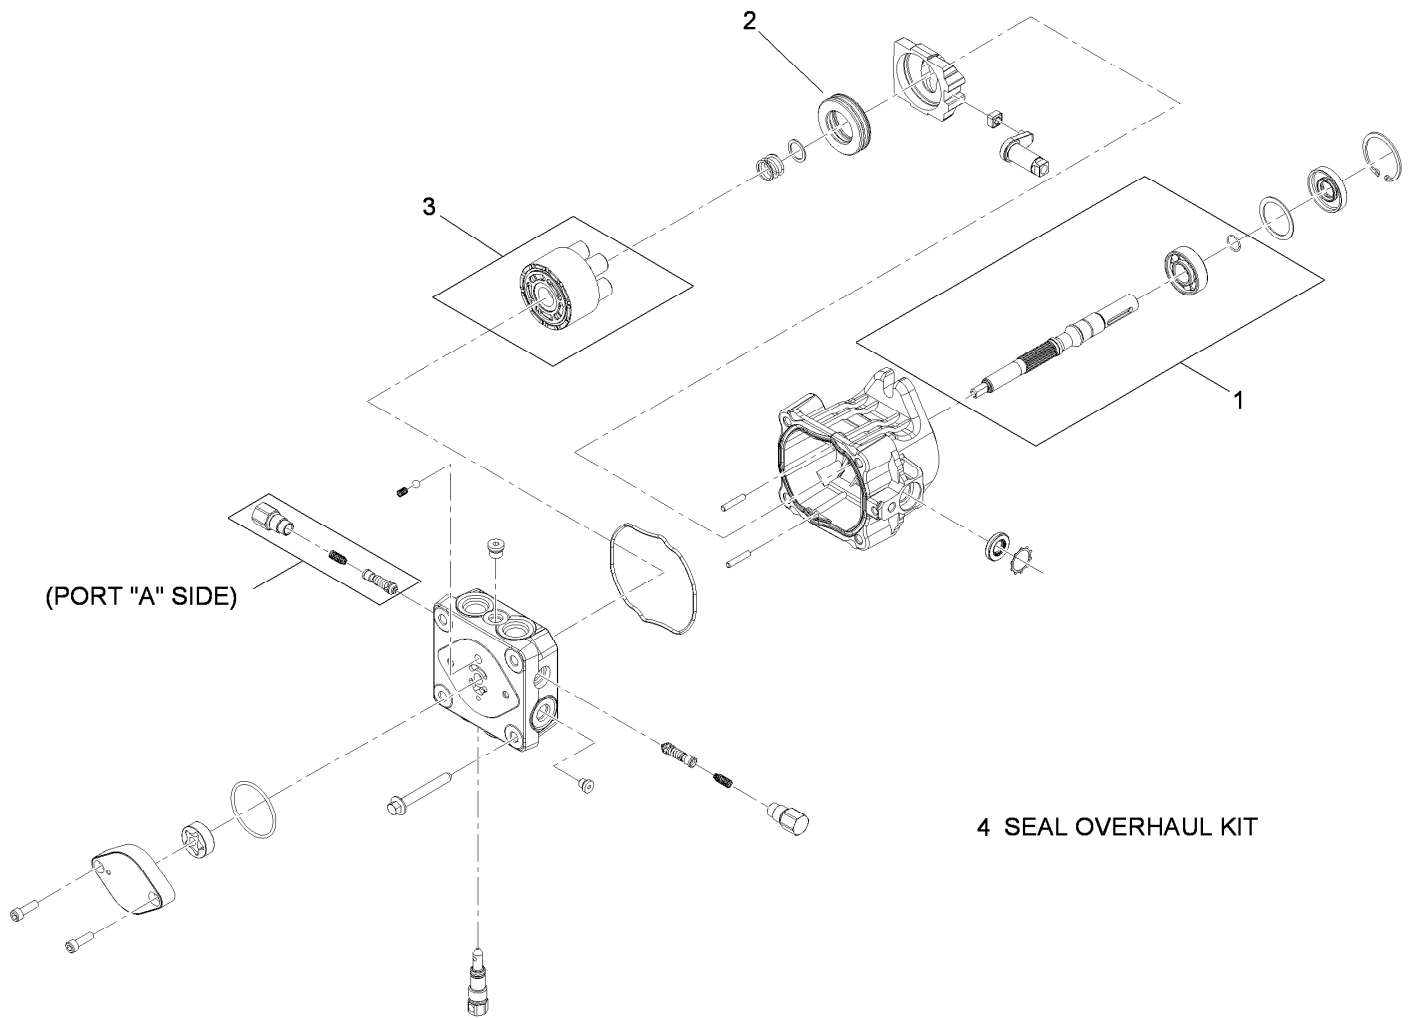

4 SEAL OVERHAUL KIT

# **RH Hydraulic Pump Assembly No. 116-0943**


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 103-2664           | 1           | Input Shaft Kit    |
| 2           | 94-6922            | 1           | Bearing-Thrust     |
| 3           | 103-2666           | 1           | Cylinder Block Kit |
| 4           | 105-6184           | 1           | Seal Overhaul Kit  |

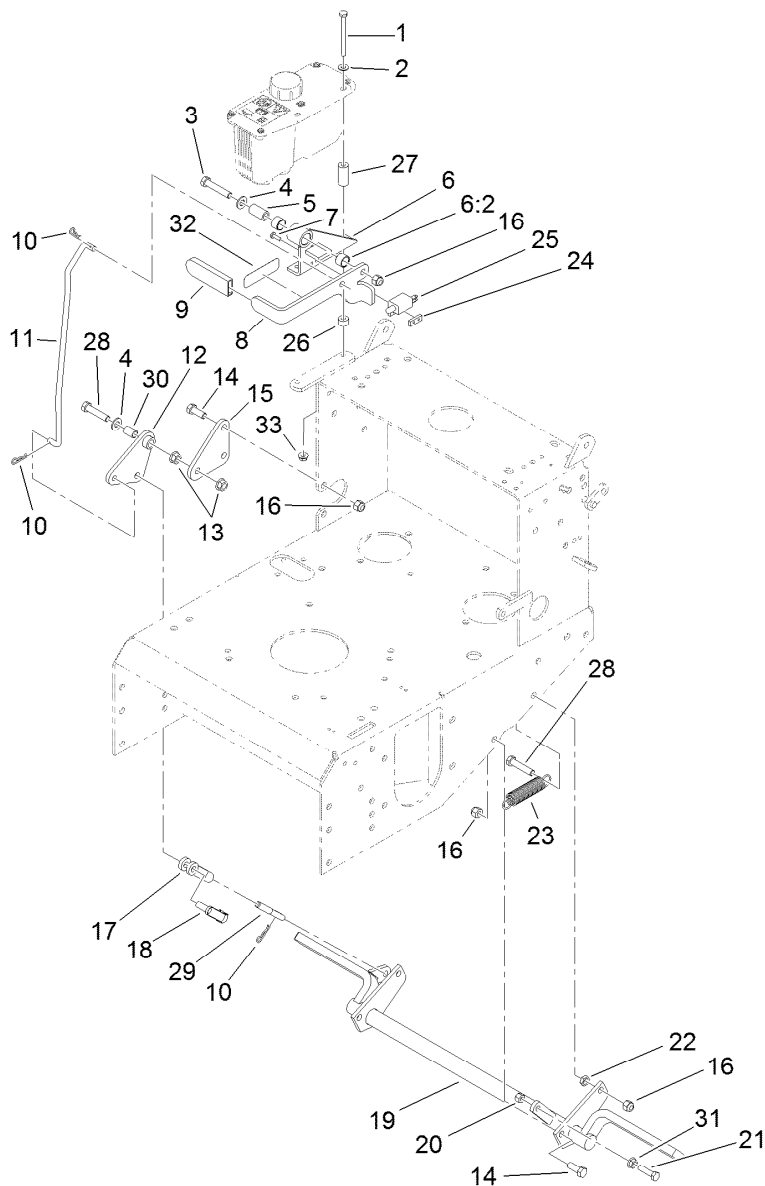

## Parking Brake Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 321-23      | 2    | Screw-HH          |
| 2    | 3256-22     | 2    | Washer-Flat       |
| 3    | 323-10      | 1    | Screw-HH          |
| 4    | 3256-24     | 2    | Washer-Flat       |
| 5    | 1-413344    | 1    | Bushing-Pivot     |
| 6    | 1-414504    | 1    | Bracket ASM       |
| 6:2  | 1-413347    | 2    | Sleeve-Bushing    |
| 7    | 3290-500    | 2    | Screw-PPH         |
| 8    | 116-1725-03 | 1    | Lever-Brake, Park |
| 9    | 1-303020    | 1    | Grip-Lever        |
| 10   | 1-806003    | 3    | Pin-Cotter, Hair  |
| 11   | 1-413496    | 1    | Linkage-Upper     |
| 12   | 1-414508    | 1    | Bellcrank ASM     |
| 13   | 32128-21    | 2    | Nut-HF            |
| 14   | 323-6       | 5    | Screw-HH          |
| 15   | 1-413497    | 1    | Bellcrank         |
| 16   | 3296-39     | 7    | Nut-Lock, NI      |


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 17   | 1-633131    | 1    | Yoke-Linkage, Brake   |
| 18   | 103-2399    | 1    | Pin-Spring, Clevis    |
| 19   | 103-2004-03 | 1    | Brake                 |
| 20   | 3296-29     | 1    | Nut-Lock, NI          |
| 21   | 116-3515    | 1    | Screw-HH, Special     |
| 22   | 3218-3      | 1    | Nut-Jam               |
| 23   | 1-323161    | 1    | Spring-Idler          |
| 24   | 1-633181    | 1    | Plate-Tapped          |
| 25   | 1-513051    | 1    | Switch-Open, Normally |
| 26   | 1-323549    | 2    | Spacer                |
| 27   | 103-2191    | 2    | Spacer                |
| 28   | 323-9       | 2    | Screw-HH              |
| 29   | 1-413489    | 1    | Linkage-Lower         |
| 30   | 1-303548    | 1    | Bushing-Plastic       |
| 31   | 32128-20    | 1    | Nut-HF                |
| 32   | 103-2103    | 1    | Decal-Brake, Park     |
| 33   | 32128-33    | 2    | Nut-HF                |

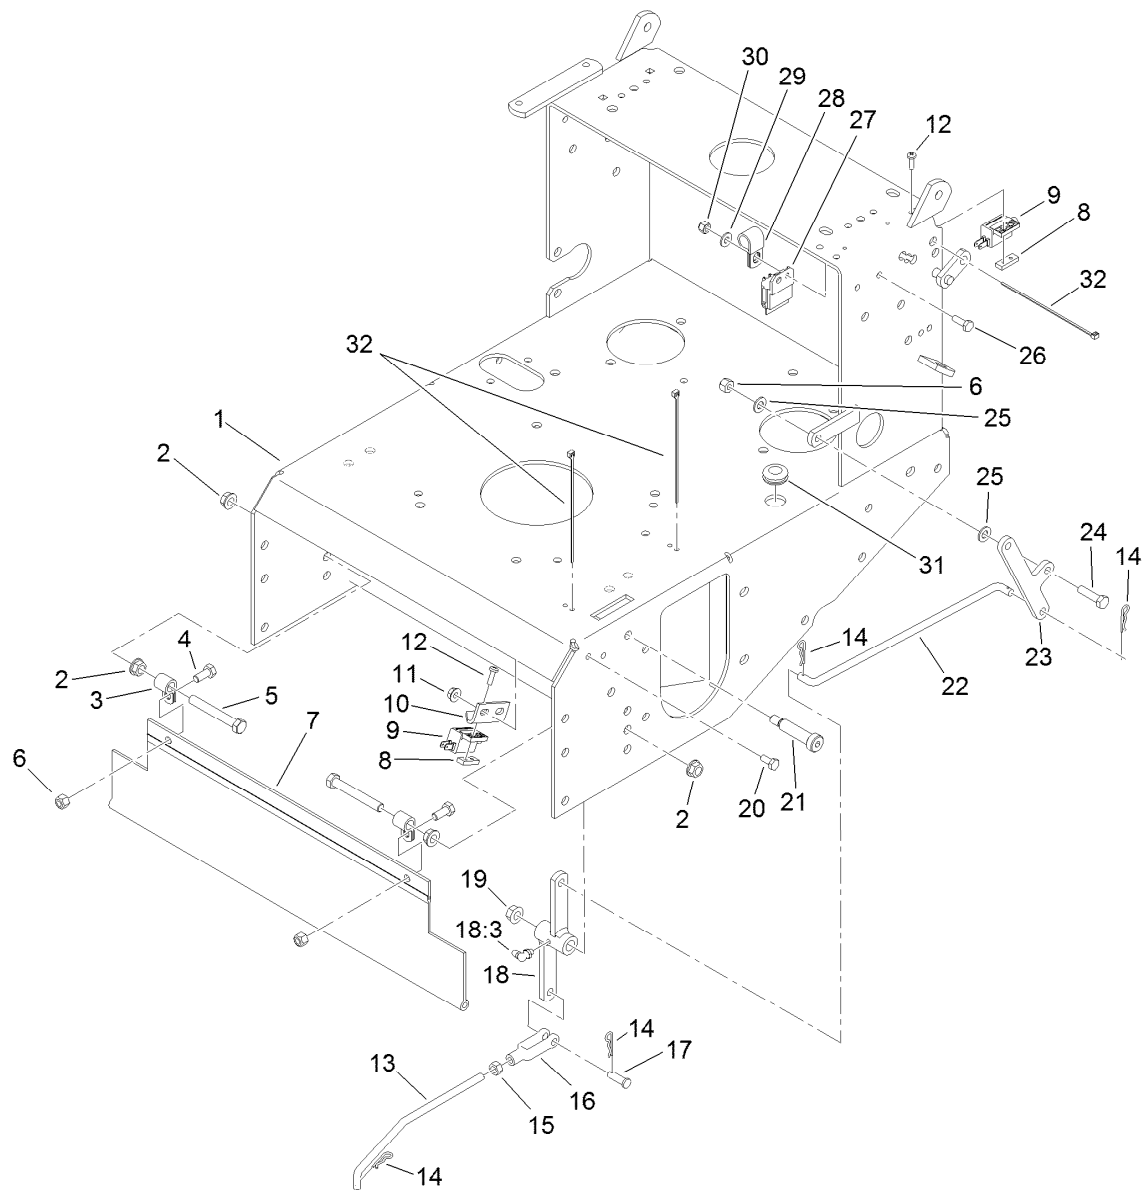

## Deck Engagement Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 116-6086-01 | 1    | Frame ASM             |
| 2    | 3290-357    | 4    | Nut-HHF, Whiz         |
| 3    | 1-413510    | 2    | Clip-Loom             |
| 4    | 322-3       | 2    | Screw-HH              |
| 5    | 323-13      | 2    | Screw-HH              |
| 6    | 3296-29     | 3    | Nut-Lock, NI          |
| 7    | 103-2056    | 1    | Shield-Drag           |
| 8    | 1-633181    | 2    | Plate-Tapped          |
| 9    | 1-513051    | 2    | Switch-Open, Normally |
| 10   | 1-323213    | 1    | Bracket-Switch, Blade |
| 11   | 32128-33    | 2    | Nut-HF                |
| 12   | 3290-500    | 4    | Screw-PPH             |
| 13   | 1-323174    | 1    | Arm-Linkage, Assist   |
| 14   | 1-806003    | 4    | Pin-Cotter, Hair      |
| 15   | 3219-2      | 1    | Nut-Hex               |
| 16   | 1-303105    | 1    | Yoke-Adjustable       |
| 17   | 1-808280    | 1    | Pin-Clevis            |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 18   | 1-322108    | 1    | Bellcrank ASM         |
| 18:3 | 302-40      | 1    | Fitting-Grease        |
| 19   | 32128-21    | 1    | Nut-HF                |
| 20   | 321-3       | 2    | Screw-HH              |
| 21   | 1-809062    | 1    | Screw                 |
| 22   | 1-323172    | 1    | Linkage-Engage, Blade |
| 23   | 116-1737-01 | 1    | Bellcrank             |
| 24   | 322-6       | 1    | Screw-HH              |
| 25   | 3256-23     | 2    | Washer-Flat           |
| 26   | 321-4       | 1    | Screw-HH              |
| 27   | 1-323430    | 1    | Module-Interlock      |
| 28   | 1-603727    | 1    | Clip-Loom             |
| 29   | 3256-22     | 1    | Washer-Flat           |
| 30   | 3296-42     | 1    | Nut-Lock, NI          |
| 31   | 1-543296    | 1    | Grommet               |
| 32   | 1-303287    | 3    | Tie-Cable             |

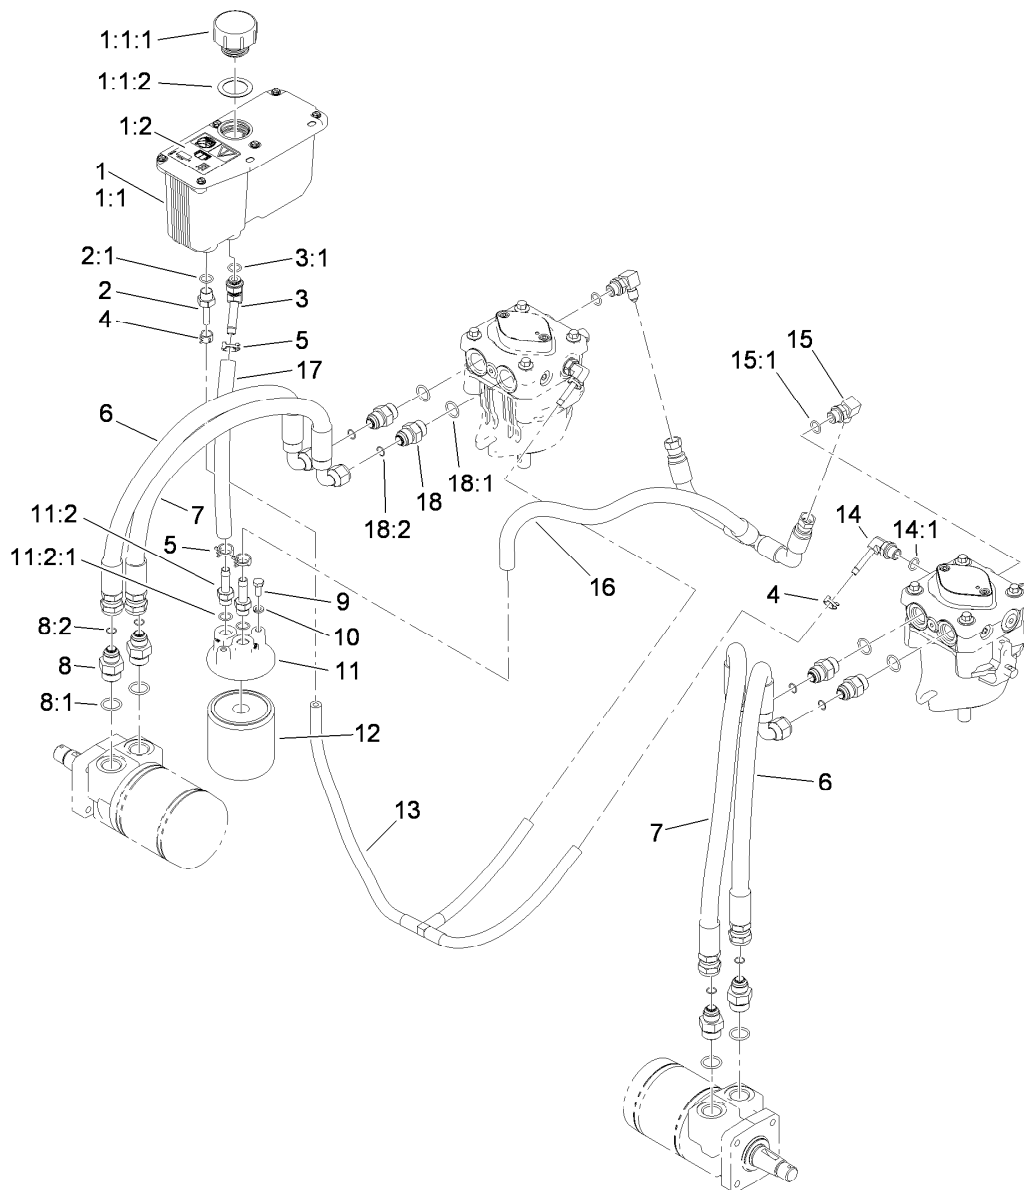


## Hydraulic System Assembly

| Ref.  | Part Number | Qty. | Description            |
|-------|-------------|------|------------------------|
| 1     | 107-8433    | 1    | HYD Reservoir ASM      |
| 1:1   |             | 1    | Reservoir-HYD ●        |
| 1:1:1 | 103-1948    | 1    | Cap-Reservoir, HYD     |
| 1:1:2 | 103-1949    | 1    | Gasket-Cap             |
| 1:2   | 115-4212    | 1    | Decal-Warning          |
| 2     | 103-1801    | 1    | Adapter-Straight       |
| 2:1   | 237-42      | 1    | O-Ring                 |
| 3     | 103-1807    | 1    | Fitting-Barbed, 45 DEG |
| 3:1   | 237-42      | 1    | O-Ring                 |
| 4     | 103-1716    | 3    | Clamp-Hose             |
| 5     | 103-1988    | 3    | Clamp-Hose             |
| 6     | 119-7827    | 2    | HYD Hose ASM           |
| 7     | 119-7826    | 2    | HYD Hose ASM           |
| 8     | 1-603991    | 4    | Fitting-Straight       |
| 8:1   | 237-80      | 1    | O-Ring                 |
| 8:2   | 1-603992    | 1    | O-Ring                 |

| Ref.   | Part Number | Qty. | Description         |
|--------|-------------|------|---------------------|
| 9      | 321-3       | 2    | Screw-HH            |
| 10     | 1-805004    | 2    | Washer-Lock         |
| 11     | 103-2889    | 1    | Filter Head ASM     |
| 11:2   | 103-1912    | 2    | Adapter-Straight    |
| 11:2:1 | 237-42      | 1    | O-Ring              |
| 12     | 1-633750    | 1    | Filter-Oil, HYD     |
| 13     | 116-0918    | 1    | Case Drain Hose ASM |
| 14     | 103-1799    | 2    | Elbow-90 DEG        |
| 14:1   | 237-42      | 1    | O-Ring              |
| 15     | 103-1802    | 2    | Fitting-HYD, 90 DEG |
| 15:1   | 1-603921    | 1    | O-Ring              |
| 16     | 116-2123    | 1    | Charge Hose ASM     |
| 17     | 103-2959    | 1    | Hose-Charge         |
| 18     | 1-603990    | 4    | Fitting-Straight    |
| 18:1   | 1-603920    | 1    | O-Ring              |
| 18:2   | 1-603992    | 1    | O-Ring              |


● Not serviced separately

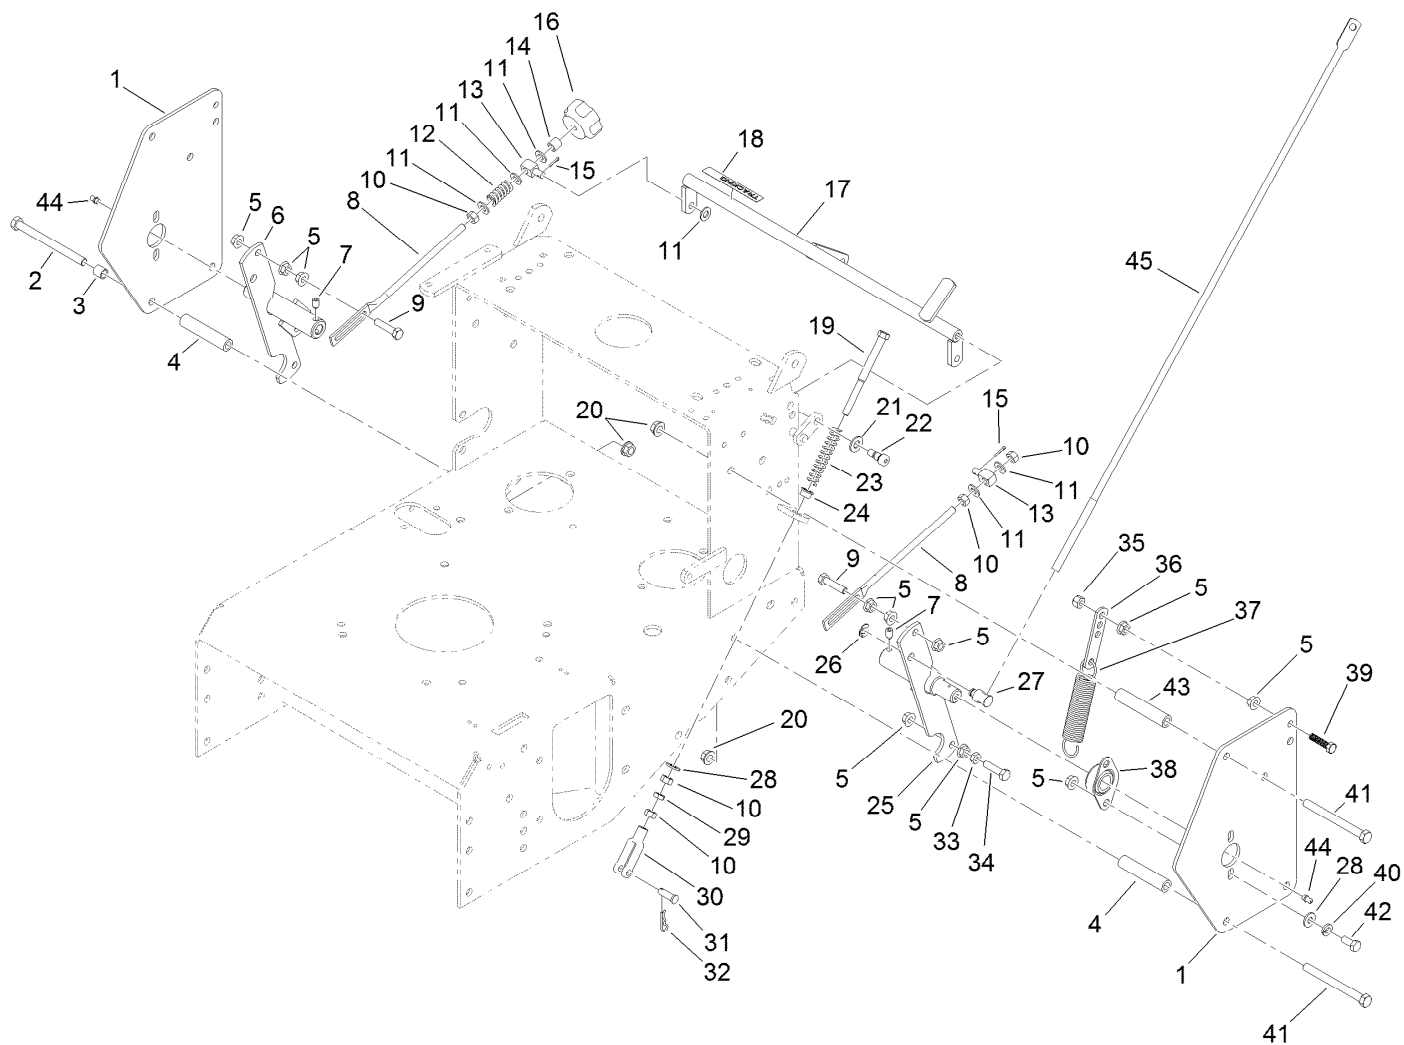

## Lower Control Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 110-4897-01 | 2    | Shield-Control           |
| 2    | 323-23      | 1    | Screw-HH                 |
| 3    | 103-1166    | 1    | Spacer-Tube, Pump Link   |
| 4    | 1-323197-01 | 4    | Spacer-Shield            |
| 5    | 32128-20    | 18   | Nut-HF                   |
| 6    | 103-4796-01 | 1    | Shaft-Control, RH        |
| 7    | 3246-4      | 2    | Screw-Set                |
| 8    | 1-413350    | 2    | Link-Control, Speed      |
| 9    | 1-403180    | 2    | Screw-HH                 |
| 10   | 3219-2      | 7    | Nut-Hex                  |
| 11   | 3256-23     | 7    | Washer-Flat              |
| 12   | 1-323245    | 1    | Spring-Compression       |
| 13   | 1-603676    | 2    | Swivel-Adjustable, Short |
| 14   | 1-603903    | 1    | Spacer                   |
| 15   | 3272-5      | 2    | Pin-Cotter               |
| 16   | 103-3060    | 1    | Knob-Tracking            |
| 17   | 1-412203-01 | 1    | Crank-Control, Speed     |
| 18   | 105-4109    | 1    | Decal-Tracking           |
| 19   | 1-603737    | 2    | Bolt-Return, Neutral     |
| 20   | 3290-357    | 8    | Nut-HHF, Whiz            |
| 21   | 3256-24     | 2    | Washer-Flat              |


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 22   | 1-809056    | 2    | Screw                  |
| 23   | 1-603807    | 2    | Spring-Return, Neutral |
| 24   | 1-603735    | 2    | Bushing-Flanged        |
| 25   | 103-1190-01 | 1    | Shaft-Control, LH      |
| 26   | 32151-47    | 2    | Ring-Retaining         |
| 27   | 103-1235    | 2    | Swivel-Lever, Drive    |
| 28   | 3256-2      | 6    | Washer-Flat            |
| 29   | 3220-2      | 2    | Nut-Jam                |
| 30   | 1-303105    | 2    | Yoke-Adjustable        |
| 31   | 1-808280    | 2    | Pin-Clevis             |
| 32   | 1-806003    | 2    | Pin-Cotter, Hair       |
| 33   | 3218-2      | 2    | Nut-Jam                |
| 34   | 116-3515    | 2    | Screw-HH, Special      |
| 35   | 3296-29     | 2    | Nut-Lock, NI           |
| 36   | 1-613089    | 2    | Tab-Spring, Extension  |
| 37   | 1-603693    | 2    | Spring-Extension       |
| 38   | 1-633102    | 2    | Bearing-Flange, Side   |
| 39   | 1-800016    | 2    | Bolt-TAP, HH           |
| 40   | 1-805005    | 4    | Washer-Lock            |
| 41   | 323-16      | 7    | Screw-HH               |
| 42   | 322-3       | 4    | Screw-HH               |

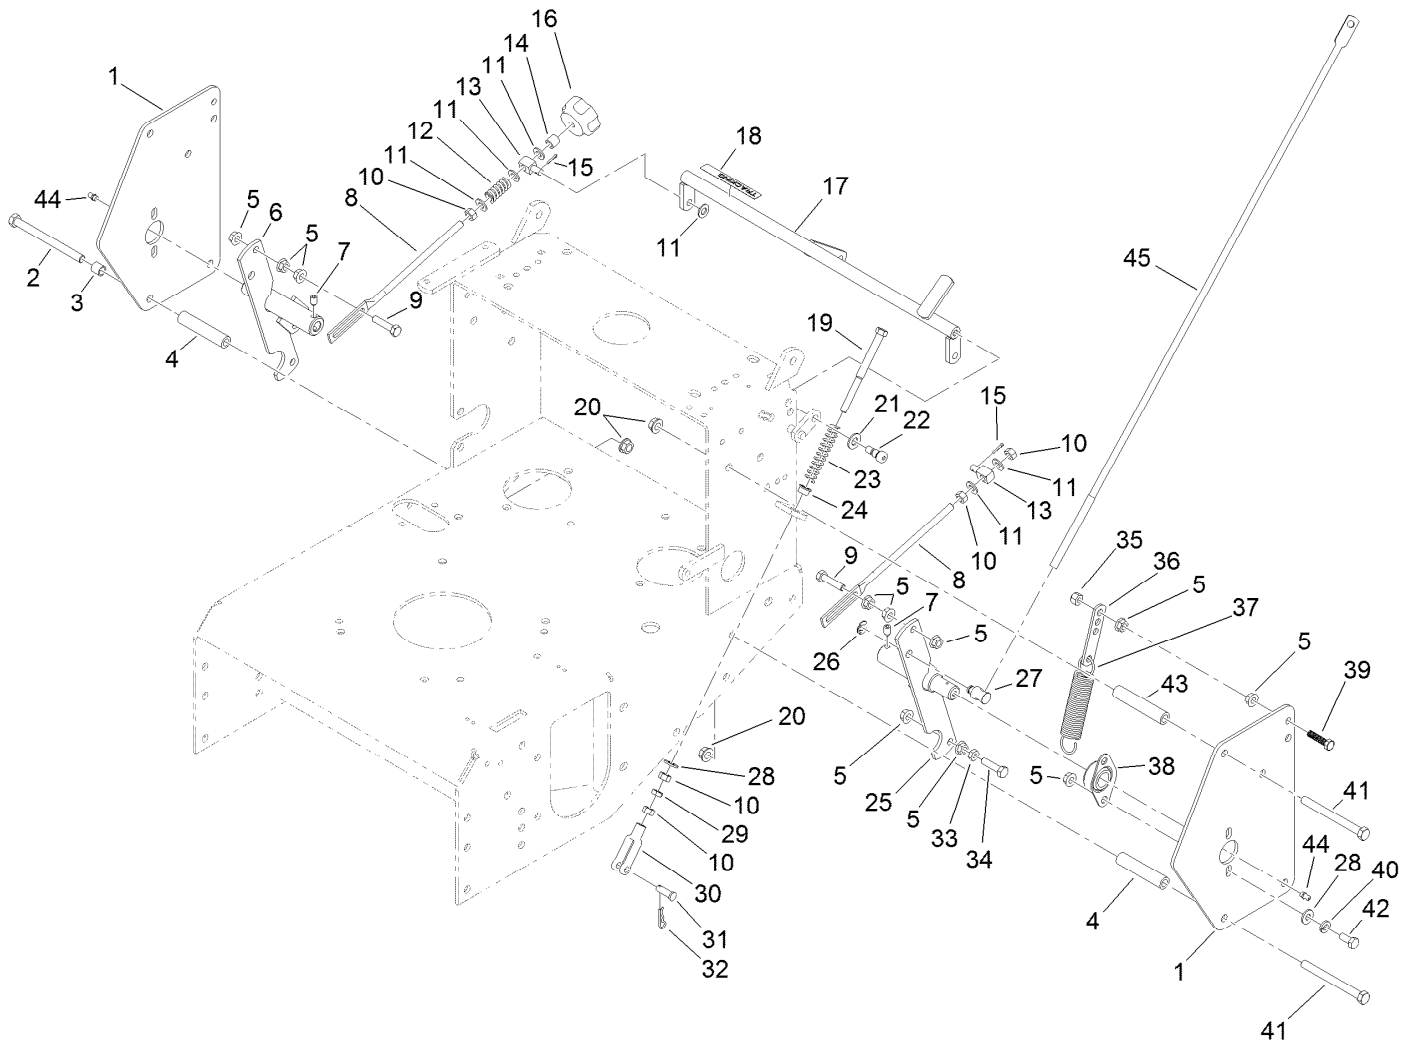

## Lower Control Assembly (continued)

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 43   | 1-323195-01 | 4    | Spacer-Shield |


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 44   | 302-19      | 2    | Fitting-Grease   |
| 45   | 1-413219    | 2    | Rod-Lever, Drive |

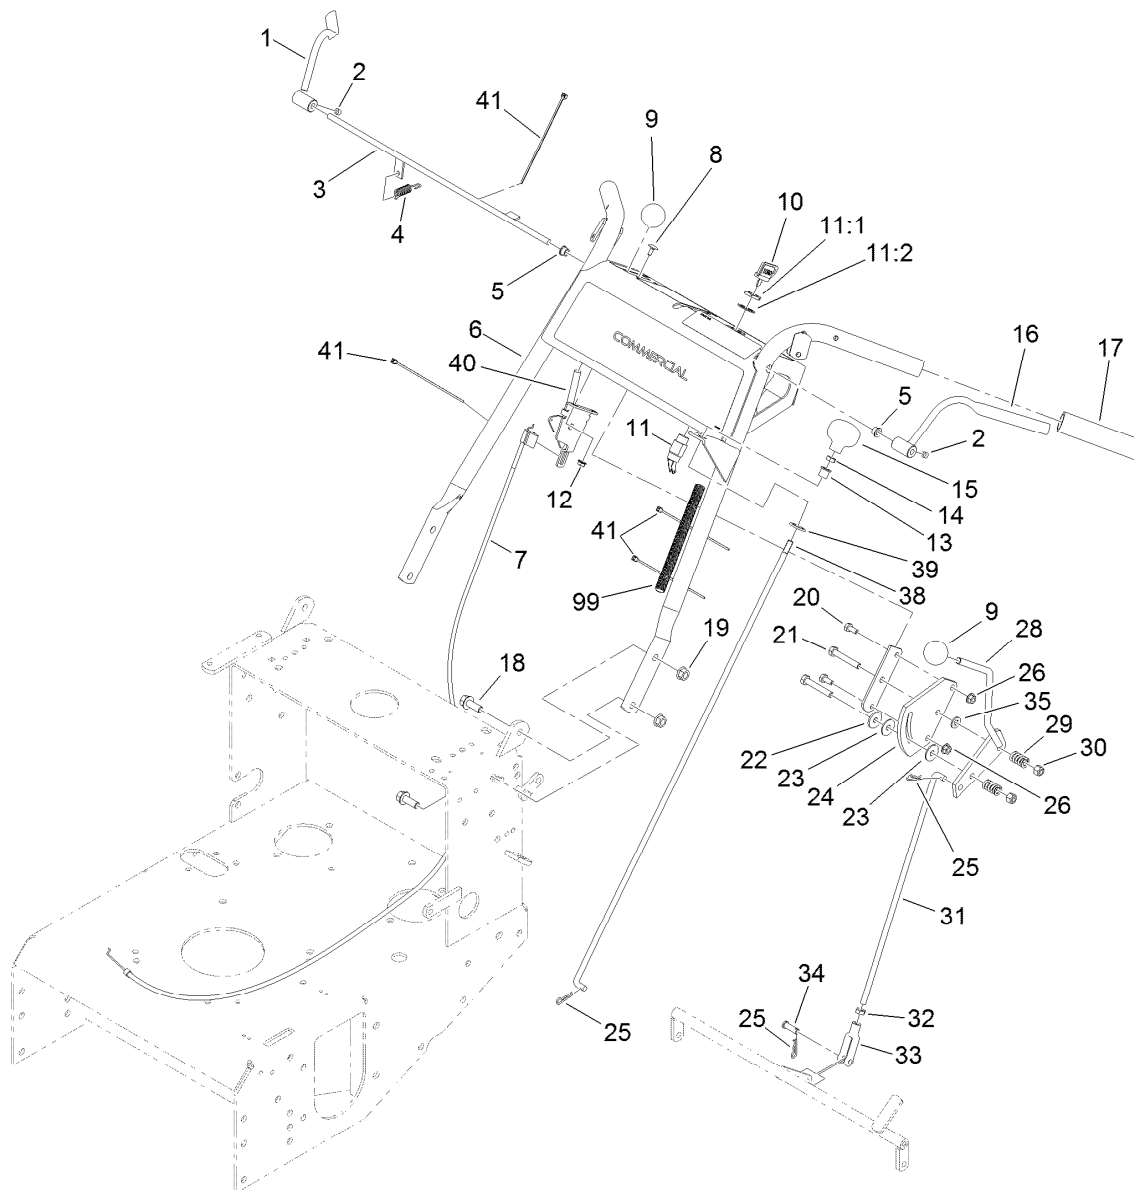

## Upper Control Assembly


| Ref. | Part Number | Qty. | Description                            |
|------|-------------|------|----------------------------------------|
| 1    | 106-5486    | 1    | RH Operator Presence Control Lever ASM |
| 2    | 1-803322    | 2    | Screw-Set                              |
| 3    | 106-2717-03 | 1    | Rod-Control, Operator Presence         |
| 4    | 1-303363    | 1    | Spring-Extension                       |
| 5    | 1-303365    | 2    | Bushing-Nylon                          |
| 6    | 119-6538    | 1    | Handle ASM                             |
| 7    | 119-1823    | 1    | Cable-Control, Throttle                |
| 8    | 1-807513    | 2    | Bolt-CARR                              |
| 9    | 1-603175    | 2    | Knob-Ball                              |
| 10   | 63-8360     | 1    | Key-Ignition (W/Shield)                |
| 11   | 29-5560     | 1    | Switch-On / Off                        |
| 11:1 | 218-461     | 1    | Nut-HH                                 |
| 11:2 | 3254-5      | 1    | Washer-Tooth, Internal                 |
| 12   | 32128-17    | 2    | Nut-Lock, Flange                       |
| 13   | 1-323143    | 1    | Bearing-Nylon                          |
| 14   | 3218-2      | 1    | Nut-Jam                                |
| 15   | 1-323134    | 1    | Knob-Push / Pull                       |
| 16   | 106-5485    | 1    | LH Operator Presence Control Lever ASM |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 17   | 104-9838    | 2    | Grip-Foam            |
| 18   | 3234-11     | 4    | Screw-HHF            |
| 19   | 32128-21    | 4    | Nut-HF               |
| 20   | 321-3       | 2    | Screw-HH             |
| 21   | 322-10      | 2    | Screw-HH             |
| 22   | 1-603716    | 1    | Washer-Friction      |
| 23   | 1-323244    | 2    | Washer-Friction      |
| 24   | 1-603730    | 1    | Plate-Lever, Shifter |
| 25   | 1-806003    | 3    | Pin-Cotter, Hair     |
| 26   | 32128-33    | 2    | Nut-HF               |
| 28   | 106-2748    | 1    | Lever-Shift          |
| 29   | 1-323245    | 2    | Spring-Compression   |
| 30   | 3296-29     | 2    | Nut-Lock, NI         |
| 31   | 1-323522    | 1    | Rod-Control, Speed   |
| 32   | 3220-2      | 1    | Nut-Jam              |
| 33   | 1-303105    | 1    | Yoke-Adjustable      |
| 34   | 1-808280    | 1    | Pin-Clevis           |
| 35   | 3256-23     | 1    | Washer-Flat          |
| 38   | 1-323181    | 1    | Linkage-Blade        |
| 39   | 1-323142    | 1    | Nut-Push             |
| 40   | 110-5547    | 1    | Control Lever ASM    |

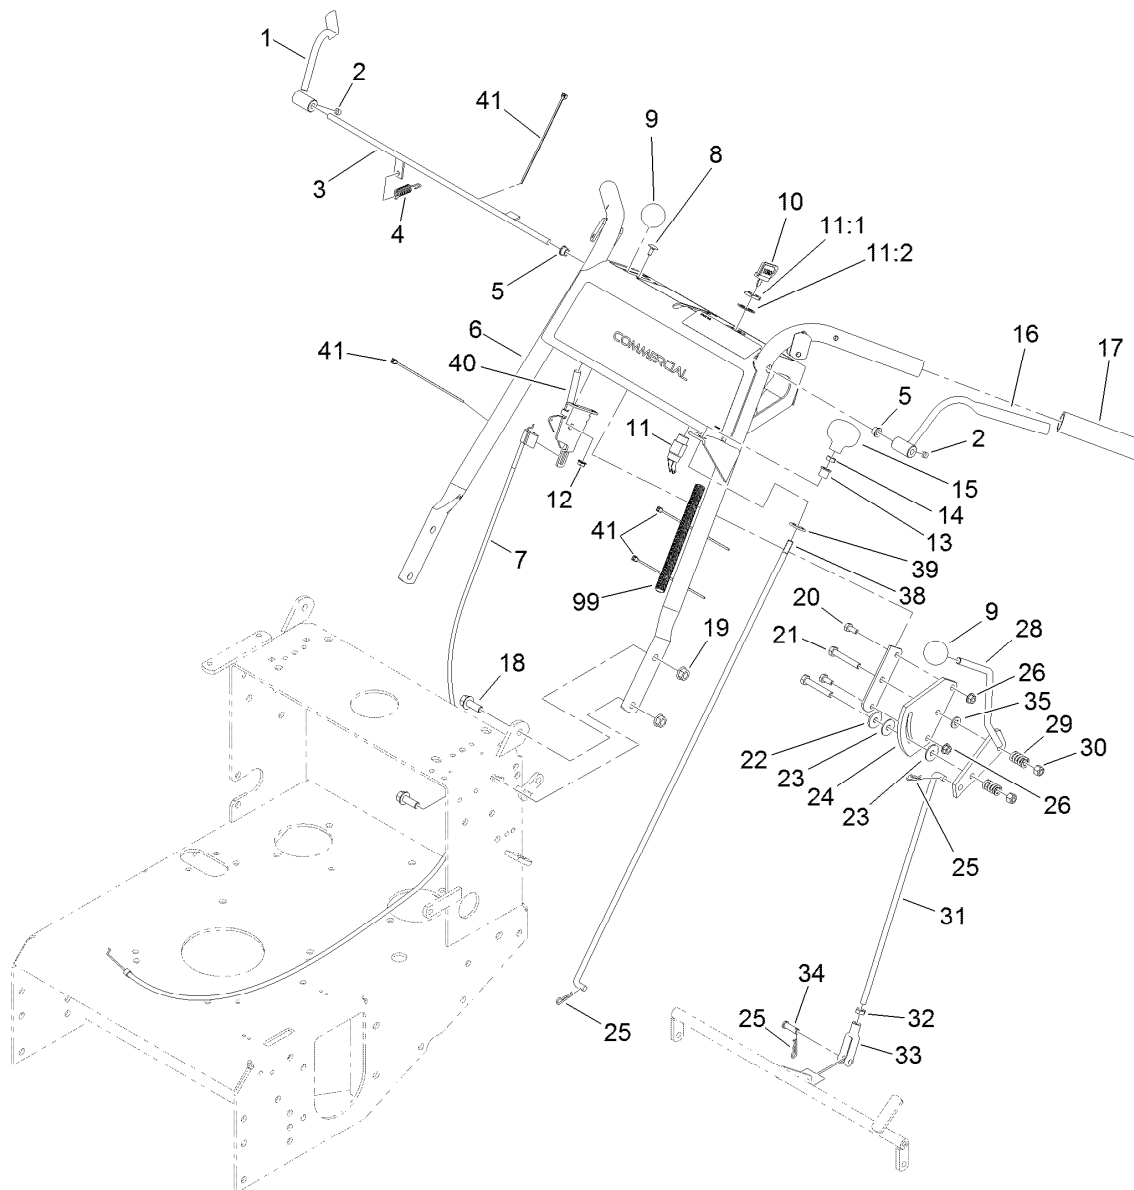


## Upper Control Assembly (continued)

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 41   | 1-303287    | 4    | Tie-Cable      |
| 99   | 116-2611    | 1    | Harness-Wiring |

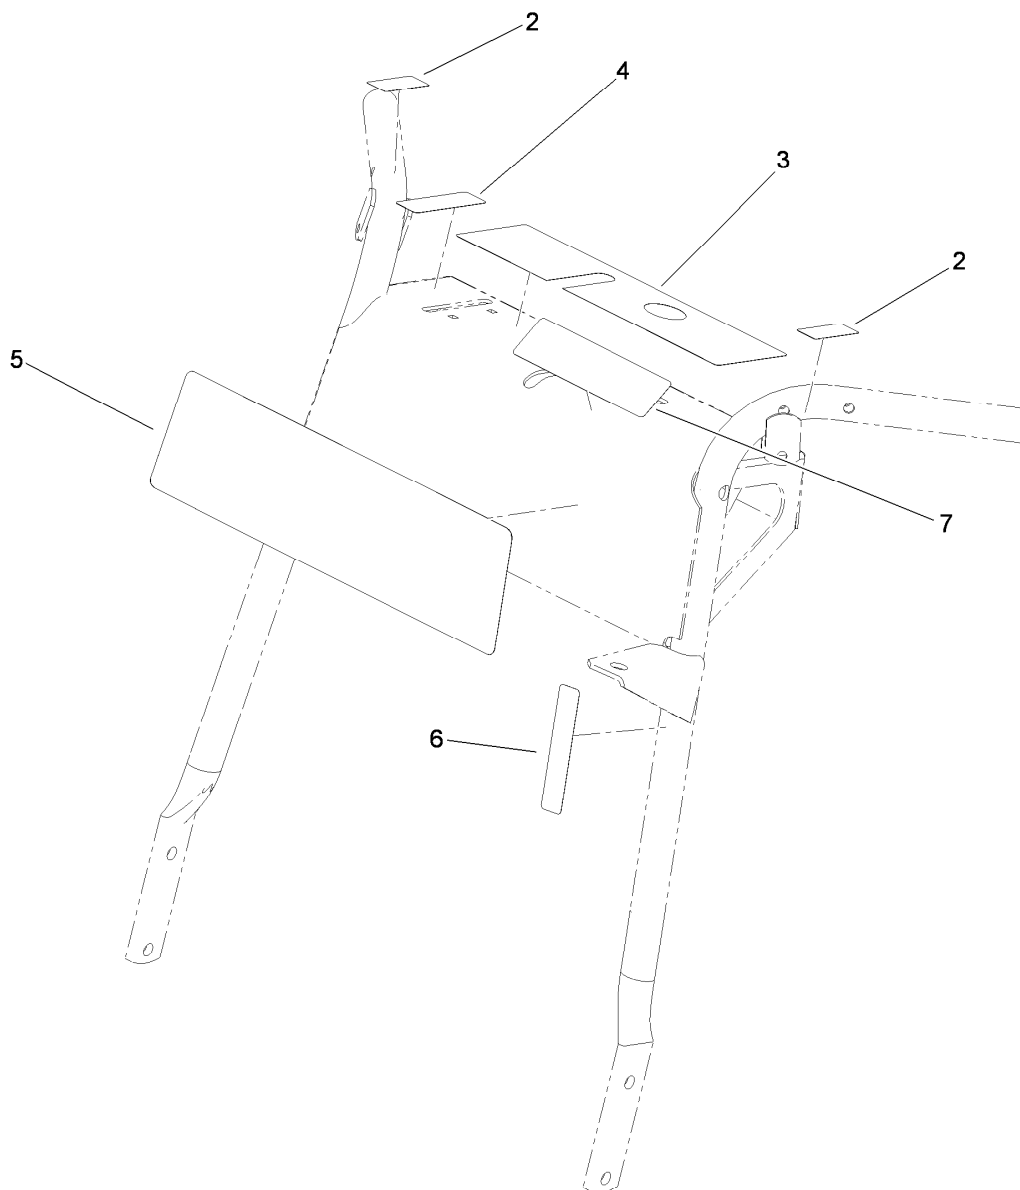


## Handle Assembly No. 119-6538

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 2           | 105-4110           | 2           | Decal-Lock, Neutral  |
| 3           | 106-2738           | 1           | Decal-Warning        |
| 4           | 106-2733           | 1           | Decal-Throttle       |
| 5           | 110-6917           | 1           | Decal                |
| 6           | 95-5537            | 1           | Decal-Engage, Deck   |
| 7           | 106-2743           | 1           | Decal-Caution, Brake |

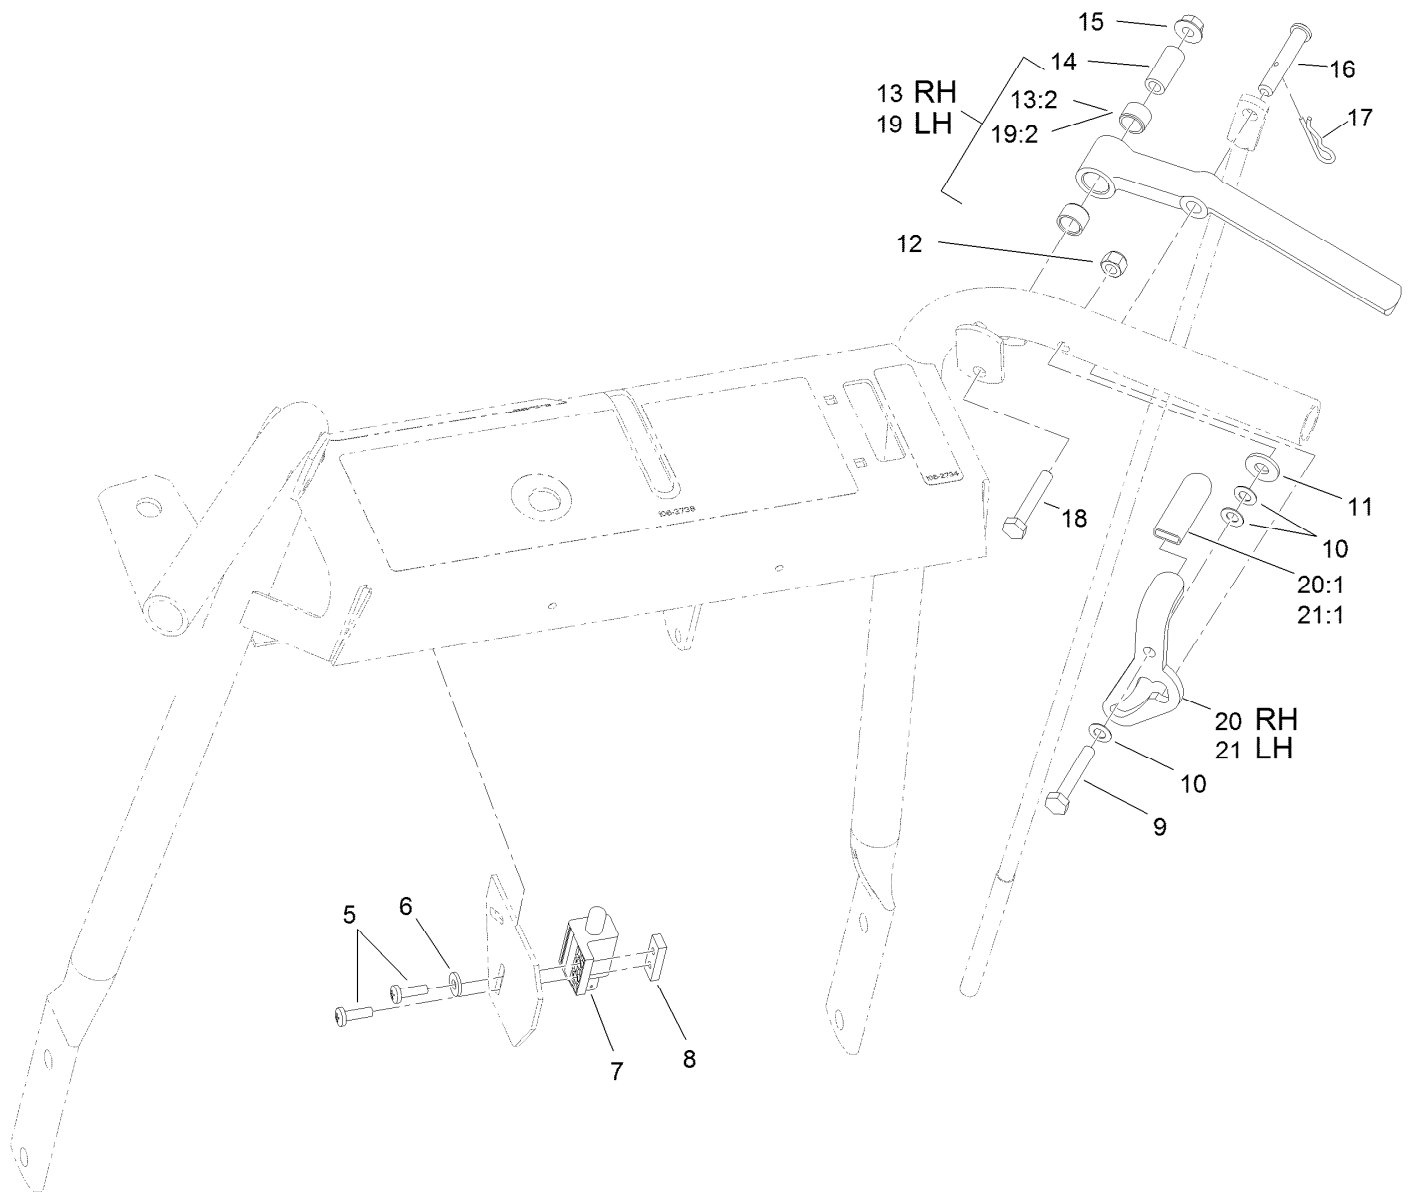

## Drive Lever Assembly


| Ref. | Part Number | Qty. | Description           | Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|------|-------------|------|-----------------------|
| 5    | 3290-500    | 2    | Screw-PPH             | 15   | 32128-33    | 2    | Nut-HF                |
| 6    | 3256-14     | 1    | Washer-Flat           | 16   | 1-613055    | 2    | Pin-Clevis            |
| 7    | 1-513051    | 1    | Switch-Open, Normally | 17   | 1-806003    | 2    | Pin-Cotter, Hair      |
| 8    | 1-633181    | 1    | Plate-Tapped          | 18   | 321-9       | 2    | Screw-HH              |
| 9    | 321-10      | 2    | Screw-HH              | 19   | 103-0218    | 1    | LH Drive Lever ASM    |
| 10   | 1-303435    | 6    | Washer-Spring         | 19:2 | 1-413152    | 2    | Bushing-Sleeve        |
| 11   | 3256-2      | 2    | Washer-Flat           | 20   | 1-612168    | 1    | RH Latch And Grip ASM |
| 12   | 3296-42     | 2    | Nut-Lock, NI          | 20:1 | 1-303019    | 1    | Grip-Latch            |
| 13   | 103-0219    | 1    | RH Drive Lever ASM    | 21   | 1-612167    | 1    | LH Latch Grip ASM     |
| 13:2 | 1-413152    | 2    | Bushing-Sleeve        | 21:1 | 1-303019    | 1    | Grip-Latch            |
| 14   | 1-603749    | 2    | Bushing-Lever, Drive  |      |             |      |                       |

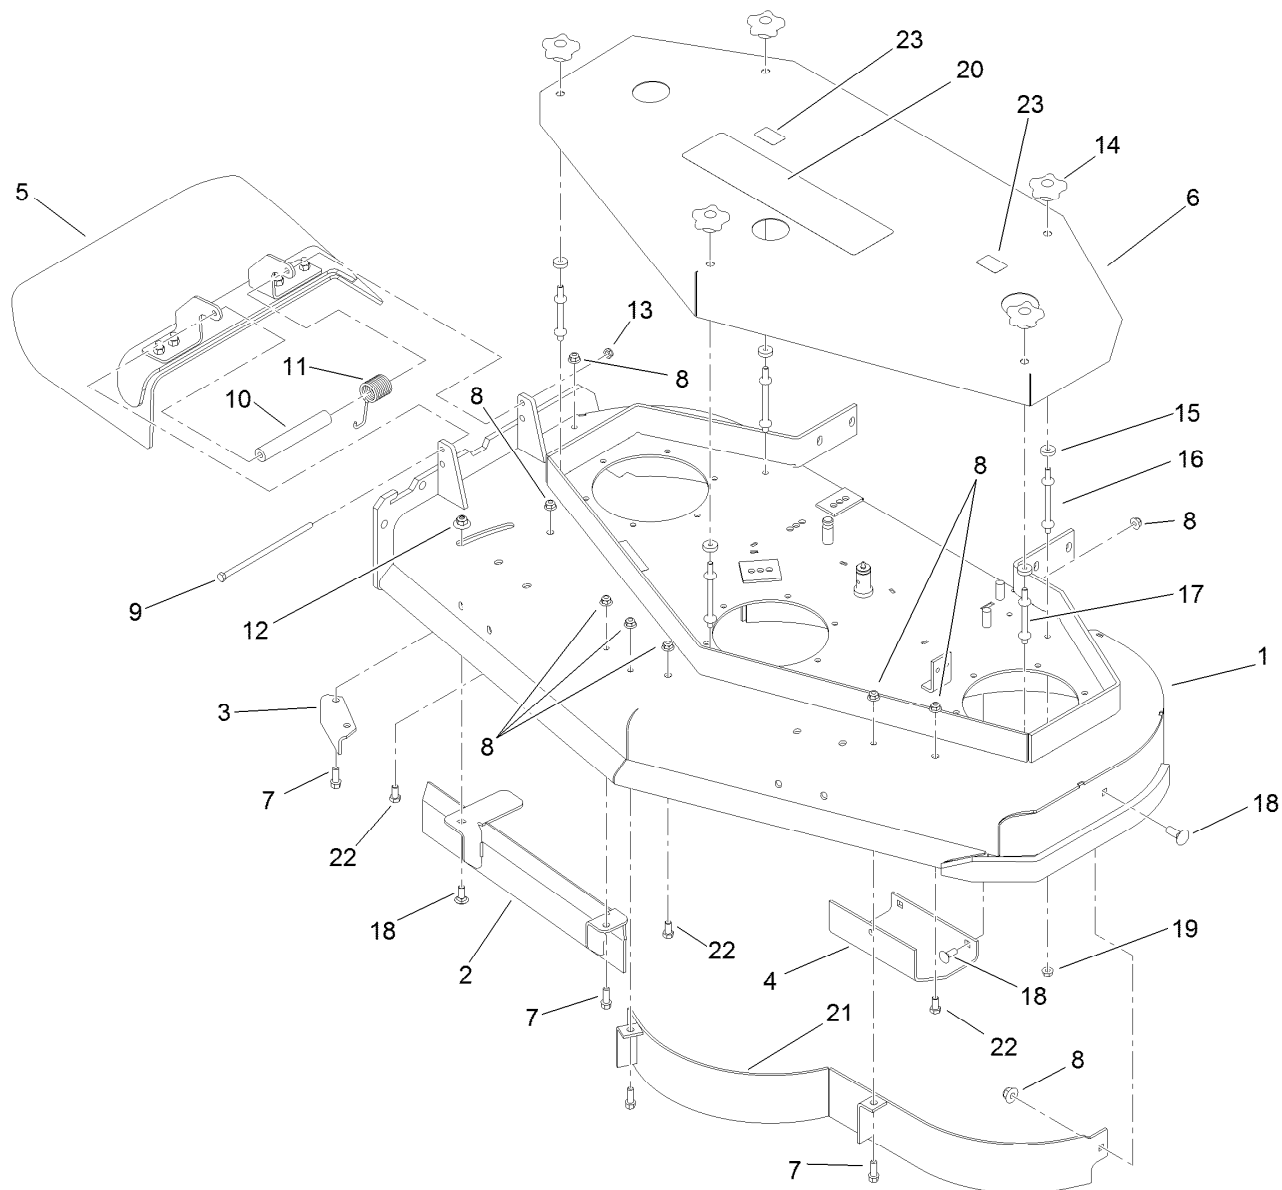

## Deck Assembly

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 110-4909    | 1    | Deck ASM         |
| 2    | 121-1775-03 | 1    | Baffle ASM       |
| 3    | 110-0744-01 | 1    | Baffle-Discharge |
| 4    | 107-3166-01 | 1    | Skid             |
| 5    | 110-0758    | 1    | Deflector ASM    |
| 6    | 110-2119-01 | 1    | Cover            |
| 7    | 92-1624     | 5    | Screw-HWH        |
| 8    | 104-8301    | 12   | Nut-Flange, NI   |
| 9    | 322-50      | 1    | Screw-HH         |
| 10   | 105-4622    | 1    | Spacer           |
| 11   | 108-4052    | 1    | Spring-Torsion   |
| 12   | 109-6658    | 1    | Nut-Flange, NI   |


| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 13   | 3296-47     | 1    | Nut-Lock, NI              |
| 14   | 106-4161    | 5    | Knob-Handle               |
| 15   | 1-323417    | 5    | Washer                    |
| 16   | 1-303536    | 3    | Stud-Shield, Belt (Long)  |
| 17   | 1-303537    | 2    | Stud-Shield, Belt (Short) |
| 18   | 3231-2      | 5    | Bolt-CARR                 |
| 19   | 32128-20    | 5    | Nut-HF                    |
| 20   | 112-9712    | 1    | Decal                     |
| 21   | 110-0735-03 | 1    | Baffle ASM                |
| 22   | 323-4       | 3    | Screw-HH                  |
| 23   | 103-2076    | 2    | Decal-Caution             |

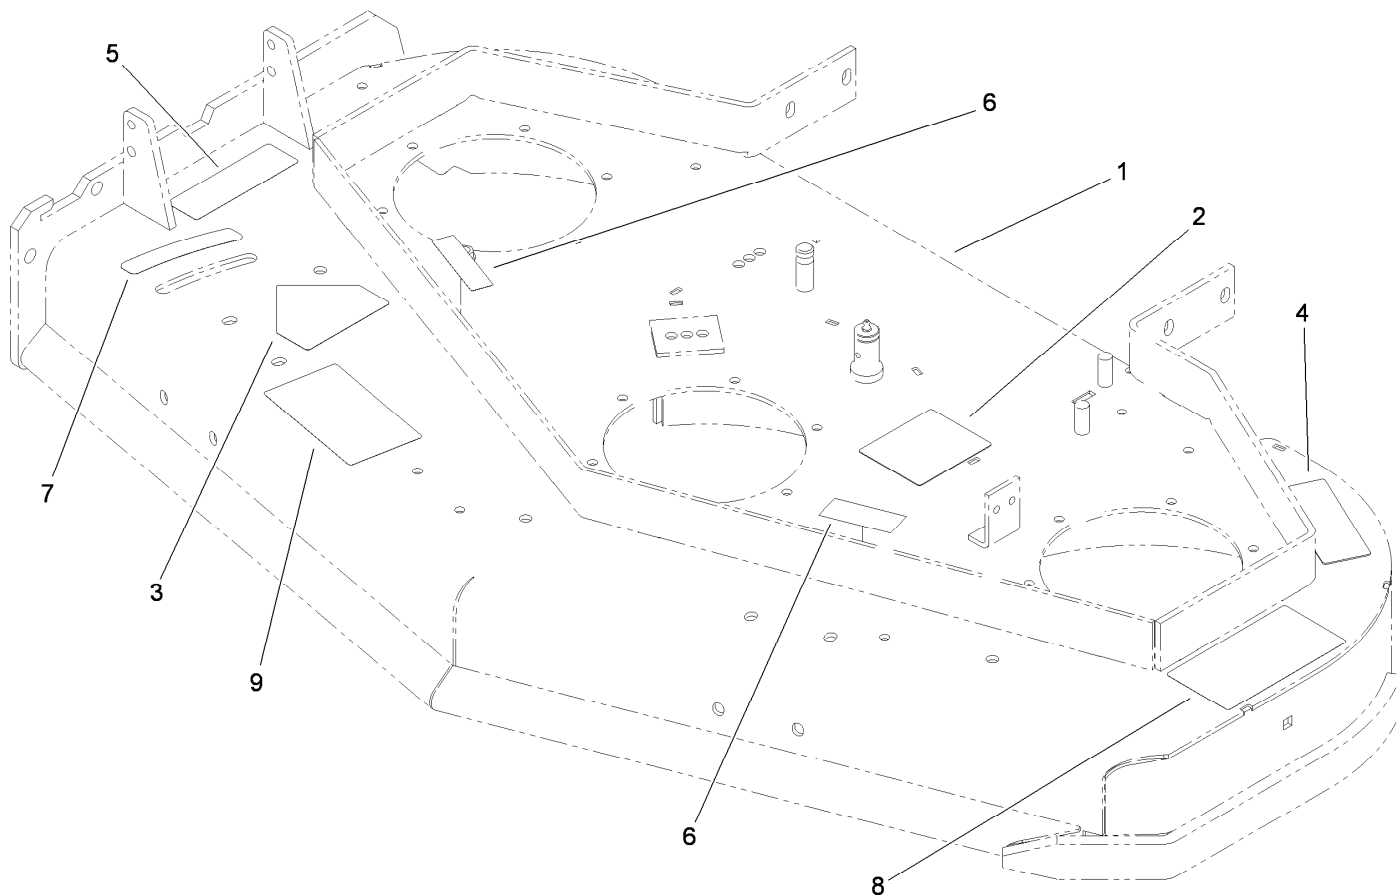

## Deck Decal Assembly No. 110-4909


| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    |             | 1    | 48 Inch Deck ASM ●          |
| 2    | 99-3943     | 1    | Decal-Routing, Belt         |
| 3    | 1-403005    | 1    | Decal-Danger                |
| 4    | 98-5130     | 1    | Decal-Torque, Bolt          |
| 5    | 104-8569    | 1    | Decal-Warning               |
| 6    | 98-5954     | 2    | Decal-Cover, Missing        |
| 7    | 110-2067    | 1    | Decal-Setting, Baffle       |
| 8    | 66-1340     | 1    | Decal-Danger, Thrown Object |
| 9    | 110-2068    | 1    | Decal-Adjustment, Baffle    |

● Not serviced separately

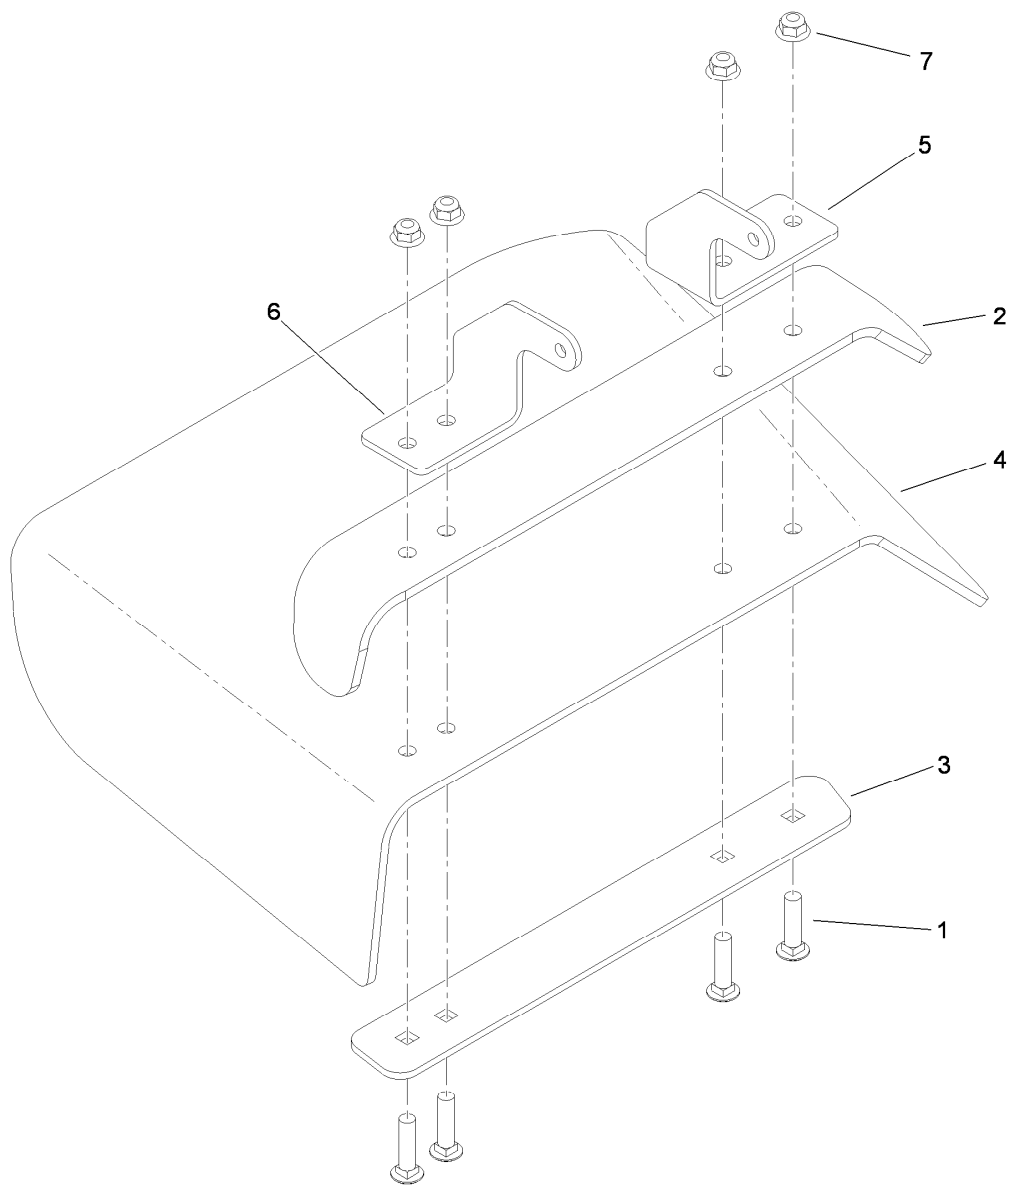

## Deflector Assembly No. 110-0758


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 3231-4      | 4    | Screw-CARR           |
| 2    | 106-3246-01 | 1    | Deflector            |
| 3    | 106-3248-03 | 1    | Strap-Discharge      |
| 4    | 110-0759    | 1    | Deflector-Rubber     |
| 5    | 107-4197-01 | 1    | Bracket-Hinge, Rear  |
| 6    | 107-4196-01 | 1    | Bracket-Hinge, Front |
| 7    | 104-8301    | 4    | Nut-Flange, NI       |

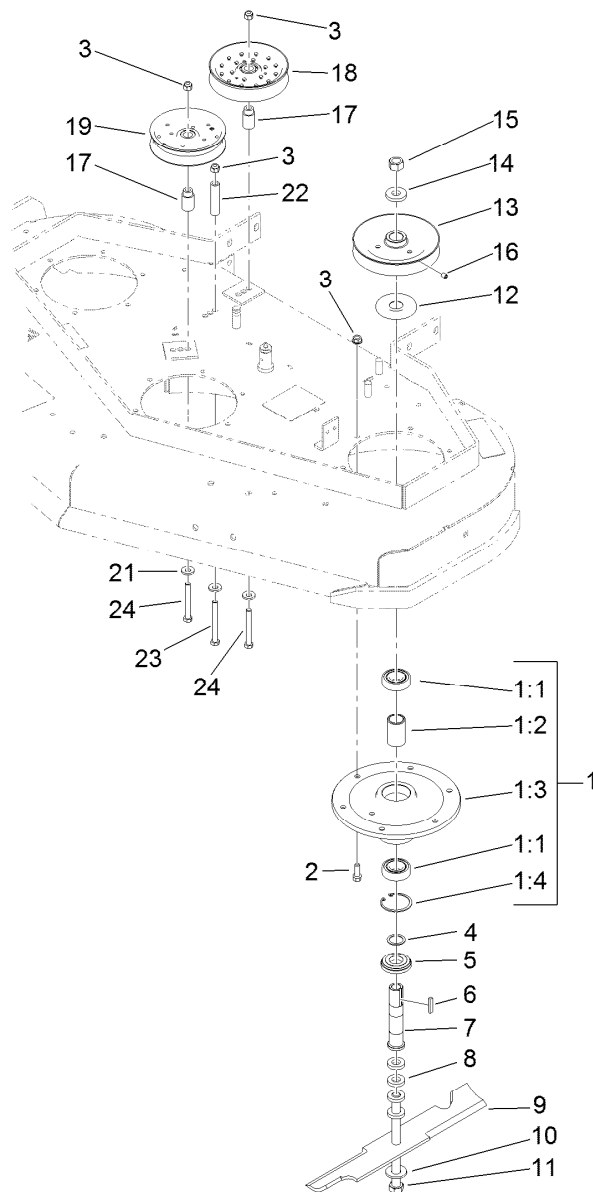

## Sheave, Spindle and Blade Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 108-6697    | 3    | Spindle Housing ASM         |
| 1:1  | 119-7857    | 2    | Bearing-Ball, 1 Inch        |
| 1:2  | 110-2116    | 1    | Spacer-Bearing              |
| 1:3  | 108-6694    | 1    | Housing-Spindle             |
| 1:4  | 32120-8     | 1    | Ring-Snap                   |
| 2    | 92-1624     | 18   | Screw-HWH                   |
| 3    | 104-8301    | 21   | Nut-Flange, NI              |
| 4    | 110-4888    | 3    | Washer-Spacer               |
| 5    | 103-2535    | 3    | Spacer-Guard, Bottom        |
| 6    | 1-807267    | 3    | Key                         |
| 7    | 1-323529    | 3    | Tube-Spindle, Short         |
| 8    | 1-323539    | 12   | Spacer                      |
| 9    | 107-3192-03 | 3    | Blade-16.5 Inch (High Flow) |
| 10   | 1-513208    | 3    | Washer-Spring               |


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 11   | 1-800861    | 3    | Screw-Cap, HH           |
| 12   | 103-1330    | 3    | Guard-Bearing, Top      |
| 13   | 1-403183    | 3    | Sheave                  |
| 14   | 1-323339    | 3    | Washer-Retainer, Sheave |
| 15   | 3219-6      | 3    | Nut-Hex                 |
| 16   | 3246-18     | 3    | Setscrew                |
| 17   | 1-413113    | 2    | Bushing-Idler           |
| 18   | 116-4665    | 1    | Idler-Pulley, Flat      |
| 19   | 1-613098    | 1    | Pulley-Idler            |
| 21   | 98-5975     | 3    | Washer-Belleville       |
| 22   | 1-403188    | 1    | Spacer                  |
| 23   | 323-15      | 1    | Screw-HH                |
| 24   | 323-14      | 2    | Screw-HH                |

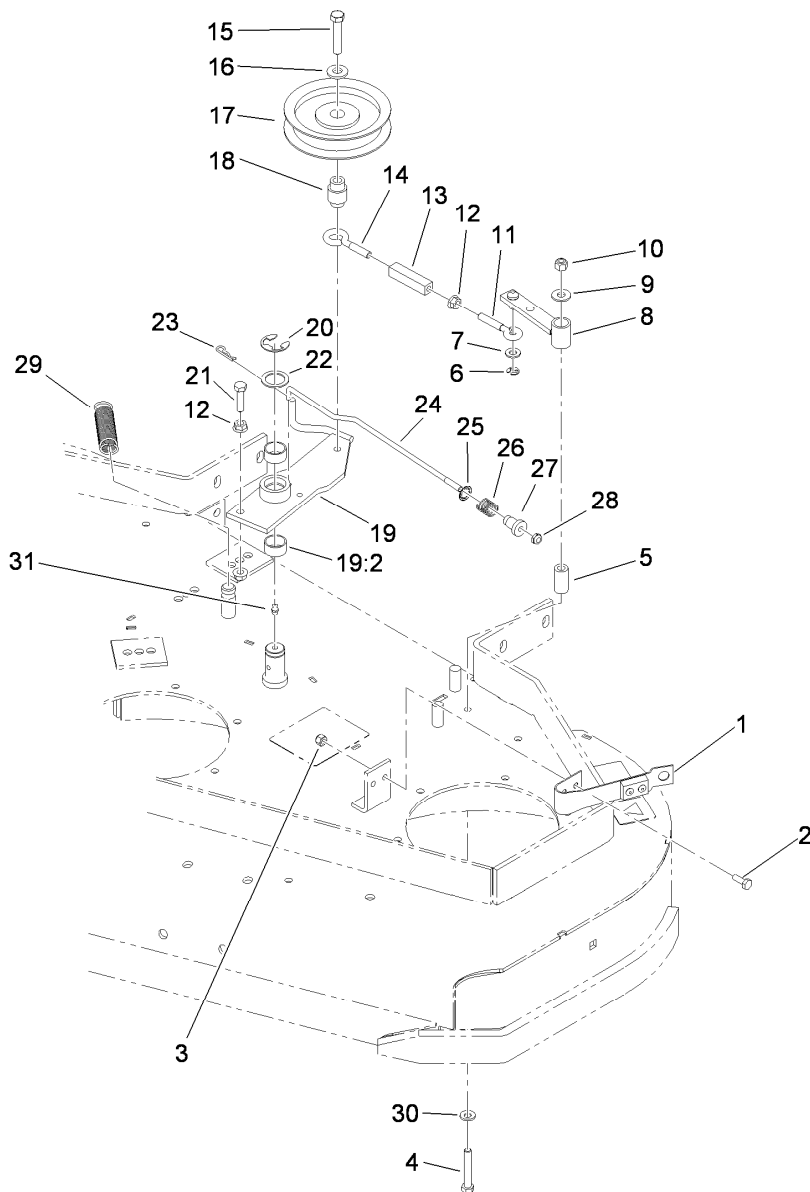

## Idler Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 1-324372    | 1    | Pad And Spring ASM  |
| 2    | 321-4       | 2    | Screw-HH            |
| 3    | 3296-42     | 2    | Nut-Lock, NI        |
| 4    | 322-10      | 1    | Screw-HH            |
| 5    | 1-403179    | 1    | Tube-Pivot          |
| 6    | 32120-35    | 1    | Ring-Retaining, EXT |
| 7    | 3256-23     | 1    | Washer-Flat         |
| 8    | 1-322235    | 1    | Arm-Assist          |
| 9    | 3256-3      | 1    | Washer-Flat         |
| 10   | 3296-29     | 1    | Nut-Lock, NI        |
| 11   | 1-303238    | 1    | Eyebolt-Thread, RH  |
| 12   | 32128-20    | 3    | Nut-HF              |
| 13   | 1-303236    | 1    | Body-Turnbuckle     |
| 14   | 1-303348    | 1    | Eyebolt-Thread, LH  |
| 15   | 702809      | 1    | Screw-HH            |
| 16   | 98-5975     | 1    | Washer-Belleville   |
| 17   | 116-3626    | 1    | Pulley-Idler        |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 18   | 1-303434    | 1    | Bushing-Engagement  |
| 19   | 103-3600    | 1    | Idler Arm ASM       |
| 19:2 | 1-323729    | 2    | Sleeve-Bearing      |
| 20   | 32151-103   | 1    | Ring-Retaining, EXT |
| 21   | 116-3515    | 1    | Screw-HH, Special   |
| 22   | 1-303352    | 1    | Washer-Spindle      |
| 23   | 1-806003    | 1    | Pin-Cotter, Hair    |
| 24   | 110-4932    | 1    | Rod-Brake           |
| 25   | 1-323748    | 1    | Ring-Push On        |
| 26   | 1-323747    | 1    | Spring-Compression  |
| 27   | 1-323746    | 1    | Spacer-Flanged      |
| 28   | 3296-56     | 1    | Nut-Lock, NI        |
| 29   | 1-323071    | 1    | Spring-Extension    |
| 30   | 1-303334    | 1    | Washer-Spring       |
| 31   | 302-40      | 1    | Fitting-Grease      |

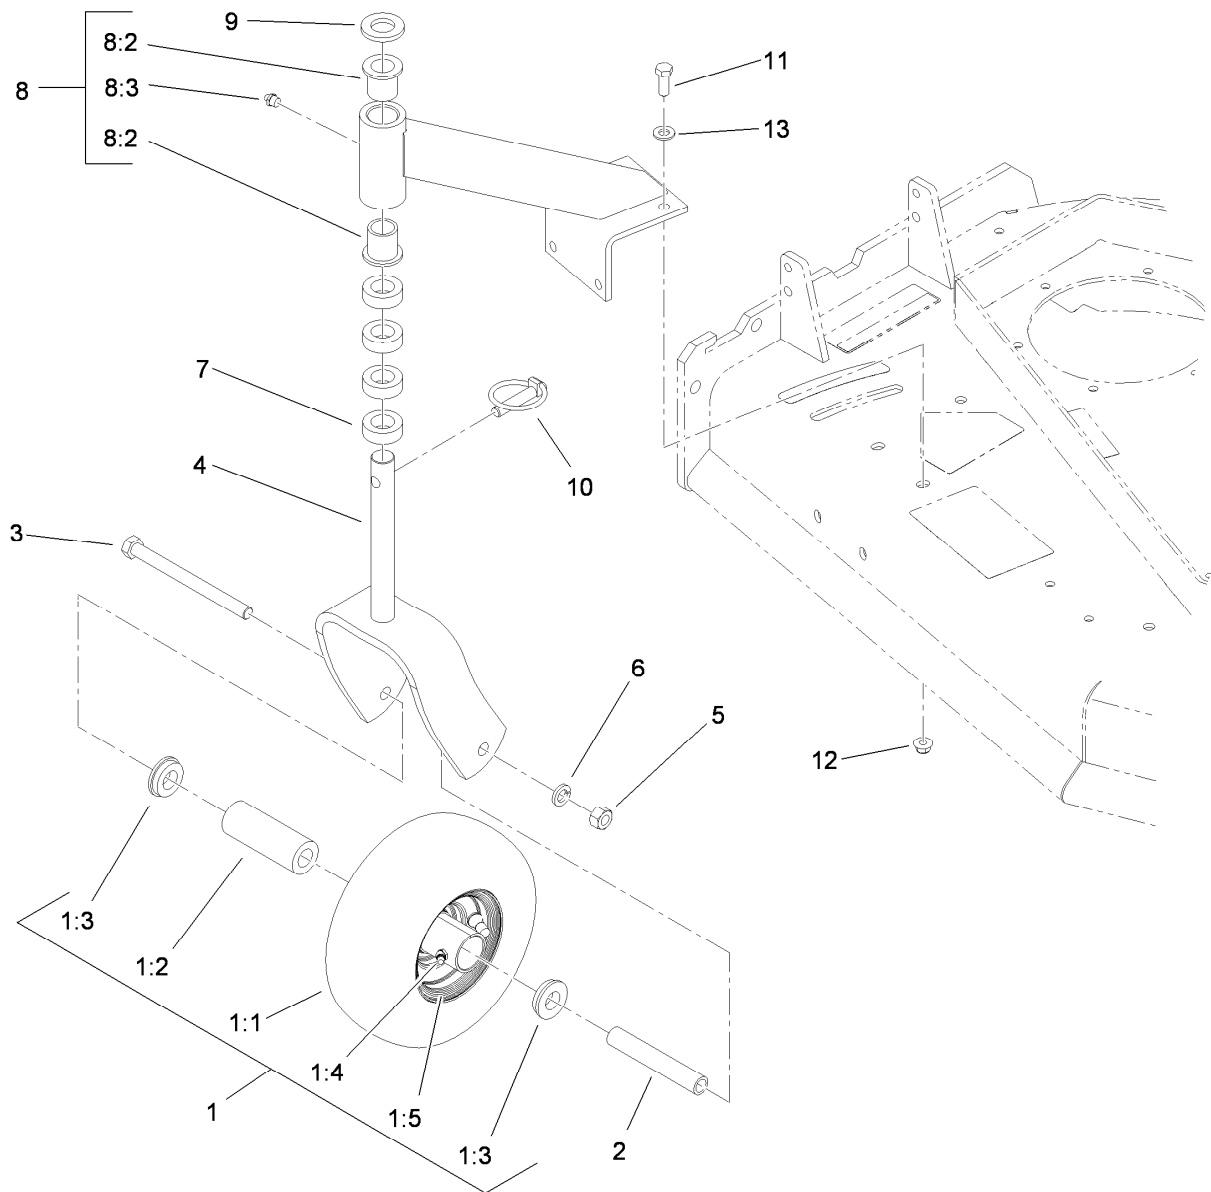

## Caster Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 110-5023    | 2    | Wheel And Tire ASM |
| 1:1  |             | 1    | Tire ●             |
| 1:2  | 1-513809    | 1    | Bearing            |
| 1:3  | 1-513810    | 2    | Bushing            |
| 1:4  | 302-61      | 1    | Fitting-Grease     |
| 1:5  |             | 1    | Wheel ●            |
| 2    | 1-513547    | 2    | Spacer             |
| 3    | 325-20      | 2    | Screw-HH           |
| 4    | 1-322145-01 | 2    | Fork               |
| 5    | 3217-9      | 2    | Nut-HH             |

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 6    | 3253-7      | 2    | Washer-Lock     |
| 7    | 1-303314    | 8    | Spacer-Caster   |
| 8    | 110-2130    | 2    | Support ASM     |
| 8:2  | 1-303514    | 2    | Bearing-Flanged |
| 8:3  | 302-52      | 1    | Fitting-Grease  |
| 9    | 1-513338    | 2    | Washer-Flat     |
| 10   | 1-809020    | 2    | Pin             |
| 11   | 323-6       | 8    | Screw-HH        |
| 12   | 104-8301    | 8    | Nut-Flange, NI  |
| 13   | 3256-24     | 8    | Washer-Flat     |

● Not serviced separately

## Attachments and Accessories

### For 39938 Commercial Walk-Behind Mower Fixed Deck, Pistol Grip, Hydro Drive with 48in TURBO FORCE Cutting Unit

| Product Name                                 | Model/Part  |
|----------------------------------------------|-------------|
| Blade-Low Flow, 16.5in.....                  | 107-3193-03 |
| Blade-Mid Flow, 16.5in .....                 | 107-3194-03 |
| Blade-Atomic, 16.5in .....                   | 107-3195-03 |
| Blade-Recycling, 16.5in.....                 | 107-3196-03 |
| Bagging Enhancement Kit .....                | 108-4091    |
| Blade-Hi Flow, 16.5in (6 Pack).....          | 110-0414    |
| Blade-Lo Flow, 16.5in (6 Pack) .....         | 110-0415    |
| Blade-Recycler, 16.5in (6 Pack).....         | 110-0416    |
| Blade-Atomic, 16.5in (6 Pack) .....          | 110-0417    |
| Blade-Mid Flow, 16.5in (6 Pack) .....        | 110-0418    |
| 48in Recycler Kit.....                       | 110-2060    |
| Operator Controlled Discharge Chute Kit..... | 115-4195    |
| Soft Bag (3 Bushel).....                     | 30104       |
| Sulky.....                                   | 30109       |

**Notes:**



**Count on it.**