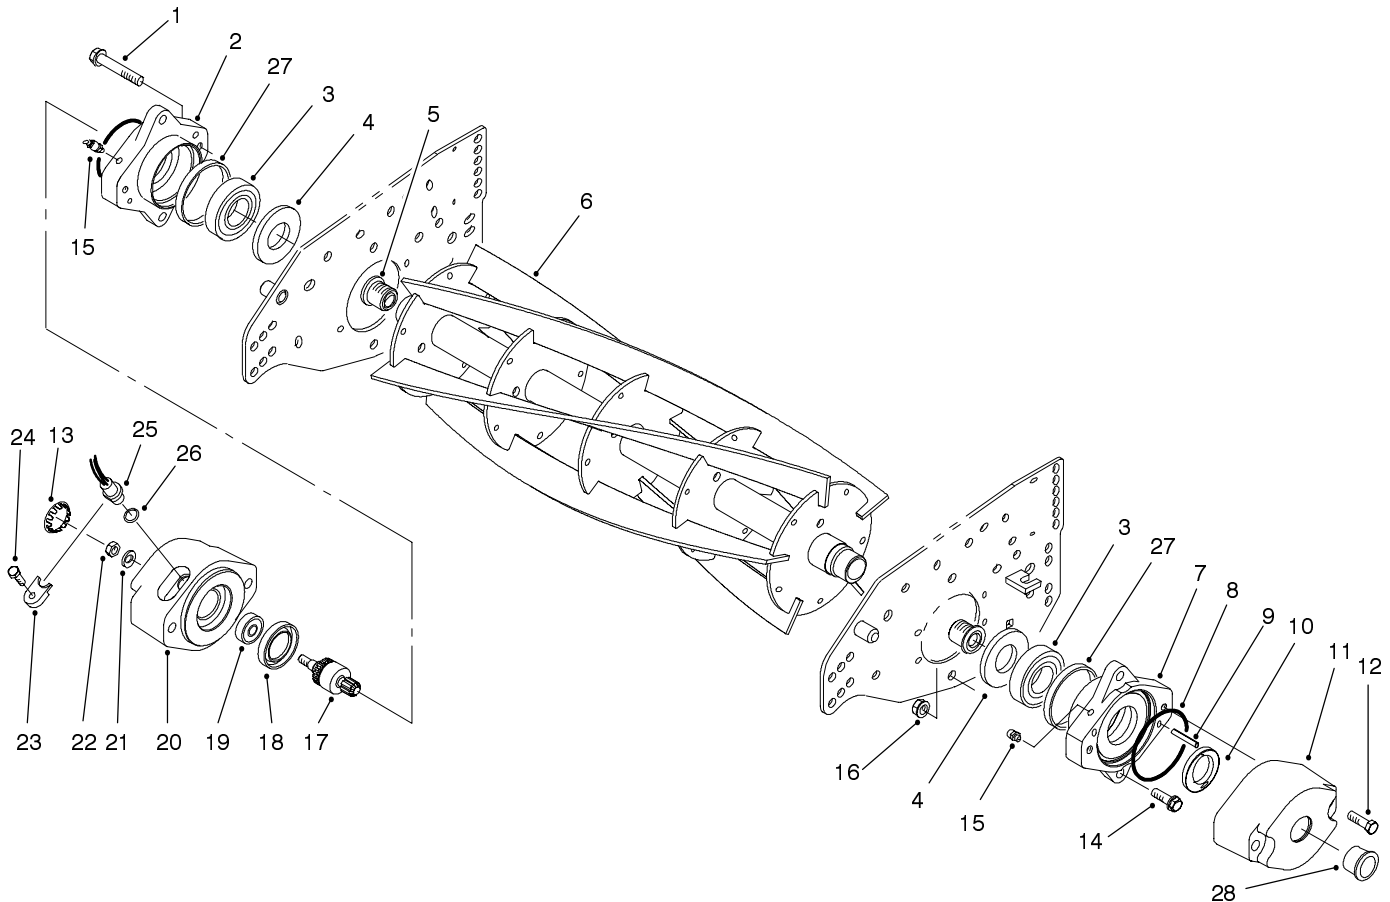



MODEL NO. 03854-60589 & UP
MODEL NO. 03856-62350 & UP
PARTS
CATALOG
5 & 11 BLADE REELS
REELMASTER® 6500D/6700D


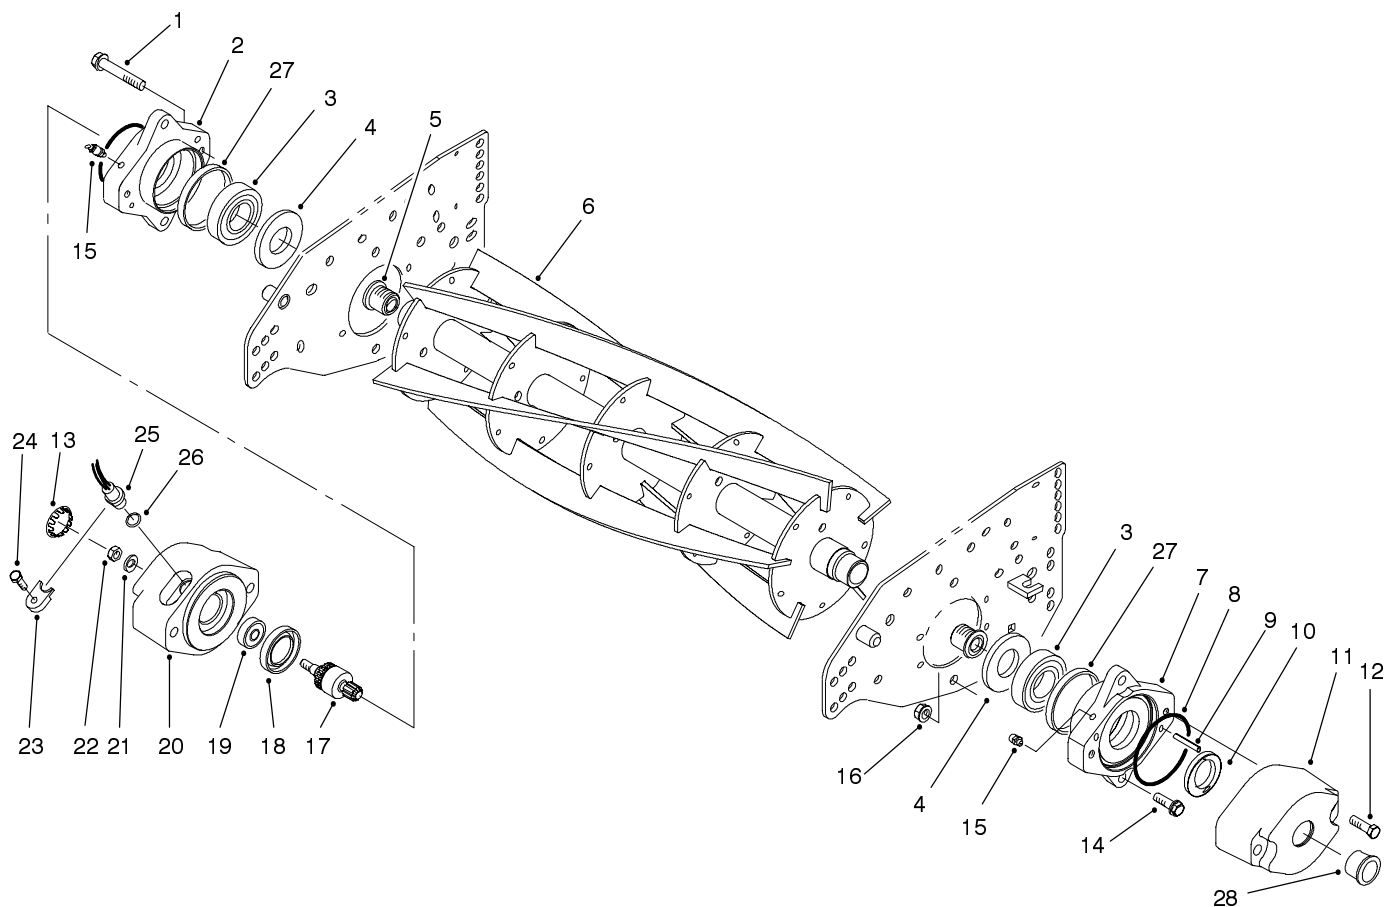
T-1979-2

REEL & BEARING HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	33105-060	Screw - HHF	2
2	93-9794	Housing - Bearing, RH (Incl. Ref. #27)	1
3	93-2489	Bearing	2
4	94-8908	Seal - Grease	2
5	94-2732	Insert - Threaded RH	1
*	94-2733	Insert - Threaded LH	1
6	94-4337	Reel Assembly Model 03854 (Incl. Ref. #5)	1
*	94-4338	Reel Assembly Model 03856 (Incl. Ref. #5)	1
7	93-9795	Housing - Bearing, LH (Incl. Ref. #27)	1
8	93-9783	O-Ring (Shipped with Traction Unit)	10
9	32121-69	Pin - Roll	4
10	93-9786	Nut - Bearing Adj.	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
11	93-4347	Weight - End (Shipped with Traction Unit)	3
12	93-7522	Screw - HH	2
13	93-3094	Plug - Cap	1
14	33105-030	Screw - HHF	4
15	302-11	Fitting - Grease 45°	2
16	33025-00	Nut - Lock	4
17	93-3085	Asm. - Shaft, Magnet	1
18	253-165	Seal - Outer	1
19	93-2956	Bearing	1
20	93-3080	Weight - Housing, End	1
21	3256-23	Washer - Flat	1
22	33024-00	Nut - Lock	1
23	93-3088	Clamp (Shipped with Traction Unit)	2
24	33103-020	Screw - HH (Shipped with Traction Unit)	2




T-1979-2

REEL & BEARING HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
25	94-6980	Sensor - Speed (Shipped with Traction Unit)	2
26	237-30	O-Ring (Shipped with Traction Unit)	2
27	93-2922	Ring - Bearing	2

Ref. No.	Part No.	Description	No. Used
28 *	93-8717 93-3076	Plug Asm. - Weight, End (Incl. Ref. #13, & 17-22) Shipped with Traction Unit	1 2


*Not Illustrated

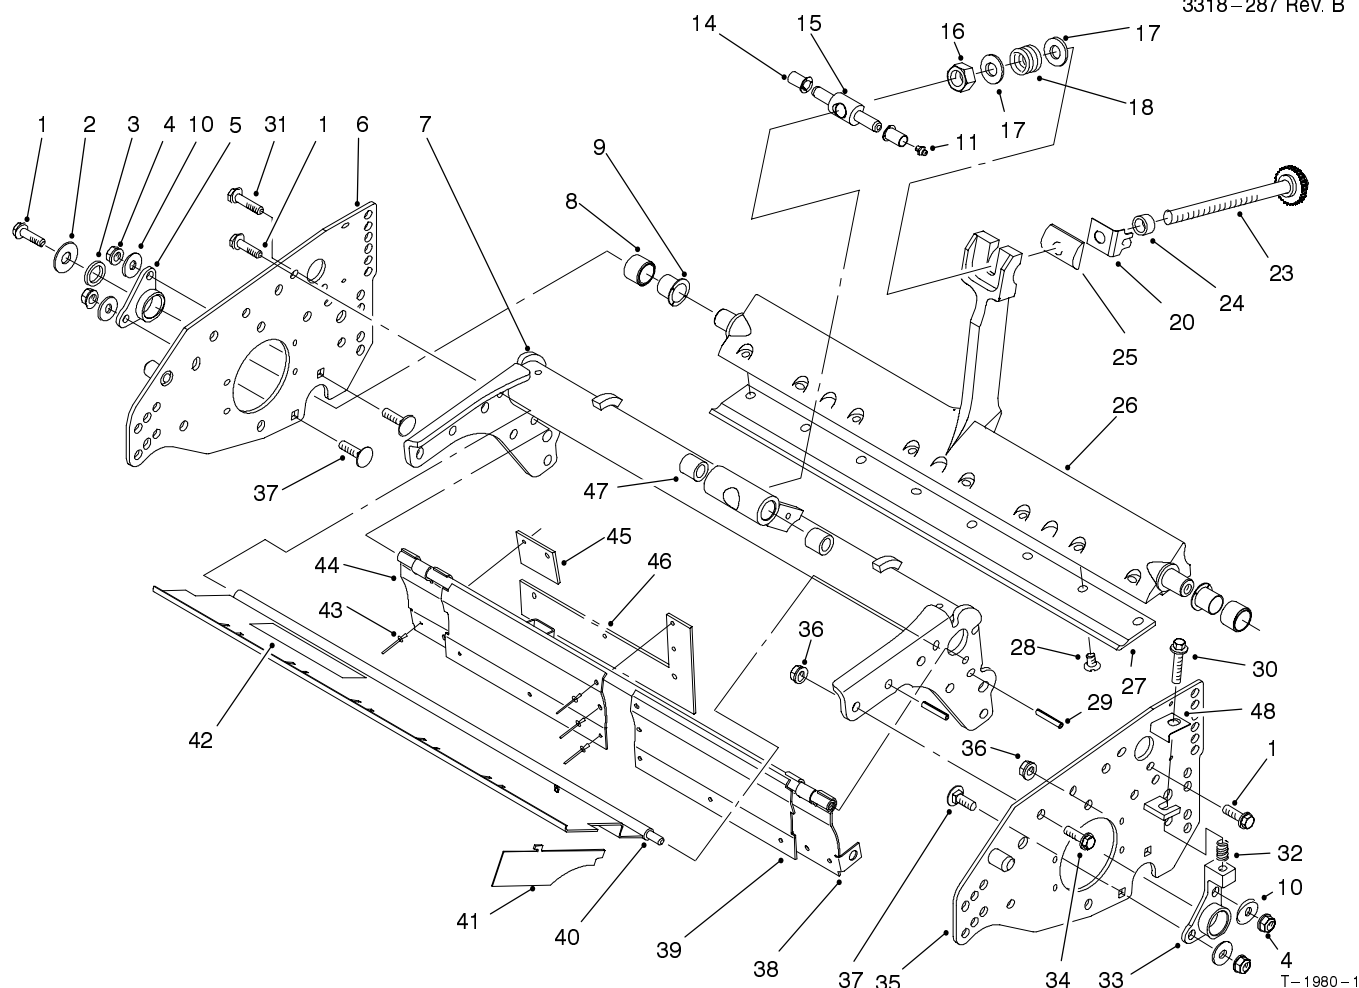

FRAME & BEDBAR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33104-020	Screw - HHF	3	28	57-4910	Screw - Special	8
2	3256-35	Washer	1	29	32121-36	Pin - Roll	4
3	93-7510	Ring - Quad	1	30	93-2571	Screw	1
4	33024-00	Nut - Lock	4	31	33104-040	Screw - HHF	1
5	93-2513	Pivot Hub RH	1	32	93-2516	Spring - Compression	1
6	93-2981	Sideplate - RH	1	33	93-2512	Pivot Hub LH	1
7	93-9769	Reel Frame	1	34	33105-025	Screw - HHF	8
8	93-7501	Bushing Assembly	2	35	93-2982	Sideplate - LH	1
9	93-7502	Bushing - Flange	2	36	33025-00	Nut - Lock	12
10	33094-00	Washer - Flat	4	37	94-2738	Screw - Carriage	4
11	302-18	Fitting - Grease, Str.	1	38	93-3008	Shield - LT	1
14	52-2890	Bushing - Plastic	2	39	93-2996	Rear Grass Shield	1
15	57-5260	Pivot Screw Adj.	1	40	94-8942	Asm. - Grass Shield (Incl. Ref. #42)	1
16	3296-62	Nut - Lock	1	41	93-9759	Deflector - Grass Shield	5
17	29-8910	Washer	2	42	67-7960	Decal - Danger, Reel	1
18	93-2915	Spring - Compression	1	43	700382	Rivet	14
20	93-9767	Arm - Spring	1	44	93-2998	Shield - RT	1
23	93-2957	Bedbar Adjuster Assy.	1	45	93-3012	Flap - Side	2
24	93-2959	Spacer - Adjuster	1	46	93-3011	Flap - Bottom	2
25	93-2892	Pivot - Bedbar, Man. Adj.	1	47	62-5510	Bushing	2
26	93-2854	Bedbar	1	48	93-9784	Clip - Bedbar Adj.	1
27	93-9774	Bedknife - Reel	1				

*Not Illustrated

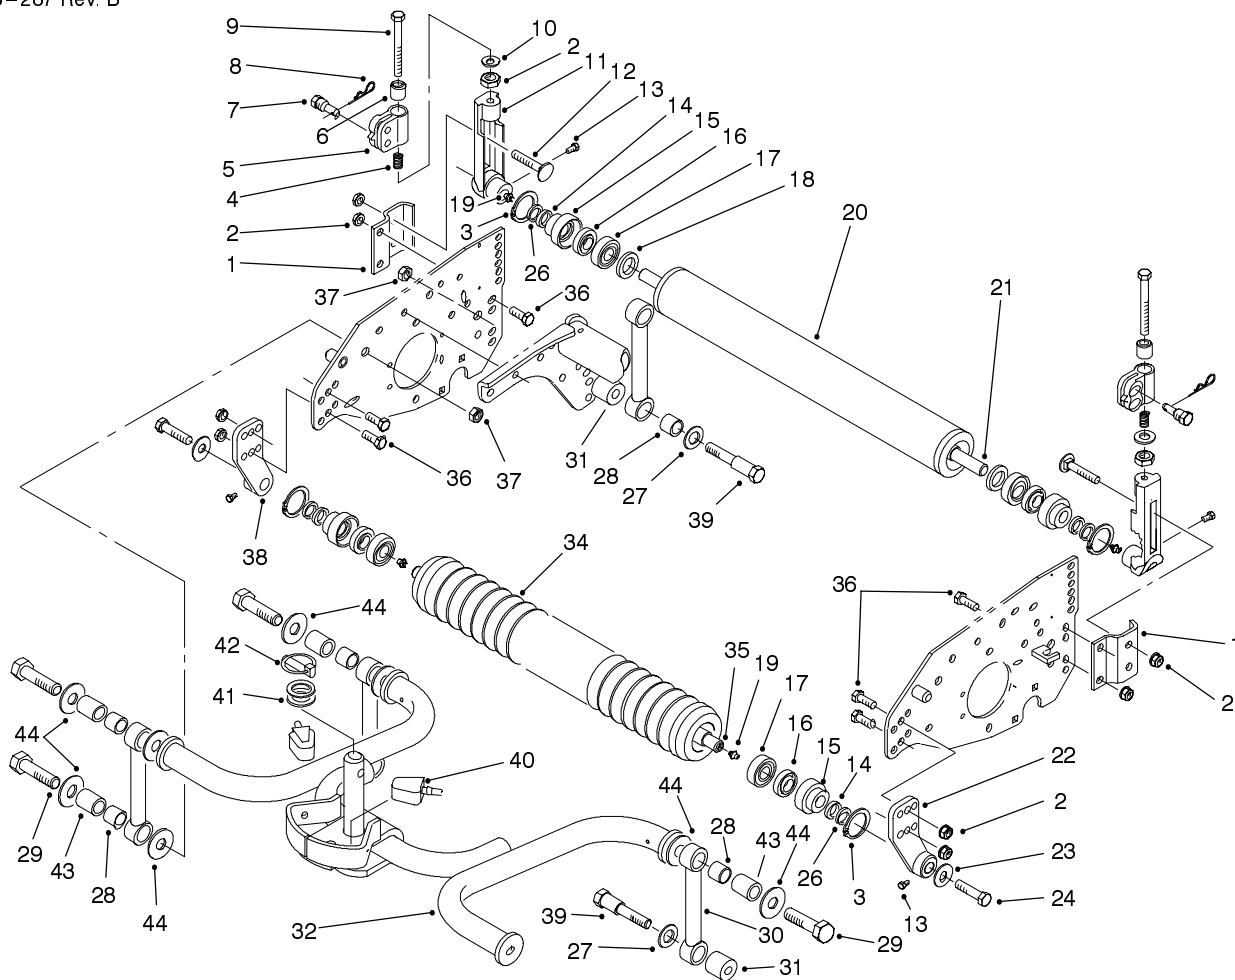

T-1981-1

ROLLERS & 4 BAR FRAME ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	61-0910	Bracket - Angle	2
2	33025-00	Nut - Lock	12
3	32120-62	Snap Ring	4
4	93-2921	Spring - Compression HOC	2
5	93-2902	Support - HOC, Rear	2
6	94-4344	Spacer	2
7	93-2906	Pin - HOC	2
8	3290-467	Pin - Cotter, Hair	2
9	93-7500	Screw - HH	2
10	93-7509	Washer - Special	2
11	93-2904	Bracket - HOC, Rear	2
12	33125-030	Screw - Carriage	2
13	93-9757	Screw - HH	4
14	253-70	Seal - Oil	4
15	93-1252	Seal - Outer	4
16	93-1251	Seal - Inner	4
17	109966	Bearing - Ball	4
18	93-3007	Seal - Oil	4
19	302-5	Fitting - Grease, Straight	4
20	94-4335	Tube Assy. - Rear Roller	1
21	94-4328	Shaft - Rear Roller	1
22	94-4332	HOC Bracket - Frt. LH	1
23	3290-455	Washer - Belleville	2
24	33115-016	Screw - HH	2

Ref. No.	Part No.	Description	No. Used
26	93-2931	Washer - Roller	4
27	93-3001	Washer	2
28	94-8945	Bushing	8
29	94-2702	Bolt	6
30	93-3087	Link - 4 Bar	4
31	93-9775	Spacer	2
32	93-7407	Frame - 4 Bar	1
34	94-4336	Roller - Wiehle	1
35	94-4329	Shaft - Wiehle Roller	1
36	33105-025	Screw - HHF	8
37	94-4307	Nut - Lock	4
38	94-4333	HOC Bracket - Frt. RH	1
39	93-9777	Bolt - Shoulder, Long	2
40	93-9173	Bumper	2
41	3256-42	Washer - Flat	2
42	283-71	Pin - Lynch	1
43	94-2700	Spacer - Link	6
44	94-2701	Washer - Hardened	12
*	94-4331	Rear Roller Assembly (Incl. Ref. #3, 14-21 & 26)	1
*	94-4330	Wiehle Roller Assembly (Incl. Ref. #3, 14-19, 25 26 & 34-35)	1

*Not Illustrated

SPECIAL TOOLS


GAUGE BAR ASSEMBLY NO. 59-7900

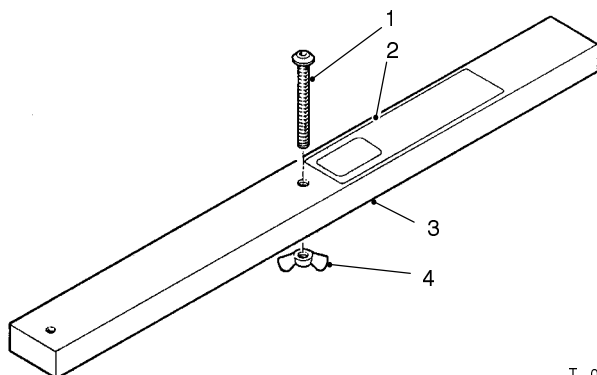

T-0191-1

Ref. No.	Part No.	Description	No. Used
1	32122-54	Screw – Mach. Slot. Hd.	1
2	59-7930	Decal	1
3		Bar	1
4	32103-3	Nut – Wing	1


BACKLAPPING BRUSH ASSEMBLY NO. *TOR299100

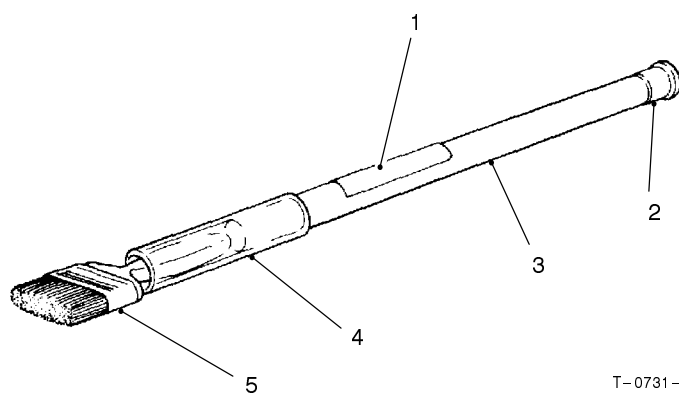

T-0731-1

Ref. No.	Part No.	Description	No. Used
1	12-9140	Decal	1
2	2410-18	Plug	1
3	29-9080	Handle	1
4	29-9090	Hose – Handle	1
5	36-4310	Brush	1


BEDKNIFE SCREW TOOL NO. *TOR510880

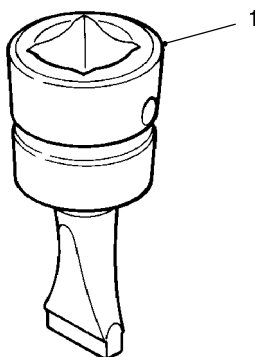

T-0729-1

Ref. No.	Part No.	Description	No. Used
1		Tool – Bedknife Screw	1

REEL DRIVE SHAFT NO. *TOR4075

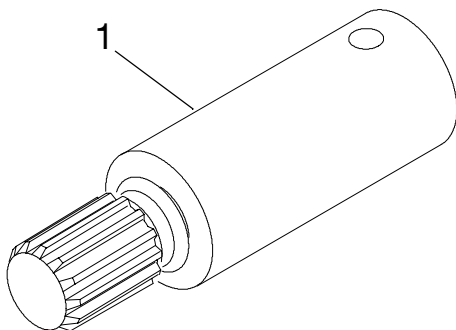

T-2383-2

Ref. No.	Part No.	Description	No. Used
1		Shaft – Reel Drive	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
109966	Bearing – Ball	4 17 4	93–9775	Spacer	4 31 2
700382	Rivet	3 43 14	93–9777	Bolt – Shoulder, Long	4 39 2
12–9140	Decal	5 1 1	93–9783	O–Ring	1 8 10
29–8910	Washer	3 17 2	93–9784	Clip – Bedbar Adj.	3 48 1
29–9080	Handle	5 3 1	93–9786	Nut – Bearing Adj.	1 10 1
29–9090	Hose – Handle	5 4 1	93–9794	Housing – Bearing, RH	1 2 1
36–4310	Brush	5 5 1	93–9795	Housing – Bearing, LH	1 7 1
51–0880	Tool – Bedknife Screw	5 1 1	94–2700	Spacer – Link	4 43 6
52–2890	Bushing – Plastic	3 14 2	94–2701	Washer – Hardened	4 44 12
57–4910	Screw – Special	3 28 8	94–2702	Bolt	4 29 6
57–5260	Pivot Screw Adj.	3 15 1	94–2732	Insert – Threaded RH	1 5 1
59–7930	Decal	5 2 1	94–2733	Insert – Threaded LH	1 * 1
61–0910	Bracket – Angle	4 1 2	94–2738	Screw – Carriage	3 37 4
62–5510	Bushing	3 47 2	94–4307	Nut – Lock	4 37 4
67–7960	Decal – Danger, Reel	3 42 1	94–4328	Shaft – Rear Roller	4 21 1
93–1251	Seal – Inner	4 16 4	94–4329	Shaft – Wiehle Roller	4 35 1
93–1252	Seal – Outer	4 15 4	94–4330	Wiehle Roller Assembly	4 * 1
93–2489	Bearing	1 3 2	94–4331	Rear Roller Assembly	4 * 1
93–2512	Pivot Hub LH	3 33 1	94–4332	HOC Bracket – Frt. LH	4 22 1
93–2513	Pivot Hub RH	3 5 1	94–4333	HOC Bracket – Frt. RH	4 38 1
93–2516	Spring – Compression	3 32 1	94–4335	Tube Assy. – Rear Roller	4 20 1
93–2571	Screw	3 30 1	94–4336	Roller – Wiehle	4 34 1
93–2854	Bedbar	3 26 1	94–4337	Reel Assembly Model 03854	1 6 1
93–2892	Pivot – Bedbar, Man. Adj.	3 25 1	94–4338	Reel Assembly Model 03856	1 * 1
93–2902	Support – HOC, Rear	4 5 2	94–4344	Spacer	4 6 2
93–2904	Bracket – HOC, Rear	4 11 2	94–6980	Sensor – Speed	2 25 2
93–2906	Pin – HOC	4 7 2	94–8908	Seal – Grease	1 4 2
93–2915	Spring – Compression	3 18 1	94–8942	Asm. – Grass Shield	3 40 1
93–2921	Spring – Compression HOC	4 4 2	94–8945	Bushing	4 28 8
93–2922	Ring – Bearing	2 27 2	237–30	O–Ring	2 26 2
93–2931	Washer – Roller	4 26 4	2410–18	Plug	5 2 1
93–2956	Bearing	1 19 1	253–70	Seal – Oil	4 14 4
93–2957	Bedbar Adjuster Assy.	3 23 1	253–165	Seal – Outer	1 18 1
93–2959	Spacer – Adjuster	3 24 1	283–71	Pin – Lynch	4 42 1
93–2981	Sideplate – RH	3 6 1	302–5	Fitting – Grease, Straight	4 19 4
93–2982	Sideplate – LH	3 35 1	302–11	Fitting – Grease 45°	1 15 2
93–2996	Rear Grass Shield	3 39 1	302–18	Fitting – Grease, Str.	3 11 1
93–2998	Shield – RT	3 44 1	3256–23	Washer – Flat	1 21 1
93–3001	Washer	4 27 2	3256–35	Washer	3 2 1
93–3007	Seal – Oil	4 18 4	3256–42	Washer – Flat	4 41 2
93–3008	Shield – LT	3 38 1	3290–455	Washer – Belleville	4 23 2
93–3011	Flap – Bottom	3 46 2	3290–467	Pin – Cotter, Hair	4 8 2
93–3012	Flap – Side	3 45 2	3296–62	Nut – Lock	3 16 1
93–3076	Asm. – Weight, End	2 * 2	32103–3	Nut – Wing	5 4 1
93–3080	Weight – Housing, End	1 20 1	32120–62	Snap Ring	4 3 4
93–3085	Asm. – Shaft, Magnet	1 17 1	32121–36	Pin – Roll	3 29 4
93–3087	Link – 4 Bar	4 30 4	32121–69	Pin – Roll	1 9 4
93–3088	Clamp	1 23 2	32122–54	Screw – Mach. Slot. Hd.	5 1 1
93–3094	Plug – Cap	1 13 1	33024–00	Nut – Lock	3 4 4
93–4347	Weight – End	1 11 3	33024–00	Nut – Lock	1 22 1
93–7407	Frame – 4 Bar	4 32 1	33025–00	Nut – Lock	4 2 12
93–7500	Screw – HH	4 9 2	33025–00	Nut – Lock	1 16 4
93–7501	Bushing Assembly	3 8 2	33025–00	Nut – Lock	3 36 12
93–7502	Bushing – Flange	3 9 2	33094–00	Washer – Flat	3 10 4
93–7509	Washer – Special	4 10 2	33103–020	Screw – HH	1 24 2
93–7510	Ring – Quad	3 3 1	33104–020	Screw – HHF	3 1 3
93–7522	Screw – HH	1 12 2	33104–040	Screw – HHF	3 31 1
93–8717	Plug	2 28 1	33105–025	Screw – HHF	3 34 8
93–9173	Bumper	4 40 2	33105–025	Screw – HHF	4 36 8
93–9757	Screw – HH	4 13 4	33105–030	Screw – HHF	1 14 4
93–9759	Deflector – Grass Shield	3 41 5	33105–060	Screw – HHF	1 1 2
93–9767	Arm – Spring	3 20 1	33115–016	Screw – HH	4 24 2
93–9769	Reel Frame	3 7 1	33125–030	Screw – Carriage	4 12 2
93–9774	Bedknife – Reel	3 27 1			

*Not Illustrated

