



Count on it.

Parts Catalog

Midmount Toolbar System

**Sand Pro®/Infield Pro® 3040 and 5040
Traction Unit**

Model No. 08731—Serial No. 312000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head


STD: standard

TAP: self tapping

TTH: torx truss head

Contents


Midmount Toolbar Assembly	4
Scarifier Handle Assembly	5
Rod Assembly	6
Toolbar Kickup Assembly	7
Attachments and Accessories	8

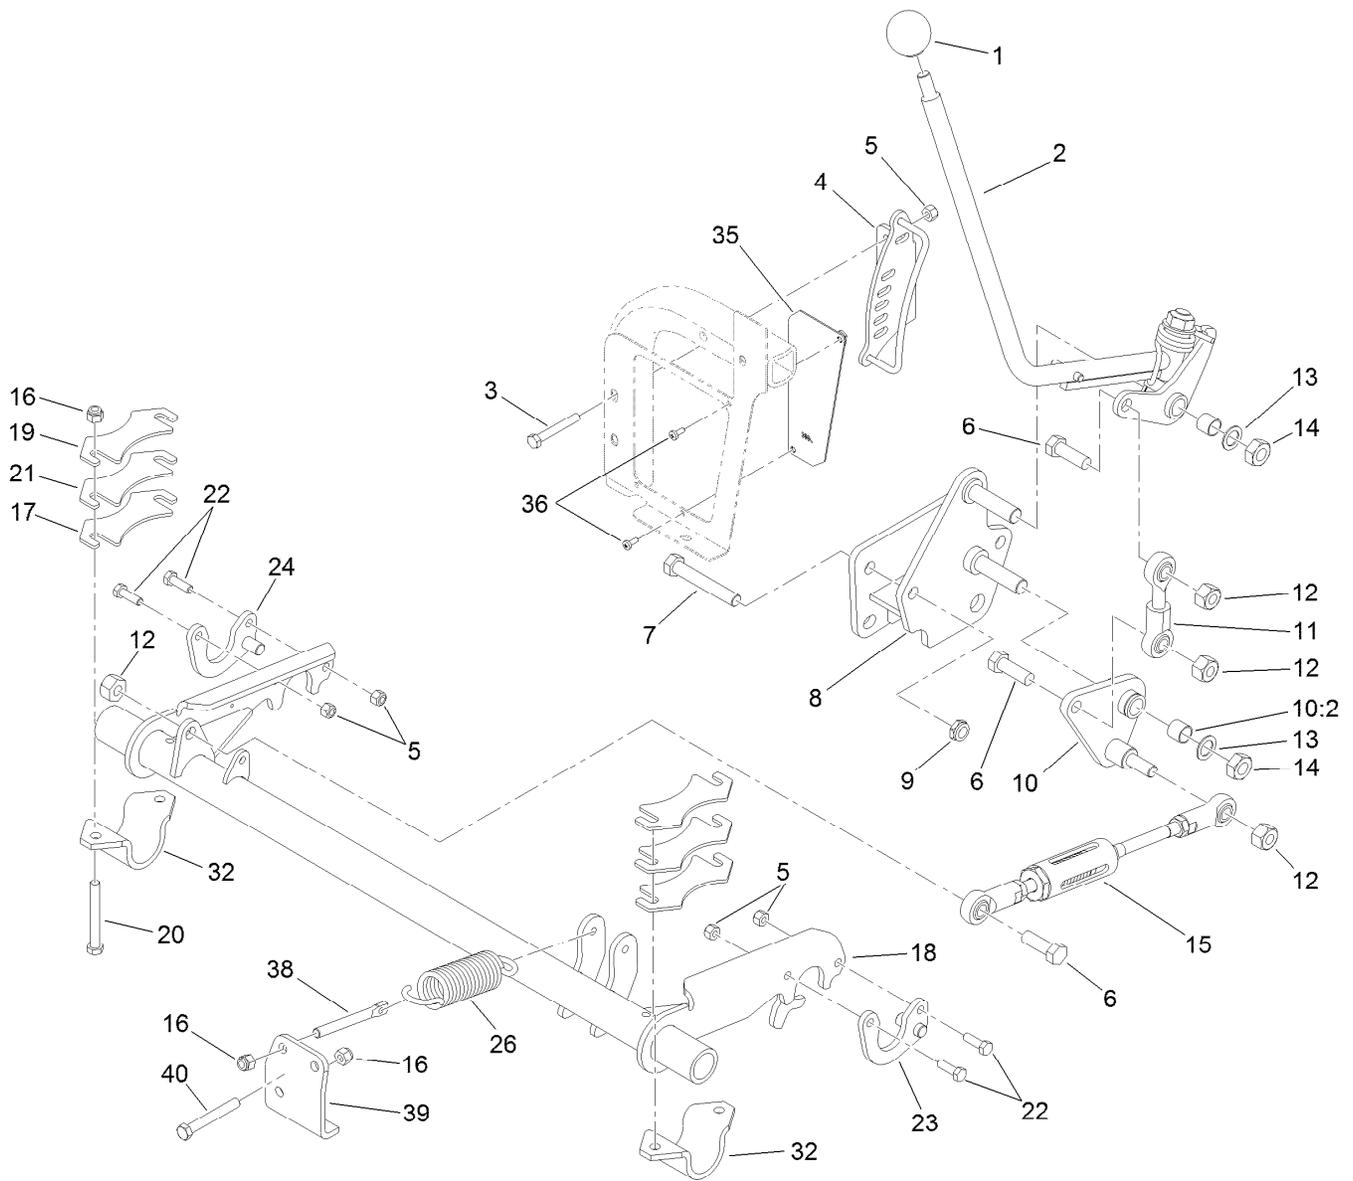

Midmount Toolbar Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	233-48	1	Knob	16	3296-39	6	Nut-Lock, NI
2		1	Scarifier Handle ASM ●	17	110-7379	1	Shim-Midmount, 14 GA
3	322-11	2	Screw-HH	18	108-4511-01	1	Tube ASM
4	108-8492-01	1	Detent Plate ASM	19	110-7380	1	Shim-Midmount, 1/4 In
5	3296-29	6	Nut-Lock, NI	20	323-14	4	Screw-HH
6	325-6	3	Screw-HH	21	110-7381	1	Shim-Midmount, 10 GA
7	325-13	2	Screw-HH	22	322-5	4	Screw-HH
8	108-2835-01	1	Scarifier Mount ASM	23	108-4530	1	LH Saddle ASM
9	3296-45	2	Nut-Lock, NI	24	108-4528	1	RH Saddle ASM
10	108-4537	1	Bellcrank ASM	26	108-5412	1	Spring-Extension
10:2	256-311	2	Bushing-Split	32	110-8166	2	Bracket-Tube, Pivot
11	108-5401	1	Link-Rod End	35	120-3493	1	Scarifier Panel Screen ASM
12	3296-25	4	Nut-Lock, NI	36	3250-14	2	Screw-PPH
13	3256-69	2	Washer-Flat	38	108-5413	1	Rod-Spring
14	3296-33	2	Nut-Lock, NI	39	110-3336-03	1	Bracket-Spring
15		1	Rod ASM ●	40	323-13	1	Screw-HH

● Not serviced separately

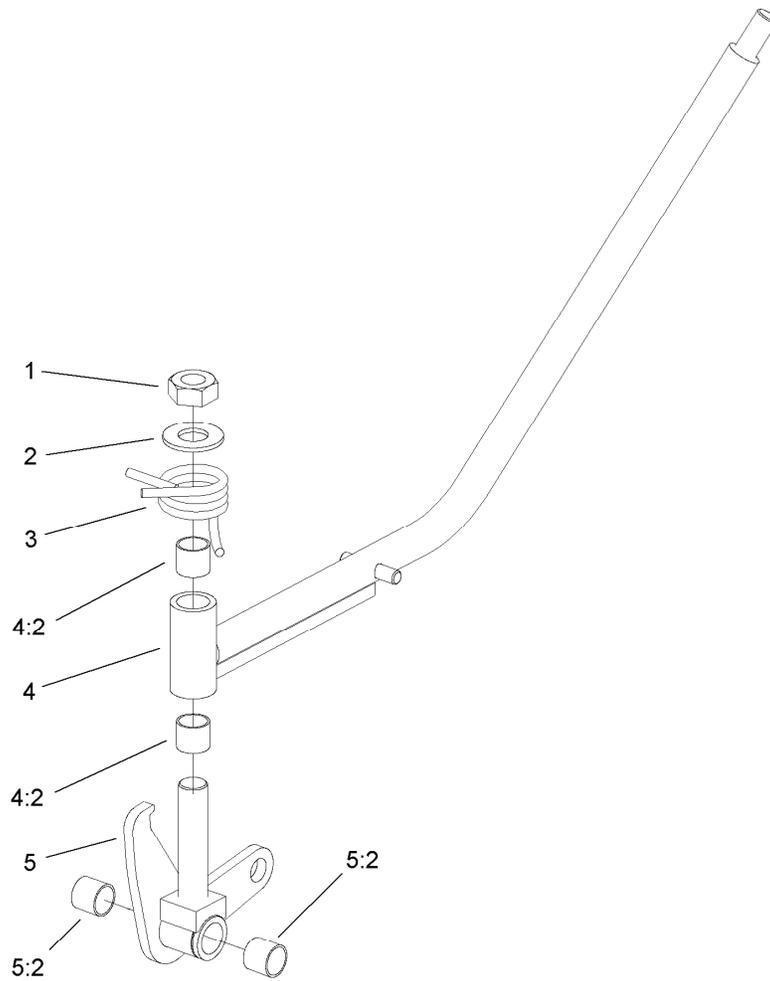


Scarifier Handle Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3296-33	1	Nut-Lock, NI
2	3256-27	1	Washer-Flat
3	108-4548	1	Spring-Torsion
4	108-4540	1	Handle ASM
4:2	256-311	2	Bushing-Split
5	108-2848	1	Pivot ASM
5:2	256-311	2	Bushing-Split

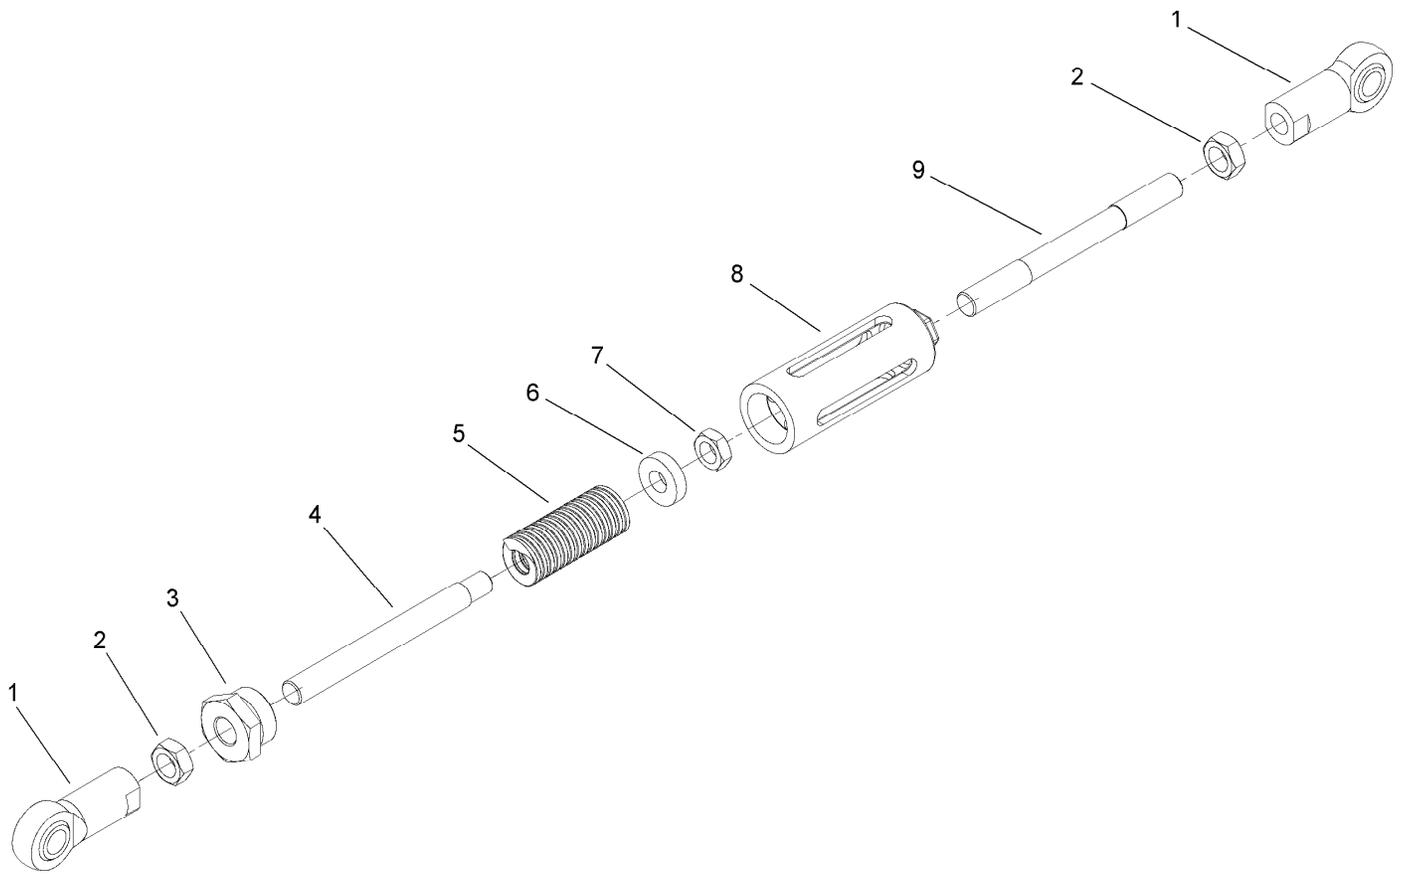

Rod Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	2411-44	2	End-Rod
2	3220-5	2	Nut-Jam
3	108-4543	1	Cap-Hex
4	108-4545	1	Rod-Spring
5	108-4544	1	Spring-Compression
6	108-4546	1	Washer
7	3220-4	1	Nut-Jam
8	108-4542	1	Sleeve-Spring
9	108-4531	1	Shaft-Link

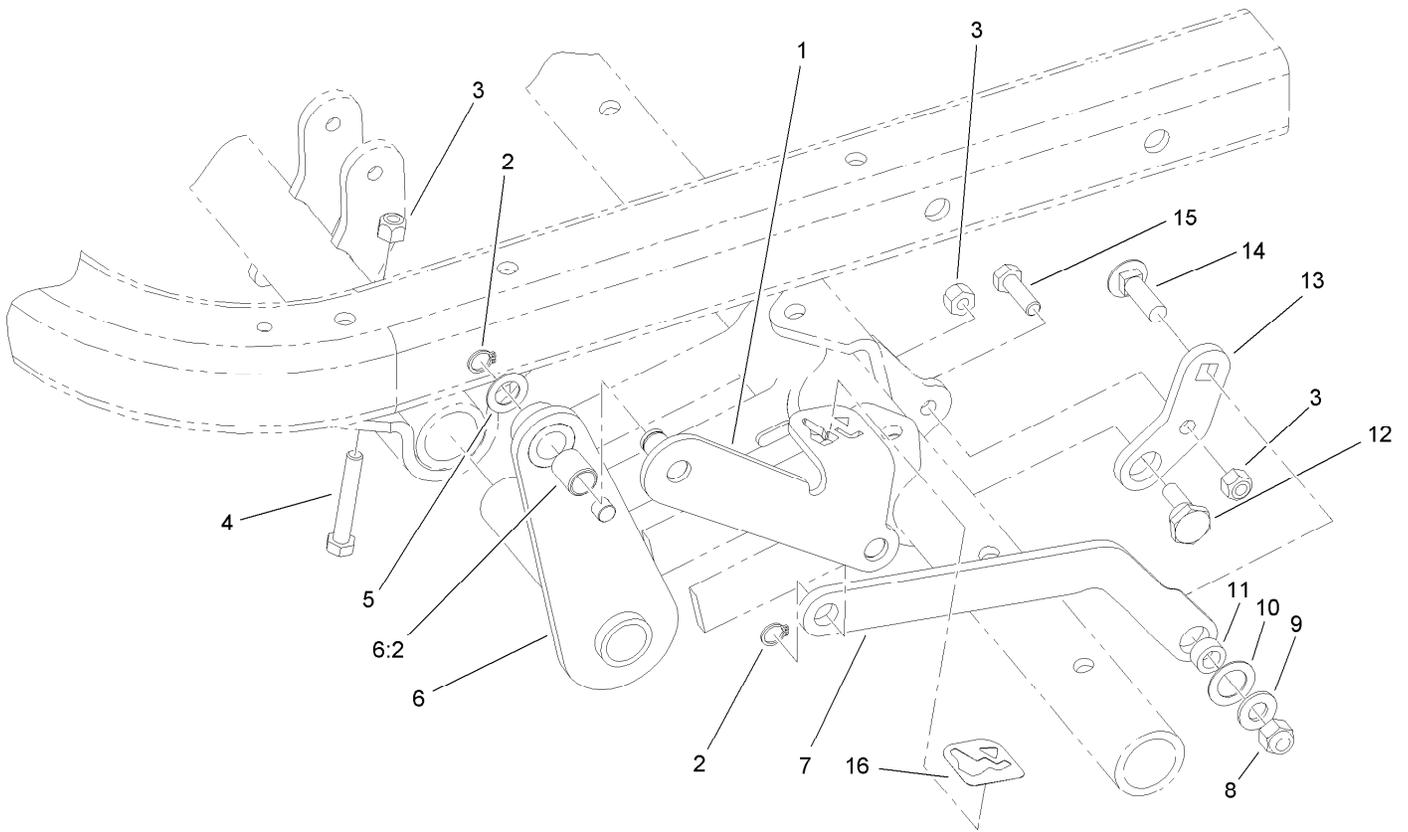

Toolbar Kickup Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-6490	1	Lever ASM
2	32151-61	2	Ring-Retaining
3	3296-29	3	Nut-Lock, NI
4	322-10	1	Screw-HH
5	98-1629	1	Washer
6	112-6474	1	Lever ASM
6:2	256-172	1	Bushing
7	112-6487-03	1	Link-Toolbar
8	3296-39	1	Nut-Lock, NI
9	3256-24	1	Washer-Flat
10	108-0015	1	Washer-Flat
11	114127	1	Spacer
12	112-7152	1	Bolt-Eccentric
13	112-7150	1	Tab-Pivot
14	3231-25	1	Screw-CARR
15	322-5	1	Screw-HH
16	112-7145	1	Pad-Pedal, Foot

Attachments and Accessories

For 08731 Midmount Toolbar System Sand Pro/Infield Pro 3040 and 5040 Traction Unit

Product Name	Model/Part
Weeder Tine Toolbar.....	08732
Spring Tine Toolbar.....	08733
Scarifier Tine Toolbar.....	08734
Carbide Tine Toolbar	08735

Notes:

Notes:

Notes:



Count on it.