



Count on it.

Parts Catalog

30in Stand-On Aerator

Model No. 23518—Serial No. 312000001 and Up

Model No. 33518—Serial No. 312000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LPG: Liquid Propane Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Main Frame Assembly 4

Main Frame Decal Assembly No. 116-7298..... 5

Caster Wheel and Fork Assembly 6

Tower Assembly 7

Ground Drive Assembly 8

RH Transaxle Assembly No. 116-6614..... 10

LH Transaxle Assembly No. 116-6615 11

Axle and Bearing Assembly No. 116-7645..... 12

Tine Assembly 13

RH Tine Wheel Assembly No. 116-6738 14

LH Tine Wheel Assembly No. 116-6739..... 15


Fuel Assembly 16

Motion Control Assembly 17

Electrical Assembly 18

Auxiliary Hydraulic Assembly 19

Engine Assembly 21

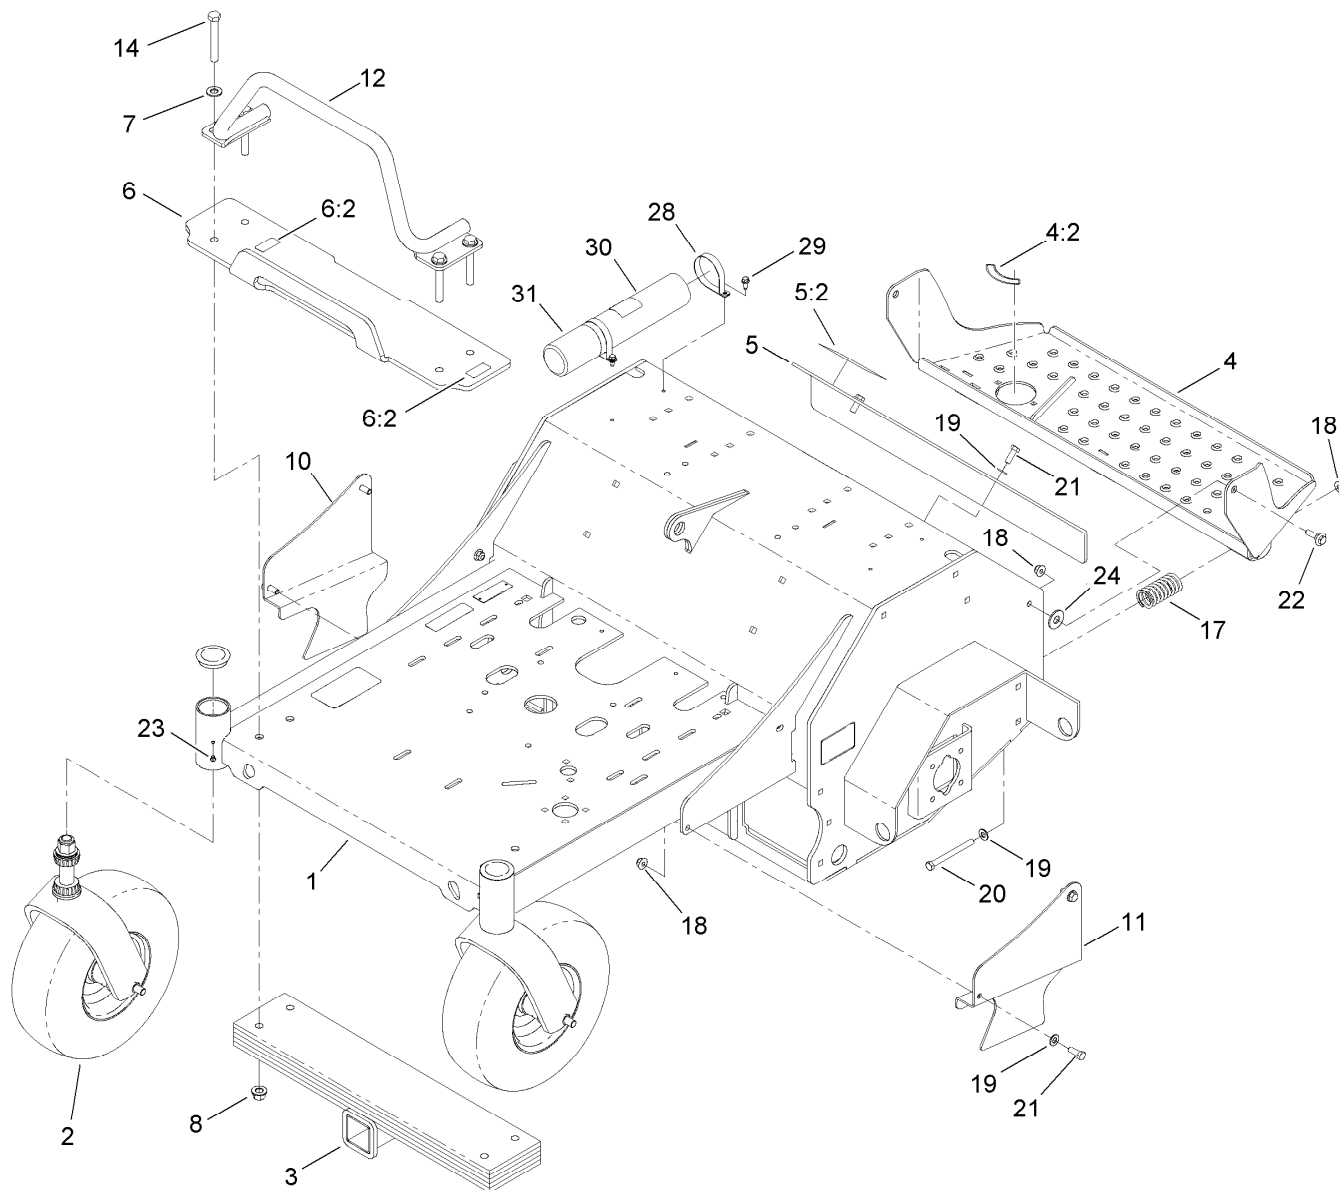


Main Frame Assembly

Ref.	Part Number	Qty.	Description
1	116-7298	1	Main Frame And Decal ASM
2		2	Front Caster ASM W/Fork ●
3	116-6536-01	1	Weight
4	116-6986	1	Platform ASM
4:2	116-6460	1	Decal-Tine Ground Engagement
5	116-7300	1	Access Cover ASM
5:2	121-6163	1	Decal-Tine Ground Operation Ce
6	116-7299	1	Weight Mount Plate ASM
6:2	115-2047	2	Decal-Surface, Hot
7	3256-26	4	Washer-Flat
8	99-5107	4	Nut-Lock
10	116-6612-01	1	Guard-Chain, RH
11	116-6611-01	1	Guard-Chain, LH


Ref.	Part Number	Qty.	Description
12	116-6763-03	1	Guard-Muffler
14	325-14	4	Screw-HH
17	116-6767	3	Spring-Compression
18	104-8301	9	Nut-Flange, NI
19	3256-24	9	Washer-Flat
20	323-16	3	Screw-HH
21	323-6	6	Screw-HH
22	614672	2	Bolt-Shoulder
23	1-811010	2	Plug
24	3256-6	2	Washer-Flat
28	107-1865	2	R-Clamp
29	32144-10	2	Screw-HWH
30	104-7050	1	Tube-Manual
31	104-7048	1	Cap-Housing

● Not serviced separately

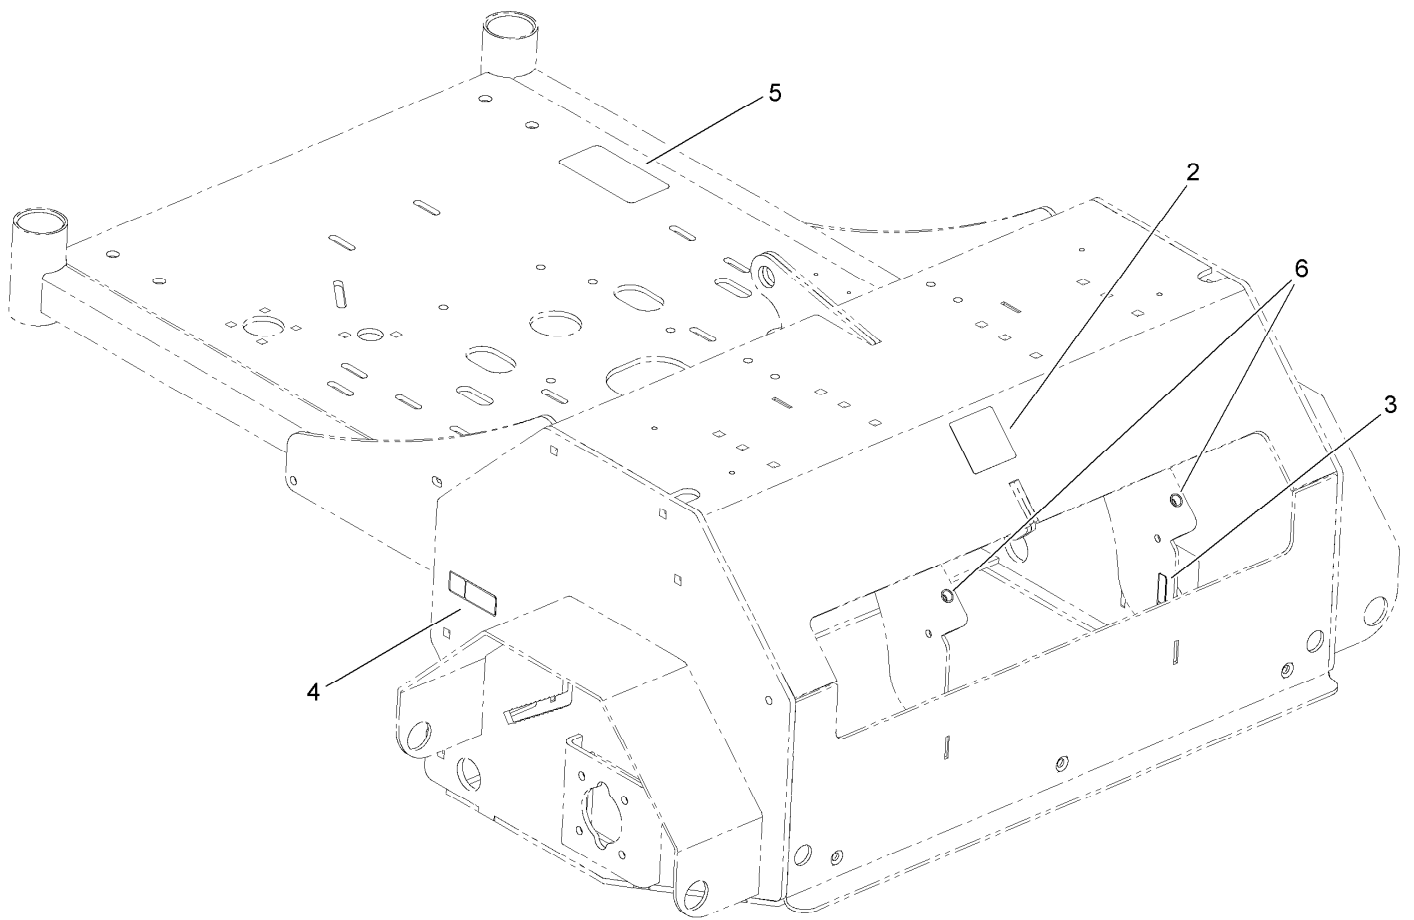

Main Frame Decal Assembly No. 116-7298

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	121-6150	1	Decal-Warning, Aerator
3	120-9570	1	Decal-Warning
4	121-6161	2	Decal-Danger
5	116-6462	1	Decal-Belt Routing
6	32148-10	2	Insert-Nut

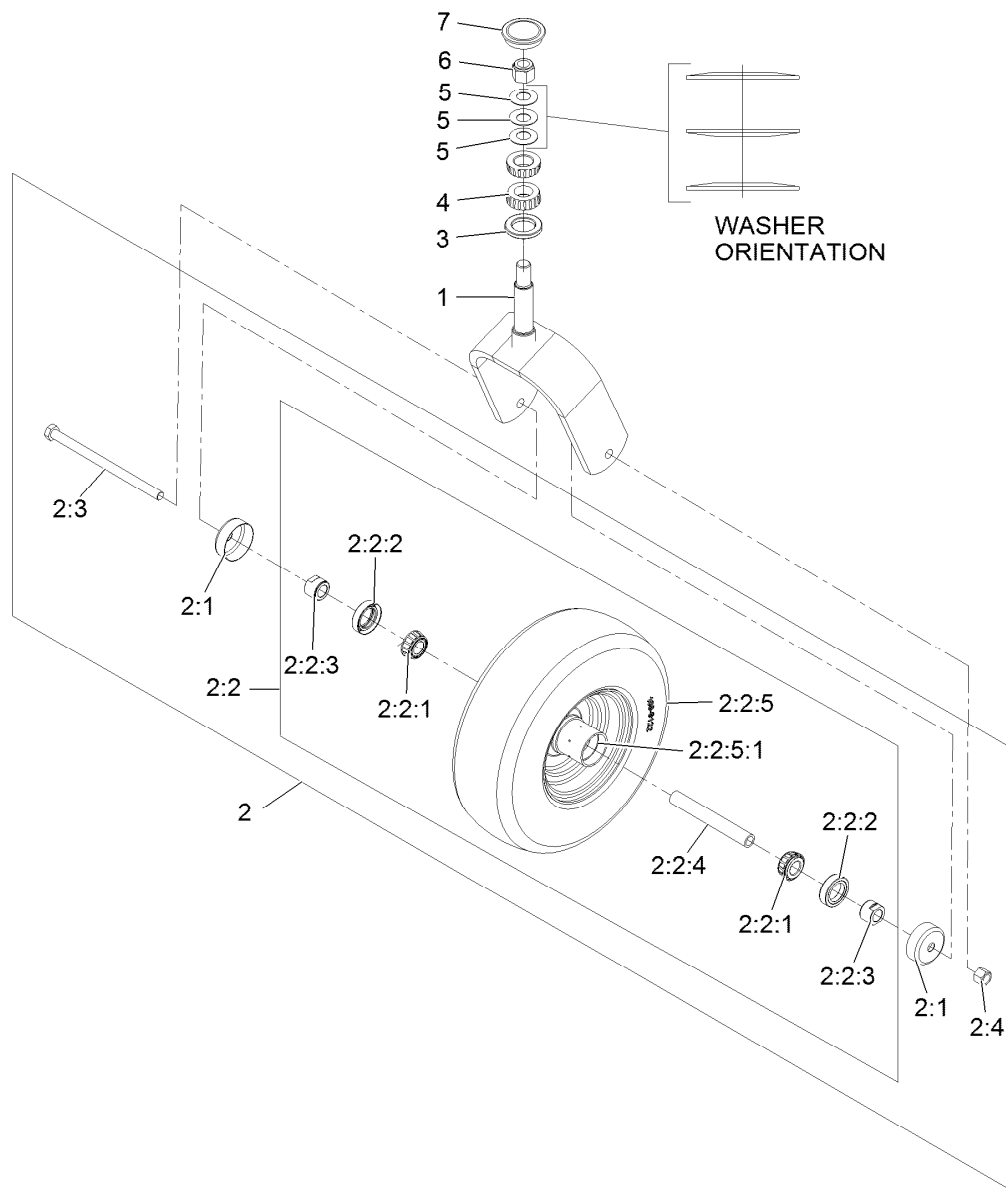


Caster Wheel and Fork Assembly

Ref.	Part Number	Qty.	Description
1	116-1963-01	1	Caster
2	109-9126	1	Wheel And Tire ASM
2:1	103-2768	2	Guard-Seal
2:2		1	Wheel And Tire ASM ●
2:2:1	1-633585	2	Bearing-Cone Tapered Roller
2:2:2	103-0063	2	Seal-Double Lip
2:2:3	103-3051	2	Spacer-Nut ■
2:2:4	103-3155	1	Axle-Caster
2:2:5		1	Wheel And Tire ASM ●

Ref.	Part Number	Qty.	Description
2:2:5:1	1-633584	1	Bearing-Cup
2:3	325-42	1	Screw-HH
2:4	3296-23	1	Nut-Lock, NI
3	1-543511	1	Seal-Grease
4	1-543509	2	Cone-Bearing Tapered Roller
5	1-633508	3	Washer-Spring Disc
6	3296-51	1	Nut-Lock, NI
7	103-4882	1	Cap-Grease

● Not serviced separately


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

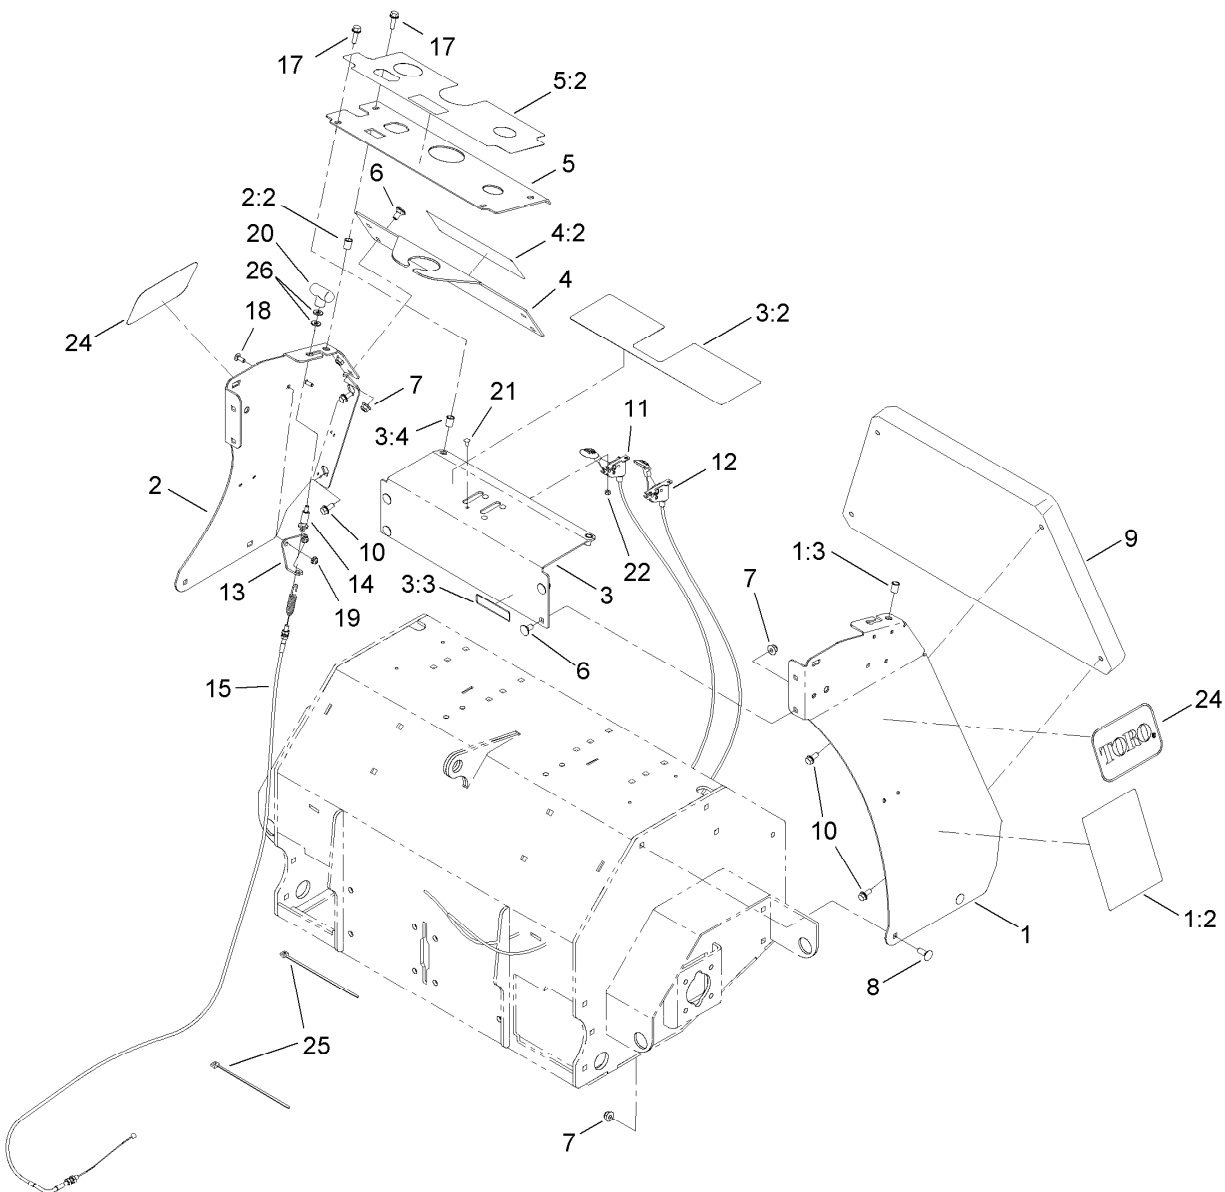

Tower Assembly


Ref.	Part Number	Qty.	Description
1	116-7202	1	LH Side Panel ASM
1:2	121-6160	1	Decal-Service Aid, Ce
1:3	32148-7	1	Nut-Insert
2	116-7657	1	RH Side Panel ASM
2:2	32148-7	1	Nut-Insert
3	116-6784	1	Plate ASM
3:2	121-6164	1	Decal-Warning, Control Panel
3:3	121-6162	1	Decal-Warning, Tines
3:4	32148-7	2	Nut-Insert
4	116-6965	1	Knee Pad Bracket ASM
4:2	121-6166	1	Decal-Danger
5	116-7617	1	Console ASM
5:2	116-7612	1	Decal-Control Panel Danger
6	3231-1	8	Screw-CARR
7	104-8301	12	Nut-Flange, NI
8	3231-2	4	Bolt-CARR

Ref.	Part Number	Qty.	Description
9	116-6959	1	Cushion-Black
10	3234-5	4	Screw-HHF
11	109-9147	1	Control-Choke
12	109-3958	1	Control-Throttle
13	116-6630	1	Bracket-Brake Cable
14	116-7504	1	Link-Brake Cable
15	116-7503	1	Cable-Brake
17	3234-29	4	Screw-HHF
18	3229-1	2	Bolt-CARR
19	104-7201	2	Nut-HF
20	116-7607	1	Knob-Tee
21	1-807513	4	Bolt-CARR
22	3296-2	4	Nut-Lock, NI
24	62-5550	2	Decal
25	1-303335	2	Tie-Plastic
26	3256-2	2	Washer-Flat

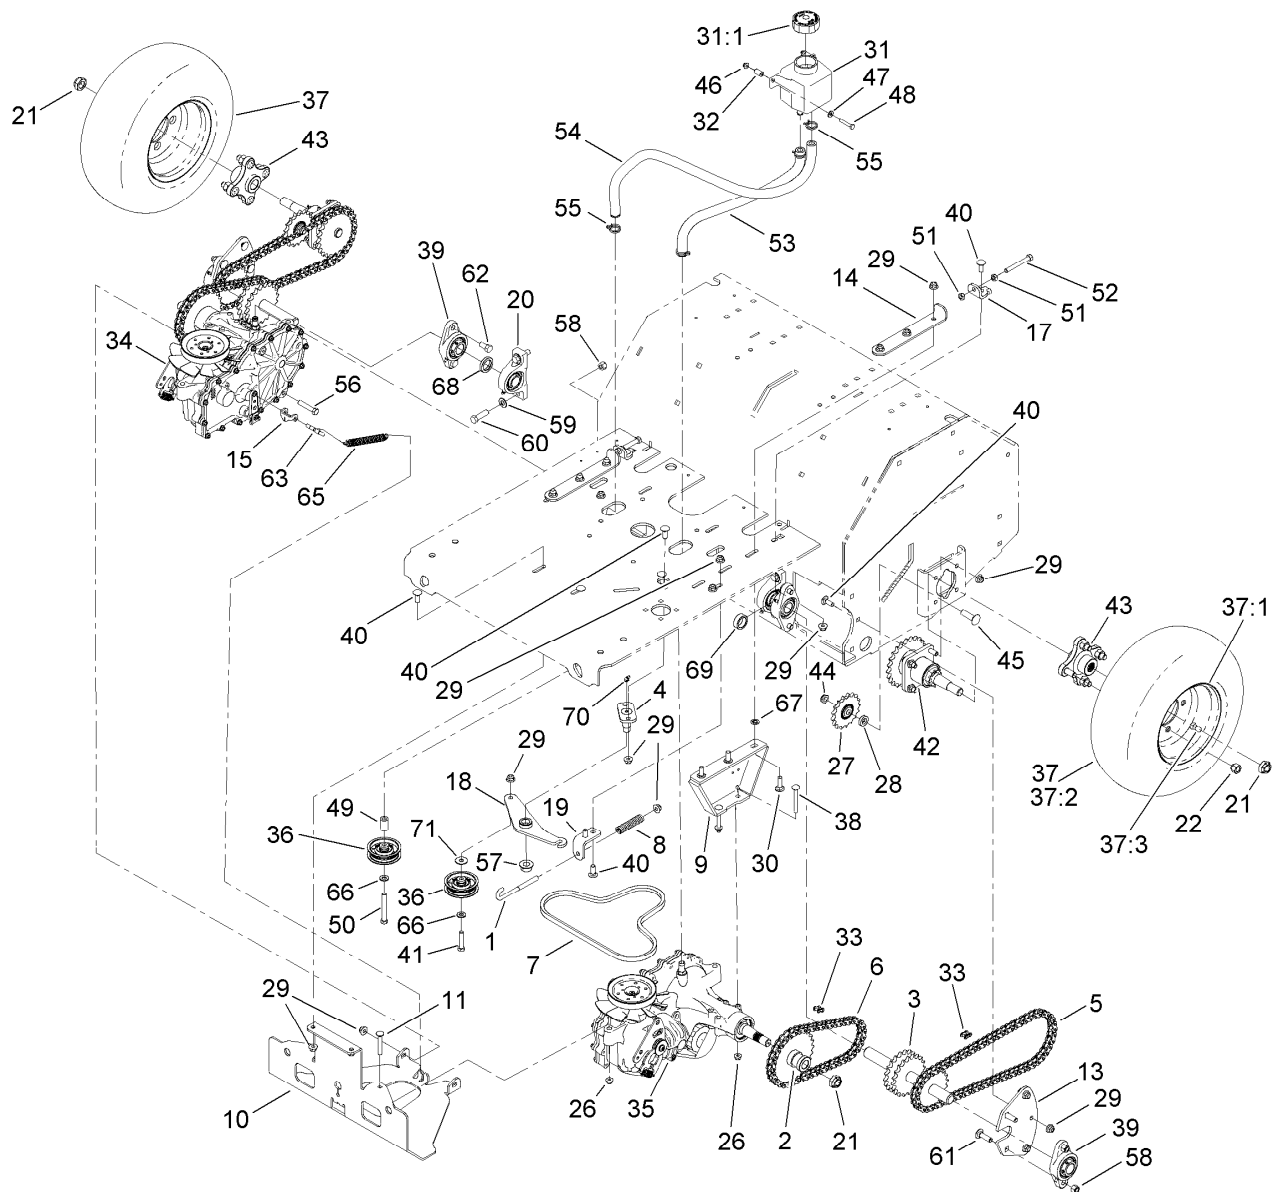

Ground Drive Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	116-6740	1	Hook-J	26	104-8300	6	Nut-Flange, NI
2	116-6624	2	Hub-Chain Drive	27	116-6719	2	Sprocket-Idler, 17T
3	116-6627	2	Jackshaft	28	104-8417	2	Washer
4	116-6735-03	1	Pivot-Idler	29	104-8301	33	Nut-Flange, NI
5	116-6895	2	Chain-Roller, #50	30	3231-25	6	Bolt-CARR
6	116-6896	2	Link-#50 Roller Chain, 47	31	109-2250	1	Vent-Tank, Hydro
7	1-653333	1	Belt-Blower, 48 Inch	31:1	109-3320	1	Cap-Reservoir, HYD
8	116-6771	1	Spring-Compression	32	49-0390	2	Spacer
9	116-6572-03	2	Mount-Transmission	33	116-6897	4	Link-Connecting, #50
10	116-7588-03	1	Guard-Transmission	34	116-6614	1	RH Transmission ASM
11	3230-7	2	Bolt-CARR	35	116-6615	1	LH Transmission ASM
13	116-6596-01	2	Plate-Jackshaft	36	116-6760	2	Pulley-Idler Flat
14	116-6619	2	Plate-Transmission, Adjustment	37	116-6932	2	Tire ASM (16 X 6.50-8)
15	116-7597	1	Yoke-Park Brake	37:1	116-6977	1	Rim (8 X 5.375)
17	116-6723	2	Bracket-Hydro, Adjust	37:2	116-6978	1	Tire (16 X 6.50-8, 4 Ply)
18	116-6568	1	Idler Arm ASM	37:3	232-27	1	Stem-Valve
19	116-6724	1	Bracket-Idler Spring	38	3230-9	4	Screw-CARR
20	116-6756	2	Bearing-Pillow Block	39	116-6777	4	Bearing-Flange, 2 Bolt
21	116-2839	4	Nut-Lock	40	3231-2	14	Bolt-CARR
22	242-50	8	Nut-Lug	41	323-9	1	Screw-HH
				42	116-7645	2	Axle And Bearing ASM

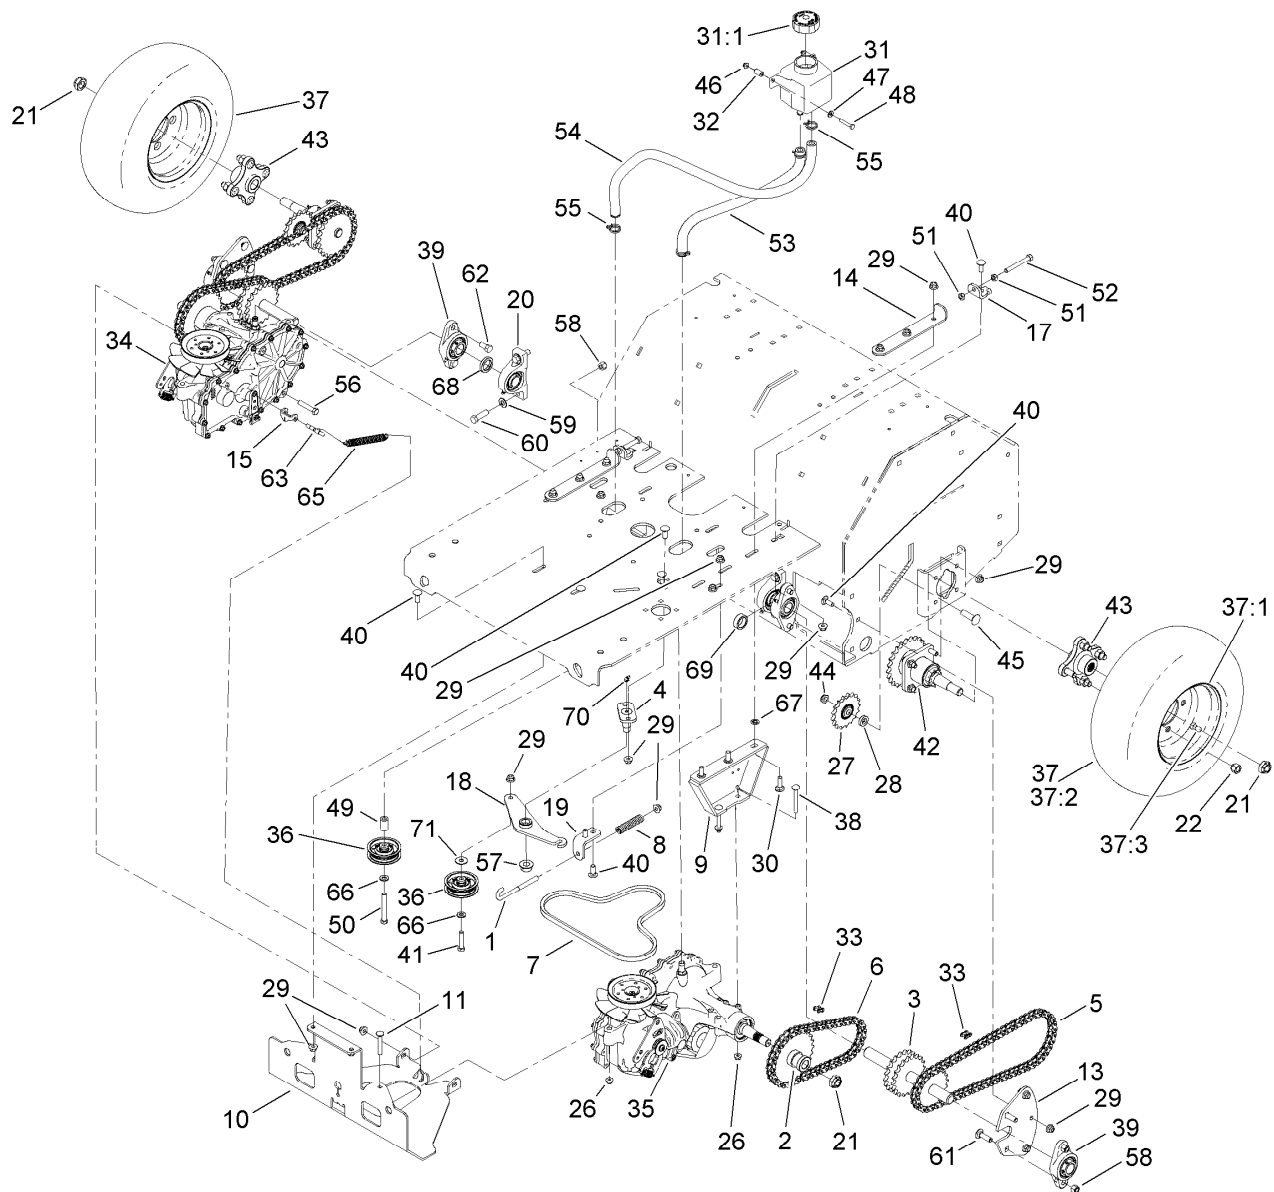

Ground Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
43	116-3872	2	Hub-Offset
44	3296-45	2	Nut-Lock, NI
45	3233-14	2	Screw-CARR
46	104-7201	2	Nut-HF
47	3256-22	2	Washer-Flat
48	321-9	2	Screw-HH
49	116-7598	1	Spacer-Idler
50	323-14	1	Screw-HH
51	3217-7	4	Nut-Hex
52	99-8664	2	Screw-HH
53	116-6775	1	Hose-Hydraulic
54	116-6776	1	Hose-Hydraulic
55	109-3322	4	Clamp-Hose
56	323-10	2	Screw-HH


Ref.	Part Number	Qty.	Description
57	109-7033	1	Nut-Flange, Centerlock
58	3296-48	8	Nut-Lock, NI
59	3256-25	4	Washer-Flat
60	324-6	4	Screw-HH
61	3232-3	4	Bolt-CARR
62	116-7109	4	Screw-HH
63	116-7596	1	Pin-Park Brake
65	76-4660	1	Spring-Door
66	3256-24	2	Washer-Flat
67	107-3154	6	Nut-Push
68	116-7253	1	Spacer
69	116-7254	1	Spacer
70	302-61	1	Fitting-Grease
71	52-2860	1	Washer

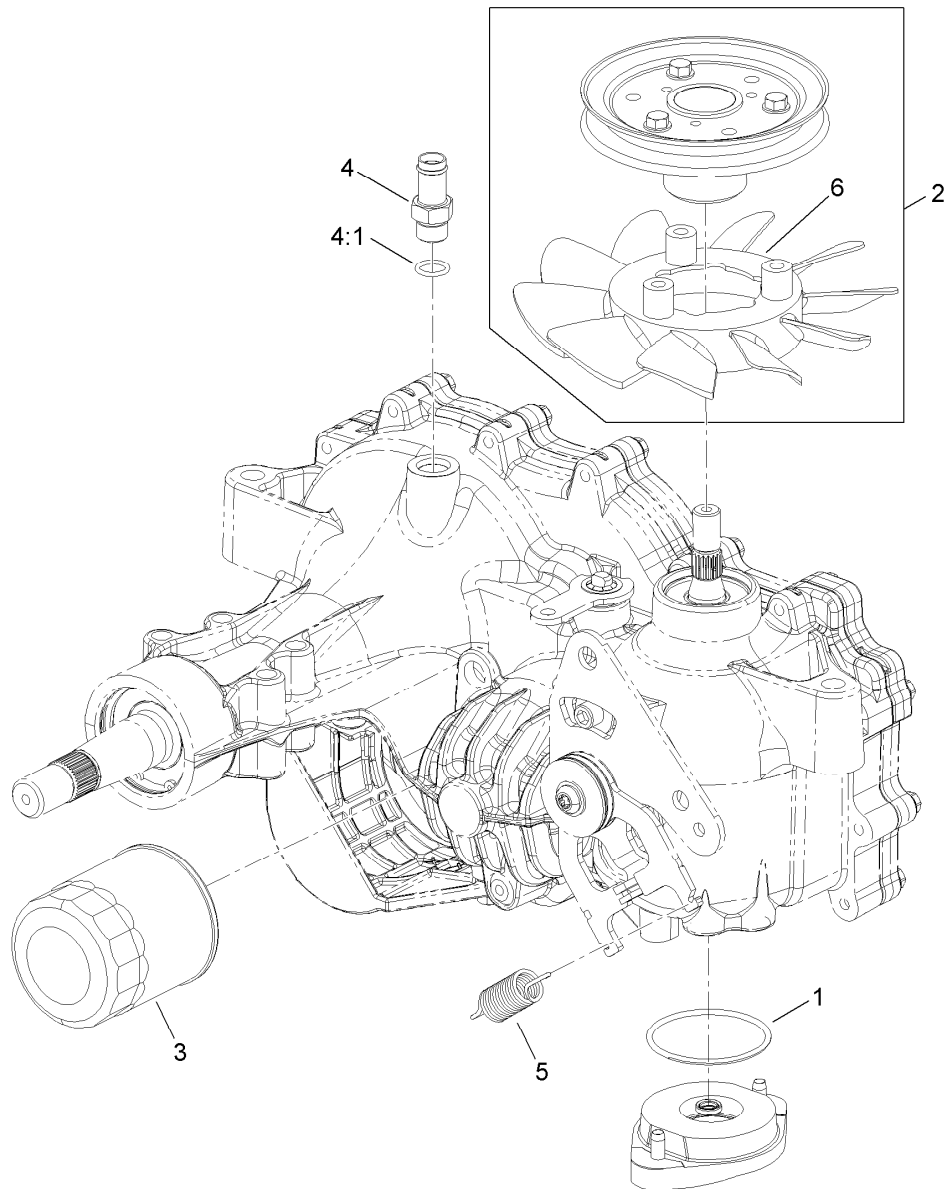

RH Transaxle Assembly No. 116-6614

Ref.	Part Number	Qty.	Description
1	109-3540	1	O-Ring, Seal
2	116-6743	1	Fan And Pulley Kit
3	109-3321	1	Element-Oil Filter, HYD
4	109-3278	1	Adapter-Straight
4:1	1-603921	1	O-Ring
5	109-5592	1	Spring-Extension
6	116-6742	1	Fan-Offset, Hydrogear
99	109-3537	1	Complete Seal Kit ●


● Not illustrated

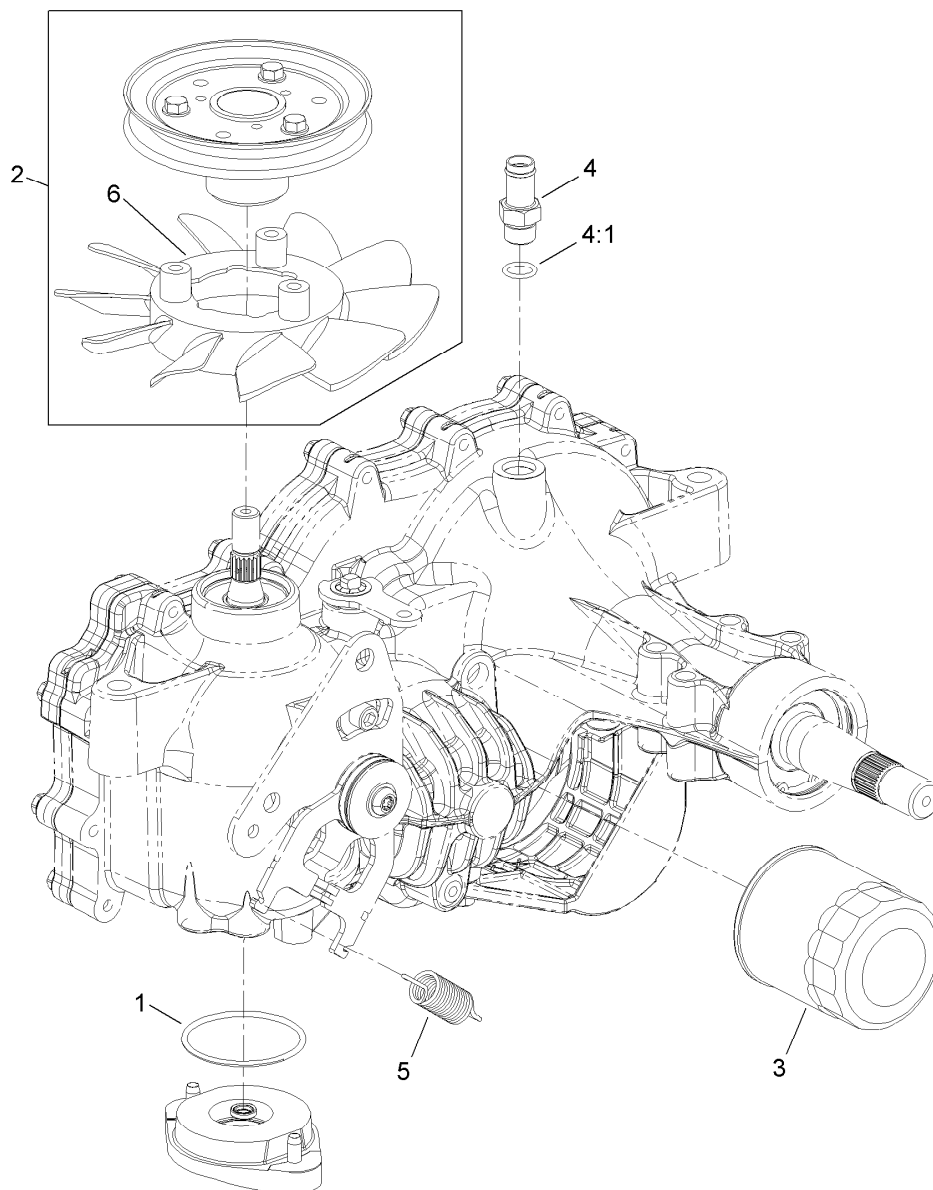

LH Transaxle Assembly No. 116-6615


Ref.	Part Number	Qty.	Description
1	109-3540	1	O-Ring, Seal
2	116-6743	1	Fan And Pulley Kit
3	109-3321	1	Element-Oil Filter, HYD
4	109-3278	1	Adapter-Straight
4:1	1-603921	1	O-Ring
5	109-5592	1	Spring-Extension
6	116-6742	1	Fan-Offset, Hydrogear
99	109-3537	1	Complete Seal Kit ●

● Not illustrated

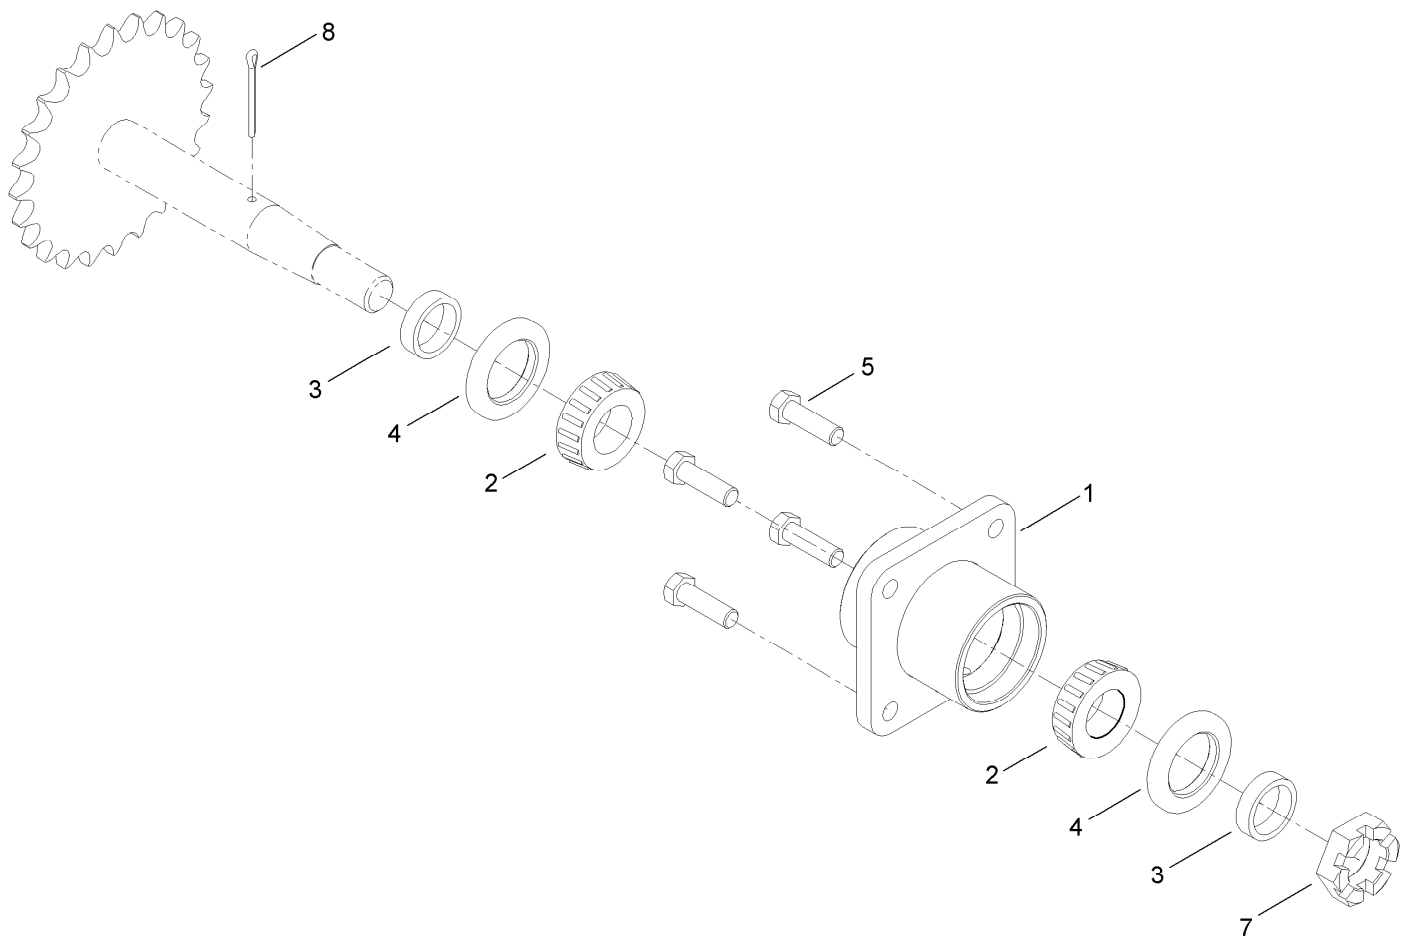

Axle and Bearing Assembly No. 116-7645


Ref.	Part Number	Qty.	Description
1	116-6746-01	1	Mount-Bearing, Wheel
2	1-543509	2	Bearing-Roller, Tapered
3	116-6758	2	Spacer
4	1-543511	2	Seal-Grease
5	323-7	4	Screw-HH
7	99-3139	1	Nut
8	3272-13	1	Pin-Cotter

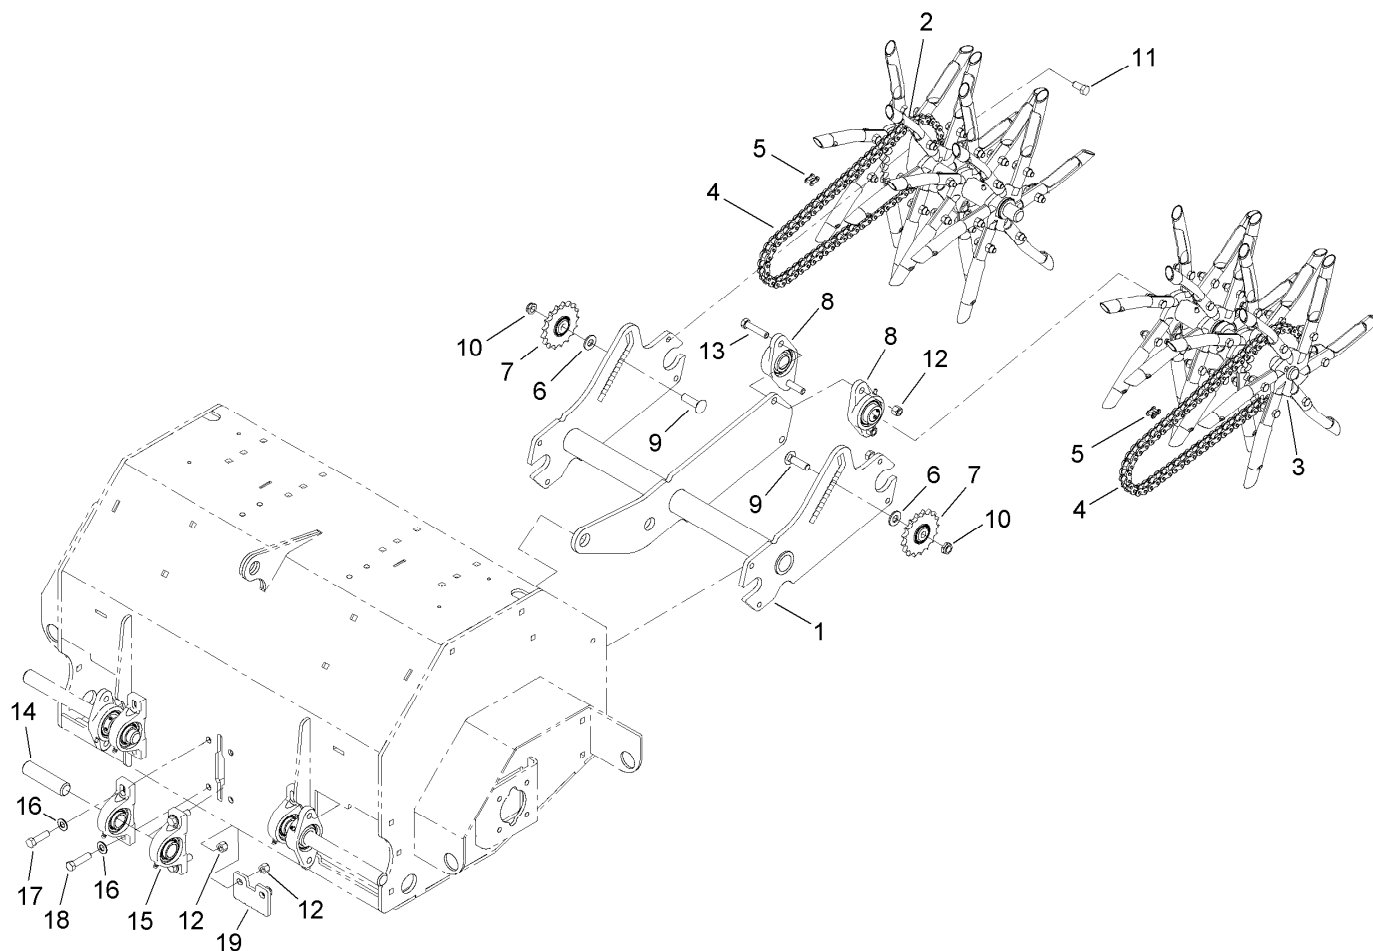

Tine Assembly


Ref.	Part Number	Qty.	Description
1	116-6553-03	1	Trail Arm ASM
2	116-6738	1	RH Tine Wheel ASM
3	116-6739	1	LH Tine Wheel ASM
4	116-6895	2	Chain-Roller, #50
5	116-6897	2	Link-Connecting, #50
6	87-7270	2	Washer-Thrust
7	116-6719	2	Sprocket-Idler, 17T
8	116-6777	2	Bearing-Flange, 2 Bolt
9	3233-14	2	Screw-CARR
10	3296-45	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
11	116-7109	4	Screw-HH
12	3296-48	6	Nut-Lock, NI
13	324-8	2	Screw-HH
14	116-6629	1	Shaft
15	116-6756	2	Bearing-Pillow Block
16	3256-25	4	Washer-Flat
17	324-6	2	Screw-HH
18	324-7	2	Screw-HH
19	116-7327-01	1	Plate-Downstop

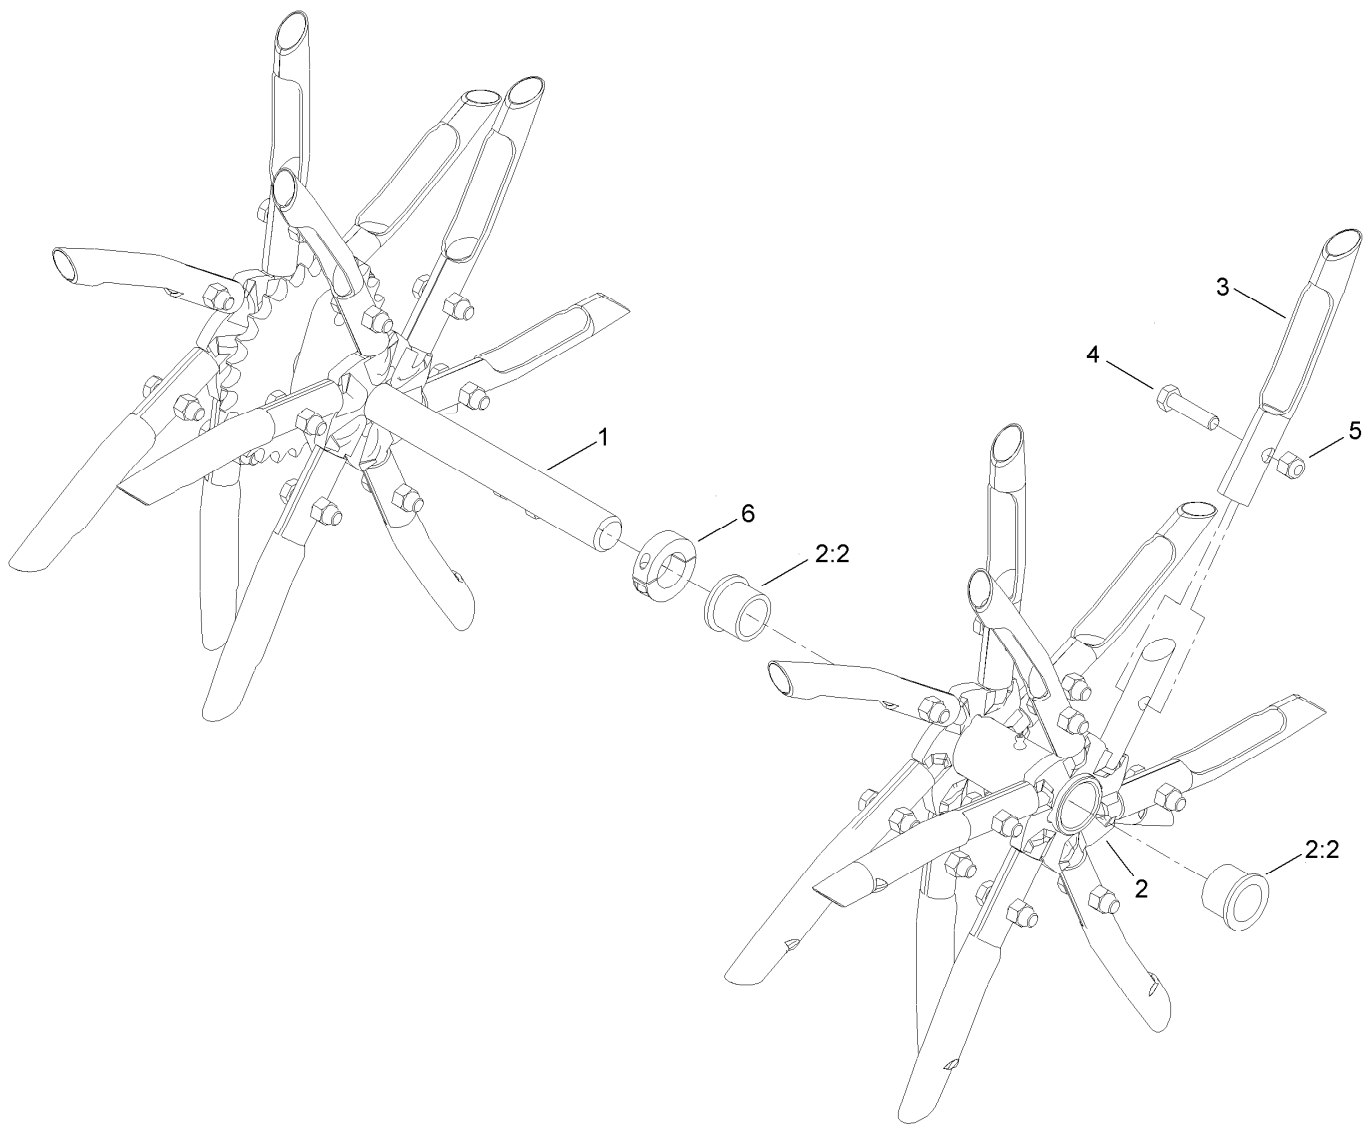


RH Tine Wheel Assembly No. 116-6738

Ref.	Part Number	Qty.	Description
1	116-6727	1	Shaft-Tine, RH
2	116-6731	1	Float Tine Shaft ASM
2:2	94-8949	2	Bushing-Flange
3	121-4894	24	Tine-Coring
4	323-8	24	Screw-HH
5	3296-39	24	Nut-Lock, NI
6	116-7271	1	Collar-Locking

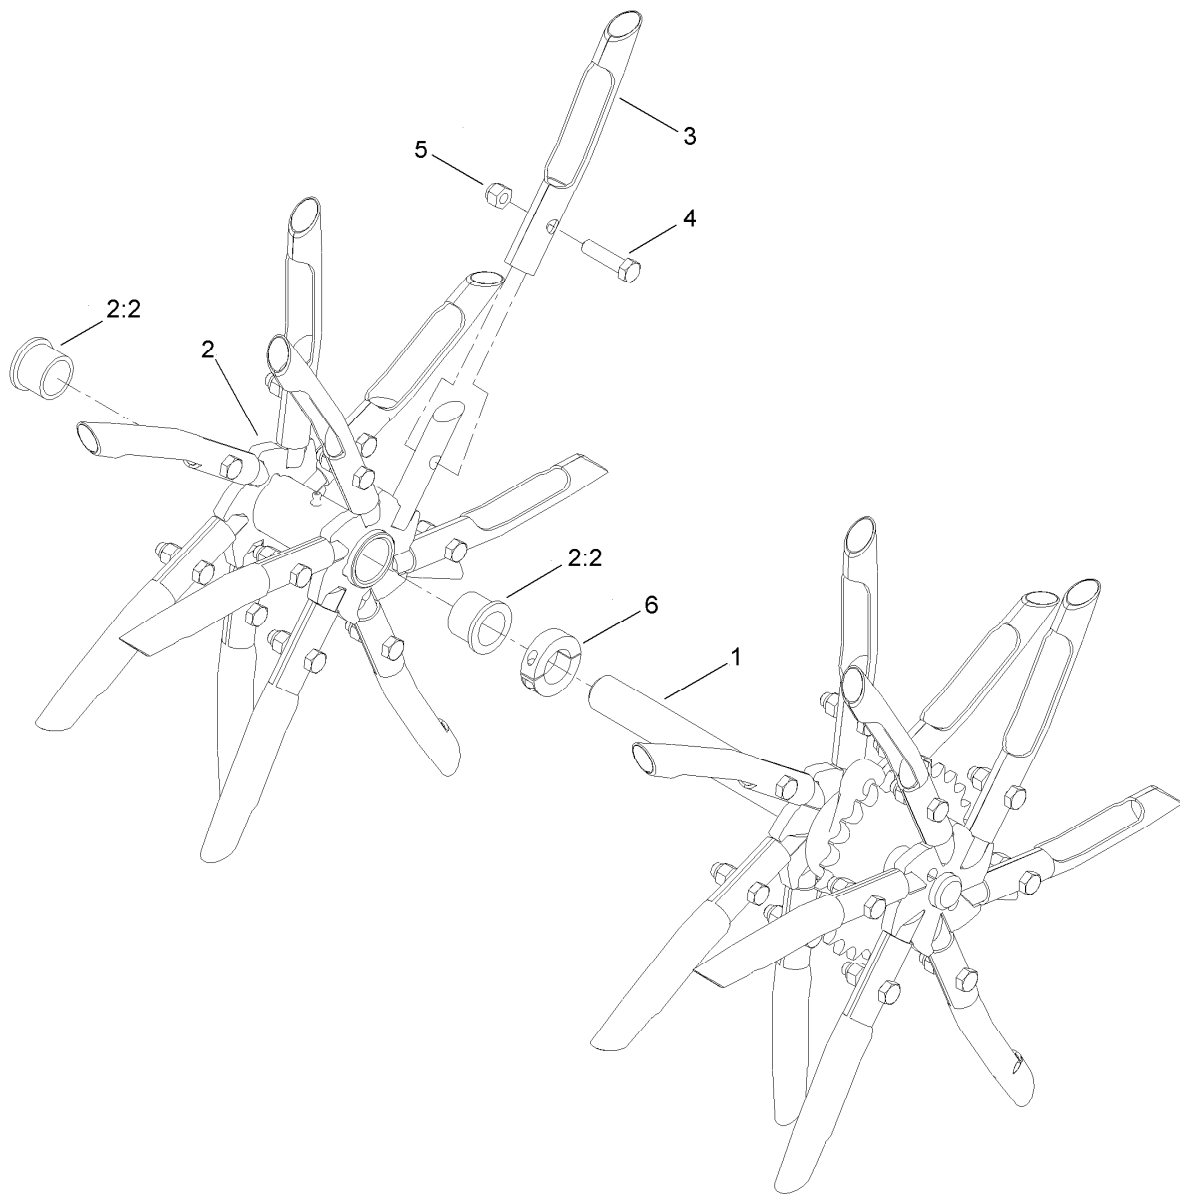

LH Tine Wheel Assembly No. 116-6739


Ref.	Part Number	Qty.	Description
1	116-6728	1	Shaft-Tine, LH
2	116-6731	1	Float Tine Shaft ASM
2:2	94-8949	2	Bushing-Flange
3	121-4894	24	Tine-Coring
4	323-8	24	Screw-HH
5	3296-39	24	Nut-Lock, NI
6	116-7271	1	Collar-Locking

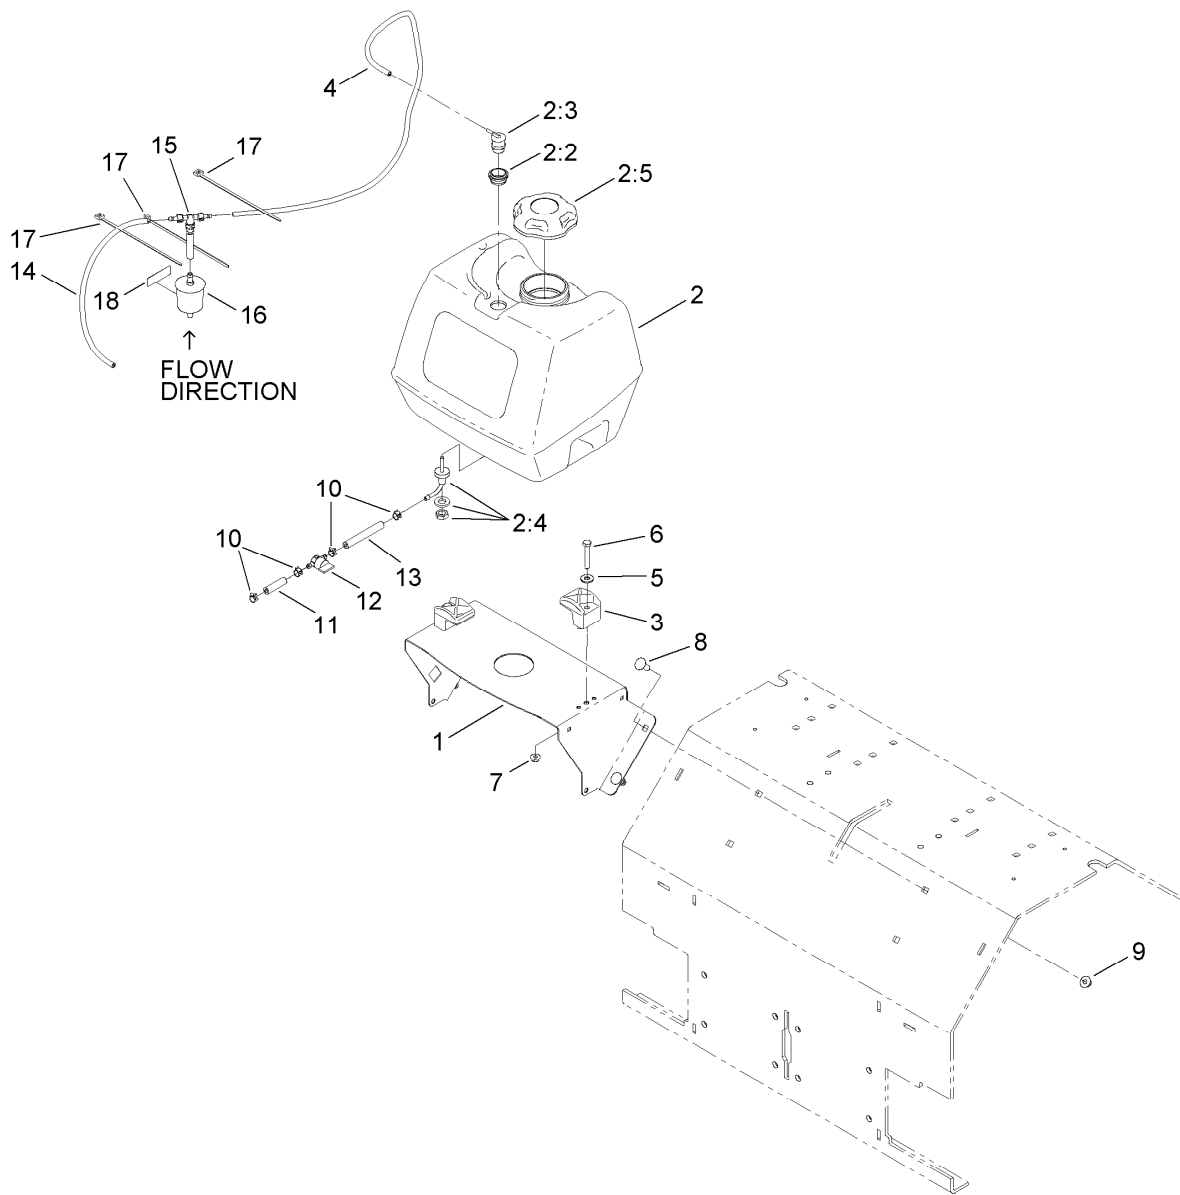

Fuel Assembly

Ref.	Part Number	Qty.	Description
1	116-7243-01	1	Support-Tank, Fuel
2	119-7899	1	Fuel Tank ASM
2:2	114-0284	1	Grommet
2:3	114-0285	1	Valve-Rollover
2:4	103-2605	1	Fitting-Fuel, Bulkhead
2:5	120-5461	1	Cap-Fuel, Ratcheting
3	107-4543	2	Clamp
4	116-4346	1	Hose-Emissions
5	3256-3	2	Washer-Flat
6	322-10	2	Screw-HH
7	104-8300	2	Nut-Flange, NI


Ref.	Part Number	Qty.	Description
8	3231-2	4	Bolt-CARR
9	104-8301	4	Nut-Flange, NI
10	2412-98	4	Clamp-Hose
11	119-7856	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
13	105-8342	1	Hose-Fuel
14	115-7872	1	Hose-Fuel
15	116-5464	1	Tee And Check ASM
16	120-2235	1	Filter-Air
17	1-303335	3	Tie-Plastic
18	116-4769	1	Decal-Filter, Emissions

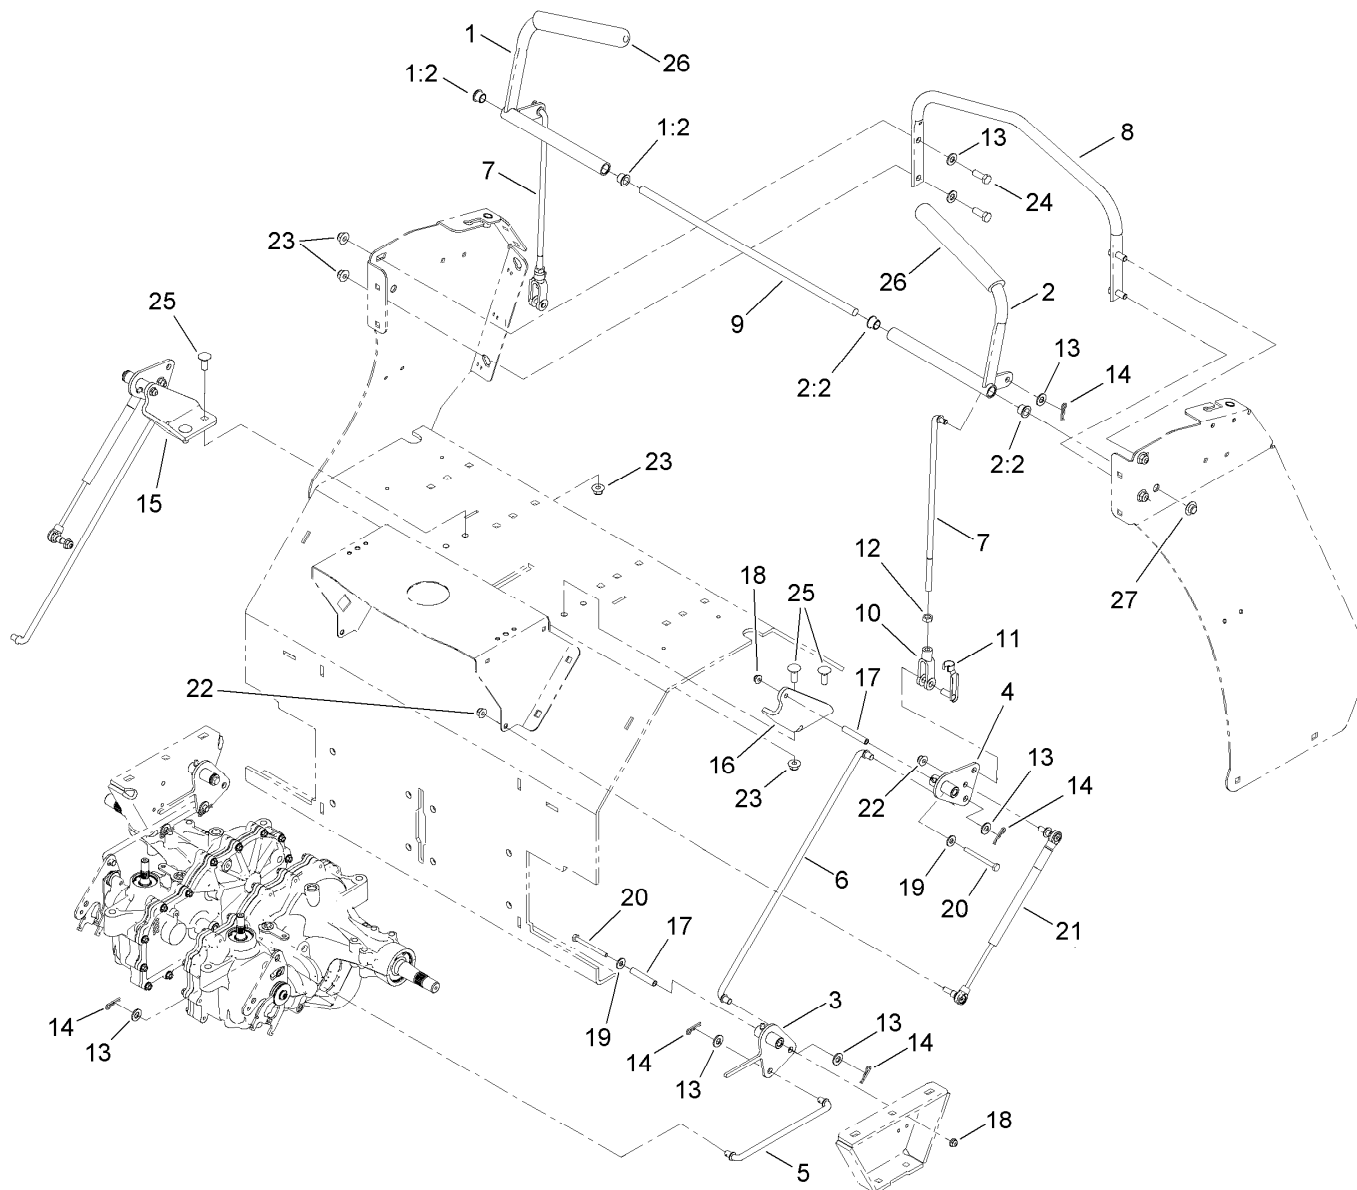

Motion Control Assembly

Ref.	Part Number	Qty.	Description
1	116-6567	1	RH Control Handle ASM
1:2	116-4279	2	Bearing-Flange
2	116-6566	1	LH Control Handle ASM
2:2	116-4279	2	Bearing-Flange
3	116-6573-03	2	Bellcrank (W/Arm)
4	116-6617-03	2	Bellcrank (W/Arm)
5	116-6722	2	Link-Hydro Control
6	116-6726	2	Link-Bellcrank Control
7	116-6730	2	Link-Bellcrank Control
8	116-6608-03	1	Bar-Reference
9	116-6607	1	Shaft-Pivot, Control
10	1-633131	2	Yoke-Linkage, Brake
11	103-2399	2	Pin-Spring, Clevis
12	3219-3	2	Nut-Hex
13	3256-24	14	Washer-Flat

Ref.	Part Number	Qty.	Description
14	1-806003	10	Pin-Cotter, Hair
15	116-6576-03	1	Bracket-Pivot, RH
16	116-6577-03	1	Bracket-Pivot, LH
17	116-7224	4	Spacer
18	104-7201	4	Nut-HF
19	3256-2	4	Washer-Flat
20	321-14	4	Screw-HH
21	116-0027	2	Damper-Control, Motion
22	104-8300	4	Nut-Flange, NI
23	104-8301	8	Nut-Flange, NI
24	323-6	4	Screw-HH
25	3231-2	4	Bolt-CARR
26	103-8153	2	Grip-Lever, Control
27	32112-14	2	Nut-Push

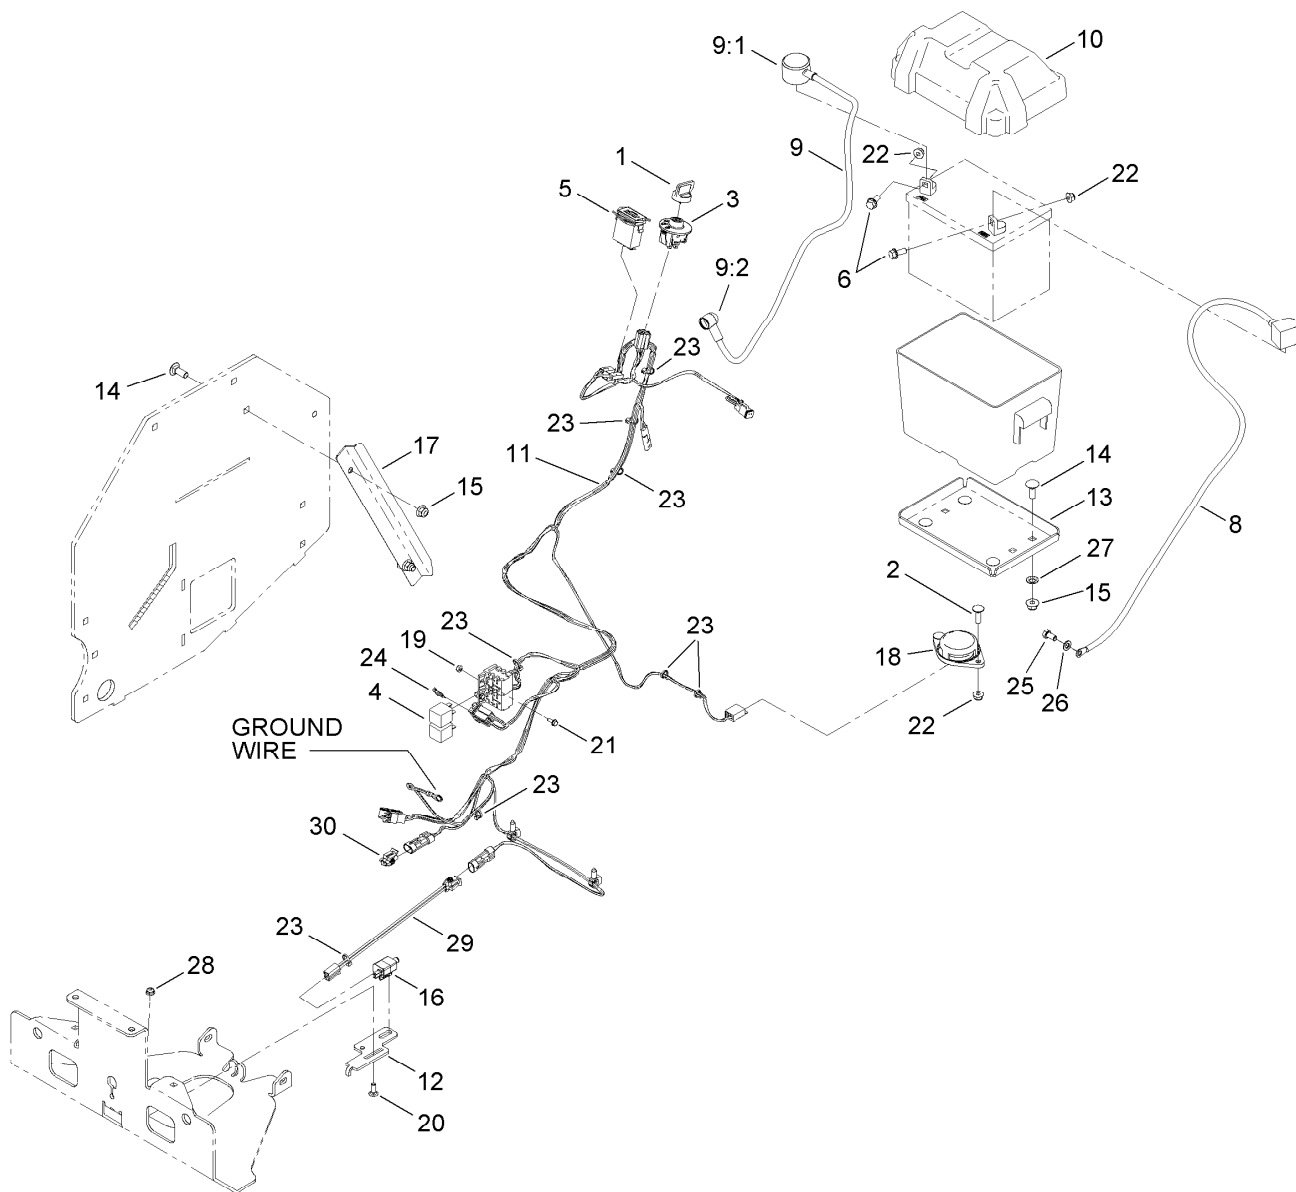


Electrical Assembly

Ref.	Part Number	Qty.	Description
1	1-603511	1	Keys-Ignition (Spare Pair)
1	63-8360	1	Key-Ignition (W/Shield)
2	3230-2	2	Bolt-CARR
3	117-2221	1	Switch-Ignition
4	1-643275	2	Relay
5	1-513374	1	Meter-Hour
6	3234-5	2	Screw-HHF
8	117-6422	1	Cable-Battery, Black
9	109-7630	1	Positive Battery Cable ASM
9:1	109-2407	1	Insulator-Battery
9:2	1-543393	1	Insulator-Solenoid
10	116-6673	1	Battery Box ASM
11	116-6890	1	Harness ASM ●
12	116-7589	1	Mount-Switch
13	116-6609-03	1	Tray-Battery
14	3231-2	6	Bolt-CARR

Ref.	Part Number	Qty.	Description
15	104-8301	6	Nut-Flange, NI
16	110-6765	1	Switch-Single Pole No
17	116-6768-03	1	Guard-Harness
18	92-6282	1	Switch-Seat
19	3296-2	2	Nut-Lock, NI
20	3229-1	2	Bolt-CARR
21	3290-321	2	Screw-HWH
22	104-8300	4	Nut-Flange, NI
23	1-303287	9	Tie-Cable
24	1-816001	2	Fuse-Blade Type, 20 Amp
25	33114-016	1	Screw-HH
26	33094-00	1	Washer-Plain
27	109-9190	4	Nut-Push
28	104-7201	1	Nut-HF
29	116-7502	1	Jumper-Switch
30	116-7505	1	Plug-Switch, Neutral

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

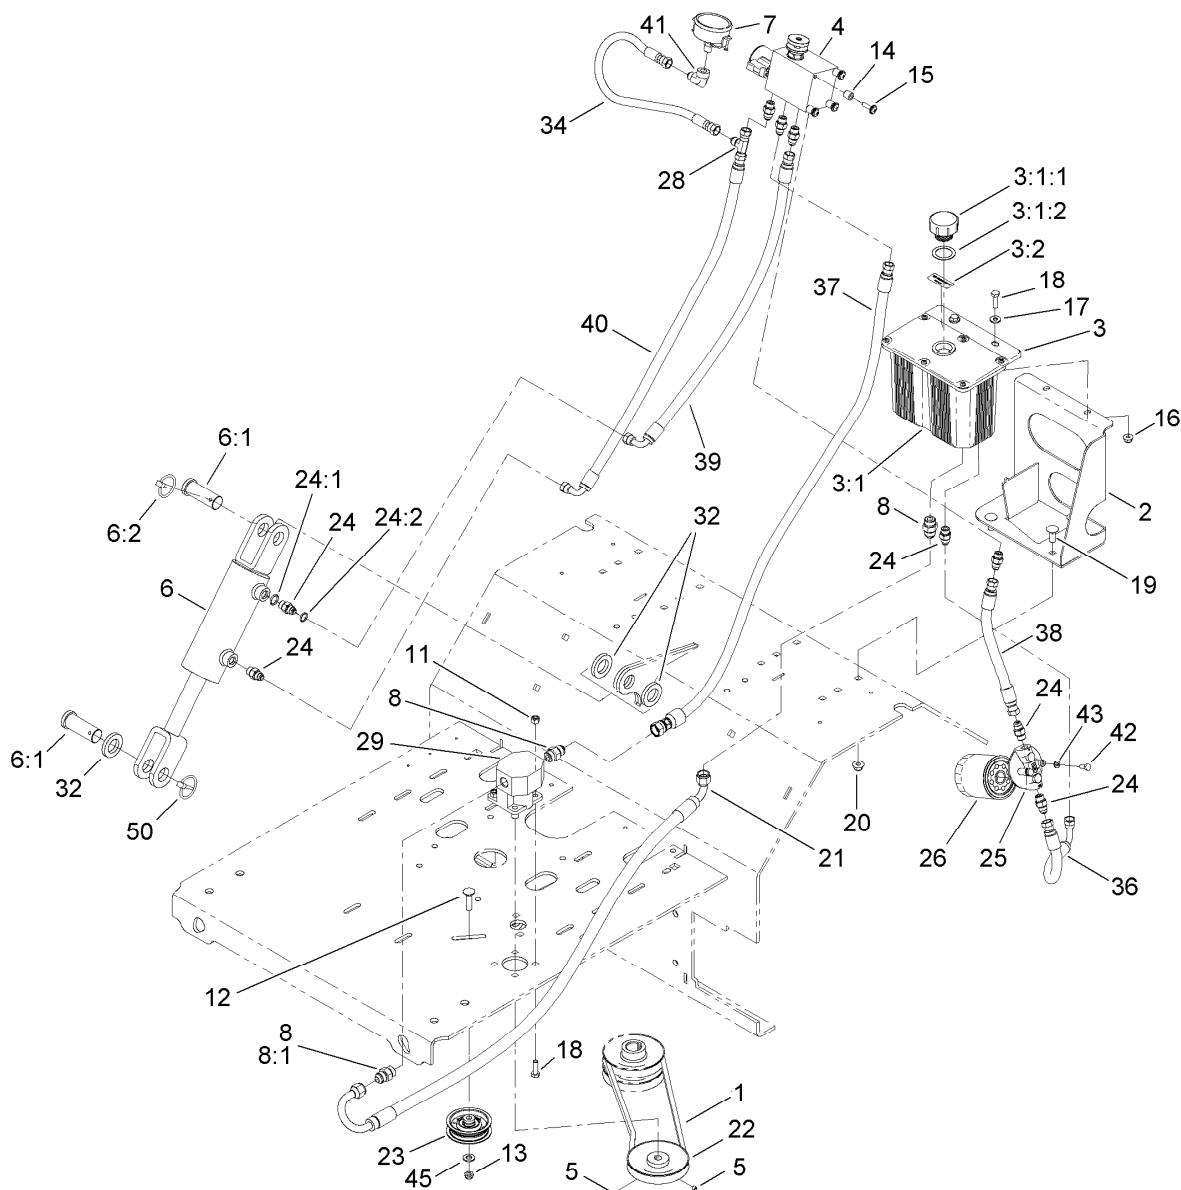

Auxiliary Hydraulic Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	116-6894	1	Belt-A	14	22-7810	4	Spacer
2	116-6618-03	1	Bracket-Tank, Hydraulic	15	110-9361	4	Screw-PPH, Sems
3		1	Reservoir ASM ●	16	104-8300	2	Nut-Flange, NI
3:1		1	Tank-Hydraulic ●	17	3256-2	2	Washer-Flat
3:1:1	103-1948	1	Cap-Reservoir, HYD	18	322-5	6	Screw-HH
3:1:2	103-1949	1	Gasket-Cap	19	3231-2	4	Bolt-CARR
3:2	93-6686	1	Decal-Oil, HYD	20	104-8301	4	Nut-Flange, NI
4	116-6752	1	Valve	21	116-6993	1	HYD Hose ASM
5	3245-1	2	Screw-Set, HSH	22	116-6667	1	Pulley
6	116-6969	1	HYD Cylinder ASM	23	116-6760	1	Pulley-Idler Flat
6:1	116-7290	2	Pin-Clevis	24	103-2156	5	Fitting-Straight
6:2	92-1298	2	Pin-Lynch	24:1	1-603921	1	O-Ring
7	116-6753	1	Gauge-Pressure	24:2	103-1020	1	O-Ring
8	353-388	3	Fitting-Straight	25	104-7836	1	Head-Filter
8:1	237-79	1	O-Ring	26	1-633750	1	Filter-Oil, HYD
11	3296-29	4	Nut-Lock, NI	28	353-877	1	Fitting-HYD, Tee (Swivel)
12	3231-4	1	Screw-CARR	29	116-6751	1	Pump-Gear
13	3296-59	1	Nut-Lock, NI	32	116-6781	5	Spacer

● Not serviced separately



Ref.	Part Number	Qty.	Description
41	116-6686	1	Fitting-Elbow, 90
42	321-3	2	Screw-HH
43	1-805004	2	Washer-Lock
45	3256-24	1	Washer-Flat
50	92-1298	1	Pin-Lynch

H2

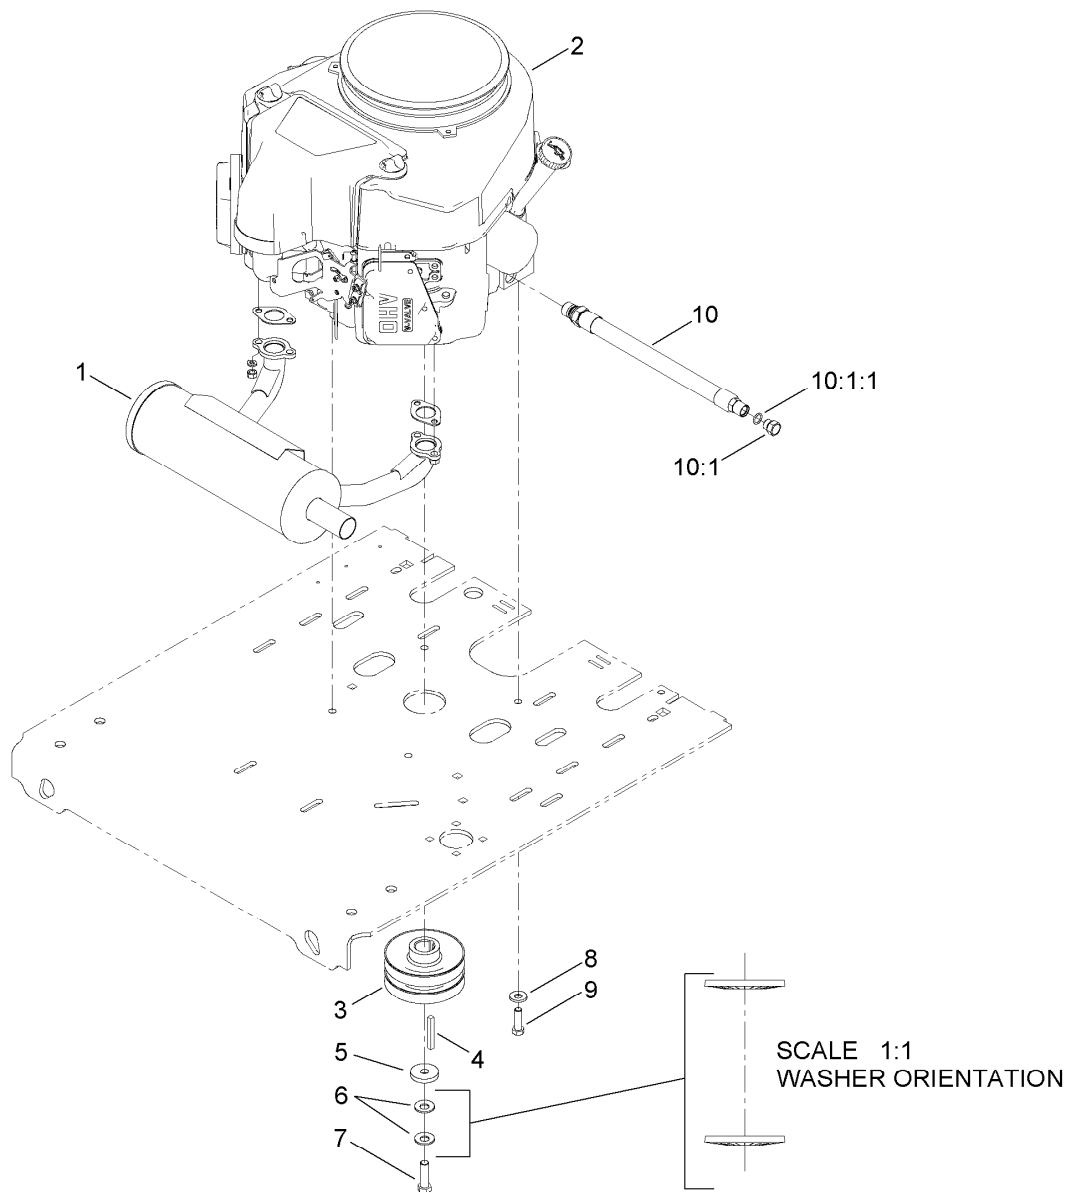

Engine Assembly

Ref.	Part Number	Qty.	Description
1	116-3735	1	Muffler-Horizontal
2		1	Engine-Kawasaki, Fs481V_s25-R ●■
3	116-6666	1	Pulley
4	103-4177	1	Key
5	1-543610	1	Washer-Clutch
6	1-603610	2	Washer-Spring
7	109-9761	1	Screw-HH, W/Loctite ◆
8	98-5975	4	Washer-Belleville
9	323-7	4	Screw-HH
10	116-4924	1	Engine Oil Drain Hose ASM ▲
10:1	353-508	1	Plug-HH
10:1:1	237-42	1	O-Ring

● Not serviced separately

▲ Use a Teflon Pipe Sealant or equivalent on threads.

◆ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Obtain parts from www.kawpowerepc.com

Notes:

Notes:



Count on it.