



GUARDIAN®
72" RECYCLER®

30372-60001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Gearbox Mount & Drive Shaft Assembly	1	Spindle Assembly	5
Gear Box Assembly No. 93–4835	2	Castor Wheels & Arms Assembly	6
Drive Shaft Assembly No. 93–4790	3	Lift Arm Assembly	7
Idlers, Skids & Rollers Assembly	4	Covers & Chambers Assembly	8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	LH	left hand
ASM	assembly	NI	nylon insert
CARR	carriage	PPH	Phillips pan head
DEG	degrees	PTH	phillips truss head
FH	flat head	PTO	power take off
GA	gauge	RH	right hand
HF	hex flange	SFH	slotted fillister head
HH	hex head	SHH	slotted hex head
HHF	hex head flange	SHL	slotted headless
HLH	hex lag head	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	STH	slotted truss head
HWH	hex washer head	TTH	Torx truss head
INC	incorporated	WH	wing head

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form X:Y. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

This Page Intentionally Left Blank

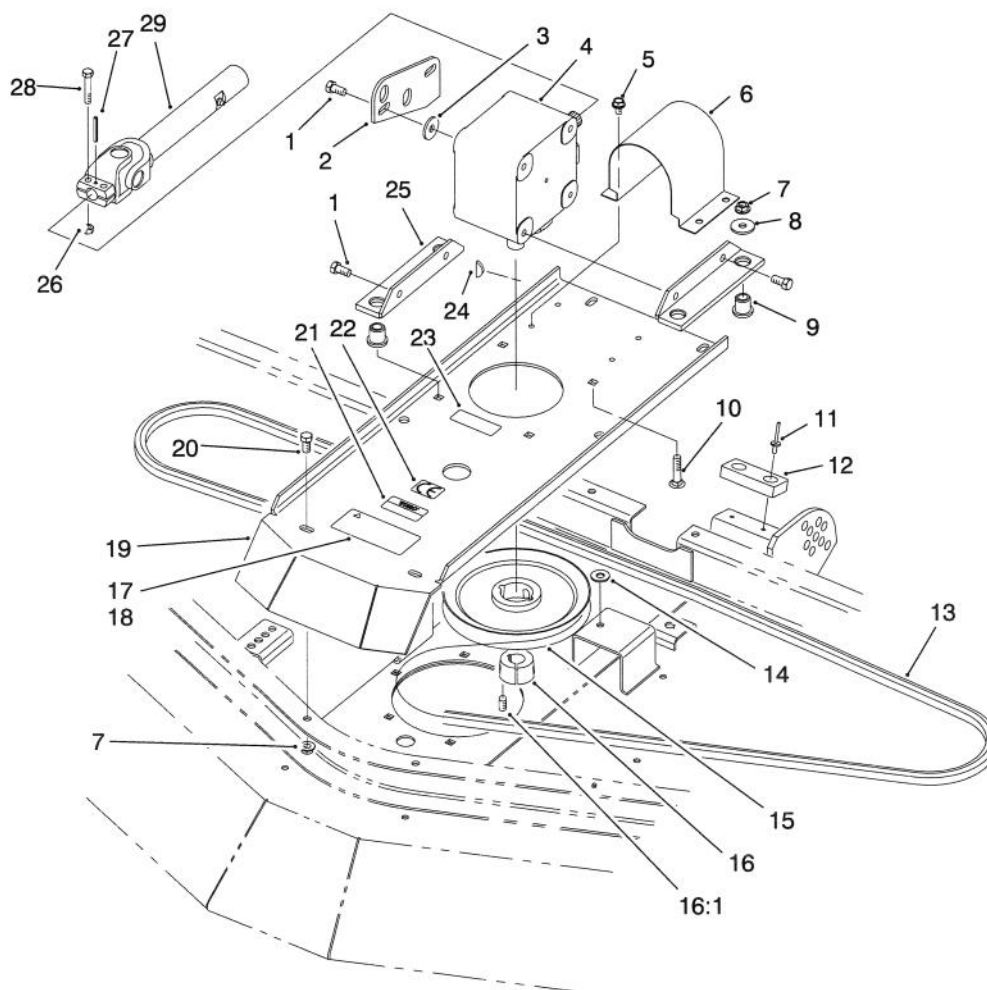

Sheet No.: 2

T-2407-2


Gearbox Mount & Drive Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	33105-020	6	Screw-HHF
2	93-4792	1	Plate-Latch
3	93-4637	2	Washer-Flat
4	93-4835	1	Gearbox Assembly
5	32104-82	4	Screw-HWH
6	93-4930	1	Shield-Universal
7	32128-21	10	Nut-HF
8	63-8410	4	Washer-Flat
9	63-9750	4	Mount-Rubber
10	3231-26	4	Screw-CARR
11	3269-11	4	Rivet
12	86-5350	2	Bumper-Rubber
13	93-8457	1	Belt-Hex
14	3256-24	A/R	Washer-Flat
15	85-5860	1	Gearbox Pulley ASM
16	23-1640	1	Bushing-Taper Lock
16:1	3247-4	2	Screw-HS
†17	68-8340	1	Decal-Torque
18	93-7818	1	Decal-Blade Bolt Torque (Europe)
19	93-4795	1	Gearbox Mount ASM Incl 17 21-23
20	3234-11	6	Screw-HHF
☆21		1	Decal-Safety STD
†22	93-7252	1	Decal-CE Mark
†23	93-6697	1	Decal-Lube

Ref. No.	Part No.	Qty.	Description
24	3257-5	1	Key-Woodruff
25	68-8560	2	Gearbox Bracket ASM
26	3296-29	2	Nut-Lock
27	32121-34	1	Pin-Roll
28	322-9	2	Screw-HH
29	93-4790	1	Shaft-Drive

† Included in a service kit or in an assembly

☆ Not serviced

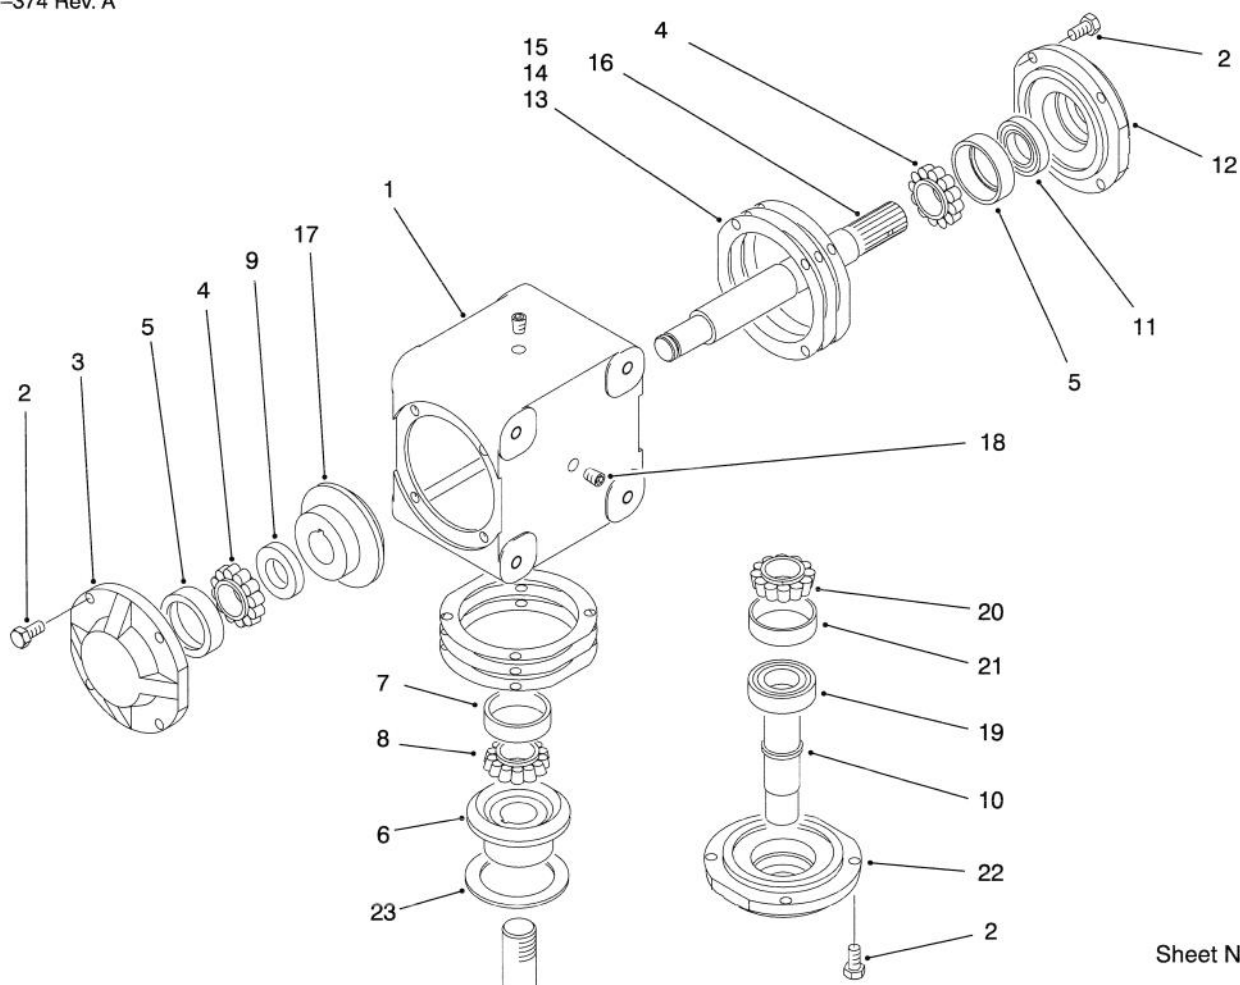


Sheet No.: 100

T-2351

Gear Box Assembly No. 93-4835

Ref. No.	Part No.	Qty.	Description
1	93-4815	1	Housing
2	62-3310	12	Sems Cap Screw
3	62-3320	1	Cap
4	254-94	2	Cone-Bearing
5	62-3340	2	Bearing Cup
6	93-4842	1	Gear-RH
7	93-4814	1	Bearing Cup
8	93-4813	1	Bearing Cone
9	93-4843	1	Spacer
10	93-4812	1	Shaft
11	62-3400	1	Seal
12	62-3410	1	Cap
13	62-3420	A/R	Gasket (.015)
14	62-3430	A/R	Gasket (.005)
15	62-3440	A/R	Gasket (.003)
16	93-4513	1	Shaft
17	93-4841	1	Gear-LH
18	62-3490	2	Pipe Plug (Solid)
19	92-0609	1	Seal
20	92-0610	1	Bearing Cone
21	92-0611	1	Bearing Cup
22	92-0608	1	Cap
23	93-4852	1	Washer

Ref. No.	Part No.	Qty.	Description

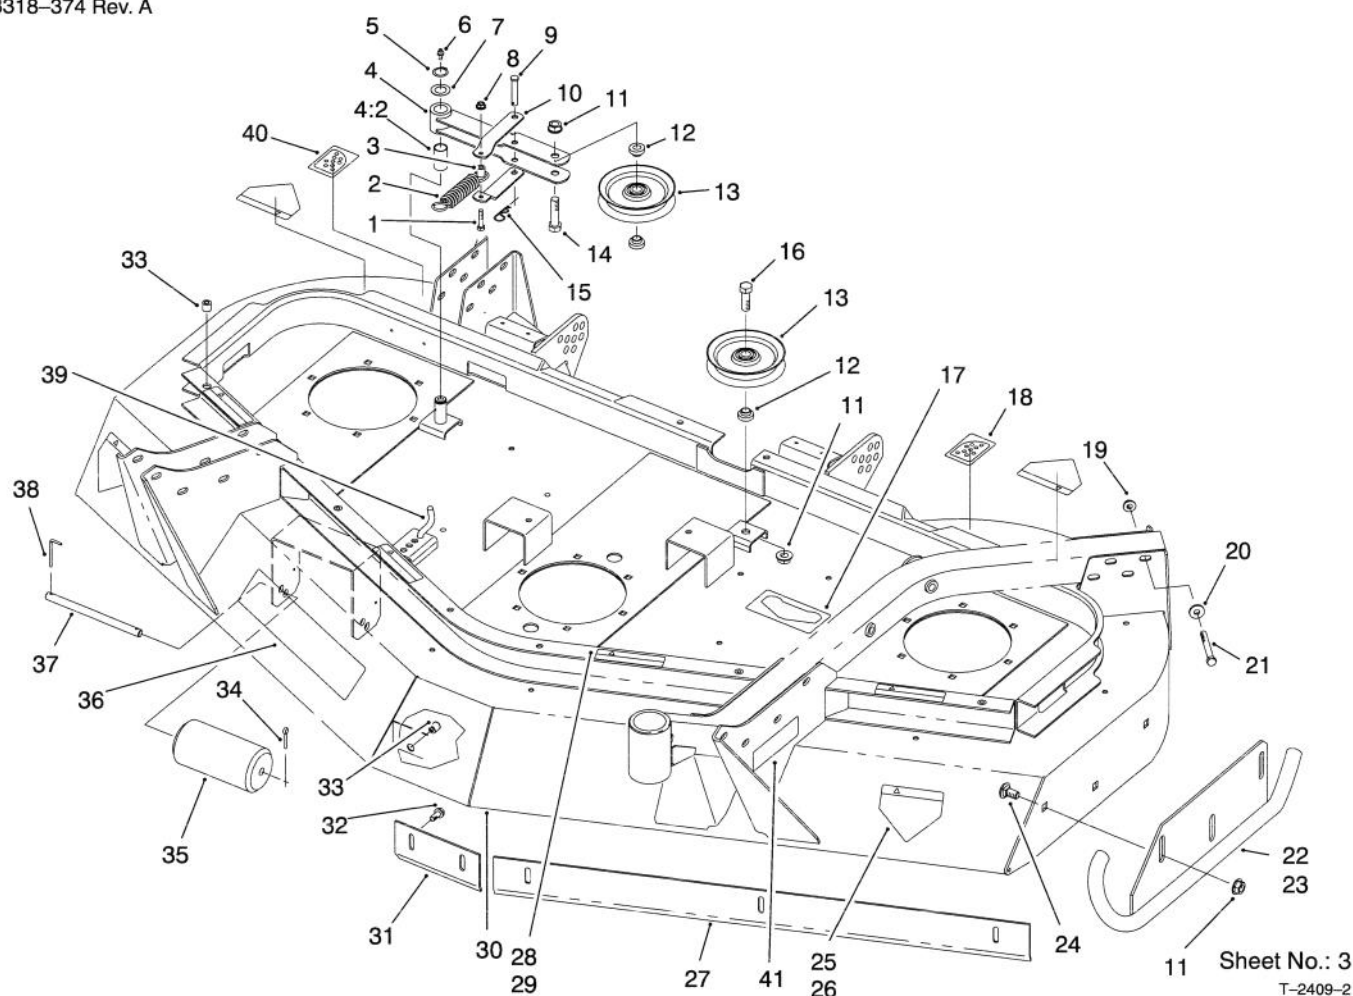


Idlers, Skids & Rollers Assembly

Ref. No.	Part No.	Qty.	Description
1	321-8	1	Screw-HH
2	85-6390	1	Spring-Extension
3	85-5930	1	Tube-Spring Bracket
4	85-5900	1	Idler Arm ASM
4:2	256-188	1	Bushing-Strght
5	32120-72	1	Ring-Retaining
†6	302-2	1	Fitting-Grease
7	3-6498	1	Washer-Thrust
8	32128-32	1	Nut-Hex Flange
9	283-82	1	Pin-Clevis
10	85-5920	2	Bracket-Spring
11	32128-49	8	Nut-Hex Flange
12	69-6960	3	Spacer-Idler
13	63-1540	2	Pulley-Idler
14	325-8	1	Screw-HH
15	3290-467	1	Pin-Cotter
16	325-6	1	Screw-HH
†17	85-6120	1	Decal-Belt Routing
†18	94-3392	1	Decal-Rear HOC
19	32128-19	16	Nut-Lock
20	5-0838	16	Washer-Flat
21	323-14	16	Screw-HH
22	85-5980	1	LH Skid ASM
23	85-5950	1	RH Skid ASM
24	3233-9	6	Screw-CARR
†25	43-8480	4	Decal-Danger

Ref. No.	Part No.	Qty.	Description
26	93-7815	4	Decal-Danger (Europe)
27	93-4390	2	Baffle-Side
†28	85-6410	4	Decal-Danger
29	93-7814	4	Decal-Warning (Europe)
30	93-4771	1	72" Deck ASM Incl 6 17 18 25 28 33 36 40 41
31	93-4391	1	Baffle-Center
32	3234-5	8	Screw-HHF
†33	32148-7	12	Nut-Insert
34	3272-11	3	Pin-Cotter
35	36-1740	3	Roller-Deck
†36	85-6430	1	Decal-Guardian
37	40-6400	3	Shaft-Roller
38	57-0690	3	Pin-Cotter
39	85-5940	1	Rod-Spring
†40	93-4691	1	Decal-Rear HOC
†41	93-4690	2	Decal-HOC

† Included in a service kit or in an assembly

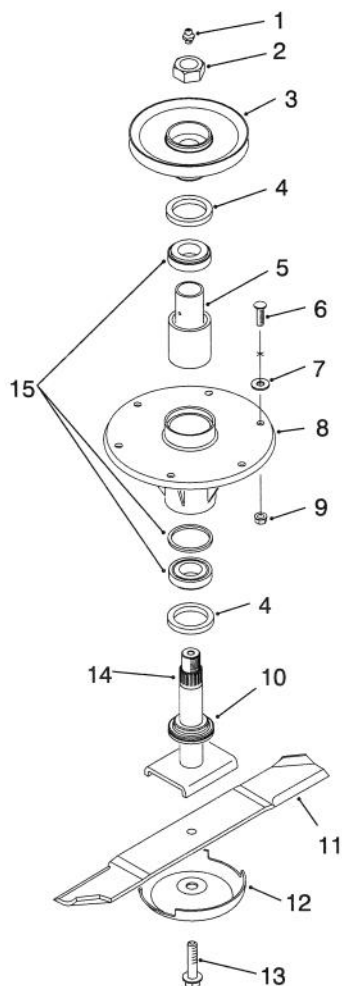

Sheet No.: 4


T-2410

Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	302-2	3	Fitting-Grease
2	3296-49	3	Nut-Lock NI
3	85-6030	3	Pulley ASM
4	253-154	6	Seal-Oil
†5		3	Spacers-Matched Set
6	3231-27	18	Screw-CARR
7	3256-24	A/R	Washer-Flat
8	69-1530	3	Housing-Spindle
9	32128-21	18	Nut-HF
10	92-9800	3	Spacer-Spindle Shaft
11	85-6040	3	Blade
12	72-9361	3	Anti-Scalp Cup
13	92-5816	3	Screw - Blade
14	85-6010	3	Spindle Shaft ASM
15	71-2530	3	Spindle Bearing ASM
			Incl 5

Ref. No.	Part No.	Qty.	Description

† Included in a service kit or in an assembly

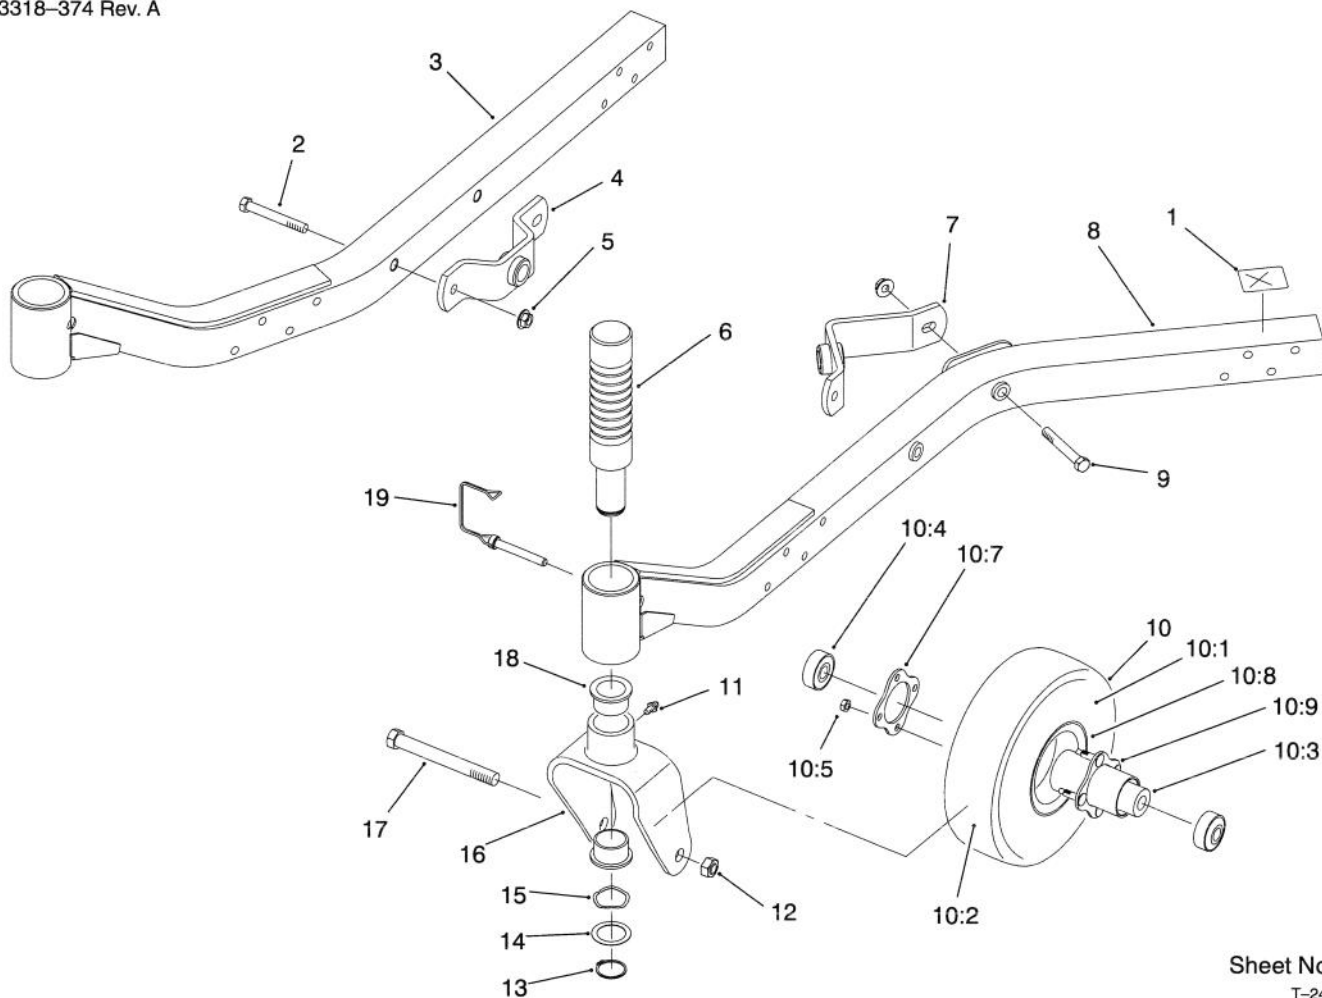

Sheet No.: 5


T-2411-2

Castor Wheels & Arms Assembly

Ref. No.	Part No.	Qty.	Description
1	93-0299	1	Decal-No Step
2	324-12	3	Screw-HH
3	93-4785	1	Castor Arm ASM-RH
4	93-4781	1	Ball Joint Mount ASM
5	32128-42	4	Nut-Hex Flange
6	93-4582	2	Shaft-Castor
7	93-4783	1	Ball Joint Mount ASM
8	93-4787	1	Castor Arm ASM-LH
9	324-13	1	Screw-HH
10	93-4240	2	Wheel-Pneumatic 10"
10:1	93-4243	2	Tire 10"
10:2	93-4244	2	Tube-W/Valve
10:3	93-4241	2	Spacer-Bearing
10:4	93-4237	4	Bearing
10:5	32128-16	8	Nut-HHF
10:7	93-4242	2	Plate
10:8	93-4239	4	Rim-Wheel
10:9	93-5980	2	Hub
†11	302-5	2	Fitting-Grease
12	33028-00	2	Nut-Lock NI
13	32120-84	2	Ring-Retaining
14	93-4628	2	Washer
15	93-4632	2	Washer-Wavey
16	93-4824	2	Castor Fork ASM Incl
17	33118-140	2	Screw-HH

Ref. No.	Part No.	Qty.	Description
†18	93-4510	4	Bushing-Castor
19	93-4696	2	Pin-Snapper

† Included in a service kit or in an assembly

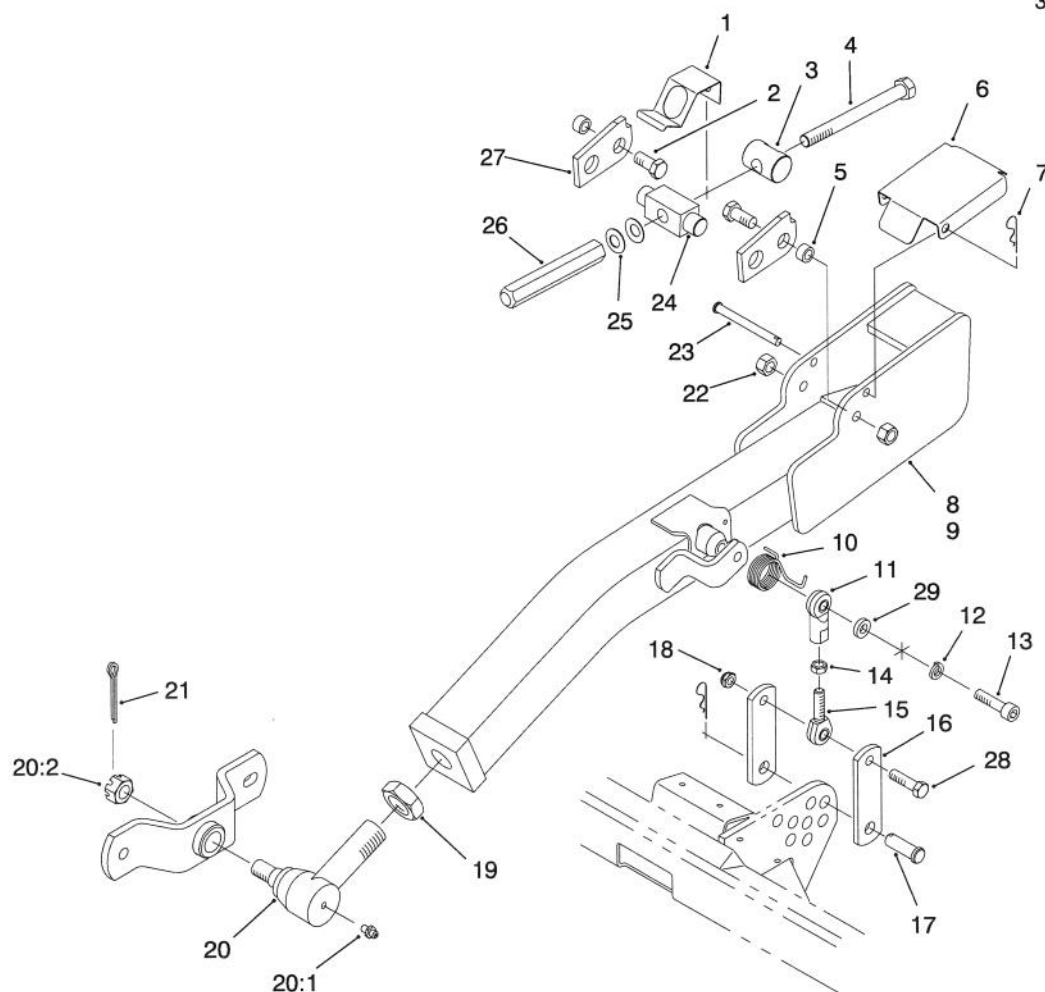


Sheet No.: 6

T-2412

Lift Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4818	2	Spring-Lever
2	33115-025	4	Screw-HH
3	93-4676	2	Shaft-Latch
4	3213-24	2	Screw-HH
5	93-4618	4	Spacer-Pivot
6	93-4819	2	Cover-Latch
7	3290-467	4	Pin-Cotter
8	93-4775	1	Lift Arm ASM-RH
9	93-4777	1	Lift Arm ASM-LH
10	93-4817	2	Spring-Torsion
11	93-4697	2	Bearing-Rod End
12	3253-21	2	Washer-Spring Lock
13	3274-3	2	Screw-HSH
14	3220-3	2	Nut-Hex Jam
15	2411-51	2	Ball Joint-RH
16	93-4599	4	Strap-HOC
17	283-40	2	Pin-Clevis
18	3296-59	2	Nut-Lock
19	21-3000	2	Nut-Jam
20	86-8100	2	Ball Joint
20:1	302-5	2	Fitting-Grease
20:2	32136-2	2	Nut-Hex Slotted
21	3272-12	2	Pin-Cotter
22	33025-00	4	Nut-Lock NI
23	283-88	2	Pin-Clevis
24	93-4677	2	Hub-Release

Ref. No.	Part No.	Qty.	Description
25	3290-413	4	Washer-Spring
26	93-4678	2	Lever-Release
27	93-4675	4	Plate-Release
28	323-29	2	Screw-HH
29	80-7730	2	Spacer

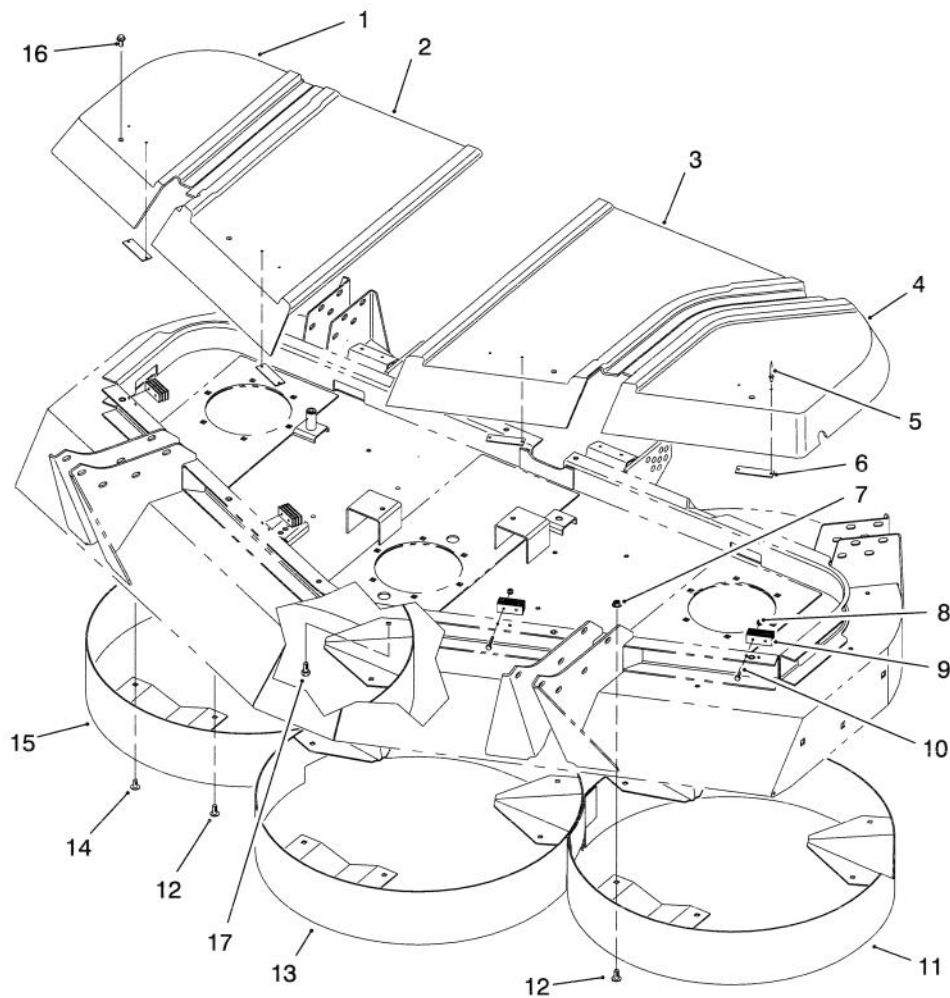

Sheet No.: 7
T-2413

Covers & Chambers Assembly

Ref. No.	Part No.	Qty.	Description
1	93-4853	1	Cover-RH
2	93-4798	1	Cover-RH Center
3	93-4797	1	Cover-LH Center
4	93-4854	1	Cover-LH
5	3269-25	8	Rivet-Pop
6	69-6870	4	Plate-Magnet
7	32128-25	18	Nut-Hex Flange
8	3296-2	8	Nut-Lock NI
9	69-6260	4	Magnet
10	32105-1	8	Screw-HH
11	85-6460	1	LH Chamber ASM
12	3230-23	2	Screw-CARR
13	85-6480	1	Center Chamber ASM
14	3230-18	15	Screw-CARR
15	85-6470	1	RH Chamber ASM
16	3234-5	4	Screw-HHF
17	322-3	1	Screw-HH

Ref. No.	Part No.	Qty.	Description

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
3-6498	4	7	1	Washer-Thrust
5-0838	4	20	16	Washer-Flat
21-3000	7	19	2	Nut-Jam
23-1640	1	16	1	Bushing-Taper Lock
36-1740	4	35	3	Roller-Deck
40-6400	4	37	3	Shaft-Roller
43-8480	4	25	4	Decal-Danger
54-9040	3	1	1	End Yoke
54-9180	3	2	2	U-Joint Kit
57-0690	4	38	3	Pin-Cotter
62-3310	2	2	12	Sems Cap Screw
62-3320	2	3	1	Cap
62-3340	2	5	2	Bearing Cup
62-3400	2	11	1	Seal
62-3410	2	12	1	Cap
62-3420	2	13	A/R	Gasket (.015)
62-3430	2	14	A/R	Gasket (.005)
62-3440	2	15	A/R	Gasket (.003)
62-3490	2	18	2	Pipe Plug (Solid)
62-3820	3	3	2	Fitting-Grease
63-1540	4	13	2	Pulley-Idler
63-8410	1	8	4	Washer-Flat
63-9750	1	9	4	Mount-Rubber
68-8340	1	17	1	Decal-Torque
68-8560	1	25	2	Gearbox Bracket ASM
69-1530	5	8	3	Housing-Spindle
69-6260	8	9	4	Magnet
69-6870	8	6	4	Plate-Magnet
69-6960	4	12	3	Spacer-Idler
71-2530	5	15	3	Spindle Bearing ASM Incl 5
72-9361	5	12	3	Anti-Scalp Cup
80-7730	7	29	2	Spacer
85-5860	1	15	1	Gearbox Pulley ASM
85-5900	4	4	1	Idler Arm ASM
85-5920	4	10	2	Bracket-Spring
85-5930	4	3	1	Tube-Spring Bracket
85-5940	4	39	1	Rod-Spring
85-5950	4	23	1	RH Skid ASM
85-5980	4	22	1	LH Skid ASM
85-6010	5	14	3	Spindle Shaft ASM
85-6030	5	3	3	Pulley ASM
85-6040	5	11	3	Blade
85-6120	4	17	1	Decal-Belt Routing
85-6390	4	2	1	Spring-Extension
85-6410	4	28	4	Decal-Danger
85-6430	4	36	1	Decal-Guardian
85-6460	8	11	1	LH Chamber ASM
85-6470	8	15	1	RH Chamber ASM
85-6480	8	13	1	Center Chamber ASM
86-5350	1	12	2	Bumper-Rubber
86-8100	7	20	2	Ball Joint
92-0608	2	22	1	Cap
92-0609	2	19	1	Seal
92-0610	2	20	1	Bearing Cone
92-0611	2	21	1	Bearing Cup
92-5816	5	13	3	Screw - Blade
92-9800	5	10	3	Spacer-Spindle Shaft
93-0299	6	1	1	Decal-No Step
93-4237	6	10:4	4	Bearing
93-4239	6	10:8	4	Rim-Wheel
93-4240	6	10	2	Wheel-Pneumatic 10"
93-4241	6	10:3	2	Spacer-Bearing
93-4242	6	10:7	2	Plate
93-4243	6	10:1	2	Tire 10"
93-4244	6	10:2	2	Tube-W/Valve
93-4390	4	27	2	Baffle-Side
93-4391	4	31	1	Baffle-Center

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93-4510	6	18	4	Bushing—Castor
93-4513	2	16	1	Shaft
93-4582	6	6	2	Shaft—Castor
93-4599	7	16	4	Strap—HOC
93-4618	7	5	4	Spacer—Pivot
93-4628	6	14	2	Washer
93-4632	6	15	2	Washer—Wavey
93-4633	3	5	1	Yoke ASM—Auto Lok
93-4634	3	6	1	Shaft—Slip Yoke
93-4637	1	3	2	Washer—Flat
93-4675	7	27	4	Plate—Release
93-4676	7	3	2	Shaft—Latch
93-4677	7	24	2	Hub—Release
93-4678	7	26	2	Lever—Release
93-4690	4	41	2	Decal—HOC
93-4691	4	40	1	Decal—Rear HOC
93-4696	6	19	2	Pin—Snapper
93-4697	7	11	2	Bearing—Rod End
93-4771	4	30	1	72" Deck ASM Incl 6 17 18 25 28 33 36 40 41
93-4775	7	8	1	Lift Arm ASM—RH
93-4777	7	9	1	Lift Arm ASM—LH
93-4781	6	4	1	Ball Joint Mount ASM
93-4783	6	7	1	Ball Joint Mount ASM
93-4785	6	3	1	Castor Arm ASM—RH
93-4787	6	8	1	Castor Arm ASM—LH
93-4790	1	29	1	Shaft—Drive
93-4791	3	7	1	Tube—Slip Yoke
93-4792	1	2	1	Plate—Latch
93-4795	1	19	1	Gearbox Mount ASM Incl 17 21—23
93-4797	8	3	1	Cover—LH Center
93-4798	8	2	1	Cover—RH Center
93-4812	2	10	1	Shaft
93-4813	2	8	1	Bearing Cone
93-4814	2	7	1	Bearing Cup
93-4815	2	1	1	Housing
93-4817	7	10	2	Spring—Torsion
93-4818	7	1	2	Spring—Lever
93-4819	7	6	2	Cover—Latch
93-4824	6	16	2	Castor Fork ASM Incl 11 18
93-4835	1	4	1	Gearbox Assembly
93-4841	2	17	1	Gear—LH
93-4842	2	6	1	Gear—RH
93-4843	2	9	1	Spacer
93-4852	2	23	1	Washer
93-4853	8	1	1	Cover—RH
93-4854	8	4	1	Cover—LH
93-4930	1	6	1	Shield—Universal
93-5980	6	10:9	2	Hub
93-6697	1	23	1	Decal—Lube
93-7252	1	22	1	Decal—CE Mark
93-7814	4	29	4	Decal—Warning (Europe)
93-7815	4	26	4	Decal—Danger (Europe)
93-7818	1	18	1	Decal—Blade Bolt Torque (Europe)
93-8457	1	13	1	Belt—Hex
94-3392	4	18	1	Decal—Rear HOC
2411-51	7	15	2	Ball Joint—RH
253-154	5	4	6	Seal—Oil
254-94	2	4	2	Cone—Bearing
256-188	4	4:2	1	Bushing—Strght
283-40	7	17	2	Pin—Clevis
283-82	4	9	1	Pin—Clevis
283-88	7	23	2	Pin—Clevis
302-2	4	6	1	Fitting—Grease
302-2	5	1	3	Fitting—Grease
302-5	6	11	2	Fitting—Grease
302-5	7	20:1	2	Fitting—Grease
302-58	3	4	1	Fitting—Grease

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
321-8	4	1	1	Screw-HH
322-3	8	17	1	Screw-HH
322-9	1	28	2	Screw-HH
323-14	4	21	16	Screw-HH
323-29	7	28	2	Screw-HH
324-12	6	2	3	Screw-HH
324-13	6	9	1	Screw-HH
325-6	4	16	1	Screw-HH
325-8	4	14	1	Screw-HH
3213-24	7	4	2	Screw-HH
3220-3	7	14	2	Nut-Hex Jam
3230-18	8	14	15	Screw-CARR
3230-23	8	12	2	Screw-CARR
3231-26	1	10	4	Screw-CARR
3231-27	5	6	18	Screw-CARR
3233-9	4	24	6	Screw-CARR
3234-5	4	32	8	Screw-HHF
3234-5	8	16	4	Screw-HHF
3234-11	1	20	6	Screw-HHF
3247-4	1	16:1	2	Screw-HS
3253-21	7	12	2	Washer-Spring Lock
3256-24	1	14	A/R	Washer-Flat
3256-24	5	7	A/R	Washer-Flat
3257-5	1	24	1	Key-Woodruff
3269-11	1	11	4	Rivet
3269-25	8	5	8	Rivet-Pop
3272-11	4	34	3	Pin-Cotter
3272-12	7	21	2	Pin-Cotter
3274-3	7	13	2	Screw-HSH
3290-413	7	25	4	Washer-Spring
3290-467	4	15	1	Pin-Cotter
3290-467	7	7	4	Pin-Cotter
3296-2	8	8	8	Nut-Lock NI
3296-29	1	26	2	Nut-Lock
3296-49	5	2	3	Nut-Lock NI
3296-59	7	18	2	Nut-Lock
32104-82	1	5	4	Screw-HWH
32105-1	8	10	8	Screw-HH
32120-72	4	5	1	Ring-Retaining
32120-84	6	13	2	Ring-Retaining
32121-34	1	27	1	Pin-Roll
32128-16	6	10:5	8	Nut-HHF
32128-19	4	19	16	Nut-Lock
32128-21	1	7	10	Nut-HF
32128-21	5	9	18	Nut-HF
32128-25	8	7	18	Nut-Hex Flange
32128-32	4	8	1	Nut-Hex Flange
32128-42	6	5	4	Nut-Hex Flange
32128-49	4	11	8	Nut-Hex Flange
32136-2	7	20:2	2	Nut-Hex Slotted
32148-7	4	33	12	Nut-Insert
33025-00	7	22	4	Nut-Lock NI
33028-00	6	12	2	Nut-Lock NI
33105-020	1	1	6	Screw-HHF
33115-025	7	2	4	Screw-HH
33118-140	6	17	2	Screw-HH

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]