 


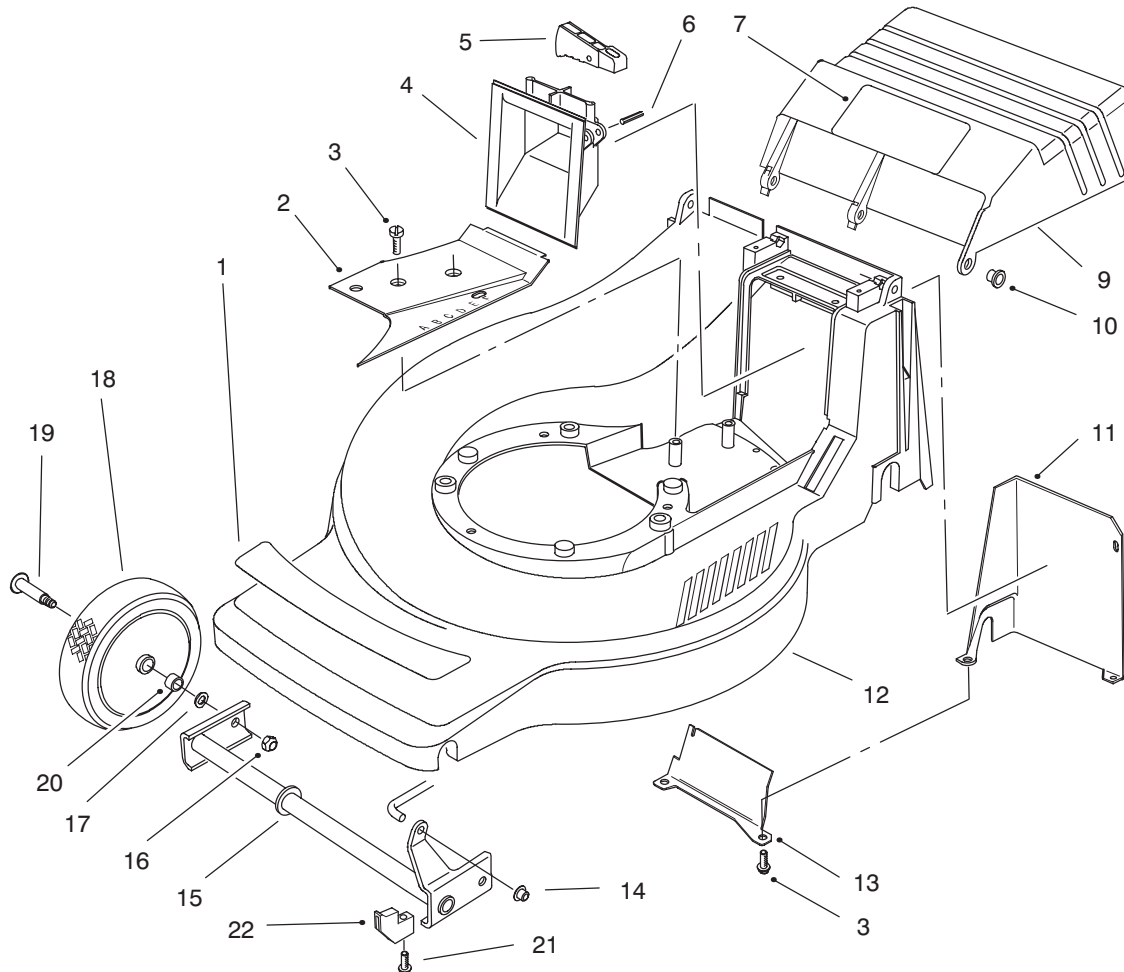

MODEL NO. 21001B-6900001 & UP

**PARTS
CATALOG**
43cm REAR BAGGING MOWER


C-2113

HOUSING ASSEMBLY


Ref. No.	Part No.	Description	No. Used
†1	93-7025	Decal - Deck	1
†2	93-3782	Cover - Belt	1
3	93-4095	Screw - Tapping	5
4	71-7870	Grip - Lower	1
5	71-7930	Trigger - H.O.C.	1
6	3284-5	Pin - Groove	1
†7	93-4105	Decal	1
†9	93-4055	Door - Discharge	1
†10	93-3794	Bushing	1
†11	93-3781	Cover - Shield	1
†12	93-4053	Housing - Deck	1

Ref. No.	Part No.	Description	No. Used
†13	93-4110	Baffle	1
14	32112-11	Nut - Push	1
†15	93-4080	Axle - Front	1
16	3296-6	Nut - Lock	2
17	40-1940	Washer	2
†18	93-4081	Wheel & Tire Assembly 7"	2
19	27-6231	Bolt - Wheel	2
†20	93-7024	Bushing	4
†21	93-3793	Screw - Retainer	2
†22	93-4064	Retainer - Axle	2

† Obtain from Toro Europe N.V.

Copyright 1995 The Toro Company
All Rights Reserved

 TPS

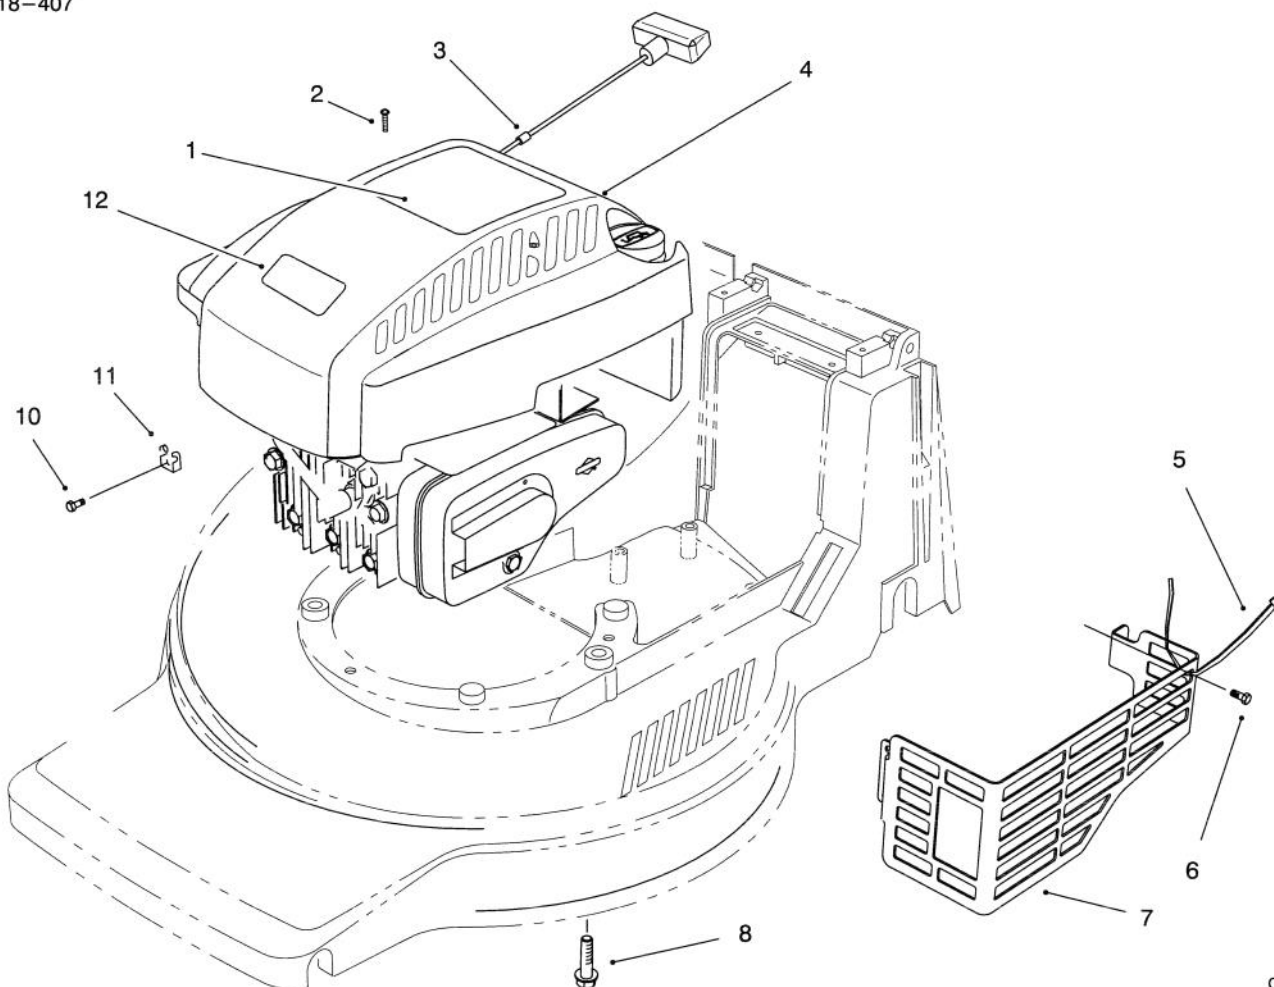


C-2108

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	93-4352	Decal - Shroud	1
2	32144-121	Screw - Mounting	2
3	2210-316	Stop - Rope	1
4	93-0243	Shroud - Engine	1
5	3290-378	Tie - Cable	1
6	32144-73	Screw - Hex Washer Hd. Thread Forming	3

Ref. No.	Part No.	Description	No. Used
7	82-8550	Shield - Muffler	1
8	32144-102	Screw - Engine	3
10	93-8470	Screw - Clamp	1
11	2210-249	Clamp - Casing	1
12	92-2289	Plate - Logo Toro	1

 † Obtain from Toro Europe N.V.

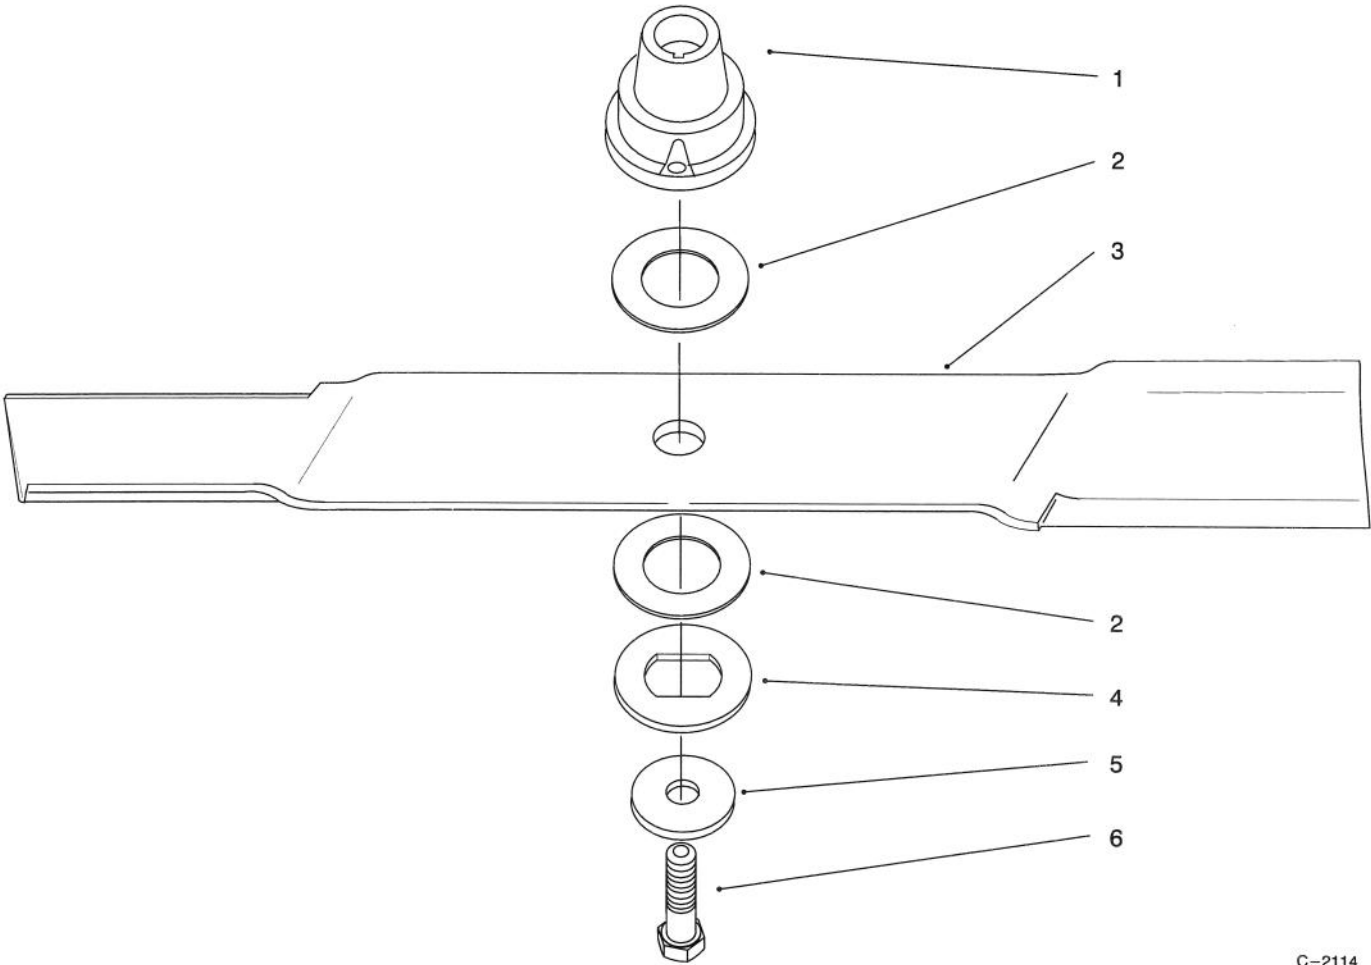


C-2114

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	93-7017	Retainer - Blade	1
†2	93-7016	Washer - Friction	2
†3	93-4101	Blade - 43cm	1

Ref. No.	Part No.	Description	No. Used
†4	93-7014	Washer - Pressure	1
†5	93-7015	Washer - Spring	1
6	26-0670	Bolt - Blade	1

 † Obtain from Toro Europe N.V.

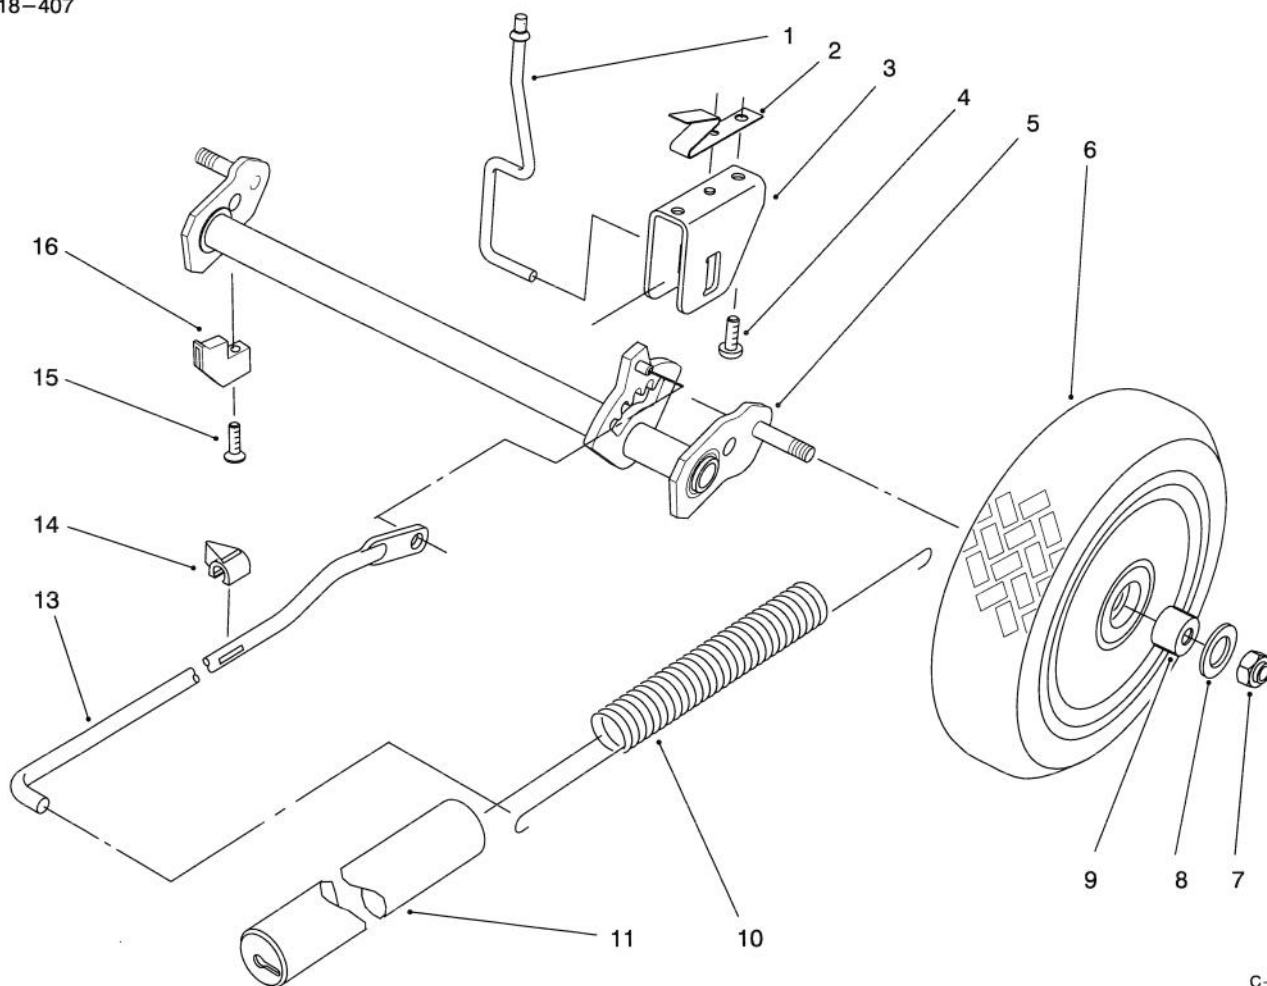


C-2110

REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	93-4061	Rod - Trigger	1
†2	93-4062	Spring - Trigger Ret.	1
†3	93-4066	Saddle - H.O.C.	1
†4	93-4095	Screw	2
†5	93-4079	Axle - Rear	1
†6	93-8492	Wheel & Tire Assembly	2
†7	93-4098	Nut - Lock	2
†8	93-4097	Washer - Wheel	2

Ref. No.	Part No.	Description	No. Used
†9	93-7023	Bushing	4
†10	71-7740	Spring - Counterbalance	1
†11	71-8450	Cover - Spring	1
†12	93-4065	Rod - Link	1
†13	71-7980	Indicator - H.O.C.	1
†14	93-3793	Screw - Retainer	2
†15	93-4064	Retainer - Axle	2

 † Obtain from Toro Europe N.V.

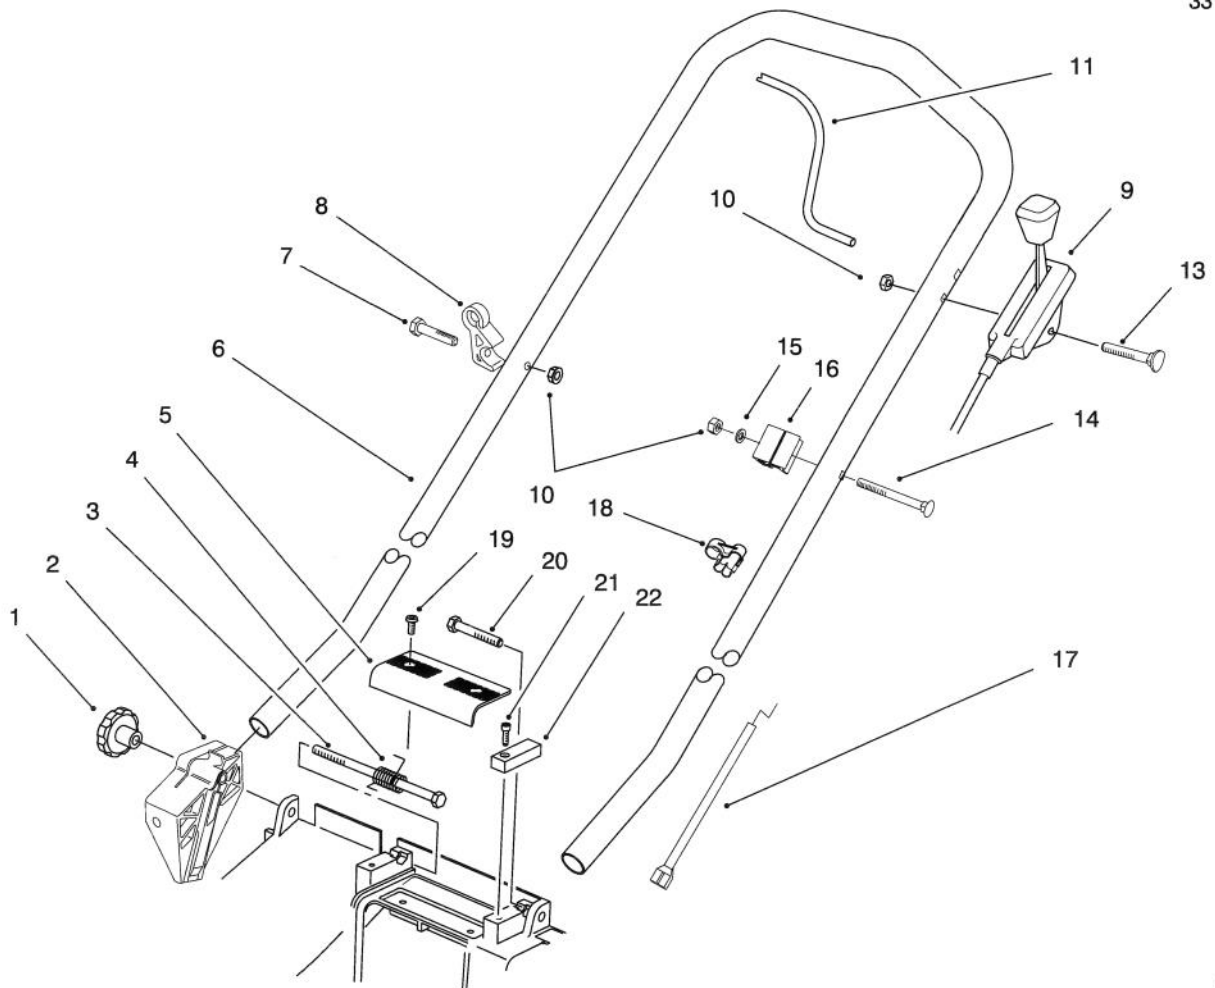

C-2448


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	19-4050	Knob	2
†2	93-4082	Mount - Handle R.H.	1
†*	93-4083	Mount - Handle L.H.	1
†3	93-4058	Screw	1
†4	93-4057	Spring	1
5	71-7860	Grip - Upper	1
6	94-4375	Handle	1
7	321-52	Screw	1
8	93-3772	Guide - Rope	1
9	93-1118	Control - Throttle	1
10	3296-73	Nut - Lock	3

Ref. No.	Part No.	Description	No. Used
11	94-4364	Bail - Control	1
13	321-48	Screw - Handle	1
†14	92-2270	Screw - Handle	1
15	3256-1	Washer - Flat	1
16	46-6980	Support - Cable	1
17	93-1116	Cable - Brake	1
†18	93-4084	Clamp - Cable	2
19	32144-97	Screw	2
†20	93-4060	Screw	1
†21	93-4094	Screw - Hinge, Cap	2
†22	93-4056	Cap	2

*Not Illustrated

 † Obtain from Toro Europe N.V.

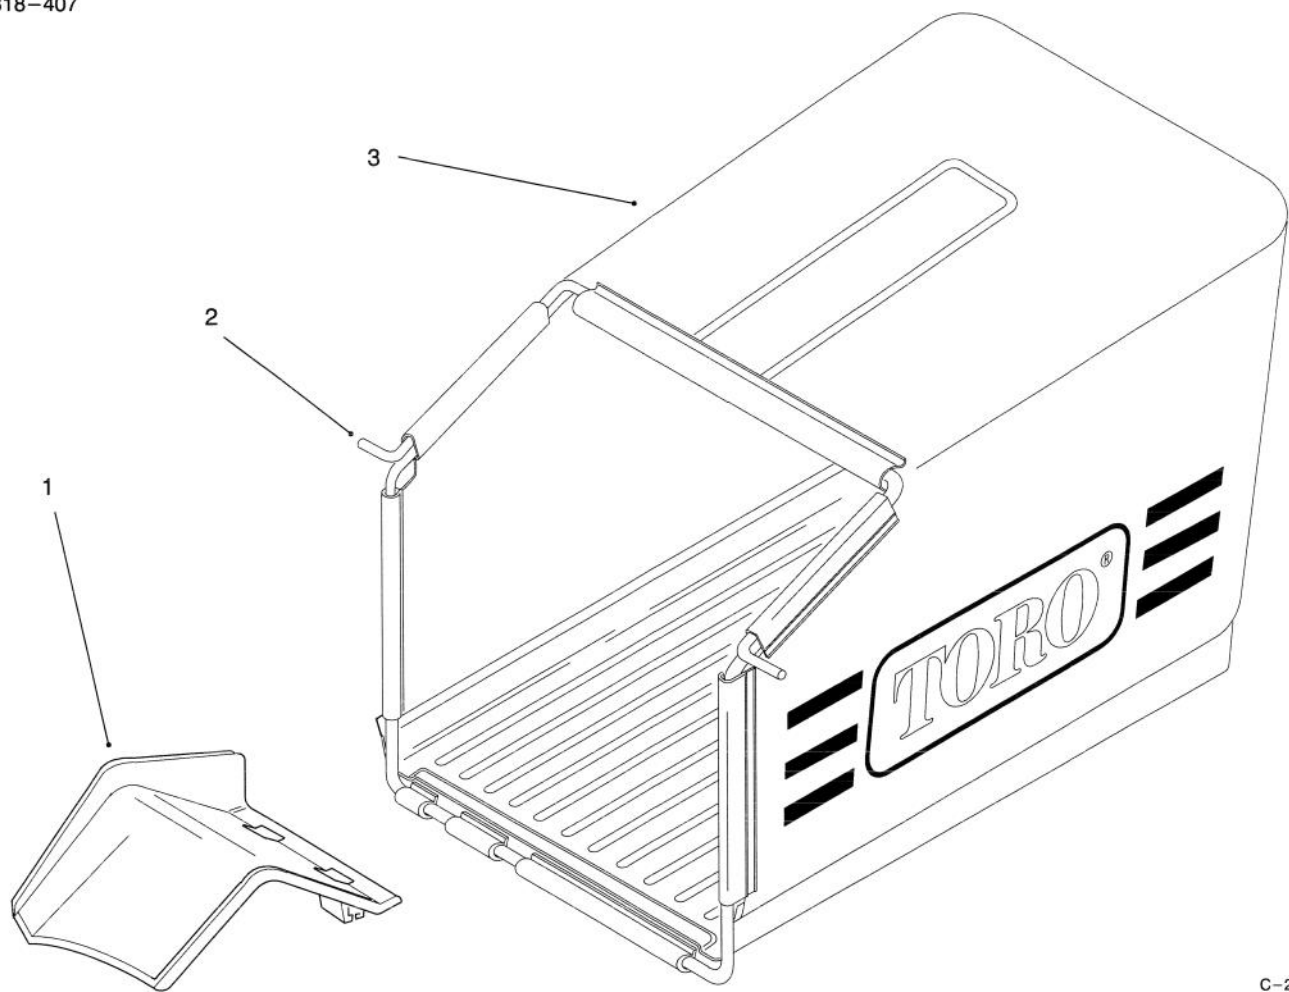


C-2112

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
†1	93-4087	Grass Bag Remover	1
†2	93-4085	Frame - Bag	1

Ref. No.	Part No.	Description	No. Used
†3	93-4086	Bag - Grass	1

 † Obtain from Toro Europe N.V.

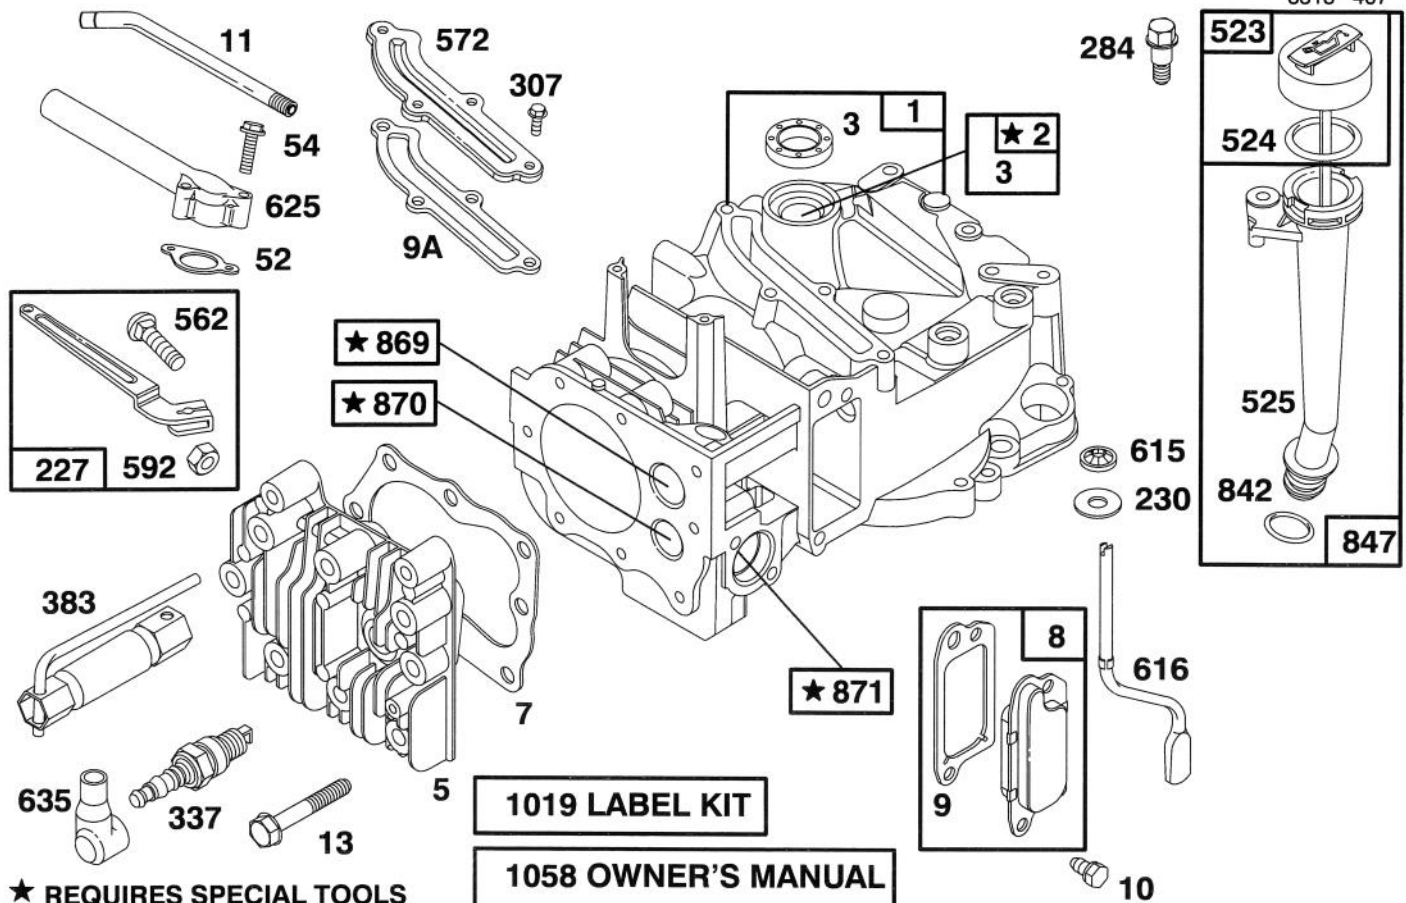


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing - Cylinder	1
★3	299819	Seal - Oil	1
5	214349	Head - Cylinder	1
★7	272916	Gasket - Cylinder Head	1
8	495786	Breather Assembly	1
★9	272481	Gasket - Valve Cover	1
★9A	272238	Gasket - Baffle Plate	1
10	94650	Screw - Breather Mtg.	1
11	231933	Tube - Breather	1
13	94547	Screw - Cylinder Head	1
★52	272199	Gasket - Intake Elbow	1
54	94526	Screw - Intake Elbow Mtg.	1
227	492349	Lever Assembly - Gov.	1
230	67072	Washer - Gov. Crank	1
284	94511	Screw - Hex. Head	1
337	802592	Plug - Spark	1
383	89838	Wrench - Spark Plug	1
523	495264	Cap With Dipstick - Oil Filler	1

Ref. No.	Part No.	Description	No. Used
★524	280393	Seal - Filler Tube	1
525	495265	Tube - Oil Filler	1
562	92613	Bolt - Governor Lever	1
572	224328	Baffle - Cylinder	1
592	231082	Nut - Hex.	1
615	94474	Fastener	1
616	262578	Crank - Governor	1
625	281085	Tube - Fuel Intake	1
635	66538	Elbow - Spark Plug	1
★842	280966	Seal - O-Ring	1
847	495263	Oil Fill Tube and Dipstick Assy.	1
869	213512	Seat - Intake Valve	1
870	213513	Seat - Exhaust Valve	1
871	262001	Guide - Exhaust Valve	1
1019	494256	Note: 63709 Guide - Intake Valve	1
1058	272262	Label Kit	1
		Owner's Manual	1

 ★ Included in Gasket Set - Part No. 497316.

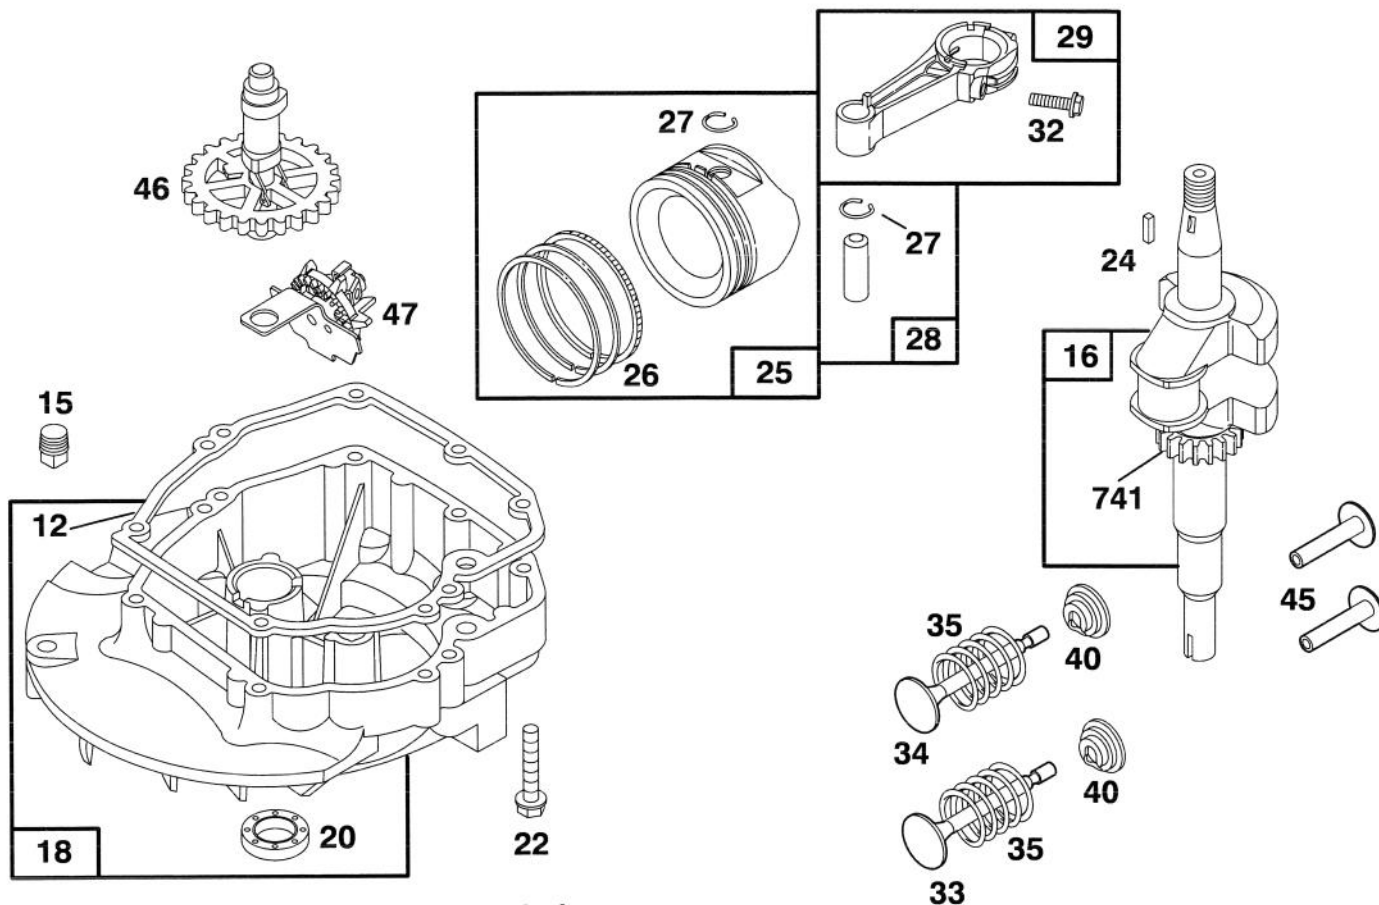


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket - Crankcase	1
15	94720	Plug - Oil Drain	1
16	494546	Crankshaft	
		Note: Order 94388 For Timing Gear Key.	
18	493279	Sump - Engine	1
★20	399781	Seal - Oil	1
22	94220	Screw - Hex. Head	
		Note: 94612 Screw - Hex. Head (One (1) Used in Hole Nearest Breather.)	
24	222698	Key - Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1

Ref. No.	Part No.	Description	No. Used
	493390	Ring Set (.030" O.S.)	1
27	26026	Lock - Piston Pin	1
28	298909	Pin - Piston (Standard)	1
	298908	Pin - Piston (.005" O.S.)	1
29	490566	Rod Assembly - Connecting	1
		Note: For Connecting Rod With .020" Undersize Crankpin Bearing - Order No. 490743.	
32	94699	Screw - Connecting Rod	1
33	262651	Valve - Exhaust	1
34	262652	Valve - Intake	1
35	262224	Spring - Valve	1
40	93312	Retainer - Valve Spring	1
45	262204	Tappet - Valve	2
46	492828	Gear - Cam	1
47	493737	Slinger - Oil	1
741	262598	Gear - Timing	1

 ★ Included in Gasket Set - Part No. 497316.

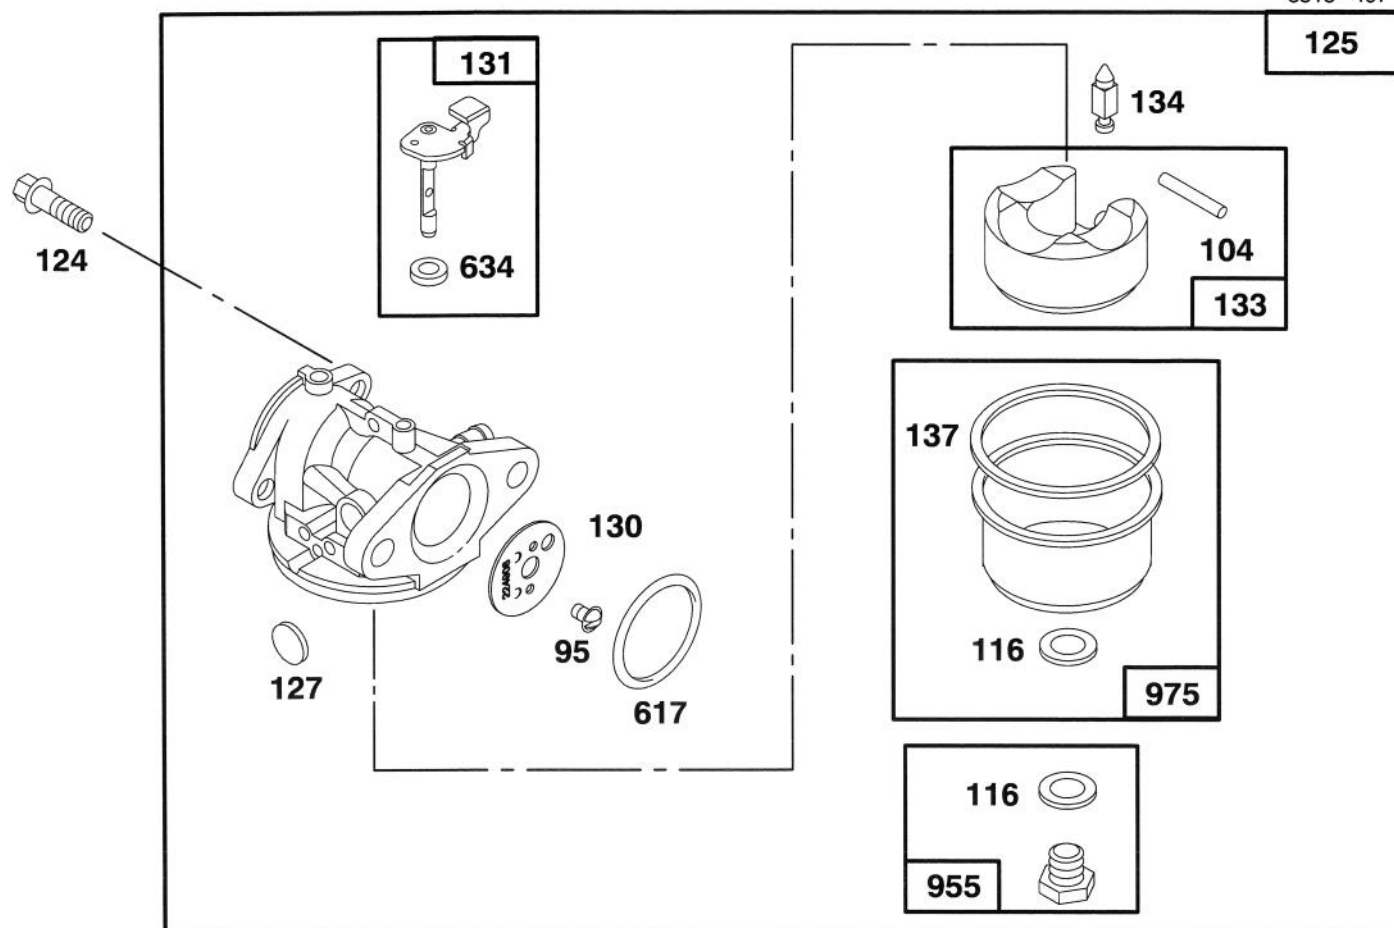

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw - Throttle Valve Mounting	2
●104	231371	Pin - Float Hinge	1
●◆116		Gasket - Sealing (Sold in Kit Only).	1
124	94525	Screw - Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug - Welch (Sold in Kit Only).	1
130	224908	Valve - Throttle	1
131	493267	Shaft - Throttle	1
133	398187	Float Assy. - Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve - Inlet (Includes Seat)	1
●◆137		Gasket - Bowl (Sold in Kit Only).	1
●◆617	270344	Seal - Fuel Intake Tube	1
●◆634		Washer - Shaft (Sold in Kit Only).	1
955	497315	Screw - Bowl Mtg. (Std.)	1
975	493640	Note: 496495 Screw - Bowl Mtg. (High Altitude) Bowl Assy. - Carburetor	1

● Included in Carburetor Kit - Part No. 493762.

 ◆ Included in Carburetor Gasket Set - Part No. 490937.

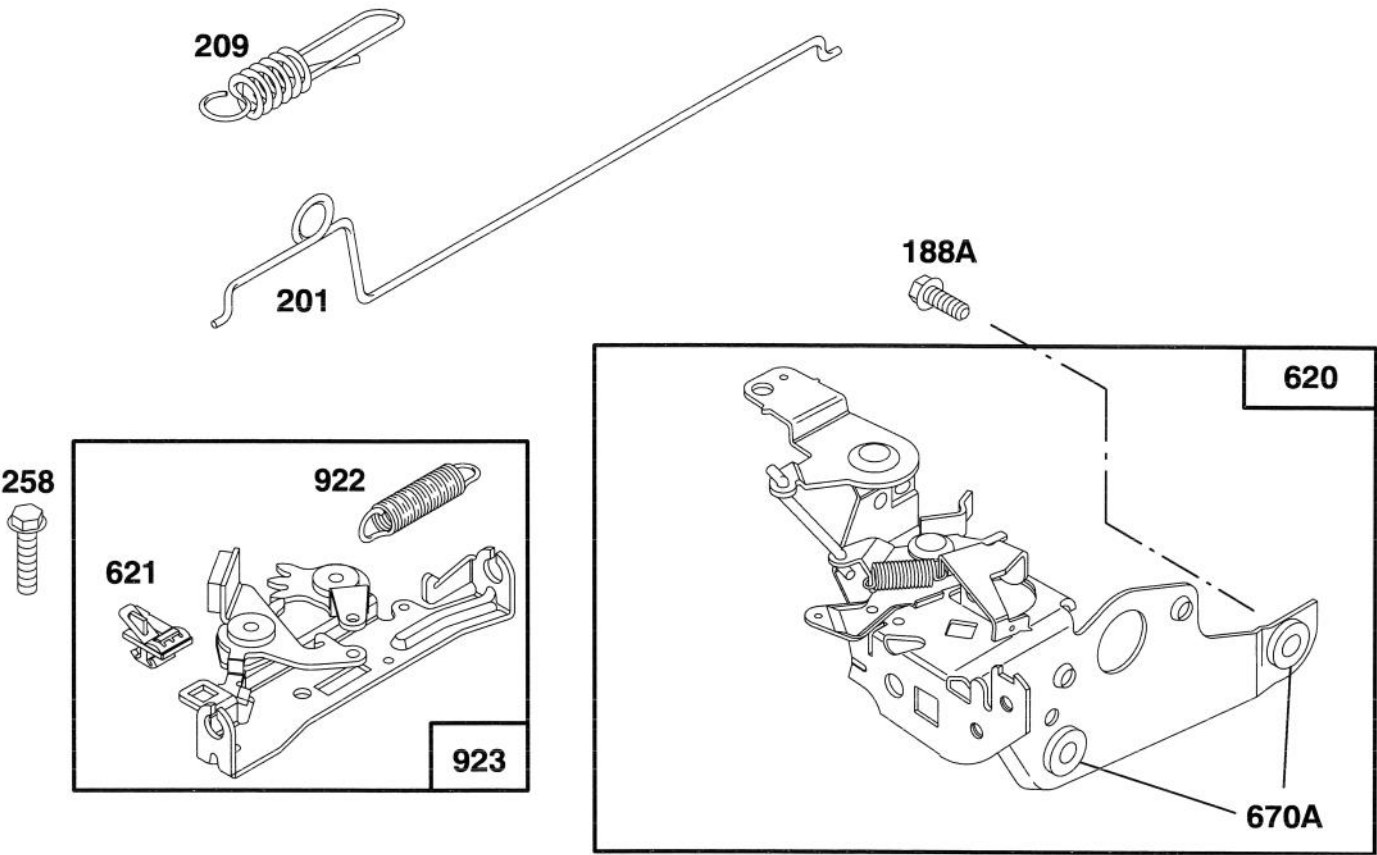


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw - Hex. Head	1
201	262579	Link - Governor	1
209	263043	Spring - Governor	1
258	94512	Screw - Hex. Head	1
620	497203	Bracket - Carburetor	1

Ref. No.	Part No.	Description	No. Used
621	396847	Switch - Stop	1
★670A	493823	Spacer - Bracket	1
922	262640	Spring - Brake	1
923	493442	Brake Assembly	1

 ★ Included in Gasket Set-Part No. 497316.

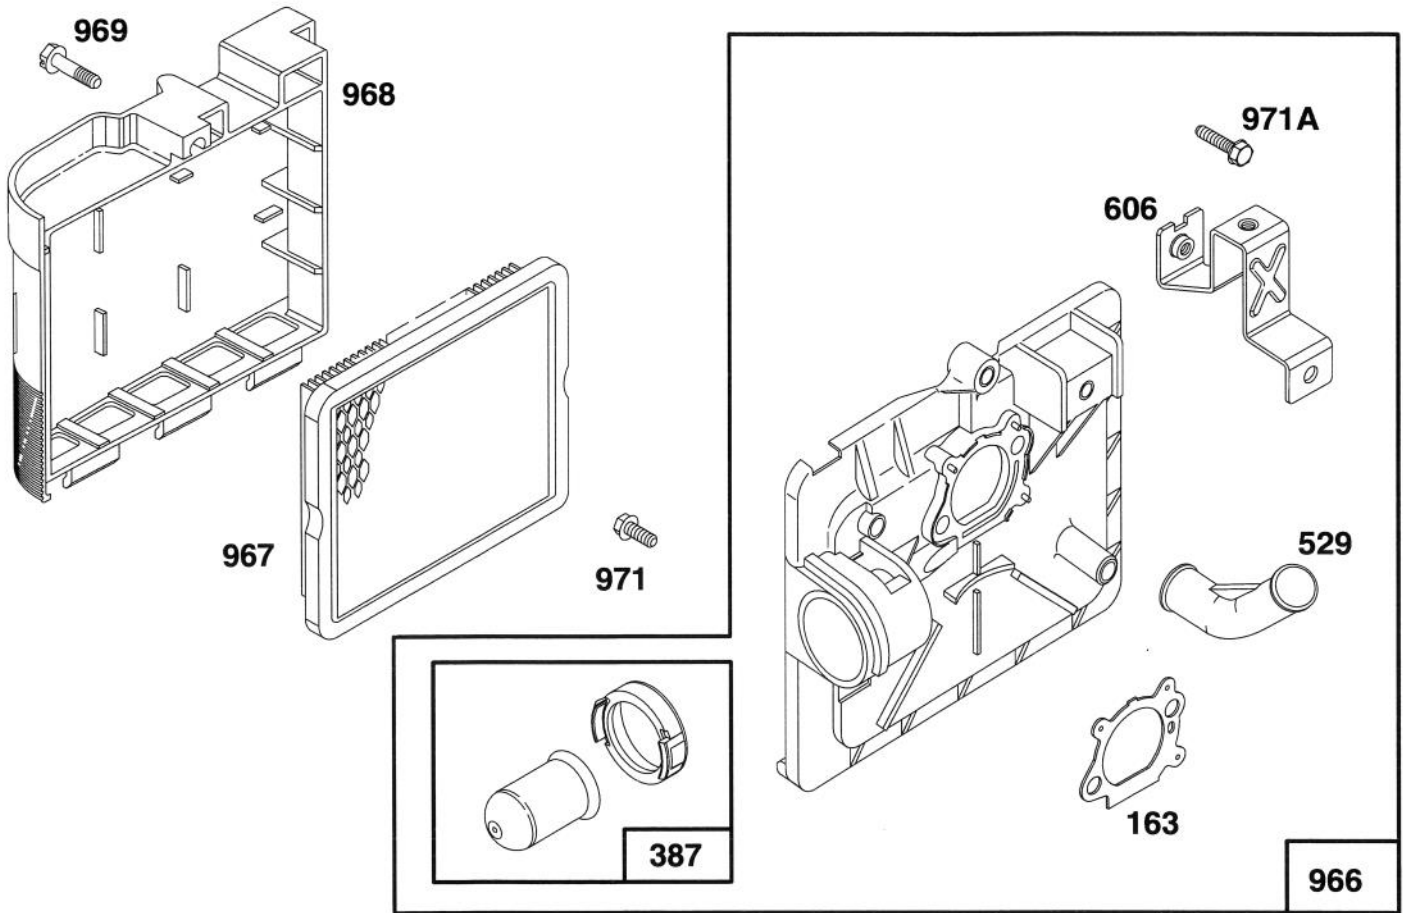


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
★163	272653	Gasket – Air Cleaner	1
387	496115	Primer – Carburetor	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
966	496116	Base – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1

 ★ Included in Gasket Set – Part No. 497316.

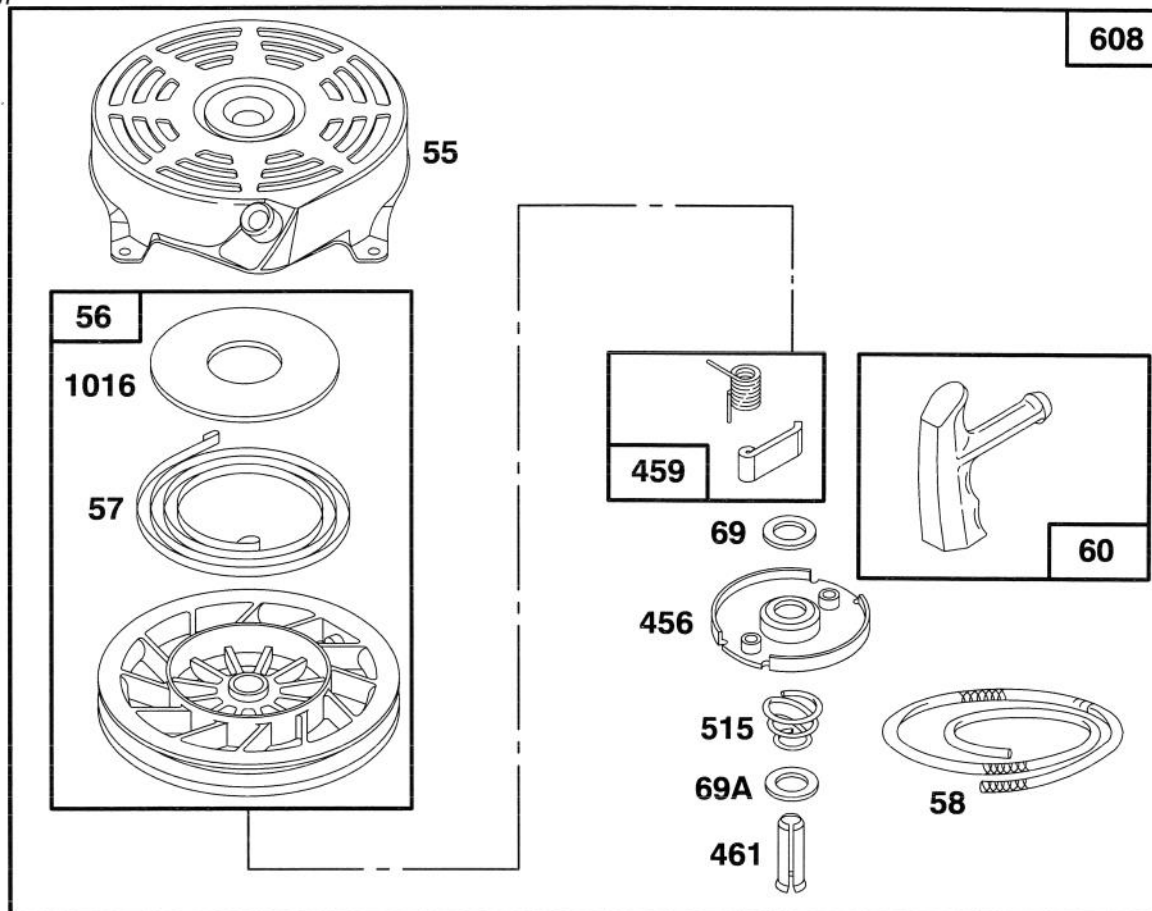


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1
56	493824	Pulley – Rewind Starter	1
57	262594	Spring – Rewind Starter	1
58	280399	Rope – Rewind Starter	1
60	393152	Handle – Rewind Starter	1
69	280973	Washer – Rewind Starter	1
69A	224322	Washer – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl – Starter	1
461	262626	Pin – Starter	1
515	262625	Spring – Torsion	1
608	493295	Starter Assy. – Rewind	
		Includes:	
		94128 Screw – Hex. Head	1
		92987 Nut – Hex.	1
1016	224278	Cover – Rewind Starter	1

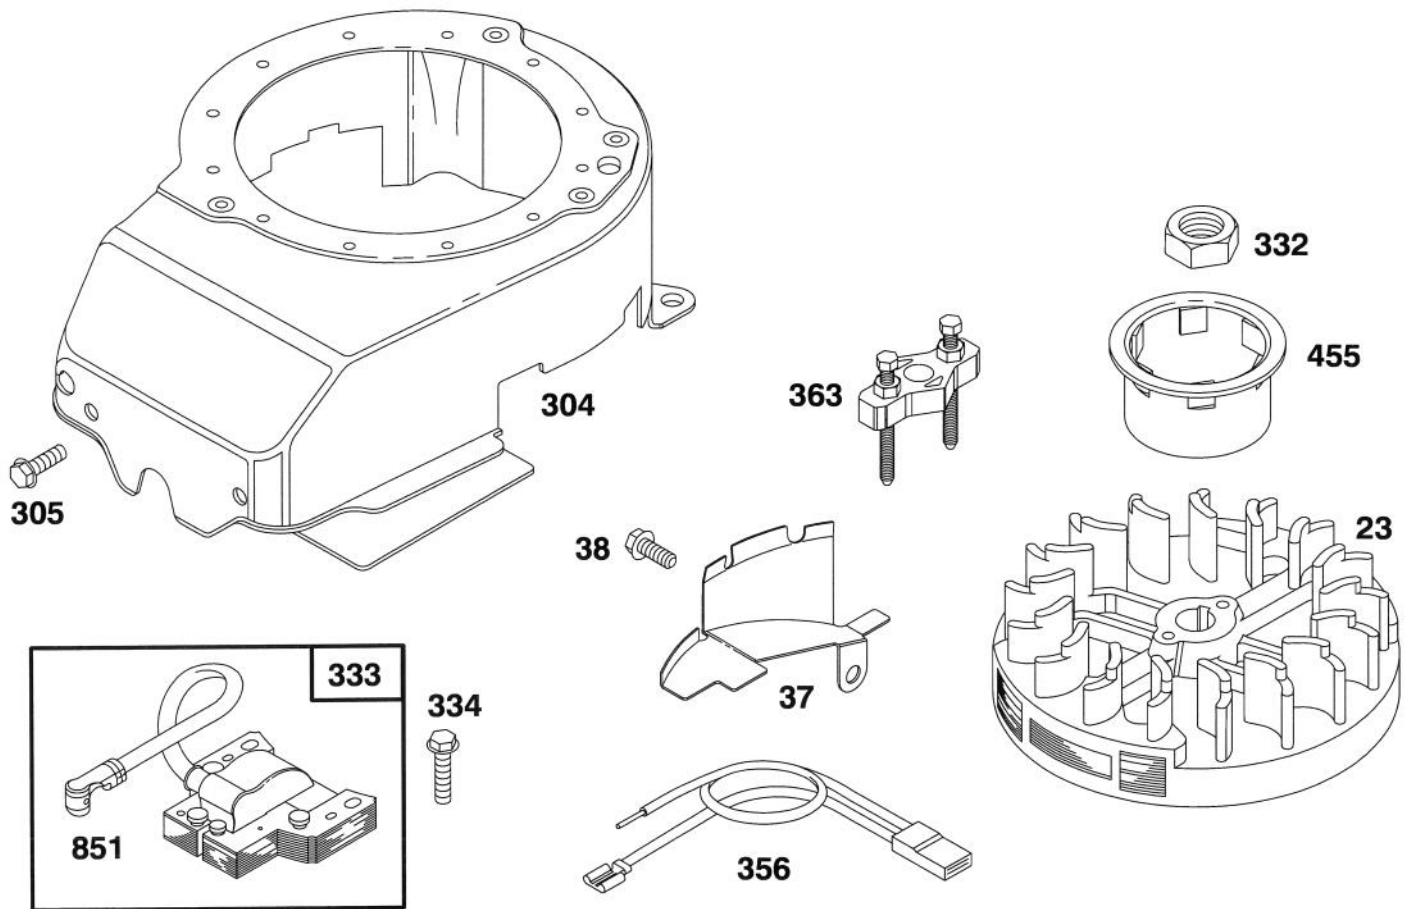 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
38	94608	Screw - Hex. Hd.	1
304	493293	Housing - Blower	1
305	94513	Screw - Sem	1
332	92284	Nut - Flywheel	1

Ref. No.	Part No.	Description	No. Used
333	802574	Armature - Magneto	1
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Puller - Flywheel	1
455	224250	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1

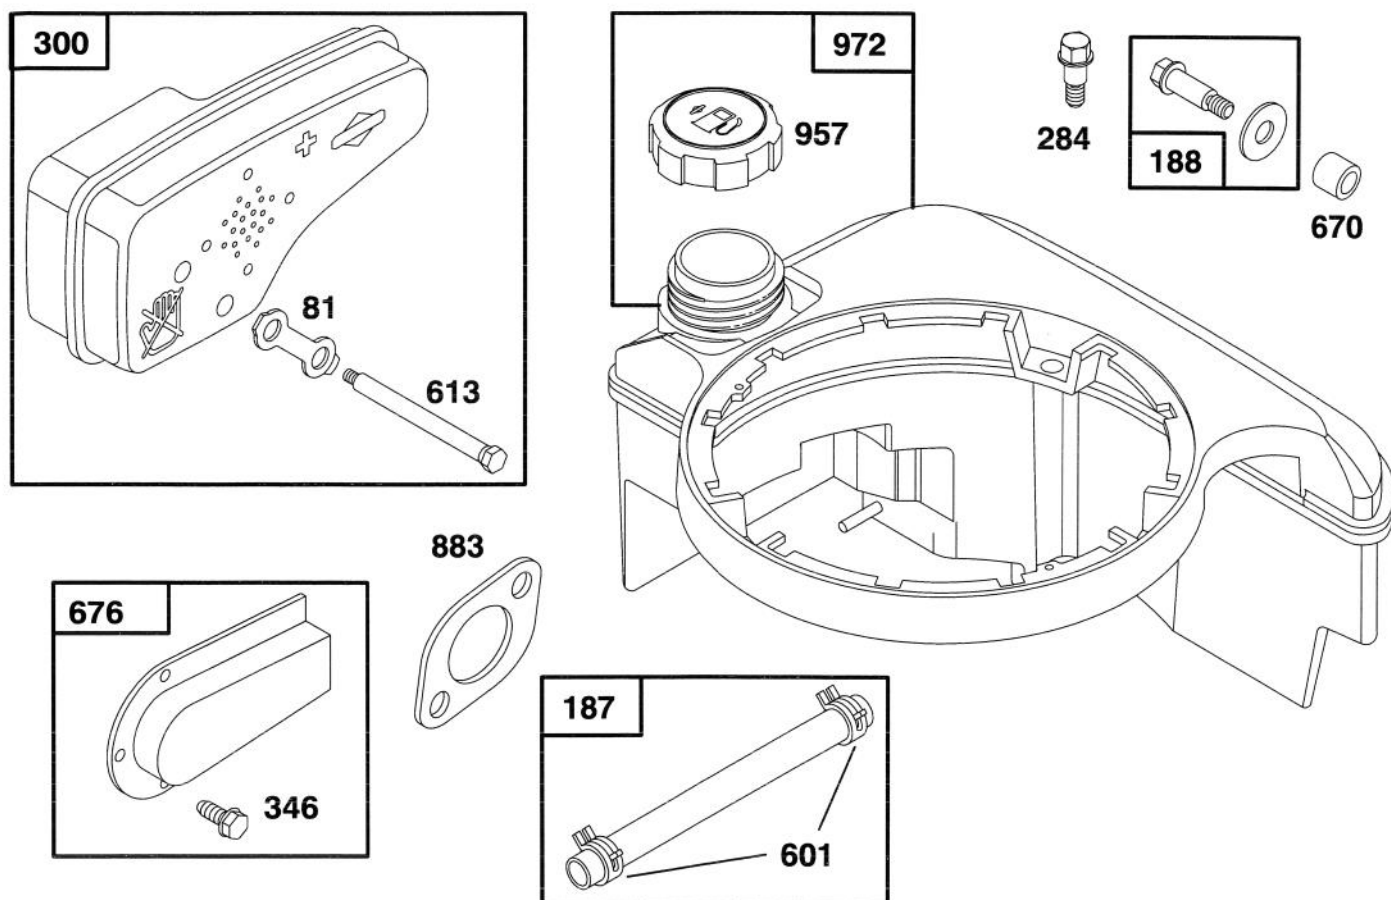 




Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Hex. Head	1
300	490547	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93807	Clamp – Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Muffler Mtg.	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Muffler	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

   ★ Included in Gasket Set – Part No. 497316.

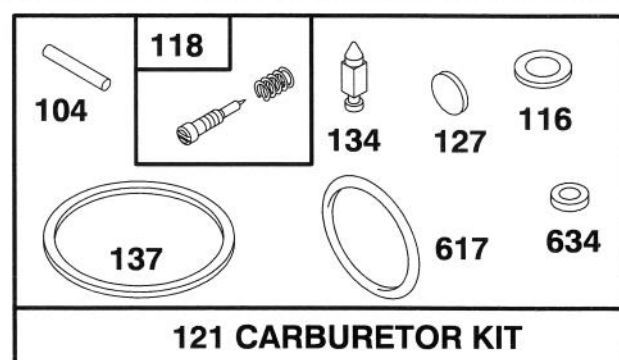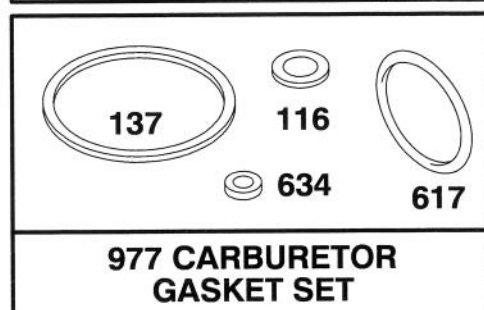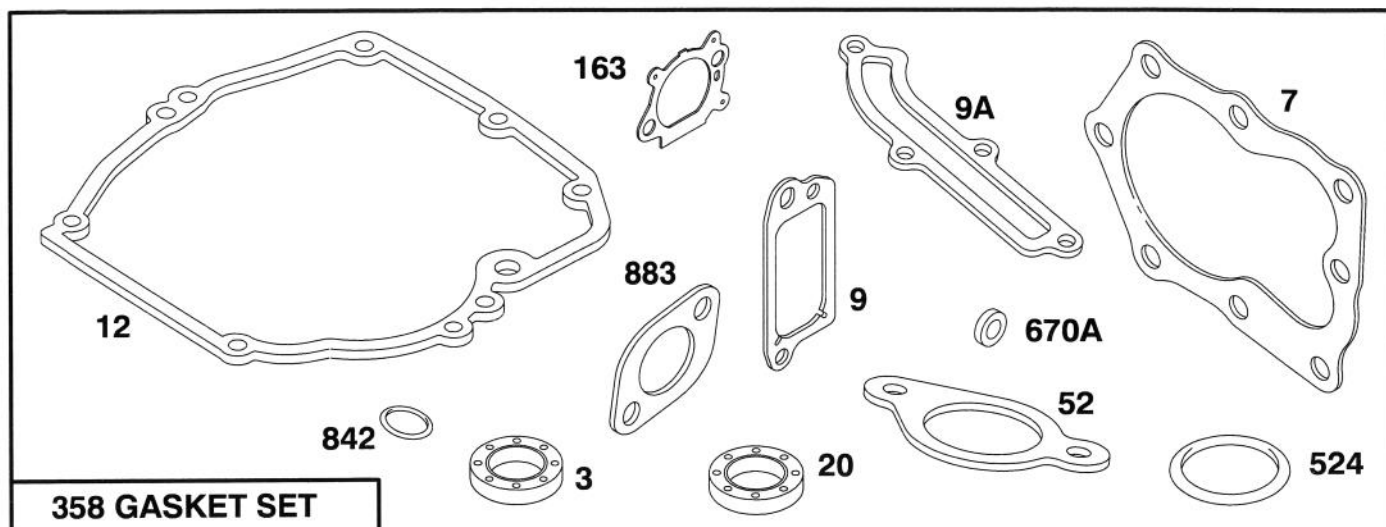

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12E802-0620-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only).	1
●118	493765	Valve – Needle	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1
●134	398188	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
★670A	493823	Spacer – Bracket (Includes 2)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Muffler	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit – Part No. 493762.

◆ Included in Carburetor Gasket Set – Part No. 490937.

★ Included in Gasket Set – Part No. 497316.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
19-4050	Knob	5 1 2	93-4083	Mount - Handle L.H.	5 * 1
26-0670	Bolt - Blade	3 6 1	93-4084	Clamp - Cable	5 18 2
27-6231	Bolt - Wheel	1 19 2	93-4085	Frame - Bag	6 2 1
40-1940	Washer	1 17 2	93-4086	Bag - Grass	6 3 1
46-6980	Support - Cable	5 16 1	93-4087	Grass Bag Remover	6 1 1
71-7740	Spring - Counterbalance	4 10 1	93-4094	Screw - Hinge, Cap	5 21 2
71-7860	Grip - Upper	5 5 1	93-4095	Screw	4 4 2
71-7870	Grip - Lower	1 4 1	93-4095	Screw - Tapping	1 3 5
71-7930	Trigger - H.O.C.	1 5 1	93-4097	Washer - Wheel	4 8 2
71-7980	Indicator - H.O.C.	4 14 1	93-4098	Nut - Lock	4 7 2
71-8450	Cover - Spring	4 11 1	93-4101	Blade - 43cm	3 3 1
82-8550	Shield - Muffler	2 7 1	93-4105	Decal	1 7 1
92-2270	Screw - Handle	5 14 1	93-4110	Baffle	1 13 1
92-2289	Plate - Logo Toro	2 12 1	93-4352	Decal - Shroud	2 1 1
93-0243	Shroud - Engine	2 4 1	93-7014	Washer - Pressure	3 4 1
93-1116	Cable - Brake	5 17 1	93-7015	Washer - Spring	3 5 1
93-1118	Control - Throttle	5 9 1	93-7016	Washer - Friction	3 2 2
93-3772	Guide - Rope	5 8 1	93-7017	Retainer - Blade	3 1 1
93-3781	Cover - Shield	1 11 1	93-7023	Bushing	4 9 4
93-3782	Cover - Belt	1 2 1	93-7024	Bushing	1 20 4
93-3793	Screw - Retainer	4 15 2	93-7025	Decal - Deck	1 1 1
93-3793	Screw - Retainer	1 21 2	93-8470	Screw - Clamp	2 10 1
93-3794	Bushing	1 10 1	93-8492	Wheel & Tire Assembly	4 6 2
93-4053	Housing - Deck	1 12 1	94-4364	Bail - Control	5 11 1
93-4055	Door - Discharge	1 9 1	94-4375	Handle	5 6 1
93-4056	Cap	5 22 2	2210-249	Clamp - Casing	2 11 1
93-4057	Spring	5 4 1	2210-316	Stop - Rope	2 3 1
93-4058	Screw	5 3 1	321-48	Screw - Handle	5 13 1
93-4060	Screw	5 20 1	321-52	Screw	5 7 1
93-4061	Rod - Trigger	4 1 1	3256-1	Washer - Flat	5 15 1
93-4062	Spring - Trigger Ret.	4 2 1	3284-5	Pin - Groove	1 6 1
93-4064	Retainer - Axle	4 16 2	3290-378	Tie - Cable	2 5 1
93-4064	Retainer - Axle	1 22 2	3296-6	Nut - Lock	1 16 2
93-4065	Rod - Link	4 13 1	3296-73	Nut - Lock	5 10 3
93-4066	Saddle - H.O.C.	4 3 1	32112-11	Nut - Push	1 14 1
93-4079	Axle - Rear	4 5 1	32144-73	Screw - Hex Washer Hd.	2 6 3
93-4080	Axle - Front	1 15 1	32144-97	Screw	5 19 2
93-4081	Wheel & Tire Assembly 7	1 18 2	32144-102	Screw - Engine	2 8 3
93-4082	Mount - Handle R.H.	5 2 1	32144-121	Screw - Mounting	2 2 2