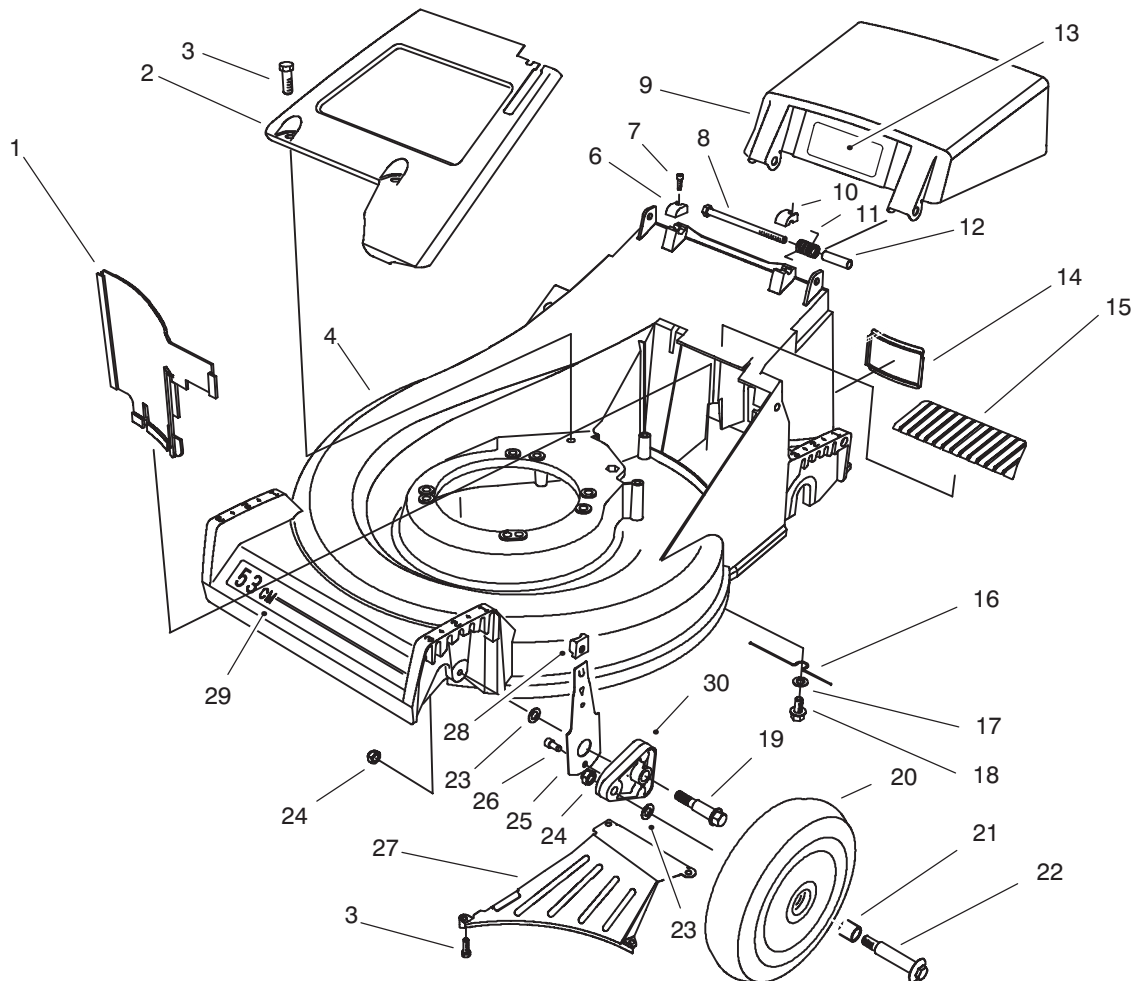


TORO®

MODEL NO. 26632B-6900001 & UP


**PARTS
CATALOG****53cm REAR BAGGING MOWER**

C-2215

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Cap Hex. Hd.	6
4	16-1769	Housing - 53cm (Incl. Ref. #29)	1
6	71-7910	Cap - Hinge Bolt R.H.	1
7	65-5210	Screw - Thread Forming	2
8	322-29	Screw - Hex Hd. Cap	2
9	71-9800	Door - Discharge	1
10	71-7900	Cap - Hinge Bolt L.H.	1
11	71-9840	Spring - Door	2
12	71-8580	Spacer - Door	2
13	93-4105	Decal - Danger	1
14	71-9650	Access - Cover	1
15	71-9920	Cover - Top	1


Ref. No.	Part No.	Description	No. Used
16	66-0620	Retainer - Belt	1
17	3256-24	Washer - Flat	1
18	32144-15	Screw - Hex Flange Hd.	1
19	66-0560	Screw - Shoulder	2
20	14-9949	Wheel & Tire Assembly (Incl. Ref. #21)	2
21	27-6250	Bushing - Wheel	2
22	27-6231	Bolt - Wheel	2
23	40-1940	Washer - Wheel Bolt	4
24	3296-6	Nut - Lock	4
25	66-0540	Arm - Spring Front	2
26	65-5220	Screw - Cap Socket Hd.	2
27	71-9640	Ramp - Discharge	1
28	25-7740	Knob - Arm	2

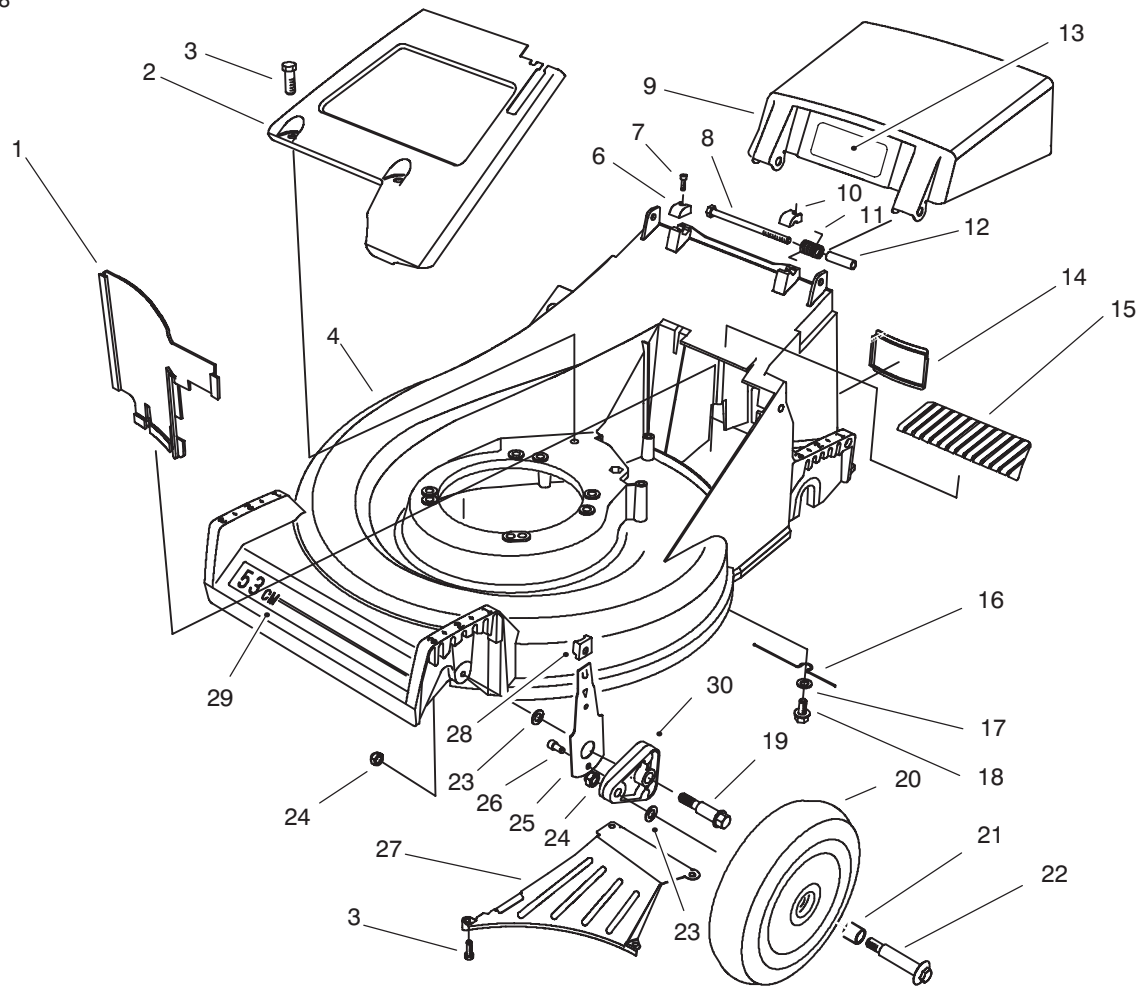

C-2215

HOUSING ASSEMBLY (Continued)


Ref. No.	Part No.	Description	No. Used
29	71-9870	Decal - Deck 53cm	1
30	66-0580	Arm - Pivot	2

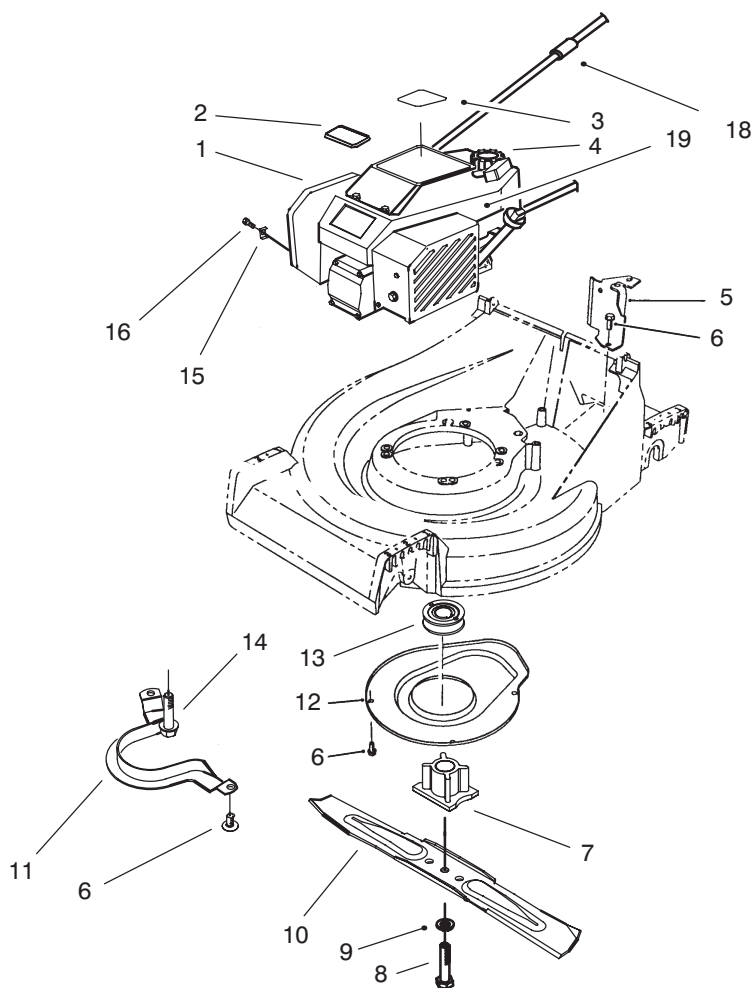

C-2216A

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-1604	Engine	1	10	62-7700	Blade - 21"	1
2	92-2289	Plate - TORO Logo	1	11	66-0570	Guide - Belt	1
3	93-4355	Decal - Recoil	1	12	65-5200	Cover	1
4	93-7198	Gas Cap Assembly	1	13	62-7550	Pulley - Engine	1
5	66-0030	Bracket - Cable Support	1	14	32144-102	Screw - Thread Forming	3
6	32144-70	Screw - Hex Hd. Cap	7	15	2210-249	Clamp - Throttle	1
7	62-7540	Retainer - Blade	1	16	86-7990	Screw - Clamp	1
8	26-0670	Bolt - Blade	1	18	2210-316	Stop - Rope	1
9	3253-22	Washer - Blade	1	19	77-9550	Cover - Brake	1

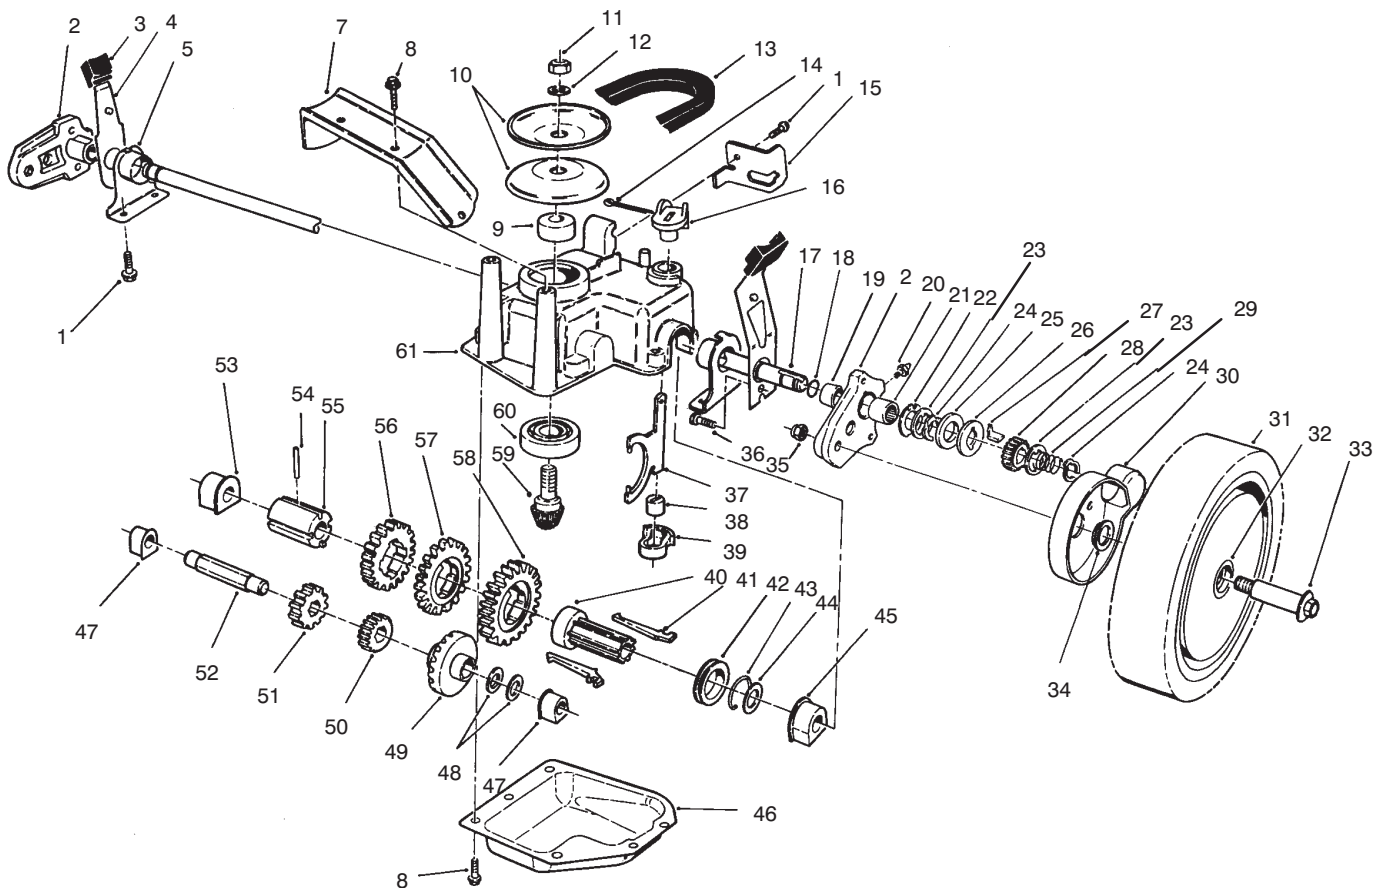


C-1555

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	36-8070	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - "O"Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	14-9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1671	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Socket Hd. Cap	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

*Not Illustrated

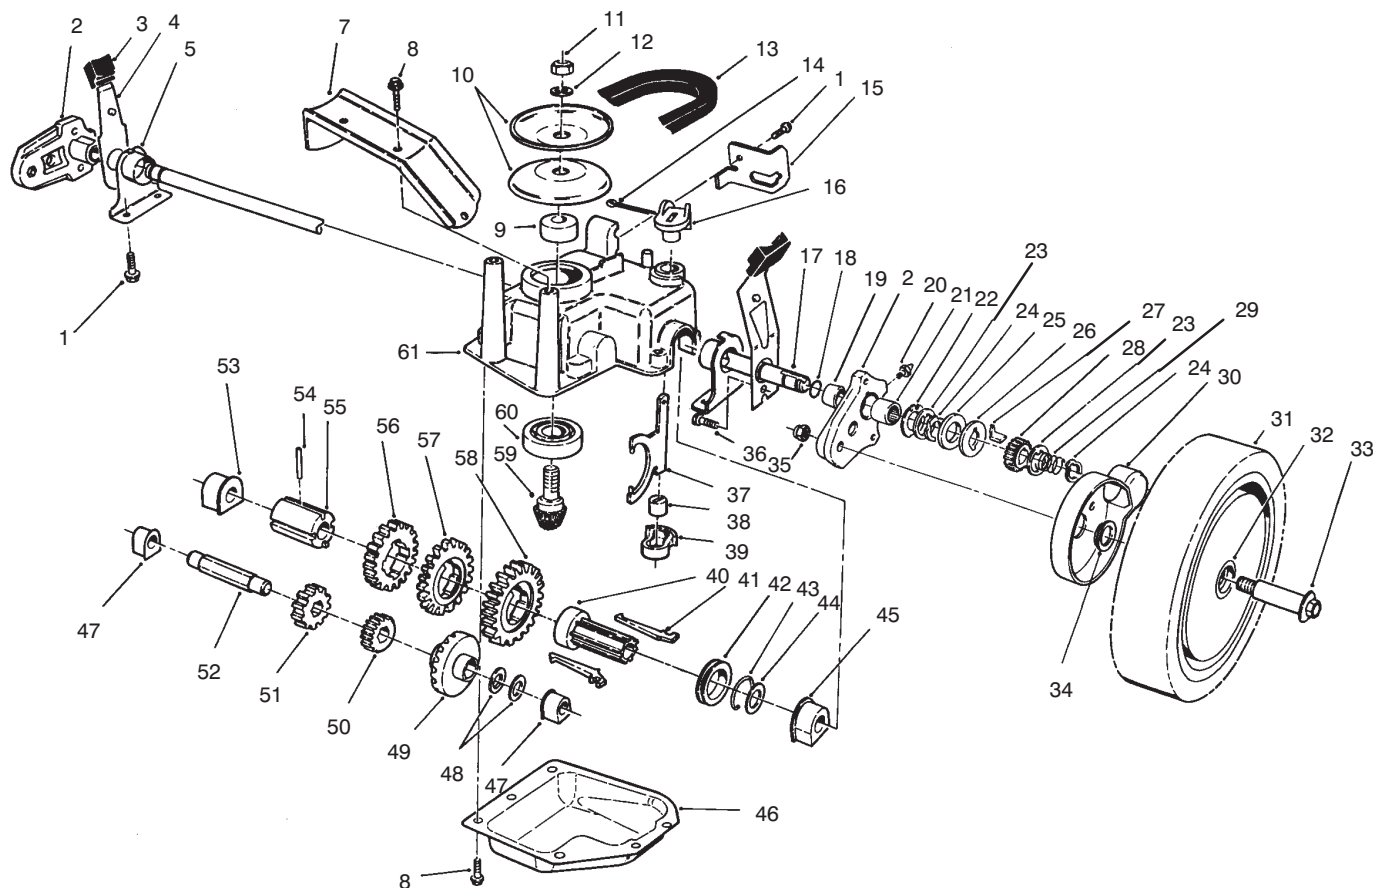


C-1555

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing – Output Shaft	1	54	32121-120	Pin – Coil	1
46	60-8730	Cover – Gear Case	1	55	60-8790	Sleeve – Gear	1
47	60-8750	Bushing – Intrmdt. Shaft	2	56	55-3810	Gear – 39T (3rd Gear)	1
48	36-4791	Washer – Thrust	2	57	55-3790	Gear – 44T (2nd Gear)	1
49	55-3760	Gear – Pinion 15T	1	58	55-3770	Gear – 49T (1st Gear)	1
50	55-3780	Gear – Pinion 20T	1	59	60-8890	Pinion – Bevel	1
51	55-3800	Gear – Pinion 25T	1	60	38-7820	Bearing – Ball	1
52	60-8800	Shaft – Intermediate	1	61	60-8710	Case – Gear (Upper)	1
53	60-8850	Bushing – Output Shaft	1	*	62-6673	Gear Case Assy. Complete	1

*Not Illustrated

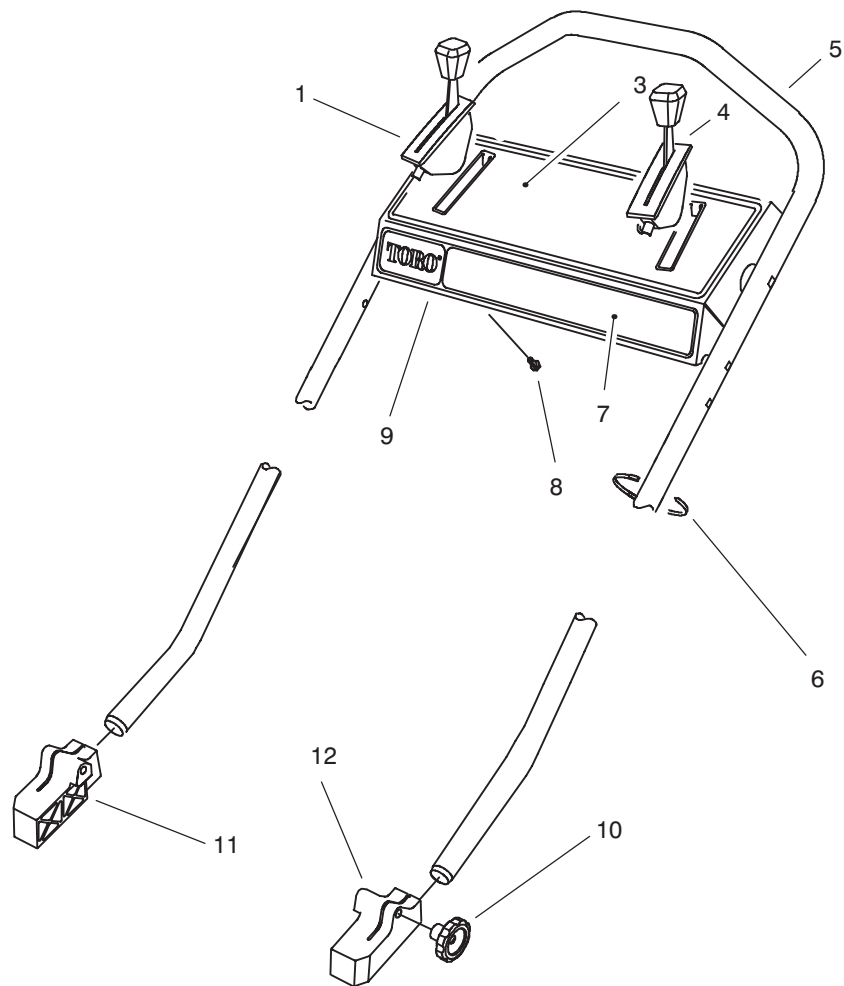


C-1569A

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6632	Control - Ground Speed	1
3	93-6662	Decal - Instruction	1
4	93-6631	Control - Throttle	1
5	94-4910	Handle	1
6	3290-378	Tie - Cable	5
7	71-9873	Decal - Panel	1

Ref. No.	Part No.	Description	No. Used
8	92-9665	Screw - Self Tapping	5
9	16-8729	Control Panel Assembly (Incl. Ref. #3, & 7)	1
10	19-4050	Knob - Handle Release	2
11	71-8100	Mount - Handle R.H.	1
12	71-8090	Mount - Handle L.H.	1

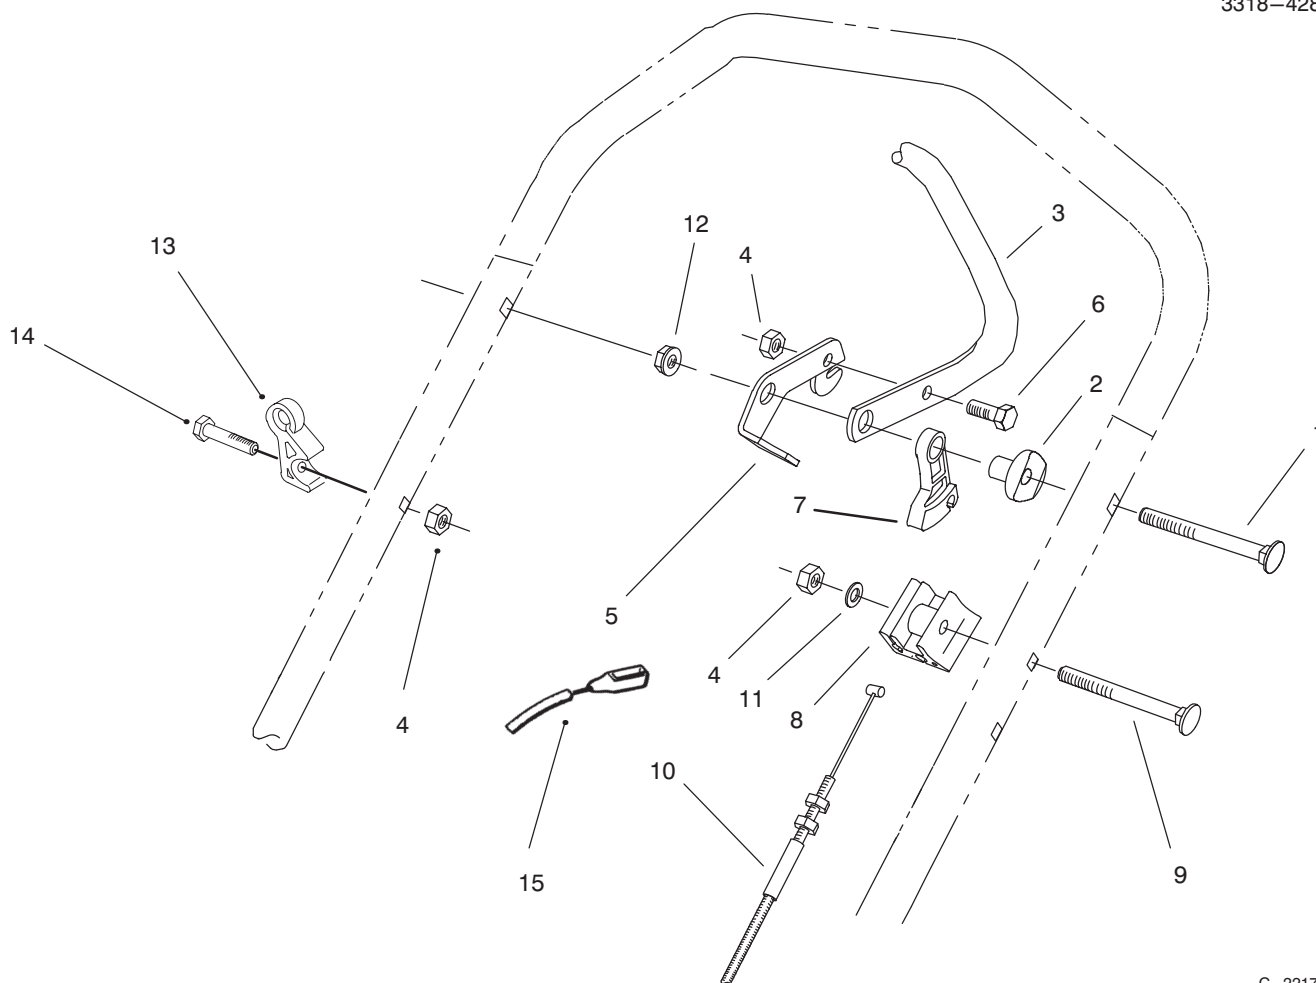


C-2217

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw — Handle	2
2	66-0330	Support — Spacer	2
3	52-7430	Control Bar Assembly	1
4	3296-42	Nut — Lock	3
5	66-5350	Lever — Control	1
6	321-3	Screw — Cap Hex. Hd.	1
7	46-5520	Lever — Traction	1
8	71-0960	Support — Cable	1

Ref. No.	Part No.	Description	No. Used
9	46-6432	Screw — Handle	1
10	93-6634	Cable — Traction	1
11	3256-22	Washer — Flat	1
12	3296-58	Nut — Lock	2
13	93-3772	Guide — Rope	1
14	321-52	Screw — Hex Hd. Cap	1
15	93-6628	Cable — Brake	1

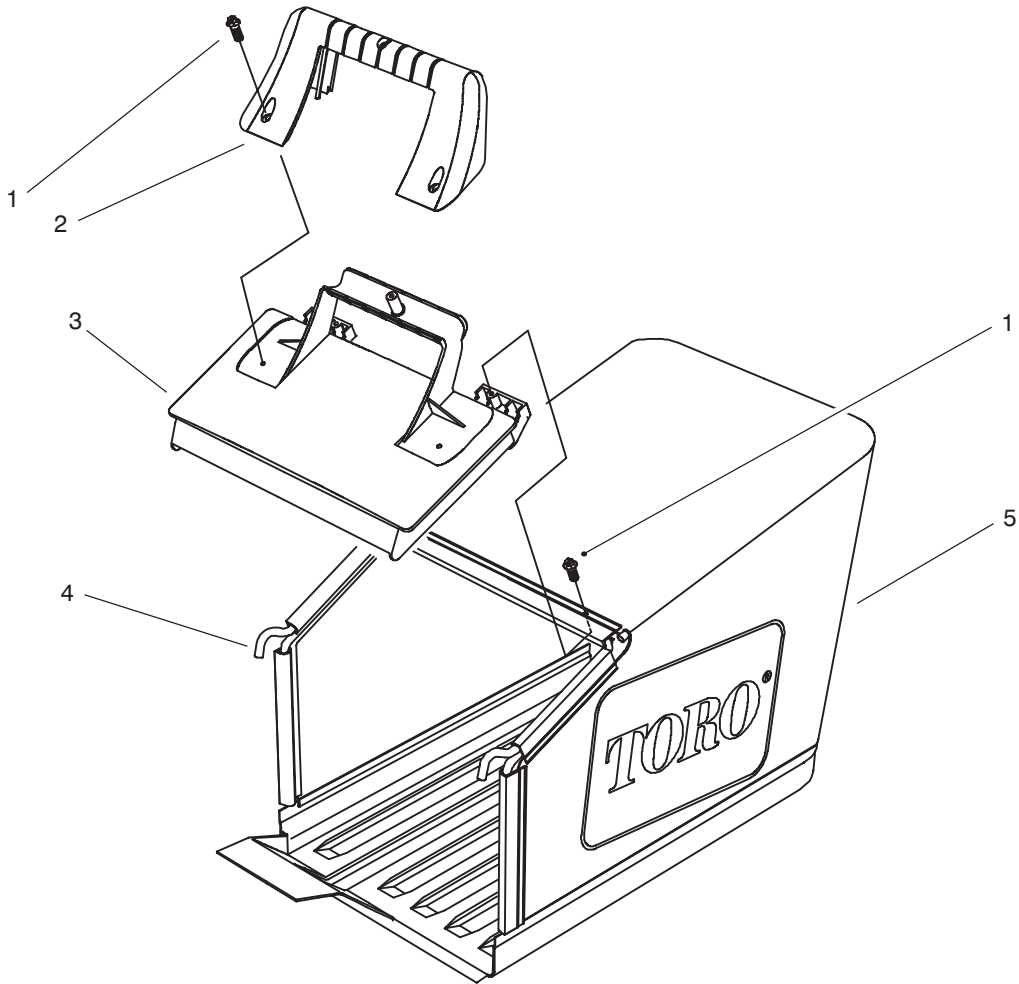


C-1570

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Index Hex Washer Head	5
2	71-9480	Handle - Door	1

Ref. No.	Part No.	Description	No. Used
3	71-9470	Door - Bag	1
4	71-9930	Frame - Grass Bag	1
5	71-9680	Bag - Grass 53cm	1

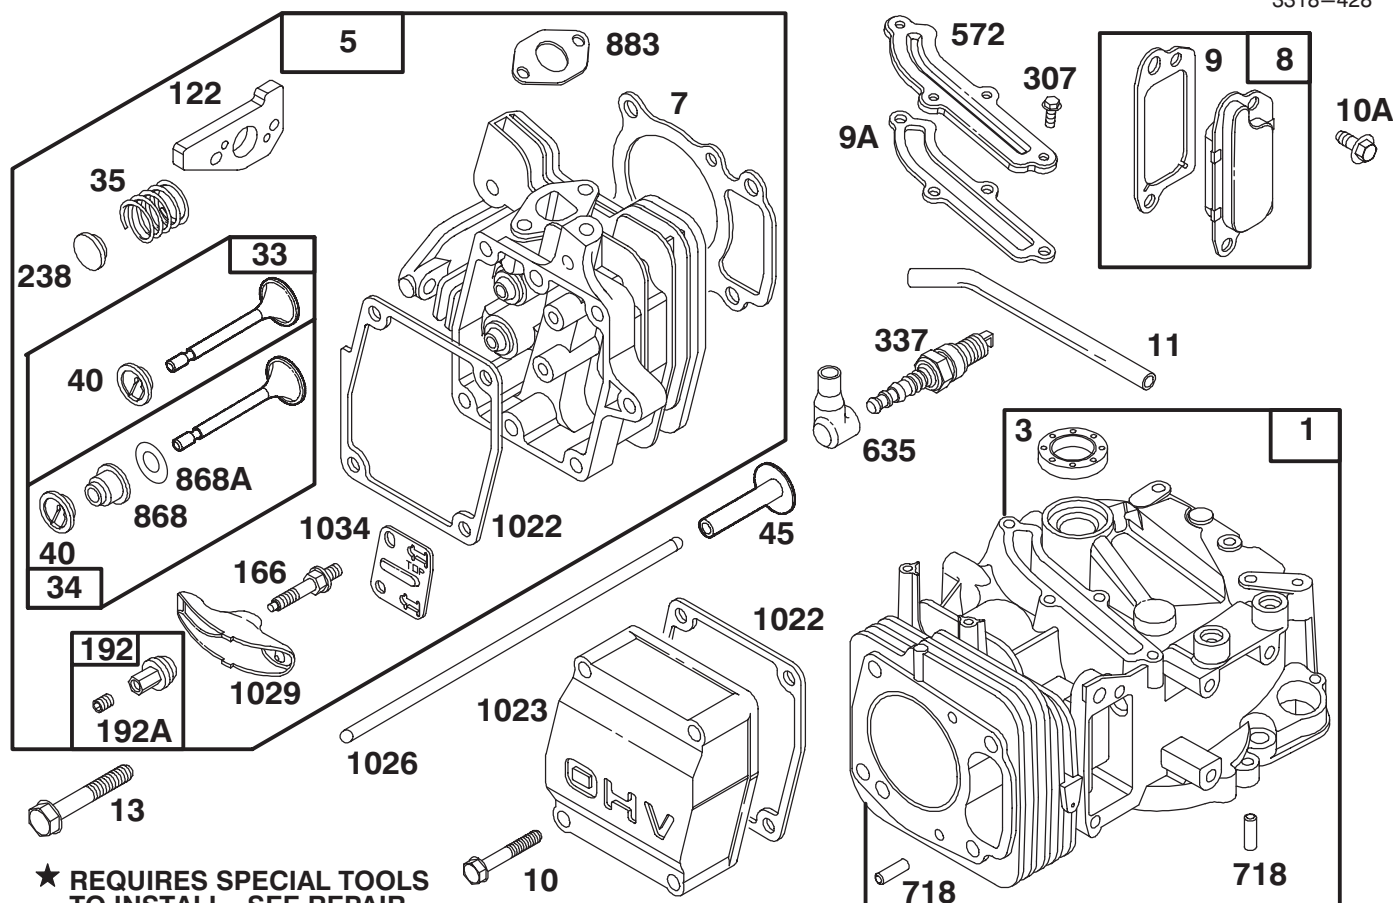

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy.	1
★3	77-9060	Seal - Oil	1
5	77-7730	Head - Cylinder	1
★7	77-7740	Gasket - Cylinder Head	1
8	77-9300	Breather Assy.	1
★9	77-9250	Gasket - Breather	1
★9A	77-7410	Gasket - Breather	1
10	77-7360	Screw - Hex. Head (Valve Cover)	1
10A	77-9200	Screw - Hex. Head	1
11	77-9410	Tube - Breather	1
13	77-7630	Screw - Cylinder Head	1
33	77-7860	Valve - Exhaust	1
34	77-7880	Valve - Intake	1
35	77-7810	Spring - Valve	1
40	77-7870	Retainer - Spring	1
45	77-7610	Tappet - Valve	1
●122	77-7820	Adapter Assy.	1
166	77-7780	Stud - Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192	77-7910	Ball & Screw – Rocker Arm	1
192A	77-9310	Screw – Set	1
238	77-7800	Cap – Valve	1
307	77-7420	Screw – Breather Cover Mtg.	1
337	77-7330	Plug – Spark	1
572	77-7400	Cover – Breather	1
635	77-7340	Elbow – Spark Plug	1
718	77-7600	Pin – Cylinder	1
*868	77-7890	Seal Assy. – Valve	1
*868A	77-7900	Gasket – Valve	1
*883	77-7760	Gasket – Exhaust	1
*1022	77-7320	Gasket – Rocker Cover	1
1023	77-9320	Cover – Valve	1
1026	77-7620	Rod – Push	1
1029	77-7790	Arm – Rocker	1
1034	77-7770	Guide – Push Rod	1

★ Included in Gasket Set—Part No. 77-8900

- Included in Carburetor Overhaul Kit—Part No. 77-9580

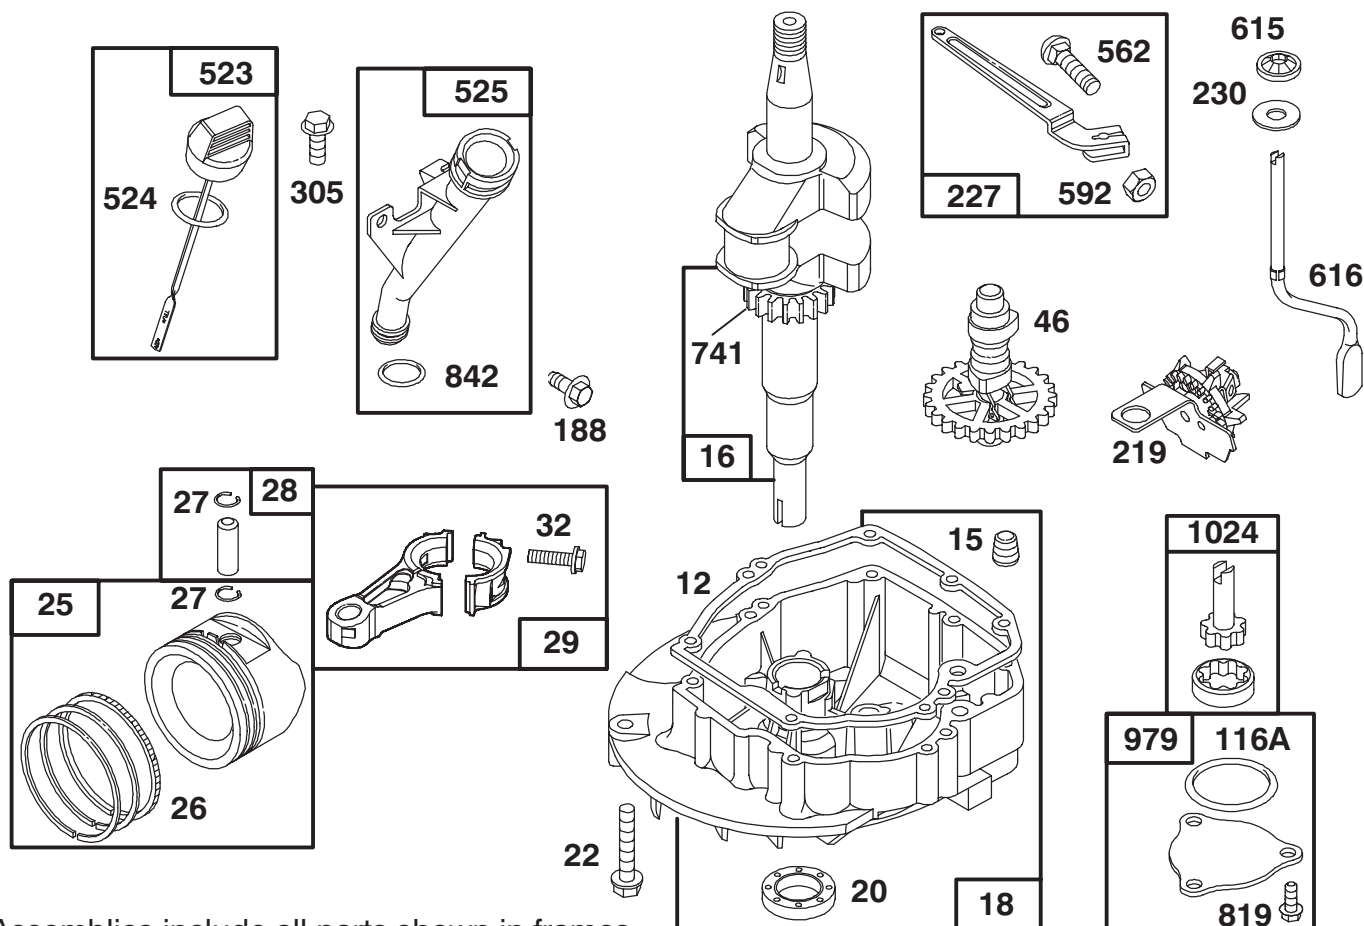


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★12	77-7550	Gasket – Engine Base	1
15	77-9240	Plug – Pipe	1
16	77-9330	Crankshaft	1
		Note: Order Part No. 77-7540 For Timing Gear Key.	
18	77-7560	Base – Engine	1
★20	77-7570	Seal – Oil	1
22	77-9070	Screw – Engine Base	1
25	77-7690	Piston Assy. (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock – Piston Pin	1
28	77-9340	Pin Assy. – Piston	1
29	77-7670	Rod – Connecting	1
32	77-9350	Screw – Connecting Rod	1
46	77-7490	Gear – Cam	1
★116A	77-7660	O-Ring	1
188	77-9360	Screw – Hex. Head	1

Ref. No.	Part No.	Description	No. Used
219	77-7500	Gear – Governor	1
227	77-7370	Lever Assy. – Governor	1
230	77-7470	Washer	1
305	77-8310	Screw – Hex. Head	1
523	77-7260	Dipstick – Oil	1
★524	77-7270	Seal – O-Ring	1
525	77-7280	Tube – Oil Filler	1
562	77-7380	Bolt – Governor Lever	1
592	77-7390	Nut – Hex.	1
615	77-7480	Pushnut	1
616	77-7460	Crank – Governor	1
741	77-7530	Gear – Timing	1
819	77-7450	Screw – Cap	1
★842	77-7300	Seal – O-Ring	1
979	77-7650	Cover – Oil Pump	1
1024	77-7640	Pump – Oil	1

★ Included in Gasket Set—Part No. 77-8900

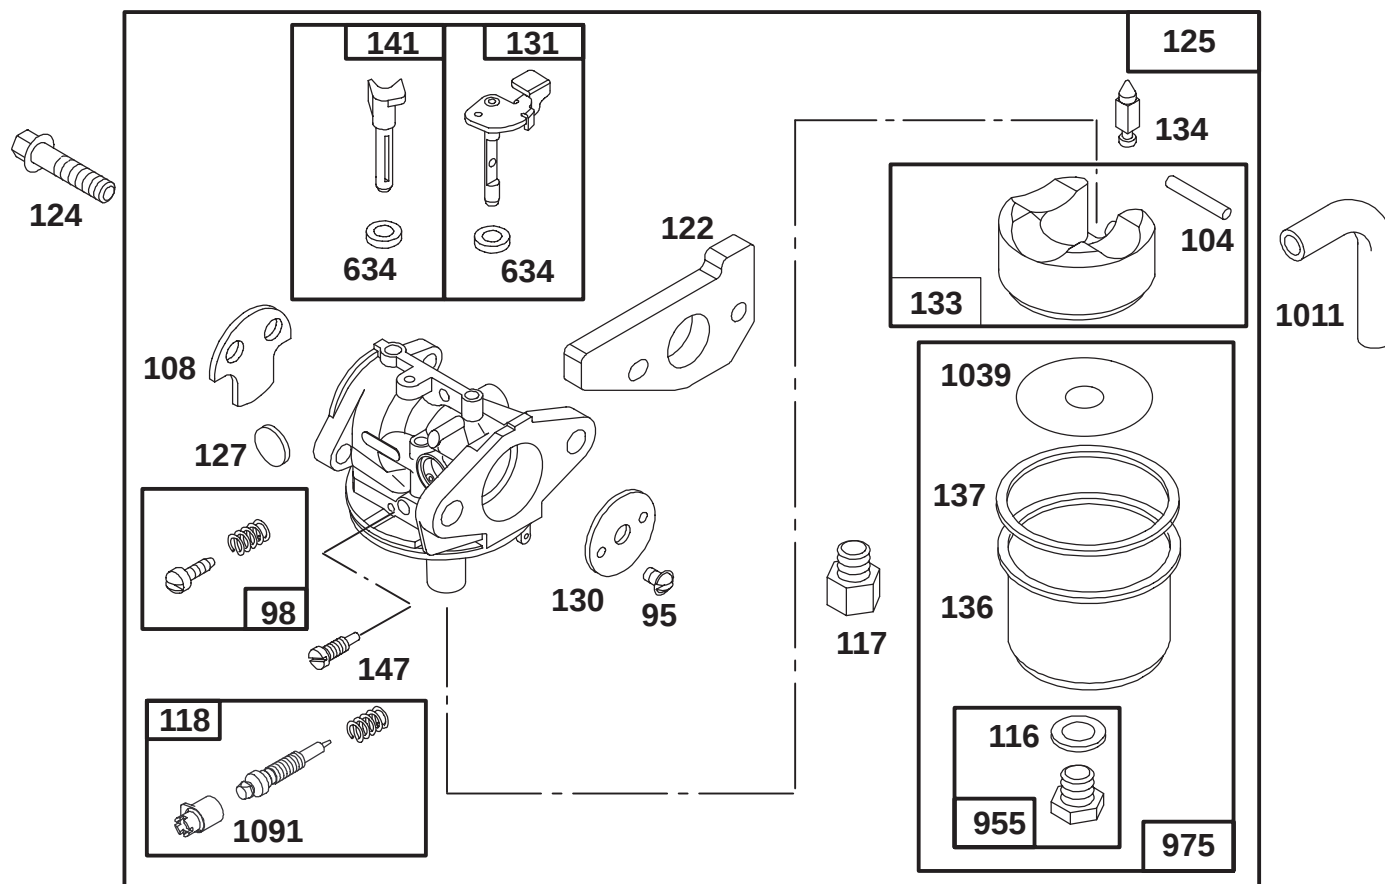

Assemblies include all parts shown in frames.


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw – Valve Mtg.	1
98	77-8240	Screw – Idle Adj.	1
●104	77-8180	Pin – Float Hinge	1
108	77-9600	Valve – Choke	1
◆116	77-8210	Sealing – Gasket	1
●117	77-9610	Jet – Main	1
		Note: For High Altitude Jet Order Part No. 94-1650	1
●118	77-9620	Valve & Spring – Needle	1
●122	77-7820	Adapter Assy.	1
124	77-7970	Screw – Hex. Head (carb. mtg.)	1
125	77-9630	Carburetor Assy.	1
●127	77-8100	Plug – Welch	1
130	77-8080	Valve – Throttle	1
131	77-8160	Shaft – Throttle	1

Ref. No.	Part No.	Description	No. Used
133	77-8170	Float – Carburetor	1
●134	77-8110	Valve – Inlet (Includes Seat)	1
136	77-7240	Bowl – Fuel	1
◆137	77-8200	Gasket – Float Bowl	1
141	77-8130	Shaft – Choke	1
147	77-9640	Adapter – Jet	1
		Note: For High Altitude Jet Order Part No. 77-9000	1
◆634	77-8150	Washer – Seal	1
955	77-8220	Screw – Hex. Head	1
975	77-8190	Bowl Assy. – Carburetor	1
1011	77-8040	Tube – Vent	1
●1039	77-7250	Limiter – Float	1
●1091	77-9650	Cap – Limiter	1

● Included in Carb. Overhaul Kit Part No. 77-9580

◆ Included in Carb. Gasket Set Part No. 77-8930

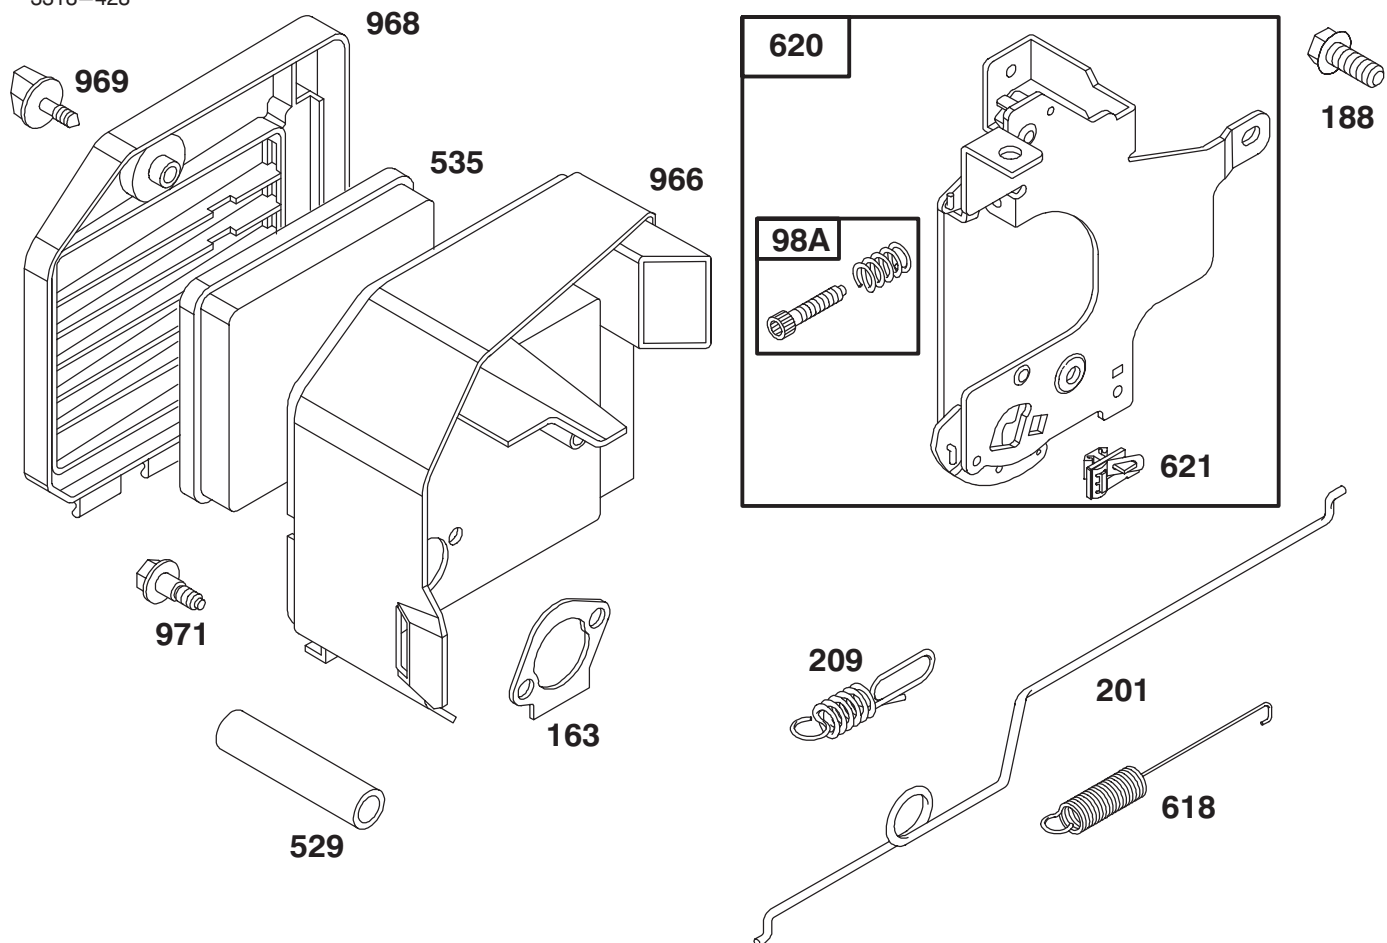


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Assy. — Speed Adj.	1
★163	77-7960	Gasket — Air Cleaner	1
188	77-9360	Screw — Hex. Head	1
201	77-7980	Link — Governor	1
209	77-7990	Spring — Governor	1
529	77-9470	Tube — Breather	1
535	77-7950	Element — Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring — Choke	1
620	77-8000	Bracket — Carburetor	1
621	77-8010	Switch — Stop	1
966	77-7940	Base — Air Cleaner	1
968	77-7040	Cover — Air Cleaner	1
969	77-7920	Screw — Air Cleaner	1
971	77-7930	Screw — Air Cleaner	1

★ Included in Gasket Set—Part No. 77-8900

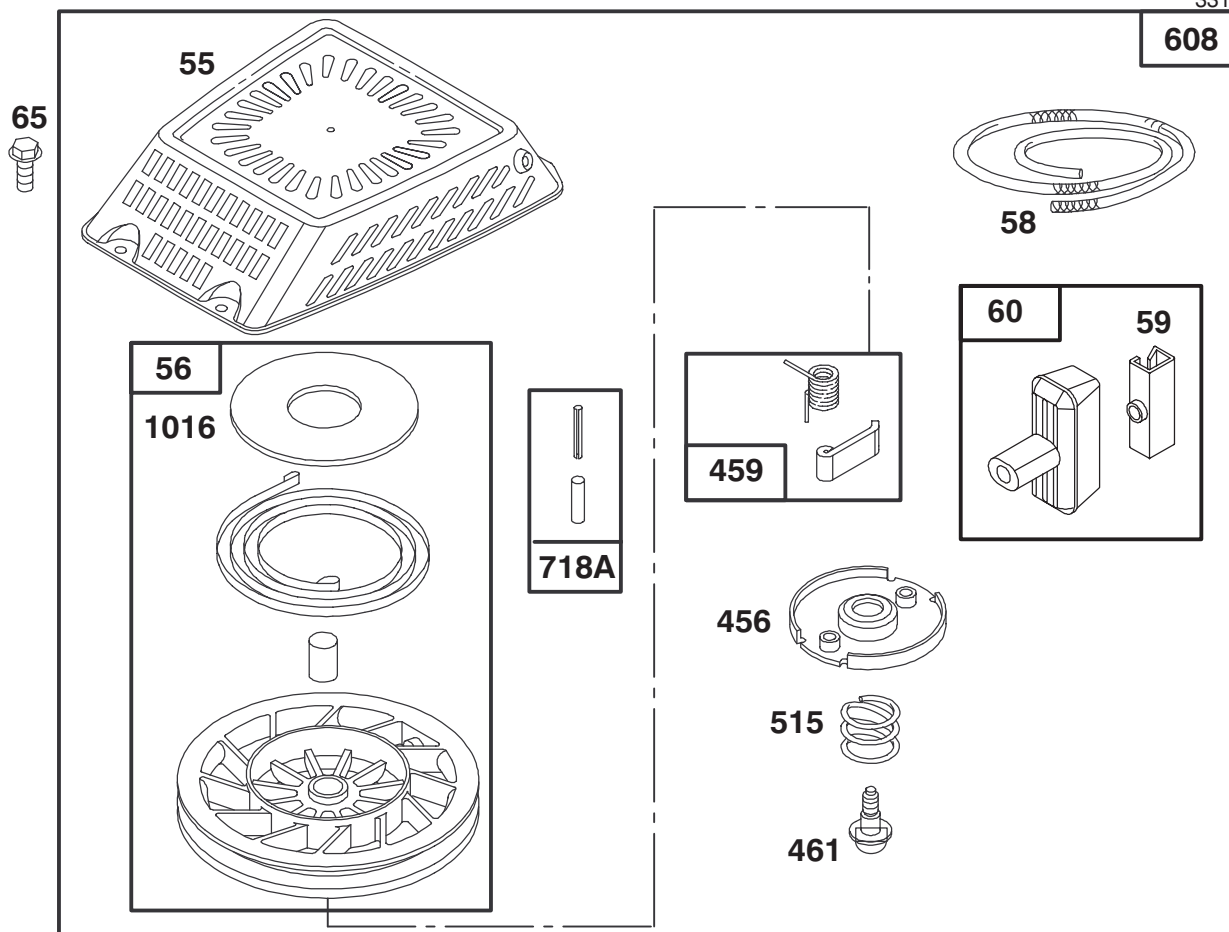


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	77-8890	Housing – Rewind Starter	1
56	77-9270	Pulley – Rewind Starter	1
58	77-8480	Rope – Starter (Cut To Suit)	1
59	77-7210	Insert – Rewind Handle	1
60	77-8520	Handle – Rewind Starter	1
65	77-8300	Screw – Hex. Head	1
456	77-8470	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	77-8530	Pawl – Starter	1
461	77-8490	Screw – Rewind Starter	1
515	77-8500	Spring – Torsion	1
608	77-8840	Starter Assy. – Rewind	1
718A	77-8550	Pin – Spring	1
1016	77-8570	Cover – Spring	1
	77-9020	Short Block	1

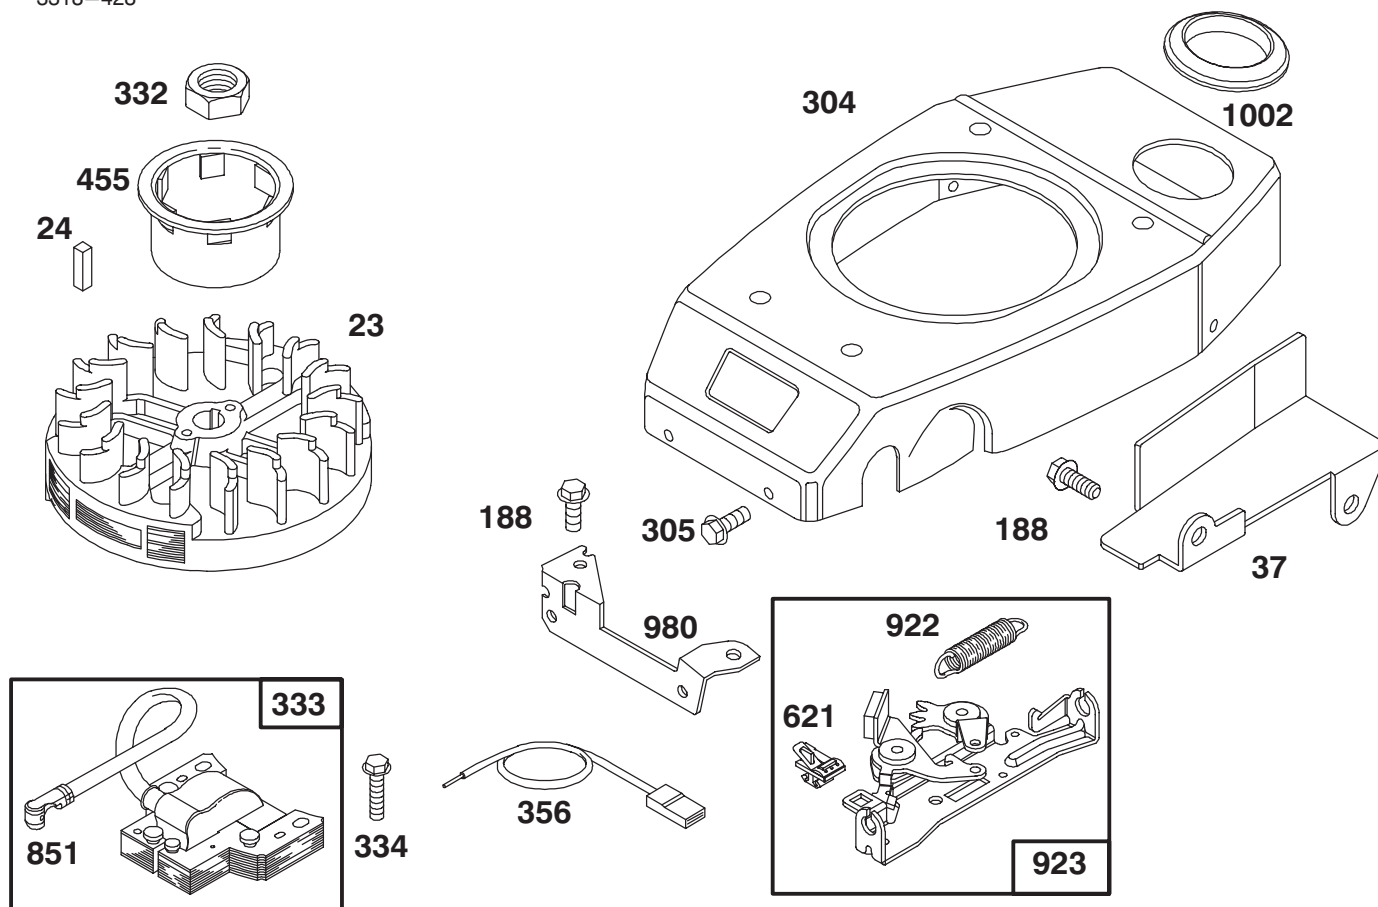


Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
23	77-8330	Flywheel – Magneto	1
24	77-8340	Key – Flywheel	1
37	77-7190	Guard – Flywheel	1
188	77-9360	Screw – Hex. Head	1
304	77-8260	Housing – Blower	1
305	77-8310	Screw – Hex. Head	1
332	77-8360	Nut – Flywheel	1
333	77-8420	Armature – Magneto	1
334	77-9420	Screw – Armature Mtg.	1

Ref. No.	Part No.	Description	No. Used
356	77-8400	Wire – Ground	1
455	77-8350	Cup – Starter	1
621	77-8010	Switch – Stop	1
851	77-9450	Terminal – Spark Plug	1
922	77-8860	Spring – Brake	1
923	77-9460	Brake Assy.	1
980	77-7140	Bracket – Blower Hsg.	1
1002	77-7180	Grommet	1



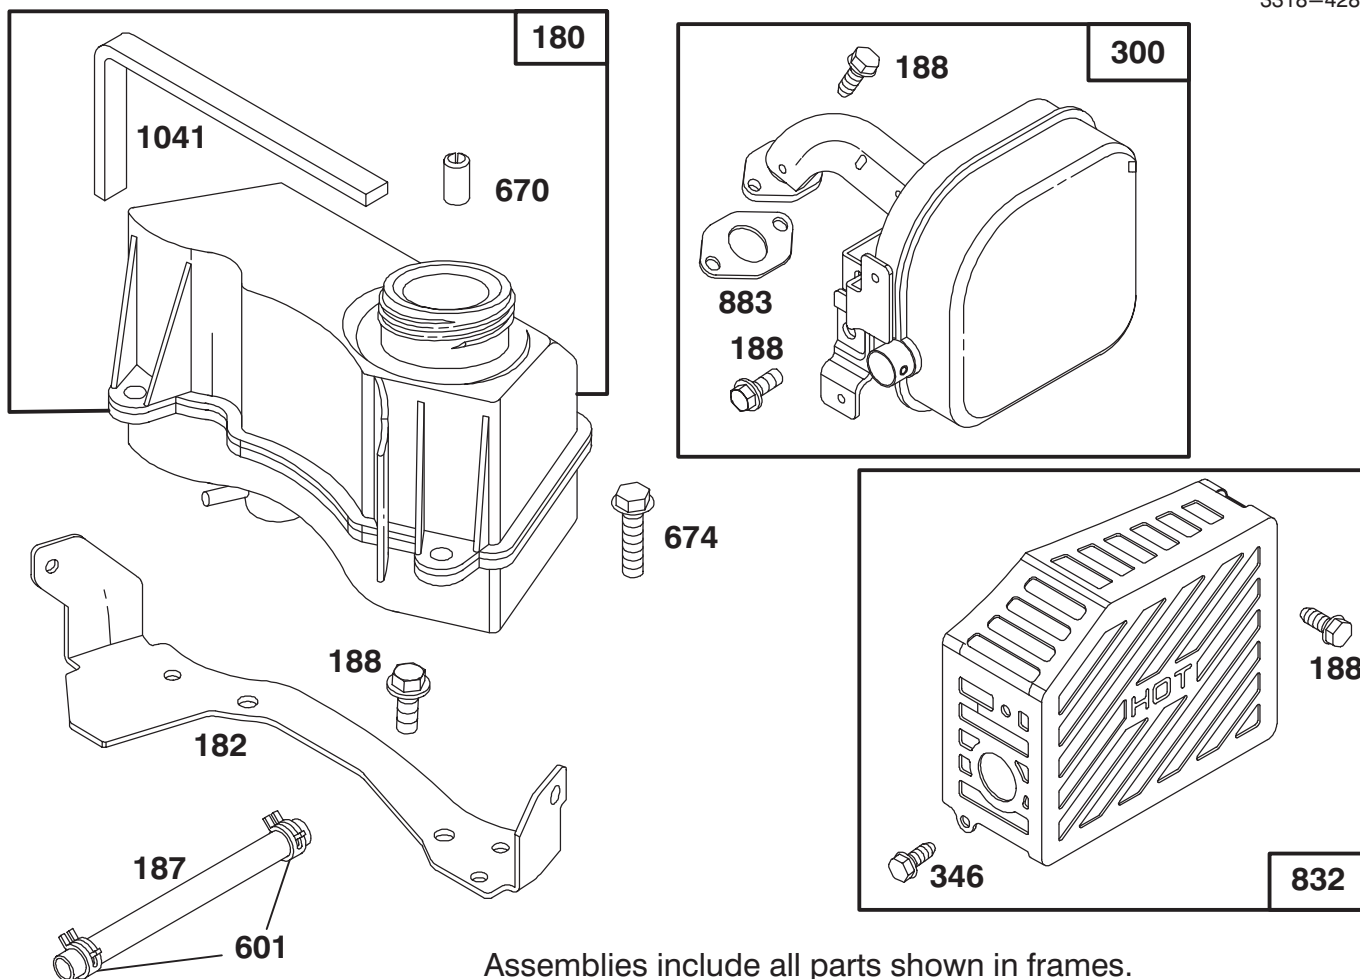


ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
180	77-8580	Tank Assy. — Fuel	1
182	77-7170	Bracket — Fuel Tank	1
187	77-8620	Hose — Fuel (Cut To Suit)	1
188	77-9360	Screw — Hex. Head	1
300	77-8640	Muffler — Exhaust	1
346	77-9430	Screw — Hex.	1
601	78-4690	Clamp — Fuel Hose	1

Ref. No.	Part No.	Description	No. Used
670	77-9030	Spacer — Fuel Tank (Includes 2)	1
674	77-8600	Screw — Tank Mtg.	1
832	77-9290	Guard — Muffler	1
★883	77-7760	Gasket — Exhaust	1
★1041	77-8590	Seal — Foam	1

★ Included in Gasket Set—Part No. 77-8900

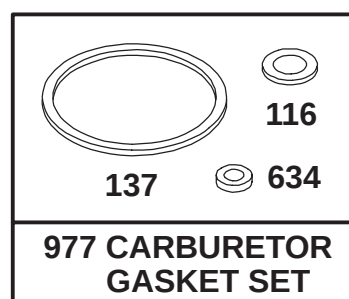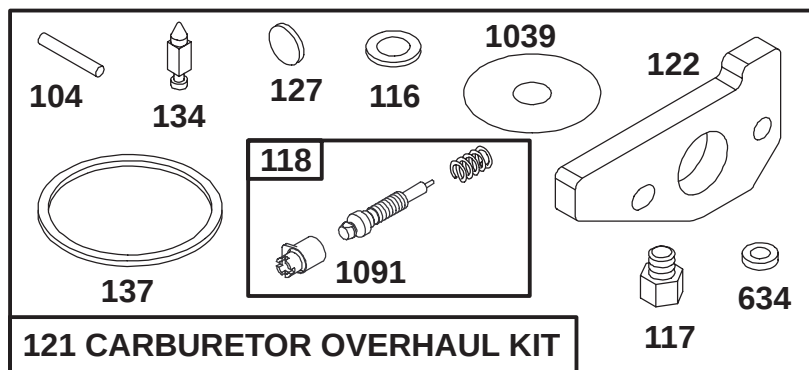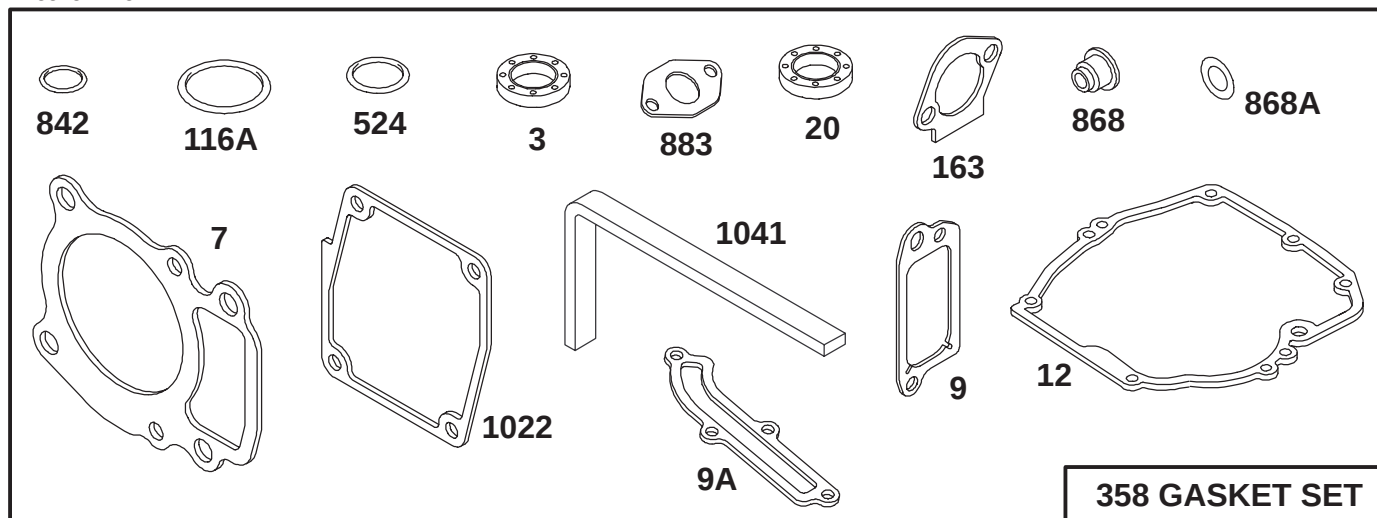

Assemblies include all parts shown in frames.

ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★3	77-9060	Seal – Oil	1
★7	77-7740	Gasket – Cylinder Head	1
★9	77-9250	Gasket – Breather	1
★9A	77-7410	Gasket – Breather	1
★12	77-7550	Gasket – Engine Base	1
★20	77-7570	Seal – Oil	1
●104	77-8180	Pin – Float Hinge	1
●◆116	77-8210	Gasket – Sealing	1
★116A	77-7660	O-Ring	1
●118	77-9620	Valve and Spring – Needle	1
121	77-9580	Carburetor Overhaul Kit	1
●122	77-7820	Adapter Assembly	1
●127	94-1651	Plug – Welch	1
●134	77-8110	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77-8200	Gasket – Float Bowl	1
★163	77-7960	Gasket – Air Cleaner	1
358	77-8900	Gasket Set	1
★524	77-7270	Seal – O-Ring	1
◆634	77-8150	Washer – Seal	1
★842	77-7300	Seal – O-Ring	1
★868	77-7890	Seal Assy. – Valve	1
★868A	77-7900	Seal – Valve	1
★883	77-7760	Gasket – Exhaust	1
977	77-8930	Carburetor Gasket Set	1
★1022	77-7320	Gasket – Rocker Cover	1
●1039	77-7250	Limiter – Float	1
★1041	77-8590	Seal – Foam	1
●1091	77-9650	Cap – Limiter	1

● Incl. in Carburetor Overhaul Kit—Part No. 77-9580

◆ Included in Carburetor Gasket Set—Part No. 77-8930

★ Included in Gasket Set—Part No. 77-8900

TORO PART NUMBER INDEX

3318—428

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
14—9949	Wheel & Tire Assembly	1 20 2	66—0030	Bracket — Cable Support	3 5 1
14—9959	Wheel Tire & Gear Assy.	4 31 2	66—0330	Support — Spacer	7 2 2
16—1769	Housing — 53cm	1 4 1	66—0360	Cap — End	4 5 2
16—8729	Control Panel Assembly	6 9 1	66—0540	Arm — Spring Front	1 25 2
17—9426	Screw — Handle	7 1 2	66—0560	Screw — Shoulder	1 19 2
19—4050	Knob — Handle Release	6 10 2	66—0570	Guide — Belt	3 11 1
25—7740	Knob — Arm	4 3 2	66—0580	Arm — Pivot	2 30 2
25—7740	Knob — Arm	1 28 2	66—0620	Retainer — Belt	1 16 1
26—0670	Bolt — Blade	3 8 1	66—5350	Lever — Control	7 5 1
27—6231	Bolt — Wheel	1 22 2	66—6040	Key — Rocking (R.H.)	4 * 1
27—6231	Bolt — Wheel	4 33 2	66—6050	Key — Rocking (L.H.)	4 27 1
27—6250	Bushing — Wheel	1 21 2	70—9760	Bushing — Sleeve	4 19 2
27—6250	Bushing — Wheel	4 32 4	71—0960	Support — Cable	7 8 1
29—9570	Bushing — Yoke	4 38 1	71—7900	Cap — Hinge Bolt L.H.	1 10 1
36—4780	Washer — Thrust	4 44 1	71—7910	Cap — Hinge Bolt R.H.	1 6 1
36—4791	Washer — Thrust	5 48 2	71—8090	Mount — Handle L.H.	6 12 1
36—8070	V—Belt	4 13 1	71—8100	Mount — Handle R.H.	6 11 1
38—7820	Bearing — Ball	5 60 1	71—8580	Spacer — Door	1 12 2
40—1940	Washer — Wheel Bolt	1 23 4	71—9470	Door — Bag	8 3 1
46—5520	Lever — Traction	7 7 1	71—9480	Handle — Door	8 2 1
46—6432	Screw — Handle	7 9 1	71—9640	Ramp — Discharge	1 27 1
48—2060	Bearing — Needle	4 21 2	71—9650	Access — Cover	1 14 1
49—2040	Screw — Self Tapping	4 8 8	71—9680	Bag — Grass 53cm	8 5 1
52—7430	Control Bar Assembly	7 3 1	71—9800	Door — Discharge	1 9 1
55—3760	Gear — Pinion 15T	5 49 1	71—9840	Spring — Door	1 11 2
55—3770	Gear — 49T (1st Gear)	5 58 1	71—9870	Decal — Deck 53cm	2 29 1
55—3780	Gear — Pinion 20T	5 50 1	71—9873	Decal — Panel	6 7 1
55—3790	Gear — 44T (2nd Gear)	5 57 1	71—9920	Cover — Top	1 15 1
55—3800	Gear — Pinion 25T	5 51 1	71—9930	Frame — Grass Bag	8 4 1
55—3810	Gear — 39T (3rd Gear)	5 56 1	74—1660	Cover — Wheel	4 30 2
60—8710	Case — Gear (Upper)	5 61 1	74—1671	Spacer — Wheel Cover	4 34 2
60—8730	Cover — Gear Case	5 46 1	76—0760	Key — Shift	4 41 2
60—8750	Bushing — Intrmdt. Shaft	5 47 2	76—0770	Collar — Shift	4 42 1
60—8770	Bushing — Output Shaft	5 45 1	76—0780	Sleeve — Shift Key	4 40 1
60—8790	Sleeve — Gear	5 55 1	76—0920	Lever — Shift	4 16 1
60—8800	Shaft — Intermediate	5 52 1	76—2930	Retainer — Cable	4 15 1
60—8810	Retainer — Shift Fork	4 39 1	77—7040	Cover — Air Cleaner	12 968 1
60—8840	Pulley — Half	4 10 2	77—7140	Bracket — Blower Hsg.	14 980 1
60—8850	Bushing — Output Shaft	5 53 1	77—7170	Bracket — Fuel Tank	15 182 1
60—8870	Yoke — Shift	4 37 1	77—7180	Grommet	14 1002 1
60—8890	Pinion — Bevel	5 59 1	77—7190	Guard — Flywheel	14 37 1
62—6660	Spacer	4 9 1	77—7210	Insert — Rewind Handle	13 59 1
62—6673	Gear Case Assy. Complete	5 * 1	77—7240	Bowl — Fuel	11 136 1
62—7540	Retainer — Blade	3 7 1	77—7250	Limiter — Float	11 1039 1
62—7550	Pulley — Engine	3 13 1	77—7250	Limiter — Float	16 1039 1
62—7700	Blade — 21	3 10 1	77—7260	Dipstick — Oil	10 523 1
65—2720	Ring — Retaining	4 24 4	77—7270	Seal — O-Ring	10 524 1
65—4710	Ring — Friction	4 25 2	77—7270	Seal — O-Ring	16 524 1
65—4720	Spring — Compression	4 29 2	77—7280	Tube — Oil Filler	10 525 1
65—4730	Washer — Thrust (Inner)	4 22 2	77—7300	Seal — O-Ring	10 842 1
65—4740	Washer — Thrust (Keyed)	4 23 4	77—7300	Seal — O-Ring	16 842 1
65—4750	Pinion	4 28 2	77—7320	Gasket — Rocker Cover	16 1022 1
65—4760	Washer — Clutch	4 26 2	77—7320	Gasket — Rocker Cover	9 1022 1
65—4770	Shaft — Output	4 17 1	77—7330	Plug — Spark	9 337 1
65—5042	Pivot Arm Assembly	4 2 2	77—7340	Elbow — Spark Plug	9 635 1
65—5190	Bracket — Belt Guide	4 7 1	77—7360	Screw — Hex. Head	9 10 1
65—5200	Cover	3 12 1	77—7370	Lever Assy. — Governor	10 227 1
65—5210	Screw — Thread Forming	1 7 2	77—7380	Bolt — Governor Lever	10 562 1
65—5220	Screw — Cap Socket Hd.	1 26 2	77—7390	Nut — Hex.	10 592 1
65—5220	Screw — Socket Hd. Cap	4 36 2	77—7400	Cover — Breather	9 572 1
65—5250	Clip — Spring	4 43 1	77—7410	Gasket — Breather	9 9A 1
65—5440	Spring Arm Assembly	4 4 2	77—7410	Gasket — Breather	16 9A 1
65—5660	Panel — Screen	1 2 1	77—7420	Screw — Breather Cover	9 307 1
66—0020	Panel — Vertical	1 1 1	77—7450	Screw — Cap	10 819 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-7460	Crank — Governor	10 616 1	77-8110	Valve — Inlet	16 134 1
77-7470	Washer	10 230 1	77-8130	Shaft — Choke	11 141 1
77-7480	Pushnut	10 615 1	77-8140	Spring — Choke	12 618 1
77-7490	Gear — Cam	10 46 1	77-8150	Washer — Seal	11 634 1
77-7500	Gear — Governor	10 219 1	77-8150	Washer — Seal	16 634 1
77-7530	Gear — Timing	10 741 1	77-8160	Shaft — Throttle	11 131 1
77-7550	Gasket — Engine Base	10 12 1	77-8170	Float — Carburetor	11 133 1
77-7550	Gasket — Engine Base	16 12 1	77-8180	Pin — Float Hinge	11 104 1
77-7560	Base — Engine	10 18 1	77-8180	Pin — Float Hinge	16 104 1
77-7570	Seal — Oil	10 20 1	77-8190	Bowl Assy. — Carburetor	11 975 1
77-7570	Seal — Oil	16 20 1	77-8200	Gasket — Float	11 137
77-7590	Cylinder Assy.	9 1 1	77-8200	Gasket — Float	16 137
77-7600	Pin — Cylinder	9 718 1	77-8210	Gasket — Sealing	16 116 1
77-7610	Tappet — Valve	9 45 1	77-8210	Sealing — Gasket	11 116 1
77-7620	Rod — Push	9 1026 1	77-8220	Screw — Hex. Head	11 955 1
77-7630	Screw — Cylinder Head	9 13 1	77-8240	Screw — Idle Adj.	11 98 1
77-7640	Pump — Oil	10 1024 1	77-8260	Housing — Blower	14 304 1
77-7650	Cover — Oil Pump	10 979 1	77-8300	Screw — Hex. Head	13 65 1
77-7660	O-Ring	10 116A 1	77-8310	Screw — Hex. Head	10 305 1
77-7660	O-Ring	16 116A 1	77-8310	Screw — Hex. Head	14 305 1
77-7670	Rod — Connecting	10 29 1	77-8330	Flywheel — Magneto	14 23 1
77-7690	Piston Assy. (Std.)	10 25 1	77-8340	Key — Flywheel	14 24 1
77-7700	Ring Set (Std.)	10 26 1	77-8350	Cup — Starter	14 455 1
77-7710	Lock — Piston Pin	10 27 1	77-8360	Nut — Flywheel	14 332 1
77-7730	Head — Cylinder	9 5 1	77-8400	Wire — Ground	14 356 1
77-7740	Gasket — Cylinder Head	16 7 1	77-8420	Armature — Magneto	14 333 1
77-7740	Gasket — Cylinder Head	9 7 1	77-8470	Retainer — Rewind	13 456 1
77-7760	Gasket — Exhaust	15 883 1	77-8480	Rope — Starter	13 58 1
77-7760	Gasket — Exhaust	16 883 1	77-8490	Screw — Rewind Starter	13 461 1
77-7760	Gasket — Exhaust	9 883 1	77-8500	Spring — Torsion	13 515 1
77-7770	Guide — Push Rod	9 1034 1	77-8520	Handle — Rewind Starter	13 60 1
77-7780	Stud — Rocker Arm	9 166 1	77-8530	Pawl — Starter	13 459 1
77-7790	Arm — Rocker	9 1029 1	77-8550	Pin — Spring	13 718A 1
77-7800	Cap — Valve	9 238 1	77-8570	Cover — Spring	13 1016 1
77-7810	Spring — Valve	9 35 1	77-8580	Tank Assy. — Fuel	15 180 1
77-7820	Adapter Assembly	16 122 1	77-8590	Seal — Foam	15 1041 1
77-7820	Adapter Assy.	9 122 1	77-8590	Seal — Foam	16 1041 1
77-7820	Adapter Assy.	11 122 1	77-8600	Screw — Tank Mtg.	15 674 1
77-7860	Valve — Exhaust	9 33 1	77-8620	Hose — Fuel	15 187 1
77-7870	Retainer — Spring	9 40 1	77-8640	Muffler — Exhaust	15 300 1
77-7880	Valve — Intake	9 34 1	77-8840	Starter Assy. — Rewind	13 608 1
77-7890	Seal Assy. — Valve	16 868 1	77-8860	Spring — Brake	14 922 1
77-7890	Seal Assy. — Valve	9 868 1	77-8890	Housing — Rewind	13 55 1
77-7900	Gasket — Valve	9 868A 1	77-8900	Gasket Set	16 358 1
77-7900	Seal — Valve	16 868A 1	77-8930	Carburetor Gasket Set	16 977 1
77-7910	Ball & Screw — Rocker	9 192 1	77-9020	Short Block	13 1
77-7920	Screw — Air Cleaner	12 969 1	77-9030	Spacer — Fuel Tank	15 670 1
77-7930	Screw — Air Cleaner	12 971 1	77-9060	Seal — Oil	9 3 1
77-7940	Base — Air Cleaner	12 966 1	77-9060	Seal — Oil	16 3 1
77-7950	Element — Filter	12 535 1	77-9070	Screw — Engine Base	10 22 1
77-7960	Gasket — Air Cleaner	12 163 1	77-9200	Screw — Hex. Head	9 10A 1
77-7960	Gasket — Air Cleaner	16 163 1	77-9240	Plug — Pipe	10 15 1
77-7970	Screw — Hex. Head	11 124 1	77-9250	Gasket — Breather	9 9 1
77-7980	Link — Governor	12 201 1	77-9250	Gasket — Breather	16 9 1
77-7990	Spring — Governor	12 209 1	77-9270	Pulley — Rewind Starter	13 56 1
77-8000	Bracket — Carburetor	12 620 1	77-9290	Guard — Muffler	15 832 1
77-8010	Switch — Stop	12 621 1	77-9300	Breather Assy.	9 8 1
77-8010	Switch — Stop	14 621 1	77-9310	Screw — Set	9 192A 1
77-8020	Screw Assy. — Speed	12 98A 1	77-9320	Cover — Valve	9 1023 1
77-8040	Tube — Vent	11 1011 1	77-9330	Crankshaft	10 16 1
77-8080	Valve — Throttle	11 130 1	77-9340	Pin Assy. — Piston	10 28 1
77-8090	Screw — Valve Mtg.	11 95 1	77-9350	Screw — Connecting Rod	10 32 1
77-8100	Plug — Welch	11 127 1	77-9360	Screw — Hex. Head	10 188 1
77-8110	Valve — Inlet	11 134 1	77-9360	Screw — Hex. Head	12 188 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3318-428

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-9360	Screw - Hex. Head	14 188 1	93-7198	Gas Cap Assembly	3 4 1
77-9360	Screw - Hex. Head	15 188 1	94-1604	Engine	3 1 1
77-9410	Tube - Breather	9 11 1	94-1651	Plug - Welch	16 127 1
77-9420	Screw - Armature Mtg.	14 334 1	94-4910	Handle	6 5 1
77-9430	Screw - Hex.	15 346 1	2210-249	Clamp - Throttle	3 15 1
77-9450	Terminal - Spark Plug	14 851 1	2210-316	Stop - Rope	3 18 1
77-9460	Brake Assy.	14 923 1	237-153	Seal - ORing	4 18 2
77-9470	Tube - Breather	12 529 1	302-56	Fitting - Grease	4 20 2
77-9550	Cover - Brake	3 19 1	321-3	Screw - Cap Hex. Hd.	7 6 1
77-9580	Carburetor Overhaul Kit	16 121 1	321-52	Screw - Hex Hd. Cap	7 14 1
77-9600	Valve - Choke	11 108 1	322-29	Screw - Hex Hd. Cap	1 8 2
77-9610	Jet - Main	11 117 1	3253-22	Washer - Blade	3 9 1
77-9620	Valve & Spring -	11 118 1	3256-22	Washer - Flat	7 11 1
77-9620	Valve and Spring -	16 118 1	3256-24	Washer - Flat	4 12 1
77-9630	Carburetor Assy.	11 125 1	3256-24	Washer - Flat	1 17 1
77-9640	Adapter - Jet	11 147 1	3272-5	Pin - Cotter	4 14 1
77-9650	Cap - Limiter	11 1091 1	3290-378	Tie - Cable	6 6 5
77-9650	Cap - Limiter	16 1091 1	3296-5	Nut - Lock	4 11 1
78-4690	Clamp - Fuel Hose	15 601 1	3296-6	Nut - Lock	1 24 4
86-7990	Screw - Clamp	3 16 1	3296-6	Nut - Lock	4 35 2
92-2289	Plate - TORO Logo	3 2 1	3296-42	Nut - Lock	7 4 3
92-9665	Screw - Self Tapping	6 8 5	3296-58	Nut - Lock	7 12 2
93-3772	Guide - Rope	7 13 1	32121-120	Pin - Coil	5 54 1
93-4105	Decal - Danger	1 13 1	32144-15	Screw - Hex Flange Hd.	1 18 1
93-4355	Decal - Recoil	3 3 1	32144-70	Screw - Cap Hex. Hd.	1 3 6
93-6628	Cable - Brake	7 15 1	32144-70	Screw - Hex Hd. Cap	3 6 7
93-6631	Control - Throttle	6 4 1	32144-70	Screw - Hex. Washer Hd.	4 1 5
93-6632	Control - Ground Speed	6 1 1	32144-102	Screw - Thread Forming	3 14 3
93-6634	Cable - Traction	7 10 1	32144-111	Screw - Index Hex Washer	8 1 5
93-6662	Decal - Instruction	6 3 1			

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]