




MODEL NO. 26632B-6900001 & UP

PARTS  
CATALOG

53cm REAR BAGGING MOWER

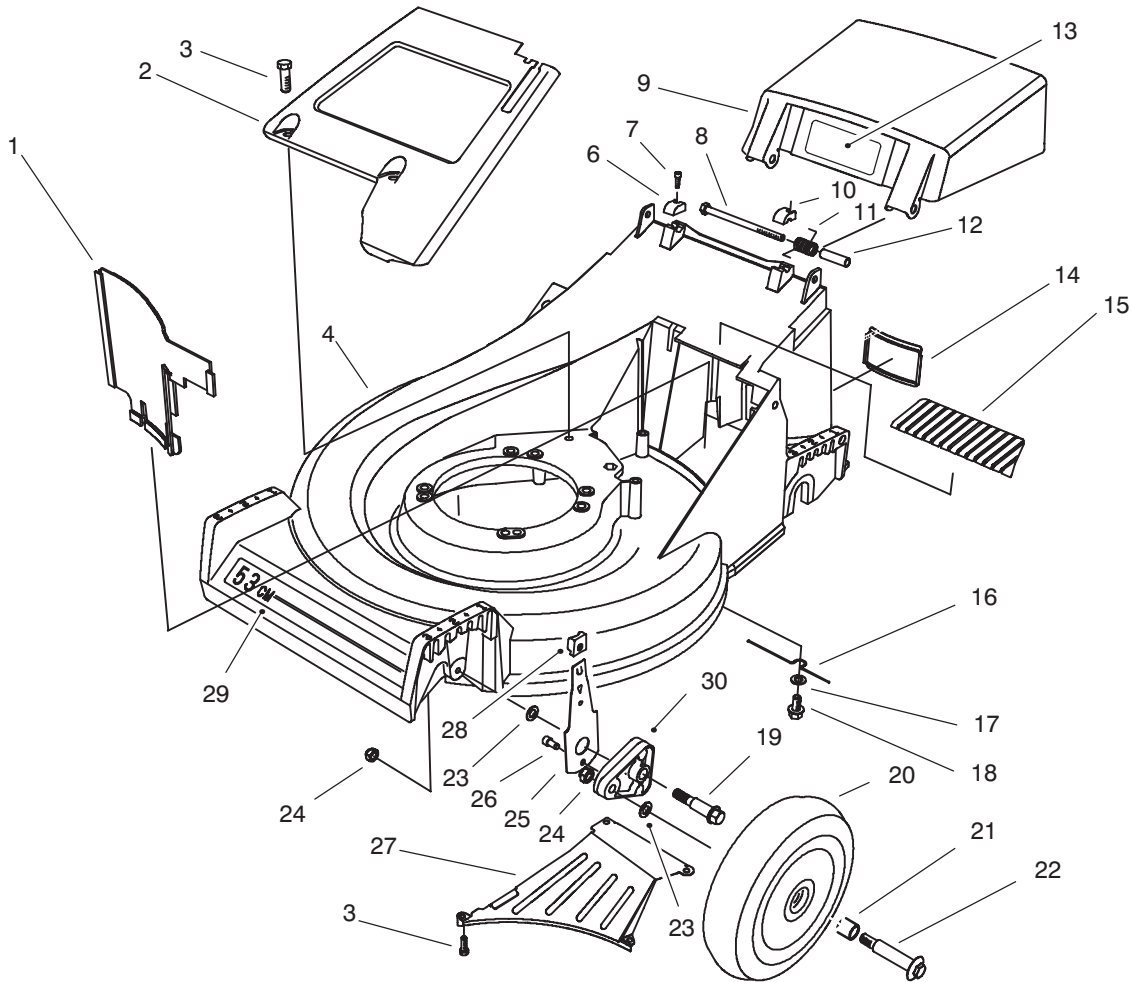


C-2215

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Cap Hex. Hd.	6
4	16-1769	Housing - 53cm (Incl. Ref. #29)	1
6	71-7910	Cap - Hinge Bolt R.H.	1
7	65-5210	Screw - Thread Forming	2
8	322-29	Screw - Hex Hd. Cap	2
9	71-9800	Door - Discharge	1
10	71-7900	Cap - Hinge Bolt L.H.	1
11	71-9840	Spring - Door	2
12	71-8580	Spacer - Door	2
13	93-4105	Decal - Danger	1
14	71-9650	Access - Cover	1
15	71-9920	Cover - Top	1

Ref. No.	Part No.	Description	No. Used
16	66-0620	Retainer - Belt	1
17	3256-24	Washer - Flat	1
18	32144-15	Screw - Hex Flange Hd.	1
19	66-0560	Screw - Shoulder	2
20	14-9949	Wheel & Tire Assembly (Incl. Ref. #21)	2
21	27-6250	Bushing - Wheel	2
22	27-6231	Bolt - Wheel	2
23	40-1940	Washer - Wheel Bolt	4
24	3296-6	Nut - Lock	4
25	66-0540	Arm - Spring Front	2
26	65-5220	Screw - Cap Socket Hd.	2
27	71-9640	Ramp - Discharge	1
28	25-7740	Knob - Arm	2



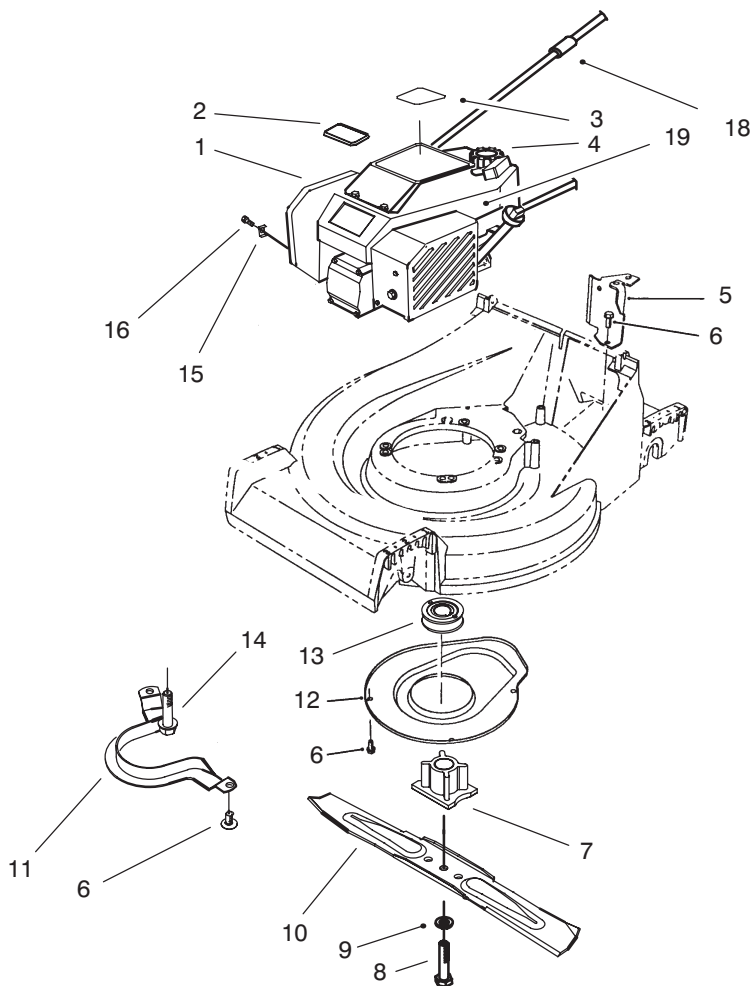


C-2216A

## ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94-1604	Engine	1
2	92-2289	Plate - TORO Logo	1
3	93-4355	Decal - Recoil	1
4	93-7198	Gas Cap Assembly	1
5	66-0030	Bracket - Cable Support	1
6	32144-70	Screw - Hex Hd. Cap	7
7	62-7540	Retainer - Blade	1
8	26-0670	Bolt - Blade	1
9	3253-22	Washer - Blade	1

Ref. No.	Part No.	Description	No. Used
10	62-7700	Blade - 21"	1
11	66-0570	Guide - Belt	1
12	65-5200	Cover	1
13	62-7550	Pulley - Engine	1
14	32144-102	Screw - Thread Forming	3
15	2210-249	Clamp - Throttle	1
16	86-7990	Screw - Clamp	1
18	2210-316	Stop - Rope	1
19	77-9550	Cover - Brake	1

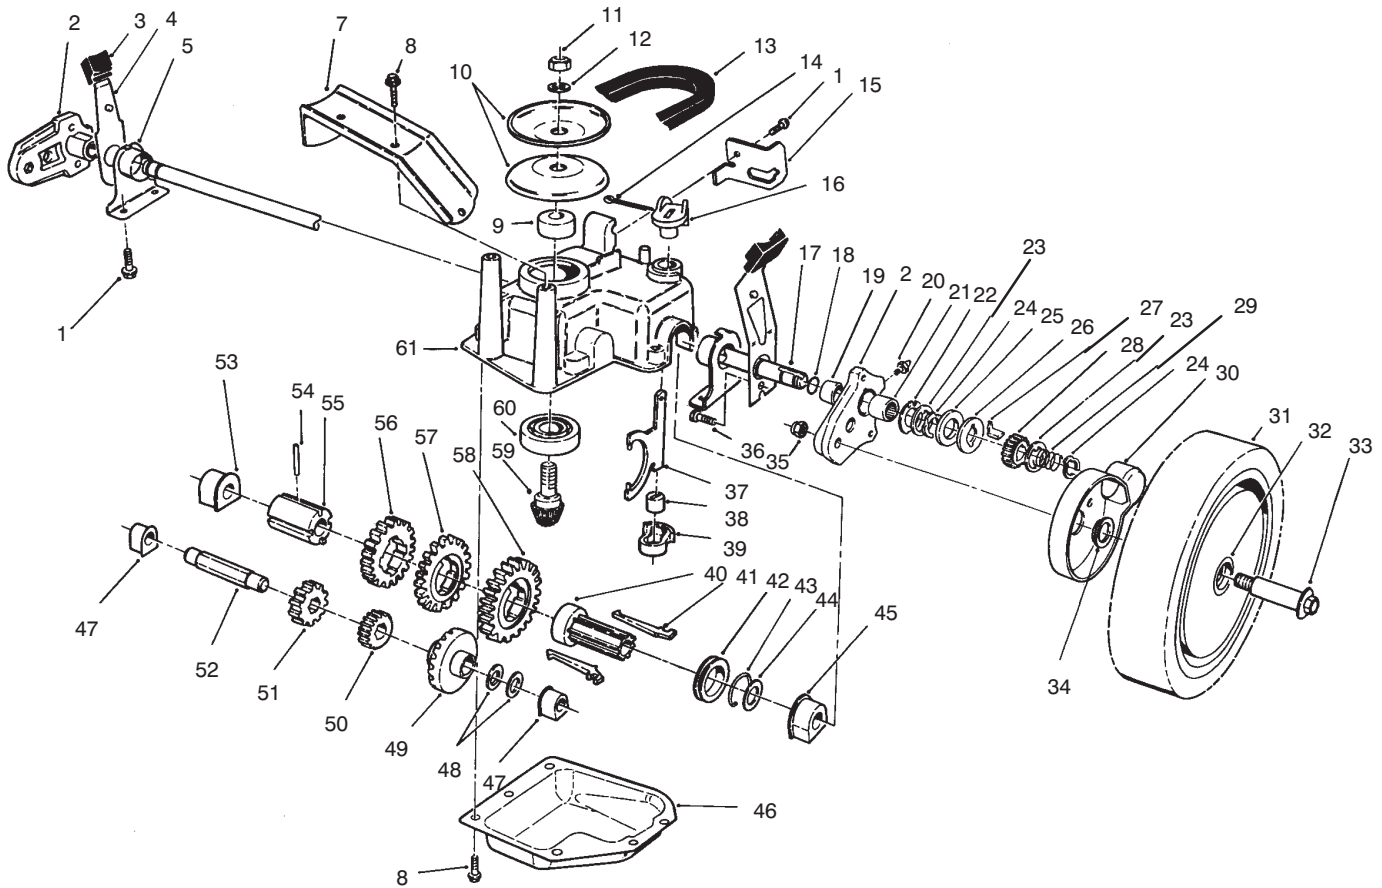


C-1555

## GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	36-8070	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - "O" Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	14-9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1671	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Socket Hd. Cap	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

\*Not Illustrated

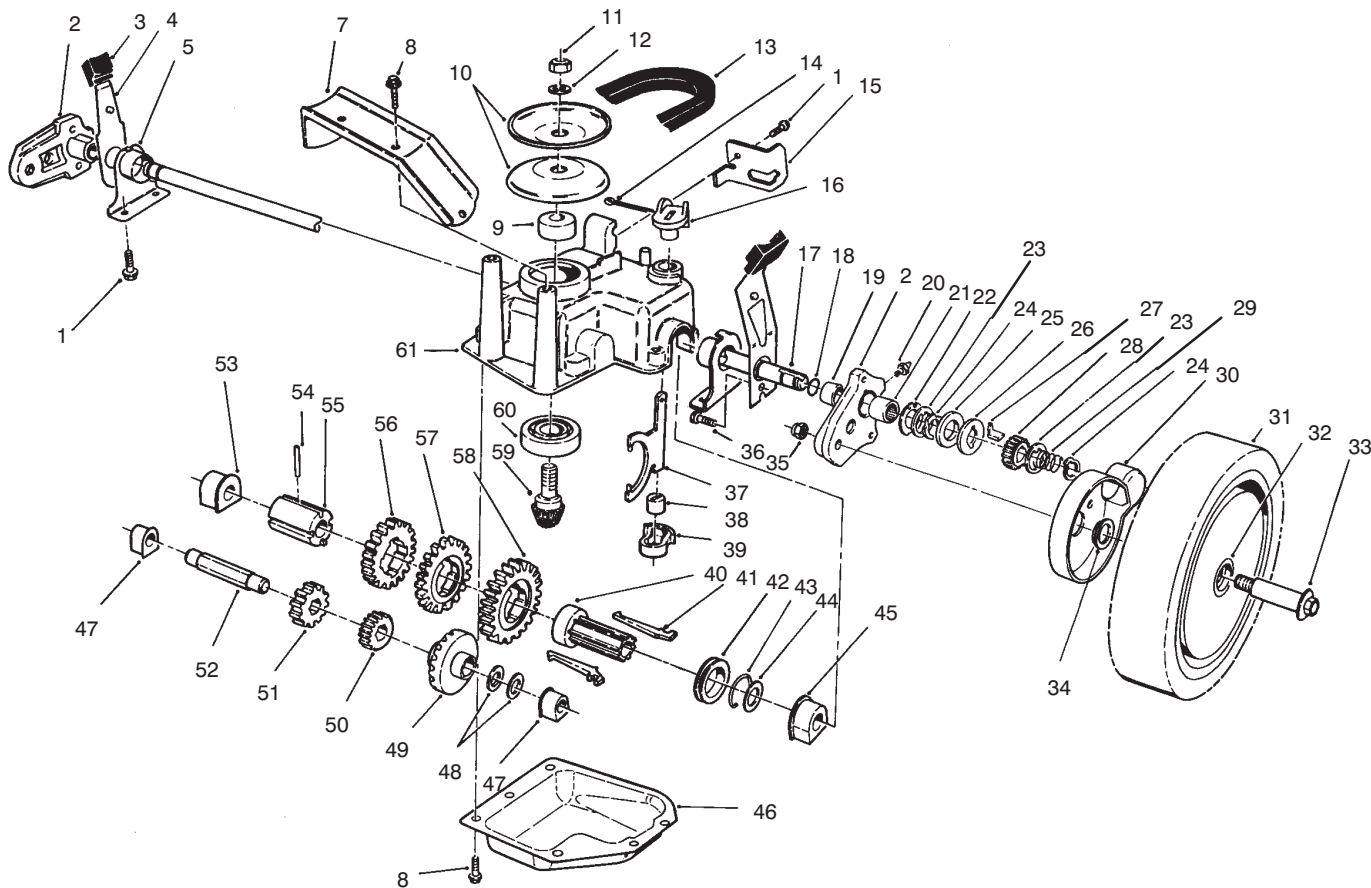


C-1555

## GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1	54	32121-120	Pin - Coil	1
46	60-8730	Cover - Gear Case	1	55	60-8790	Sleeve - Gear	1
47	60-8750	Bushing - Intrmdt. Shaft	2	56	55-3810	Gear - 39T (3rd Gear)	1
48	36-4791	Washer - Thrust	2	57	55-3790	Gear - 44T (2nd Gear)	1
49	55-3760	Gear - Pinion 15T	1	58	55-3770	Gear - 49T (1st Gear)	1
50	55-3780	Gear - Pinion 20T	1	59	60-8890	Pinion - Bevel	1
51	55-3800	Gear - Pinion 25T	1	60	38-7820	Bearing - Ball	1
52	60-8800	Shaft - Intermediate	1	61	60-8710	Case - Gear (Upper)	1
53	60-8850	Bushing - Output Shaft	1	*	62-6673	Gear Case Assy. Complete	1

\*Not Illustrated

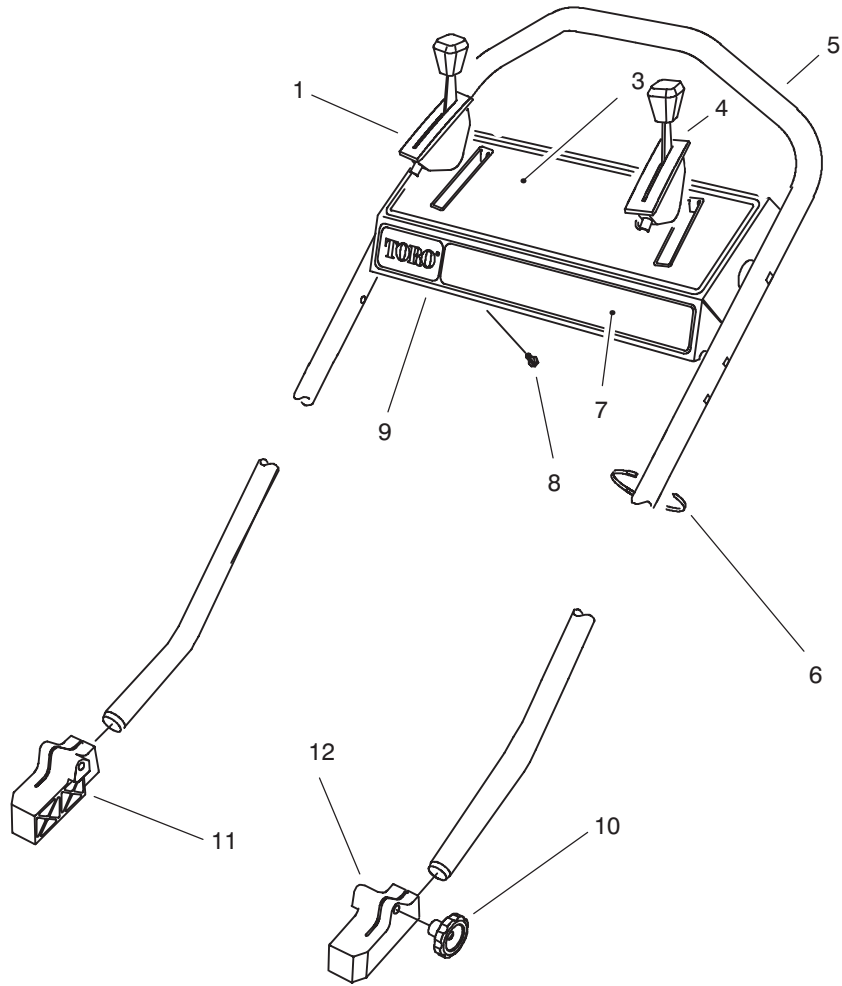


C-1569A

## HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6632	Control - Ground Speed	1
3	93-6662	Decal - Instruction	1
4	93-6631	Control - Throttle	1
5	94-4910	Handle	1
6	3290-378	Tie - Cable	5
7	71-9873	Decal - Panel	1

Ref. No.	Part No.	Description	No. Used
8	92-9665	Screw - Self Tapping	5
9	16-8729	Control Panel Assembly (Incl. Ref. #3, & 7)	1
10	19-4050	Knob - Handle Release	2
11	71-8100	Mount - Handle R.H.	1
12	71-8090	Mount - Handle L.H.	1

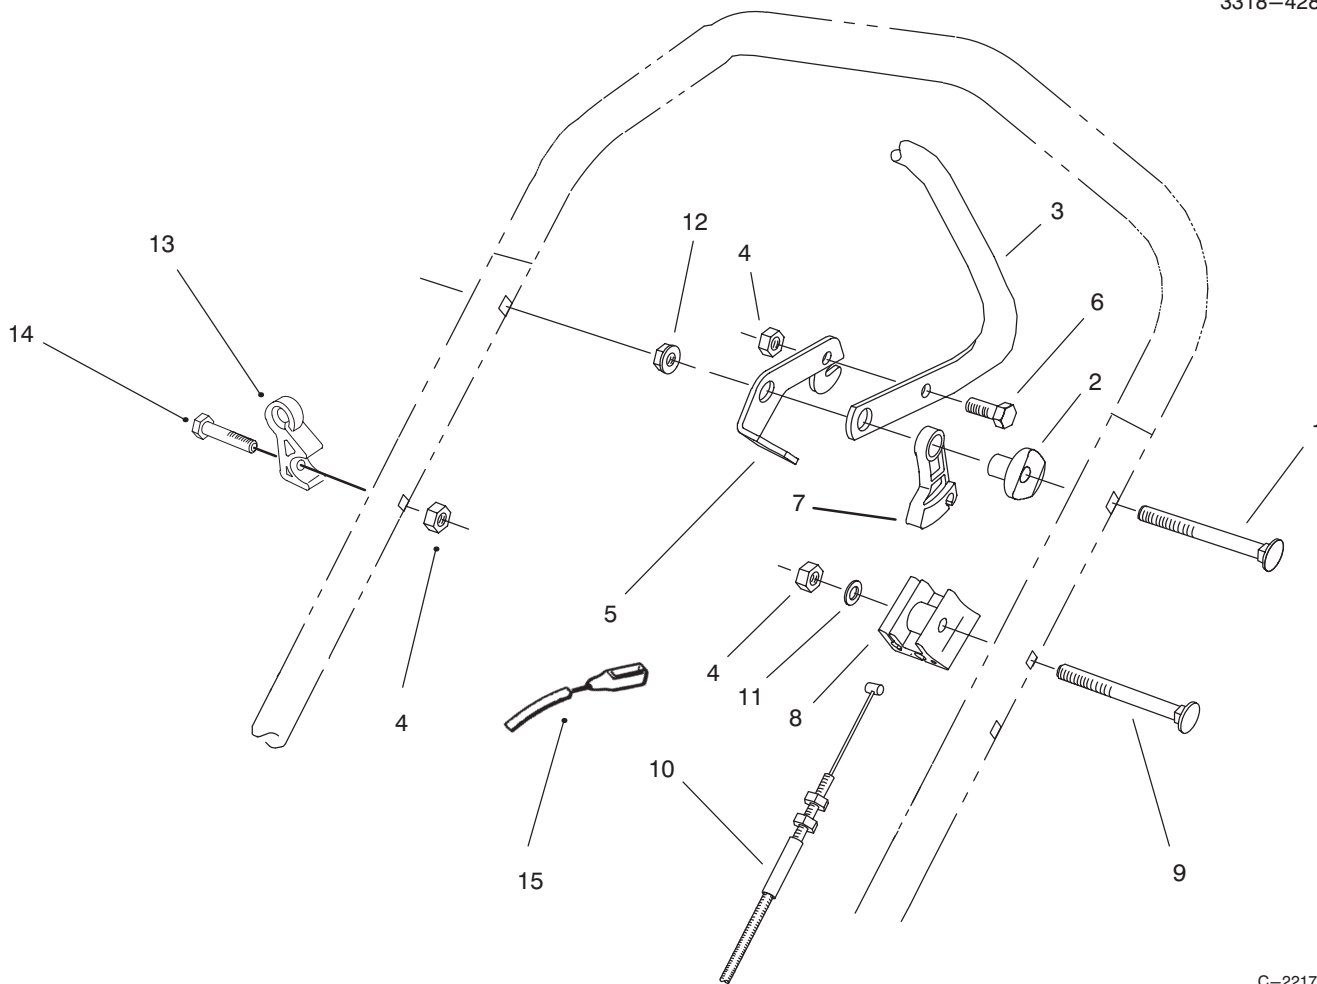


C-2217

## TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw - Handle	2
2	66-0330	Support - Spacer	2
3	52-7430	Control Bar Assembly	1
4	3296-42	Nut - Lock	3
5	66-5350	Lever - Control	1
6	321-3	Screw - Cap Hex. Hd.	1
7	46-5520	Lever - Traction	1
8	71-0960	Support - Cable	1

Ref. No.	Part No.	Description	No. Used
9	46-6432	Screw - Handle	1
10	93-6634	Cable - Traction	1
11	3256-22	Washer - Flat	1
12	3296-58	Nut - Lock	2
13	93-3772	Guide - Rope	1
14	321-52	Screw - Hex Hd. Cap	1
15	93-6628	Cable - Brake	1

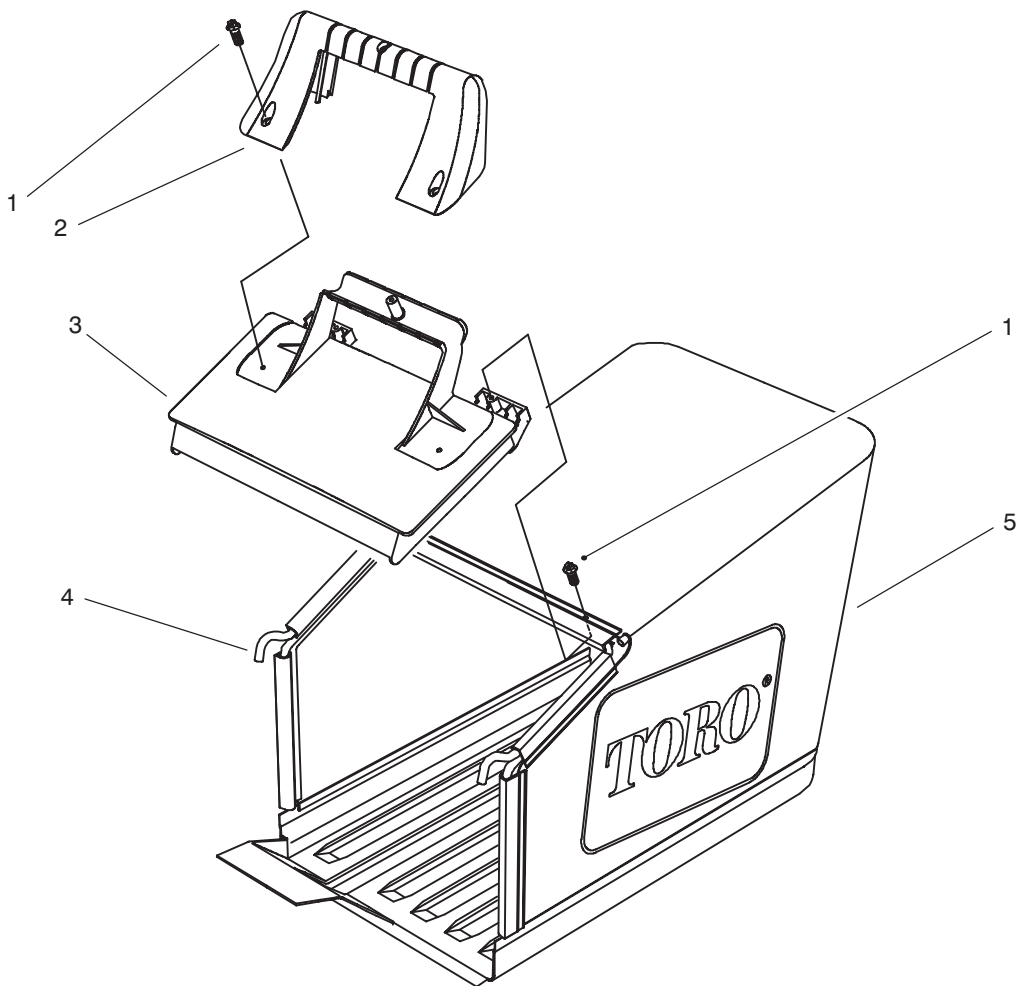


C-1570

### GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Index Hex Washer Head	5
2	71-9480	Handle - Door	1

Ref. No.	Part No.	Description	No. Used
3	71-9470	Door - Bag	1
4	71-9930	Frame - Grass Bag	1
5	71-9680	Bag - Grass 53cm	1

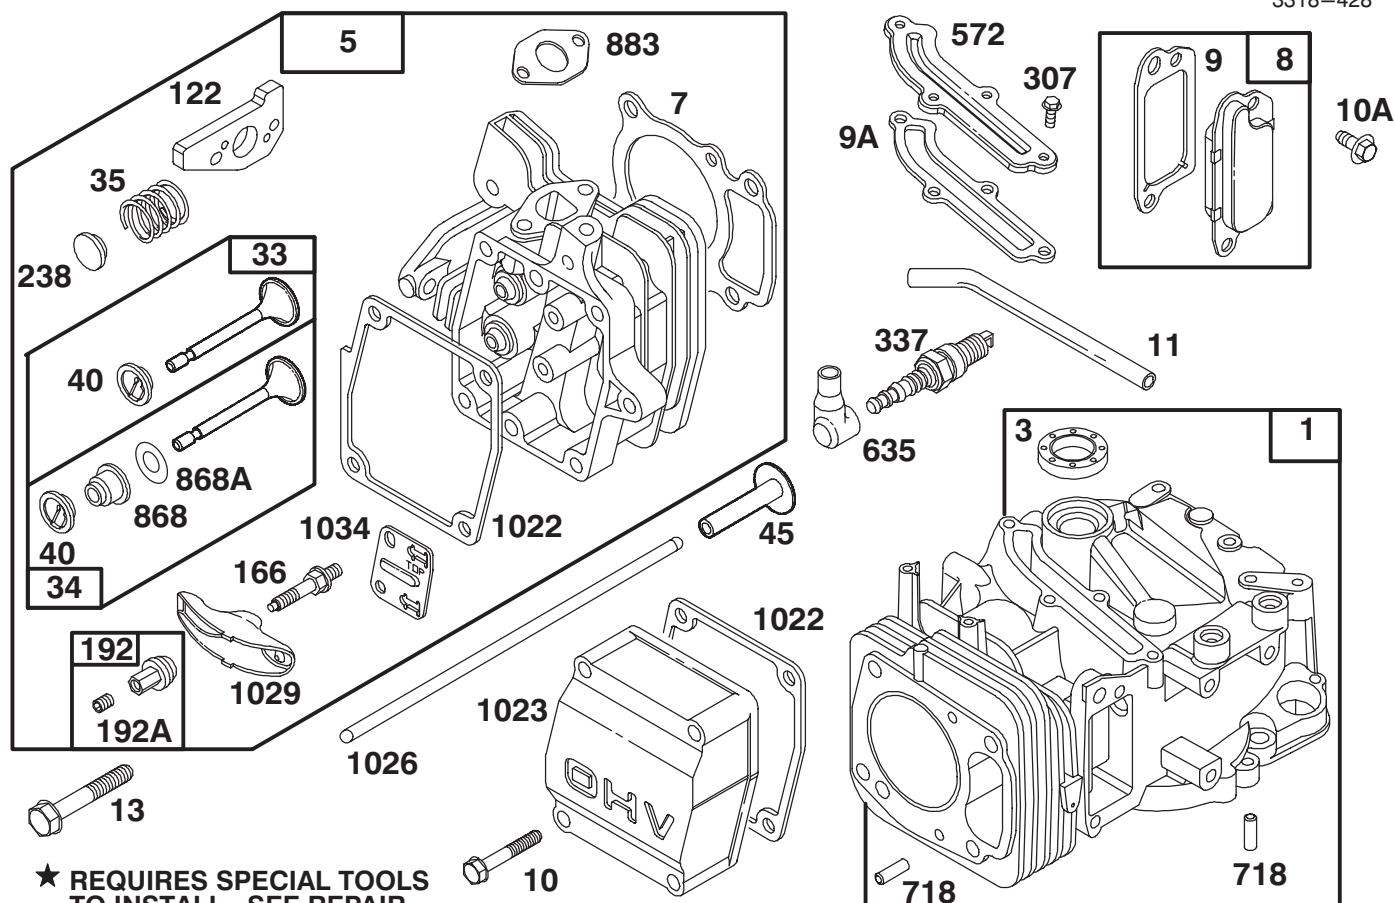


## ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
1	77-7590	Cylinder Assy.	1
★3	77-9060	Seal - Oil	1
5	77-7730	Head - Cylinder	1
★7	77-7740	Gasket - Cylinder Head	1
8	77-9300	Breather Assy.	1
★9	77-9250	Gasket - Breather	1
★9A	77-7410	Gasket - Breather	1
10	77-7360	Screw - Hex. Head (Valve Cover)	1
10A	77-9200	Screw - Hex. Head	1
11	77-9410	Tube - Breather	1
13	77-7630	Screw - Cylinder Head	1
33	77-7860	Valve - Exhaust	1
34	77-7880	Valve - Intake	1
35	77-7810	Spring - Valve	1
40	77-7870	Retainer - Spring	1
45	77-7610	Tappet - Valve	1
●122	77-7820	Adapter Assy.	1
166	77-7780	Stud - Rocker Arm	1

Ref. No.	Part No.	Description	No. Used
192	77-7910	Ball & Screw - Rocker Arm	1
192A	77-9310	Screw - Set	1
238	77-7800	Cap - Valve	1
307	77-7420	Screw - Breather Cover Mtg.	1
337	77-7330	Plug - Spark	1
572	77-7400	Cover - Breather	1
635	77-7340	Elbow - Spark Plug	1
718	77-7600	Pin - Cylinder	1
★868	77-7890	Seal Assy. - Valve	1
★868A	77-7900	Gasket - Valve	1
★883	77-7760	Gasket - Exhaust	1
★1022	77-7320	Gasket - Rocker Cover	1
1023	77-9320	Cover - Valve	1
1026	77-7620	Rod - Push	1
1029	77-7790	Arm - Rocker	1
1034	77-7770	Guide - Push Rod	1

★ Included in Gasket Set-Part No. 77-8900

● Included in Carburetor Overhaul Kit-Part No. 77-9580

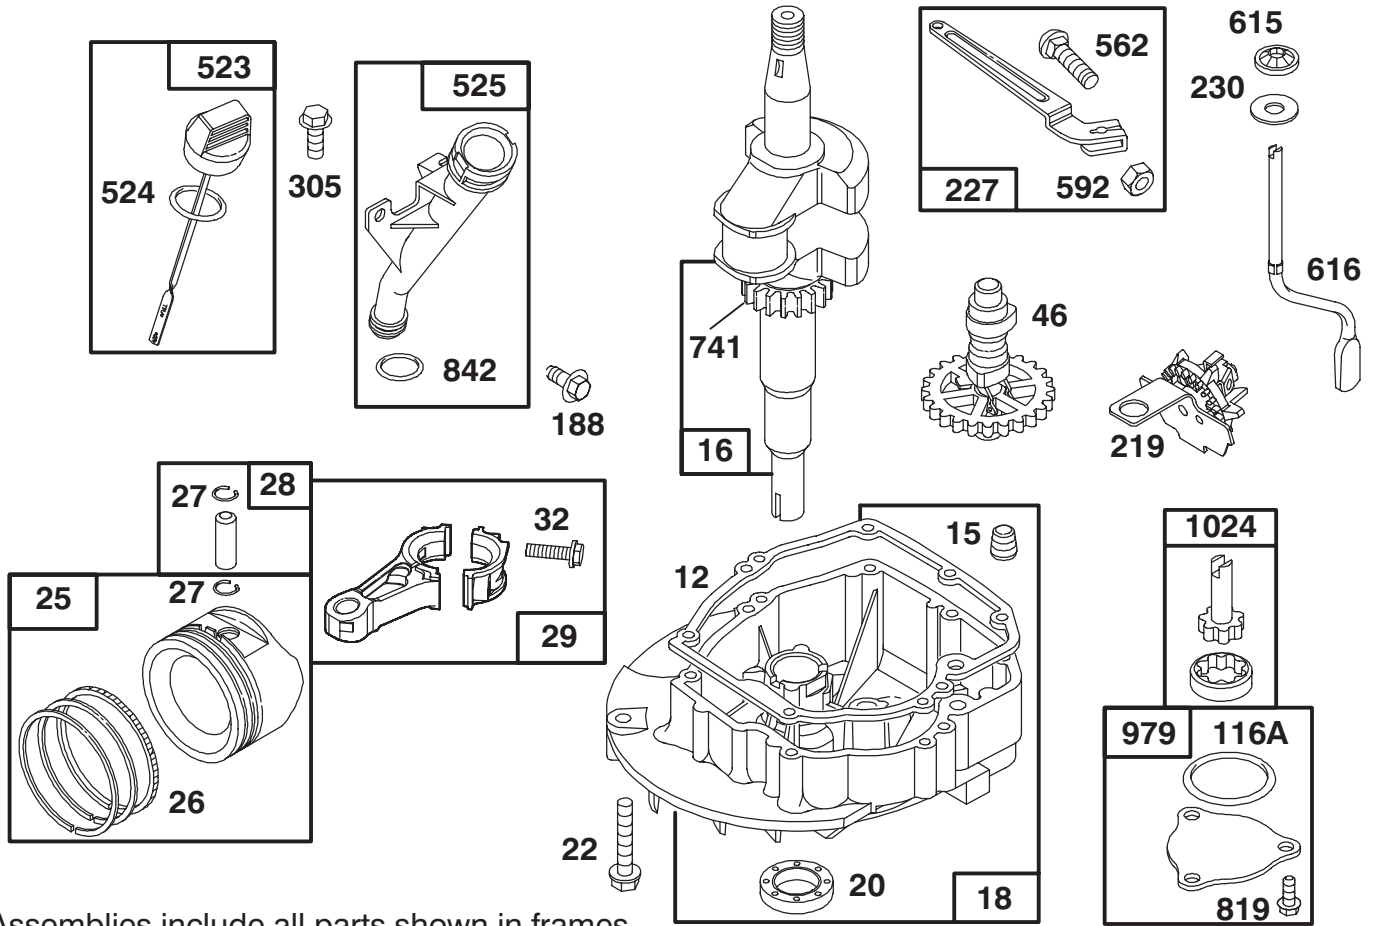


Assemblies include all parts shown in frames.

### ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★12	77-7550	Gasket – Engine Base	1
15	77-9240	Plug – Pipe	1
16	77-9330	Crankshaft	1
		<b>Note:</b> Order Part No. 77-7540 For Timing Gear Key.	
18	77-7560	Base – Engine	1
★20	77-7570	Seal – Oil	1
22	77-9070	Screw – Engine Base	1
25	77-7690	Piston Assy. (Std.)	1
26	77-7700	Ring Set (Std.)	1
27	77-7710	Lock – Piston Pin	1
28	77-9340	Pin Assy. – Piston	1
29	77-7670	Rod – Connecting	1
32	77-9350	Screw – Connecting Rod	1
46	77-7490	Gear – Cam	1
★116A	77-7660	O-Ring	1
188	77-9360	Screw – Hex. Head	1

Ref. No.	Part No.	Description	No. Used
219	77-7500	Gear – Governor	1
227	77-7370	Lever Assy. – Governor	1
230	77-7470	Washer	1
305	77-8310	Screw – Hex. Head	1
523	77-7260	Dipstick – Oil	1
★524	77-7270	Seal – O-Ring	1
525	77-7280	Tube – Oil Filler	1
562	77-7380	Bolt – Governor Lever	1
592	77-7390	Nut – Hex.	1
615	77-7480	Pushnut	1
616	77-7460	Crank – Governor	1
741	77-7530	Gear – Timing	1
819	77-7450	Screw – Cap	1
★842	77-7300	Seal – O-Ring	1
979	77-7650	Cover – Oil Pump	1
1024	77-7640	Pump – Oil	1

★ Included in Gasket Set—Part No. 77-8900

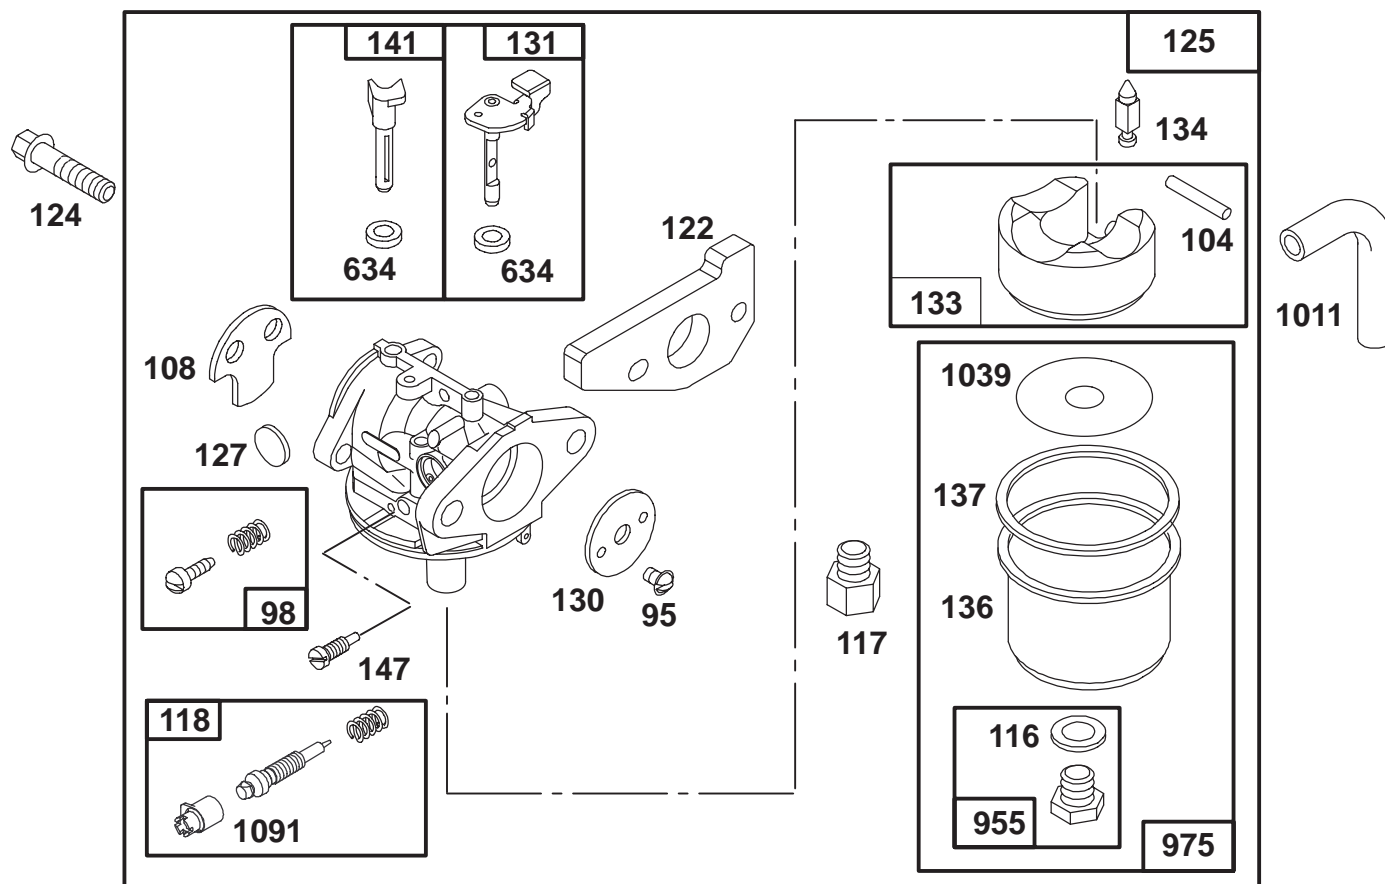

Assemblies include all parts shown in frames.


## ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
95	77-8090	Screw - Valve Mtg.	1
98	77-8240	Screw - Idle Adj.	1
●104	77-8180	Pin - Float Hinge	1
108	77-9600	Valve - Choke	1
●◆116	77-8210	Sealing - Gasket	1
●117	77-9610	Jet - Main	1
		<b>Note:</b> For High Altitude Jet Order Part No. 94-1650	1
●118	77-9620	Valve & Spring - Needle	1
●122	77-7820	Adapter Assy.	1
124	77-7970	Screw - Hex. Head (carb. mtg.)	1
125	77-9630	Carburetor Assy.	1
●127	77-8100	Plug - Welch	1
130	77-8080	Valve - Throttle	1
131	77-8160	Shaft - Throttle	1

Ref. No.	Part No.	Description	No. Used
133	77-8170	Float - Carburetor	1
●134	77-8110	Valve - Inlet (Includes Seat)	1
136	77-7240	Bowl - Fuel	1
●◆137	77-8200	Gasket - Float Bowl	1
141	77-8130	Shaft - Choke	1
147	77-9640	Adapter - Jet	1
		<b>Note:</b> For High Altitude Jet Order Part No. 77-9000	1
◆634	77-8150	Washer - Seal	1
955	77-8220	Screw - Hex. Head	1
975	77-8190	Bowl Assy. - Carburetor	1
1011	77-8040	Tube - Vent	1
●1039	77-7250	Limitier - Float	1
●1091	77-9650	Cap - Limiter	1

● Included in Carb. Overhaul Kit Part No.  
77-9580

◆ Included in Carb. Gasket Set Part No. 77-8930

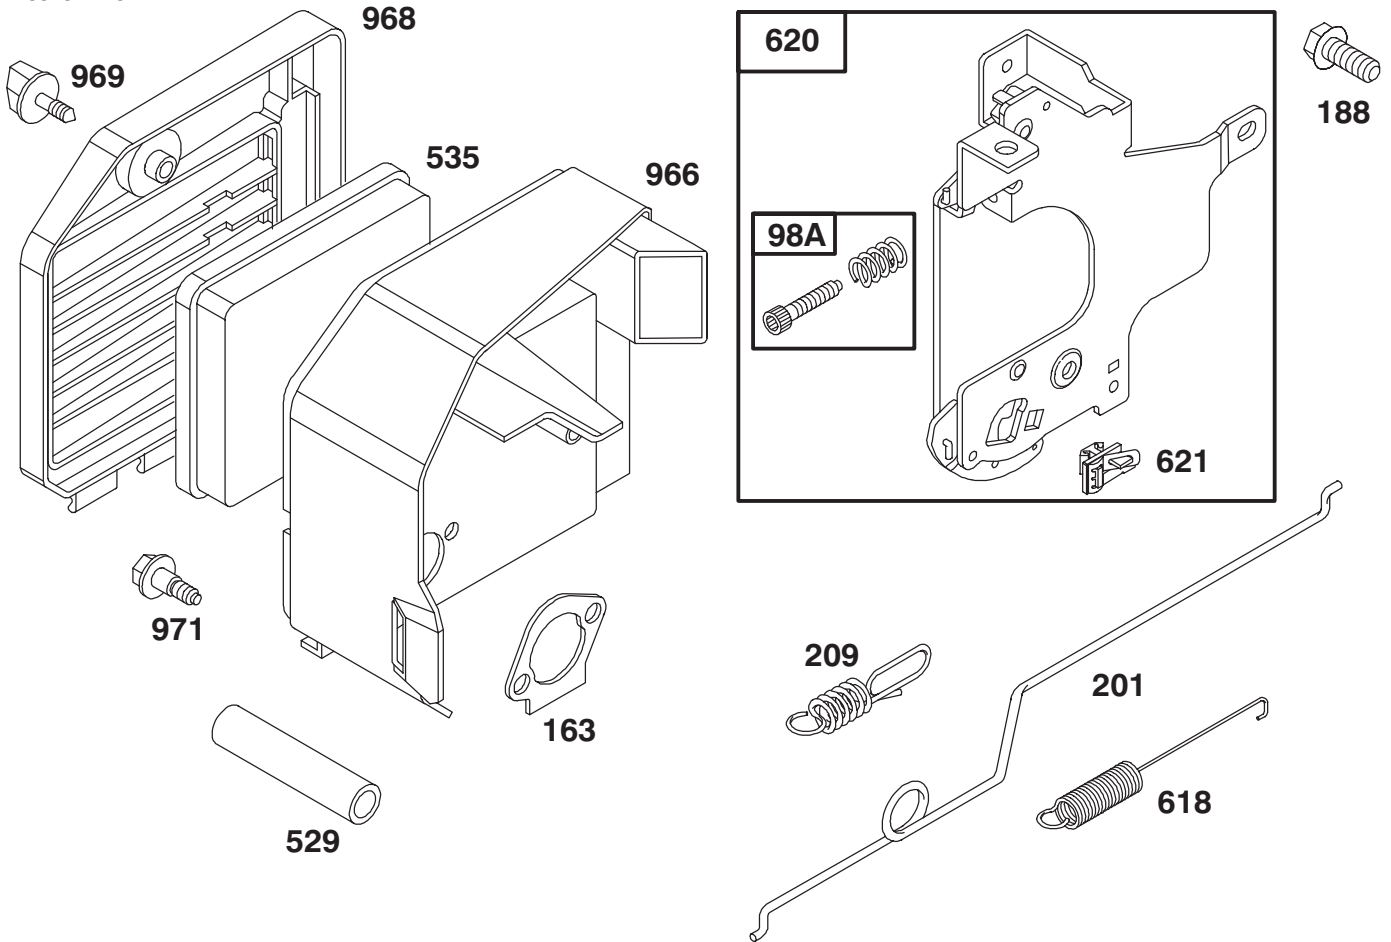


Assemblies include all parts shown in frames.

## ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
98A	77-8020	Screw Assy. - Speed Adj.	1
*163	77-7960	Gasket - Air Cleaner	1
188	77-9360	Screw - Hex. Head	1
201	77-7980	Link - Governor	1
209	77-7990	Spring - Governor	1
529	77-9470	Tube - Breather	1
535	77-7950	Element - Filter	1

Ref. No.	Part No.	Description	No. Used
618	77-8140	Spring - Choke	1
620	77-8000	Bracket - Carburetor	1
621	77-8010	Switch - Stop	1
966	77-7940	Base - Air Cleaner	1
968	77-7040	Cover - Air Cleaner	1
969	77-7920	Screw - Air Cleaner	1
971	77-7930	Screw - Air Cleaner	1

\* Included in Gasket Set - Part No. 77-8900

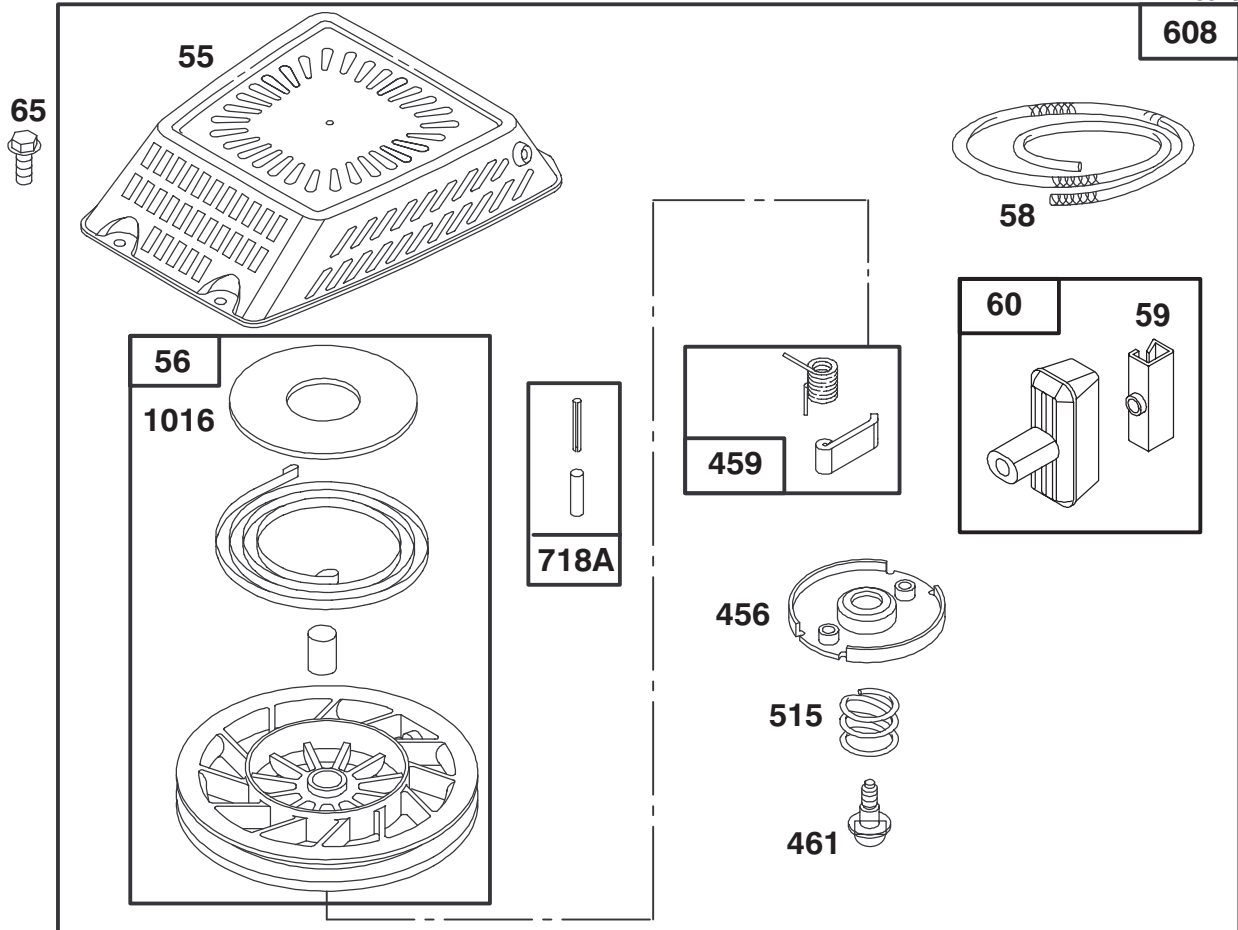


Assemblies include all parts shown in frames.

## ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
55	77-8890	Housing – Rewind Starter	1
56	77-9270	Pulley – Rewind Starter	1
58	77-8480	Rope – Starter (Cut To Suit)	1
59	77-7210	Insert – Rewind Handle	1
60	77-8520	Handle – Rewind Starter	1
65	77-8300	Screw – Hex. Head	1
456	77-8470	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	77-8530	Pawl – Starter	1
461	77-8490	Screw – Rewind Starter	1
515	77-8500	Spring – Torsion	1
608	77-8840	Starter Assy. – Rewind	1
718A	77-8550	Pin – Spring	1
1016	77-8570	Cover – Spring	1
	77-9020	Short Block	1

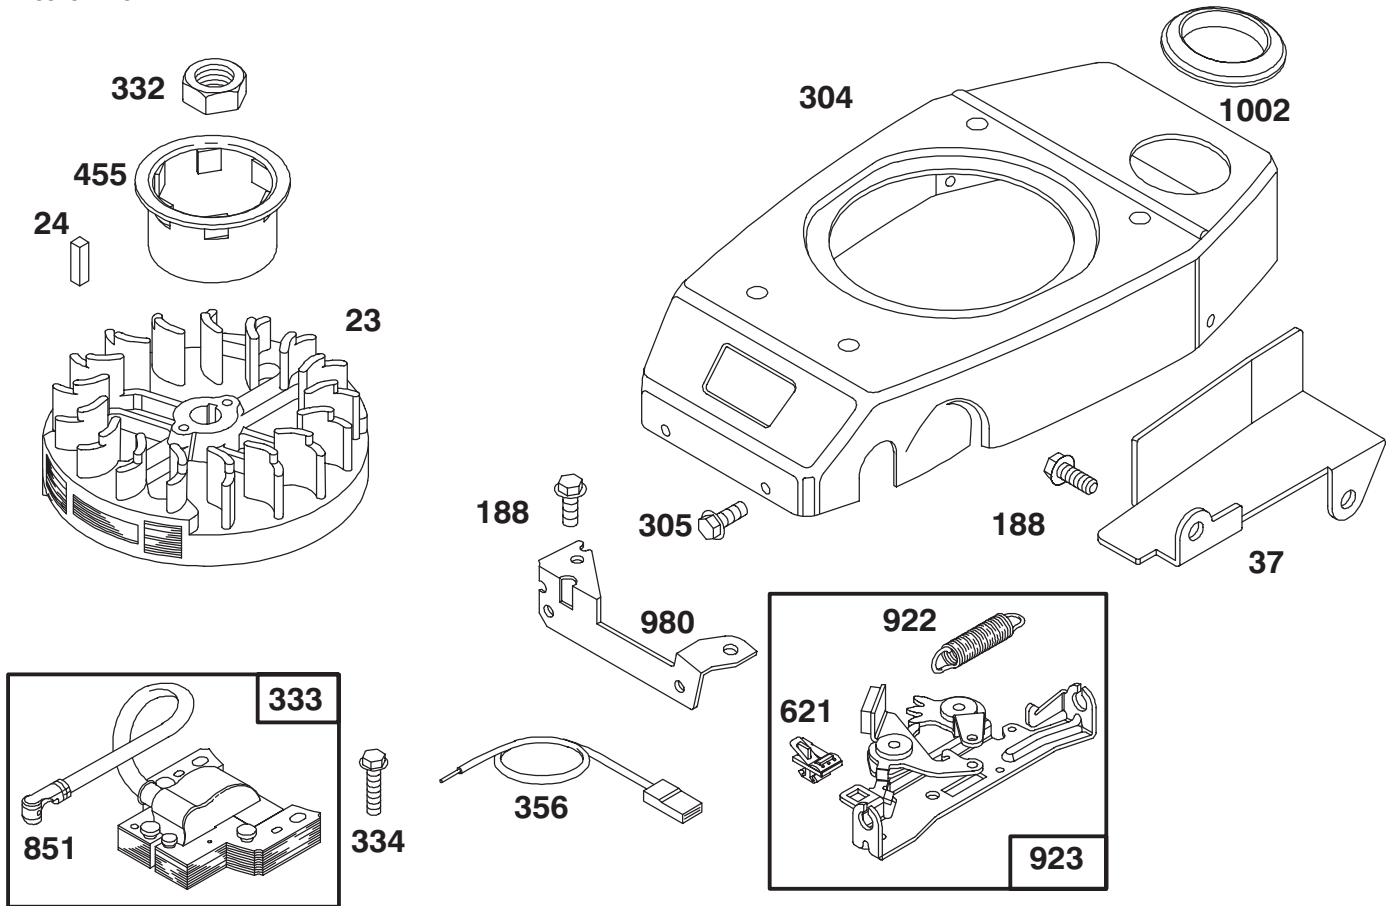


Assemblies include all parts shown in frames.

## ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
23	77-8330	Flywheel – Magneto	1
24	77-8340	Key – Flywheel	1
37	77-7190	Guard – Flywheel	1
188	77-9360	Screw – Hex. Head	1
304	77-8260	Housing – Blower	1
305	77-8310	Screw – Hex. Head	1
332	77-8360	Nut – Flywheel	1
333	77-8420	Armature – Magneto	1
334	77-9420	Screw – Armature Mtg.	1

Ref. No.	Part No.	Description	No. Used
356	77-8400	Wire – Ground	1
455	77-8350	Cup – Starter	1
621	77-8010	Switch – Stop	1
851	77-9450	Terminal – Spark Plug	1
922	77-8860	Spring – Brake	1
923	77-9460	Brake Assy.	1
980	77-7140	Bracket – Blower Hsg.	1
1002	77-7180	Grommet	1

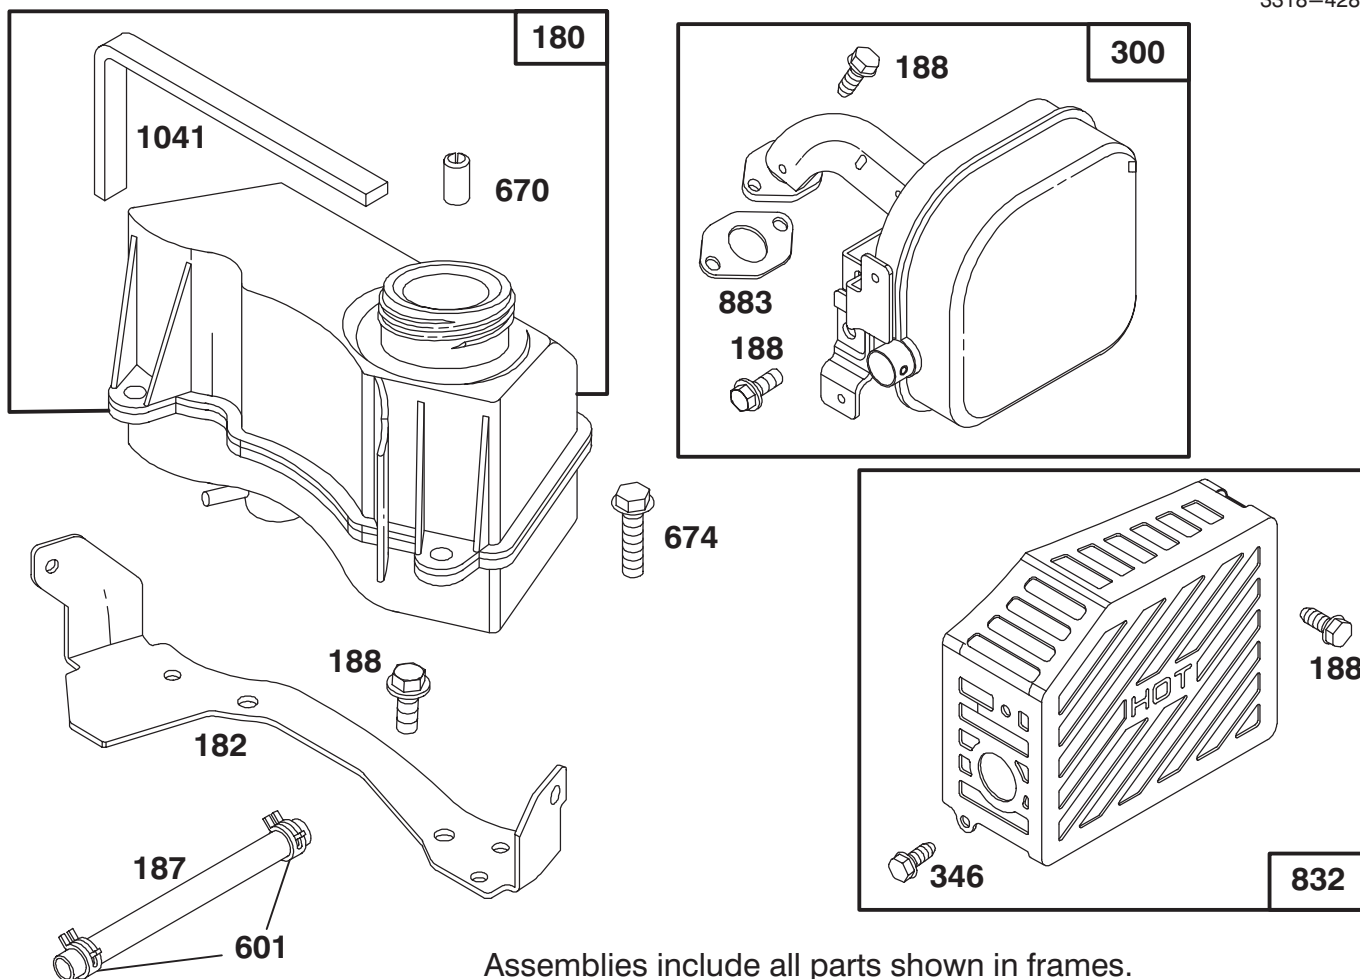




Assemblies include all parts shown in frames.

## ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
180	77-8580	Tank Assy. - Fuel	1
182	77-7170	Bracket - Fuel Tank	1
187	77-8620	Hose - Fuel (Cut To Suit)	1
188	77-9360	Screw - Hex. Head	1
300	77-8640	Muffler - Exhaust	1
346	77-9430	Screw - Hex.	1
601	78-4690	Clamp - Fuel Hose	1

Ref. No.	Part No.	Description	No. Used
670	77-9030	Spacer - Fuel Tank (Includes 2)	1
674	77-8600	Screw - Tank Mtg.	1
832	77-9290	Guard - Muffler	1
*883	77-7760	Gasket - Exhaust	1
*1041	77-8590	Seal - Foam	1

\* Included in Gasket Set-Part No. 77-8900

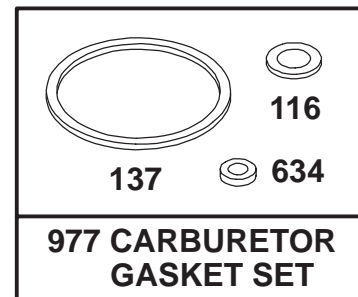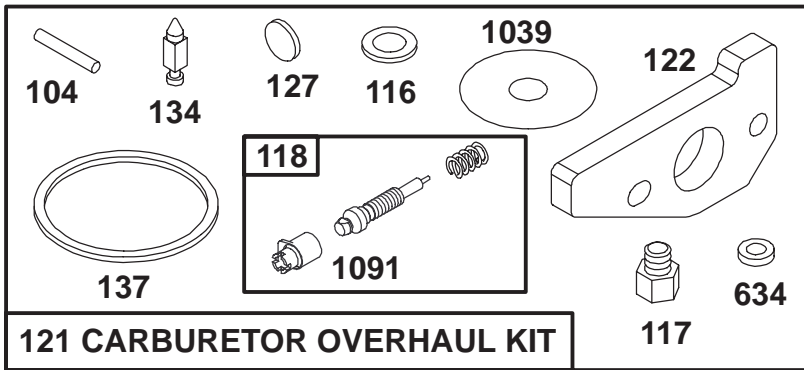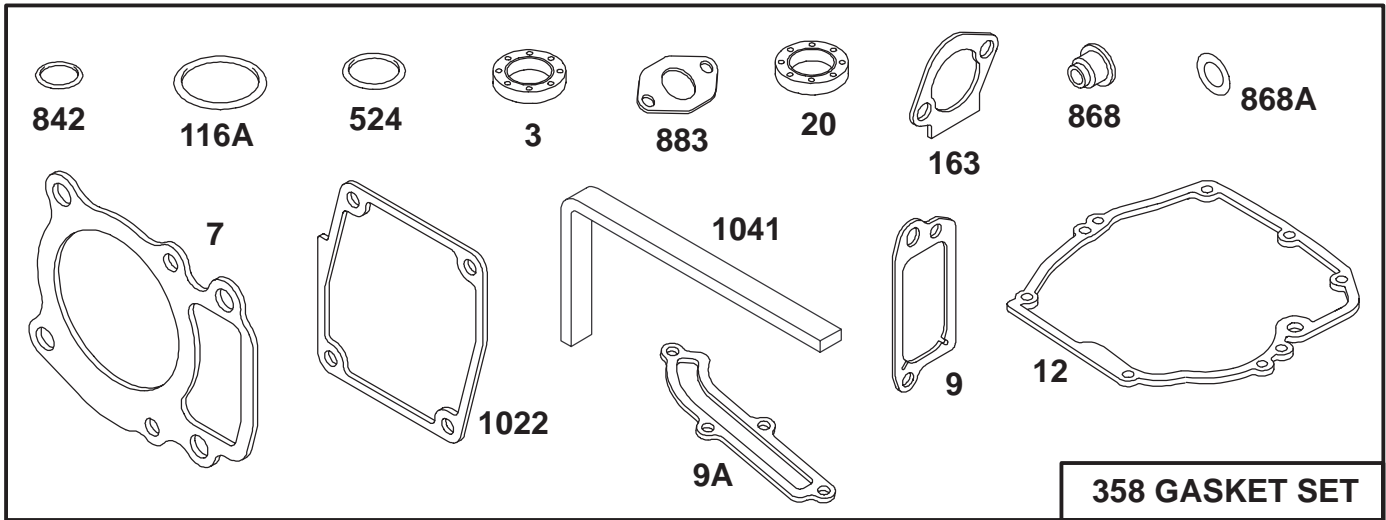

Assemblies include all parts shown in frames.

## ENGINE GTS 150

Ref. No.	Part No.	Description	No. Used
★3	77-9060	Seal – Oil	1
★7	77-7740	Gasket – Cylinder Head	1
★9	77-9250	Gasket – Breather	1
★9A	77-7410	Gasket – Breather	1
★12	77-7550	Gasket – Engine Base	1
★20	77-7570	Seal – Oil	1
●104	77-8180	Pin – Float Hinge	1
●◆116	77-8210	Gasket – Sealing	1
★116A	77-7660	O-Ring	1
●118	77-9620	Valve and Spring – Needle	1
121	77-9580	Carburetor Overhaul Kit	1
●122	77-7820	Adapter Assembly	1
●127	94-1651	Plug – Welch	1
●134	77-8110	Valve – Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137	77-8200	Gasket – Float Bowl	1
★163	77-7960	Gasket – Air Cleaner	1
358	77-8900	Gasket Set	1
★524	77-7270	Seal – O-Ring	1
◆634	77-8150	Washer – Seal	1
★842	77-7300	Seal – O-Ring	1
★868	77-7890	Seal Assy. – Valve	1
★868A	77-7900	Seal – Valve	1
★883	77-7760	Gasket – Exhaust	1
977	77-8930	Carburetor Gasket Set	1
★1022	77-7320	Gasket – Rocker Cover	1
●1039	77-7250	Limiter – Float	1
★1041	77-8590	Seal – Foam	1
●1091	77-9650	Cap – Limiter	1

● Incl. in Carburetor Overhaul Kit—Part No. 77-9580  
 ◆ Included in Carburetor Gasket Set—Part No. 77-8930

★ Included in Gasket Set—Part No. 77-8900

# TORO PART NUMBER INDEX

3318-428

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
14-9949	Wheel & Tire Assembly	1	20	2	66-0030	Bracket - Cable Support	3	5	1
14-9959	Wheel Tire & Gear Assy.	4	31	2	66-0330	Support - Spacer	7	2	2
16-1769	Housing - 53cm	1	4	1	66-0360	Cap - End	4	5	2
16-8729	Control Panel Assembly	6	9	1	66-0540	Arm - Spring Front	1	25	2
17-9426	Screw - Handle	7	1	2	66-0560	Screw - Shoulder	1	19	2
19-4050	Knob - Handle Release	6	10	2	66-0570	Guide - Belt	3	11	1
25-7740	Knob - Arm	4	3	2	66-0580	Arm - Pivot	2	30	2
25-7740	Knob - Arm	1	28	2	66-0620	Retainer - Belt	1	16	1
26-0670	Bolt - Blade	3	8	1	66-5350	Lever - Control	7	5	1
27-6231	Bolt - Wheel	1	22	2	66-6040	Key - Rocking (R.H.)	4	*	1
27-6231	Bolt - Wheel	4	33	2	66-6050	Key - Rocking (L.H.)	4	27	1
27-6250	Bushing - Wheel	1	21	2	70-9760	Bushing - Sleeve	4	19	2
27-6250	Bushing - Wheel	4	32	4	71-0960	Support - Cable	7	8	1
29-9570	Bushing - Yoke	4	38	1	71-7900	Cap - Hinge Bolt L.H.	1	10	1
36-4780	Washer - Thrust	4	44	1	71-7910	Cap - Hinge Bolt R.H.	1	6	1
36-4791	Washer - Thrust	5	48	2	71-8090	Mount - Handle L.H.	6	12	1
36-8070	V-Belt	4	13	1	71-8100	Mount - Handle R.H.	6	11	1
38-7820	Bearing - Ball	5	60	1	71-8580	Spacer - Door	1	12	2
40-1940	Washer - Wheel Bolt	1	23	4	71-9470	Door - Bag	8	3	1
46-5520	Lever - Traction	7	7	1	71-9480	Handle - Door	8	2	1
46-6432	Screw - Handle	7	9	1	71-9640	Ramp - Discharge	1	27	1
48-2060	Bearing - Needle	4	21	2	71-9650	Access - Cover	1	14	1
49-2040	Screw - Self Tapping	4	8	8	71-9680	Bag - Grass 53cm	8	5	1
52-7430	Control Bar Assembly	7	3	1	71-9800	Door - Discharge	1	9	1
55-3760	Gear - Pinion 15T	5	49	1	71-9840	Spring - Door	1	11	2
55-3770	Gear - 49T (1st Gear)	5	58	1	71-9870	Decal - Deck 53cm	2	29	1
55-3780	Gear - Pinion 20T	5	50	1	71-9873	Decal - Panel	6	7	1
55-3790	Gear - 44T (2nd Gear)	5	57	1	71-9920	Cover - Top	1	15	1
55-3800	Gear - Pinion 25T	5	51	1	71-9930	Frame - Grass Bag	8	4	1
55-3810	Gear - 39T (3rd Gear)	5	56	1	74-1660	Cover - Wheel	4	30	2
60-8710	Case - Gear (Upper)	5	61	1	74-1671	Spacer - Wheel Cover	4	34	2
60-8730	Cover - Gear Case	5	46	1	76-0760	Key - Shift	4	41	2
60-8750	Bushing - Intrmdt. Shaft	5	47	2	76-0770	Collar - Shift	4	42	1
60-8770	Bushing - Output Shaft	5	45	1	76-0780	Sleeve - Shift Key	4	40	1
60-8790	Sleeve - Gear	5	55	1	76-0920	Lever - Shift	4	16	1
60-8800	Shaft - Intermediate	5	52	1	76-2930	Retainer - Cable	4	15	1
60-8810	Retainer - Shift Fork	4	39	1	77-7040	Cover - Air Cleaner	12	968	1
60-8840	Pulley - Half	4	10	2	77-7140	Bracket - Blower Hsg.	14	980	1
60-8850	Bushing - Output Shaft	5	53	1	77-7170	Bracket - Fuel Tank	15	182	1
60-8870	Yoke - Shift	4	37	1	77-7180	Grommet	14	1002	1
60-8890	Pinion - Bevel	5	59	1	77-7190	Guard - Flywheel	14	37	1
62-6660	Spacer	4	9	1	77-7210	Insert - Rewind Handle	13	59	1
62-6673	Gear Case Assy. Complete	5	*	1	77-7240	Bowl - Fuel	11	136	1
62-7540	Retainer - Blade	3	7	1	77-7250	Limiter - Float	11	1039	1
62-7550	Pulley - Engine	3	13	1	77-7250	Limiter - Float	16	1039	1
62-7700	Blade - 21	3	10	1	77-7260	Dipstick - Oil	10	523	1
65-2720	Ring - Retaining	4	24	4	77-7270	Seal - O-Ring	10	524	1
65-4710	Ring - Friction	4	25	2	77-7270	Seal - O-Ring	16	524	1
65-4720	Spring - Compression	4	29	2	77-7280	Tube - Oil Filler	10	525	1
65-4730	Washer - Thrust (Inner)	4	22	2	77-7300	Seal - O-Ring	10	842	1
65-4740	Washer - Thrust (Keyed)	4	23	4	77-7300	Seal - O-Ring	16	842	1
65-4750	Pinion	4	28	2	77-7320	Gasket - Rocker Cover	16	1022	1
65-4760	Washer - Clutch	4	26	2	77-7320	Gasket - Rocker Cover	9	1022	1
65-4770	Shaft - Output	4	17	1	77-7330	Plug - Spark	9	337	1
65-5042	Pivot Arm Assembly	4	2	2	77-7340	Elbow - Spark Plug	9	635	1
65-5190	Bracket - Belt Guide	4	7	1	77-7360	Screw - Hex. Head	9	10	1
65-5200	Cover	3	12	1	77-7370	Lever Assy. - Governor	10	227	1
65-5210	Screw - Thread Forming	1	7	2	77-7380	Bolt - Governor Lever	10	562	1
65-5220	Screw - Cap Socket Hd.	1	26	2	77-7390	Nut - Hex.	10	592	1
65-5220	Screw - Socket Hd. Cap	4	36	2	77-7400	Cover - Breather	9	572	1
65-5250	Clip - Spring	4	43	1	77-7410	Gasket - Breather	9	9A	1
65-5440	Spring Arm Assembly	4	4	2	77-7410	Gasket - Breather	16	9A	1
65-5660	Panel - Screen	1	2	1	77-7420	Screw - Breather Cover	9	307	1
66-0020	Panel - Vertical	1	1	1	77-7450	Screw - Cap	10	819	1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
77-7460	Crank - Governor	10 616 1	77-8110	Valve - Inlet	16 134 1
77-7470	Washer	10 230 1	77-8130	Shaft - Choke	11 141 1
77-7480	Pushnut	10 615 1	77-8140	Spring - Choke	12 618 1
77-7490	Gear - Cam	10 46 1	77-8150	Washer - Seal	11 634 1
77-7500	Gear - Governor	10 219 1	77-8150	Washer - Seal	16 634 1
77-7530	Gear - Timing	10 741 1	77-8160	Shaft - Throttle	11 131 1
77-7550	Gasket - Engine Base	10 12 1	77-8170	Float - Carburetor	11 133 1
77-7550	Gasket - Engine Base	16 12 1	77-8180	Pin - Float Hinge	11 104 1
77-7560	Base - Engine	10 18 1	77-8180	Pin - Float Hinge	16 104 1
77-7570	Seal - Oil	10 20 1	77-8190	Bowl Assy. - Carburetor	11 975 1
77-7570	Seal - Oil	16 20 1	77-8200	Gasket - Float	11 137
77-7590	Cylinder Assy.	9 1 1	77-8200	Gasket - Float	16 137
77-7600	Pin - Cylinder	9 718 1	77-8210	Gasket - Sealing	16 116 1
77-7610	Tappet - Valve	9 45 1	77-8210	Sealing - Gasket	11 116 1
77-7620	Rod - Push	9 1026 1	77-8220	Screw - Hex. Head	11 955 1
77-7630	Screw - Cylinder Head	9 13 1	77-8240	Screw - Idle Adj.	11 98 1
77-7640	Pump - Oil	10 1024 1	77-8260	Housing - Blower	14 304 1
77-7650	Cover - Oil Pump	10 979 1	77-8300	Screw - Hex. Head	13 65 1
77-7660	O-Ring	10 116A 1	77-8310	Screw - Hex. Head	10 305 1
77-7660	O-Ring	16 116A 1	77-8310	Screw - Hex. Head	14 305 1
77-7670	Rod - Connecting	10 29 1	77-8330	Flywheel - Magneto	14 23 1
77-7690	Piston Assy. (Std.)	10 25 1	77-8340	Key - Flywheel	14 24 1
77-7700	Ring Set (Std.)	10 26 1	77-8350	Cup - Starter	14 455 1
77-7710	Lock - Piston Pin	10 27 1	77-8360	Nut - Flywheel	14 332 1
77-7730	Head - Cylinder	9 5 1	77-8400	Wire - Ground	14 356 1
77-7740	Gasket - Cylinder Head	16 7 1	77-8420	Armature - Magneto	14 333 1
77-7740	Gasket - Cylinder Head	9 7 1	77-8470	Retainer - Rewind	13 456 1
77-7760	Gasket - Exhaust	15 883 1	77-8480	Rope - Starter	13 58 1
77-7760	Gasket - Exhaust	16 883 1	77-8490	Screw - Rewind Starter	13 461 1
77-7760	Gasket - Exhaust	9 883 1	77-8500	Spring - Torsion	13 515 1
77-7770	Guide - Push Rod	9 1034 1	77-8520	Handle - Rewind Starter	13 60 1
77-7780	Stud - Rocker Arm	9 166 1	77-8530	Pawl - Starter	13 459 1
77-7790	Arm - Rocker	9 1029 1	77-8550	Pin - Spring	13 718A 1
77-7800	Cap - Valve	9 238 1	77-8570	Cover - Spring	13 1016 1
77-7810	Spring - Valve	9 35 1	77-8580	Tank Assy. - Fuel	15 180 1
77-7820	Adapter Assembly	16 122 1	77-8590	Seal - Foam	15 1041 1
77-7820	Adapter Assy.	9 122 1	77-8590	Seal - Foam	16 1041 1
77-7820	Adapter Assy.	11 122 1	77-8600	Screw - Tank Mtg.	15 674 1
77-7860	Valve - Exhaust	9 33 1	77-8620	Hose - Fuel	15 187 1
77-7870	Retainer - Spring	9 40 1	77-8640	Muffler - Exhaust	15 300 1
77-7880	Valve - Intake	9 34 1	77-8840	Starter Assy. - Rewind	13 608 1
77-7890	Seal Assy. - Valve	16 868 1	77-8860	Spring - Brake	14 922 1
77-7890	Seal Assy. - Valve	9 868 1	77-8890	Housing - Rewind	13 55 1
77-7900	Gasket - Valve	9 868A 1	77-8900	Gasket Set	16 358 1
77-7900	Seal - Valve	16 868A 1	77-8930	Carburetor Gasket Set	16 977 1
77-7910	Ball & Screw - Rocker	9 192 1	77-9020	Short Block	13 1 1
77-7920	Screw - Air Cleaner	12 969 1	77-9030	Spacer - Fuel Tank	15 670 1
77-7930	Screw - Air Cleaner	12 971 1	77-9060	Seal - Oil	9 3 1
77-7940	Base - Air Cleaner	12 966 1	77-9060	Seal - Oil	16 3 1
77-7950	Element - Filter	12 535 1	77-9070	Screw - Engine Base	10 22 1
77-7960	Gasket - Air Cleaner	12 163 1	77-9200	Screw - Hex. Head	9 10A 1
77-7960	Gasket - Air Cleaner	16 163 1	77-9240	Plug - Pipe	10 15 1
77-7970	Screw - Hex. Head	11 124 1	77-9250	Gasket - Breather	9 9 1
77-7980	Link - Governor	12 201 1	77-9250	Gasket - Breather	16 9 1
77-7990	Spring - Governor	12 209 1	77-9270	Pulley - Rewind Starter	13 56 1
77-8000	Bracket - Carburetor	12 620 1	77-9290	Guard - Muffler	15 832 1
77-8010	Switch - Stop	12 621 1	77-9300	Breather Assy.	9 8 1
77-8010	Switch - Stop	14 621 1	77-9310	Screw - Set	9 192A 1
77-8020	Screw Assy. - Speed	12 98A 1	77-9320	Cover - Valve	9 1023 1
77-8040	Tube - Vent	11 1011 1	77-9330	Crankshaft	10 16 1
77-8080	Valve - Throttle	11 130 1	77-9340	Pin Assy. - Piston	10 28 1
77-8090	Screw - Valve Mtg.	11 95 1	77-9350	Screw - Connecting Rod	10 32 1
77-8100	Plug - Welch	11 127 1	77-9360	Screw - Hex. Head	10 188 1
77-8110	Valve - Inlet	11 134 1	77-9360	Screw - Hex. Head	12 188 1

\*Not Illustrated

# TORO PART NUMBER INDEX (Cont.)

3318-428

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
77-9360	Screw - Hex. Head	14	188	1	93-7198	Gas Cap Assembly	3	4	1
77-9360	Screw - Hex. Head	15	188	1	94-1604	Engine	3	1	1
77-9410	Tube - Breather	9	11	1	94-1651	Plug - Welch	16	127	1
77-9420	Screw - Armature Mtg.	14	334	1	94-4910	Handle	6	5	1
77-9430	Screw - Hex.	15	346	1	2210-249	Clamp - Throttle	3	15	1
77-9450	Terminal - Spark Plug	14	851	1	2210-316	Stop - Rope	3	18	1
77-9460	Brake Assy.	14	923	1	237-153	Seal - ORing	4	18	2
77-9470	Tube - Breather	12	529	1	302-56	Fitting - Grease	4	20	2
77-9550	Cover - Brake	3	19	1	321-3	Screw - Cap Hex. Hd.	7	6	1
77-9580	Carburetor Overhaul Kit	16	121	1	321-52	Screw - Hex Hd. Cap	7	14	1
77-9600	Valve - Choke	11	108	1	322-29	Screw - Hex Hd. Cap	1	8	2
77-9610	Jet - Main	11	117	1	3253-22	Washer - Blade	3	9	1
77-9620	Valve & Spring -	11	118	1	3256-22	Washer - Flat	7	11	1
77-9620	Valve and Spring -	16	118	1	3256-24	Washer - Flat	4	12	1
77-9630	Carburetor Assy.	11	125	1	3256-24	Washer - Flat	1	17	1
77-9640	Adapter - Jet	11	147	1	3272-5	Pin - Cotter	4	14	1
77-9650	Cap - Limiter	11	1091	1	3290-378	Tie - Cable	6	6	5
77-9650	Cap - Limiter	16	1091	1	3296-5	Nut - Lock	4	11	1
78-4690	Clamp - Fuel Hose	15	601	1	3296-6	Nut - Lock	1	24	4
86-7990	Screw - Clamp	3	16	1	3296-6	Nut - Lock	4	35	2
92-2289	Plate - TORO Logo	3	2	1	3296-42	Nut - Lock	7	4	3
92-9665	Screw - Self Tapping	6	8	5	3296-58	Nut - Lock	7	12	2
93-3772	Guide - Rope	7	13	1	32121-120	Pin - Coil	5	54	1
93-4105	Decal - Danger	1	13	1	32144-15	Screw - Hex Flange Hd.	1	18	1
93-4355	Decal - Recoil	3	3	1	32144-70	Screw - Cap Hex. Hd.	1	3	6
93-6628	Cable - Brake	7	15	1	32144-70	Screw - Hex Hd. Cap	3	6	7
93-6631	Control - Throttle	6	4	1	32144-70	Screw - Hex. Washer Hd.	4	1	5
93-6632	Control - Ground Speed	6	1	1	32144-102	Screw - Thread Forming	3	14	3
93-6634	Cable - Traction	7	10	1	32144-111	Screw - Index Hex Washer	8	1	5
93-6662	Decal - Instruction	6	3	1					

\*Not Illustrated

