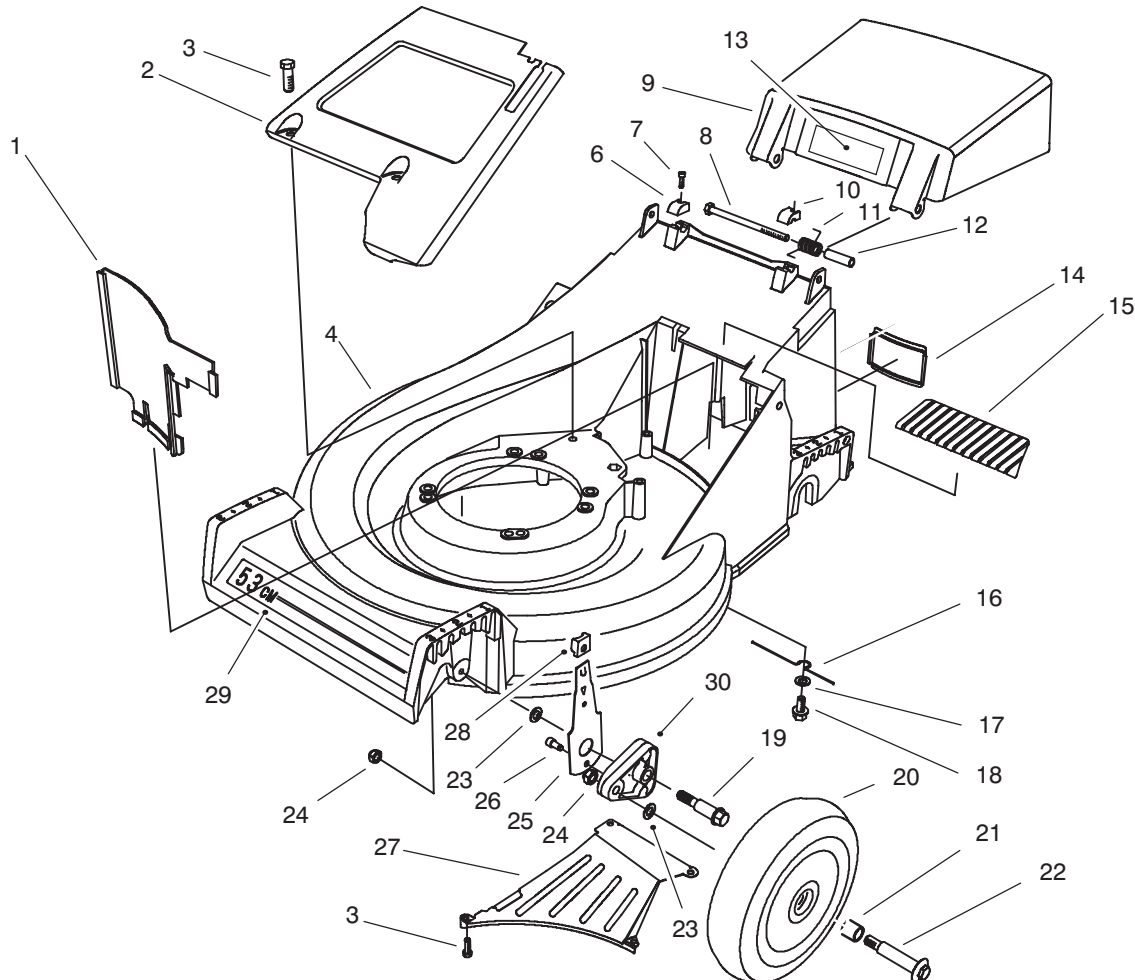 



TORO®
MODEL NO. 26643B-6900001 & UP
MODEL NO. 26643-7900001 & UP
PARTS
CATALOG
53cm REAR BAGGING MOWER


C-2301A

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0020	Panel - Vertical	1
2	65-5660	Panel - Screen	1
3	32144-70	Screw - Cap Hex. Hd.	6
4	16-1769	Housing - 53cm (Incl. Ref. #5 & 29)	1
6	71-7910	Cap - Hinge Bolt R.H.	1
7	65-5210	Screw - Thread Forming	2
8	322-29	Screw - Hex Hd. Cap	2
9	17-1569	Door - Discharge (Incl. Ref. #13)	1
10	71-7900	Cap - Hinge Bolt L.H.	1
11	71-9840	Spring - Door	2
12	71-8580	Spacer - Door	2
13	93-4105	Decal - Danger	1
14	71-9650	Access - Cover	1
15	71-9920	Cover - Top	1

Ref. No.	Part No.	Description	No. Used
16	66-0620	Retainer - Belt	1
17	3256-24	Washer - Flat	1
18	32144-15	Screw - Hex Flange Hd.	1
19	66-0560	Screw - Shoulder	2
20	14-9949	Wheel & Tire Assembly (Incl. Ref. #21)	2
21	27-6250	Bushing - Wheel	4
22	27-6231	Bolt - Wheel	2
23	40-1940	Washer - Wheel Bolt	4
24	3296-6	Nut - Lock	4
25	66-0540	Arm - Spring Front	2
26	65-5220	Screw - Cap Socket Hd.	2
27	71-9640	Ramp - Discharge	1
28	25-7740	Knob - Arm	2
29	71-9870	Decal - Deck 53cm	1
30	66-0580	Arm - Pivot Front	2

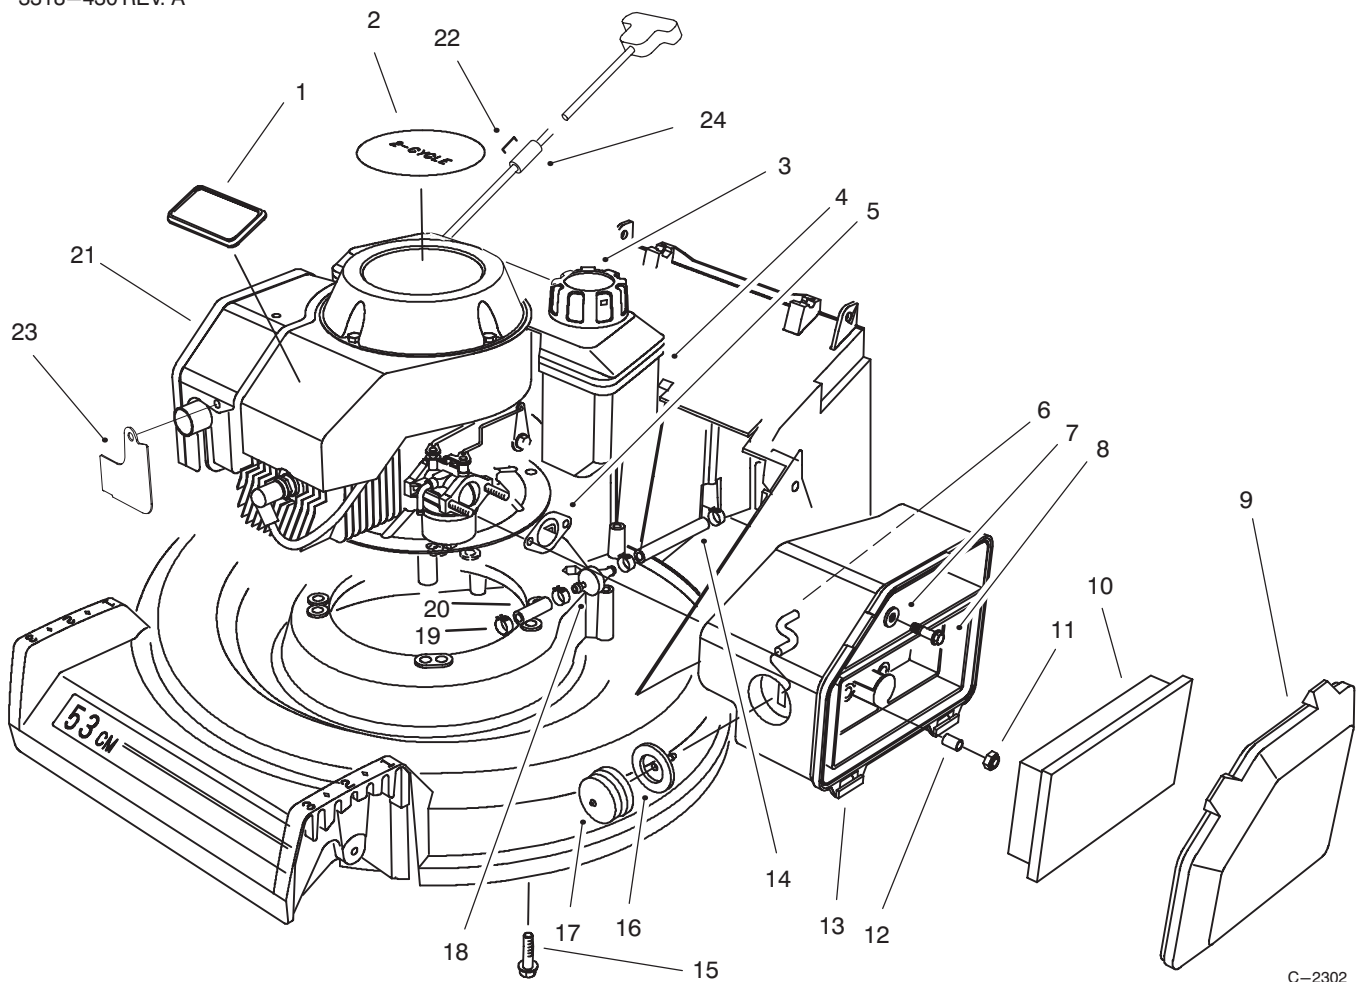 


C-2302

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	46-8290	Plate - Logo Toro	1
2	57-3110	Decal - Recoil	1
3	93-7199	Gas Cap Assembly	1
4	81-0162	Fuel Tank Assembly	1
5	81-0090	Gasket - Air Cleaner	1
6	44-3172	Hose - Primer	1
7	3256-16	Washer - Flat	1
8	51-2690	Screw - Hex Washer Hd.	1
9	63-9340	Cover - Air Cleaner	1
10	63-9380	Foam Element - Air Cleaner	1
11	50-7180	Nut - Lock	2
12	62-3980	Spacer	2

Ref. No.	Part No.	Description	No. Used
13	63-9330	Body - Air Cleaner	1
14	51-3215	Hose - Fuel	1
15	66-9301	Screw - Engine Mount	3
16	44-2750	Body - Primer	1
17	66-7460	Bulb - Primer	1
18	71-9280	Filter - Fuel	1
19	2412-95	Clamp - Hose	4
20	51-3216	Hose - Fuel	1
21	51-0414	Engine Complete	1
†22		Staple	1
23	93-7661	Extension - Muffler Guard	1
24	81-3980	Stop - Rope	1

 † Obtain Locally

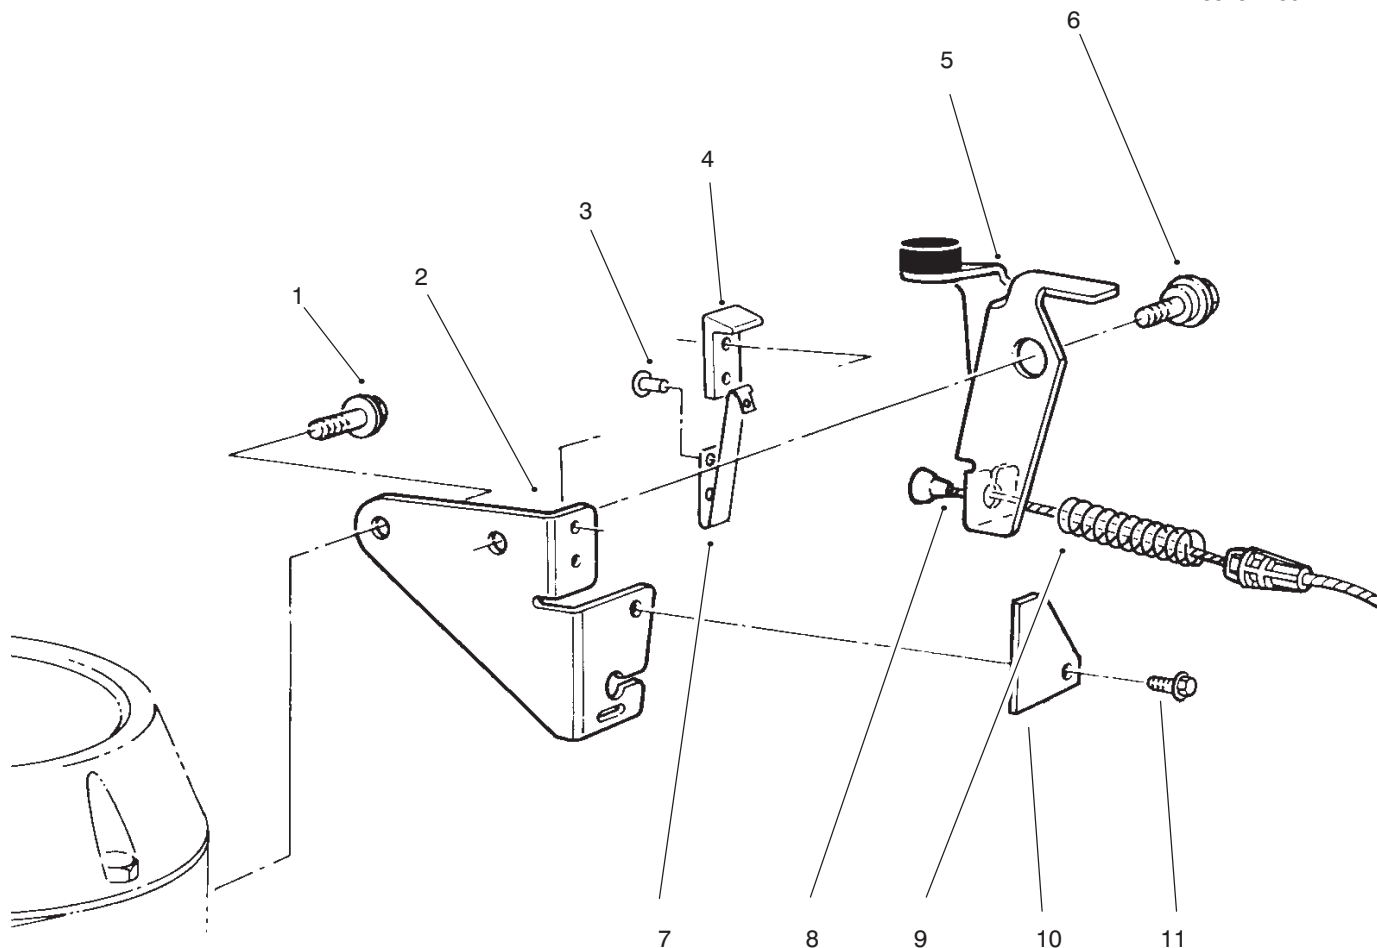


C-0531

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-10	Screw - Self Tapping	1
2	84-7820	Plate - Mounting	1
3	3290-459	Rivet	2
4	77-5260	Strap - Insulation	1
5	66-5380	Brake Plate Assembly	1
6	92-9698	Screw - Shoulder, Metric	1
7	60-9010	Strap - Ground	1

Ref. No.	Part No.	Description	No. Used
8	93-7027	Cable - Brake	1
9	66-5370	Spring - Compression	1
10	53-4690	Stop - Ground Strap	1
11	32144-112	Screw - Self Tapping	1
*	14-6009	Mounting Plate Assembly (Incl. Ref. #2-4 & 7)	1

 *Not Illustrated

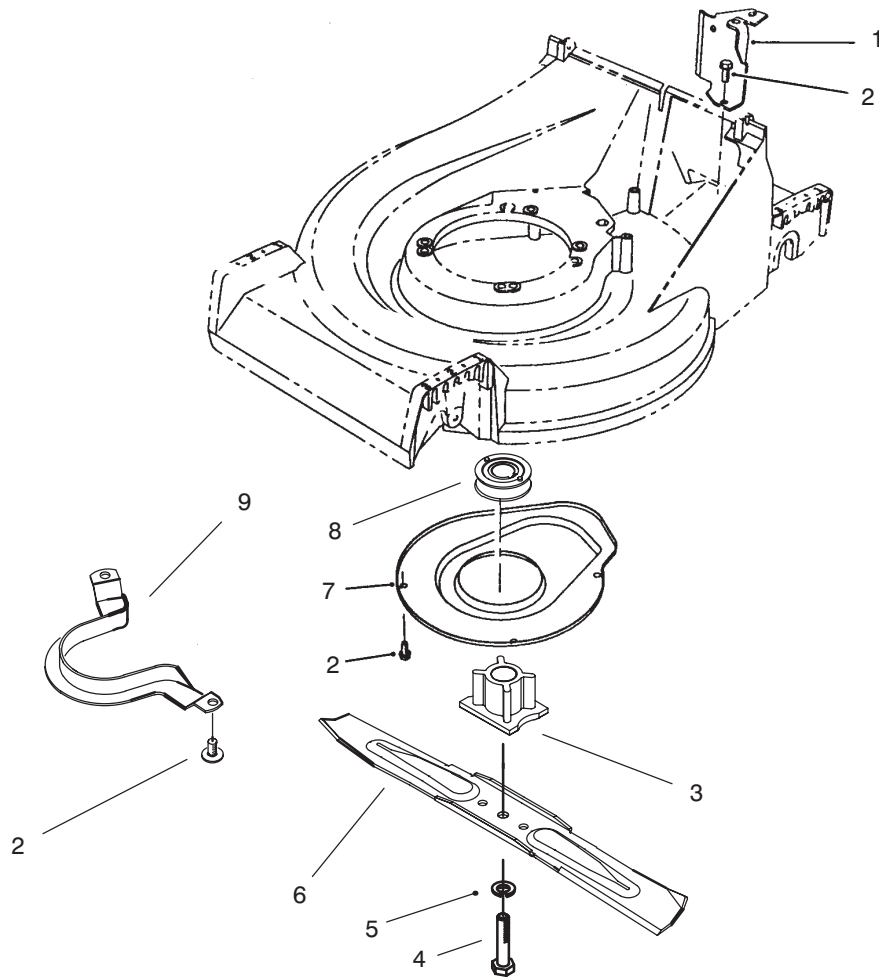


C-1591

BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	66-0030	Bracket - Cable Support	1
2	32144-70	Screw - Taptite	7
3	62-7540	Retainer - Blade	1
4	26-0670	Screw - Blade	1
5	3253-22	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
6	62-7700	Blade - 21"	1
7	65-5200	Shield - BBC	1
8	62-7550	Pulley - Drive	1
9	66-0570	Bracket - Belt Guide	1

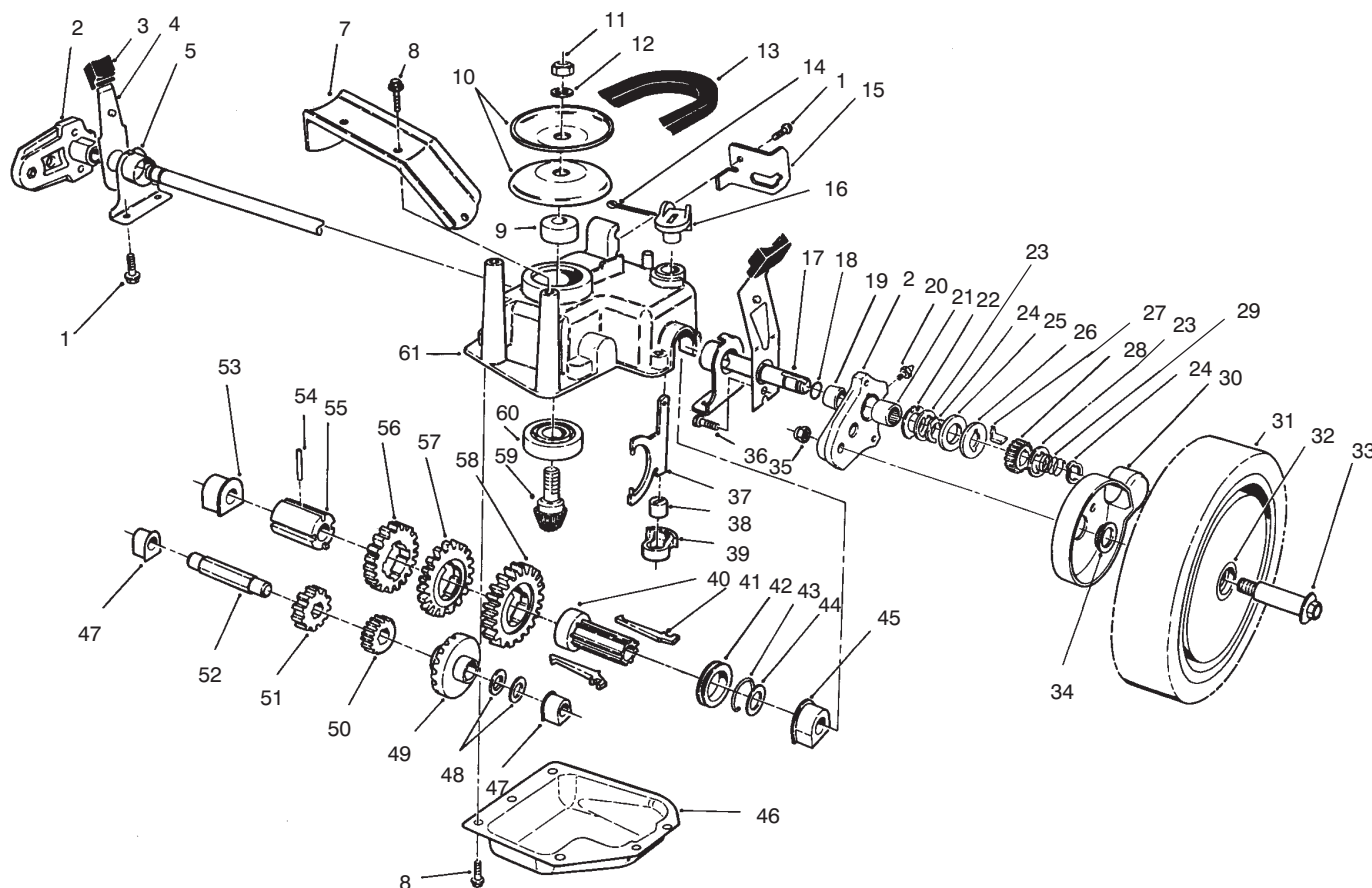 


C-1555

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Hex. Washer Hd.	5
2	65-5042	Pivot Arm Assembly (Incl. Ref. #19-21)	2
3	25-7740	Knob - Arm	2
4	65-5440	Spring Arm Assembly	2
5	66-0360	Cap - End	2
7	65-5190	Bracket - Belt Guide	1
8	49-2040	Screw - Self Tapping	8
9	62-6660	Spacer	1
10	60-8840	Pulley - Half	2
11	3296-5	Nut - Lock	1
12	3256-24	Washer - Flat	1
13	36-8070	V-Belt	1
14	3272-5	Pin - Cotter	1
15	76-2930	Retainer - Cable	1
16	76-0920	Lever - Shift	1
17	65-4770	Shaft - Output	1
18	237-153	Seal - "O"Ring	2
19	70-9760	Bushing - Sleeve	2
20	302-56	Fitting - Grease	2
21	48-2060	Bearing - Needle	2
22	65-4730	Washer - Thrust (Inner)	2
23	65-4740	Washer - Thrust (Keyed)	4

Ref. No.	Part No.	Description	No. Used
24	65-2720	Ring - Retaining	4
25	65-4710	Ring - Friction	2
26	65-4760	Washer - Clutch	2
27	66-6050	Key - Rocking (L.H.)	1
*	66-6040	Key - Rocking (R.H.)	1
28	65-4750	Pinion	2
29	65-4720	Spring - Compression	2
30	74-1660	Cover - Wheel	2
31	14-9959	Wheel Tire & Gear Assy. (Incl. Ref. #32)	2
32	27-6250	Bushing - Wheel	4
33	27-6231	Bolt - Wheel	2
34	74-1670	Spacer - Wheel Cover	2
35	3296-6	Nut - Lock	2
36	65-5220	Screw - Socket Hd. Cap	2
37	60-8870	Yoke - Shift	1
38	29-9570	Bushing - Yoke	1
39	60-8810	Retainer - Shift Fork	1
40	76-0780	Sleeve - Shift Key	1
41	76-0760	Key - Shift	2
42	76-0770	Collar - Shift	1
43	65-5250	Clip - Spring	1
44	36-4780	Washer - Thrust	1

 *Not Illustrated

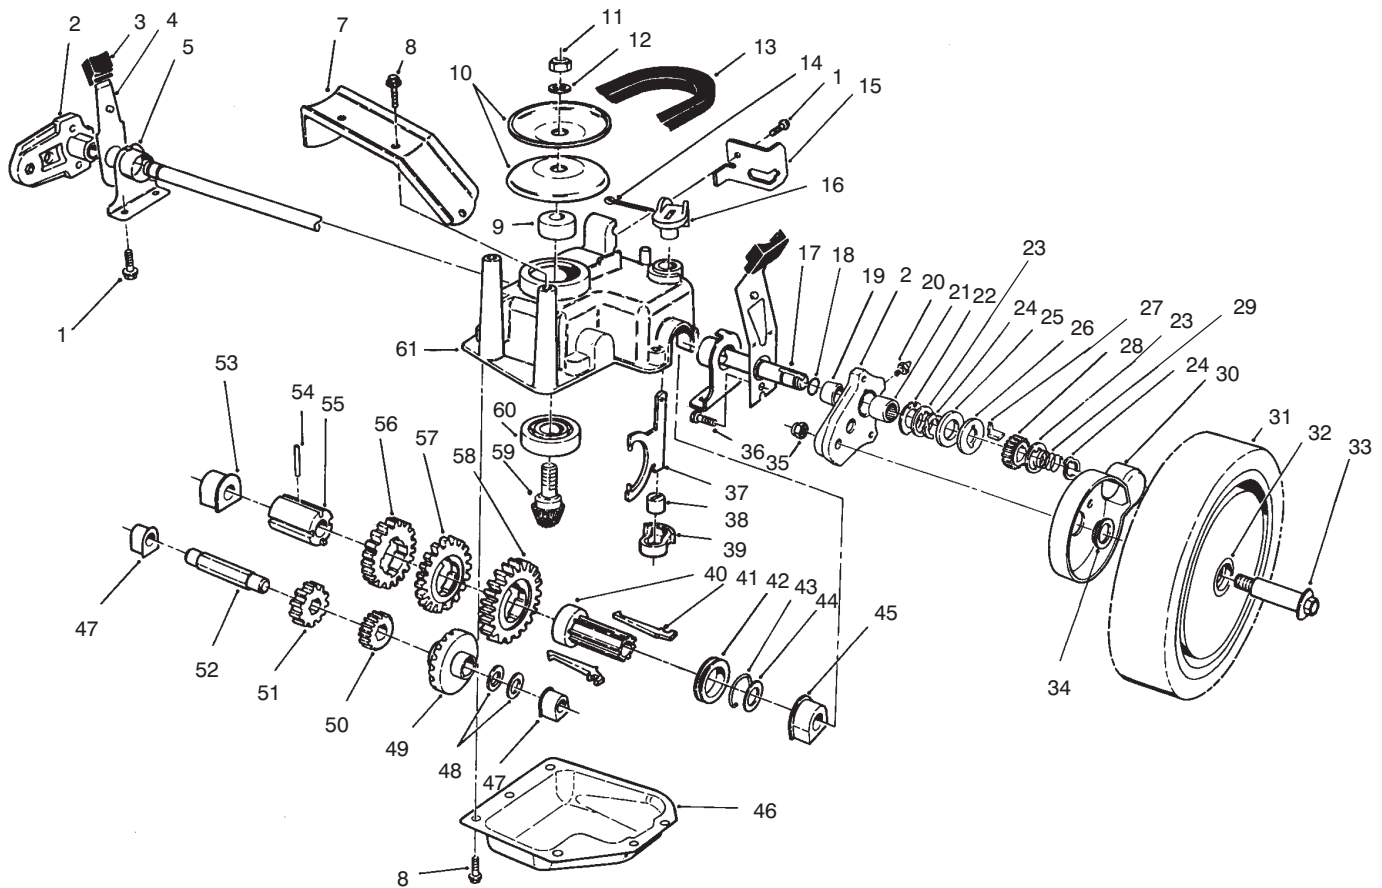


C-1555

GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	60-8770	Bushing - Output Shaft	1
46	60-8730	Cover - Gear Case	1
47	60-8750	Bushing - Intrmdt. Shaft	2
48	36-4791	Washer - Thrust	2
49	55-3760	Gear - Pinion 15T	1
50	55-3780	Gear - Pinion 20T	1
51	55-3800	Gear - Pinion 25T	1
52	60-8800	Shaft - Intermediate	1
53	60-8850	Bushing - Output Shaft	1

Ref. No.	Part No.	Description	No. Used
54	32121-120	Pin - Coil	1
55	60-8790	Sleeve - Gear	1
56	55-3810	Gear - 39T (3rd Gear)	1
57	55-3790	Gear - 44T (2nd Gear)	1
58	55-3770	Gear - 49T (1st Gear)	1
59	60-8890	Pinion - Bevel	1
60	38-7820	Bearing - Ball	1
61	60-8710	Case - Gear (Upper)	1
*	62-6673	Gear Case Assy. Complete	1

 *Not Illustrated

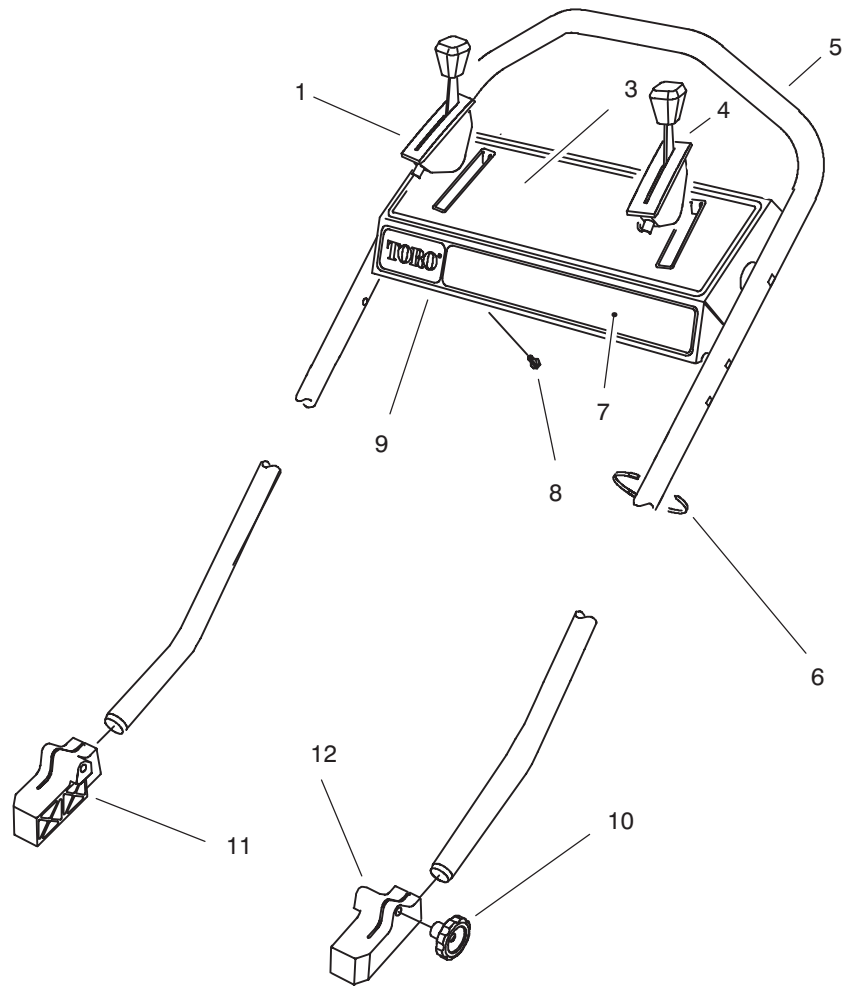


C-1569A

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-6632	Control - Ground Speed	1
3	93-6662	Decal - Instruction	1
4	93-6635	Control - Throttle	1
5	94-4910	Handle	1
6	3290-378	Tie - Cable	5
7	71-9874	Decal - Panel	1

Ref. No.	Part No.	Description	No. Used
8	92-9665	Screw - Self Tapping	5
9	16-8729	Control Panel Assembly (Incl. Ref. #3)	1
10	19-4050	Knob - Handle Release	2
11	71-8100	Mount - Handle R.H.	1
12	71-8090	Mount - Handle L.H.	1

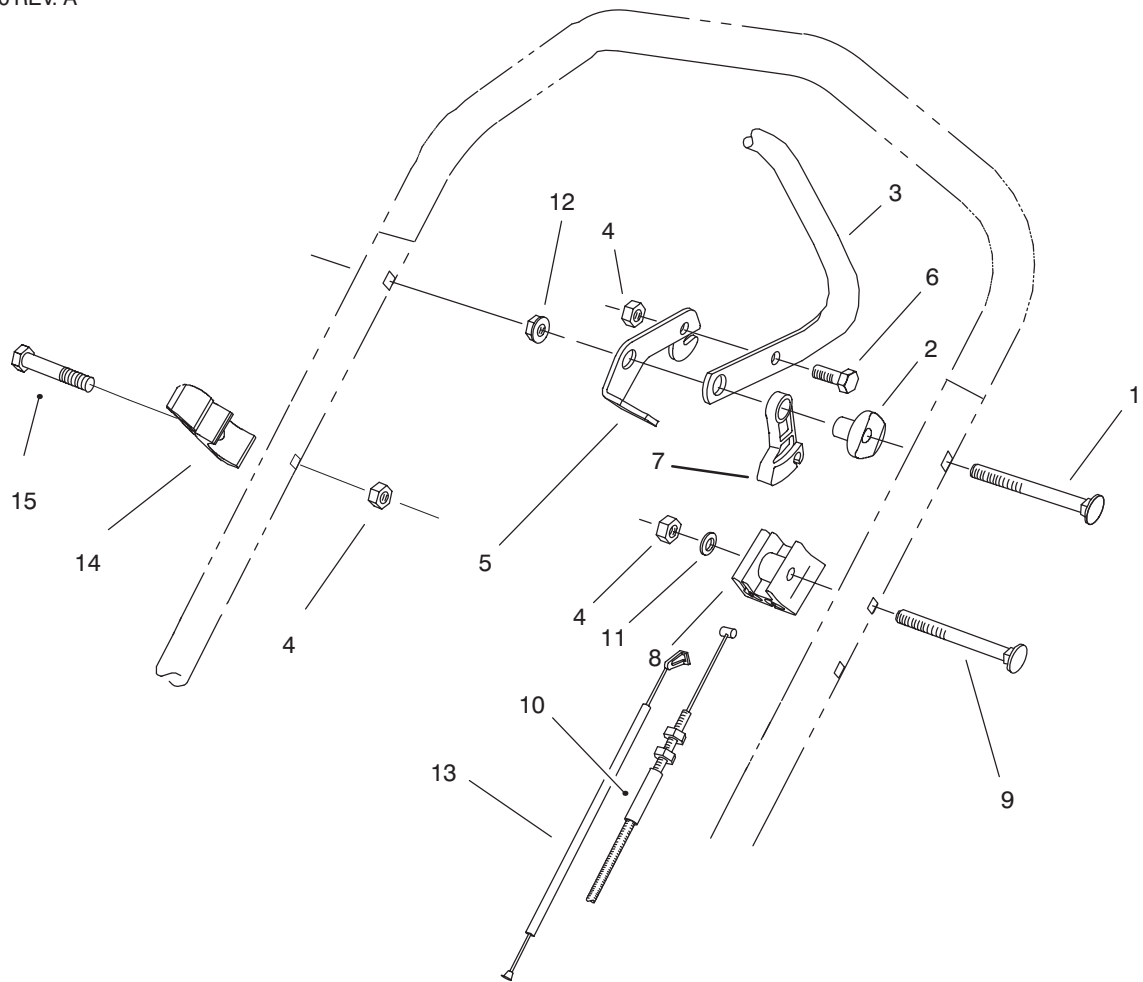 


C-2303

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	17-9426	Screw - Handle	2
2	66-0330	Support - Spacer	2
3	52-7430	Control Bar Assembly	1
4	3296-42	Nut - Lock	3
5	66-5350	Lever - Control	1
6	321-3	Screw - Cap Hex. Hd.	1
7	46-5520	Lever - Traction	1
8	71-0960	Support - Cable	1
9	46-6432	Screw - Handle	1
10	93-6634	Cable - Traction	1


Ref. No.	Part No.	Description	No. Used
11	3256-22	Washer - Flat	1
12	3296-58	Nut - Lock	2
13	93-7027	Cable - Brake	1
14	93-3772	Rope - Guide (Model No. 26643B Only)	1
14	95-4478	Rope - Guide (Model No. 26643 Only)	1
15	321-52	Screw - Hex Hd. Cap (Model No. 26643B Only)	1

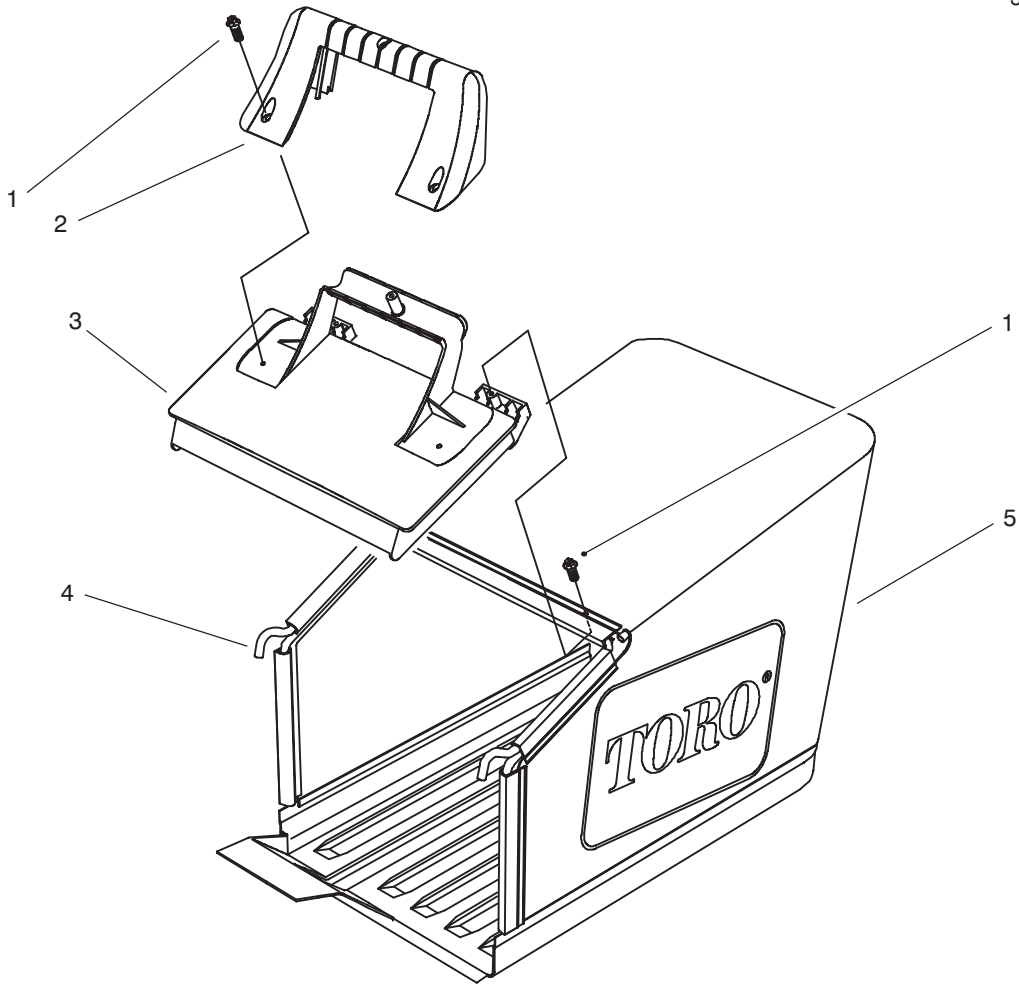 

C-1570

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Index Hex Washer Head	5	3	71-9470	Door - Bag	1
2	71-9480	Handle - Door	1	4	71-9930	Frame - Grass Bag	1
				5	71-9680	Bag - Grass 53cm	1

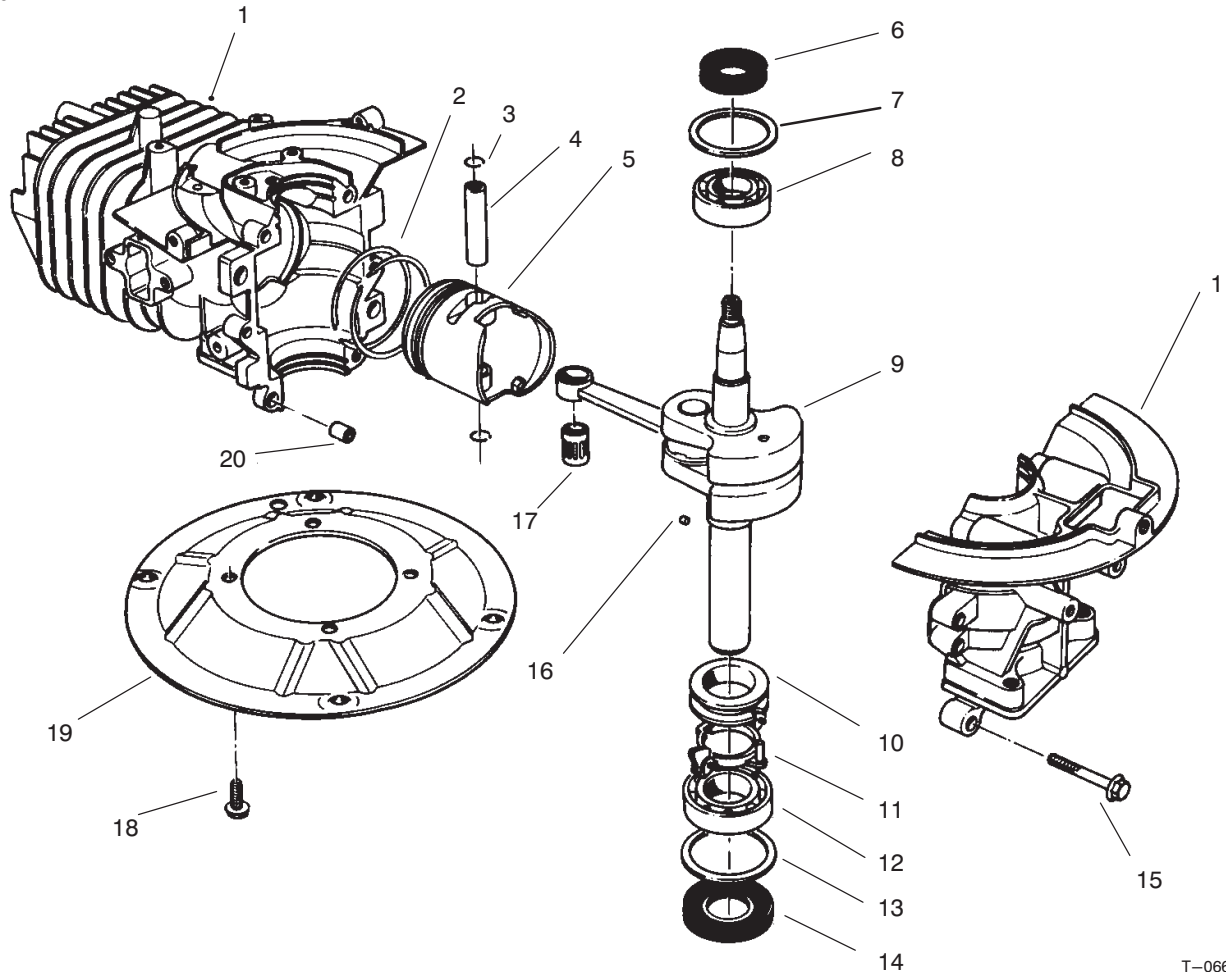 

T-0663


CRANKSHAFT ASSEMBLY

(Model No. 47PS5-6) (Model No. 26643B Only)
(Model No. 47PT6-6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81-2800	Crankcase/Cylinder Ass'y (Model No. 26643B Only)	1
1	94-1685	Crankcase/Cylinder Ass'y (Model No. 26643 Only)	1
2	81-0590	Ring Set	1
3	81-0620	Circlip	2
4	81-0600	Pin - Wrist	1
5	81-0580	Piston (58mm)	1
6	81-0720	Oil Seal - Upper	1
7	81-0710	Thrust Washer - Upper	1
8	81-0690	Bearing - Upper (20mm)	1
9	81-4600	Crankshaft/Connecting Rod Assembly	1

Ref. No.	Part No.	Description	No. Used
10	81-0770	Collar - Governor	1
11	81-0750	Bracket - Governor Arm	1
12	81-0700	Bearing - Lower (25mm)	1
13	81-0730	Thrust Washer - Lower	1
14	81-0740	Oil Seal - Lower	1
15	81-0540	Bolt (30mm Lg.)	5
16	81-0760	Pin - Crankshaft	1
17	81-0610	Bearing - Wrist Pin	1
18	81-0570	Bolt (20mm Lg.)	4
19	81-0560	Plate - Mounting	1
20	81-0520	Pin - Crankcase	2
*	12-7699	Short Block Assembly	1

 *Not Illustrated

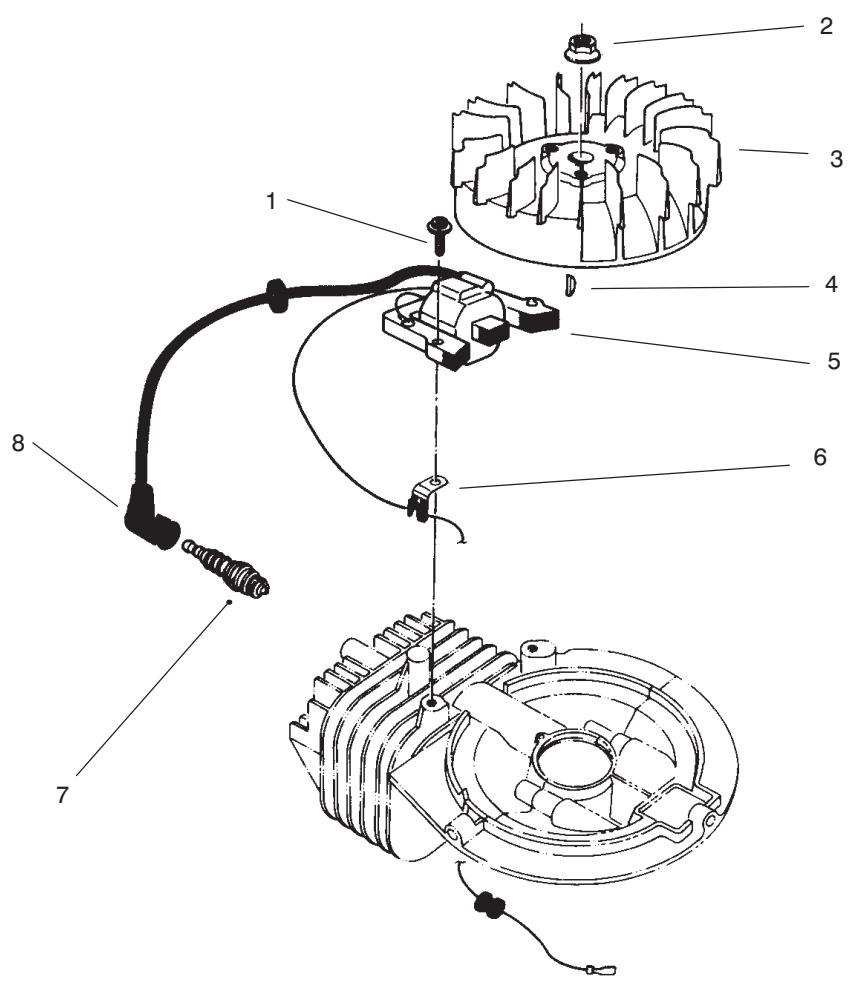


C-0176

IGNITION ASSEMBLY
(Model No. 47PS5-6) (Model No. 26643B Only)
(Model No. 47PT6-6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81-5680	Capscrew - Hex Hd.	1
2	81-1330	Nut	1
3	81-2810	Flywheel - Magneto	1
4	81-2370	Key - Flywheel	1
5	81-2820	Coil/Ignition Assembly	1

Ref. No.	Part No.	Description	No. Used
6	81-1480	Clamp	1
7	81-0181	Spark Plug	1
8	81-1500	Cover - Spark Plug	1
*	41-7650	Puller - Flywheel	1

 *Not Illustrated

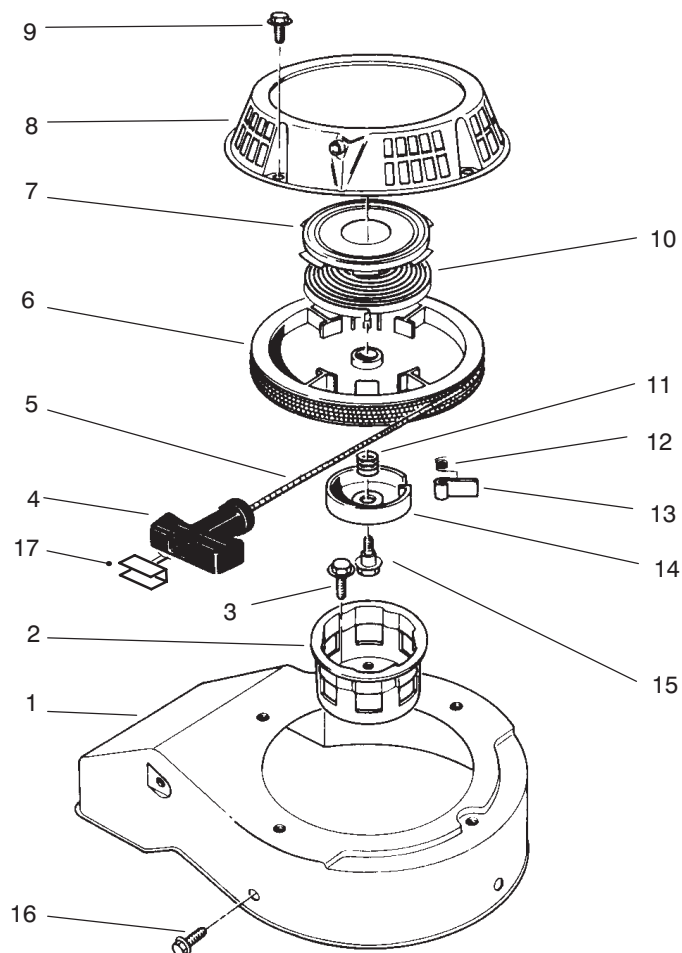

T-0668


RECOIL ASSEMBLY

(Model No. 47PS5-6) (Model No. 26643B Only)
(Model No. 47PT6-6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81-2070	Cover - Cooling Fan	1
2	81-1290	Pulley - Starter Cup	1
3	81-1300	Bolt (16mm Lg.)	3
4	81-1630	Handle - Recoil	1
5	81-1270	Rope	1
6	81-1210	Reel - Rope Pulley	1
7		Retainer Cup - Recoil Spring	1
8	81-2090	Case - Recoil	1
9	81-1280	Bolt	4
10		Spring - Recoil	1
11	81-1240	Spring - Compression	1

Ref. No.	Part No.	Description	No. Used
12	81-1220	Spring - Dog	1
13	81-1230	Dog	1
14	81-1250	Retainer - Dog	1
15	81-1260	Bolt - Shoulder	1
16	53-1340	Bolt - Self Tapping	3
17	81-5760	Insert - Recoil Handle	1
*	81-2300	Spring & Retainer (Incl. Ref. #7 & 10)	1
*	81-2040	Starter Assembly (Incl. Ref. #4-8, & 10-15)	1

 *Not Illustrated

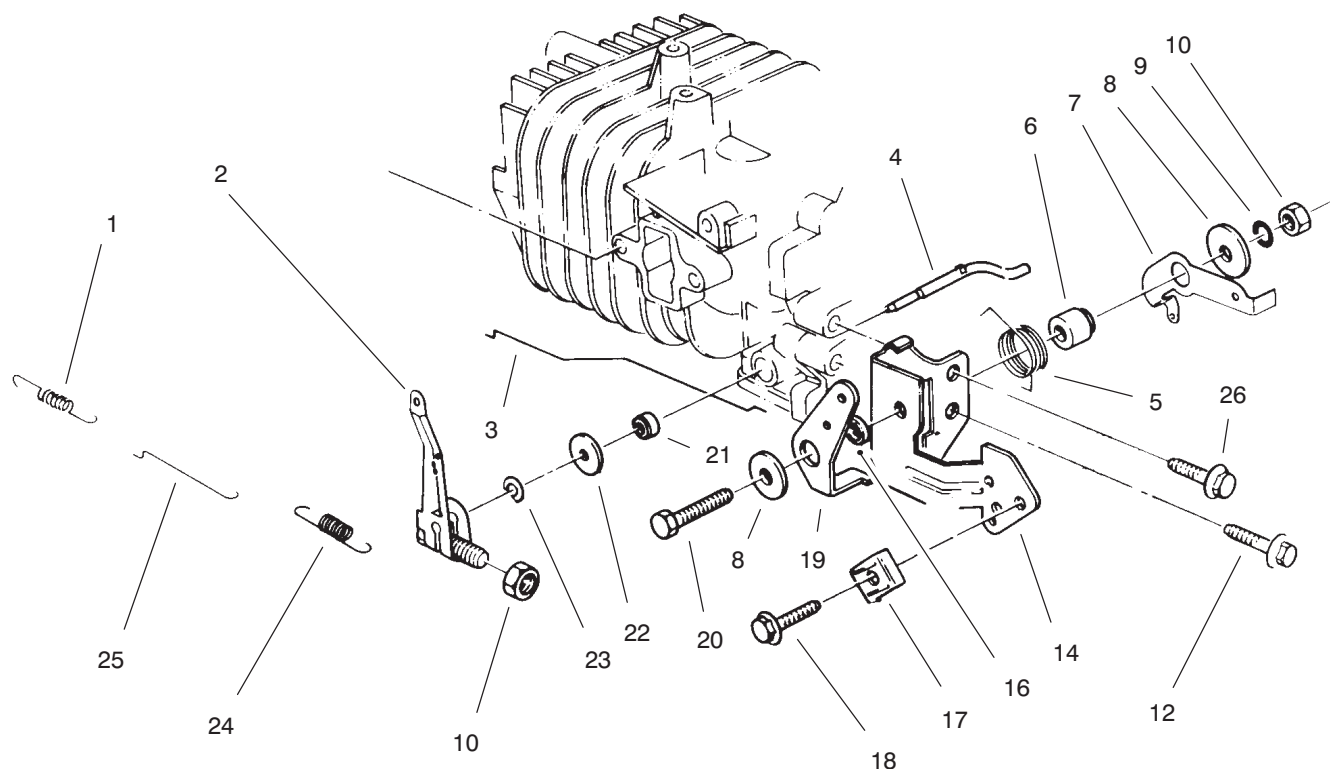


C-0177

GOVERNOR ASSEMBLY

(Model No. 47PS5-6) (Model No. 26643B Only)
(Model No. 47PT6-6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81-0920	Spring - Carburetor Rod	1
2	81-5420	Governor Arm/Bolt Ass'y	1
3	81-5410	Rod - Choke	1
4	81-0840	Shaft - Governor	1
5	81-2460	Spring - Choke Control Lever	1
6	81-1770	Spacer - Governor Spring Lever	1
7	81-2850	Lever - Governor Spring	1
8	81-1750	Washer - Choke Control Lever	2
9	81-1450	Washer - Lock	1
10	81-0900	Nut	2
12	81-0540	Bolt - Self Tapping	1

Ref. No.	Part No.	Description	No. Used
14	81-2420	Bracket - Throttle Control	1
16	81-2470	Spacer - Choke Control Lever	1
17	81-2430	Clamp - Cable	1
18	50-0130	Bolt - Cable Clamp	1
19	81-1710	Lever - Choke Control	1
20	81-1730	Bolt - Throttle Control Brkt.	1
21	81-0850	Oil Seal - Governor Shaft	1
22	81-0860	Washer	1
23	81-0870	E-Ring	1
24	81-2830	Spring - Governor	1
25	81-0910	Rod - Carburetor	1
26	81-1170	Bolt - Self Tapping	1

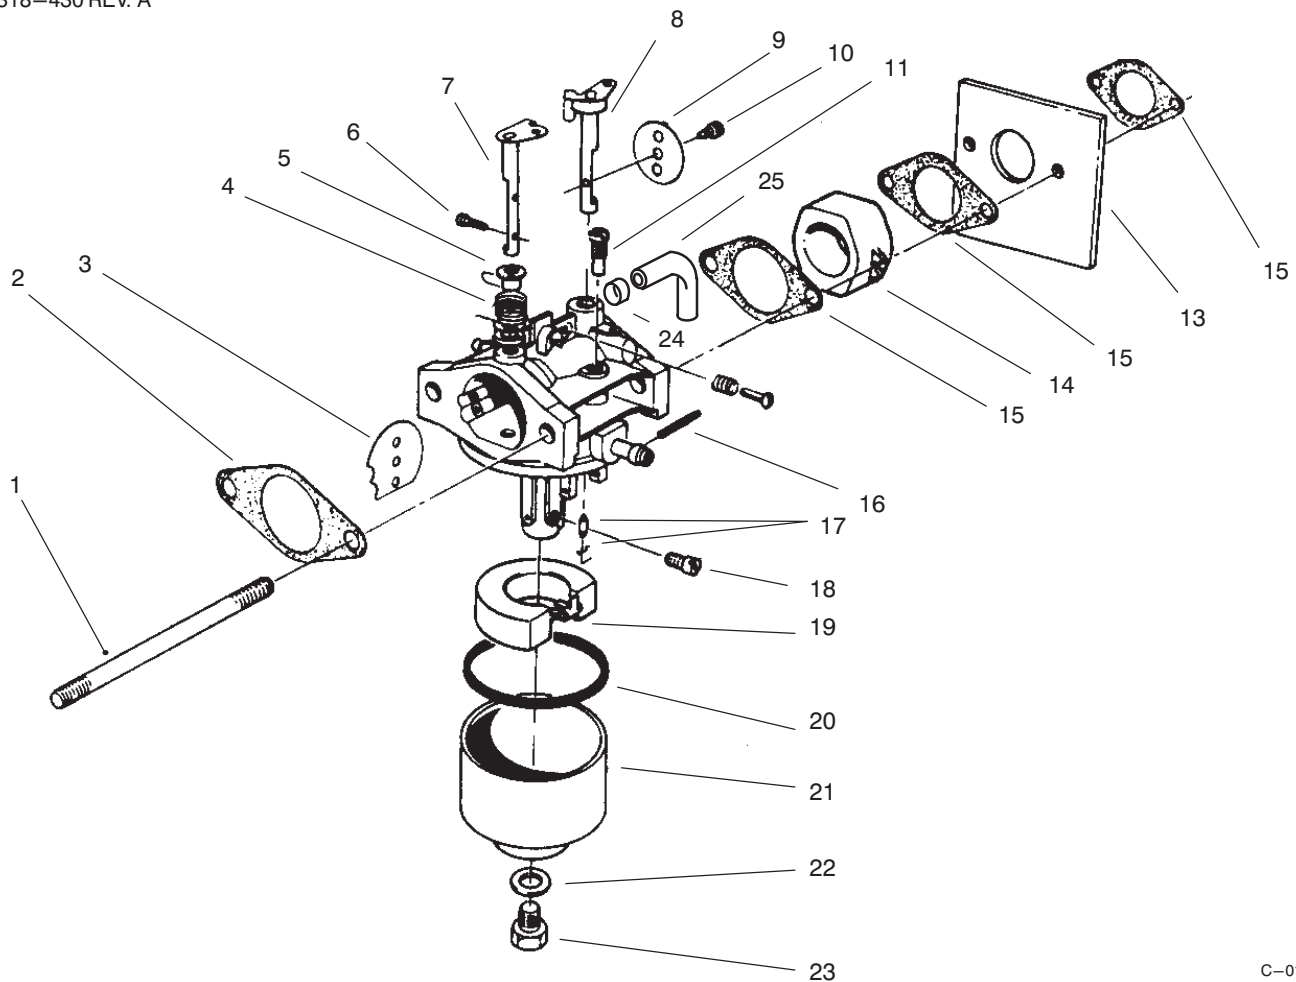 

C-0191


CARBURETOR ASSEMBLY

(Model No. 47PS5-6) (Model No. 26643B Only)
(Model No. 47PT6-6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81-5450	Stud Bolt - Carburetor	2
2	81-0090	Gasket	2
3	81-0240	Valve - Choke	1
4	81-0230	Spring - Choke	1
5	81-0220	Bushing - Choke Valve	1
6	81-2160	Screw	2
7	81-1950	Shaft - Choke	1
8	81-0250	Shaft - Throttle	1
9	81-0260	Valve - Throttle	1
10	81-0270	Screw - Throttle Valve	1
11	81-1030	Jet - Pilot (#40)	1
		(Model No. 26643B Only)	
11	94-1684	Jet - Pilot (#42.5)	1
		(Model No. 26643 Only)	
13	81-5490	Shield - Carburetor	1
14	81-5440	Insulator - Carburetor	1
15	81-0780	Gasket	3
16	81-5600	Pin	1

Ref. No.	Part No.	Description	No. Used
17	81-4910	Needle Valve/Spring Wire	1
18	81-1940	Jet - Main (#76.5)	1
*	81-2340	Jet - Main (#72.5) High Alt., Above 6000 (Optional)	1
19	81-0970	Float	1
20	81-1010	Gasket - Float Bowl	1
21	81-5660	Bowl - Float	1
22	81-1020	Gasket - Bowl Screw	1
23	81-5670	Screw - Bowl	1
24	81-5460	Clamp - Vent Tube	1
25	81-5470	Tube - Vent	1
*	12-6379	Carburetor Kit	
		(Incl. Ref. #2, 15, 17, 20, & 22)	
*	81-2520	Carburetor Ass'y Complete	1
*	81-5810	Needle Valve Seat Kit	1
*	94-1687	Carburetor Ass'y w/Primer (Model No. 26643 Only)	1

 *Not Illustrated

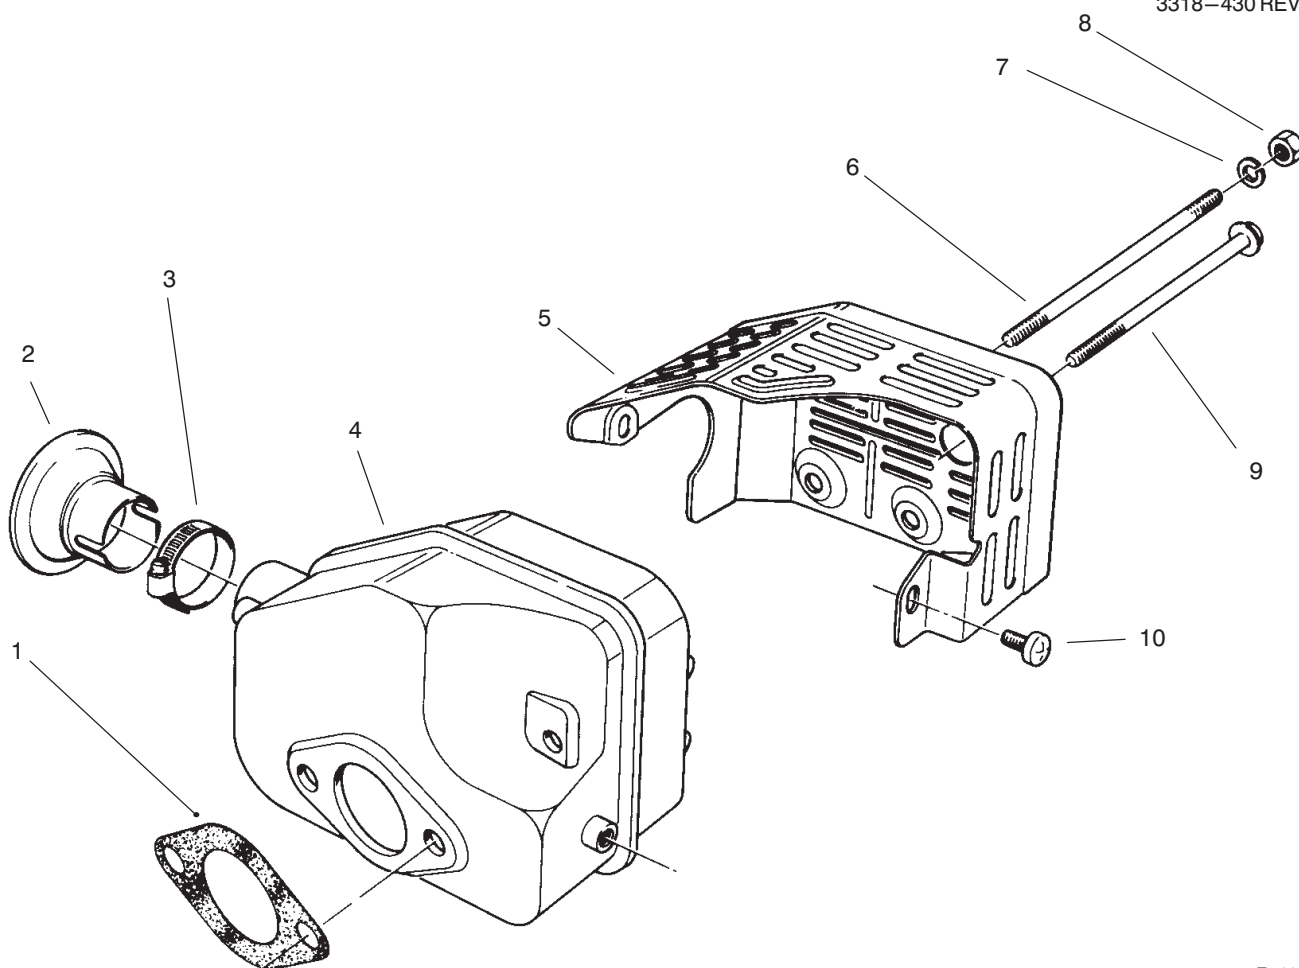

T-0667

MUFFLER ASSEMBLY

(Model No. 47PS5-6) (Model No. 26643B Only)
(Model No. 47PT6-6) (Model No. 26643 Only)

Ref. No.	Part No.	Description	No. Used
1	81-1080	Gasket - Muffler	1
*2	81-0200	Spark Arrester	1
†3		Clamp	1
4	81-5690	Muffler	1
5	81-2450	Cover - Muffler	1

Ref. No.	Part No.	Description	No. Used
6	81-1100	Bolt	2
7	81-1120	Washer - Lock	2
8	81-1110	Nut	2
9	81-1150	Bolt - Self Tapping	1
10	81-1140	Screw - Phillips Hd.	2

*Optional Equipment

†Obtain Locally

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
12—6379	Carburetor Kit	14 * 1	62—7700	Blade — 21	4 6 1
12—7699	Short Block Assembly	10 * 1	63—9330	Body — Air Cleaner	2 13 1
14—6009	Mounting Plate Assembly	3 * 1	63—9340	Cover — Air Cleaner	2 9 1
14—9949	Wheel & Tire Assembly	1 20 2	63—9380	Foam Element — Air Cleaner	2 10 1
14—9959	Wheel Tire & Gear Assy.	5 31 2	65—2720	Ring — Retaining	5 24 4
16—1769	Housing — 53cm	1 4 1	65—4710	Ring — Friction	5 25 2
16—8729	Control Panel Assembly	7 9 1	65—4720	Spring — Compression	5 29 2
17—1569	Door — Discharge	1 9 1	65—4730	Washer — Thrust (Inner)	5 22 2
17—9426	Screw — Handle	8 1 2	65—4740	Washer — Thrust (Keyed)	5 23 4
19—4050	Knob — Handle Release	7 10 2	65—4750	Pinion	5 28 2
25—7740	Knob — Arm	5 3 2	65—4760	Washer — Clutch	5 26 2
25—7740	Knob — Arm	1 28 2	65—4770	Shaft — Output	5 17 1
26—0670	Screw — Blade	4 4 1	65—5042	Pivot Arm Assembly	5 2 2
27—6231	Bolt — Wheel	1 22 2	65—5190	Bracket — Belt Guide	5 7 1
27—6231	Bolt — Wheel	5 33 2	65—5200	Shield — BBC	4 7 1
27—6250	Bushing — Wheel	1 21 4	65—5210	Screw — Thread Forming	1 7 2
27—6250	Bushing — Wheel	5 32 4	65—5220	Screw — Cap Socket Hd.	1 26 2
29—9570	Bushing — Yoke	5 38 1	65—5220	Screw — Socket Hd. Cap	5 36 2
36—4780	Washer — Thrust	5 44 1	65—5250	Clip — Spring	5 43 1
36—4791	Washer — Thrust	6 48 2	65—5440	Spring Arm Assembly	5 4 2
36—8070	V—Belt	5 13 1	65—5660	Panel — Screen	1 2 1
38—7820	Bearing — Ball	6 60 1	66—0020	Panel — Vertical	1 1 1
40—1940	Washer — Wheel Bolt	1 23 4	66—0030	Bracket — Cable Support	4 1 1
41—7650	Puller — Flywheel	11 * 1	66—0330	Support — Spacer	8 2 2
44—2750	Body — Primer	2 16 1	66—0360	Cap — End	5 5 2
44—3172	Hose — Primer	2 6 1	66—0540	Arm — Spring Front	1 25 2
46—5520	Lever — Traction	8 7 1	66—0560	Screw — Shoulder	1 19 2
46—6432	Screw — Handle	8 9 1	66—0570	Bracket — Belt Guide	4 9 1
46—8290	Plate — Logo Toro	2 1 1	66—0580	Arm — Pivot Front	1 30 2
48—2060	Bearing — Needle	5 21 2	66—0620	Retainer — Belt	1 16 1
49—2040	Screw — Self Tapping	5 8 8	66—5350	Lever — Control	8 5 1
50—0130	Bolt — Cable Clamp	13 18 1	66—5370	Spring — Compression	3 9 1
50—7180	Nut — Lock	2 11 2	66—5380	Brake Plate Assembly	3 5 1
51—0414	Engine Complete	2 21 1	66—6040	Key — Rocking (R.H.)	5 * 1
51—2690	Screw — Hex Washer Hd.	2 8 1	66—6050	Key — Rocking (L.H.)	5 27 1
51—3215	Hose — Fuel	2 14 1	66—7460	Bulb — Primer	2 17 1
51—3216	Hose — Fuel	2 20 1	66—9301	Screw — Engine Mount	2 15 3
52—7430	Control Bar Assembly	8 3 1	70—9760	Bushing — Sleeve	5 19 2
53—1340	Bolt — Self Tapping	12 16 3	71—0960	Support — Cable	8 8 1
53—4690	Stop — Ground Strap	3 10 1	71—7900	Cap — Hinge Bolt L.H.	1 10 1
55—3760	Gear — Pinion 15T	6 49 1	71—7910	Cap — Hinge Bolt R.H.	1 6 1
55—3770	Gear — 49T (1st Gear)	6 58 1	71—8090	Mount — Handle L.H.	7 12 1
55—3780	Gear — Pinion 20T	6 50 1	71—8100	Mount — Handle R.H.	7 11 1
55—3790	Gear — 44T (2nd Gear)	6 57 1	71—8580	Spacer — Door	1 12 2
55—3800	Gear — Pinion 25T	6 51 1	71—9280	Filter — Fuel	2 18 1
55—3810	Gear — 39T (3rd Gear)	6 56 1	71—9470	Door — Bag	9 3 1
57—3110	Decal — Recoil	2 2 1	71—9480	Handle — Door	9 2 1
60—8710	Case — Gear (Upper)	6 61 1	71—9640	Ramp — Discharge	1 27 1
60—8730	Cover — Gear Case	6 46 1	71—9650	Access — Cover	1 14 1
60—8750	Bushing — Intrmdt. Shaft	6 47 2	71—9680	Bag — Grass 53cm	9 5 1
60—8770	Bushing — Output Shaft	6 45 1	71—9840	Spring — Door	1 11 2
60—8790	Sleeve — Gear	6 55 1	71—9870	Decal — Deck 53cm	1 29 1
60—8800	Shaft — Intermediate	6 52 1	71—9874	Decal — Panel	7 7 1
60—8810	Retainer — Shift Fork	5 39 1	71—9920	Cover — Top	1 15 1
60—8840	Pulley — Half	5 10 2	71—9930	Frame — Grass Bag	9 4 1
60—8850	Bushing — Output Shaft	6 53 1	74—1660	Cover — Wheel	5 30 2
60—8870	Yoke — Shift	5 37 1	74—1670	Spacer — Wheel Cover	5 34 2
60—8890	Pinion — Bevel	6 59 1	76—0760	Key — Shift	5 41 2
60—9010	Strap — Ground	3 7 1	76—0770	Collar — Shift	5 42 1
62—3980	Spacer	2 12 2	76—0780	Sleeve — Shift Key	5 40 1
62—6660	Spacer	5 9 1	76—0920	Lever — Shift	5 16 1
62—6673	Gear Case Assy. Complete	6 * 1	76—2930	Retainer — Cable	5 15 1
62—7540	Retainer — Blade	4 3 1	77—5260	Strap — Insulation	3 4 1
62—7550	Pulley — Drive	4 8 1	81—0090	Gasket	14 2 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
81-0090	Gasket - Air Cleaner	2 5 1	81-1730	Bolt - Throttle Control Brkt.	13 20 1
81-0162	Fuel Tank Assembly	2 4 1	81-1750	Washer - Choke Control	13 8 2
81-0181	Spark Plug	11 7 1	81-1770	Spacer - Governor Spring	13 6 1
81-0200	Spark Arrester	15 *2 1	81-1940	Jet - Main (#76.5)	14 18 1
81-0220	Bushing - Choke Valve	14 5 1	81-1950	Shaft - Choke	14 7 1
81-0230	Spring - Choke	14 4 1	81-2040	Starter Assembly	12 * 1
81-0240	Valve - Choke	14 3 1	81-2070	Cover - Cooling Fan	12 1 1
81-0250	Shaft - Throttle	14 8 1	81-2090	Case - Recoil	12 8 1
81-0260	Valve - Throttle	14 9 1	81-2160	Screw	14 6 2
81-0270	Screw - Throttle Valve	14 10 1	81-2300	Spring & Retainer	12 * 1
81-0520	Pin - Crankcase	10 20 2	81-2340	Jet - Main (#72.5) High Alt.,	14 * 1
81-0540	Bolt (30mm Lg.)	10 15 5	81-2370	Key - Flywheel	11 4 1
81-0540	Bolt - Self Tapping	13 12 1	81-2420	Bracket - Throttle Control	13 14 1
81-0560	Plate - Mounting	10 19 1	81-2430	Clamp - Cable	13 17 1
81-0570	Bolt (20mm Lg.)	10 18 4	81-2450	Cover - Muffler	15 5 1
81-0580	Piston (58mm)	10 5 1	81-2460	Spring - Choke Control	13 5 1
81-0590	Ring Set	10 2 1	81-2470	Spacer - Choke Control	13 16 1
81-0600	Pin - Wrist	10 4 1	81-2520	Carburetor Ass'y Complete	14 * 1
81-0610	Bearing - Wrist Pin	10 17 1	81-2800	Crankcase/Cylinder Ass'y	10 1 1
81-0620	Circlip	10 3 2	81-2810	Flywheel - Magneto	11 3 1
81-0690	Bearing - Upper (20mm)	10 8 1	81-2820	Coil/Ignition Assembly	11 5 1
81-0700	Bearing - Lower (25mm)	10 12 1	81-2830	Spring - Governor	13 24 1
81-0710	Thrust Washer - Upper	10 7 1	81-2850	Lever - Governor Spring	13 7 1
81-0720	Oil Seal - Upper	10 6 1	81-3980	Stop - Rope	2 24 1
81-0730	Thrust Washer - Lower	10 13 1	81-4600	Crankshaft/Connecting Rod	10 9 1
81-0740	Oil Seal - Lower	10 14 1	81-4910	Needle Valve/Spring Wire	14 17 1
81-0750	Bracket - Governor Arm	10 11 1	81-5410	Rod - Choke	13 3 1
81-0760	Pin - Crankshaft	10 16 1	81-5420	Governor Arm/Bolt Ass'y	13 2 1
81-0770	Collar - Governor	10 10 1	81-5440	Insulator - Carburetor	14 14 1
81-0780	Gasket	14 15 3	81-5450	Stud Bolt - Carburetor	14 1 2
81-0840	Shaft - Governor	13 4 1	81-5460	Clamp - Vent Tube	14 24 1
81-0850	Oil Seal - Governor Shaft	13 21 1	81-5470	Tube - Vent	14 25 1
81-0860	Washer	13 22 1	81-5490	Shield - Carburetor	14 13 1
81-0870	E-Ring	13 23 1	81-5600	Pin	14 16 1
81-0900	Nut	13 10 2	81-5660	Bowl - Float	14 21 1
81-0910	Rod - Carburetor	13 25 1	81-5670	Screw - Bowl	14 23 1
81-0920	Spring - Carburetor Rod	13 1 1	81-5680	Capscrew - Hex Hd.	11 1 1
81-0970	Float	14 19 1	81-5690	Muffler	15 4 1
81-1010	Gasket - Float Bowl	14 20 1	81-5760	Insert - Recoil Handle	12 17 1
81-1020	Gasket - Bowl Screw	14 22 1	81-5810	Needle Valve Seat Kit	14 * 1
81-1030	Jet - Pilot (#40)	14 11 1	84-7820	Plate - Mounting	3 2 1
81-1080	Gasket - Muffler	15 1 1	92-9665	Screw - Self Tapping	7 8 5
81-1100	Bolt	15 6 2	92-9698	Screw - Shoulder, Metric	3 6 1
81-1110	Nut	15 8 2	93-3772	Rope - Guide	8 14 1
81-1120	Washer - Lock	15 7 2	93-4105	Decal - Danger	1 13 1
81-1140	Screw - Phillips Hd.	15 10 2	93-6632	Control - Ground Speed	7 1 1
81-1150	Bolt - Self Tapping	15 9 1	93-6634	Cable - Traction	8 10 1
81-1170	Bolt - Self Tapping	13 26 1	93-6635	Control - Throttle	7 4 1
81-1210	Reel - Rope Pulley	12 6 1	93-6662	Decal - Instruction	7 3 1
81-1220	Spring - Dog	12 12 1	93-7027	Cable - Brake	3 8 1
81-1230	Dog	12 13 1	93-7027	Cable - Brake	8 13 1
81-1240	Spring - Compression	12 11 1	93-7199	Gas Cap Assembly	2 3 1
81-1250	Retainer - Dog	12 14 1	93-7661	Extension - Muffler Guard	2 23 1
81-1260	Bolt - Shoulder	12 15 1	94-1684	Jet - Pilot (#42.5)	14 11 1
81-1270	Rope	12 5 1	94-1685	Crankcase/Cylinder Ass'y	10 1 1
81-1280	Bolt	12 9 4	94-1687	Carburetor Ass'y w/Primer	14 * 1
81-1290	Pulley - Starter Cup	12 2 1	94-4910	Handle	7 5 1
81-1300	Bolt (16mm Lg.)	12 3 3	95-4478	Rope - Guide	8 14 1
81-1330	Nut	11 2 1	237-153	Seal - ORing	5 18 2
81-1450	Washer - Lock	13 9 1	2412-95	Clamp - Hose	2 19 4
81-1480	Clamp	11 6 1	302-56	Fitting - Grease	5 20 2
81-1500	Cover - Spark Plug	11 8 1	321-3	Screw - Cap Hex. Hd.	8 6 1
81-1630	Handle - Recoil	12 4 1	321-52	Screw - Hex Hd. Cap	8 15 1
81-1710	Lever - Choke Control	13 19 1	322-29	Screw - Hex Hd. Cap	1 8 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3253—22	Washer — Lock	4 5 1	3296—42	Nut — Lock	8 4 3
3256—16	Washer — Flat	2 7 1	3296—58	Nut — Lock	8 12 2
3256—22	Washer — Flat	8 11 1	32121—120	Pin — Coil	6 54 1
3256—24	Washer — Flat	5 12 1	32144—10	Screw — Self Tapping	3 1 1
3256—24	Washer — Flat	1 17 1	32144—15	Screw — Hex Flange Hd.	1 18 1
3272—5	Pin — Cotter	5 14 1	32144—70	Screw — Cap Hex. Hd.	1 3 6
3290—378	Tie — Cable	7 6 5	32144—70	Screw — Hex. Washer Hd.	5 1 5
3290—459	Rivet	3 3 2	32144—70	Screw — Taptite	4 2 7
3296—5	Nut — Lock	5 11 1	32144—111	Screw — Index Hex Washer	9 1 5
3296—6	Nut — Lock	1 24 4	32144—112	Screw — Self Tapping	3 11 1
3296—6	Nut — Lock	5 35 2			

