


TORO®

MODEL NO. 03466-60001 & UP
MODEL NO. 03467-60001 & UP

PARTS CATALOG

5 BLADE & 8 BLADE CUTTING UNITS (For Reelmaster® 2600D)

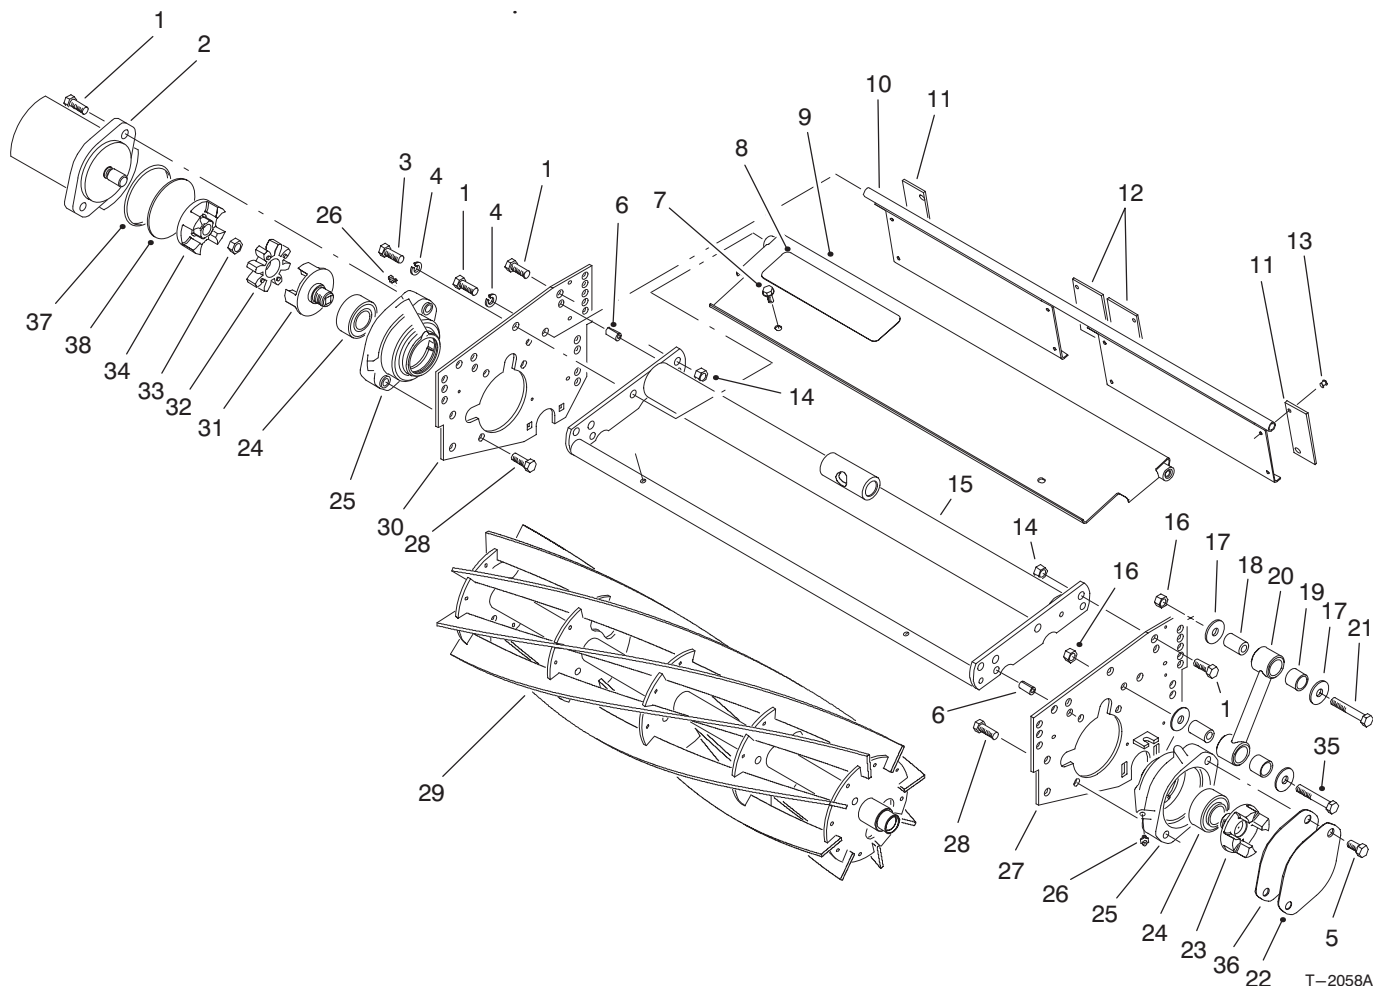

T-2058A

REEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex. Hd.	10
†2	93-6972	Hydraulic Motor Assembly (Front Cutting Units)	1
*†	93-6975	Hydraulic Motor Assembly (Rear Cutting Unit)	1
3	323-7	Screw - Cap Hex. Hd.	2
4	3253-5	Washer - Lock	4
5	323-2	Screw - Cap Hex. Hd.	2
6	32121-36	Pin - Roll	4
7	32144-10	Screw - Hex. Washer Hd.	2
8	93-8064	Decal - Shield	1
8	94-4585	Decal - Shield (Japan)	1
9	94-5053	Front Grass Guard Assembly (Incl. Ref. #8)	1
10	94-4969	Rear Grass Guard Assembly (Incl. Ref. #11-13)	1
11	61-3280	Cover - Rubber Side	2


Ref. No.	Part No.	Description	No. Used
12	61-3290	Cover - Rubber Center	2
13	700382	Rivet	12
14	3296-39	Nut - Lock	6
15	94-4964	Frame - Cutting Unit	1
16	32128-36	Nut - Lock	8
17	93-8806	Washer	16
18	93-6981	Spacer	8
19	94-8945	Bushing	8
20	93-6980	Link	4
21	323-11	Screw - Cap Hex. Hd.	4
22	93-6960	Cover - Bearing	1
23	93-8826	Coupling - Male LH	1
24	88-7880	Bearing - Ball	2
25	93-6930	Housing - Bearing	2
26	302-5	Fitting - Grease	2
27	94-3697	Plate - Side LH	1
28	323-4	Screw - Cap Hex. Hd.	4

*Not Illustrated

†Supplied with Traction Unit

© The TORO Company - 1996
All Rights Reserved

TPS

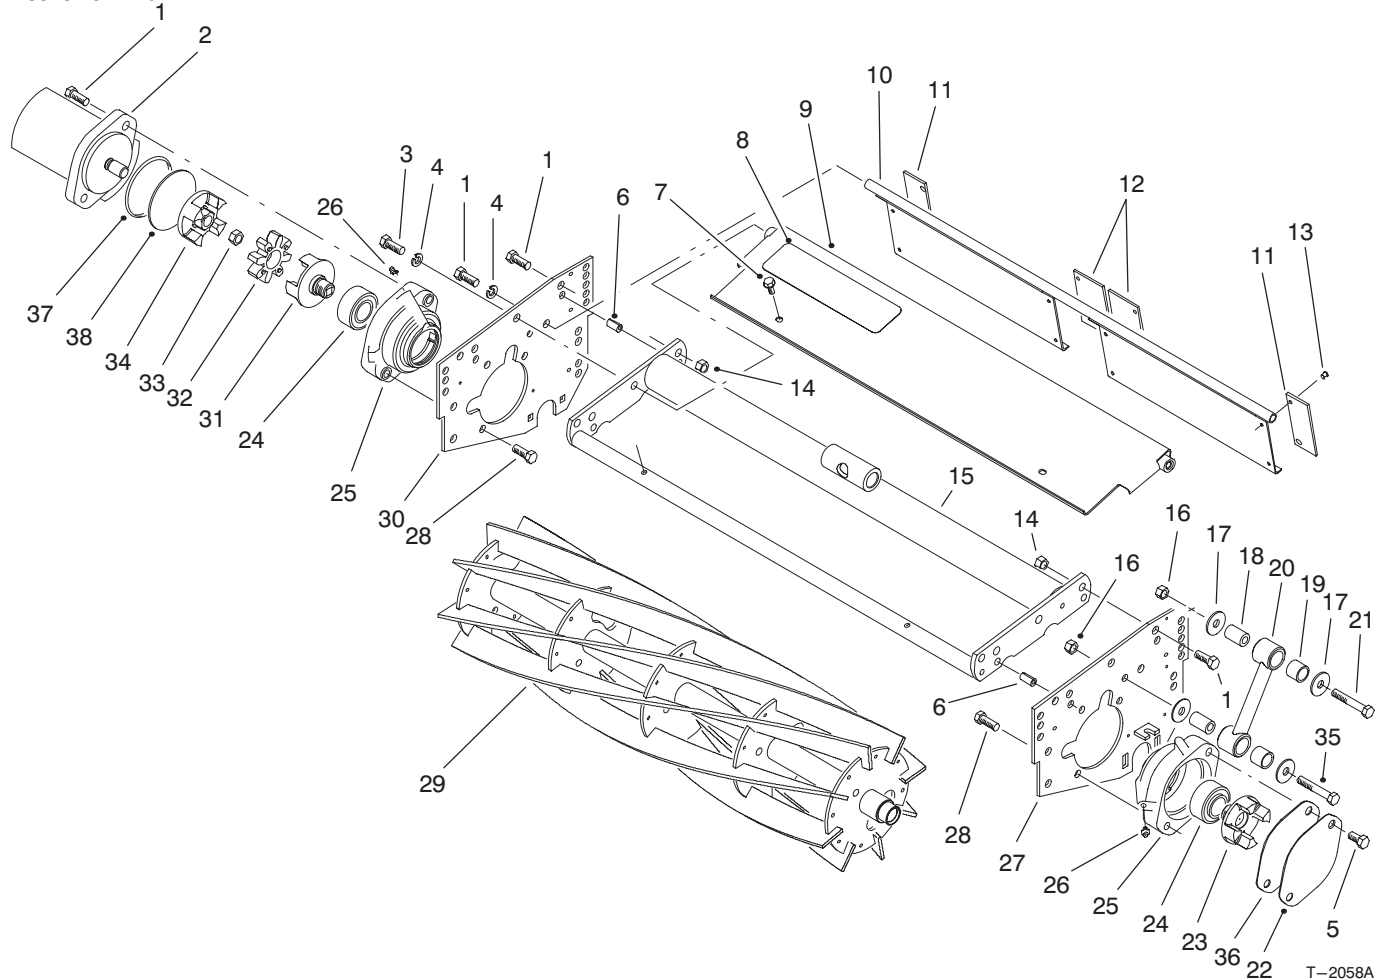


T-2058A

REEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	94-5054	Reel - 8 Blade	1
*	94-5055	Reel - 5 Blade	1
30	94-3695	Plate - Side RH	1
31	93-8825	Coupling - Male RH	1
32	93-8827	Spider - Coupling	1
33	32128-48	Nut - Lock	1

Ref. No.	Part No.	Description	No. Used
†34	93-8823	Coupling - Female	1
†35	323-10	Screw - Cap Hex. Hd.	4
36	94-5979	Gasket	1
37	353-949	O-Ring	1
38	94-2703	Plug	1

†Supplied with Traction Unit

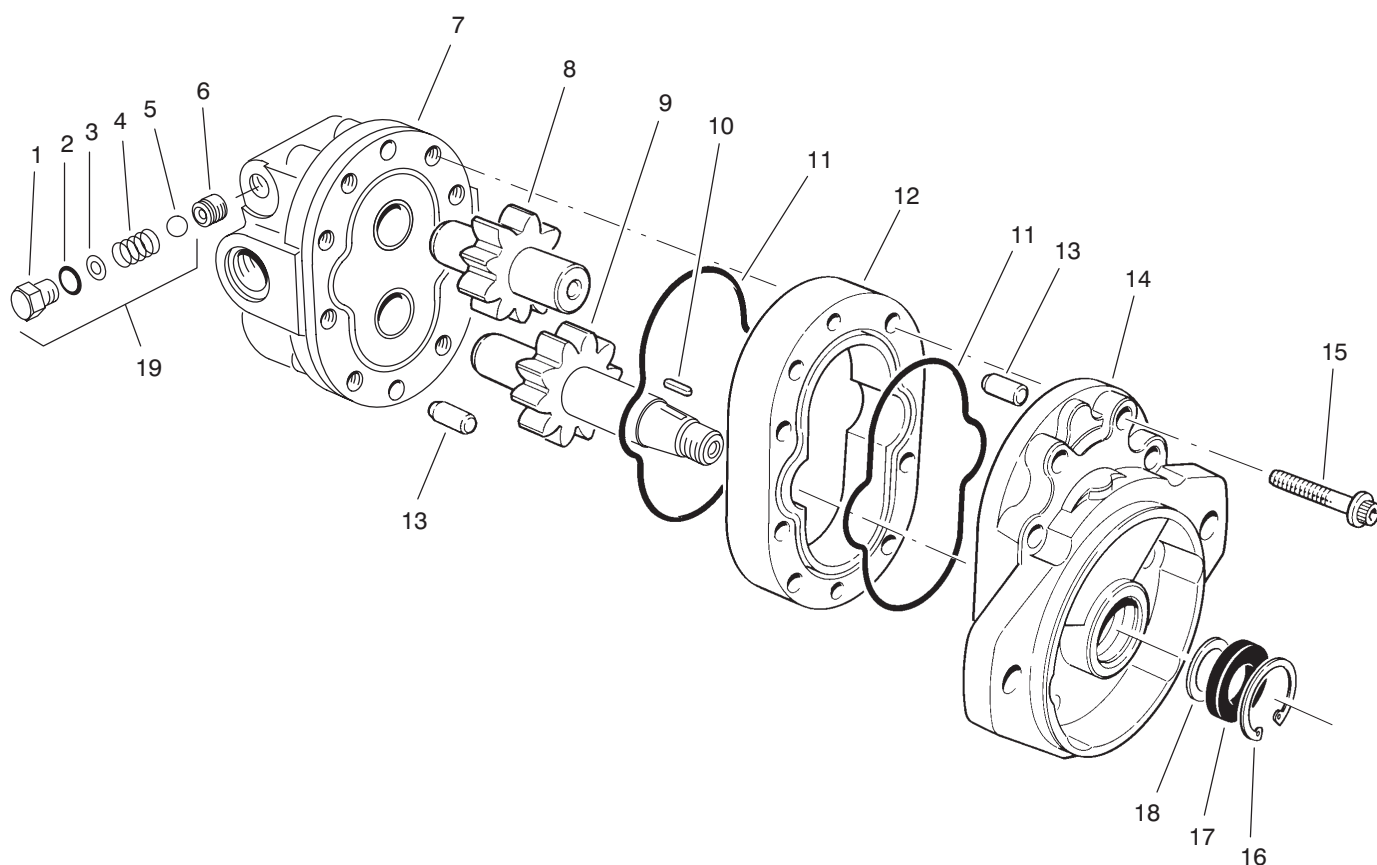


T-2184

REEL MOTOR ASSEMBLY NO. 93—6972

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
† 1		Plug	2	12	94—3603	Body	1
† 2		Seal — O—Ring	2	13	42—2010	Pin — Alignment	2
† 3		Shim	A/R	14	66—5730	Front Plate Assembly	1
† 4		Spring	2	15	94—3600	Screw — Hex. Socket Hd.	8
† 5		Ball	2	16	59—8320	Ring — Retaining	1
† 6		Seal — Relief Valve	2	17	66—5710	Seal — Oil	1
7	94—3604	Backplate/Relief Assembly (Incl. Ref. #1—6)	1	18	60—5890	Washer — Backup	1
8	94—3601	Gear — Idler	1	19	92—9260	Relief Valve Assembly (Incl. Ref. #1—5)	1
9	94—3602	Gear — Drive	1	*	93—1413	Seal Repair Kit (Incl. Ref. #11, 16, 17 & 2)	1
10	94—3606	Key	1				
11	59—8420	Seal — O—Ring	2				

*Not Illustrated

†Not Serviced Separately

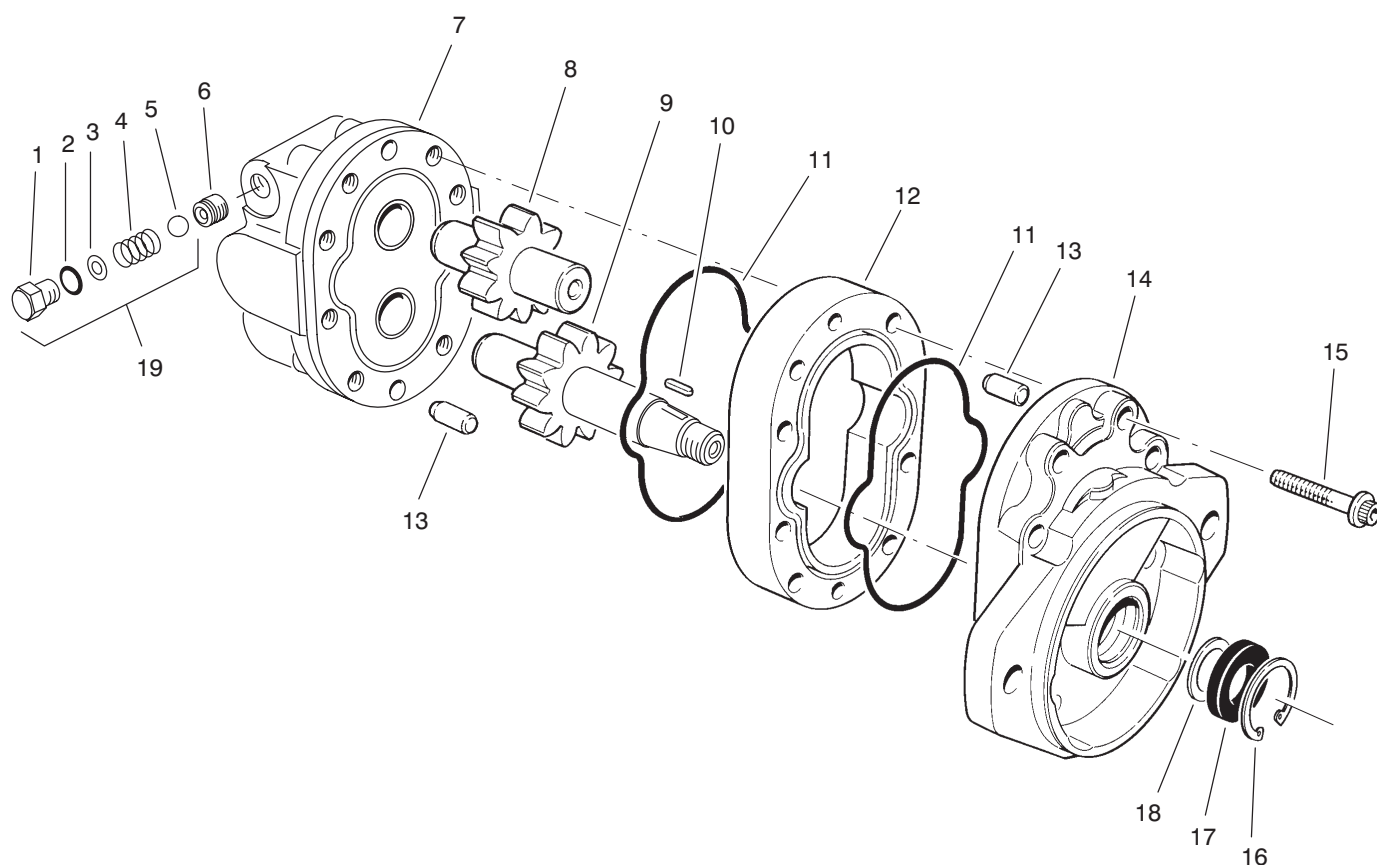

T-2185


REEL MOTOR ASSEMBLY NO. 93-6975

Ref. No.	Part No.	Description	No. Used
†1		Plug	2
†2		Seal - O-Ring	2
†3		Shim	A/R
†4		Spring	2
†5		Ball	2
†6		Seal - Relief Valve	2
7	94-3605	Backplate/Relief Assembly (Incl. Ref. #1-6)	1
8	94-3601	Gear - Idler	1
9	94-3602	Gear - Drive	1
10	94-3606	Key	1
11	59-8420	Seal - O-Ring	2

Ref. No.	Part No.	Description	No. Used
12	94-3603	Body	1
13	42-2010	Pin - Alignment	2
14	66-5730	Front Plate Assembly	1
15	94-3600	Screw - Hex. Socket Hd.	8
16	59-8320	Ring - Retaining	1
17	66-5710	Seal - Oil	1
18	60-5890	Washer - Backup	1
19	92-9260	Relief Valve Assembly (Incl. Ref. #1-5)	1
*	93-1413	Seal Repair Kit (Incl. Ref. #11, 16, 17 & 2)	1

*Not Illustrated


†Not Serviced Separately

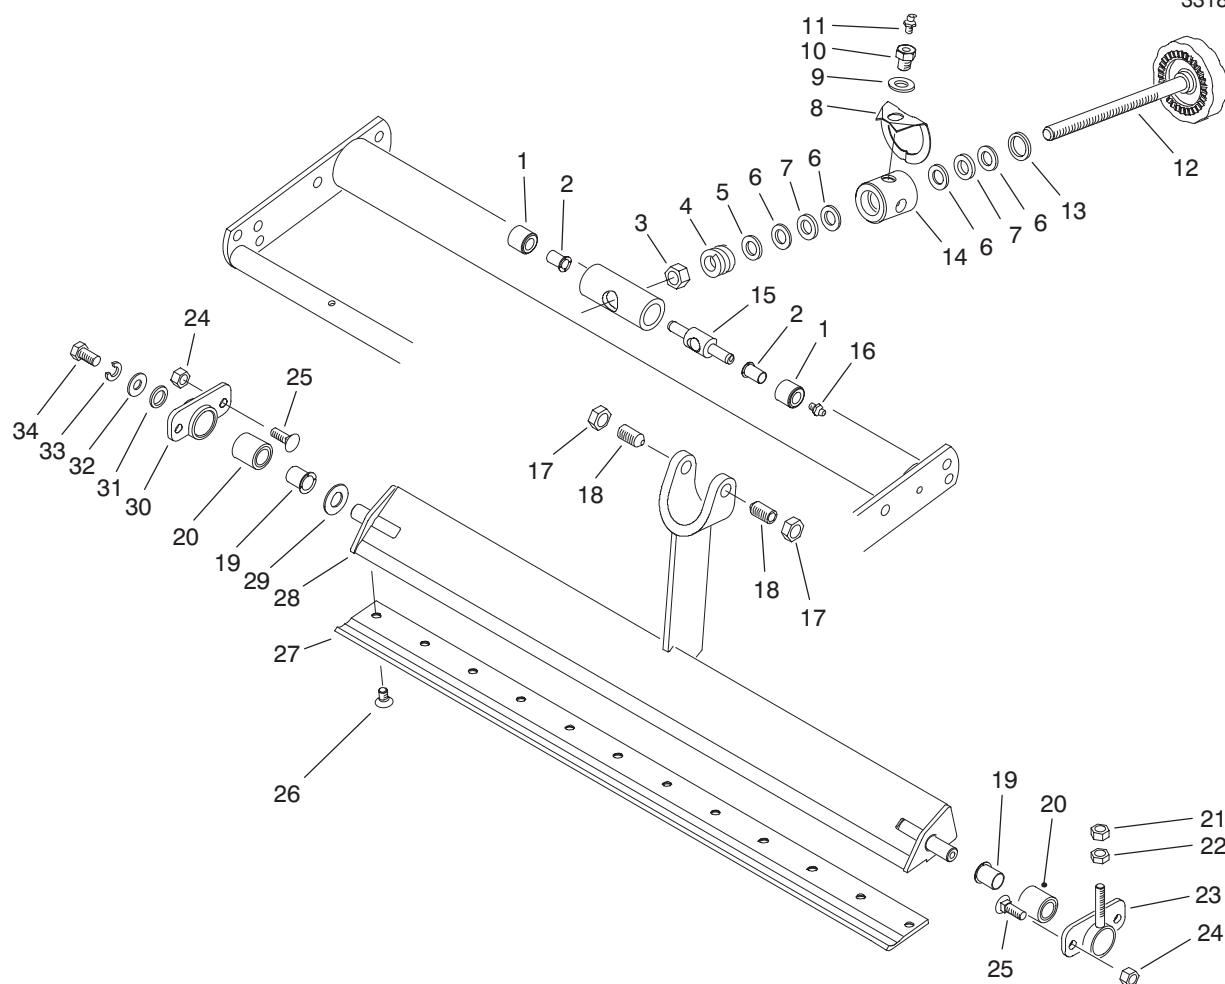

T-2419

BEDBAR & BEDKNIFE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	62-5510	Rubber Bushing Assembly	2	18	57-5190	Screw - Adjustment	2
2	52-2890	Bushing - Flanged (Nylon)	2	19	56-9520	Bushing - Flanged	2
3	3296-62	Nut - Lock	1	20	56-9510	Bushing Assy.	2
4	57-5270	Spring - Compression	1	21	3296-4	Nut - Lock	1
5	29-8870	Washer	1	22	3219-2	Nut - Lock	1
6	257-5	Washer - Thrust	4	23	93-6855	Housing - Bedbar Adj.	1
7	257-6	Bearing - Thrust	2	24	3296-29	Nut - Lock	4
8	52-3000	Arm - Spring	1	25	3230-20	Screw - Carriage	4
9	3256-25	Washer - Flat	1	26	57-4910	Screw - Special	12
10	52-2990	Screw - Spring Retainer	1	27	94-5079	Bedknife - 7 In. Reel	1
11	302-5	Fitting - Grease	1	28	94-4980	Bedbar	1
12	61-1070	Handle - Assembly	1	29	61-1950	Washer - Bedbar	1
13	253-84	Seal	1	30	61-1010	Bedbar Housing	1
14	52-2980	Pivot - Single Point Adjust	1	31	62-7120	Spacer	1
15	57-5260	Pin - S.P.A.	1	32	3256-56	Washer - Flat	1
16	302-18	Fitting - Grease	1	33	3253-4	Washer - Lock	1
17	3218-18	Nut - Jam	2	34	322-3	Screw - Cap Hex. Hd.	1

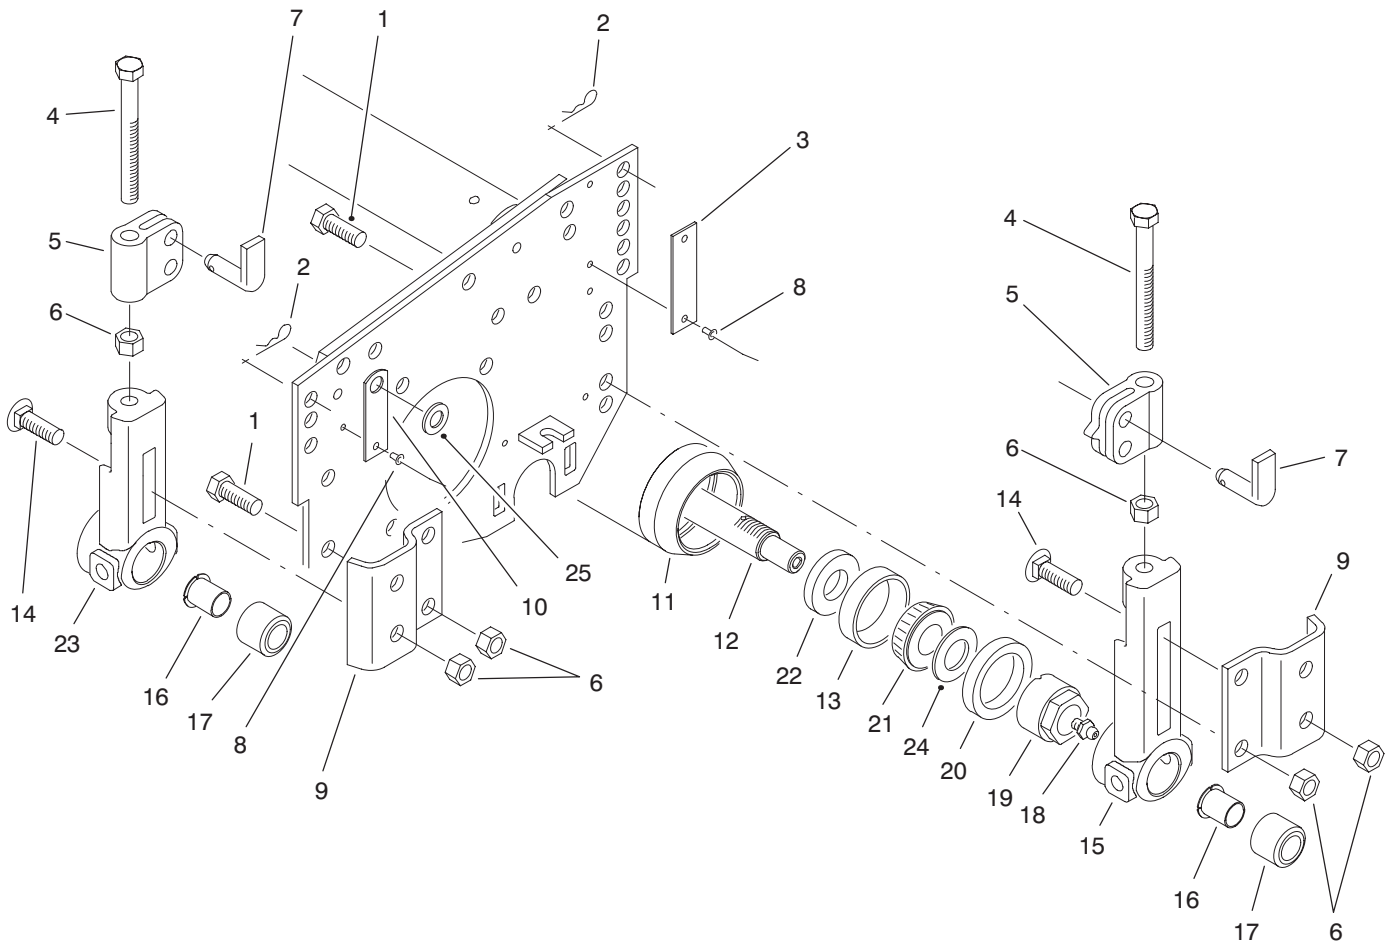


T-0286A

ROLLER INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw — Cap Hex Hd.	8
2	3290-467	Cotter — Hairpin	4
3	61-3800	Plate — HOC Rear (Floating Suspension)	2
*	61-3810	Plate — HOC Rear (Fixed Suspension)	2
4	61-0790	Screw — Cap Hex Hd.	4
5	61-0420	Support — HOC	4
6	3296-39	Nut — Lock	16
7	71-3690	Pin — HOC	4
8	3290-55	Rivet — Pop	6
9	61-0910	Bracket — Angle	4
10	61-3790	Plate — HOC Front	2
11	61-0380	Cap — Roller	2
12	94-4983	Shaft — Roller	1
13	254-79	Cup — Bearing	2

Ref. No.	Part No.	Description	No. Used
14	3231-25	Bolt — Carriage	4
15	61-0430	Bracket — Rear	2
16	56-9520	Bushing — Flanged	2
17	56-9510	Bushing	4
18	302-5	Fitting — Grease	2
19	71-3590	Nut — Adjustment	2
20	253-153	Seal — Outer	2
21	254-78	Cone — Bearing	2
22	253-152	Seal — Inner	2
23	61-0440	Bracket — Front	2
24	62-7660	Washer — Shim (not used on all full roller assemblies)	2
25	3256-38	Washer — Flat	2
*	94-4982	Full Roller Assembly (Incl. Ref. #11-13, 18-22 & 24)	1

*Not Illustrated

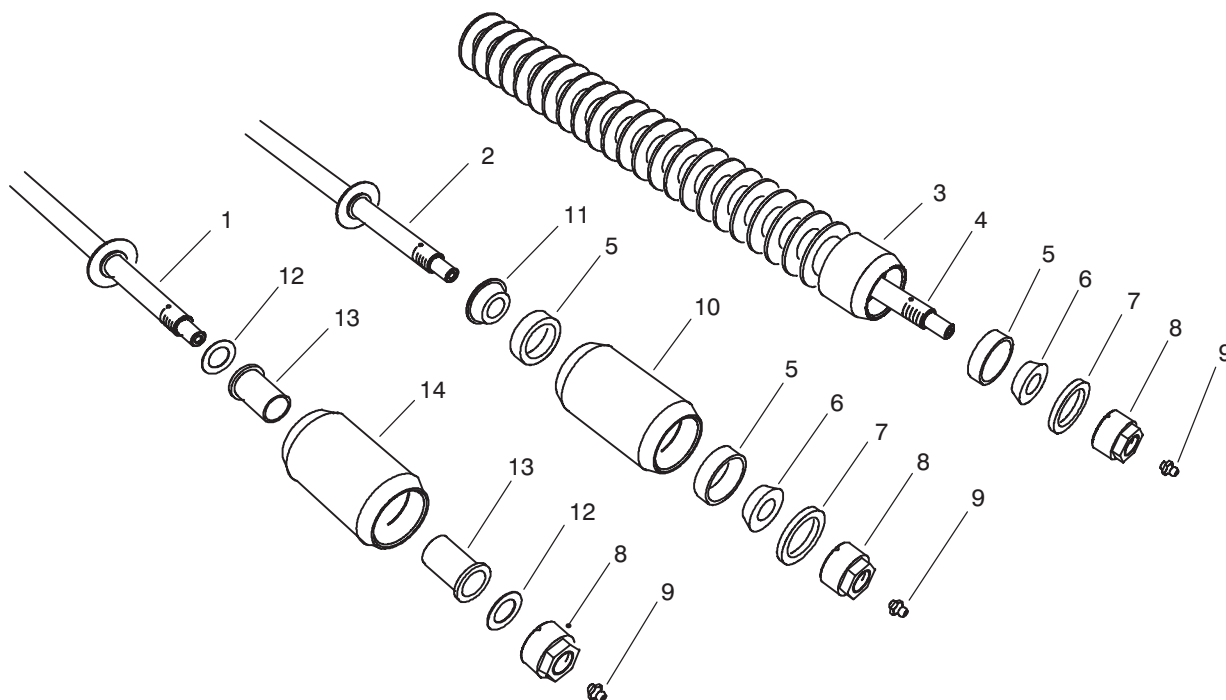

T-2422

CUTTING UNIT ROLLER OPTIONS

Ref. No.	Part No.	Description	No. Used
1	94–5983	Shaft – Anti–Scalp Roller	1
2	94–5984	Shaft – Sectional Roller	1
3	94–4998	Wiehle Roller	1
4	94–4983	Shaft – Full/Wiehle Roller	1
5	254–79	Cup – Bearing (Outer)	6
6	254–78	Cone – Bearing (Outer)	4
7	253–153	Seal – Outer	4
8	71–3590	Nut – Adjustment	6
9	302–5	Fitting – Grease	6
10	76–2400	Roller – Sectional	2
11	252–112	Cone – Bearing (Inner)	2
12	3–6498	Washer – Thrust	4
13	256–117	Bushing – Flanged	4

Ref. No.	Part No.	Description	No. Used
14	63–5060	Roller – Anti–Scalp	2
*	94–4993	Wiehle Roller Assembly (Incl. Ref. #3–9)	1
*	94–5982	Sectional Roller Assembly (Incl. Ref. #2 & 5–11)	1
*	94–5981	Anti–Scalp Roller Assembly (Incl. Ref. #1 & 8–14)	1
*	03475	Wiehle Roller Kit (Incl. 3 No. 94–4993)	1
*	03476	Sectional Roller Kit (Incl. 3 No. 94–5982)	1
*	03477	Anti–Scalp Roller Kit (Incl. 3 No. 94–5981)	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you

are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]