



Count on it.

Parts Catalog

112 Commercial Walk Mower

Model No. 30112—Serial No. 9000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame Assembly 4

Engine and Clutch Assembly 5

Clutch Assembly No. 54-3200 6

Axle Assembly 7

Peerless Transmission Model 787 8

Handle Assembly 9

Engine Assembly 10

Crankcase Assembly 11

Governor Assembly 13

Recoil and Flywheel Assembly 14

Recoil Assembly 15


Air Cleaner and Carburetor Assembly 16

Carburetor Assembly 17

Air Cleaner Assembly 18

Muffler Assembly 19

Sulky Kit Model No. 30122 (optional) 20

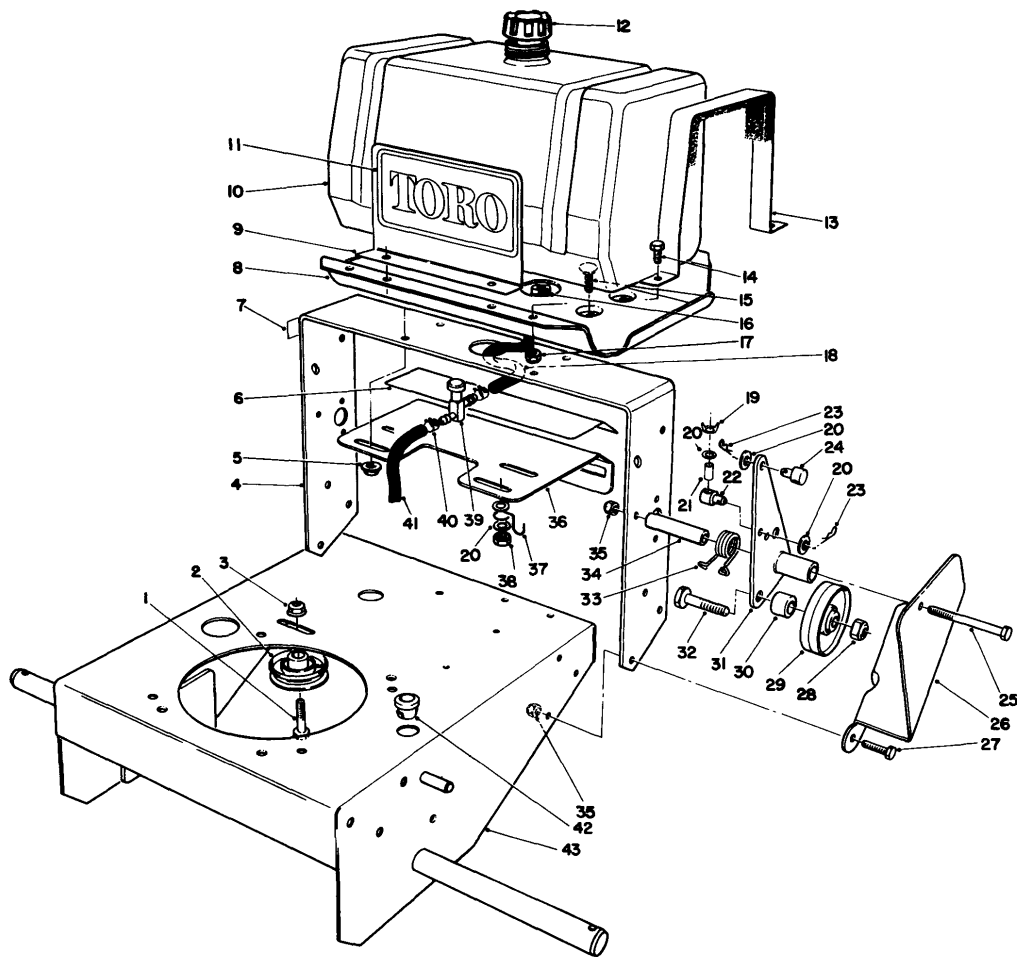


Frame Assembly

Ref.	Part Number	Qty.	Description
1	323-9	1	Screw-HH
2	51-4810	1	Pulley-Idler
3	32128-21	1	Nut-HF
4	54-3170	1	Frame-Rear
5	32128-13	3	Nut-HHF
6	52-2140	1	Decal-Ground Speed
7	55-4230	1	Decal-Fuel Shut Off
8	62-4030	1	Plate-Fuel Tank
9	62-4120	1	Decal-Plate
10	62-4040	1	Tank-Fuel
11	62-5550	1	Decal
12	55-3570	1	Gas Cap ASM
13	62-5500	2	Strap ASM
14	321-3	6	Screw-HH
15	3230-3	4	Screw-CARR
16	2412-36	1	Clamp-Hose
17	3296-42	6	Nut-Lock, NI
18	66-7130	1	Gas Hose
19	32103-25	2	Nut-Wing
20	3256-23	8	Washer-Flat
21	52-2890	2	Bushing-Nylon
22	68-9690	2	Fitting-Rod
23	3290-307	4	Pin-Hair

Ref.	Part Number	Qty.	Description
24	54-3080	2	Rod Fitting
25	323-16	2	Screw-HH
26	67-6380	1	Bracket-LH
	67-6370	1	Bracket-RH ●
27	323-6	6	Screw-HH
28	3296-23	2	Nut-Lock, NI
29	51-4480	2	Idlerwheel
30	51-4490	2	Wheel Idler Spacer
31	67-6760	1	Bracket-Idler, LH
	67-6750	1	Bracket-Idler, RH ●
32	51-4450	2	Screw-Leveler
33	51-4380	1	Spring-Torsion, LH
	51-4370	1	Spring-Torsion, RH ●
34	51-4340	2	Pivot-Idler Spacer
35	3296-39	8	Nut-Lock, NI
36	66-7400	1	Plate
37	62-5610	1	Gas Line Clip
38	3296-29	1	Nut-Lock, NI
39	54-3150	1	Fuel Valve
40	2412-98	2	Clamp-Hose
41	47-2985	1	Gas Hose
42	237-124	1	Grommet
43	51-4100	1	Frame


● Not illustrated

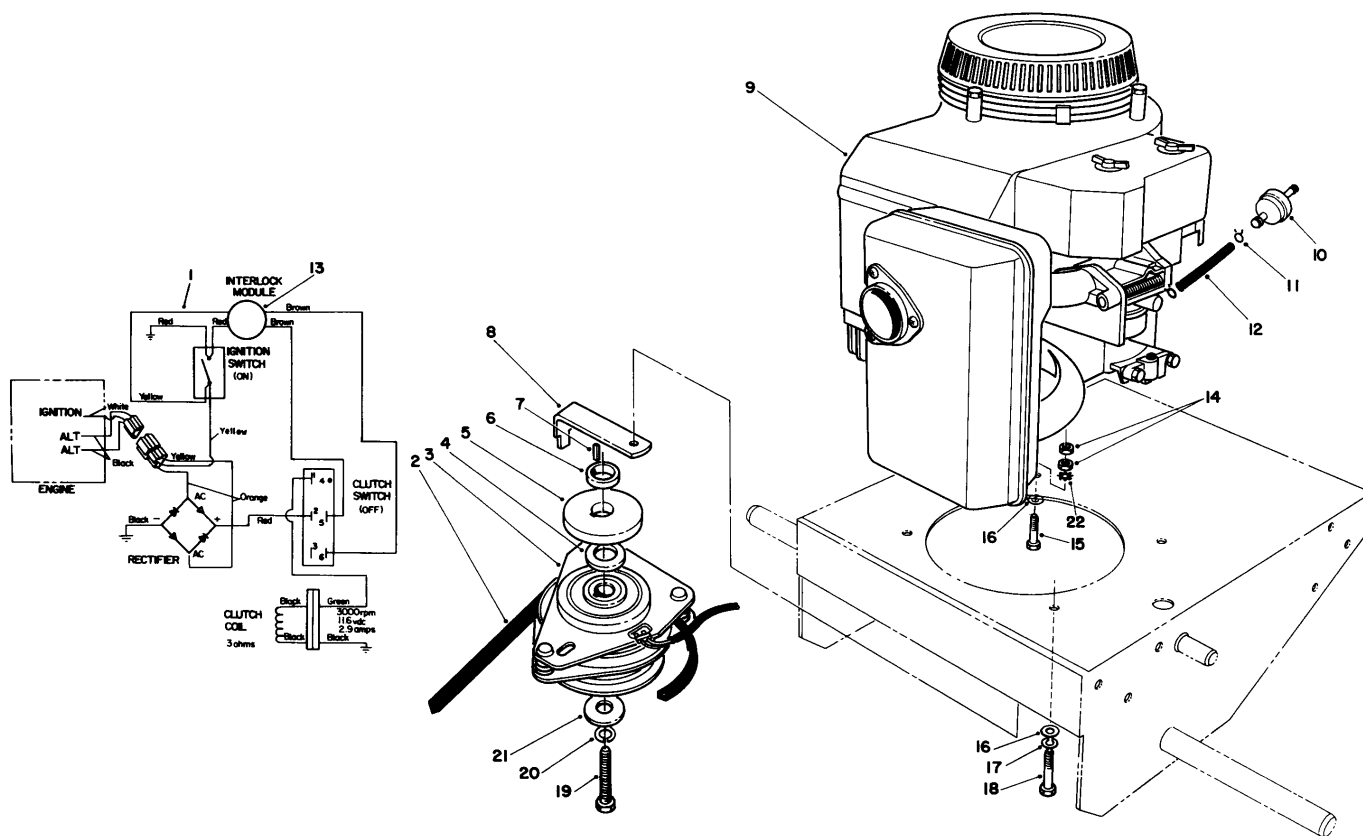

Engine and Clutch Assembly


Ref.	Part Number	Qty.	Description
1	57-6320	1	Wire Harness
2	54-2750	1	V-Belt, Drive
3	54-3200	1	Clutch/Brake
4	51-3280	1	Spacer-Lower
5	51-4460	1	Pulley-Drive
6	51-3290	1	Spacer-Upper
7	5-1336	1	Key-Square
8	51-4540	1	Retainer-Clutch
9		1	Engine-Kawasaki, Fb460V Type Ds08 ●
10	56-6360	1	Filter-Fuel
11	2412-98	3	Clamp-Hose
12	47-2982	1	Hose-Fuel
13	51-3250	1	Module
14	57-6390	2	Nut-Jam
15	57-6370	1	Screw (Engine, Ground)
16	3256-23	4	Washer-Flat
17	3253-4	3	Washer-Lock
18	57-6380	3	Screw-HH
19	57-6360	1	Screw-Clutch
20	3253-22	1	Washer-Lock
21	44-8160	1	Washer-Clutch
22	3255-8	1	Washer-Lock

● Not serviced separately

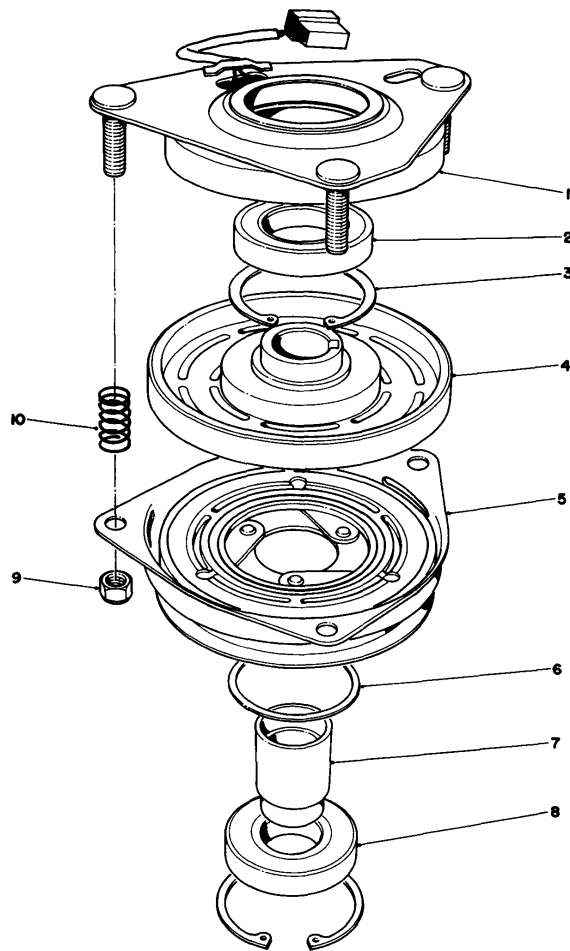

Clutch Assembly No. 54-3200


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	44-8350	1	Field Assembly (Incl. Ref. #2 & 3)
2	251-292	1	Bearing-Field
3	44-8310	2	Ring-Retaining
4	44-8360	1	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)
5	55-7410	1	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)
6	44-8330	1	Spacer-Bearing, Pulley
7	44-8340	1	Collar-Bearing
8	251-291	1	Bearing-Pulley
9	3296-5	3	Nut-Lock
10	44-8320	3	Spring

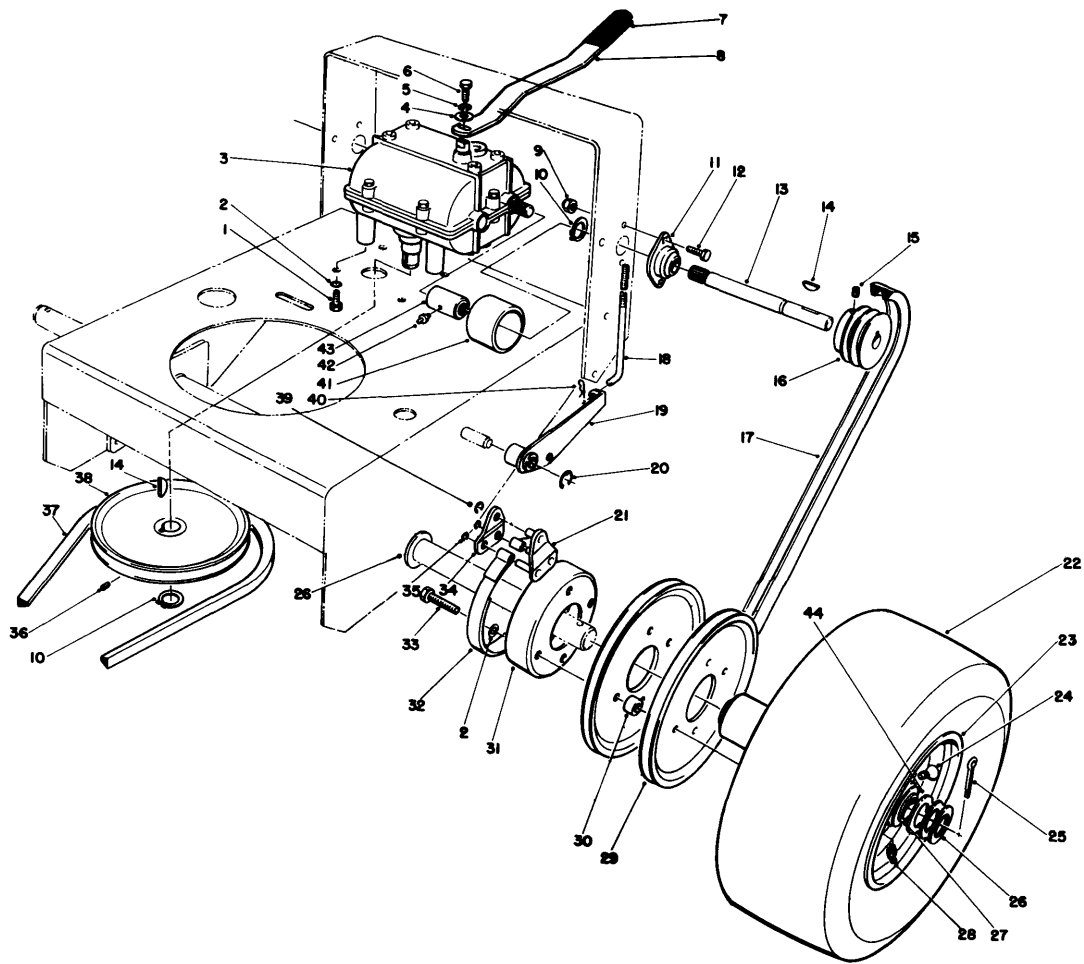

Axle Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	322-2	4	Screw-HH	22	231-111	2	Tire
2	3253-4	12	Washer-Lock	23	242-80	2	Wheel And Hub ASM
3	51-4090	1	Transmission	24	232-27	2	Stem-Valve
4	7-5461	1	Spacer	25	3272-30	2	Pin-Cotter
5	3253-3	1	Washer-Lock	26	51-4230	6	Washer-Wheel
6	329-4	1	Screw-HH	27	251-321	2	Bearing-Ball, Flanged
7	47-1970	1	Grip	28	302-11	2	Fitting-Lube, 45 DEG
8	51-4150	1	Lever-Shift	29	51-4160	4	Pulley-Wheel
9	3296-42	4	Nut-Lock, NI	30	51-4170	8	Spacer-Pulley
10	32120-64	3	Ring-Snap, External	31	51-4180	2	Drum-Brake
11	51-4270	2	Bearing-External Shaft	32	51-4700	2	Band-Brake
12	321-4	4	Screw-HH	33	322-7	8	Screw-HH
13	51-4240	1	Shaft-Extension, RH ●	34	51-4660	2	Plate-Link
	51-4250	1	Shaft-Extension, LH	35	32151-72	4	Ring-Retaining
14	3257-5	3	Key-Woodruff	36	3241-5	1	Screw-Set
15	3246-6	2	Screw-Set, HSH	37	26-9670	1	V-Belt
16	51-4280	2	Pulley-Drive	38	51-4190	1	Pulley-Driven
17	51-4290	2	V-Belt	39	32151-56	2	Ring-Retaining, External
18	51-4580	2	Rod-Brake	40	3290-307	2	Pin-Hair
19	51-4610	1	Brake Arm-LH	41	51-4220	2	Guard-Coupler
	51-4600	1	Brake Arm-RH ●	42	302-5	2	Fitting-Grease
20	32151-40	2	Ring-Retaining	43	51-4260	2	Coupler
21	68-9660	2	Link-Brake	44	10-8110	0	Washer-Thrust


● Not illustrated

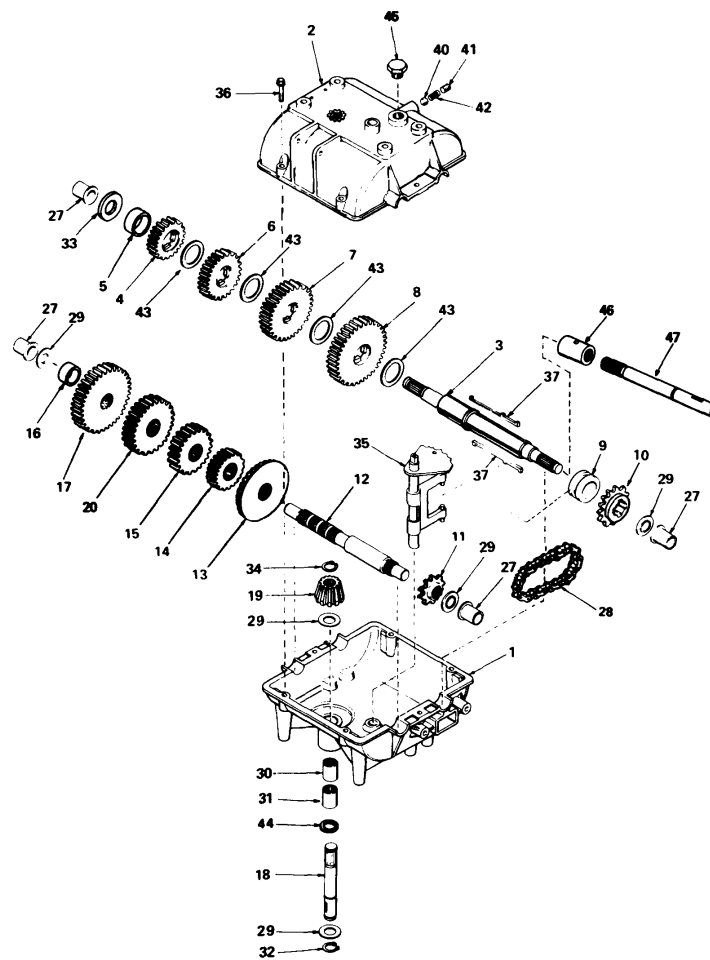

Peerless Transmission Model 787


Ref.	Part Number	Qty.	Description
1	770061	1	Case-Transmission
2	772083	1	Cover-Transmission
3	776217	1	Shaft-Output
4	778123A	1	Gear-Spur, 25 Teeth
5	786072	1	Spacer
6	778124A	1	Gear-Spur, 30 Teeth
7	778125	1	Gear-Spur, 35 Teeth
8	778146A	1	Gear-Spur, 37 Teeth
9	784266	1	Collar-Shift
10	786083	1	Sprocket-18 Teeth
11	786082	1	Sprocket-9 Teeth
12	776134	1	Countershaft
13	778154	1	Gear-Bevel, 42 Teeth
14	778145	1	Gear-Spur, 12 Teeth
15	778151	1	Gear-Spur, 15 Teeth
16	786071	1	Spacer
17	778127A	1	Gear-Spur, 25 Teeth
18	776135	1	Shaft-Input
19	778153	1	Bevel Pinion-Input
20	778126A	1	Gear-Spur, 20 Teeth
27	780105A	1	Bushing-Flange

Ref.	Part Number	Qty.	Description
28	786081	1	Chain-Roller #41
29	780072	1	Washer
30	780086	1	Bearing-Needle
31	780142	1	Bearing-Needle
32	792035	1	Ring-Snap
33	780139	1	Washer
34	788040	1	Ring-Retainer
35	784267	1	Rod And Fork ASM
36	792073	1	Ring Set (.020 O S)
37	792089A	1	Key
40	792077	1	Ball-Steel
41	792078	1	Screw-Set
42	792079	1	Spring
43	780108	1	Washer
44	792001	1	O Ring
45	792074	1	Plug
46	786108	1	Coupler
47	776230	1	Shaft-Output Extension (4-63/64" 4.)
47	776231	1	Shaft-Output Extension (7-39/64" Lg)

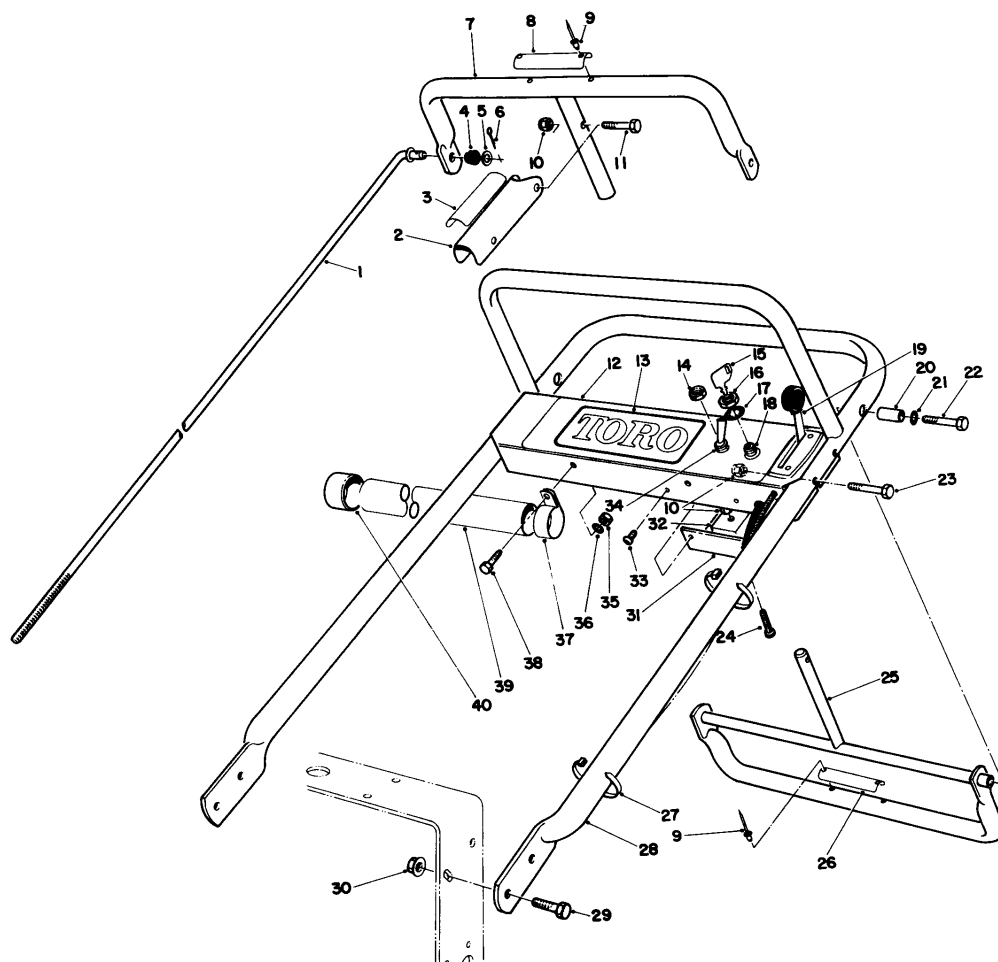

Handle Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	54-3070	2	Rod-Control	22	323-10	2	Screw-HH
2	51-4850	1	Lever-Parking Brake	23	32105-14	4	Screw-SHH
3	52-2010	1	Decal-Lever, Parking	24	32105-13	1	Screw-HWH
4	237-141	2	Grommet-Rubber	25	51-4760	1	Control-Pivot
5	3256-23	2	Washer-Flat	26	52-2120	1	Decal-Reverse Handle
6	3272-4	2	Pin-Cotter	27	3290-378	2	Tie-Cable
7	51-4730	1	Bar-Control	28	51-4550	1	Handle-Upper
8	54-2740	1	Decal-Control Bar	29	3234-11	4	Screw-HHF
9	3290-54	4	Rivet-Pop	30	32128-21	4	Nut-HF
10	3296-2	6	Nut-Lock, NI	31	57-5810	1	Panel-Bottom
11	32105-1	1	Screw-SHH	32	37-7600	1	Rectifier-Bridge
12	68-9680	1	Panel-Control	33	32104-76	4	Screw
13	57-6310	1	Decal-Control Panel	34	37-2610	1	Switch-Clutch (Incl. Ref. #14)
14	218-500	1	Nut	35	3296-42	2	Nut-Lock, NI
15	63-8360	1	Key-Ignition	36	3256-22	2	Washer-Flat
16	218-461	1	Nut-HH	37	2412-102	2	Clamp-R
17	3254-5	1	Washer-Tooth, Internal	38	321-3	2	Screw-HH
18	29-5560	1	Switch (Incl. Ref. #16 & 17)	39	65-5870	1	Tube
19	51-4820	1	Throttle-Control	40	65-5890	2	Cap-End
20	51-4790	2	Pivot-Spacer				
21	3253-21	2	Washer-Lock				

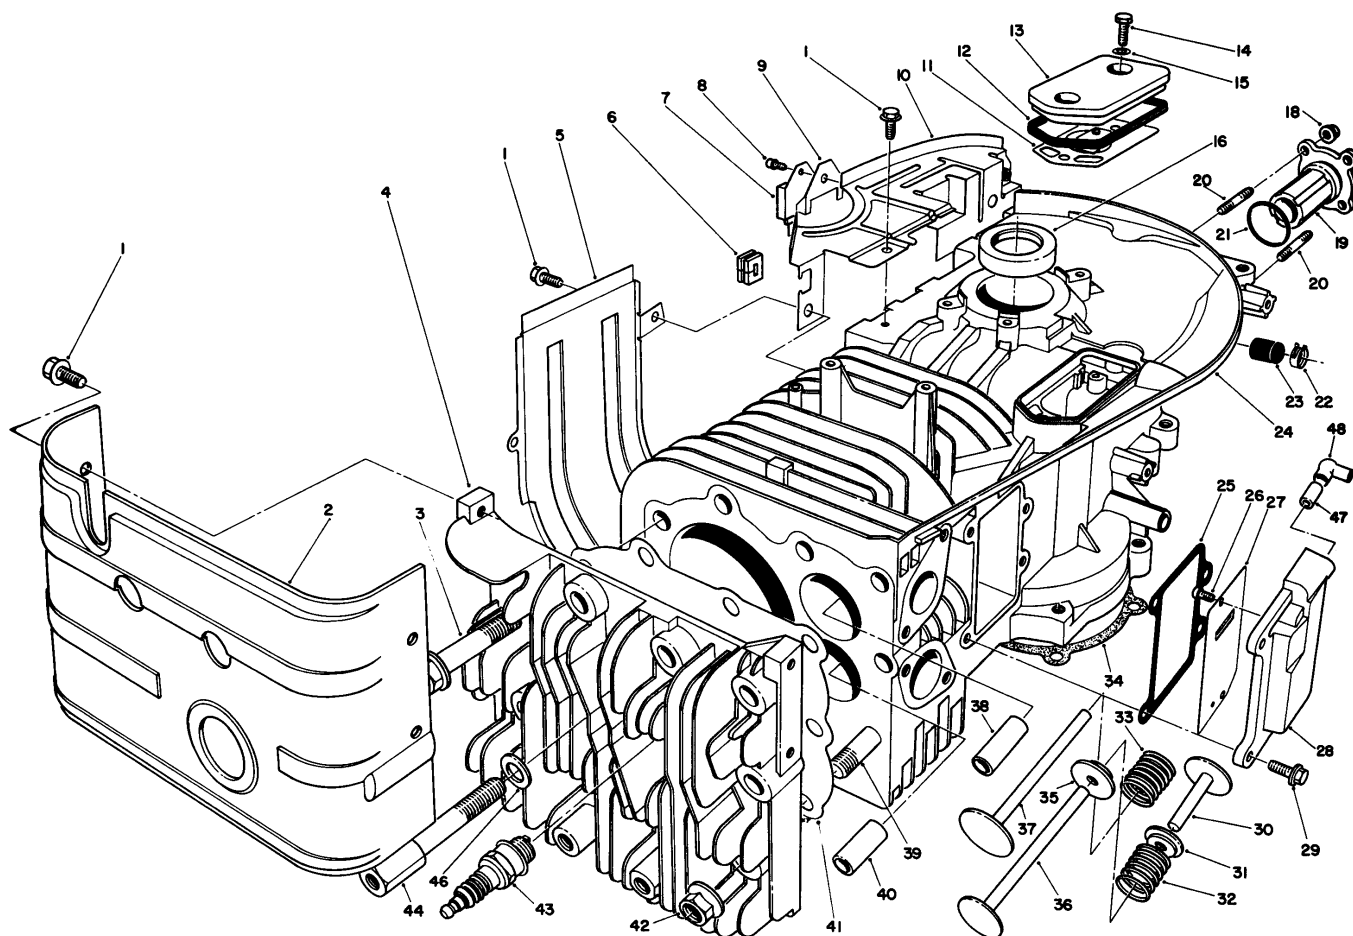

Engine Assembly

Ref.	Part Number	Qty.	Description
1	130G0610	8	Bolt-Flanged (6X10)
2	49089-2181-9H	1	Shroud
3	130G1055	4	Bolt
4	11001-2102	1	Cylinder Head
5	49089-2199-9H	1	Shroud
6	92071-2099	6	Grommet
7	21119-2095	1	Igniter
8	234b0408	1	Screw
9	310702-8137A	1	Bracket
10	59066-2295-9H	1	Fan Housing
11	14069-2062	1	Breather
12	11009-2339	1	Gasket
13	14025-2040	1	Cover
14	315501-5381A	2	Bolt
15	312200-7415-02	2	Gasket
16	92049-2096	1	Oil Seal
17	171G0612	2	Stud
18	92015-1193	4	Nut
19	13107-2091	1	Shaft
20	92004-2083	4	Stud
21	92055-2072	1	O-Ring
22	31796-6812-00	1	Clip
23	92066-2096	1	Plug
24	49120-6025	1	Crankcase Assembly


Ref.	Part Number	Qty.	Description
25	11009-2502	1	Gasket
26	314405-3092A	2	Screw
27	14025-2143	1	Cover
28	49108-2011	1	Cover-Valve Chamber
29	130G0616	4	Bolt-Flanged (6X16)
30	12032-2058	2	Tappet
31	39108-2054	2	Retainer-Spring
32	49078-2058	1	Spring-Valve
33	49078-2059	1	Spring-Valve
34	49015-6001	1	Gasket
35	12039-2052	1	Rotator
36	12005-2066	1	Exhaust Valve
37	12004-2076	1	Intake Valve
38	49002-2070	1	Guide-Intake Valve
39	92004-2082	3	Stud
40	49002-2071	1	Guide-Exhaust Valve
41	11004-2079	1	Gasket
42	92015-2115	3	Nut
43	92070-2072	1	Spark Plug
44	92002-2258	2	Bolt
46	410B1000	2	Washer
47	92059-2142	1	Tube
48	59071-2062	1	Joint

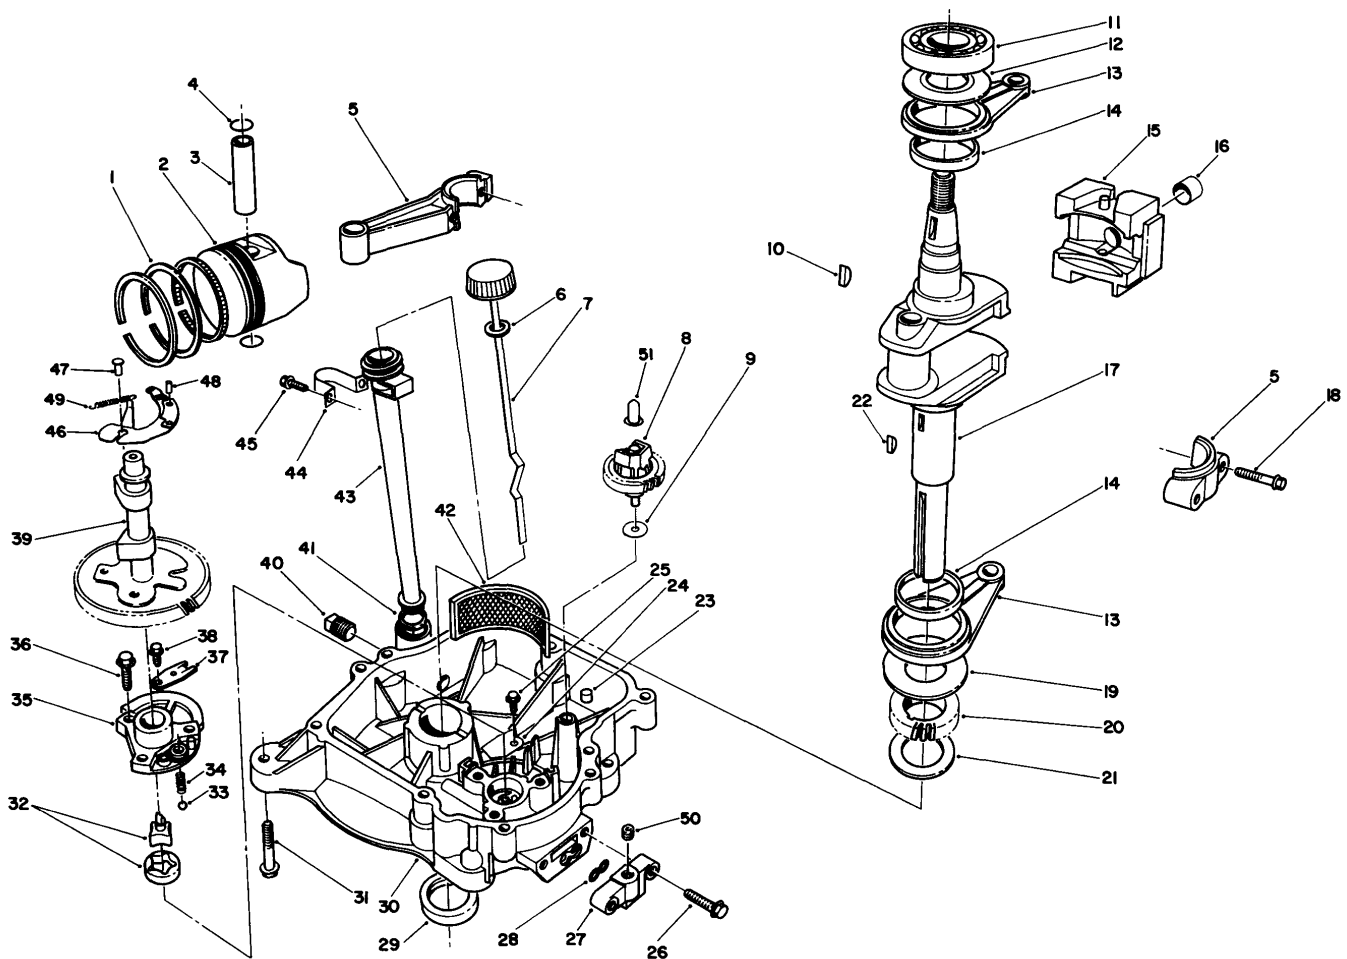

Crankcase Assembly


Ref.	Part Number	Qty.	Description
1	13008-6001	1	Piston Ring Set
	13008-6002	0	Set-Ring Piston 0.25
	13008-6003	0	Set-Ring Piston 0.50
	13008-6004	0	Piston Rin Set (.75Mm)
2	13001-2084	1	Piston
	13029-2019	0	Piston 0.25
	13029-2020	0	Piston 0.50
	13027-2001	0	Piston (.75Mm)
3	13002-2066	1	Pin-Piston
4	92033-2066	2	Ring-Snap
5	13251-6005	1	Rod ASM Incl #10 11
	13251-6007	0	Rod ASM Incl #10 110.50
6	11009-2346	1	Gasket
7	52005-2058	1	Gauge
8	49110-2067	1	Governor ASM
9	314401-5135A	1	Washer
10	92038-2094	1	Key
11	601A6207	1	Ball Bearing
12	92026-2164	1	Spacer
13	46102-6001	2	Rod Assembly
14	92141-2094	2	Bearing Plane
15	13042-6006	1	Weight
16	92141-2097	1	Bushing
17	49119-2133	1	Crankshaft
18	315801-3245A	2	Bolt
19	92026-2156	1	Spacer
20	59056-2105	1	Gear

Ref.	Part Number	Qty.	Description
21	92025-2145	0	Shim (1.18)
	92025-2146	0	Shim (1.25)
	92025-2147	0	Shim (1.32)
	92025-2148	0	Shim (1.39)
	92025-2149	0	Shim (1.46)
	92025-2150	0	Shim (1.53)
	92025-2151	0	Shim (1.60)
	92025-2152	0	Shim (1.67)
	92025-2153	0	Shim (1.74)
22	92038-2094	1	Key
23	92043-1263	2	Pin
24	13169-2359	1	Plate
25	130B0508	1	Bolt
26	130B0830	2	Bolt
27	14025-2145	1	Cover
28	92055-2063	1	Seal
29	92049-2104	1	Oil Seal
30	49015-6001	1	Gasket
31	130G0845	4	Bolt-Flanged (8X45)
32	16082-2057	1	Pump ASM-Oil
33	600A1000	1	Ball
34	92081-2216	1	Spring
35	16142-6001	1	Cover-Pump
36	130G0825	3	Bolt-Flanged (8X25)
37	13169-2360	1	Plate
38	130B0610	1	Bolt-Flanged (6X10)
39	49118-2064	1	Camshaft Compression

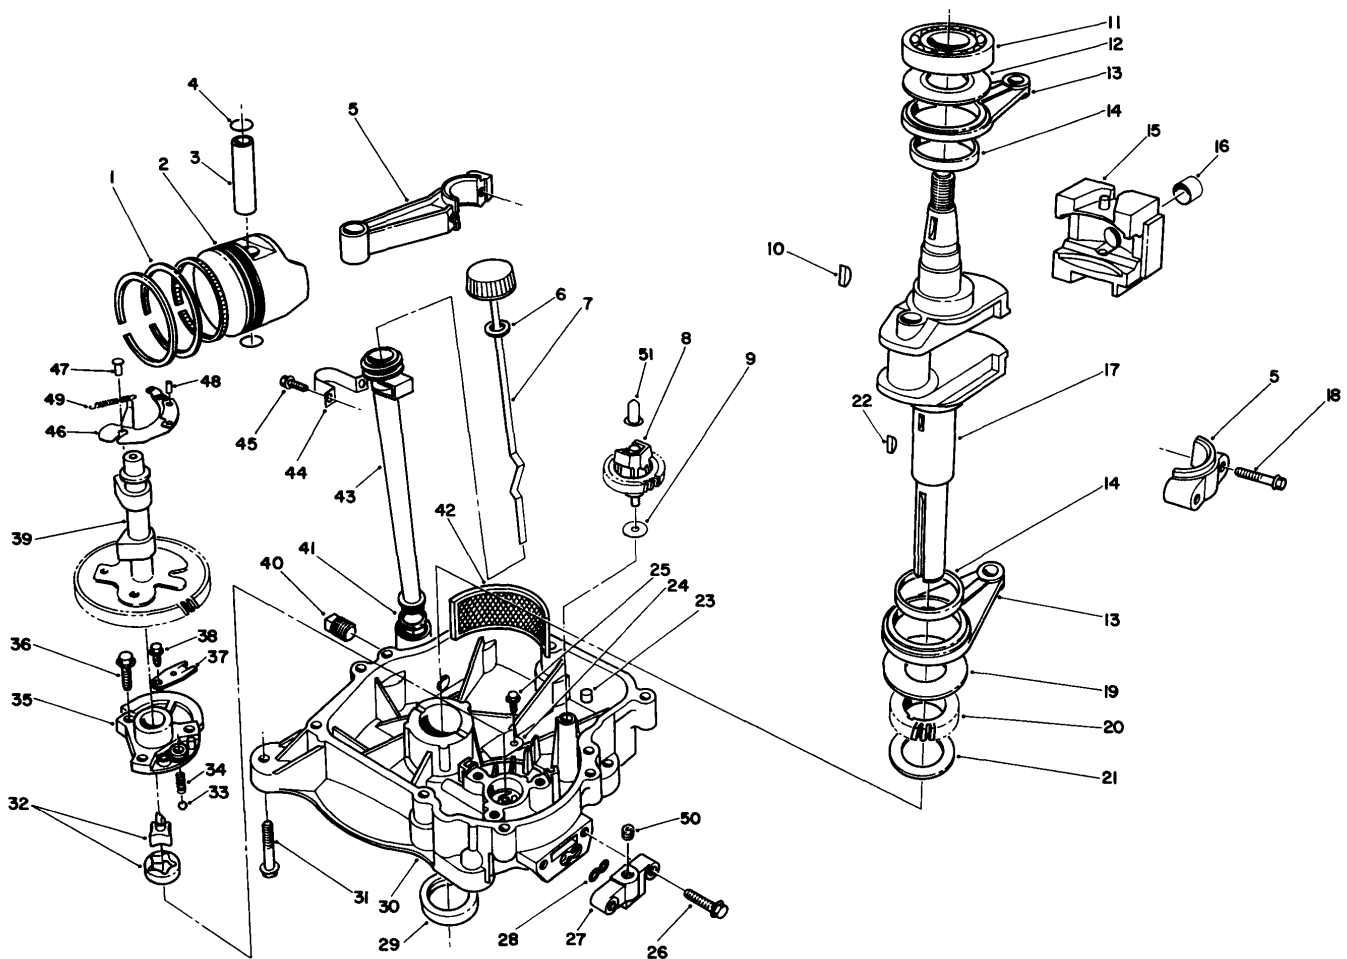


Crankcase Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
40	92066-2097	1	Plug	46	21118-2068	1	Decompressor
41	670D2016	1	O-Ring (16Mm)	47	92043-2113	2	Pin
42	49065-2056	1	Filter-Oil	48	92043-2167	1	Pin
43	59231-2059	1	Filler	49	92144-2171	1	Spring
44	92037-2160-9H	1	Clamp	50	92066-2102	1	Plug
45	130B0508	1	Bolt	51	42036-2060	1	Sleeve

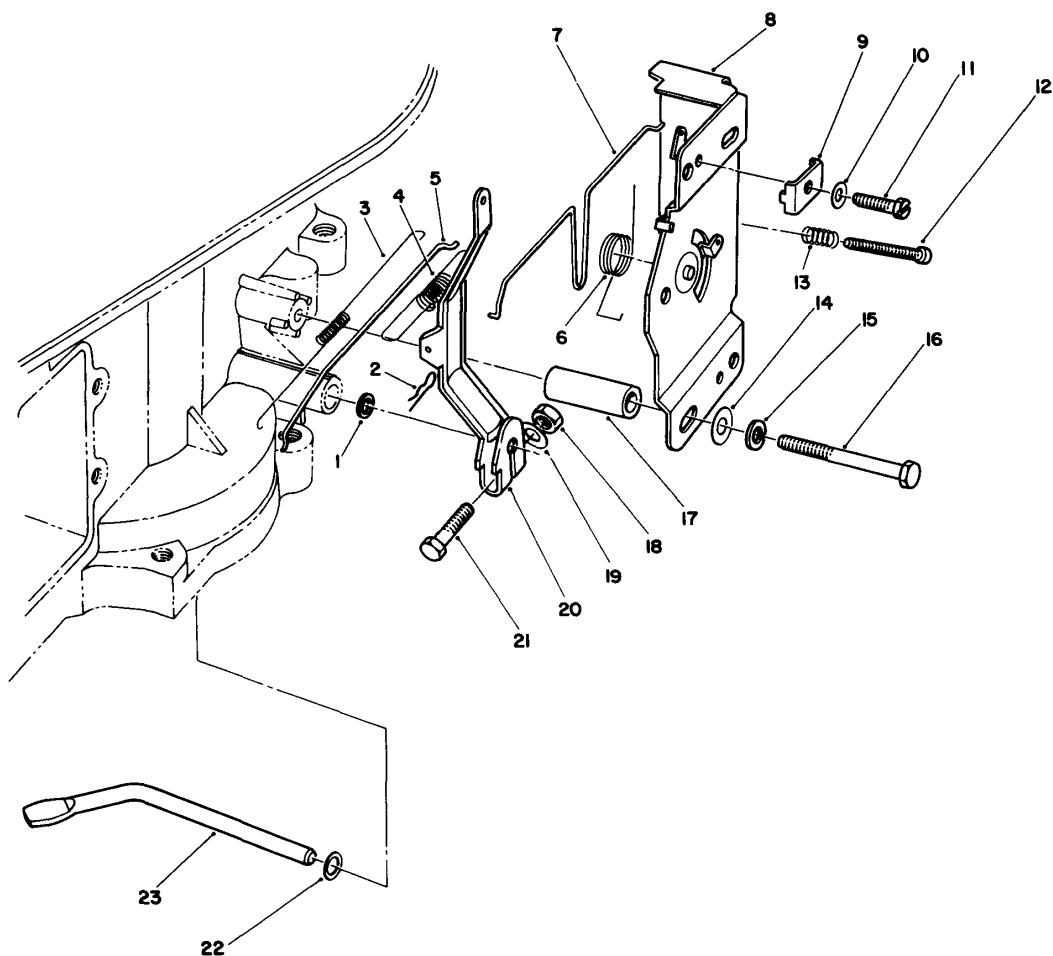

Governor Assembly

Ref.	Part Number	Qty.	Description
1	92049-2097	1	Seal-Oil (Vc6X10X2.6)
2	554A0600	1	Pin-Snap (1.2 X 21.2)
3	92081-2213	1	Spring
4	39129-2010	1	Spring
5	16171-2001	1	Link
6	92081-2316	1	Spring
7	16169-2074	1	Link-Choke
8	49113-2067	1	Panel Incl #2 4-7
9	92037-2020	1	Clamp
10	411B0500	1	Washer
11	310701-1225A	1	Bolt
12	214b0425	1	Screw
13	314401-5321B	1	Spring
14	311509-3595-00	2	Washer
15	461F0600	2	Washer
16	112B0650	2	Bolt
17	92027-2071	2	Collar
18	311B0600	1	Nut-Hex (6Mm)
19	411B0600	1	Washer-Plain (6Mm)
20	21187-2052	1	Arm ASM
21	92002-2269	1	Bolt (6X28)
22	410B0600	1	Washer
23	39003-2062	1	Arm-Pivot

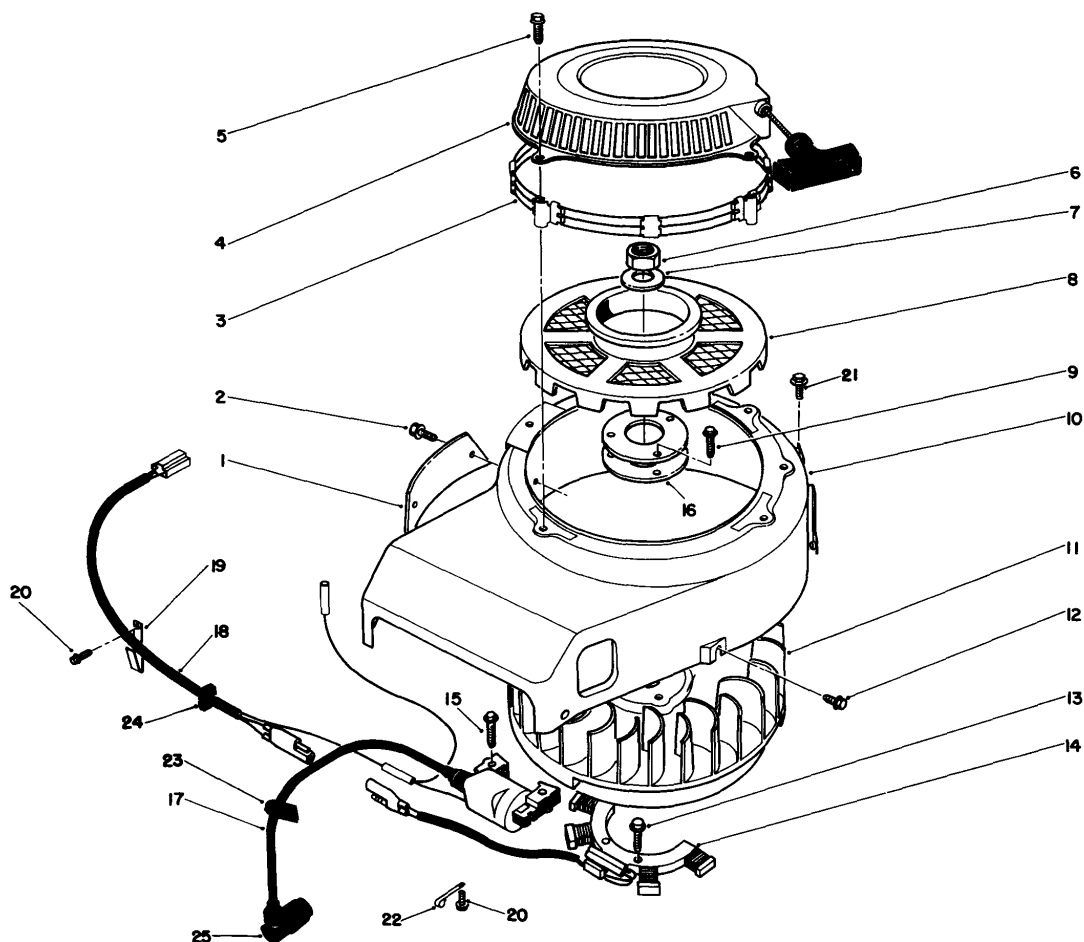


Recoil and Flywheel Assembly

Ref.	Part Number	Qty.	Description
1	14024-2038-9H	1	Cover
2	234b0408	2	Screw
3	55020-2054	1	Guard
4	49088-2212-YK	1	Recoil Starter ASM
5	130B0635	4	Bolt-Flanged (6X35)
6	314G1800	1	Nut
7	92022-2178	1	Washer
8	49080-2123YK	1	Pulley
9	130G0812	3	Bolt-Flanged (8X12)
10	59066-2310-9H	1	Housing-Fan
11	21194-2001	1	Flywheel
12	130B0610	2	Bolt-Flanged (6X10)
13	244B0620	2	Screw


Ref.	Part Number	Qty.	Description
14	59031-2065	1	Coil
15	130B0525	2	Bolt
16	92025-2161	0	Shim
17	21121-2008	1	Coil
18	26001-2113	1	Harness
19	313646-8161-00	1	Clamp
20	130G0610	2	Bolt-Flanged (6X10)
21	130G0614	2	Bolt-Flanged (6X14)
22	92037-2158	1	Clamp
23	92071-2100	1	Grommet
24	92071-2099	1	Grommet
25	21130-2060	1	Cap-Spark
	26011-2119	1	Lead Wire ●

● Not illustrated

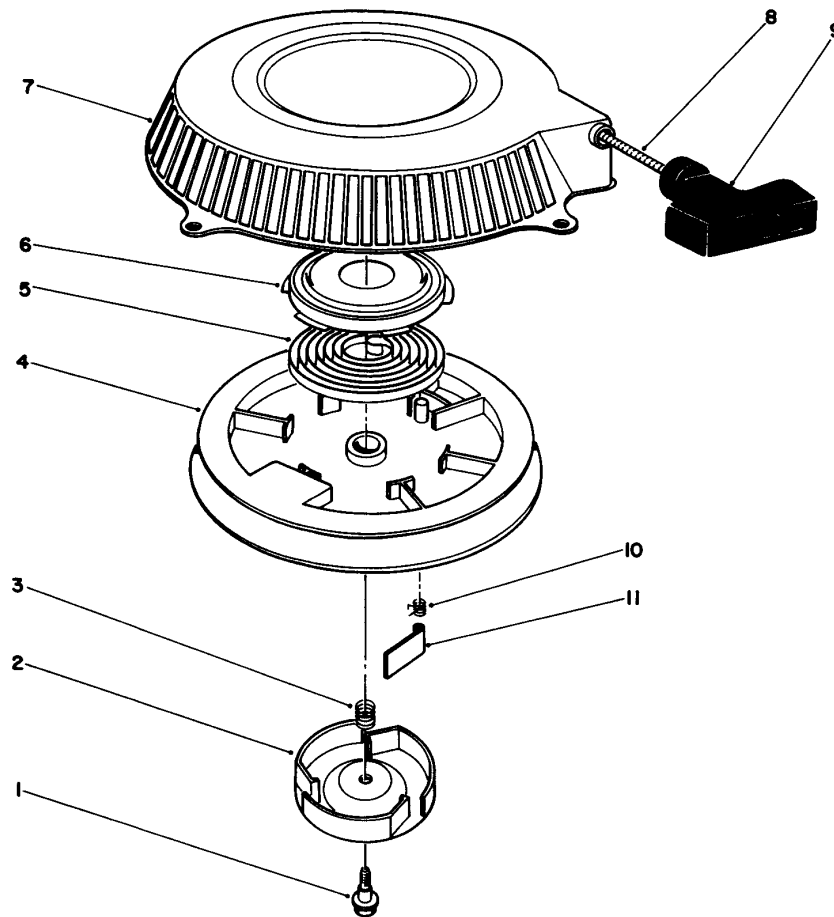


Recoil Assembly

Ref.	Part Number	Qty.	Description
1	314501-3447A	1	Bolt
2	14020-2054	1	Retainer
3	92081-2268	1	Spring
4	59101-2054	1	Reel
5	92081-2267	1	Spring
6	32099-2060	1	Case
7	32099-2059YK	1	Case
8	59106-2060	1	Rope
9	46075-2059	1	Grip
10	314401-3444A	3	Spring-Return
11	13165-2057	3	Pawl
	49088-2212-YK	1	Recoil Starter ASM

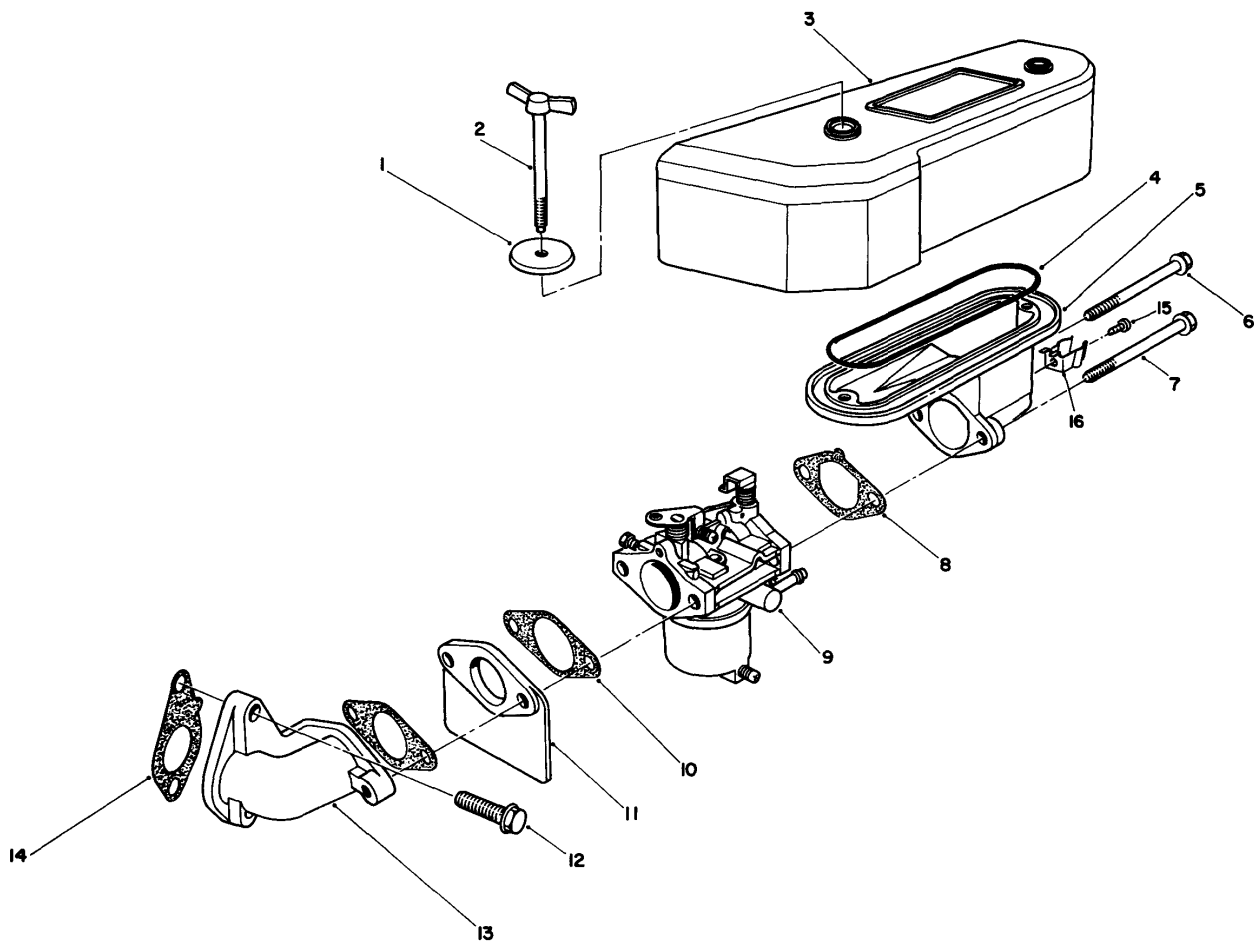

Air Cleaner and Carburetor Assembly


Ref.	Part Number	Qty.	Description
1	92022-2220	2	Washer
2	92002-2230	2	Bolt
3	11010-2291	1	Filter ASM
4	11009-2443	1	Gasket
5	16060-2108	1	Pipe-Intake
6	92002-2254	1	Bolt
7	92002-2253	1	Bolt
8	11009-2344	1	Gasket
9	15001-2721	1	Carburetor ASM
10	11009-2343	2	Gasket
11	16073-2091	1	Insulator
12	130G0825	2	Bolt-Flanged (8X25)
13	16060-2109	1	Pipe-Intake
14	11009-2342	1	Gasket
15	224B0508	1	Screw
16	92037-2019	1	Clamp

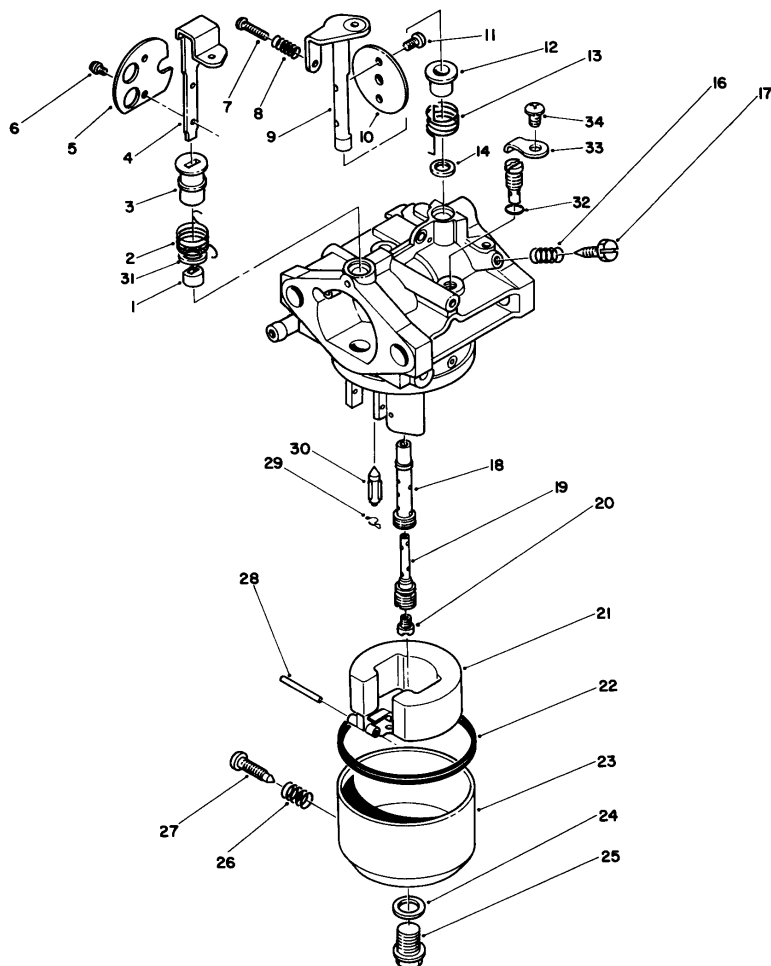

Carburetor Assembly


Ref.	Part Number	Qty.	Description
1	314598-6138A	1	Ring
2	92144-2160	1	Spring
3	92143-2142	1	Ring
4	16041-2010	1	Shaft-Choke
5	16126-2105	1	Valve-Choke
6	314572-6137A	2	Screw
7	92009-2079	1	Screw
8	313650-6108-00	1	Spring
9	16041-2009	1	Shaft-Throttle
10	16025-2114	1	Valve-Throttle
11	316550-6137A	2	Screw
12	92027-2025	1	Collar
13	92081-2077	1	Spring
14	316626-6206A	1	Seal
15	92064-2062	1	Jet
16	312750-6116-00	1	Spring
17	16014-2055	1	Screw
18	49121-2077	1	Nozzle

Ref.	Part Number	Qty.	Description
19	49123-2058	1	Pipe-Bleed
20	92063-2010	1	Jet
21	16031-2066	1	Float
22	313650-6128-00	1	Gasket
23	16020-2094	1	Chamber-Float
24	318190-6159-00	1	Washer
25	314486-6143A	1	Bolt
26	313122-6116-00	1	Spring
27	315470-6133A	1	Screw
28	314499-6127A	1	Pin
29	315721-6134A	1	Clip
30	16030-2021	1	Valve-Needle
	15001-2721	1	Carburetor ASM
31	92093-2069	1	Seal
32	16038-024	1	Gasket
33	13183-2252	1	Plate
34	92009-2244	1	Screw

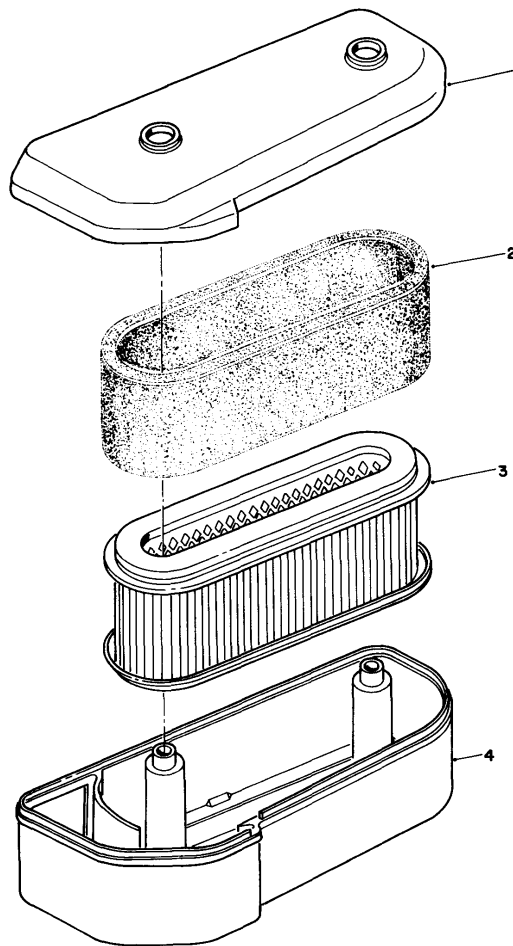


Air Cleaner Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	11012-2192	1	Cap-Air Filter
2	11013-2020	1	Element
3	11013-2021	1	Element
4	11011-2174	1	Case-Air Filter
	11010-2291	1	Filter ASM

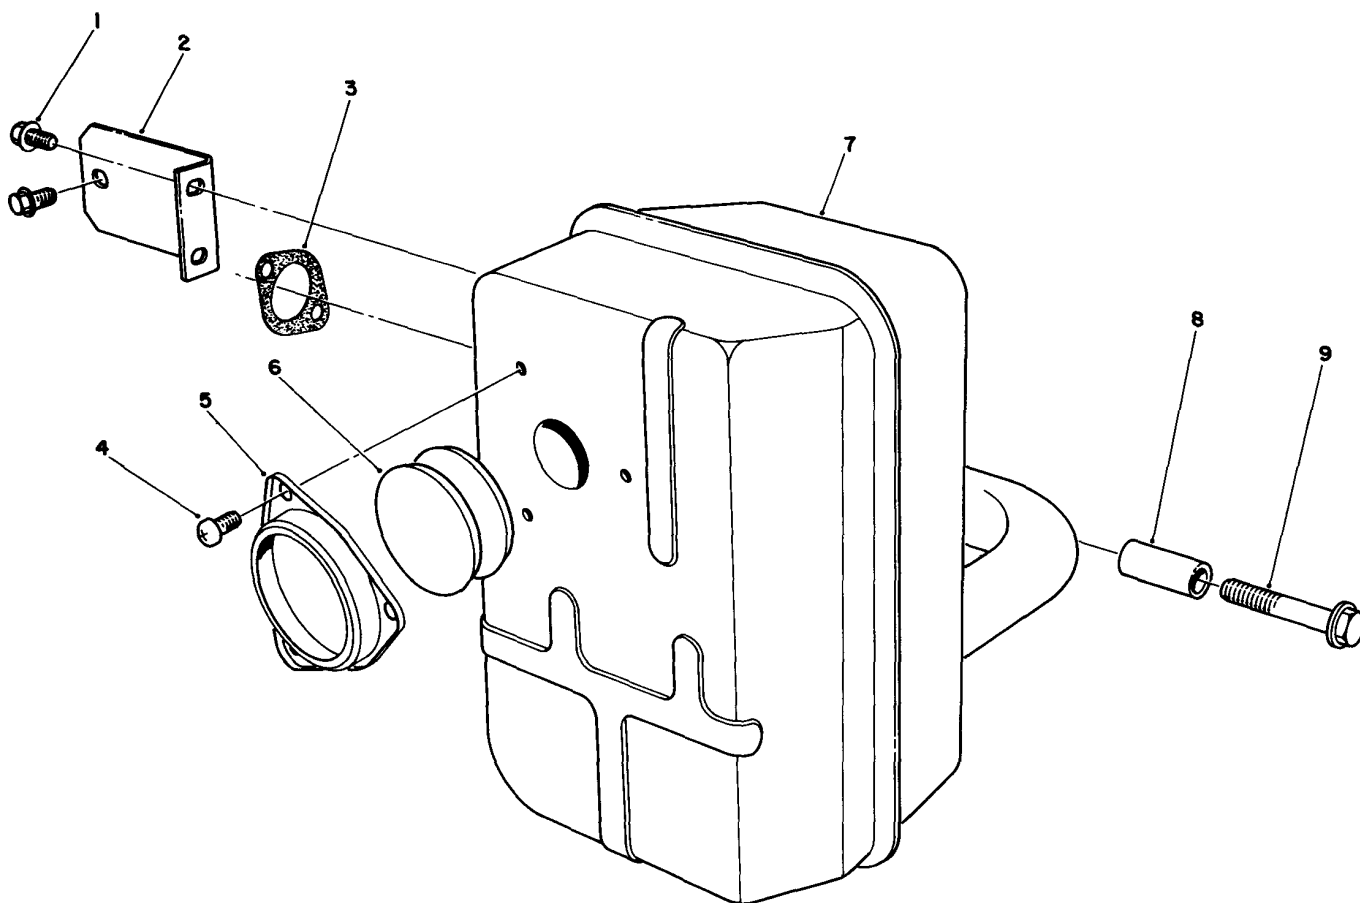

Muffler Assembly

Ref.	Part Number	Qty.	Description
1	130G0812	4	Bolt-Flanged (8X12)
2	11044-2069-9Y	1	Bracket
3	11009-2378	1	Gasket
4	92009-2166	3	Screw
5	11012-2165-9Y	1	Cap
6	18077-2052	2	Arrester-Spark
7	49069-2190-9Y	1	Muffler ASM
8	92027-2081	2	Collar
9	130G0845	2	Bolt-Flanged (8X45)

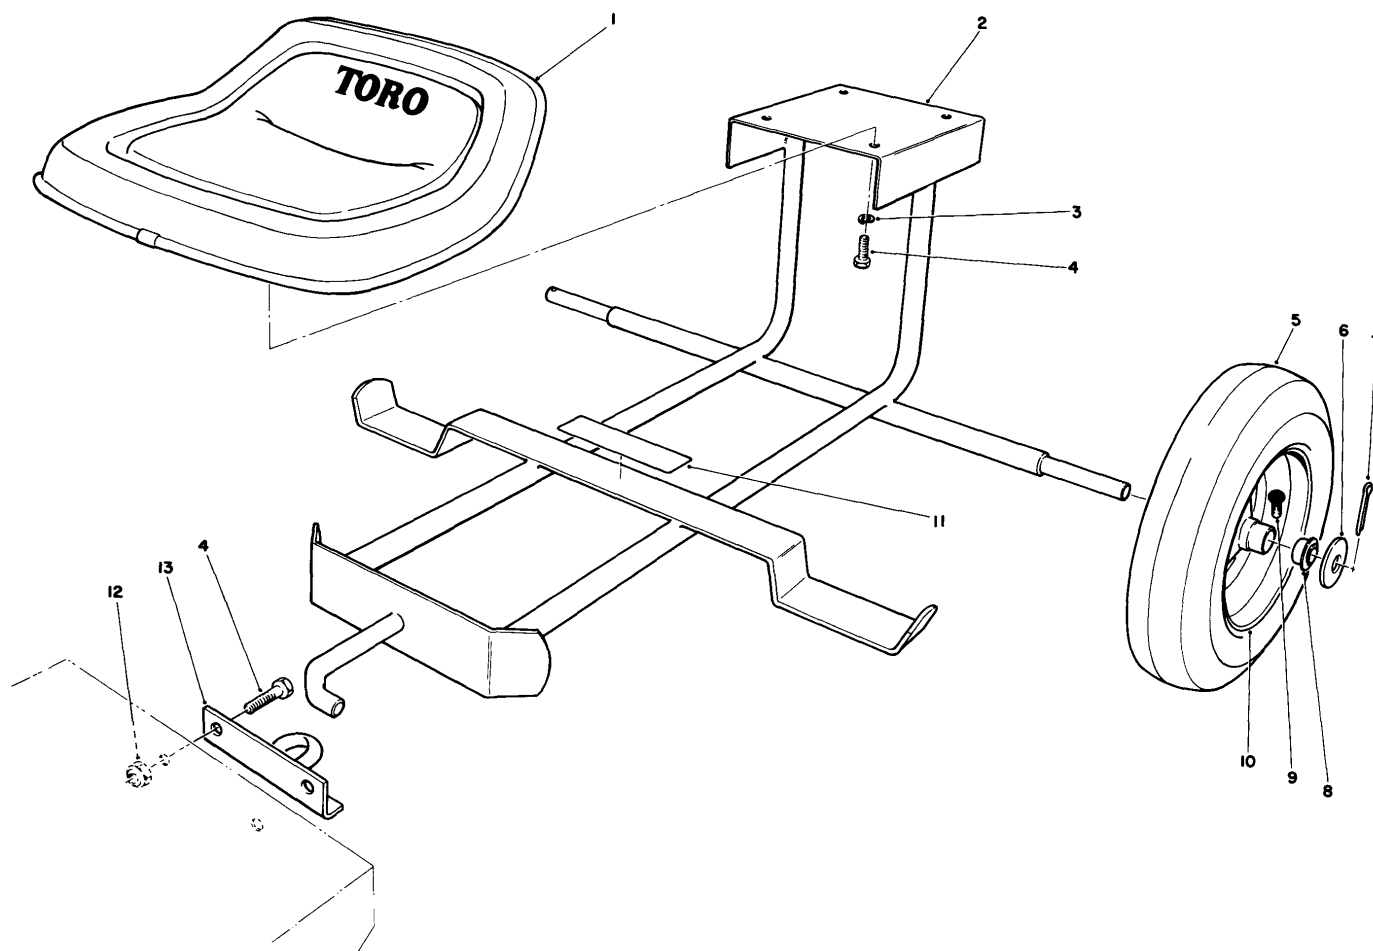

Sulky Kit Model No. 30122 (optional)

Ref.	Part Number	Qty.	Description
1	38-0840	1	Seat
2	55-9810	1	Frame ASM
3	3253-4	4	Washer-Lock
4	322-3	6	Screw-HH
5	55-3720	2	Tire
6	3256-39	2	Washer-Flat
7	3272-12	2	Pin-Cotter
8	55-3740	4	Bearing
9	55-3730	2	Valve Stem-Inner Tube
10	55-3750	2	Wheel
11	55-9900	1	Sulky Decal
12	3296-29	2	Nut-Lock, NI
13	68-4190	1	Hitch

Notes:

Notes:

Notes:



Count on it.