



Count on it.

Parts Catalog

112 Proline Walk Power Mower

Model No. 30112—Serial No. 0000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame Assembly 4

Engine and Clutch Assembly 5

Clutch Assembly No. 54-3200 6

Axle Assembly 7

Peerless Transmission Model No. 700-039 8

Handle Assembly 9

Engine Assembly 10

Crankcase Assembly 11

Governor Assembly 13

Recoil and Flywheel Assembly 14

Recoil Assembly 15


Air Cleaner and Carburetor Assembly 16

Carburetor Assembly 17

Air Cleaner Assembly 18

Muffler Assembly 19


Sulky Kit Model No. 30122 (optional) 20

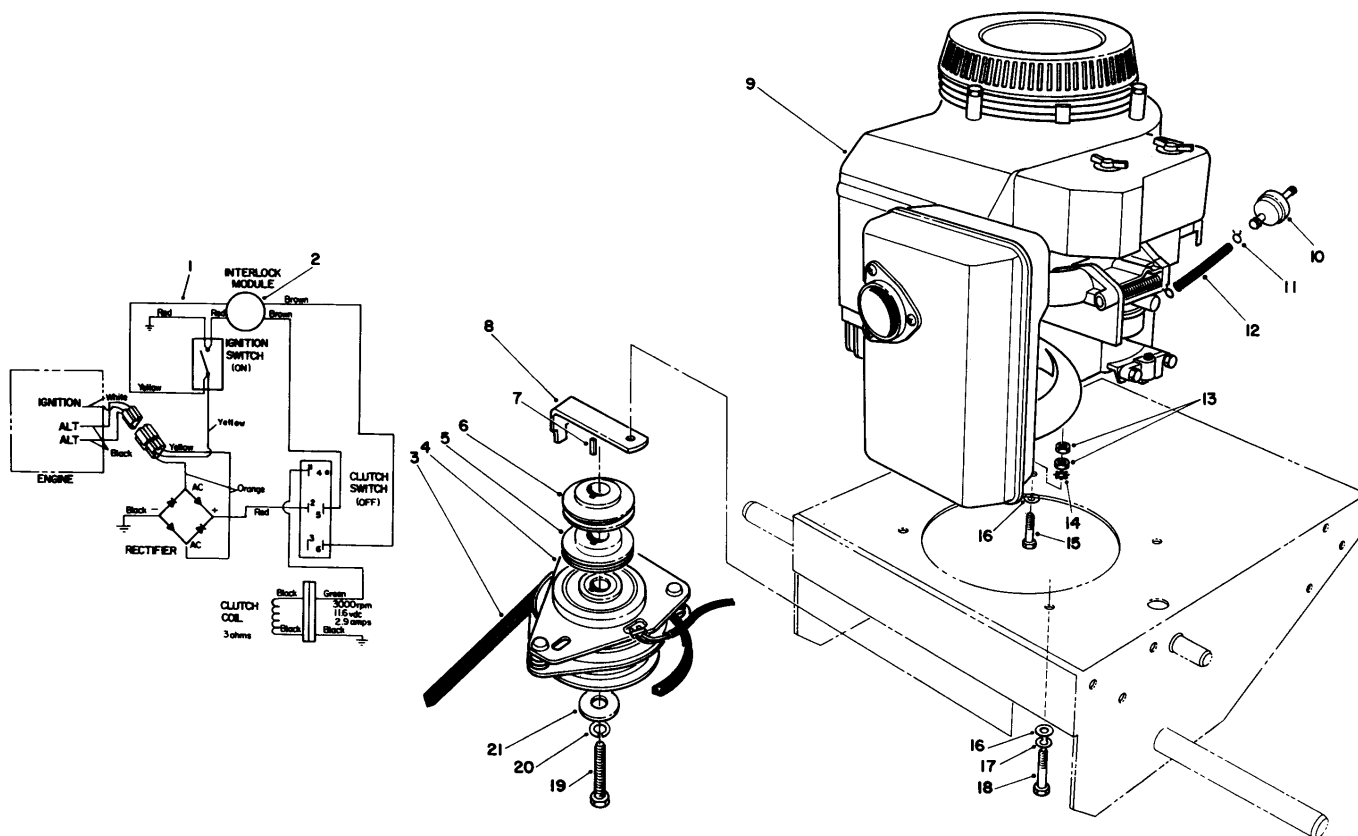

Engine and Clutch Assembly


Ref.	Part Number	Qty.	Description
1	57-6320	1	Wire Harness
2	51-3250	1	Module
3	54-2750	1	V-Belt, Drive
4	54-3200	1	Clutch/Brake
5	74-0050	1	Sheave-Lower Half
6	74-0060	1	Sheave-Upper Half
7	5-1336	1	Key-Square
8	51-4540	1	Retainer-Clutch
9		1	Engine-Kawasaki, Fb460V Type Ds08 ●
10	56-6360	1	Filter-Fuel
11	2412-98	4	Clamp-Hose
12	47-2982	1	Hose-Fuel
13	57-6390	2	Nut-Jam
14	3255-8	1	Washer-Lock
15	57-6370	1	Screw (Engine, Ground)
16	3256-23	3	Washer-Flat
17	3253-4	3	Washer-Lock
18	57-6380	3	Screw-HH
19	57-6360	1	Screw-Clutch
20	3253-22	1	Washer-Lock
21	44-8160	1	Washer-Clutch

● Not serviced separately

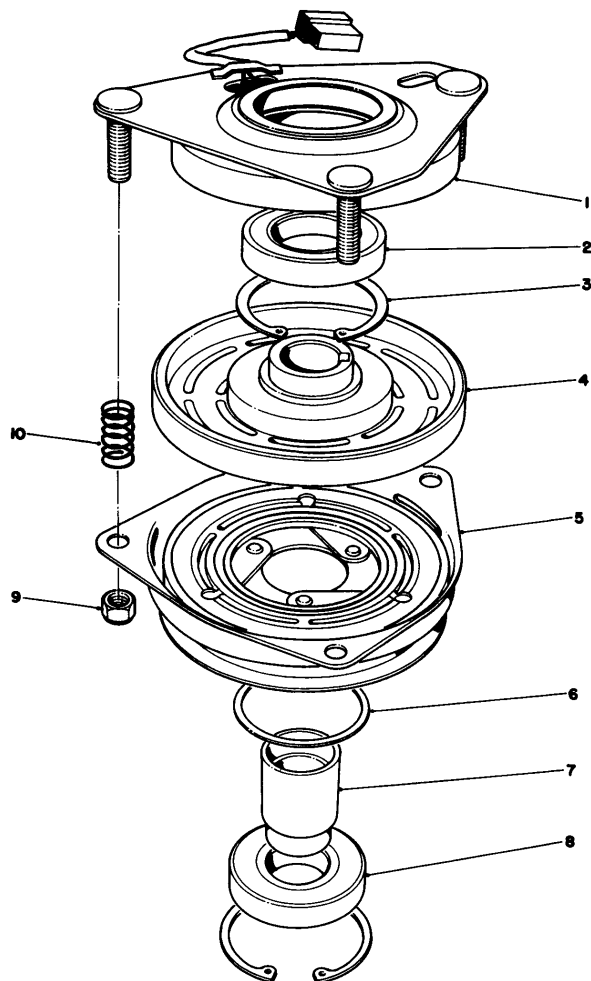

Clutch Assembly No. 54-3200


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	44-8350	1	Field Assembly (Incl. Ref. #2 & 3)
2	251-292	1	Bearing-Field
3	44-8310	2	Ring-Retaining
4	44-8360	1	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)
5	55-7410	1	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7, & 8)
6	44-8330	1	Spacer-Bearing, Pulley
7	44-8340	1	Collar-Bearing
8	251-291	1	Bearing-Pulley
9	3296-5	3	Nut-Lock
10	44-8320	3	Spring

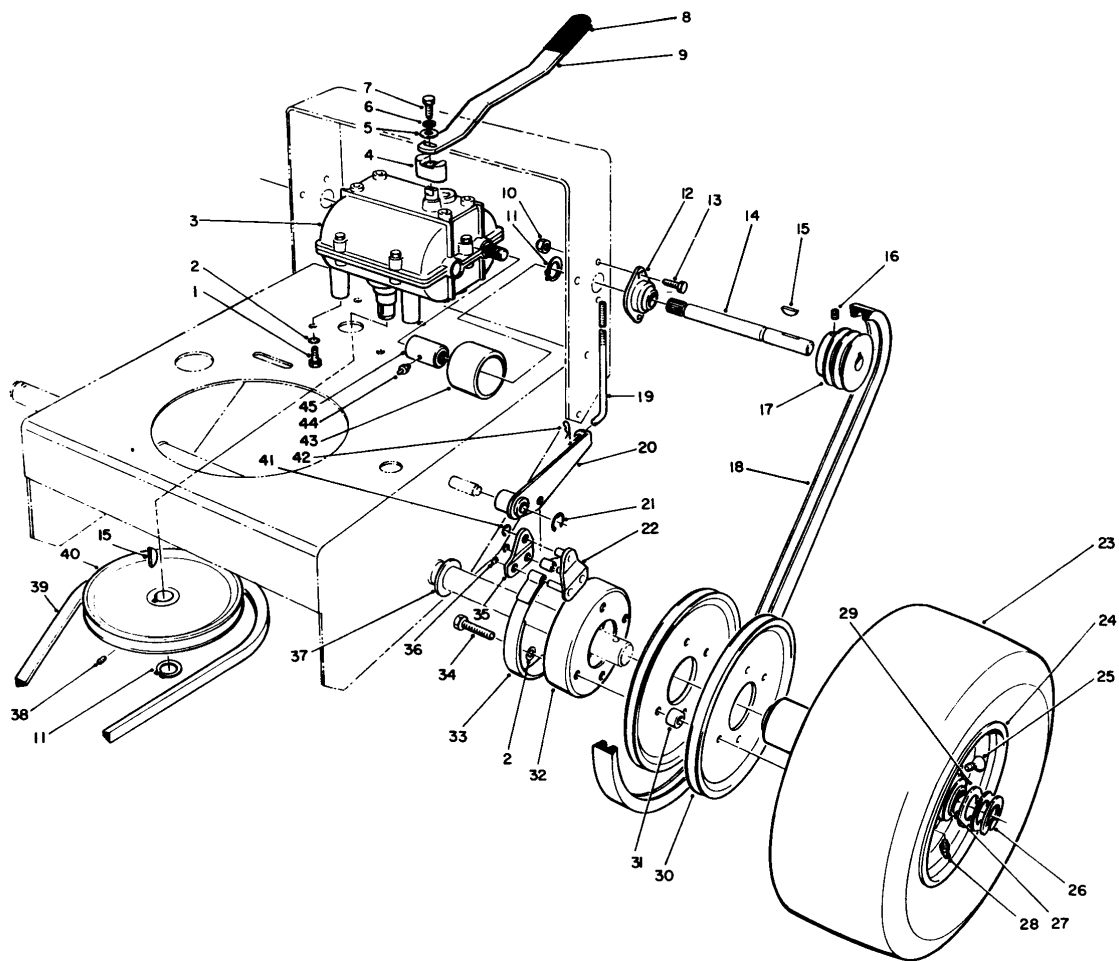

Axle Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	322-2	4	Screw-HH	23	231-111	2	Tire
2	3253-4	12	Washer-Lock	24	242-80	2	Wheel And Hub ASM
3	74-0610	1	Transmission	25	232-27	2	Stem-Valve
4	72-2190	1	Mount-Lever, Shift	26	32151-91	2	Ring-Retaining
5	7-5461	1	Spacer	27	251-321	4	Bearing-Ball, Flanged
6	3253-3	1	Washer-Lock	28	302-11	2	Fitting-Lube, 45 DEG
7	329-10	1	Screw-HH	29	10-8110	0	Washer-Thrust
8	47-1970	1	Grip	30	51-4160	4	Pulley-Wheel
9	74-0320	1	Lever-Shift	31	51-4170	8	Spacer-Pulley
10	3296-42	4	Nut-Lock, NI	32	51-4180	2	Drum-Brake
11	32120-64	3	Ring-Snap, External	33	51-4700	2	Band-Brake
12	51-4270	2	Bearing-External Shaft	34	322-7	8	Screw-HH
13	321-4	4	Screw-HH	35	51-4660	2	Plate-Link
14	51-4240	1	Shaft-Extension, RH ●	36	32151-72	4	Ring-Retaining
	51-4250	1	Shaft-Extension, LH	37	51-4230	2	Washer-Wheel
15	3257-5	3	Key-Woodruff	38	3241-5	1	Screw-Set
16	3245-3	2	Screw-Set, Hs	39	26-9670	1	V-Belt
17	74-0480	2	Pulley-Drive	40	51-4190	1	Pulley-Driven
18	51-4290	2	V-Belt	41	32151-56	2	Ring-Retaining, External
19	51-4580	2	Rod-Brake	42	3290-307	2	Pin-Hair
20	51-4610	1	Brake Arm-LH	43	51-4220	2	Guard-Coupler
	51-4600	1	Brake Arm-RH ●	44	302-5	2	Fitting-Grease
21	32151-40	2	Ring-Retaining	45	51-4260	2	Coupler
22	51-4650	2	Link-Brake				


● Not illustrated

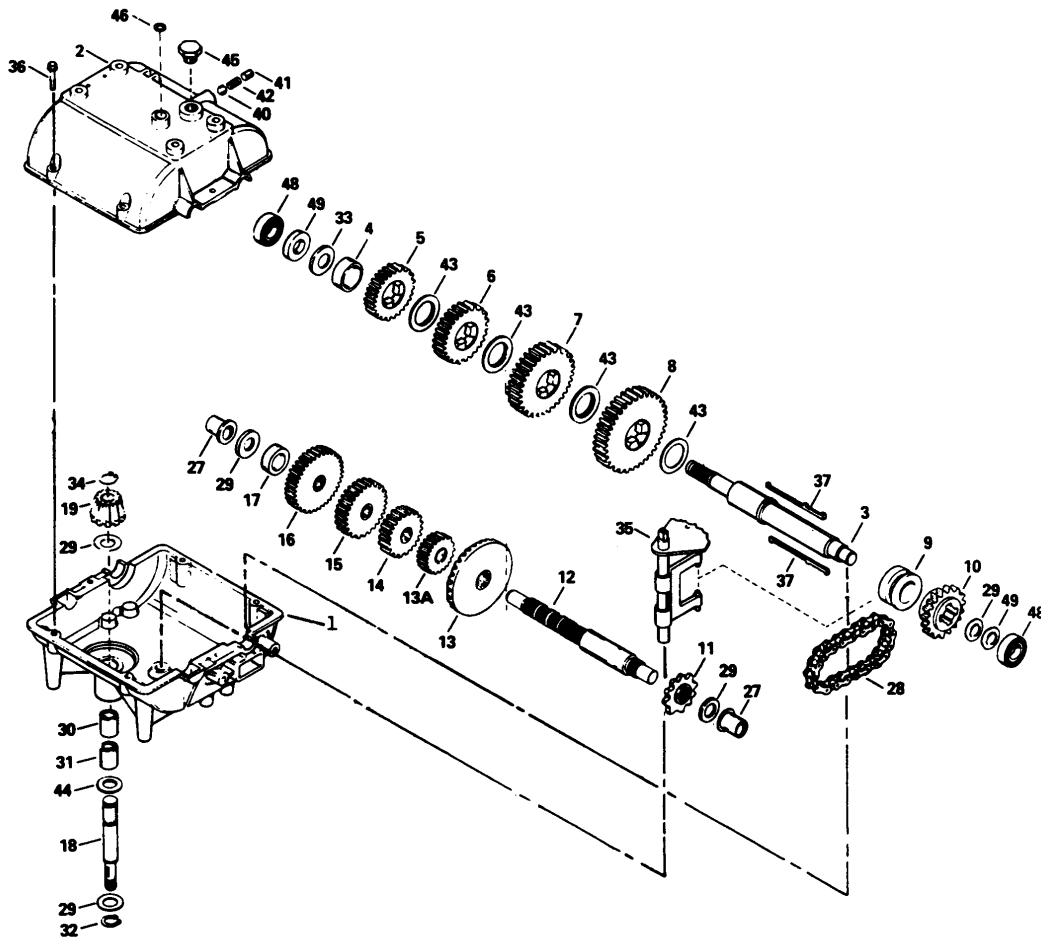


Peerless Transmission Model No. 700-039

Ref.	Part Number	Qty.	Description
1	770090	1	Case-Transmission
2	772099	1	Cover-Transmission
3	776289A	1	Shaft-Output/Brake
4	786072	1	Spacer
5	778123A	1	Gear-Spur, 25 Teeth
6	778250	1	Gear-Spur 27 Teeth
7	778124A	1	Gear-Spur, 30 Teeth
8	778125	1	Gear-Spur, 35 Teeth
9	784266	1	Collar-Shift
10	786083	1	Sprocket-18 Teeth
11	786082	1	Sprocket-9 Teeth
12	776134	1	Countershaft
13	778154	1	Gear-Bevel, 42 Teeth
13A	778136	1	Gear-Spur 15 Teeth
14	778126A	1	Gear-Spur, 20 Teeth
15	778249	1	Gear-Spur 23 Teeth
16	778127A	1	Gear-Spur, 25 Teeth
17	786071	1	Spacer
18	776135	1	Shaft-Input
19	778153	1	Bevel Pinion-Input

Ref.	Part Number	Qty.	Description
27	780105A	2	Bushing-Flange
28	786081	1	Chain-Roller #41
29	780072	5	Washer
30	780086	1	Bearing-Needle
31	7800142	1	Bearing-Needle
32	792035	1	Ring-Snap
33	780139	1	Washer
34	788040	1	Ring-Retainer
35	784267	1	Rod And Fork ASM
36	792073	6	Ring Set (.020 O S)
37	792089A	4	Key
40	792077	1	Ball-Steel
41	792078	1	Screw-Set
42	792079	1	Spring
43	780108	4	Washer
44	792001	2	O Ring
45	792074	1	Plug
46	788069	1	Cut Seal-Square
48	780092	2	Bearing-Ball
49	780065	2	Thrust Washer

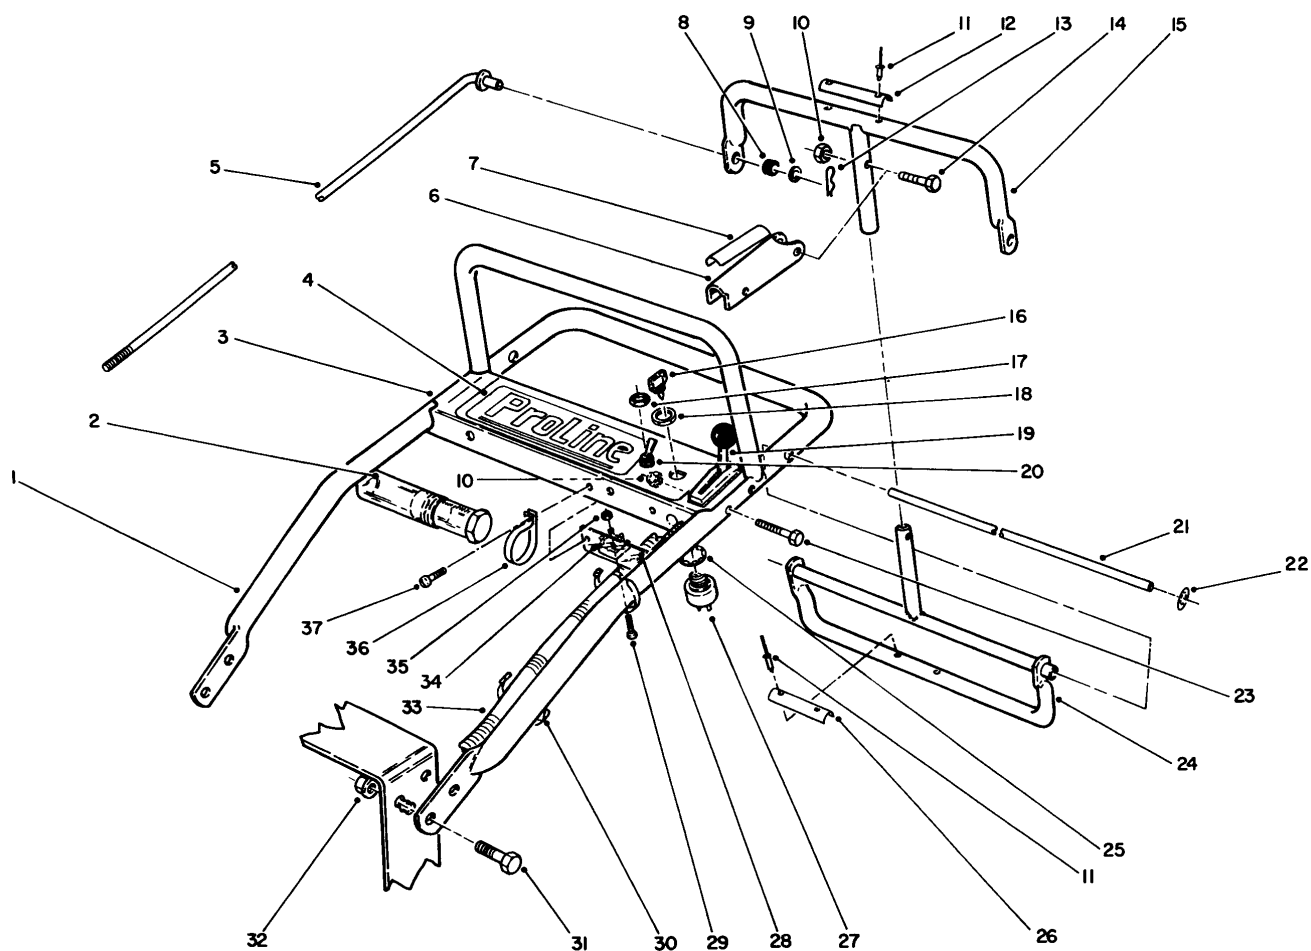


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	67-6440	1	Handle-Upper	20	37-2610	1	Switch
2	74-0720	1	Tube-Manual	21	74-0470	1	Pivot Rod
3	74-0790	1	Control Panel *b	22	32151-80	2	Nut-Push-On, Circular
4	74-0800	1	Decal - Control Panel	23	32105-14	4	Screw-SHH
5	54-3071	2	Control Rod *b	24	74-0380	1	Control Pivot
6	51-4850	1	Lever-Parking Brake	25	3254-5	1	Washer-Tooth, Internal
7	52-2010	1	Decal-Lever, Parking	26	52-2120	1	Decal-Reverse Handle
8	237-141	2	Grommet-Rubber	27	29-5560	1	Switch-Off/On (Incl. Ref. #16, 18, & 25)
9	3256-24	2	Washer-Flat	28	57-5810	1	Panel-Bottom
10	3296-2	5	Nut-Lock, NI	29	32105-13	1	Screw-HWH
11	3290-54	4	Rivet-Pop	30	3290-378	2	Tie-Cable
12	54-2740	1	Decal-Control Bar	31	3234-11	4	Screw-HHF
13	3290-307	2	Pin-Hair	32	32128-21	4	Nut-HF
14	32105-1	1	Screw-SHH	33	57-6320	1	Wire Harness
15	51-4730	1	Bar-Control	34	37-7600	1	Rectifier-Bridge
16	63-8360	2	Key-Ignition	35	3296-2	1	Nut-Lock, NI
17	218-500	1	Nut	36	2412-120	2	R-Clamp
18	218-461	1	Nut-HH	37	32104-76	4	Screw
19	74-0740	1	Control-Throttle				

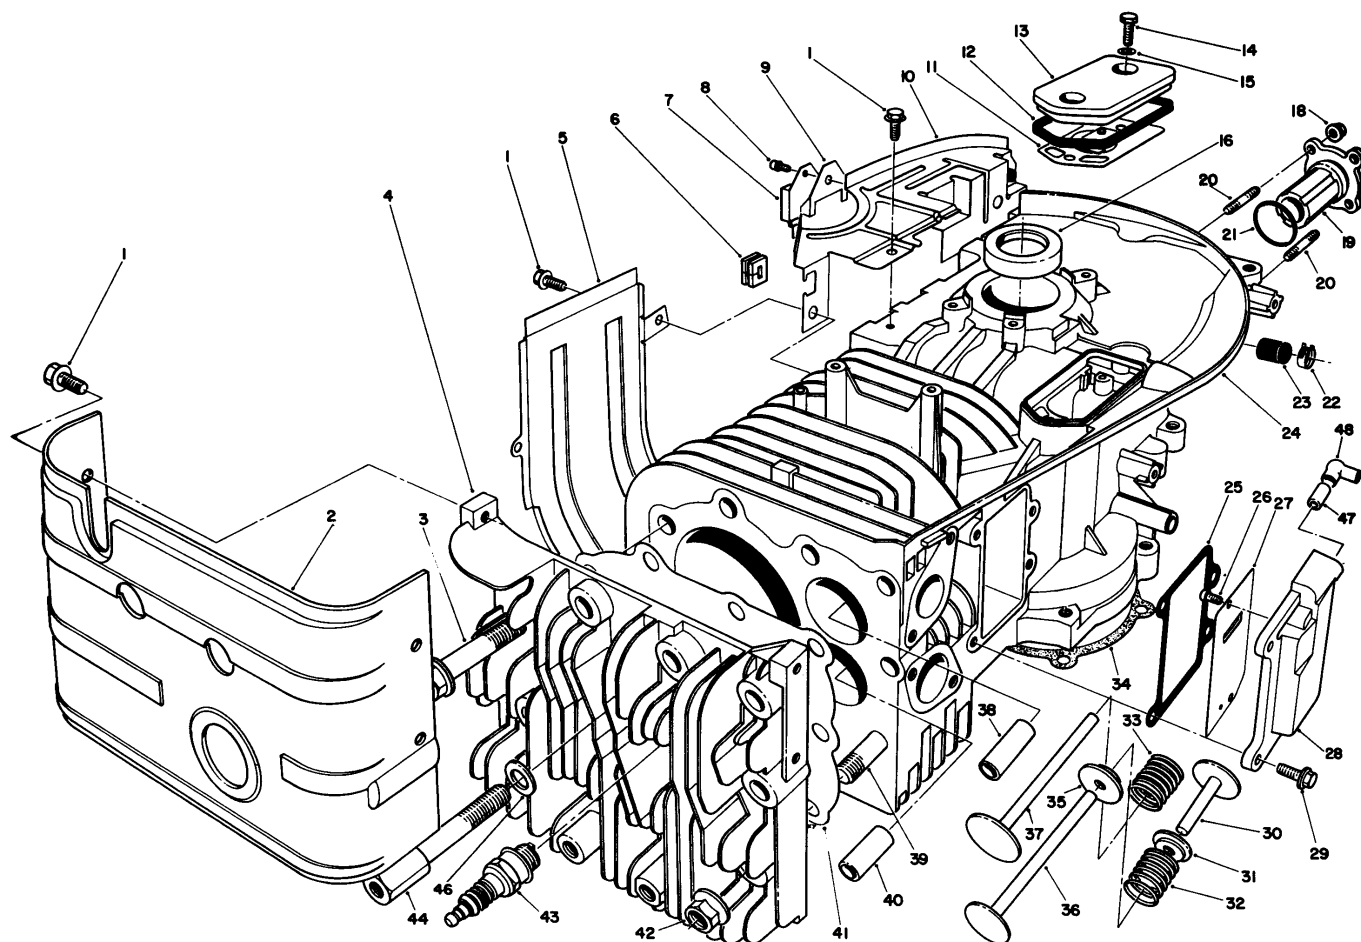

Engine Assembly


Ref.	Part Number	Qty.	Description
1	130G0610	8	Bolt-Flanged (6X10)
2	49089-2181-9H	1	Shroud
3	130G1055	4	Bolt
4	11001-2102	1	Cylinder Head
5	49089-2199-9H	1	Shroud
6	92071-2099	6	Grommet
7	21119-2095	1	Igniter
8	234b0408	1	Screw
9	310702-8137A	1	Bracket
10	59066-2295-9H	1	Fan Housing
11	14069-2062	1	Breather
12	11009-2339	1	Gasket
13	14025-2040	1	Cover
14	315501-5381A	2	Bolt
15	312200-7415-02	2	Gasket
16	92049-2049	1	Seal-Oil
18	92015-1193	4	Nut
19	13107-2091	1	Shaft
20	92004-2083	4	Stud
21	92055-2072	1	O-Ring
22	31796-6812-00	1	Clip
23	92066-2096	1	Plug
24	49120-6025	1	Crankcase Assembly

Ref.	Part Number	Qty.	Description
25	11009-2502	1	Gasket
26	314405-3092A	2	Screw
27	14025-2143	1	Cover
28	49108-2011	1	Cover-Valve Chamber
29	130G0616	4	Bolt-Flanged (6X16)
30	12032-2058	2	Tappet
31	39108-2054	2	Retainer-Spring
32	49078-2058	1	Spring-Valve
33	49078-2059	1	Spring-Valve
34	49015-6001	1	Gasket
35	12039-2052	1	Rotator
36	12005-2066	1	Exhaust Valve
37	12004-2076	1	Intake Valve
38	49002-2070	1	Guide-Intake Valve
39	92004-2082	3	Stud
40	49002-2071	1	Guide-Exhaust Valve
41	11004-2079	1	Gasket
42	92015-2115	3	Nut
43	92070-2072	1	Spark Plug
44	92002-2258	2	Bolt
46	410B1000	1	Washer
47	92059-2142	1	Tube
48	59071-2062	1	Joint

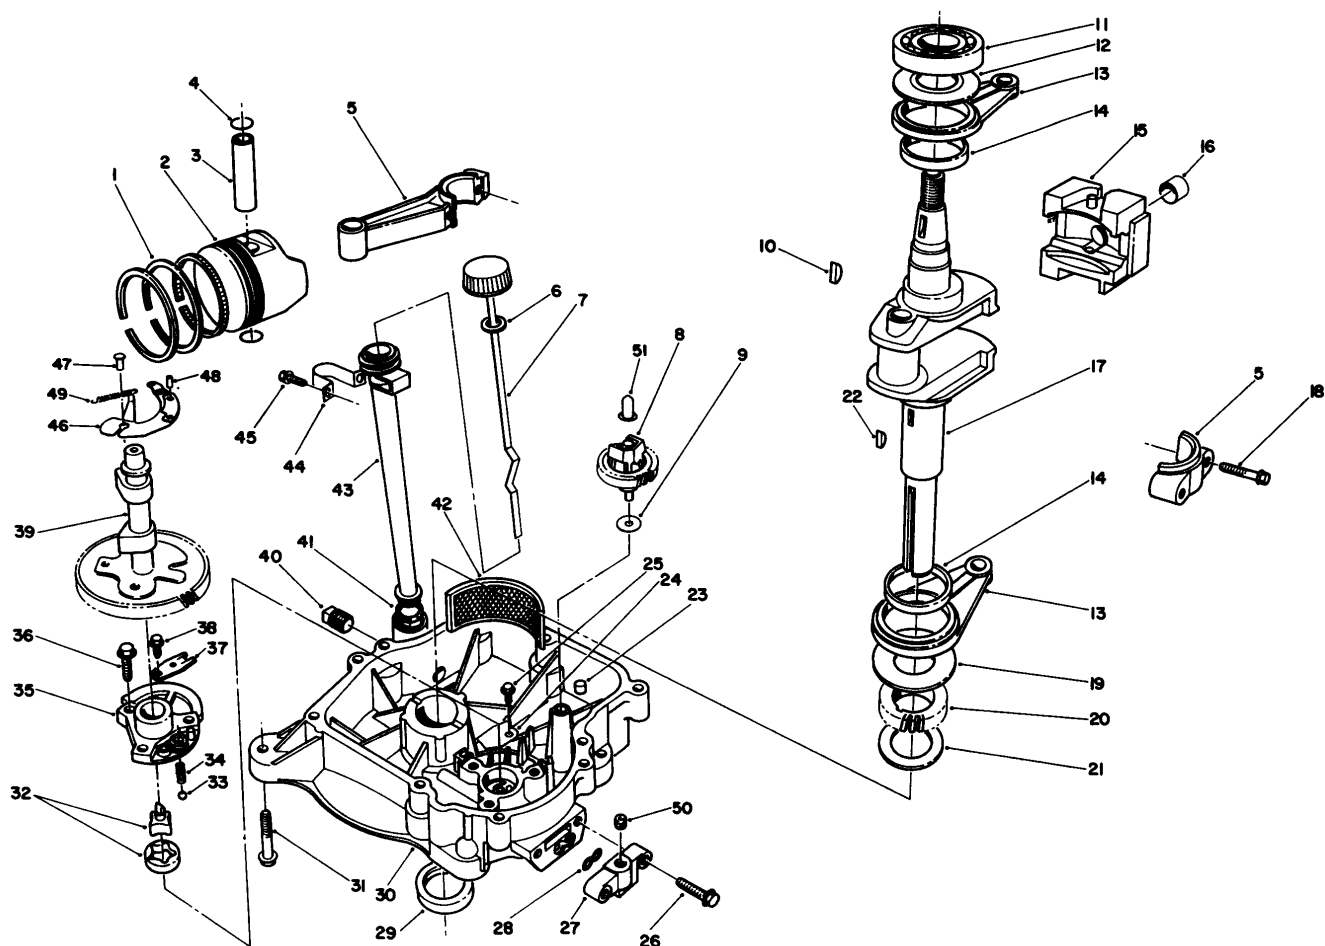

Crankcase Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	13008-6001	1	Piston Ring Set	21	92025-2145	0	Shim (1.18)
	13008-6002	0	Set-Ring Piston 0.25		92025-2146	0	Shim (1.25)
	13008-6003	0	Set-Ring Piston 0.50		92025-2147	0	Shim (1.32)
	13008-6004	0	Piston Rin Set (.75Mm)		92025-2148	0	Shim (1.39)
2	13001-2084	0	Piston		92025-2149	0	Shim (1.46)
	13029-2019	0	Piston 0.25		92025-2150	0	Shim (1.53)
	13029-2020	0	Piston 0.50		92025-2151	0	Shim (1.60)
	13027-2001	0	Piston (.75Mm)		92025-2152	0	Shim (1.67)
3	13002-2066	1	Pin-Piston		92025-2153	0	Shim (1.74)
4	92033-2066	2	Ring-Snap	22	92038-2094	1	Key
5	13251-6005	1	Rod ASM Incl #10 11	23	92043-1263	2	Pin
	13251-6007	0	Rod ASM Incl #10 110.50	24	13169-2359	1	Plate
6	11009-2346	1	Gasket	25	130B0508	1	Bolt
7	562005-2058	1	Gauge	26	130B0830	2	Bolt
8	49110-2067	1	Governor ASM	27	14025-2145	1	Cover
9	314401-5135A	1	Washer	28	92055-2063	1	Seal
10	92038-2094	1	Key	29	92049-2104	1	Oil Seal
11	601A6207	1	Ball Bearing	30	49015-6001	1	Gasket
12	92026-2164	1	Spacer	31	130G0845	4	Bolt-Flanged (8X45)
13	46102-6001	2	Rod Assembly	32	16082-2057	1	Pump ASM-Oil
14	92141-2094	2	Bearing Plane	33	600A1000	1	Ball
15	13042-6006	1	Weight	34	92081-2216	1	Spring
16	92141-2097	1	Bushing	35	16142-6001	1	Cover-Pump
17	49119-2133	1	Crankshaft	36	138G0825	3	Bolt
18	315801-3245A	2	Bolt	37	13169-2360	1	Plate
19	92026-2156	1	Spacer	38	130B0610	1	Bolt-Flanged (6X10)
20	59056-2105	1	Gear	39	49118-2064	1	Camshaft Compression

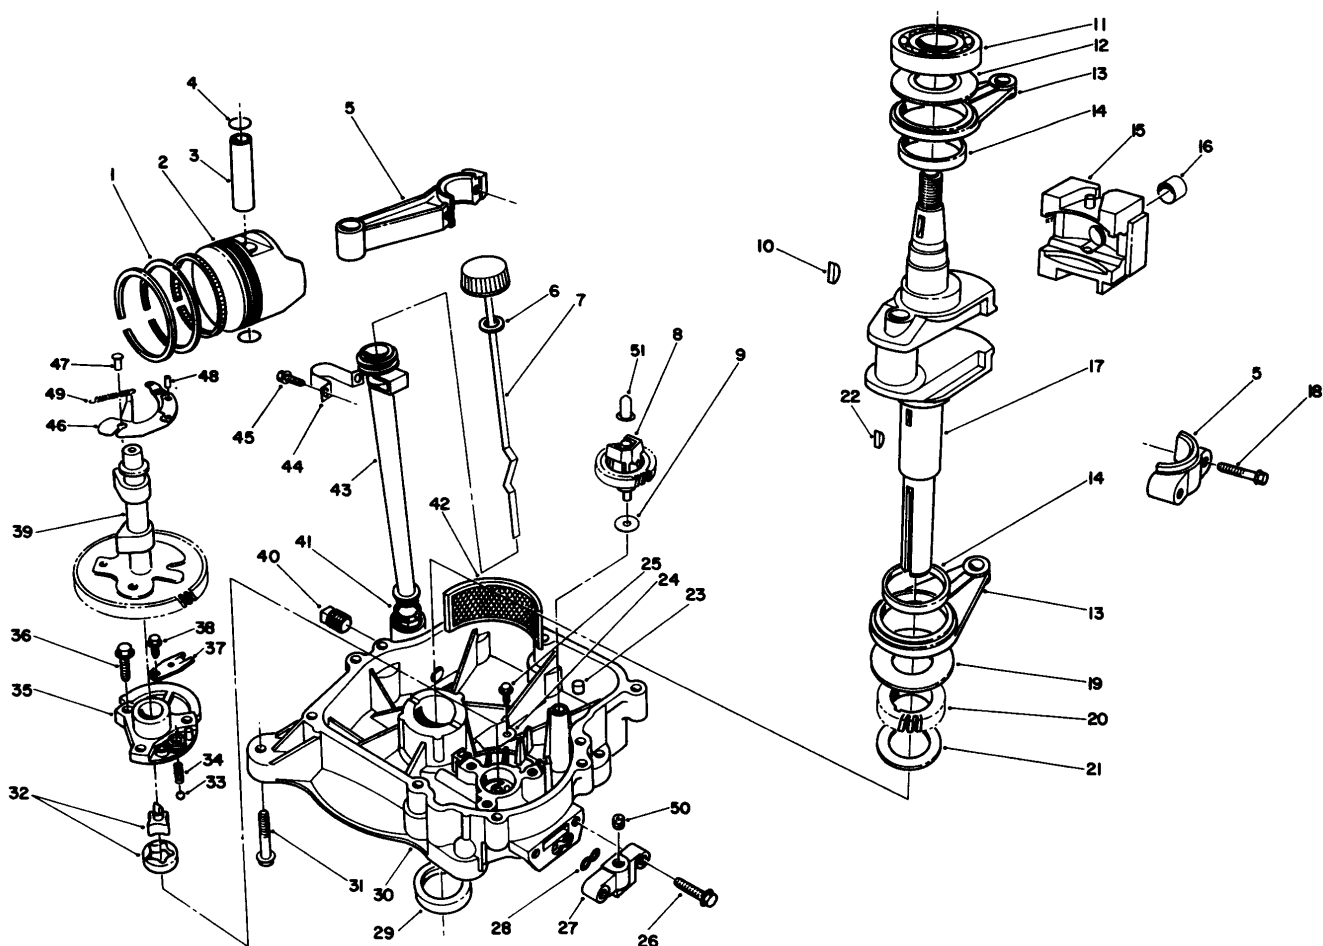

Crankcase Assembly (continued)


Ref.	Part Number	Qty.	Description
40	92066-2097	1	Plug
41	670D2016	1	O-Ring (16Mm)
42	49065-2056	1	Filter-Oil
43	59231-2059	1	Filler
44	92037-2160-9H	1	Clamp
45	130B0508	1	Bolt

Ref.	Part Number	Qty.	Description
46	21118-2068	1	Decompressor
47	92043-2113	2	Pin
48	92043-2167	1	Pin
49	92144-2171	1	Spring
50	92066-2102	1	Plug
51	42036-2060	1	Sleeve

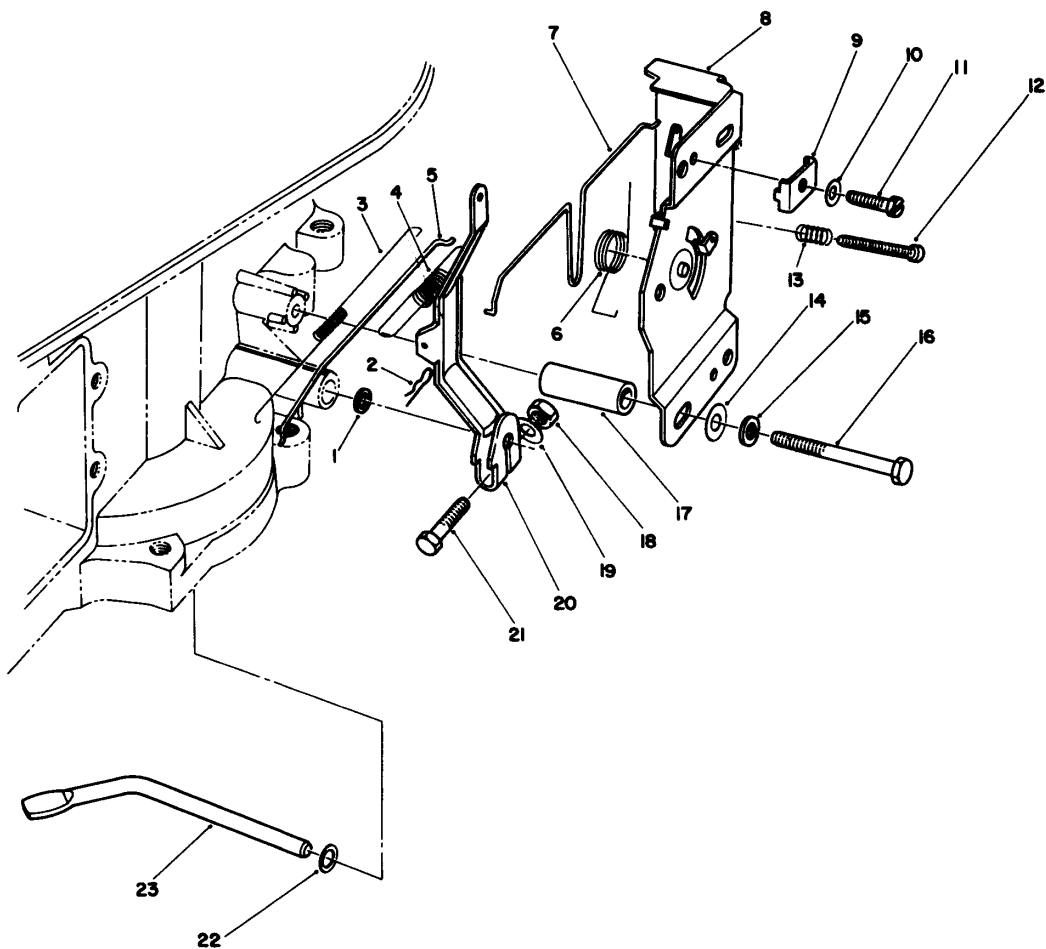

Governor Assembly

Ref.	Part Number	Qty.	Description
1	92049-2097	1	Seal-Oil (Vc6X10X2.6)
2	554A0600	1	Pin-Snap (1.2 X 21.2)
3	92081-2213	1	Spring
4	39129-2010	1	Spring
5	16171-2001	1	Link
6	920981-2316	1	Spring
7	16169-2074	1	Link-Choke
8	49113-2067	1	Panel Incl #2 4-7
9	92037-2020	1	Clamp
10	411B0500	1	Washer
11	310701-1225A	1	Bolt
12	214b0425	1	Screw
13	314401-5321B	1	Spring
14	311509-3595-00	2	Washer
15	461F0600	2	Washer
16	112B0650	2	Bolt
17	92027-2071	2	Collar
18	311B0600	1	Nut-Hex (6Mm)
19	411B0600	1	Washer-Plain (6Mm)
20	21187-2052	1	Arm ASM
21	92002-2269	1	Bolt (6X28)
22	410B0600	1	Washer
23	39003-2062	1	Arm-Pivot

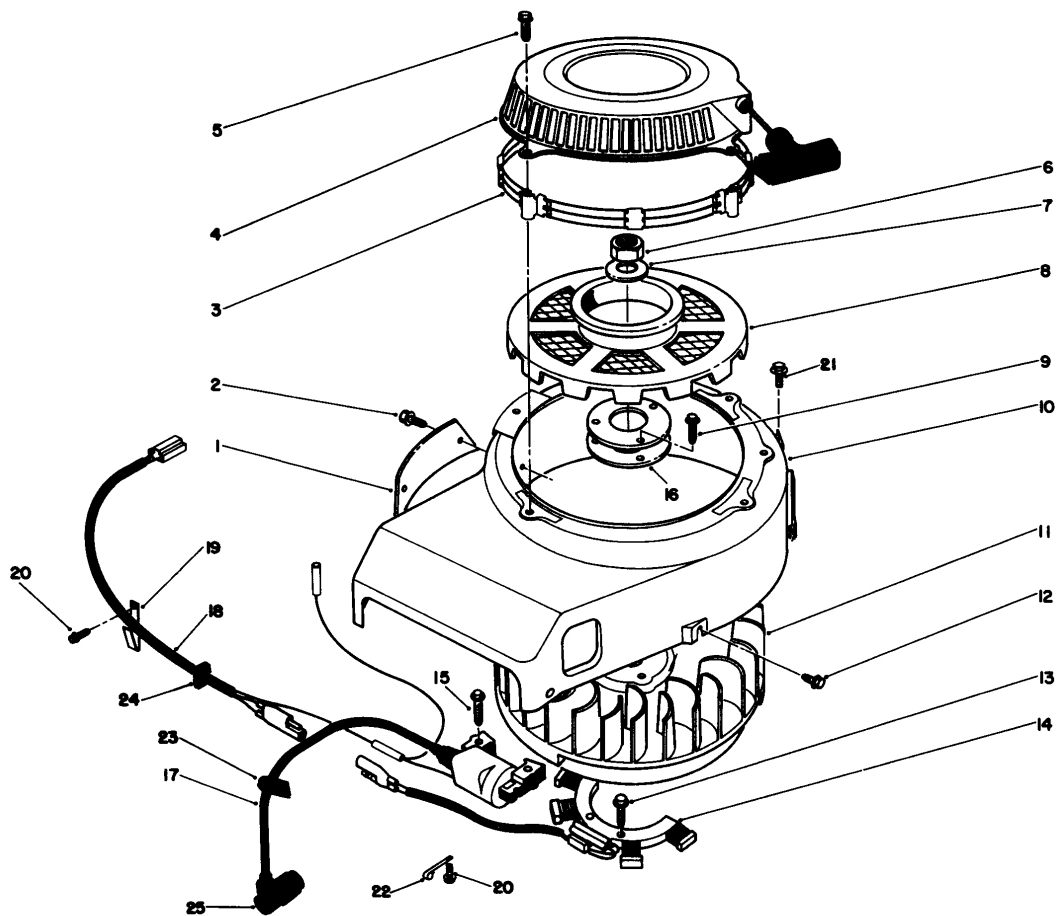


Recoil and Flywheel Assembly

Ref.	Part Number	Qty.	Description
1	14024-2038-9H	1	Cover
2	234b0408	2	Screw
3	55020-2054	1	Guard
4	49088-2212-YK	1	Recoil Starter ASM
5	130B0635	4	Bolt-Flanged (6X35)
6	314G1800	1	Nut
7	92022-2178	1	Washer
8	49080-22123YK	1	Pulley
9	130G0812	3	Bolt-Flanged (8X12)
10	59066-2310-9H	1	Housing-Fan
11	21194-2001	1	Flywheel
12	130B0610	2	Bolt-Flanged (6X10)
13	244B0620	2	Screw


Ref.	Part Number	Qty.	Description
14	59031-2065	1	Coil
15	130B0525	2	Bolt
16	92025-2161	0	Shim
17	21121-2008	1	Coil
18	26001-2113	1	Harness
19	313646-8161-00	1	Clamp
20	130G0610	2	Bolt-Flanged (6X10)
21	130G0614	2	Bolt-Flanged (6X14)
22	92037-2158	1	Clamp
23	92071-2100	1	Grommet
24	92071-2099	1	Grommet
25	21130-2060	1	Cap-Spark
	26011-2119	1	Lead Wire ●

● Not illustrated

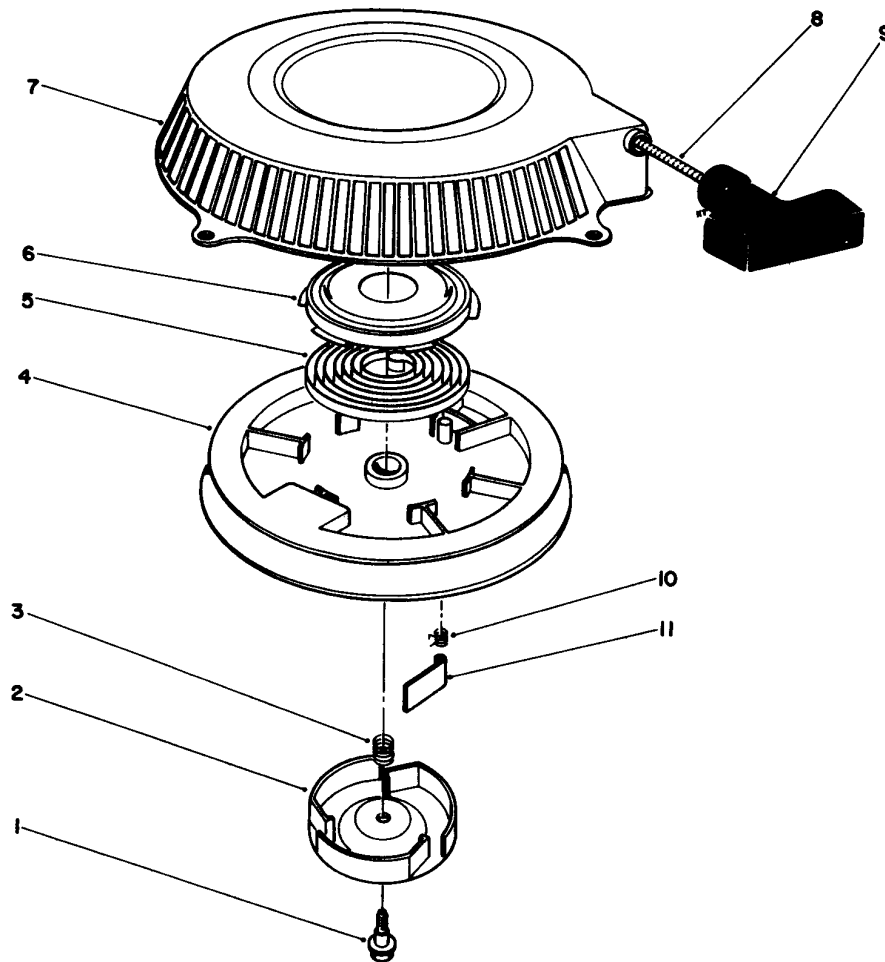


Recoil Assembly

Ref.	Part Number	Qty.	Description
1	314501-3447A	1	Bolt
2	14020-2054	1	Retainer
3	92081-2268	1	Spring
4	59101-2054	1	Reel
5	92081-2267	1	Spring
6	32099-2060	1	Case
7	32099-2059YK	1	Case
8	59106-2060	1	Rope
9	46075-2059	1	Grip
10	314401-3444A	3	Spring-Return
11	13165-2057	3	Pawl
	49088-2212-YK	1	Recoil Starter ASM

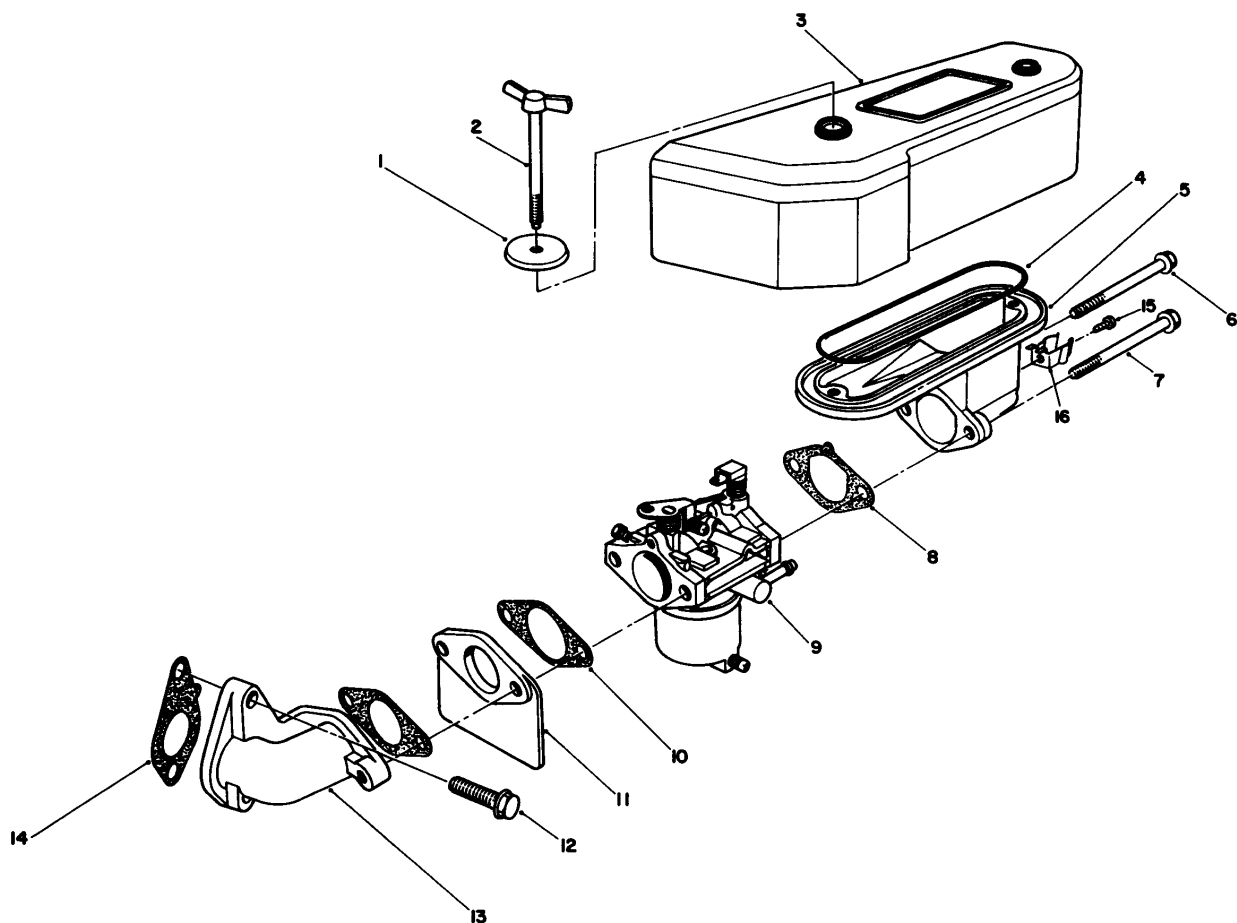

Air Cleaner and Carburetor Assembly


Ref.	Part Number	Qty.	Description
1	92022-2220	2	Washer
2	92002-2230	2	Bolt
3	11010-2291	1	Filter ASM
4	11009-2443	1	Gasket
5	16060-2108	1	Pipe-Intake
6	92002-2254	1	Bolt
7	92002-2253	1	Bolt
8	11009-2344	1	Gasket
9	15001-2721	1	Carburetor ASM
10	11009-2343	2	Gasket
11	16073-2091	1	Insulator
12	130G0825	2	Bolt-Flanged (8X25)
13	16060-2109	1	Pipe-Intake
14	11009-2342	1	Gasket
15	224B0508	1	Screw
16	92037-2019	1	Clamp

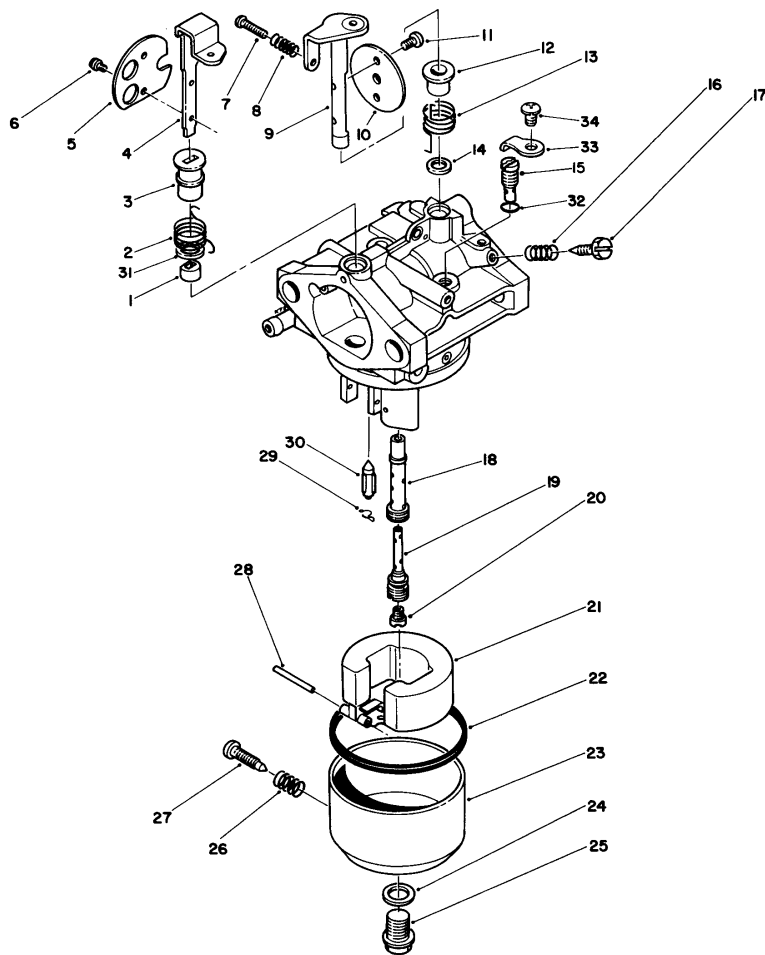

Carburetor Assembly


Ref.	Part Number	Qty.	Description
1	314598-6138A	1	Ring
2	92144-2160	1	Spring
3	92143-2142	1	Ring
4	16041-2010	1	Shaft-Choke
5	16126-2105	1	Valve-Choke
6	314572-6137A	2	Screw
7	92009-2079	1	Screw
8	313650-6108-00	1	Spring
9	16041-2009	1	Shaft-Throttle
10	16025-2114	1	Valve-Throttle
11	316550-6137A	2	Screw
12	92027-2025	1	Collar
13	92081-2977	1	Spring
14	316626-6206A	1	Seal
15	92064-2062	1	Jet
16	312750-6116-00	1	Spring
17	16014-2055	1	Screw
18	49121-2077	1	Nozzle

Ref.	Part Number	Qty.	Description
19	49123-2058	1	Pipe-Bleed
20	92063-2010	1	Jet
21	16031-2066	1	Float
22	313650-6128-00	1	Gasket
23	16020-2094	1	Chamber-Float
24	318190-6159-00	1	Washer
25	3114486-6143A	1	Bolt
26	313122-6116-00	1	Spring
27	315470-6133A	1	Screw
28	314499-6127A	1	Pin
29	315721-6134A	1	Clip
30	16030-2021	1	Valve-Needle
31	92093-2069	1	Seal
32	16038-024	1	Gasket
33	13183-2252	1	Plate
34	92009-2244	1	Screw
	15001-2721	1	Carburetor ASM

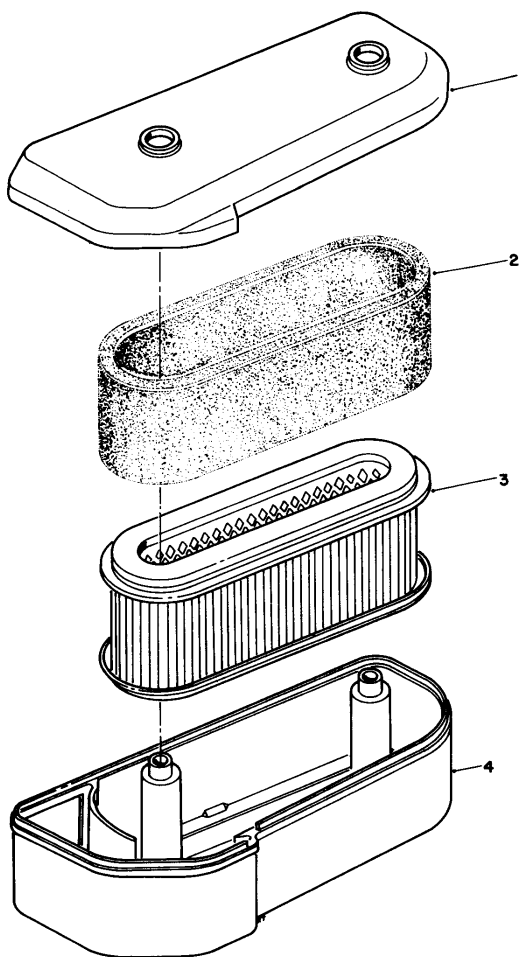


Air Cleaner Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	11012-2192	1	Cap-Air Filter
2	11013-2020	1	Element
3	11013-2021	1	Element
4	11011-2174	1	Case-Air Filter
	11010-2291	1	Filter ASM

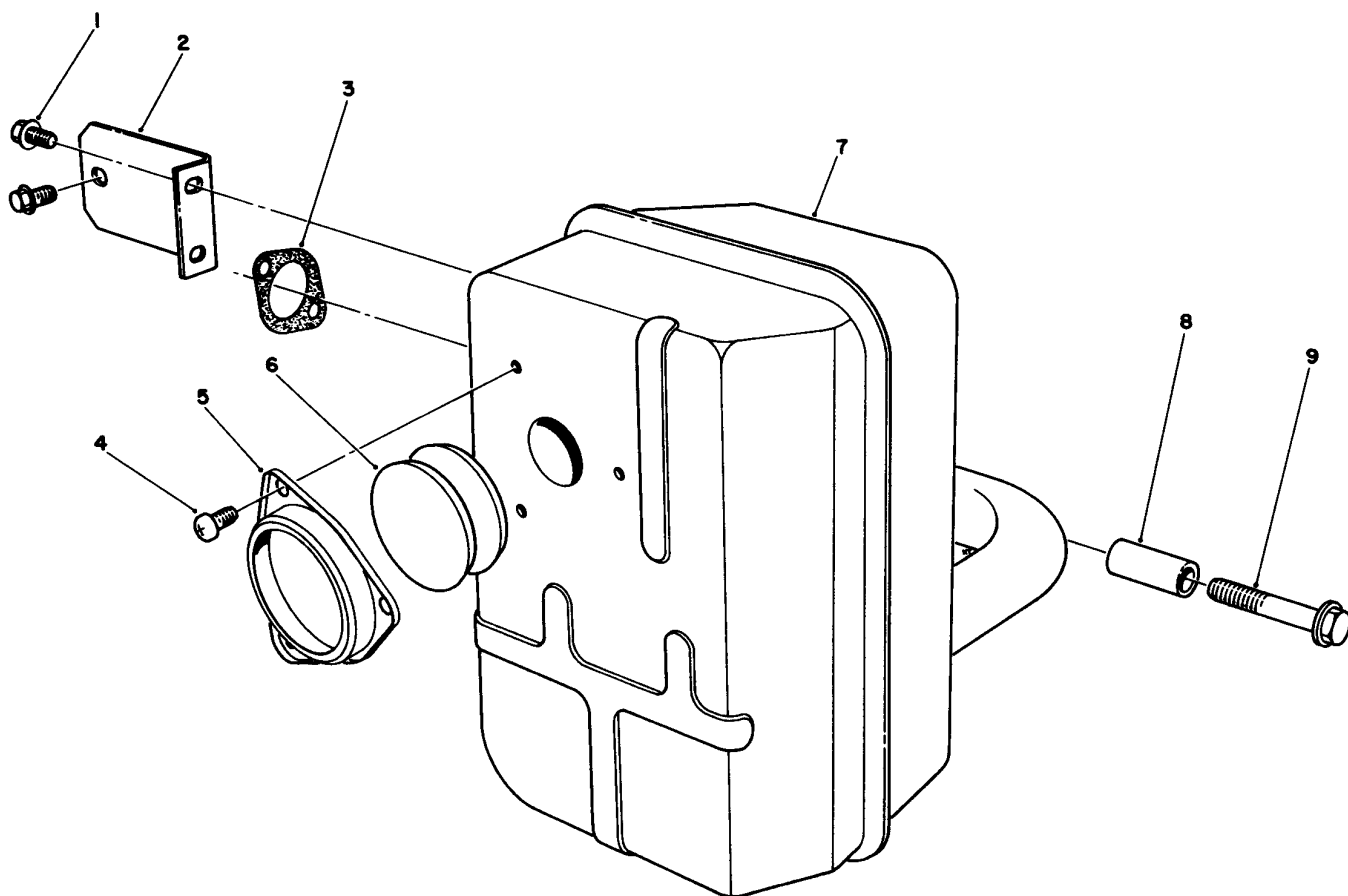

Muffler Assembly

Ref.	Part Number	Qty.	Description
1	130G0812	4	Bolt-Flanged (8X12)
2	11044-2069-9Y	1	Bracket
3	11009-2378	1	Gasket
4	92009-2166	3	Screw
5	11012-2165-9Y	1	Cap
6	18077-2052	2	Arrester-Spark
7	49069-2190-9Y	1	Muffler ASM
8	92027-2081	2	Collar
9	130G0845	2	Bolt-Flanged (8X45)

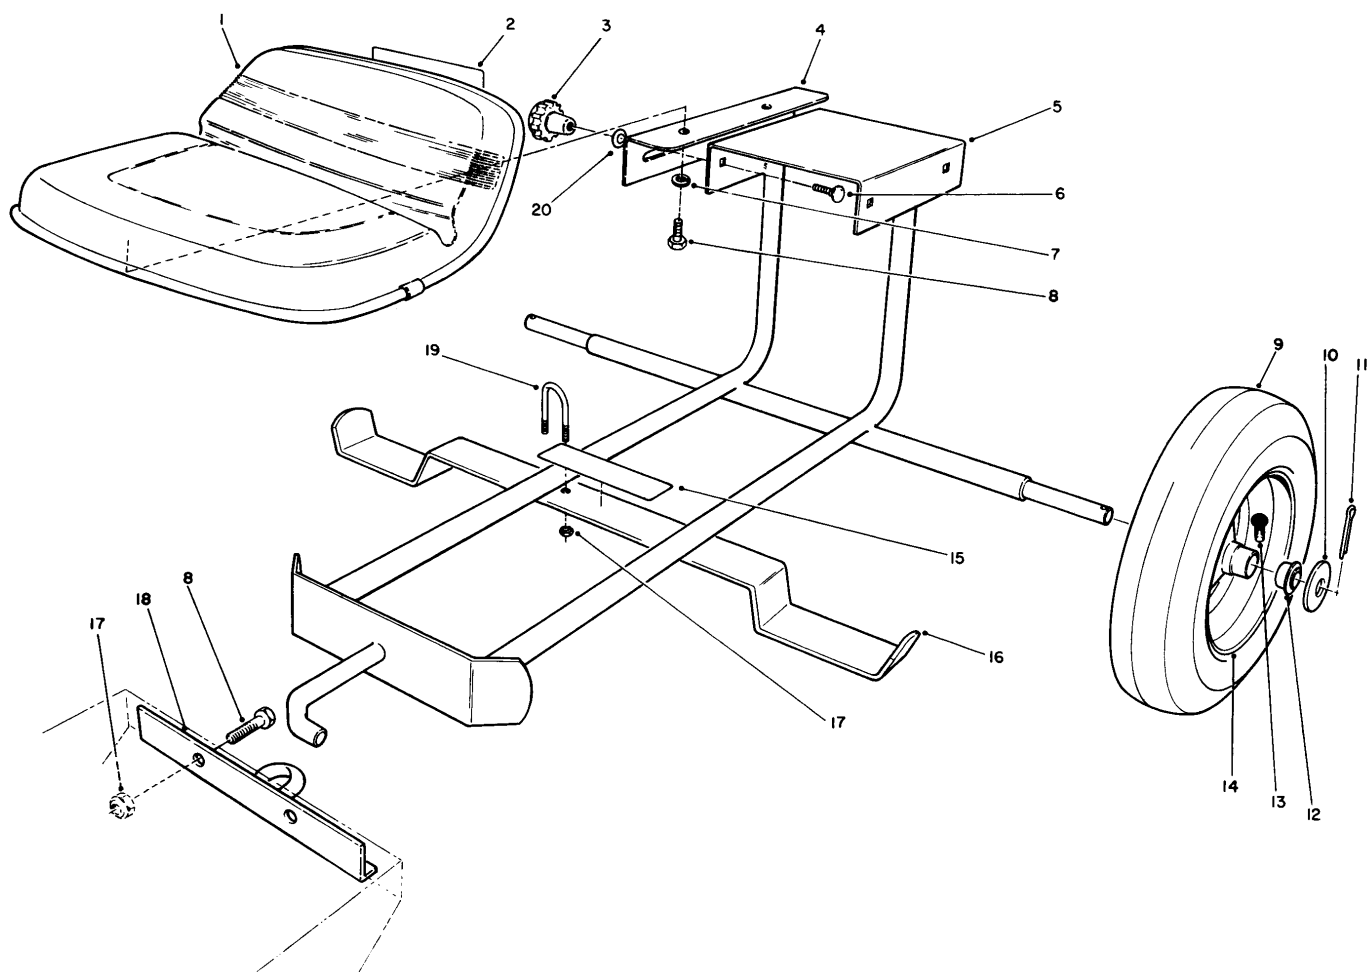

Sulky Kit Model No. 30122 (optional)

Ref.	Part Number	Qty.	Description
1	76-1410	1	Seat
2	62-7400	1	Decal
3	19-4050	4	Knob
4	76-4670	2	Bracket *r
5	76-4740	1	Frame Assembly
6	3230-2	4	Bolt-CARR
7	3255-8	4	Washer-Lock
8	322-3	6	Screw-HH
9	55-3720	2	Tire
10	3256-39	2	Washer-Flat
11	3272-12	2	Pin-Cotter
12	55-3740	4	Bearing
13	55-3730	2	Valve Stem-Inner Tube
14	55-3750	2	Wheel
15	55-9900	1	Sulky Decal
16	55-9840	1	Sulky Footrest *r
17	3296-29	6	Nut-Lock, NI
18	68-4190	1	Hitch
19	60-9350	2	U-Bolt
20	3290-456	4	Washer-Belleville

Notes:

Notes:

Notes:



Count on it.